 


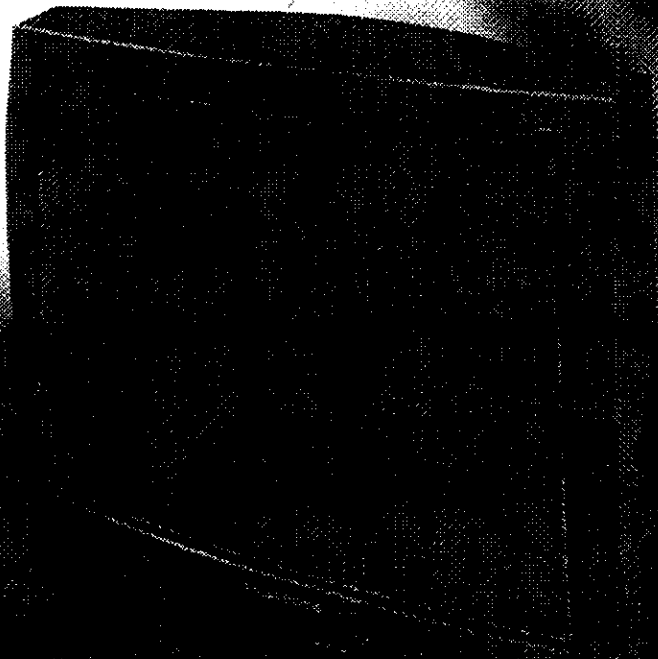

*Instructions for use*



LIBRARY  
Received \_\_\_\_\_  
Copied \_\_\_\_\_  
Entered \_\_\_\_\_  
16 / 10  
19 \_\_\_\_\_

*Let's make things better.*

**PHILIPS MAGNAVOX**

Return your Warranty Registration card today to ensure you receive all the benefits you're entitled to.

Once your PHILIPS MAGNAVOX purchase is registered, you're eligible to receive all the privileges of owning a PHILIPS MAGNAVOX product. So complete and return the Warranty Registration Card enclosed with your purchase at once. And take advantage of these important benefits.

### Warranty Verification

Registering your product within 10 days confirms your right to maximum protection under the terms and conditions of your PHILIPS MAGNAVOX warranty.

### Owner Confirmation

Your completed Warranty Registration Card serves as verification of ownership in the event of product theft or loss.

### Model Registration

Returning your Warranty Registration Card right away guarantees you'll receive all the information and special offers which you qualify for as the owner of your model.

Congratulations on your purchase, and welcome to the "family!"

**PHILIPS MAGNAVOX**



Dear PHILIPS MAGNAVOX product owner:

Thank you for your confidence in PHILIPS MAGNAVOX. You've selected one of the best-built, best-backed products available today. And we'll do everything in our power to keep you happy with your purchase for many years to come.

As a member of the PHILIPS MAGNAVOX "family," you're entitled to protection by one of the most comprehensive warranties and outstanding service networks in the industry.

What's more, your purchase guarantees you'll receive all the information and special offers for which you qualify, plus easy access to accessories from our convenient home shopping network.

And most importantly you can count on our uncompromising commitment to your total satisfaction.

All of this is our way of saying welcome—and thanks for investing in a PHILIPS MAGNAVOX product.

Sincerely,

Robert Minkhorst  
President and Chief Executive Officer

P.S. Remember, to get the most from your PHILIPS MAGNAVOX product, you must return your Warranty Registration Card within 10 days. So please mail it to us right now!

## Know these safety symbols



This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

**WARNING:** TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.


**CAUTION:** To prevent electric shock, match wide blade of plug to wide slot, and fully insert.

**ATTENTION:** Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

**PHILIPS MAGNAVOX** Visit our World Wide Web Site at <http://www.philipsmagnavox.com>

# SAFETY INSTRUCTIONS - Read before operating equipment

This product was designed and manufactured to meet strict quality and safety standards. There are, however, some installation and operation precautions which you should be particularly aware of.

 
1. **Read Instructions** - All the safety and operating instructions should be read before the appliance is operated.
2. **Retain Instructions** - The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** - All warnings on the appliance and in the operating instructions should be adhered to.
4. **Follow Instructions** - All operating and use instructions should be followed.
5. **Water and Moisture** - The appliance should not be used near water - for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement or near a swimming pool, etc.
6. **Carts and Stands** - The appliance should be used only with a cart or stand that is recommended by the manufacturer.
- 6A.  An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
7. **Wall or Ceiling Mounting** - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. **Ventilation** - The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
9. **Heat** - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
10. **Power Sources** - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
11. **Power-Cord Protection** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords and plugs, convenience receptacles, and the point where they exit from the appliance.

12. **Cleaning** - The appliance should be cleaned only as recommended by the manufacturer.
13. **Power Lines** - An outdoor antenna should be located away from power lines.
14. **Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges.  
Section 810 of the National Electric Code, ANSI/NFPA No. 70-1984, provides information with respect to proper grounding of the masts and supporting structure grounding of the lead-in wire to an antenna discharge unit, size of grounding connectors, location of antenna-discharge unit, connection to grounding electrodes and requirements for the grounding electrode. See Fig. below.
15. **Non-use Periods** - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
16. **Object and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
17. **Damage Requiring Service** - The appliance should be serviced by qualified service personnel when:
  - A. The power supply cord or the plug has been damaged; or
  - B. Objects have fallen, or liquid has been spilled into the appliance; or
  - C. The appliance has been exposed to rain; or
  - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
  - E. The appliance has been dropped, or the enclosure damaged.
18. **Servicing** - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

**Note to the CATV system installer:** This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE (NEC)

## Example of Antenna Grounding as per NEC - National Electric Code

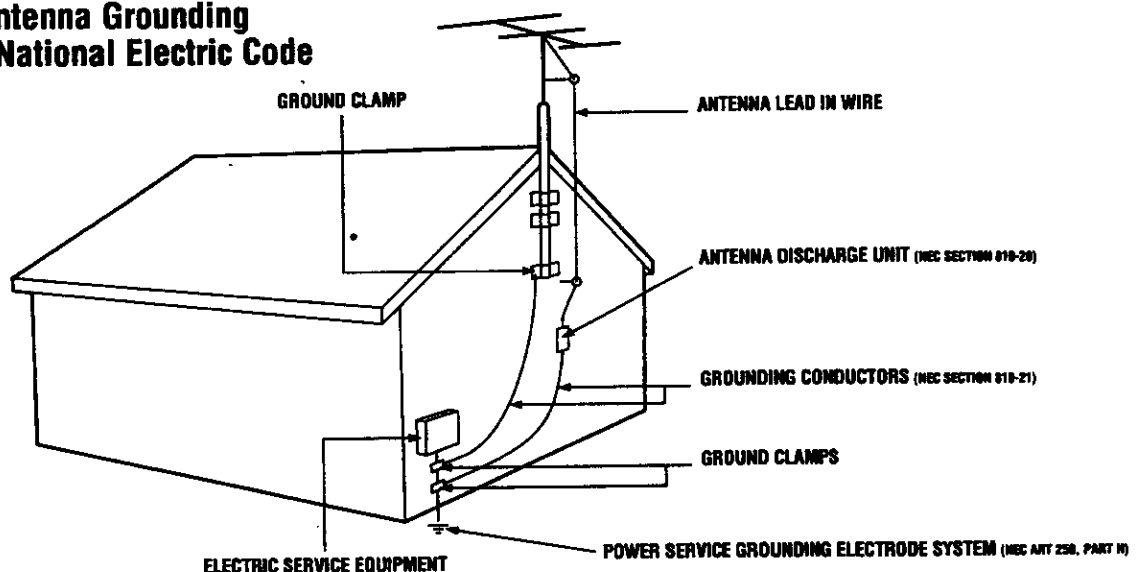

# TABLE OF CONTENTS

## **Introduction**

Welcome/Registration of Your TV .....	2
Safety/Precautions .....	3
Table of Contents .....	4
Features .....	5



## **On-Screen MENU**

### **Picture**

◇ Adjusting the TV Picture .....	6
----------------------------------	---

### **Features**

◇ Setting the TV's On-screen Clock .....	7
◇ Activating the TV's On Timer Control .....	8
◇ Selecting the TV's On Timer Channel .....	9
◇ Setting the TV's On Timer Startup Time .....	10
◇ Turning on the On Timer Display .....	11
◇ Setting the Access Code within SmartLock .....	12
◇ Using SmartLock to Block Channels .....	13
◇ Using the Noise Reduction (NR) Control .....	14
◇ Using the Contrast + Control .....	15
◇ Setting the TV for Closed Caption .....	16
◇ Using the Sleep Timer Control .....	17

### **Sound**

◇ Adjusting the Treble, Bass, and Balance Sound Controls .....	18
◇ Setting the TV for Stereo and SAP Programs ..	19
◇ Using the Incredible Stereo Control .....	20
◇ Using the Volume Bar Control .....	20
◇ Using the Audio Out Jacks (with TV Speaker On/Off Control) .....	21
◇ Using the TV's Audio/Video Input Jacks .....	22-23



## **Remote Control Operation**

Using the Smart Picture Control .....	24
Using the Smart Sound Control (AVL) .....	25
Using the Surf and Alternate Channel Buttons .....	26
Setting the Remote to Operate	
Accessory Devices .....	27-28
Setting the TV Remote to Operate Accessory Devices (Search Method) .....	29
Remote Control Direct Entry Code List .....	30-31
Using the Remote's VCR Buttons .....	32



## **Picture-In-Picture (PIP)**

PIP Connection .....	33
Choosing the PIP Picture Source .....	34
How to Use PIP with the TV Remote .....	35
Adjusting the PIP Color and Tint Controls .....	36
More PIP Connections .....	37-38



## **General Information**

Tips if Something Isn't Working .....	39
Glossary of TV Terms .....	40
Index .....	41
Factory Service Locations .....	42-43
Warranty .....	44

## **QUICK USE/INSTALLATION GUIDE**



### **Getting Started**

Warning/Precautions .....	1
Hooking Up Your TV .....	1
How to Use the "INSTALL" Controls .....	2-3
Using the Language Control .....	2
Setting the TV to Auto Program Channels .....	2
Setting the TV for a Cable or Antenna Signal .....	2
Using the Adding and Deleting Channels .....	3
Setting the Channel Name Control .....	3
How to use the Smart Clock control .....	3
Basic TV and Remote Control Operation .....	4

## FEATURES

**Infrared Remote Control** works your TV set, VCR, and a variety of wireless remote control Cable Converters (Satellite Receivers, DVD, etc.).

**Standard broadcast (VHF/UHF) or Cable TV (CATV) channel capability.**

**Stereo Ready TV** with built-in audio amplifier and twin speaker system for receiving TV programs broadcast in stereo sound.

**Closed Captioning** allows the viewer to read TV program dialogue or voice conversations as on-screen text.

**Automatic Programming of Channels** for quick and easy selection of favorite stations available in your area.

**On-Screen Features** (in either English, French, or Spanish) show helpful messages for setting of TV controls.

**Audio/Video Jackpanel** for direct connections with VCRs (or other video accessories) providing quality TV picture and sound playback.

**On Timer** automatically turns the TV ON at a preset time, and channel.

**Sleep-Timer** automatically turns the TV OFF at preset times.

**SmartLock** feature allows you to block the viewing of certain channel or external audio/video connections were you might not want your children viewing inappropriate material.

**Smart Picture** allows you to set the picture color, tint, contrast, etc. for various types of programming such as Sports, Movies, Multi Media (Gaming), or Weak Signals with the push of one button.

 
**Smart Sound** controls the sudden volume changes that occur when changing programs or when a commercial break comes on. It eliminates the peaks and valleys in the TV's sound with one pleasant listening level.

**Picture-In-Picture (PIP)** allows you view to different programs (or picture sources) on the TV screen at the same time. PIP will also let you swap the pictures, move the PIP picture to any of the four corners, and even freeze the picture until you shut it off.

## SET-UP AND QUICK USE GUIDE

Use the simple Set-Up Guide (supplied with your TV information packet) for details on:

- Cable/Antenna Hook-ups
- Auto-Programming of Channels
- Channel Editing
- Automatic Clock Setting (Smart Clock)
- Basic TV and Remote Control Operation
- On-Screen Menu Use

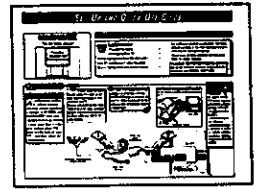

**NOTE:** This owner's manual is used with several different television models. Not all features (and drawings) discussed in this manual will necessarily match those found with your television system. This is normal and does not require you contacting your dealer or requesting service.

## END-OF-LIFE DISPOSAL

Your new television and its packing contain materials that can be recycled and reused. Specialized companies can recycle your product to increase the amount of reusable materials and minimize the amounts which need to be properly disposed.

Your product also uses batteries which should not be thrown away when depleted, but should be handed in and disposed of as small chemical waste.

Please find out about the local regulations on how to dispose of your old television, batteries, and packing materials whenever you replace existing equipment.


# HOW TO ADJUST THE TV PICTURE

To adjust your TV picture controls, select a channel and follow the steps shown below:

## BEGIN

- 1 Press the **MENU** button on the remote to show the on-screen menu. **PICTURE** will be highlighted.
- 2 Press the **CURSOR RIGHT** button and the menu will shift to the right to display an adjustment bar in front of the **BRIGHTNESS** control.
- 3 Use the **CURSOR LEFT** or **RIGHT** buttons to adjust the **BRIGHTNESS** level of the picture.
- 4 After adjusting the **BRIGHTNESS** control, press the **CURSOR DOWN** button to select another Picture adjustment; **COLOR**, **PICTURE**, **SHARPNESS**, **TINT**, or **COLOR TEMP**. Use the **CURSOR LEFT** or **CURSOR RIGHT** buttons to adjust the selected control.

 STOP

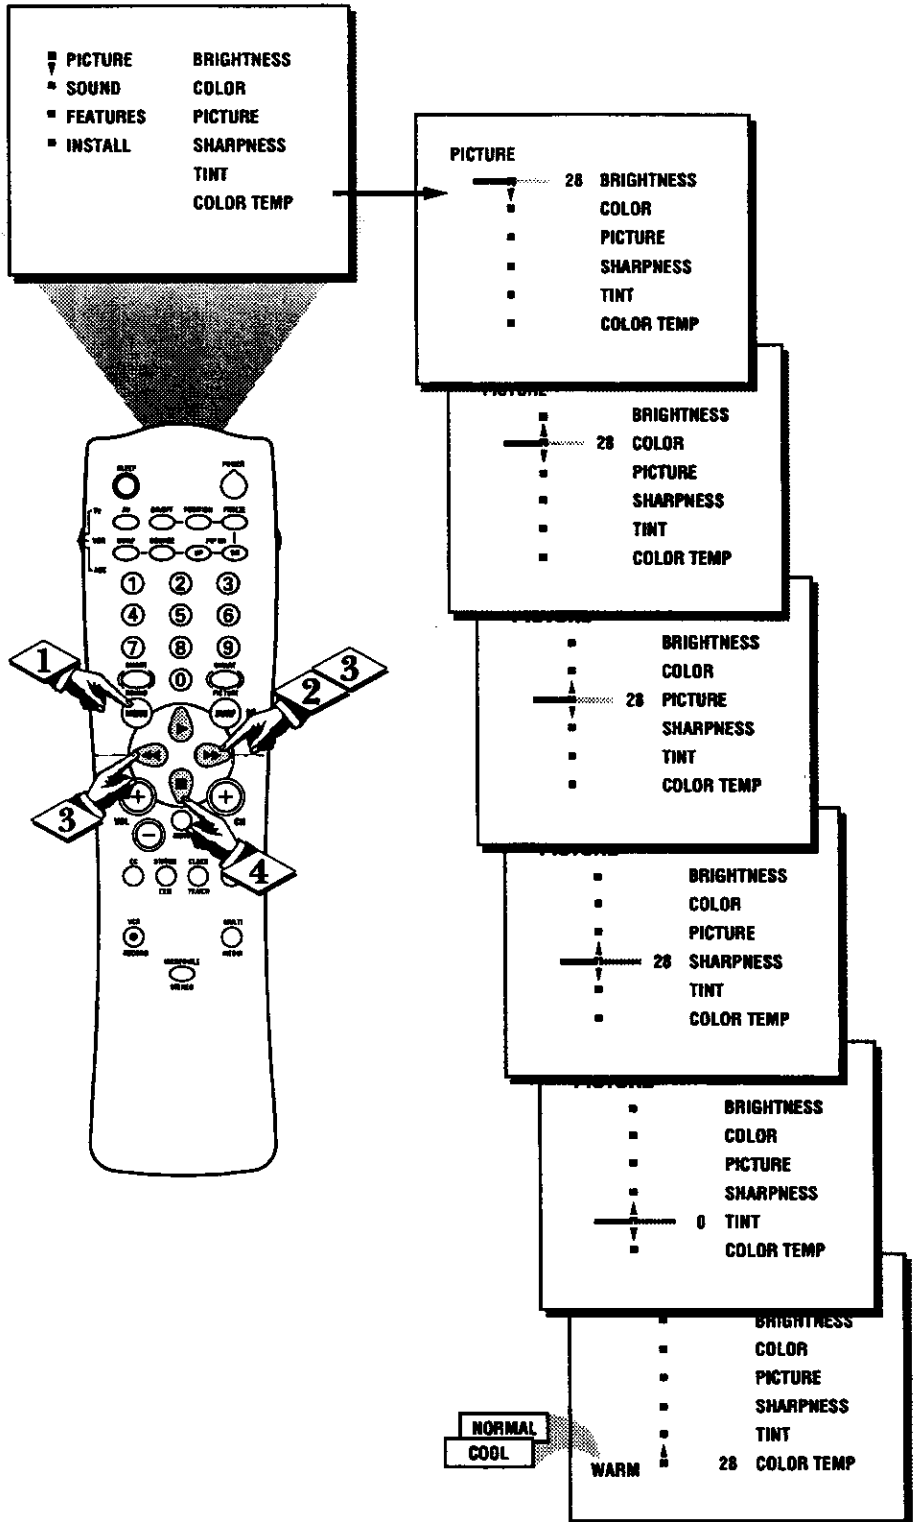

## SMART HELP

Remember, when the bar scale is centered, the control settings are at normal mid-range levels.

**BRIGHTNESS** Press the ►► or ◀◀ buttons until darkest parts of the picture are as bright as you prefer.

**COLOR** Press the ►► or ◀◀ buttons to add or eliminate color.

**PICTURE** Press the ►► or ◀◀ buttons until lightest parts of the picture show good detail.

**SHARPNESS** Press the ►► or ◀◀ buttons to improve detail in the picture.

**TINT** Press the ►► or ◀◀ buttons to obtain natural skin tones.

**COLOR TEMP** Press the ►► or ◀◀ buttons to select **NORMAL**, **COOL**, or **WARM** picture preferences. (**NORMAL** will keep the whites, white; **COOL** will make the whites, bluish; and **WARM** will make the whites, reddish.)

# SETTING THE TV'S CLOCK

Your television comes with an on-screen clock. During normal operation the clock appears on the screen when the STATUS/EXIT button is pressed or if the Timer DISPLAY control is turned ON.

## BEGIN

- 1 Press the MENU button on the remote to show the on-screen menu. PICTURE will be highlighted.
- 2 Press the CURSOR DOWN button twice to select the FEATURES menu.
- 3 Press the CURSOR RIGHT button and the menu will shift to the left to display the TIMER controls.
- 4 Press the CURSOR RIGHT button again to shift the display left and highlight the TIME control.
- 5 Press the CURSOR RIGHT button again to highlight the time indicator area.
- 6 Press the NUMBERED buttons to enter the correct time. (Use the CURSOR UP or CURSOR DOWN buttons to set AM or PM.)

STOP

 
## SMART HELP





Remember, be sure to press "0" first and then the hour number for single digit entries.

The Clock can also be set automatically using the Smart Clock feature found on page 2 of the Quick Use Guide.

The television's clock settings may be lost when it is unplugged (or AC power to the set is interrupted.)

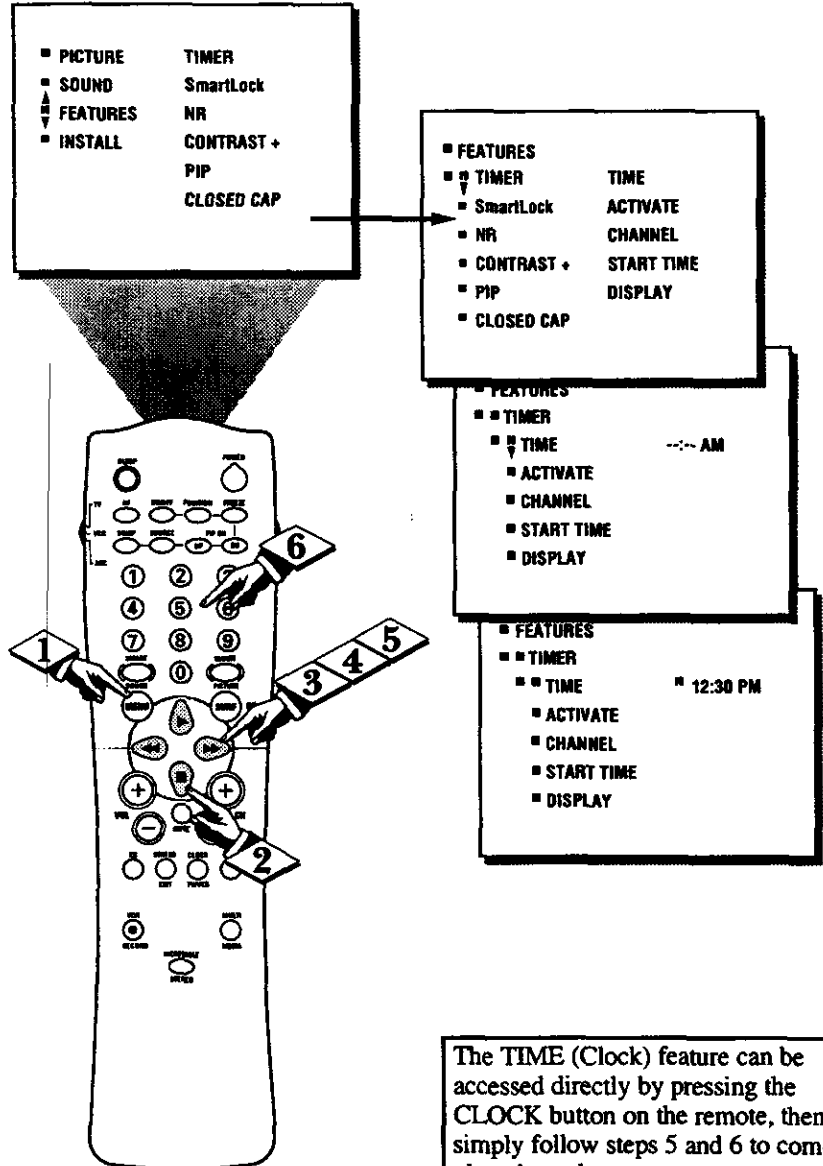

  The TIME (Clock) feature can be accessed directly by pressing the CLOCK button on the remote, then simply follow steps 5 and 6 to complete the task.

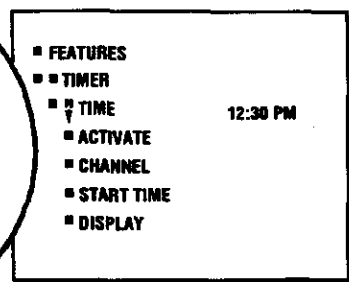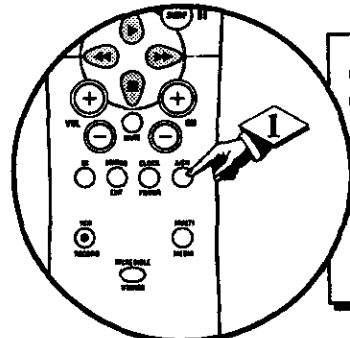

# ACTIVATING THE TV'S ON TIMER CONTROL

*Just like an alarm clock you can set the TV to turn itself on at the same time everyday.*

## BEGIN

 
- 1 Press the **MENU** button on the remote to show the on-screen menu. **PICTURE** will be highlighted.
- 2 Press the **CURSOR DOWN** button twice to select the **FEATURES** menu.
- 3 Press the **CURSOR RIGHT** button and the menu will shift to the left to display the **TIMER** controls.
- 4 Press the **CURSOR RIGHT** button again to shift the display left, then **CURSOR DOWN** to highlight the **ACTIVATE** timer control.
- 5 Press the **CURSOR RIGHT** button again to highlight the **ACTIVATE** timer option. Then, press the **CURSOR UP** or **CURSOR DOWN** buttons to turn the timer **ON** or **OFF**.

STOP

## SMART HELP



Remember, be sure to set the time you want the television to turn on using the **START TIME** control as described on page 10.

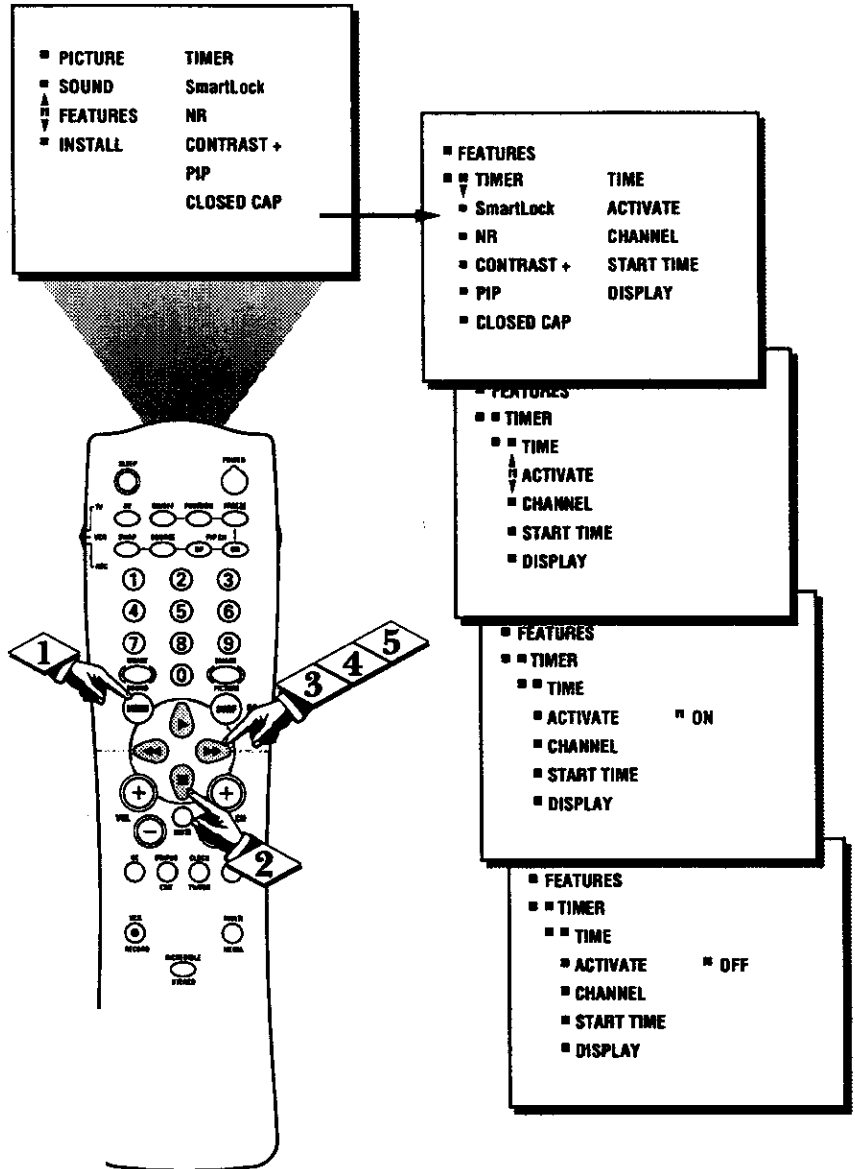



# SELECTING THE TV'S ON TIMER CHANNEL

Used along with the on timer feature, you can select a specific channel that the television will tune to when the Timer ACTIVATE control is turned ON.

 
## BEGIN

- 1 Press the **MENU** button on the remote to show the on-screen menu. **PICTURE** will be highlighted.
- 2 Press the **CURSOR DOWN** button twice to select the **FEATURES** menu.
- 3 Press the **CURSOR RIGHT** button and the menu will shift to the left to display the **TIMER** controls.
- 4 Press the **CURSOR RIGHT** button again to shift the display left, then **CURSOR DOWN** to highlight the **CHANNEL** control.
- 5 Press the **CURSOR RIGHT** button again to highlight the channel indicator area.
- 6 Press the **NUMBERED** buttons to enter the desired start up channel. (Or, use the **CHANNEL (+)** or **(-)** buttons to select the desired channel.)

STOP

## SMART HELP

Remember, be sure to turn the **Timer ACTIVATE** control ON after selecting the desired start up channel. (Refer to page 8 for further details.)

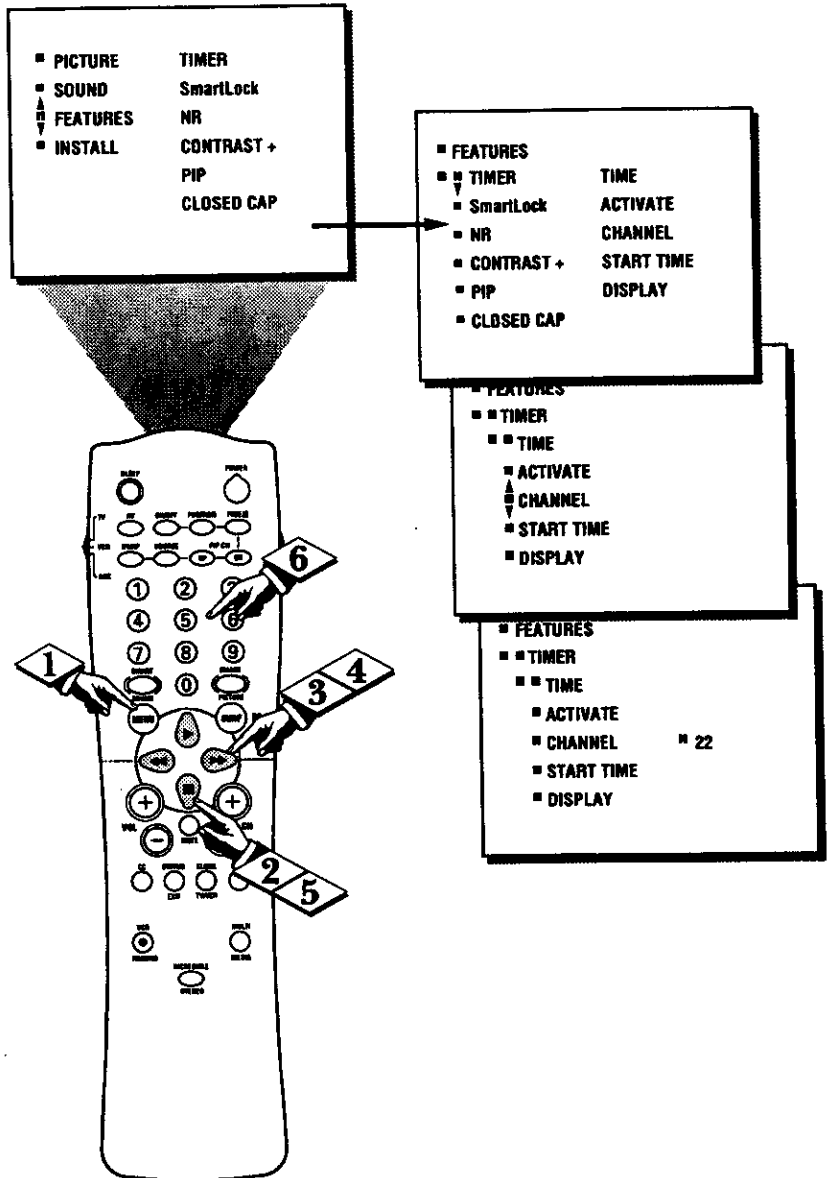

# SETTING THE TV'S ON TIMER START TIME

Used along with the on timer feature, you can select a specific time the television will turn on when the Timer ACTIVATE control is turned ON.

 
## BEGIN

- 1 Press the MENU button on the remote to show the on-screen menu. PICTURE will be highlighted.
- 2 Press the CURSOR DOWN button twice to select the FEATURES menu.
- 3 Press the CURSOR RIGHT button and the menu will shift to the left to display the TIMER controls.
- 4 Press the CURSOR RIGHT button again to shift the display left, then CURSOR DOWN to highlight the START TIME control.
- 5 Press the CURSOR RIGHT button again to highlight the time indicator area.
- 6 Press the NUMBERED buttons to enter the desired start up time. (Use the CURSOR UP or CURSOR DOWN buttons to set AM or PM.)



## SMART HELP

Remember, be sure to turn the Timer ACTIVATE control ON after setting the desired start up time. (Refer to page 8 for further details.)

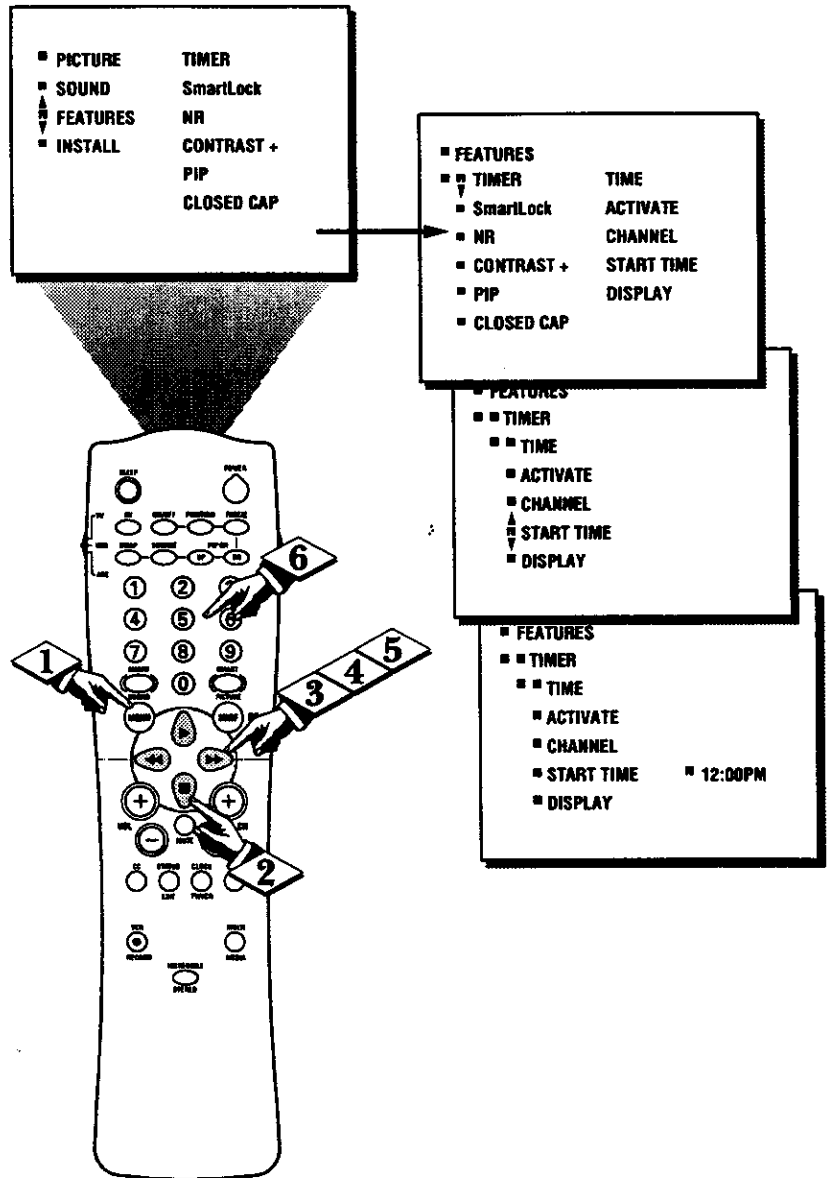

# SETTING THE TV'S ON TIMER DISPLAY

Once the television clock has been set, you can use your television as a clock. The **Timer DISPLAY** control allows you to permanently display the time in the upper right corner of the screen.

 
## BEGIN

- 1 Press the **MENU** button on the remote to show the on-screen menu. **PICTURE** will be highlighted.
- 2 Press the **CURSOR DOWN** button twice to select the **FEATURES** menu.
- 3 Press the **CURSOR RIGHT** button and the menu will shift to the left to display the **TIMER** controls.
- 4 Press the **CURSOR RIGHT** button again to shift the display left, then **CURSOR DOWN** to highlight the **DISPLAY** control.
- 5 Press the **CURSOR RIGHT** button again to highlight the **DISPLAY** control options. Then, press the **CURSOR UP** or **CURSOR DOWN** buttons to turn the timer **ON** or **OFF**.

STOP

## SMART HELP

Remember, be sure you have set the television's clock with the correct current time. (Refer to page 7 to set the Clock Manually or page 2 of the Quick Use Guide to set the Clock Automatically using the Smart Clock feature.)

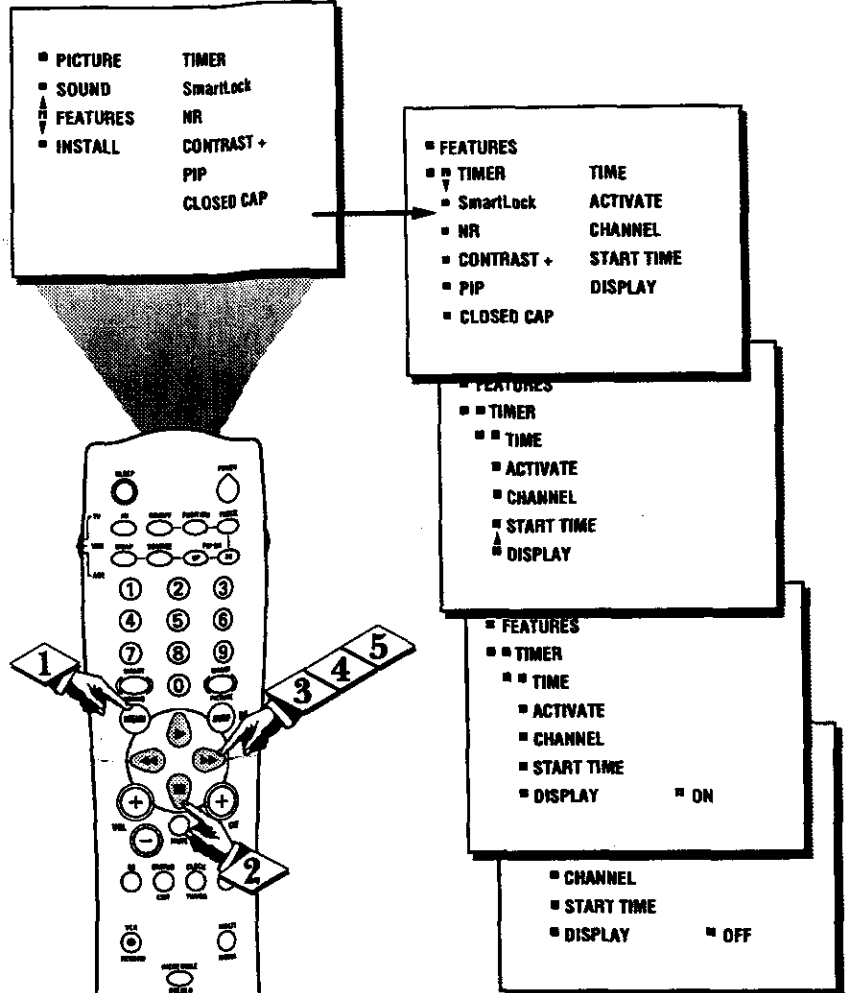


# USING THE SMART LOCK (SETUP CODE) CONTROL

Smart Lock allows parents to block out, or "censor" any channels they think children should not watch. A channel blocked by the Smart Lock control cannot be viewed until a correct access code is used to unlock the channel for viewing. First let's set your Smart Lock access code:

## BEGIN

- 1 Press the MENU button on the remote to show the on-screen menu. PICTURE will be highlighted.
  - 2 Press the CURSOR DOWN button twice to select the FEATURES menu.
  - 3 Press the CURSOR RIGHT button and the menu will shift to the left, then CURSOR DOWN to highlight the SMART LOCK control.
  - 4 Press the CURSOR RIGHT button again to shift the display left, then CURSOR DOWN to highlight SETUP CODE.
  - 5 Press the CURSOR RIGHT button. "---- Enter current access code" will appear within the menu.
  - 6 Press 0, 7, 1, 1 on the remote. "XXXX" shows on the SETUP CODE display as you press the NUMBER buttons. "XXXX Incorrect - Please re-enter your access code" will appear. Re-enter the 0, 7, 1, 1 code on the remote. "XXXX Code Correct" will appear.
  - 7 "Next enter your new access code" shows on the screen. Press the NUMBER buttons on the remote to enter a NEW four digit code. Confirm your new code by re-entering it again. "XXXX Code changed" shows on the screen to let you know the new code has been set.
- Continue to the next page to learn how to block channels from viewing.

 NOTE: The 0,7,1,1 access code shown on this page is the default code or way to reset the code when the current access code is not known.

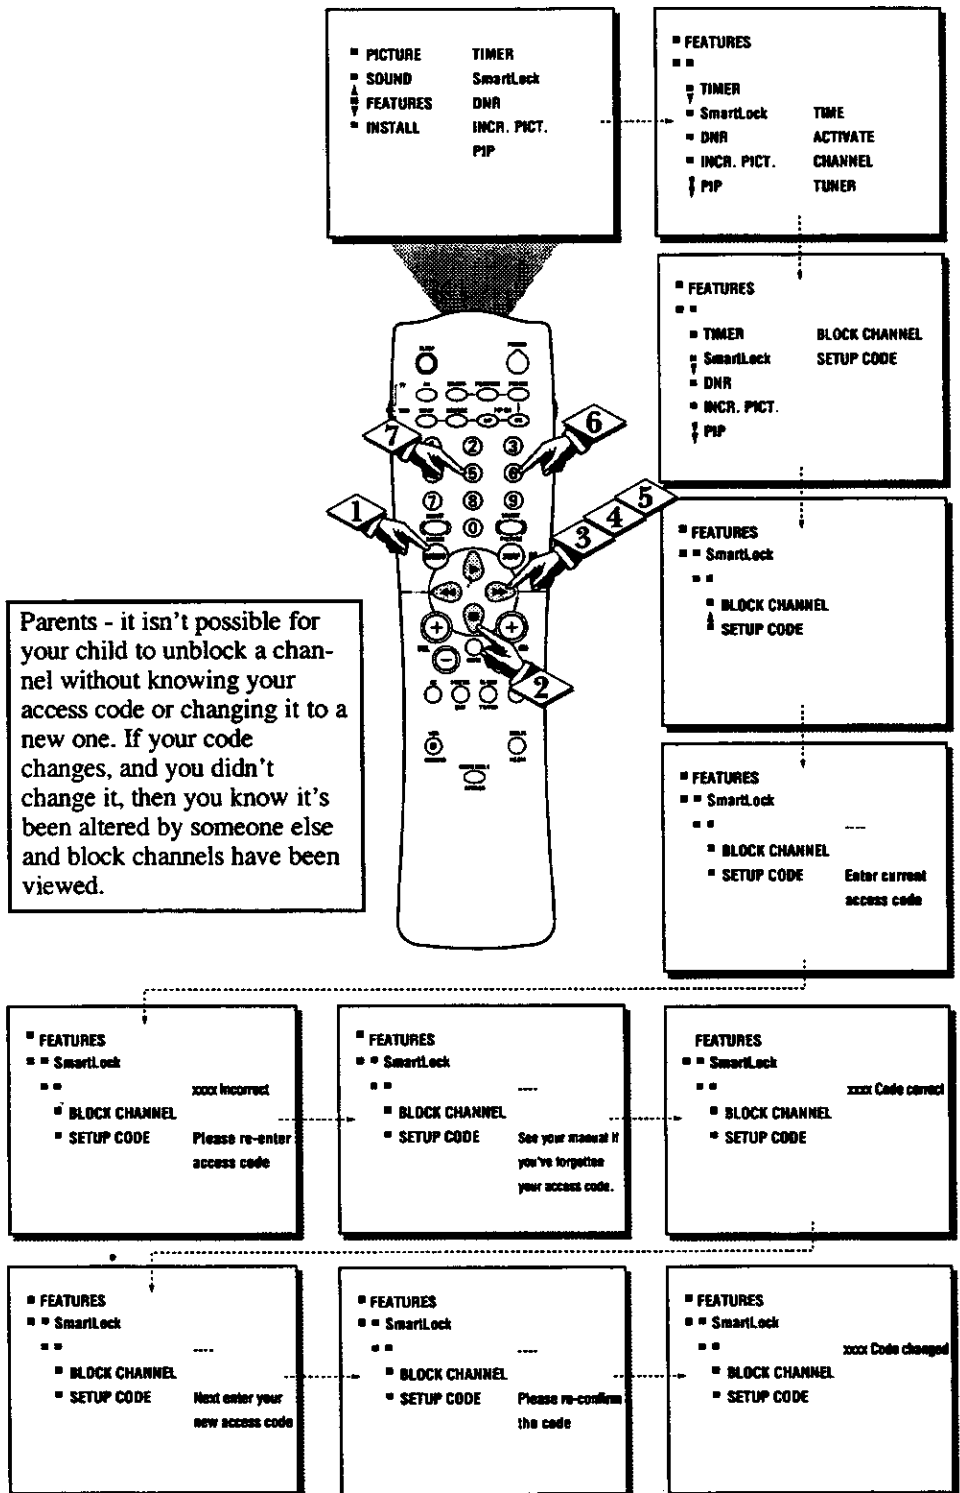

# USING THE SMART LOCK (BLOCK CHANNEL) CONTROL

After your personal access code has been set (see previous page), you are now ready to select up to 5 channels or inputs to block out or censor.

 
## BEGIN

- 1 Press the **MENU** button on the remote to show the on-screen menu. **PICTURE** will be highlighted.
- 2 Press the **CURSOR DOWN** button twice to select the **FEATURES** menu.
- 3 Press the **CURSOR RIGHT** button and the menu will shift to the left, then **CURSOR DOWN** to highlight the **SMART LOCK** control.
- 4 Press the **CURSOR RIGHT** button again to shift the display left, the **BLOCK CHANNEL** control will be highlighted.
- 5 Press the **CURSOR RIGHT** button. "---- Enter current access code" will appear within the menu.
- 6 Enter the correct access code number. "XXXX" shows on the **SETUP CODE** display as you press the **NUMBER** buttons. "XXXX Code correct" will appear.
- 7 Press the **CHANNEL (+)** or **(-)** buttons (or **NUMBER** buttons) to select the channel you want to block.
- 8 Press the **CURSOR RIGHT** button to block viewing of the channel, or the **CURSOR LEFT** button to allow viewing of the channel.

Repeat steps 5 through 7 for any other channels you wish to block from viewing.

Note: You can also block out the use of the A/V external inputs on the rear of the TV. This stops the viewing of VCR, DVD, etc., programs which can be shown through the A/V Input jacks. Select AV 1, AV 2, or SVID-R, MM1, MM2, MM3, and select block.

Any channel that has been blocked will be skipped when the Channel (+) and (-) buttons are used to scan all available channels. To view a blocked channel, press the number buttons on the remote to directly access the channel and refer to the Unblocking Channels section below.

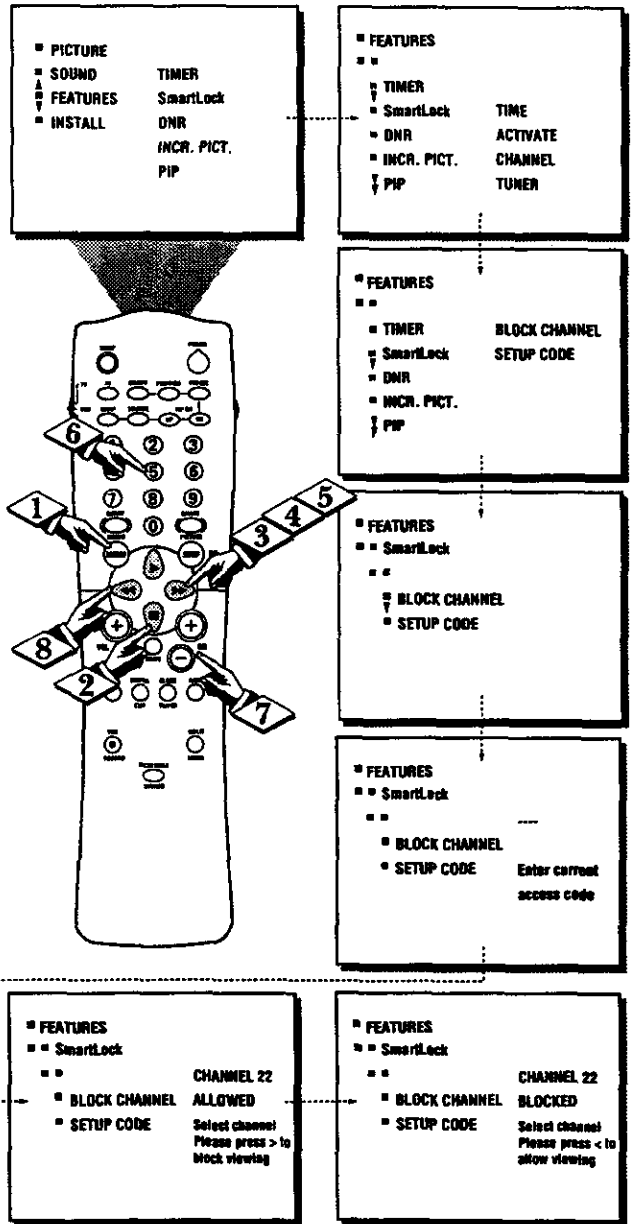

## UNBLOCKING CHANNELS

- 1 Access the blocked channel directly by using the number buttons on the remote control.
- 2 Enter your four digit access code.
- 3 All blocked channels will be viewable until the TV is turned off. When the TV is turned back on, the blocked channels will not be viewable.

1  
CHANNEL 22  
Blocked by Smartlock  
----  
Please enter access code  
or select another channel

2  
CHANNEL 22  
Blocked by Smartlock  
XXXX  
Please enter access code  
or select another channel

3  
All channels can be viewed  
until the TV is turned off.

 
# TURNING ON THE NOISE REDUCTION (PICTURE) CONTROL

Due many reason such as poor cable reception, the picture can sometime appear slightly "speckled" (noise in the picture). The NR (Noise Reduction) control can help eliminate this type of interference and improve the quality of the picture.

## BEGIN

- 1 Press the **MENU** button on the remote to show the on-screen menu. **PICTURE** will be highlighted.
- 2 Press the **CURSOR DOWN** button twice to select the **FEATURES** menu.
- 3 Press the **CURSOR RIGHT** button and the menu will shift to the left, **TIMER** will be highlighted.
- 4 Press the **CURSOR DOWN** button to highlight the **NR** control.
- 5 Press the **CURSOR RIGHT** button again to highlight the **NR** option area.
- 6 Press the **CURSOR UP** or **CURSOR DOWN** buttons to turn the **NR** feature **ON** or **OFF**.

STOP

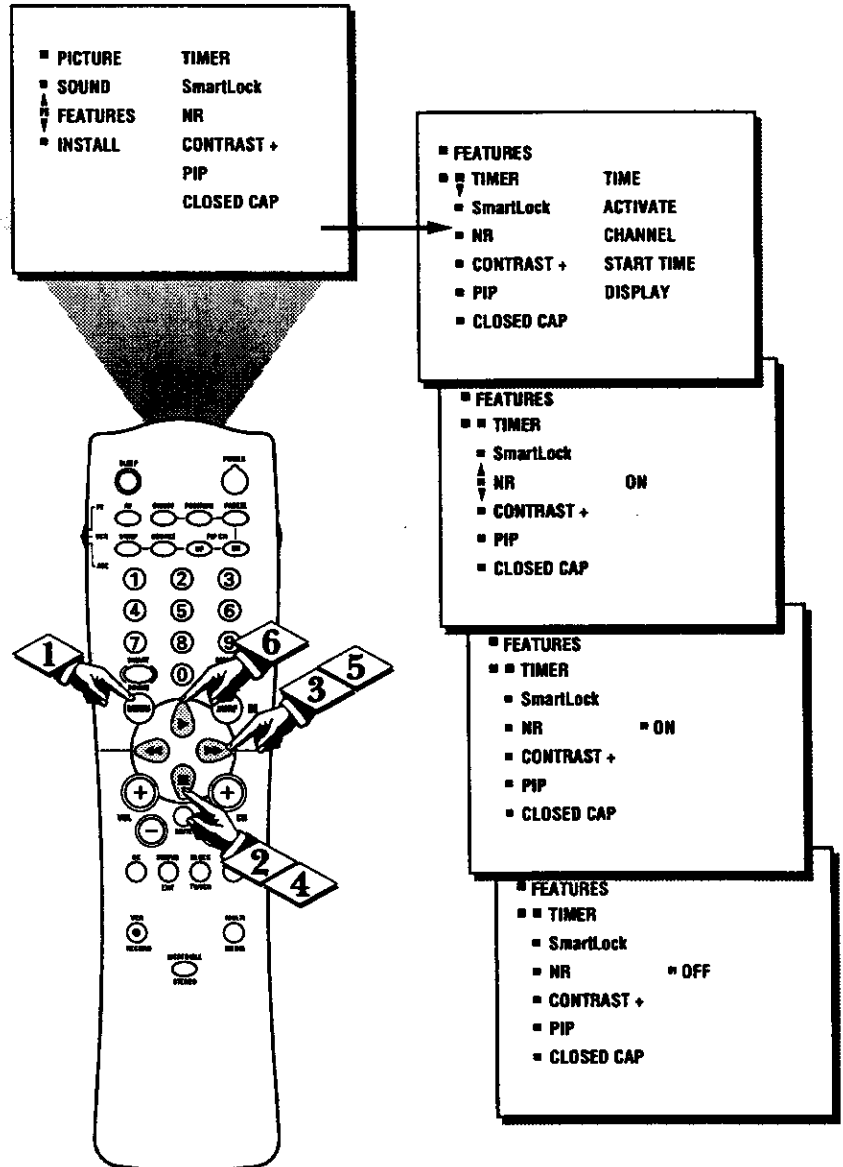


# TURNING ON THE CONTRAST + CONTROL

The Contrast + feature helps to "sharpen" the picture quality. The black portions of the picture become richer in darkness and the whites become brighter.

## BEGIN

- 1 Press the MENU button on the remote to show the on-screen menu. PICTURE will be highlighted.
- 2 Press the CURSOR DOWN button twice to select the FEATURES menu.
- 3 Press the CURSOR RIGHT button and the menu will shift to the left, TIMER will be highlighted.
- 4 Press the CURSOR DOWN button to highlight the CONTRAST + control.
- 5 Press the CURSOR RIGHT button again to highlight the CONTRAST + option area.
- 6 Press the CURSOR UP or CURSOR DOWN buttons to turn the CONTRAST + feature ON or OFF.

 STOP

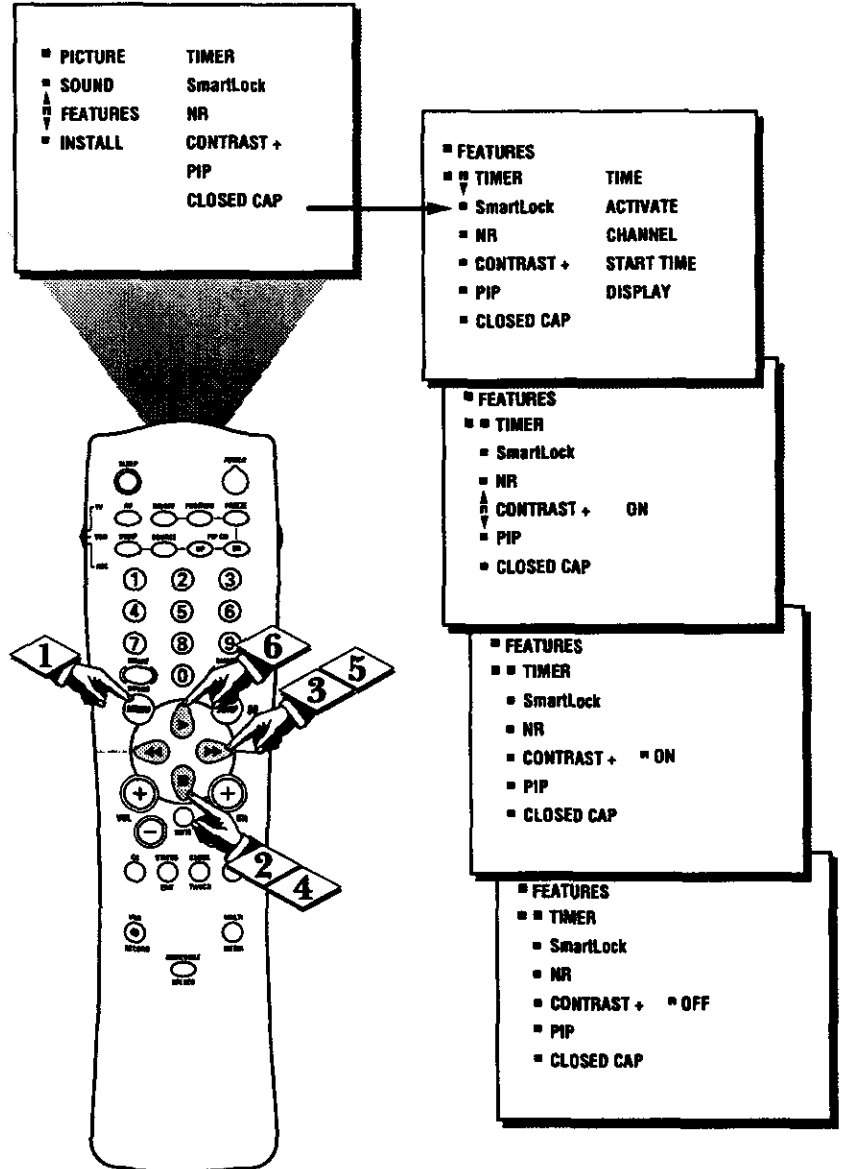

# USING THE CLOSED CAPTION CONTROL

**C**losed Captioning (CC) allows you to read the voice content of television programs on the TV screen. Designed to help the hearing impaired, this feature uses on-screen "text boxes" to show dialogue and conversations while the TV program is in progress.

## BEGIN

 
 
- 1 Press the **MENU** button on the remote to show the on-screen menu. **PICTURE** will be highlighted.
- 2 Press the **CURSOR DOWN** button twice to select the **FEATURES** menu.
- 3 Press the **CURSOR RIGHT** button and the menu will shift to the left, **TIMER** will be highlighted.
- 4 Press the **CURSOR DOWN** button to highlight the **CLOSED CAP** control.
- 5 Press the **CURSOR RIGHT** button again to highlight and choose either **CAPTION MODE** or **TEXT MODE**.
- 6 Press the **CURSOR RIGHT** button again to highlight the **CAPTION MODE** or **TEXT MODE** options area.
- 7 Press the **CURSOR UP** or **CURSOR DOWN** buttons to select the **CLOSED CAPTION** option you want.

**CAPTION MODE:** CC1, CC2, CC3, CC4, CC MUTE, or OFF  
-dialogue (and descriptions) for the action on the captioned TV program shows on-screen.

**TEXT MODE:** TXT1, TXT2, TXT3, TXT4, or OFF  
-often used for channel guide, schedules, or bulletin board information for CC programs.



**NOTE:** Not all TV programs and product commercials are made for broadcast with Closed Caption (CC) information included. Neither are all Closed Caption modes (CAPTION 1-4, or TEXT 1-4) necessarily being used by a broadcast station during the transmission of a closed caption program. Refer to your area's TV program listings for the stations and times of Closed Caption shows.

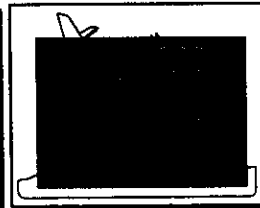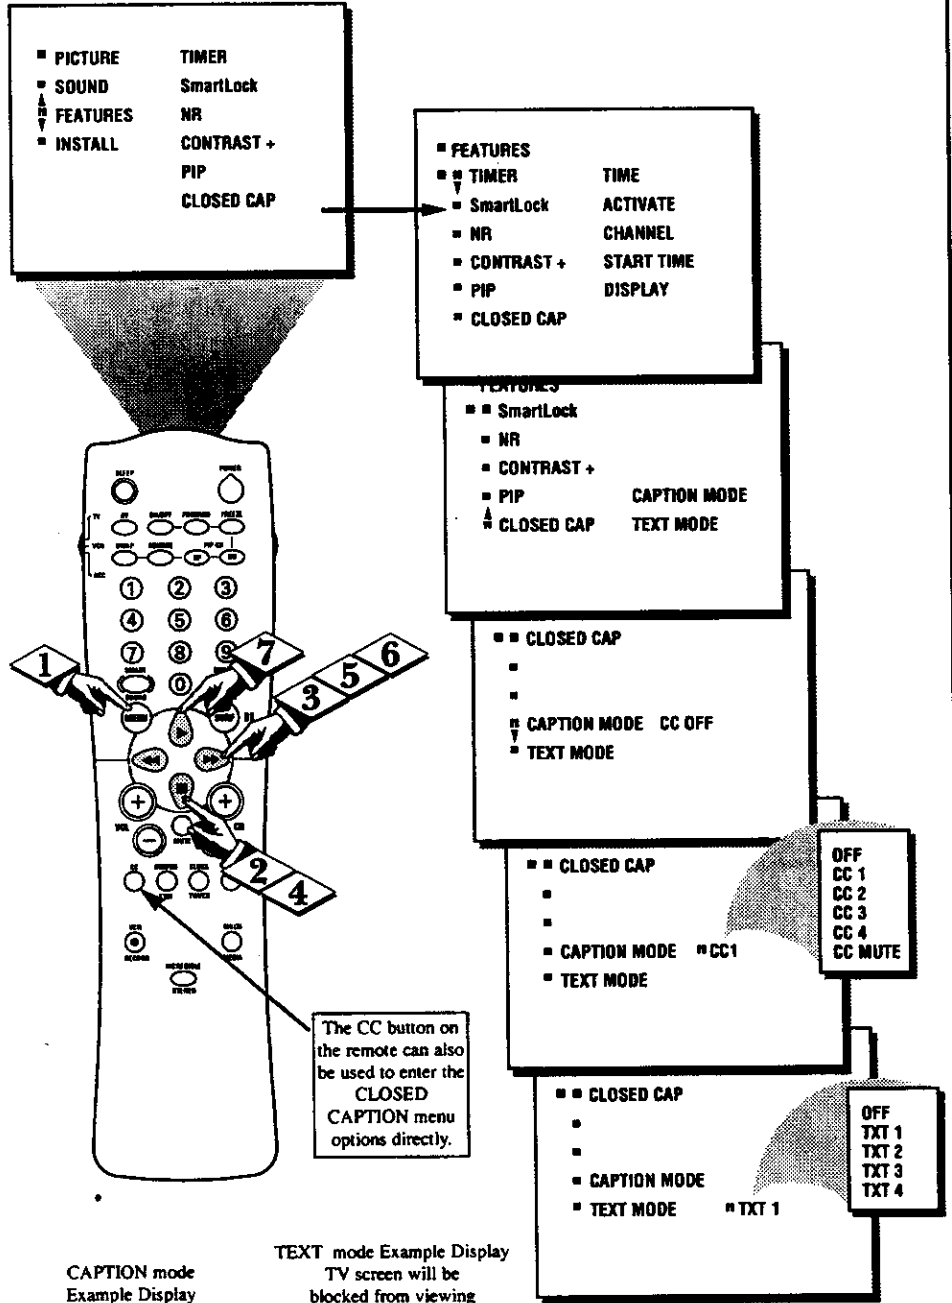

**NOTE:** The **CC MUTE** option can be used to set the TV to turn the Closed Caption mode "ON" whenever the **MUTE** button on the remote is pressed.



# USING THE SLEEP TIMER CONTROL

*Have you ever fallen asleep in front of the TV only to have in wake you up at two in the morning with a test pattern screeching in your ears? Well, your TV can save you all that trouble by automatically turning itself off.*

 
## BEGIN

1 Press the SLEEP button on the remote control and the SLEEP timer on-screen display will appear in the lower center of the display.

2 Press the SLEEP button repeatedly to pick the amount of time (15 minutes to 2 hours ahead) before the TV will turn itself off.

An on-screen count down will appear during the last minute before the TV shuts itself off.

## STOP

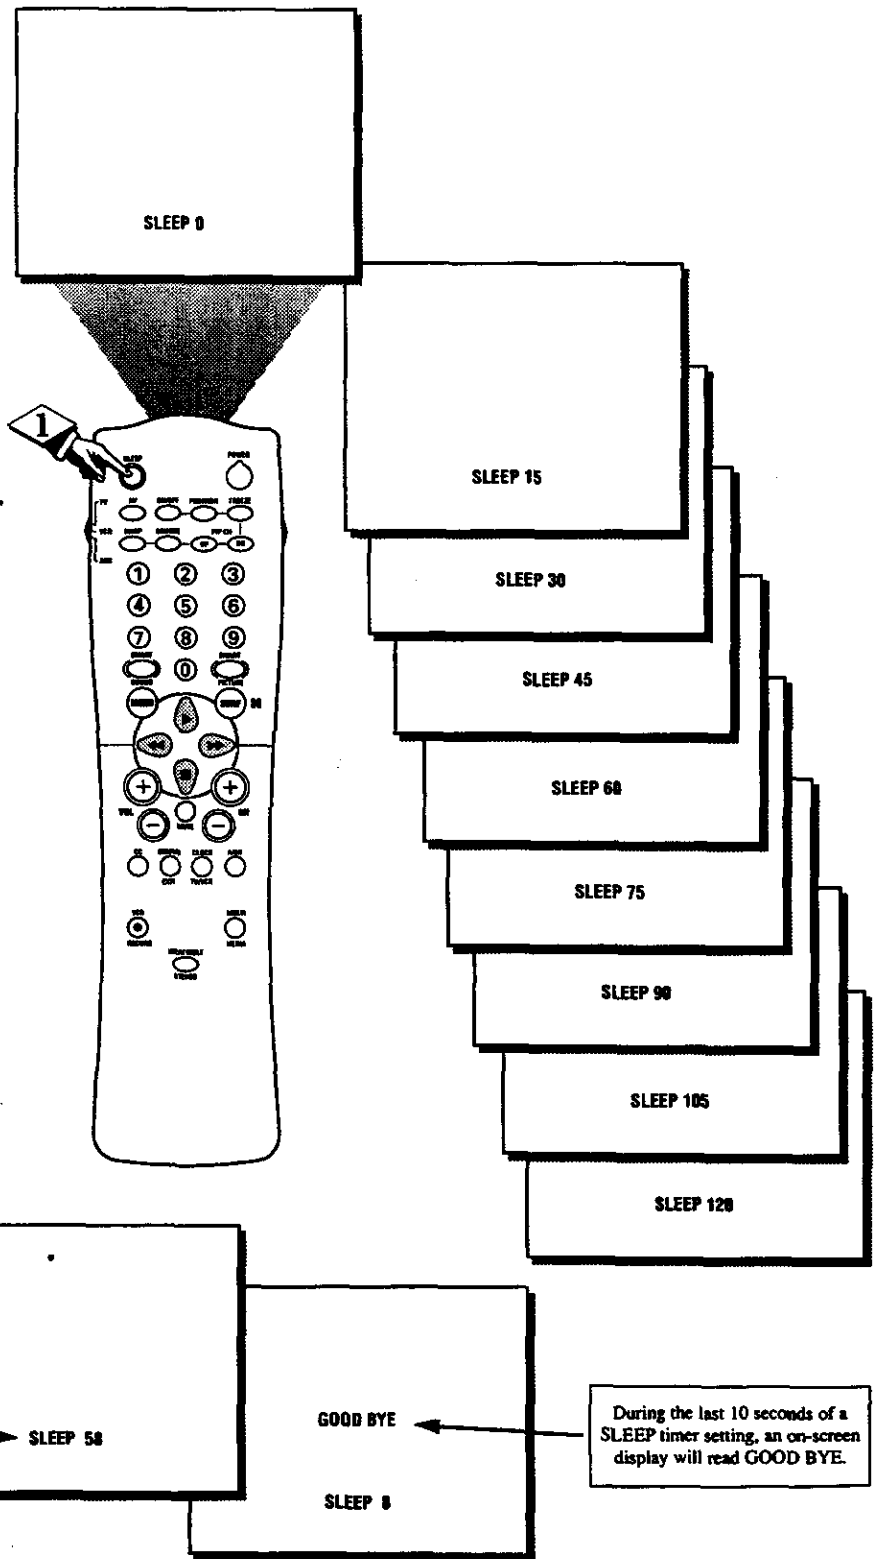


# USING TREBLE, BASS, AND BALANCE SOUND CONTROLS

Besides the normal volume level control, your TV also has individual sound adjustment controls. The **TREBLE** (high frequency), **BASS** (low frequency), and **Speaker BALANCE** may all be used to adjust the sound playback of TV programs.

## BEGIN

- 1 Press the **MENU** button on the remote to show the on-screen menu. **PICTURE** will be highlighted.
- 2 Press the **CURSOR DOWN** button to select the **SOUND** menu.
- 3 Press the **CURSOR RIGHT** button and the menu will shift to the right to display an adjustment bar in front of the **TREBLE** control.
- 4 Use the **CURSOR LEFT** or **RIGHT** buttons to adjust the **TREBLE** (high frequency) level of the television's sound.
- 5 After adjusting the **TREBLE** control, press the **CURSOR DOWN** button to select another Sound adjustment; **BASS** or **BALANCE**. Use the **CURSOR LEFT** or **CURSOR RIGHT** buttons to adjust the selected control.

 STOP

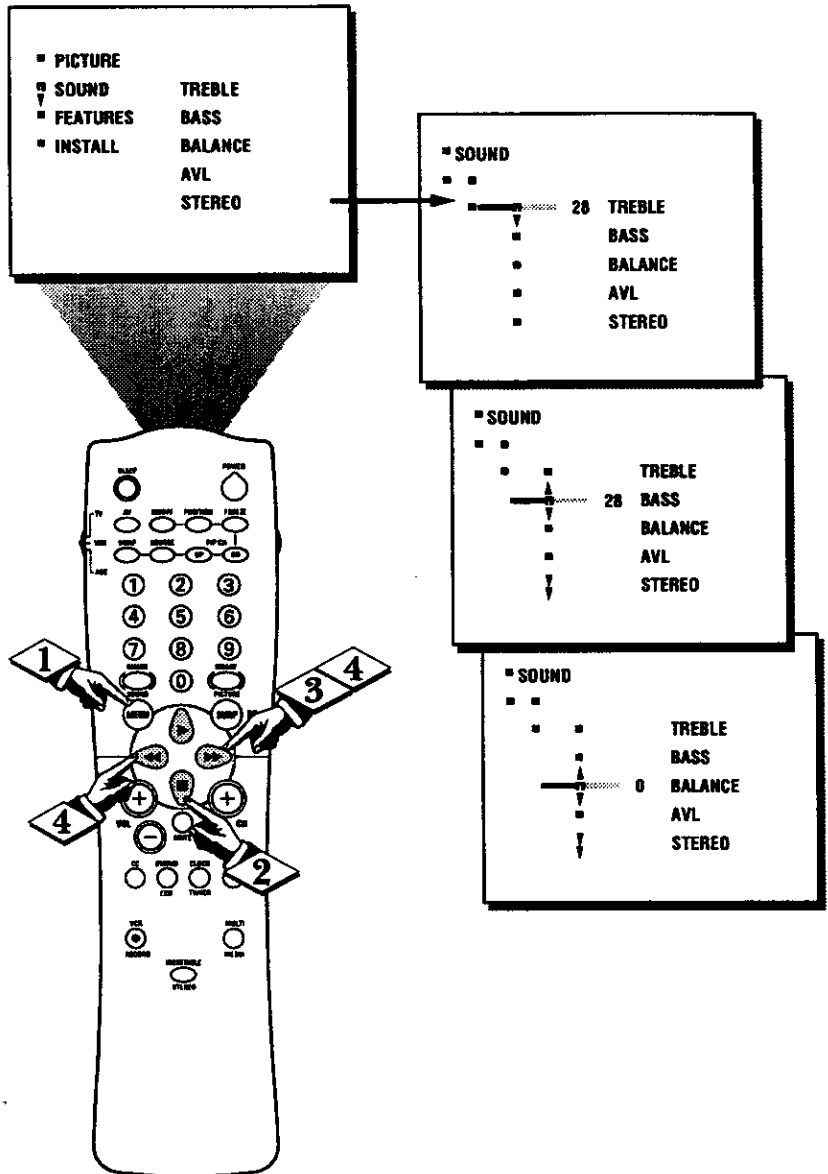

## SMART HELP



Remember, when the bar scale is centered, Speaker **BALANCE** is centered between the TV's Left and Right side speakers.

# HOW TO SET THE TV FOR STEREO PROGRAMS

Your TV can receive broadcast stereo TV programs. The TV has both an amplifier and twin speakers through which the stereo sound can be heard.

## BEGIN

 
- 1 Press the **MENU** button on the remote to show the on-screen menu. **PICTURE** will be highlighted.
- 2 Press the **CURSOR DOWN** button to select the **SOUND** menu.
- 3 Press the **CURSOR RIGHT** button and the menu will shift to the right to display an adjustment bar in front of the **TREBLE** control.
- 4 Press the **CURSOR DOWN** button to select the **STEREO** control.
- 5 Use the **CURSOR LEFT** or **RIGHT** buttons to select **STEREO** or **MONO**. With **STEREO** selected the television will reproduce any stereo broadcast signal it receives.

STOP

## SECOND AUDIO PROGRAM (SAP)


SAP is an additional part of the stereo broadcast system. Sent as a third audio channel SAP can be heard apart from the current TV program sound. TV stations are free to use SAP for any number of purposes, but many experts believe it will be used for foreign language translations of TV shows (or for weather and news bulletins.)

If a SAP signal is not present with a selected program, the SAP option cannot be selected. Also, if SAP is selected on a channel (with SAP) and you select another channel, when you return to the original channel SAP will be OFF (and you will have to reselect the SAP feature.)

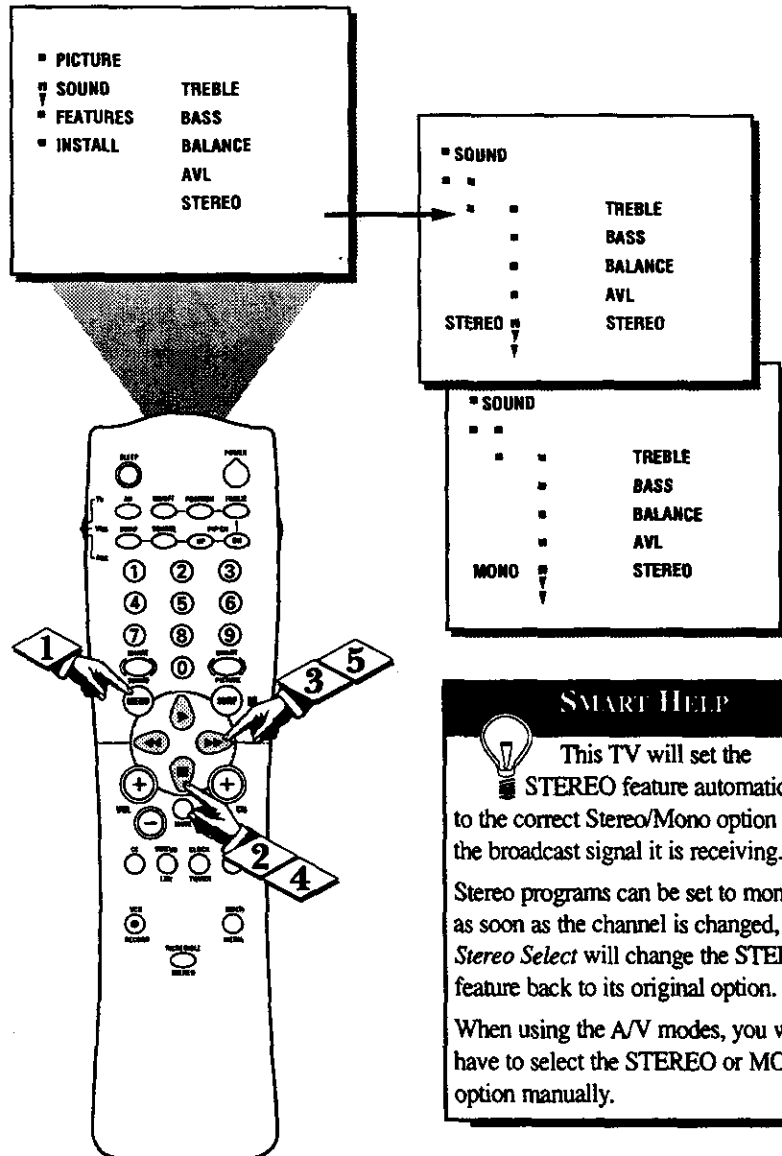

## SMART HELP

 This TV will set the **STEREO** feature automatically to the correct Stereo/Mono option from the broadcast signal it is receiving. Stereo programs can be set to mono but as soon as the channel is changed, *Auto Stereo Select* will change the **STEREO** feature back to its original option. When using the A/V modes, you will have to select the **STEREO** or **MONO** option manually.

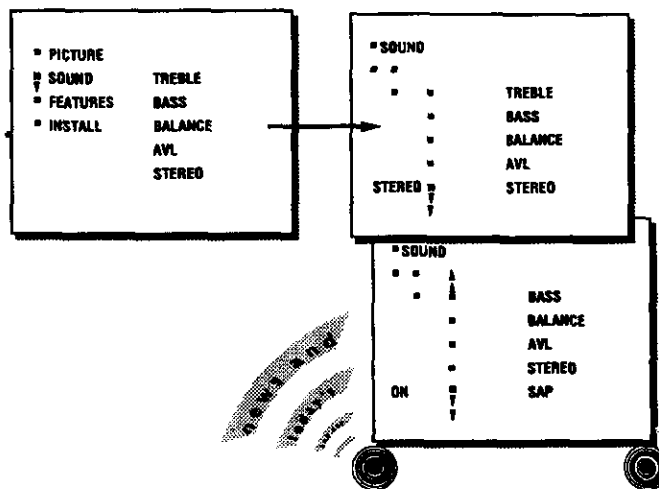

## USING THE INCREDIBLE STEREO FEATURE

**T**he Incredible Stereo feature adds greater depth and dimension to both monaural (MONO) and stereo TV sound. With the control turned ON the TV's speakers can add even wider sound separation to normal broadcasts.

 
### BEGIN

- 1 Press the **INCREDIBLE STEREO** button on the remote to turn the Incredible Stereo feature ON.

When the TV signal is being received in STEREO, the on-screen display will read **INCR. STEREO**.

When the TV signal is being received in MONO, the on-screen display will read **SPATIAL**.

Both will give increased TV sound performance when watching movies or musical programs.

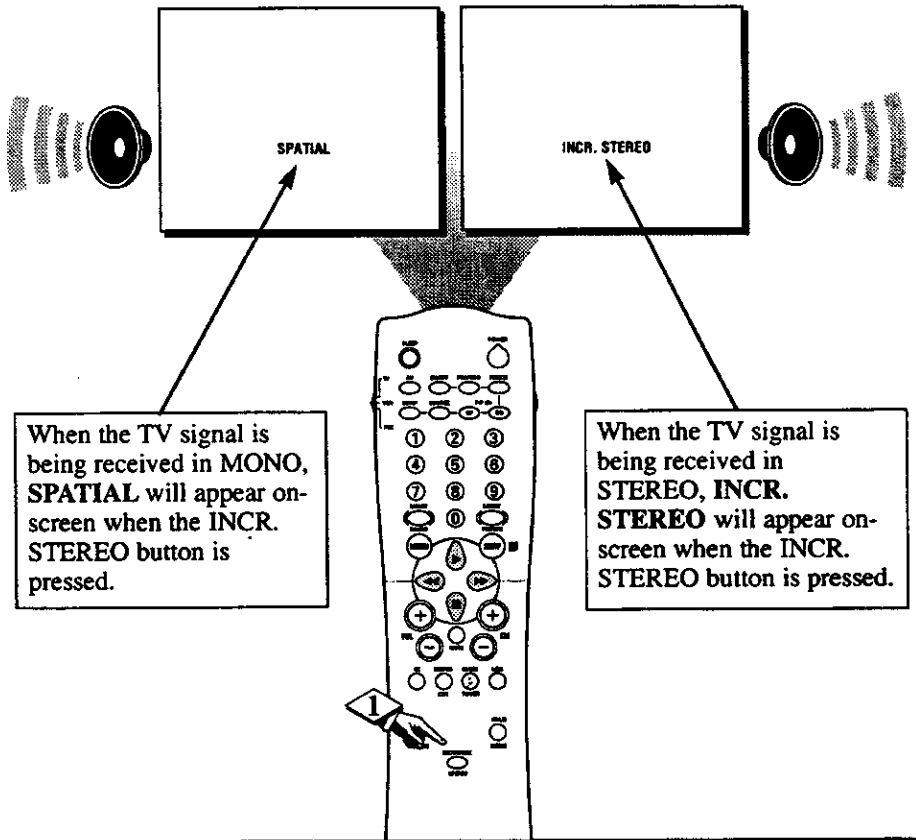

When the TV signal is being received in MONO, **SPATIAL** will appear on-screen when the **INCR. STEREO** button is pressed.

When the TV signal is being received in STEREO, **INCR. STEREO** will appear on-screen when the **INCR. STEREO** button is pressed.


## USING THE TV VOLUME BAR CONTROL

 **U**se the Volume Bar control to see the TV's volume level settings on the TV screen. The Volume Bar will be seen each time the **VOLUME** buttons (on the TV or remote) are pressed.

### BEGIN

- 1 Press the **VOLUME (+)** or **(-)** buttons on the remote to show the **VOLUME** bar display on-screen.

Press the **VOLUME (+)** or **(-)** buttons again to adjust the television's sound level.

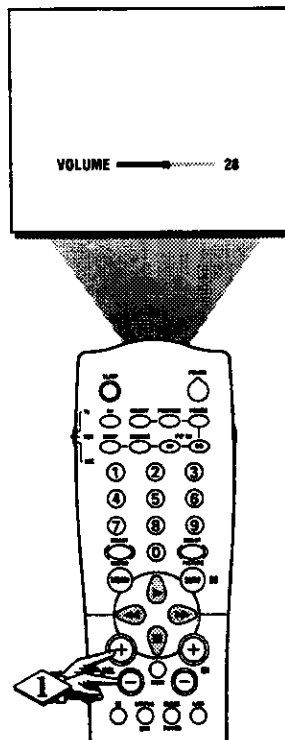

### SMART HELP



Try it out. Press the **VOL (+)** and **(-)** buttons. The **VOLUME BAR** should appear near the bottom center of the screen.

# USING THE TV SPEAKER CONTROL AND AUDIO OUTPUT JACKS

Would you like to hear TV programs through your audio hi-fi system? The TV's Audio Output jacks and TV Speaker On/Off control work together to offer you this TV sound option.

## BEGIN

 
- 1 Connect the R(ight) and L(eft) AUDIO OUT jacks on the TV to the R and L Audio Input jacks on your amplifier or sound system. Set the audio system's volume to normal listening level.
- 2 Turn the TV and audio system ON. You can now adjust the sound level coming from the audio system with the VOLUME (+) or (-) buttons on the TV or remote.
- 3 To hear the TV sound from only the audio system speakers. Press the MENU button on the remote to show the on-screen menu. PICTURE will be highlighted.
- 4 Press the CURSOR DOWN button to select the SOUND menu.
- 5 Press the CURSOR RIGHT button and the menu will shift to the right to display an adjustment bar in front of the TREBLE control.
- 5 Press the CURSOR DOWN button to select the SPEAKER control.
- 5 Use the CURSOR UP or DOWN buttons to select turn the television's speakers OFF. You should now only hear TV sound coming from the audio system speakers.

STOP

## SMART HELP



Remember, the audio system may have to be in AUX(iliary) mode to play sound from the TV.

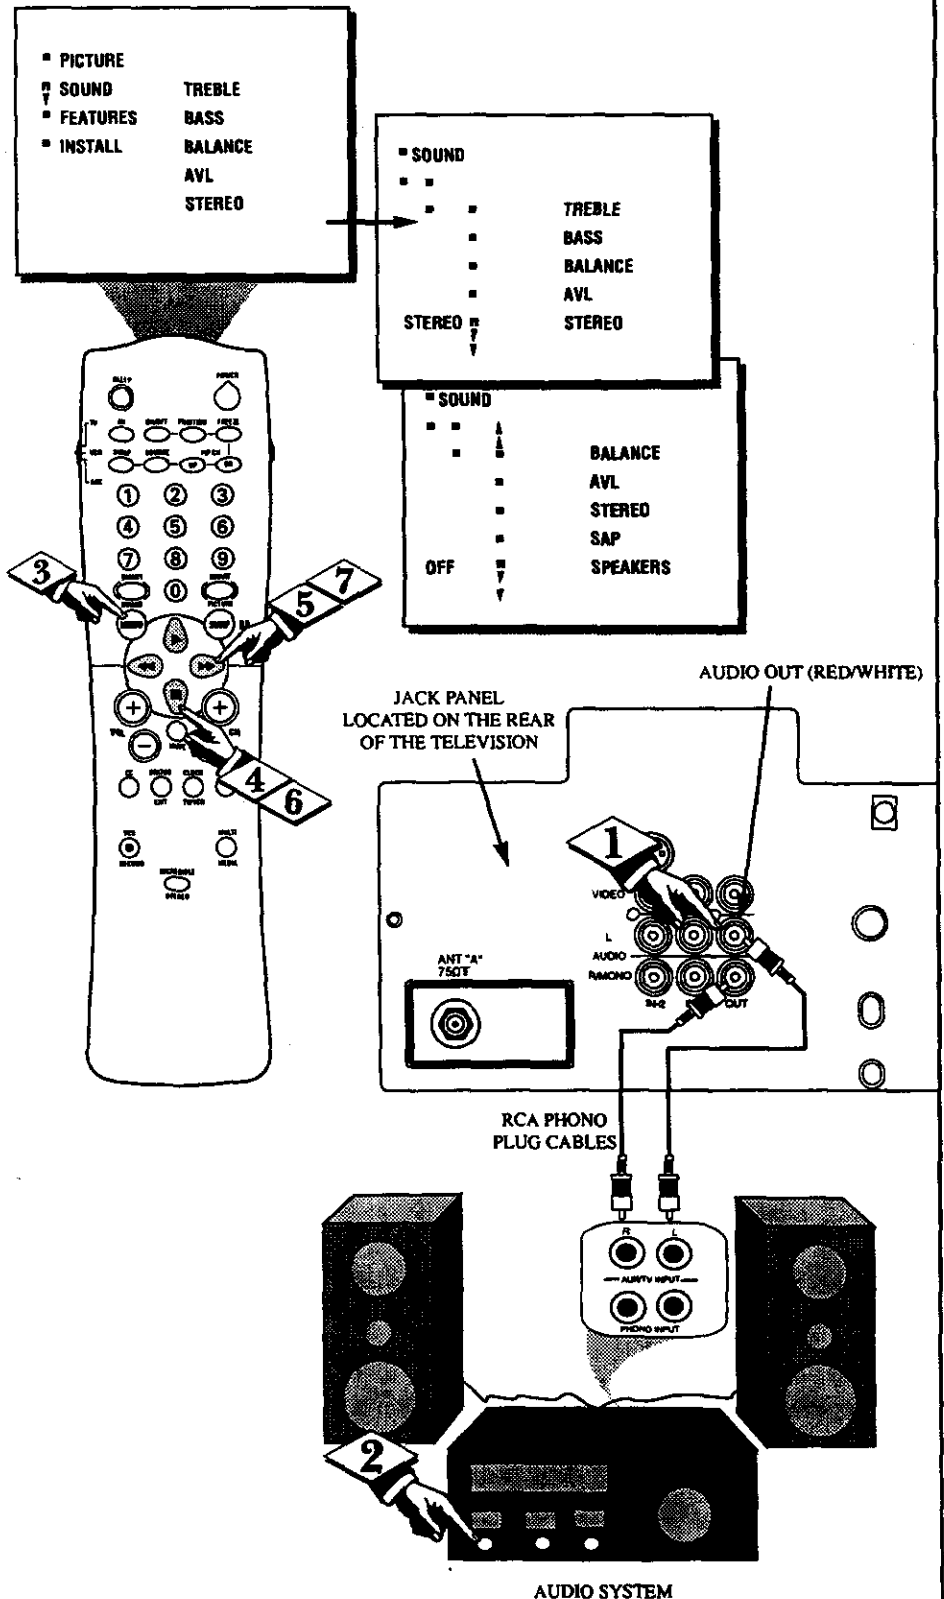

# HOW TO USE THE AUDIO/VIDEO INPUT JACKS

## AUDIO/VIDEO INPUTS

The TV's Audio/Video Input jacks are for direct picture and sound connections between the TV and a VCR (or similar device) that has Audio/Video Output jacks.

### BEGIN

- 1 Connect the VIDEO (yellow) CABLE to the VIDEO IN jack on the back of the TV. Then connect the AUDIO (red and white) CABLES to the AUDIO (left and right) IN jacks on the rear of the TV.
- 2 Connect the VIDEO (yellow) CABLE to the VIDEO OUT jack on the back of the VCR. Then connect the AUDIO (red and white) CABLES to the AUDIO (left and right) OUT jacks on the rear of the VCR.
- 3 Turn the VCR and the TV ON.
- 4 Use the A/V button on the remote to select the AV 1 channel.

With the VCR ON and a pre-recorded tape inserted, press the **PLAY** button to view the tape on the television.



 
 
 
### SMART HELP



Remember, with the TV/VCR/ACC switch in the VCR position, pressing the (CLOCK) TV/VCR button will allow you to toggle between the VCR mode and the TV mode.

**NOTE:** Repeatedly pressing the AV button on the remote will toggle the picture source from the current channel (Tuner A or B), to the SVID-R connection, to the AV 1 connection, to the AV 2 connection.

This also applies to the Multi Media button on the remote. Repeatedly pressing the Multi Media button will toggle the picture source from the current channel (Tuner A or B), to the MM 1 (SVID-R) connection, to the MM 2 (AV 1) connection, to the MM 3 (AV 2) connection.

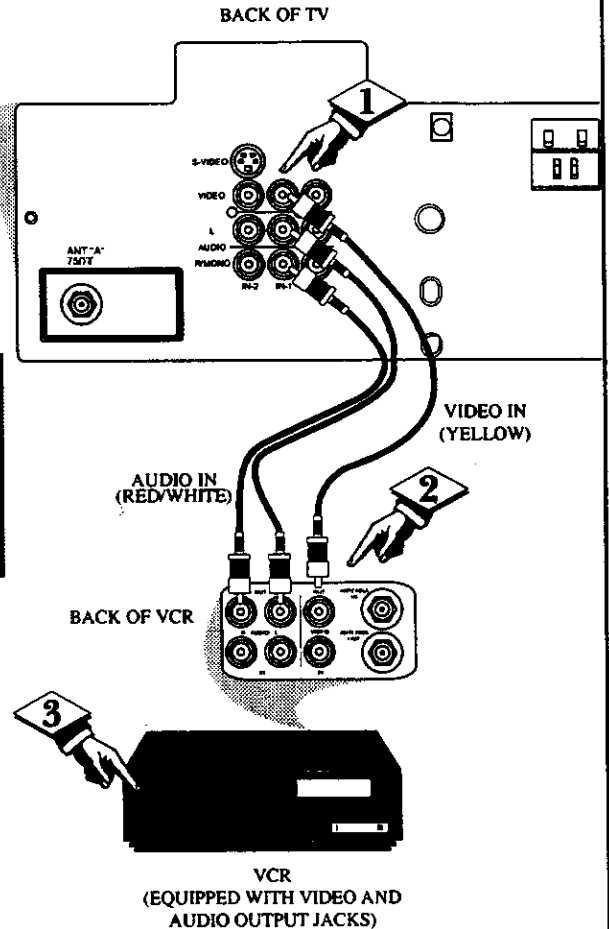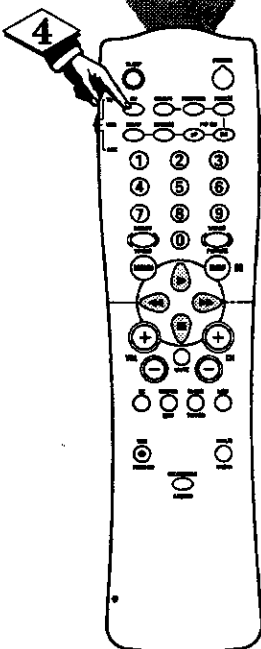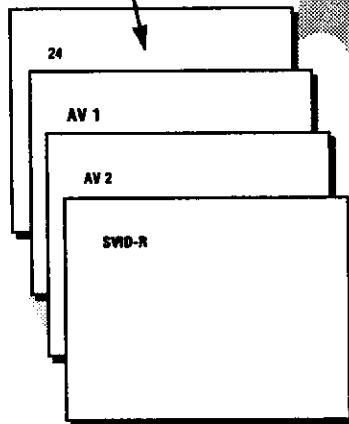

IF YOU ARE USING A MONO DEVICE, USE ONLY THE AUDIO R/MONO JACK.

# HOW TO USE THE AUDIO/VIDEO INPUT JACKS

## S-VIDEO INPUT

The S(uper)-Video connection on the rear of the television can give you better picture detail and clarity, for the playback of S-VHS VCR tapes, or Digital Video Discs than the normal antenna picture connections.

Note: The VCR (or Digital Video Disc player) must have a S-VIDEO OUT(put) jack in order for you to complete the connections shown on this page.

### BEGIN

- 1 Connect the S-VIDEO CABLE to the S-VIDEO input jack on the rear of the television, then the AUDIO (red and white) to the AUDIO IN (IN 2) jacks on the rear of the TV.
- 2 Connect the S-VIDEO CABLE to the S-VIDEO output jack on the accessory device. Then connect the red and white AUDIO CABLES to the AUDIO (left and right) output jacks on the rear of the accessory device.
- 3 Turn the VCR (or Digital Video Disc Player) ON.
- 4 Press the AV button on the remote to tune to the SVID-R channel. You are now ready to view the tape or disc on the TV.

 
STOP

### SMART HELP

The S-VIDEO and VIDEO IN-2 Inputs are in parallel. The S-VIDEO input is dominant when in use. If separate video signals are connected to the S-Video and the VIDEO IN-2 Inputs, the signal from the VIDEO IN-2 input will be unuseable.

If you have added SVID-R to the TV's channels memory, just press the CHANNEL + or - buttons to select the S-VIDEO mode.

NOTE: Repeatedly pressing the AV button on the remote will toggle the picture source from the current channel (Tuner A or B), to the SVID-R connection, to the AV 1 connection, to the AV 2 connection. This also applies to the Multi Media button on the remote. Repeatedly pressing the Multi Media button will toggle the picture source from the current channel (Tuner A or B), to the MM 1 (SVID-R) connection, to the MM 2 (AV 1) connection, to the MM 3 (AV 2) connection.

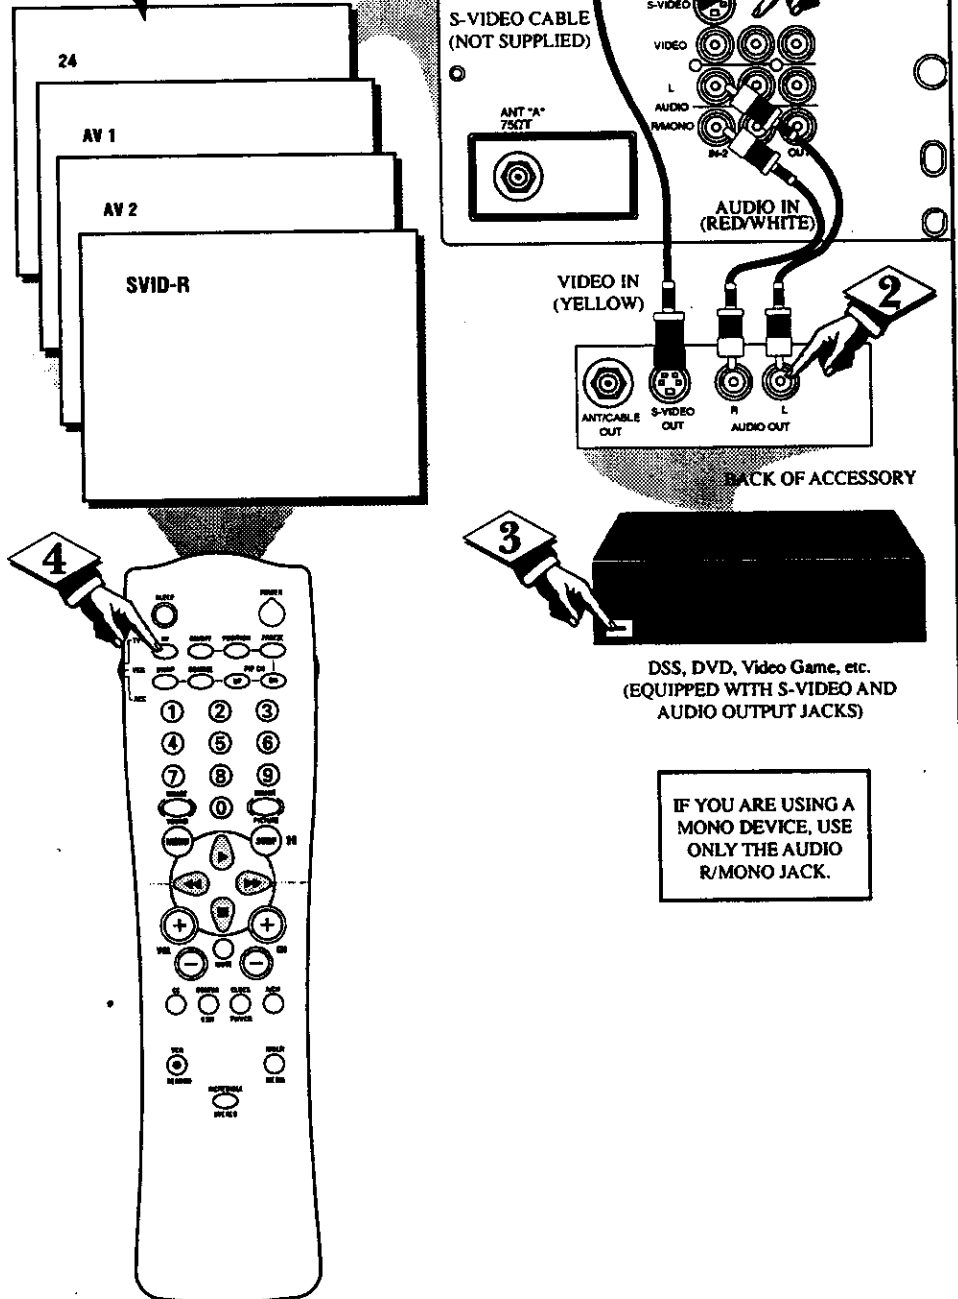


Whether you're watching a movie or a video game, your TV has automatic video control settings matched for your current program source or content. The Smart Picture feature quickly resets your TV's video controls for a number of different types of programs and viewing conditions you may have in your home. Each Smart Picture setting is preset at the factory to automatically adjust the TV's Brightness, Color, Picture, Sharpness, Tint, and Color Temperature levels.

**BEGIN**

 - 1 Press the SMART PICTURE button on the remote control. The current Smart Picture setting will appear in the middle of the screen.
- 2 Press the SMART PICTURE button repeatedly to select either PERSONAL, MOVIES, SPORTS, WEAK SIGNAL, or MULTI MEDIA picture settings.

**Note:** The PERSONAL settings and the PICTURE options within the on-screen menu are one in the same. This is the only option in Smart Picture that can be changed. To adjust these settings, use the options within the on-screen menu. All other settings are setup at the factory during the time of production and cannot be adjusted.

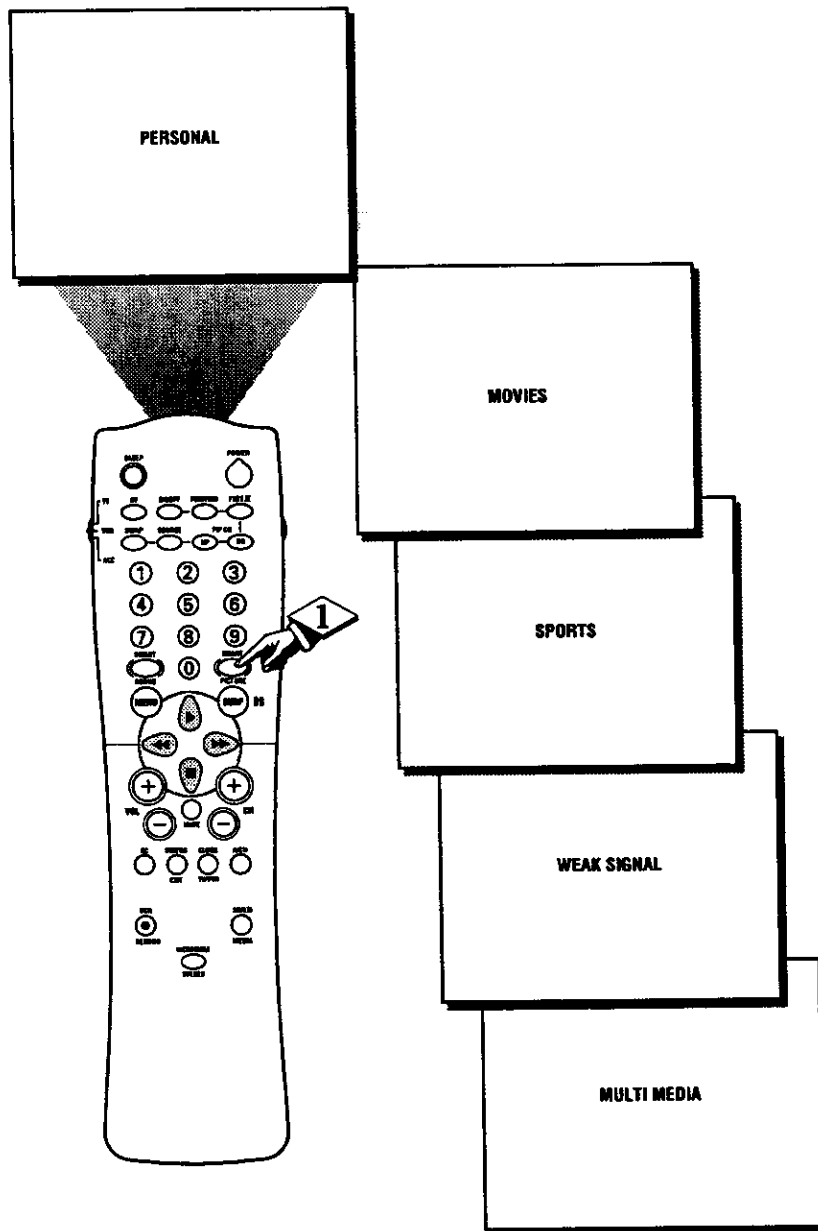



# USING THE SMART SOUND CONTROL



**A**re you tired of the sound of commercials following you into the next room or all through the house? Smart Sound allows you to preset a desired volume level that the TV sound will not go above. This makes for an even, more consistent sound by reducing the peaks and valleys that can occur during program changes or commercial breaks.

### BEGIN

 
 
- 1 Press the **SMART SOUND** button on the remote control. The current Smart Sound setting will appear in the middle of the screen.
- 2 Press the **SMART PICTURE** button repeatedly to turn the feature **ON** or **OFF**.

**STOP**

### SMART HELP




Remember, Smart Sound works only with the programs coming through the **ANTENNA/CABLE** input on the rear of the TV (RF audio). It will not control the sound levels for the External AV1, AV2, SVID-R or MM1, MM2, and MM3 connections.

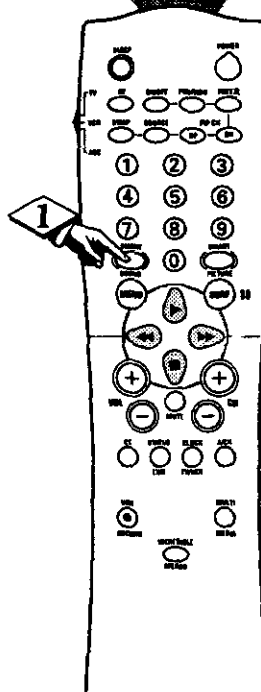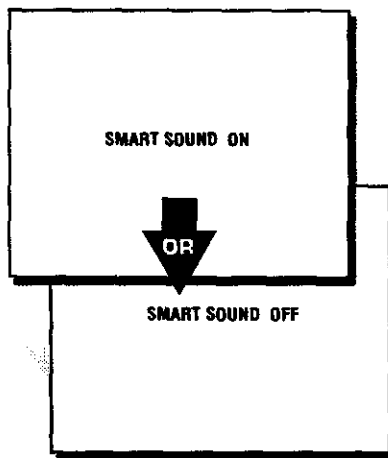

### AVL CONTROL

 **Note:** SMART SOUND is the same feature as AVL within the **SOUND** on-screen menu controls. When **SMART SOUND** is changed, the **AVL** control will also change (and vice versa).

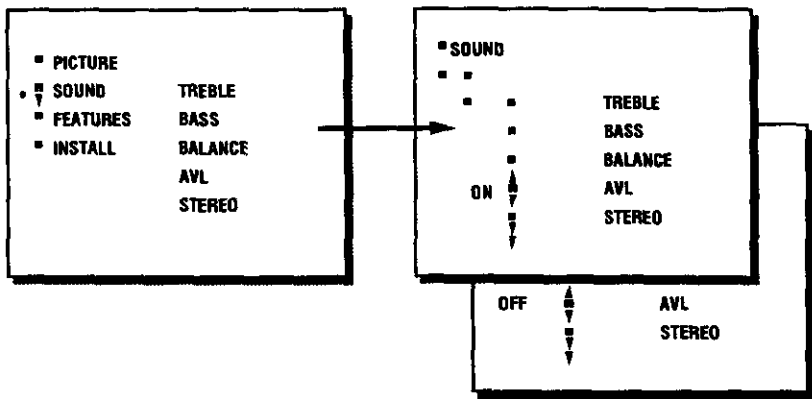

# USING THE TV'S CHANNEL SURF CONTROL

A "list" or series of previously viewed channels can be selected with the SURF button on your remote control. With this feature you can easily switch between different TV programs that currently interest you. The SURF control allows you set up to ten channels in its quick viewing "list".

## BEGIN

 
 
 
- 1 Press the CHANNEL (+) or (-) buttons (or the NUMBER buttons) to select a channel to add to the SURF list.
- 2 Press the SURF button on the remote. The on-screen display will read, "THE SURF LIST IS EMPTY, Press > to add".
- 3 Press the CURSOR RIGHT button to add the present channel to the SURF list.
- 4 Press the CURSOR LEFT button to delete the present channel from the SURF list.

Repeat steps 1 through 3 to add additional channels (up to 10) to the SURF list.



## A/CH BUTTON

Your remote also has an A/CH (Alternate Channel) button. Pressing this button will toggle between the Current and one previous channel.

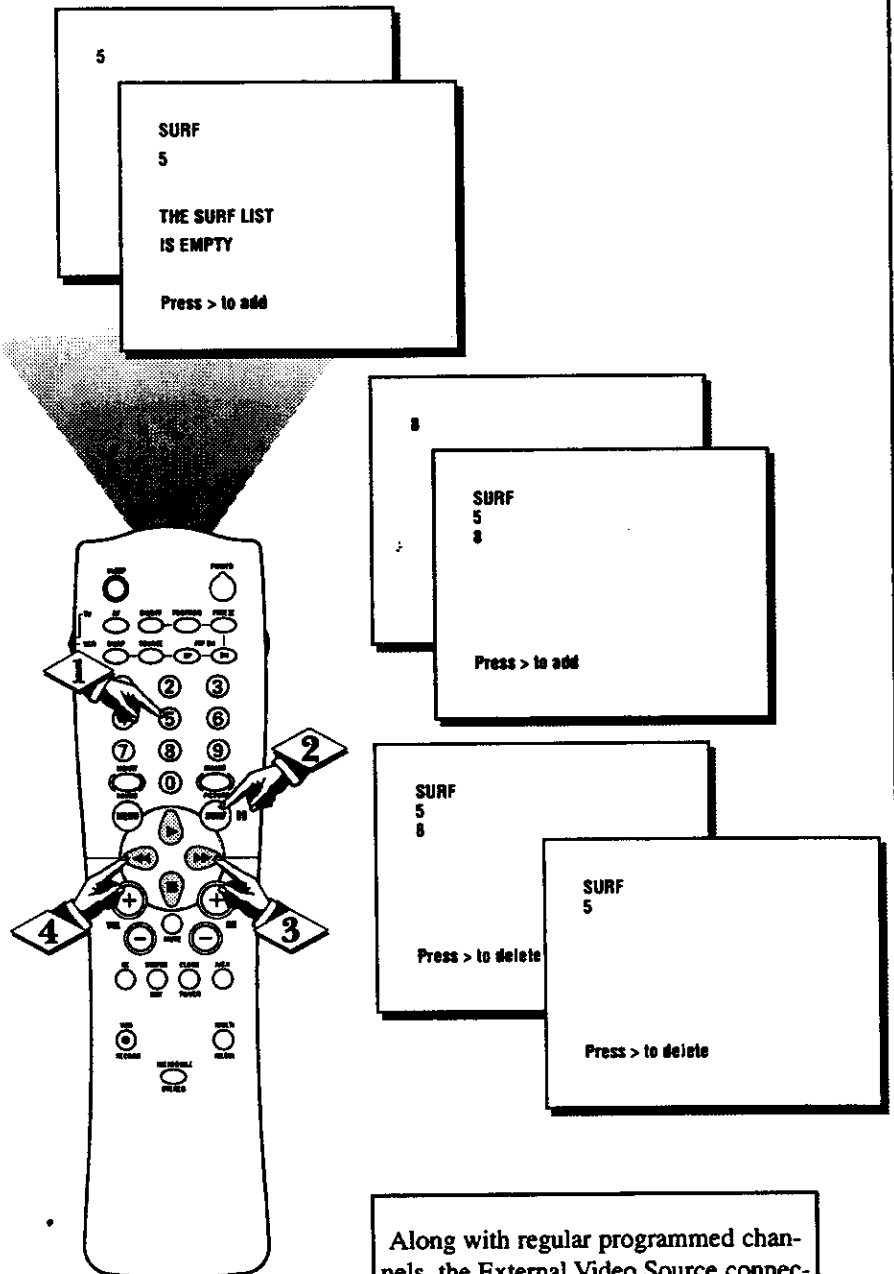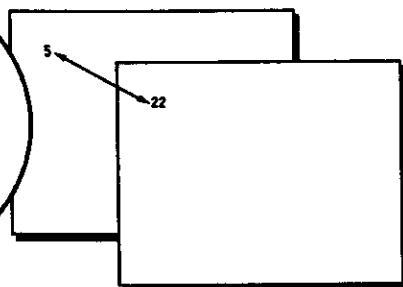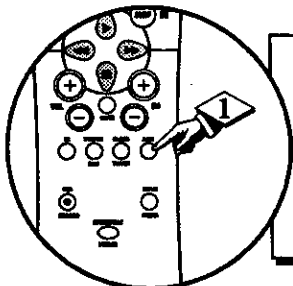

Along with regular programmed channels, the External Video Source connections can be added to the SURF list. This means the AV 1, AV 2, SVID-R, MM 1, MM 2, and MM 3 channels can be added to your SURF list. Just tune to their channel and use the same procedure described on this page.




Your remote control is set to work your TV and many infrared remote (IR) control VCRs, Cable Boxes, Satellite Systems, DSS, DVD, etc. However, an easy onetime step may be necessary before the remote will work your VCR.

Try this initial check to see if going on to the following section is necessary.

**BEGIN**

 - 1 Place the TV/VCR/ACC Mode Switch in the proper position.
- 2 Point the remote control at the device and press the POWER button.
- 3 Does the remote turn the device ON?  
 If YES, stop and try other function buttons on the remote. If they also work the device, then the remote is ready and no further steps are needed.  
 If NO, continue...

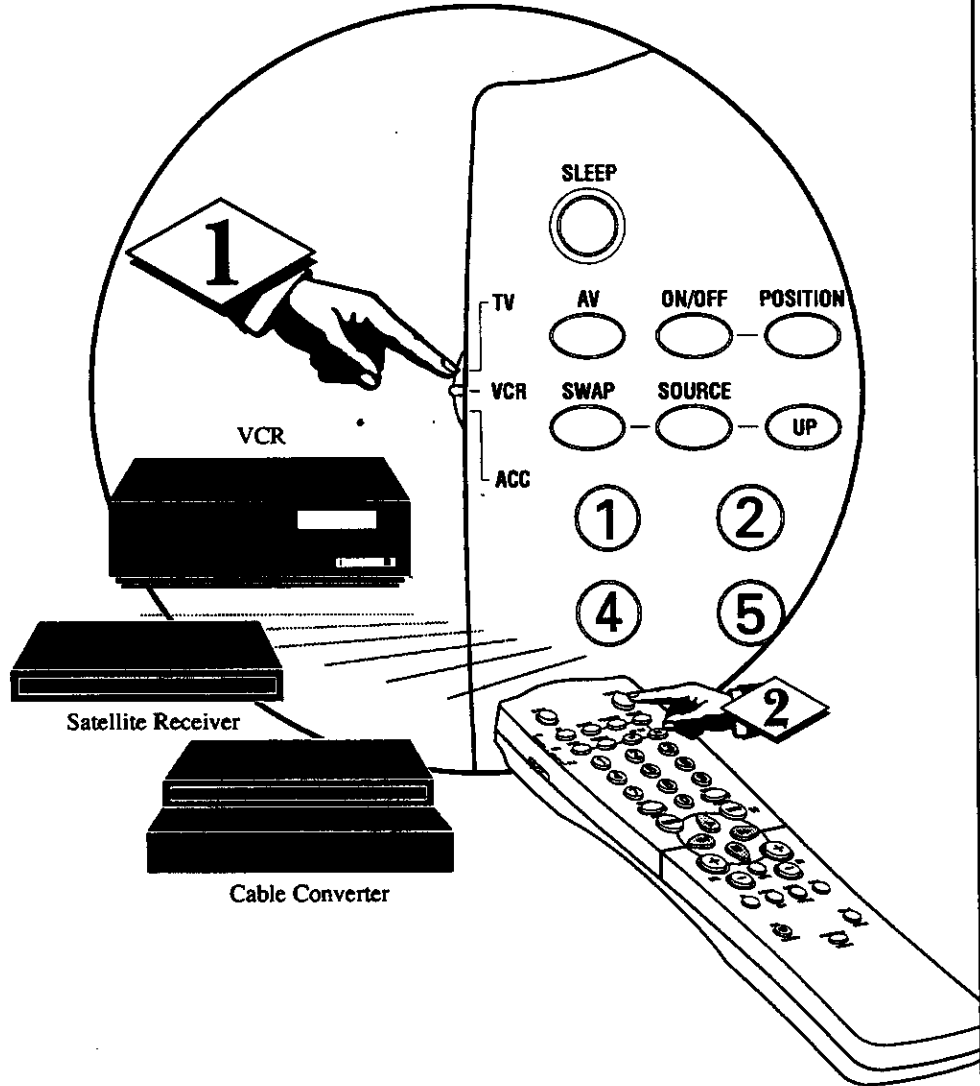

- 1 First look up a **THREE-DIGIT remote control number** for your brand of Device before going through the simple "1, 2, 3" steps (on the following page).

Find your Three-Digit Code on pages 30-31.

**SMART HELP**



Remember, if more than one number is listed, you may have to try more than the first Three-Digit code given in order to locate your Device's remote code.

# SETTING THE REMOTE CONTROL TO WORK WITH OTHER DEVICES

## Direct Access Method

Now that you have looked up the three-digit Remote Code Number for your brand of device, you are ready to follow the four simple steps below.

Please read through steps 1-4 before beginning.

### BEGIN

- 1 Place the TV/VCR/ACC Mode Switch in the proper position.
- 2 Press the VCR RECORD button on the remote control and release.
- 3 Press the SMART SOUND button on the remote within 30 seconds, then release.
- 4 Enter the THREE-DIGIT REMOTE CODE NUMBER for your desired device. The remote is now ready to send commands to the unit.
- 5 Point the remote at the Device. Press the POWER button on the remote to turn the unit ON.

 
STOP

### SMART HELP

Remember, if this doesn't work the first time, repeat steps using the same remote code number.

After a second try and the remote does not operate your device, see if there is another three-digit code number (pages 30-31) listed for your device and repeat the steps above using the new number.

If after repeated attempts the code number method does not work you device, try the SEARCH METHOD on page 29.

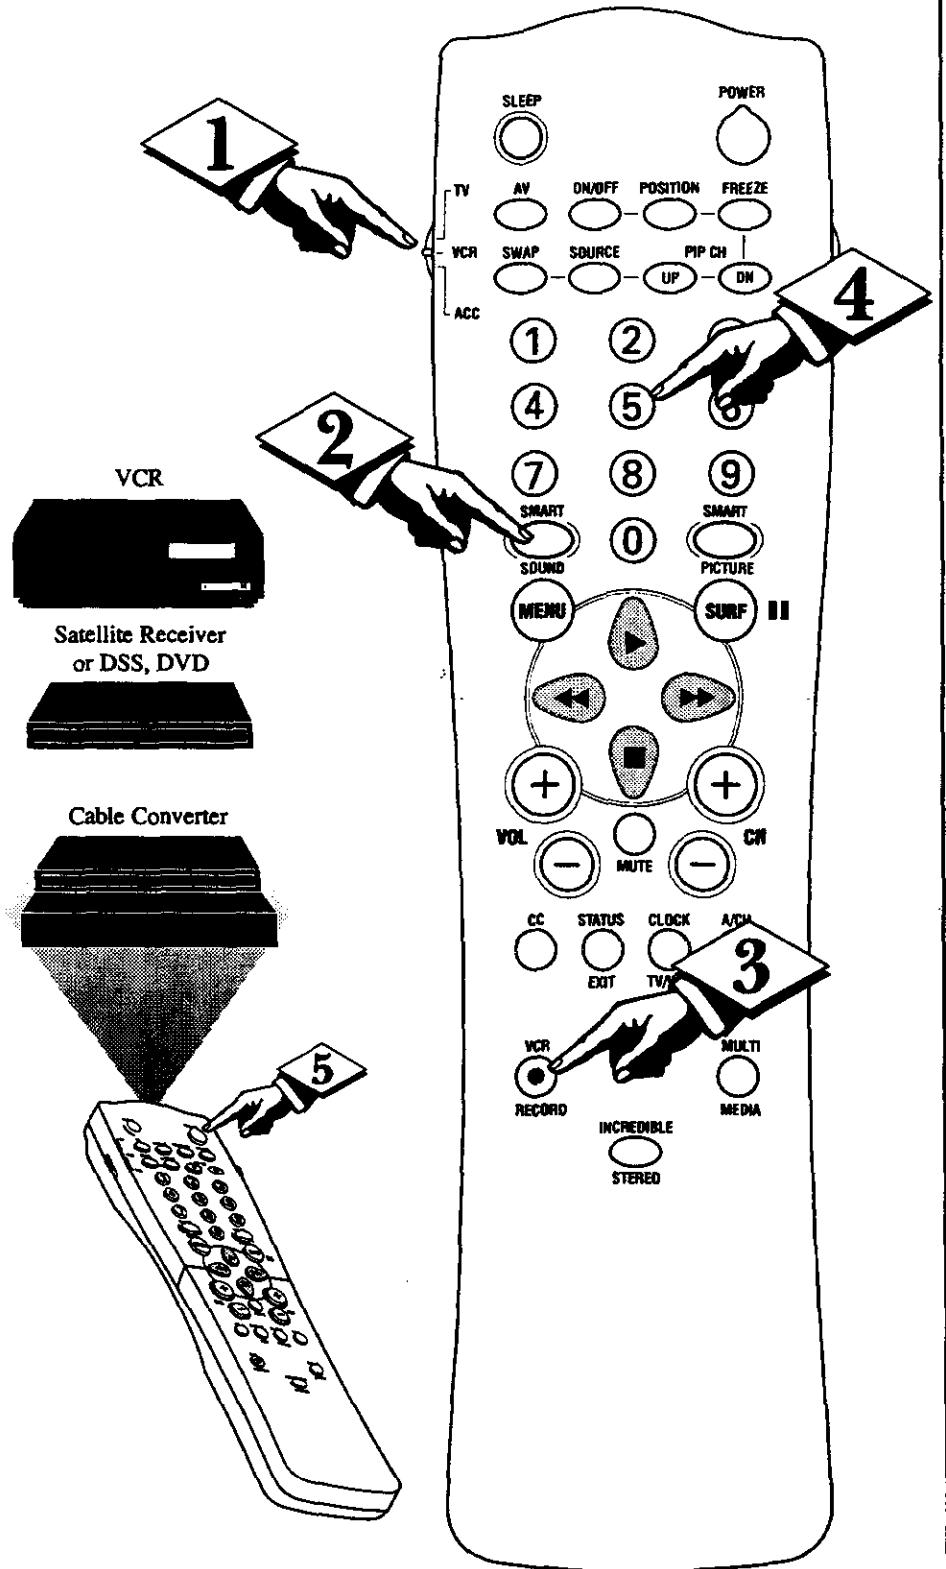

## Search Method

Your TV remote can be set to work various external devices such as VCRs, Cable Boxes, Satellite Receivers, DSS, DVD, etc. by what is called the search method of remote control programming.

If the "Remote Code" number method shown on page did not set your remote to work your external device, then follow the easy steps listed below.

Please read steps 1-4 before beginning.

### BEGIN

- 1 Press the **POWER** button on the device you are attempting to program to turn it ON.
- 2 Place the **TV/VCR/ACC Mode Switch** in the proper position.
- 3 Press the **VCR RECORD** and the **SMART SOUND** buttons simultaneously and hold them down.
- 4 The device will begin to change channels after the remote identifies the correct code. When the channels start to change release the **VCR RECORD** and **SMART SOUND** buttons. The remote should be ready to operate the device.



 
### SMART HELP



This method can take up to two minutes to perform.

Don't let the device scan up more than five channels. If you do the remote may pass up the right code and another two minute search cycle will have to be repeated.

If no channel change happens within two minutes, repeat steps 1-4. Should a channel change still not occur, the remote will not work the desired device.

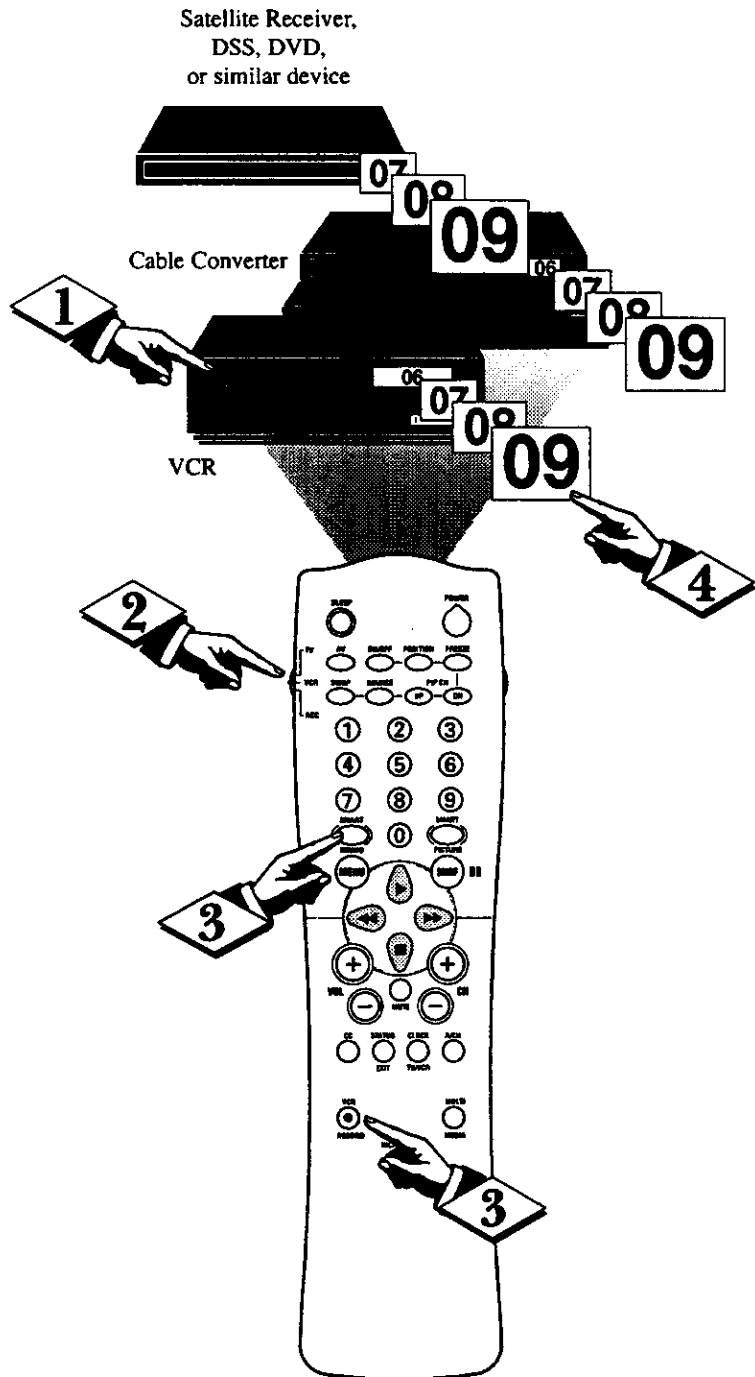



# REMOTE CONTROL DIRECT ENTRY CODES

<b>VCR</b>	<b>REMOTE CODE NO.</b>
Admiral	.048
Advantz	.358
Adventure	.000
Aiko	.278
Aiwa	.000, 037, 307, 348, 352
Akai	.041, 049, 053, 061, 106, 315
Alba	.352
Amercian High	.035
Amstrad	.325, 332
Asha	.240
Audiovox	.037
Baird	.107
Beaumarck	.240
Bell & Howell	.104
Blaupunkt	.003, 006, 154
Brandt	.187, 320, 321
Broksonic	.121, 184, 211, 295, 361
Bush	.352
CCE	.072, 278
Calix	.037
Canon	.035
Capchart	.020
Carver	.081, 146
Citizen	.037, 278
Colt	.072
Combitach	.352
Craig	.037, 047, 072, 240, 271
Curtis Mathes	.035, 041, 060
Cybermax	.051, 240
Daewoo	.020, 045, 276
Daytron	.020
Denon	.042
Dynatech	.000
Electrophonic	.037
Emerex	.032
Emerson	.000, 002, 036, 037, 043, 061 .068, 088, 121, 164, 208, 209, .211, 212, 278, 295, 361, 479
Ferguson	.107, 320, 321
Fisher	.047, 054, 066, 104
Fuji	.033, 035
Funai	.000
GE	.035, 060, 065, 202
Garrard	.000
Go Video	.232, 279, 432
Gold Star	.037, 038
Gradiente	.000, 406
Grundig	.003, 007, 195, 347
HI-Q	.047
Harly Davidson	.000
Harman/Kardon	.038, 075
Harwood	.068, 072
Headquarter	.046
Hinari	.004, 352
Hitachi	.000, 004, 041, 042, .065, 105, 168, 235
Ingersol	.004
JVC	.008, 041, 067, 208, 384, 486
Jensen	.041
KEC	.037, 278
KLH	.072
Kenwood	.038, 041, 067, 384
Kodak	.035, 037
LXI	.037
Lloyd's	.000, 206

<b>VCR</b>	<b>REMOTE CODE NO.</b>
Loewe	.004
Logik	.004, 072
MEI	.035
MGA	.043, 061
MGN Technology	.240
MTC	.000, 240
Magnavox	.000, 035, 081, 146, 181
Marta	.037
Matsui	.004, 348, 352
Matsushita	.035, 162, 454
Memmorex	.307
Memorex	.000, 035, 037, 039, 046, .047, 048, 104, 240, 266, 307
Metz	.003, 347
Minolta	.042, 105
Mitsubishi	.043, 061, 067, 075, 173, 443
Motorola	.035, 048
Multitech	.000, 072
NAD	.058
NEC	.036, 040, 041, 067, 104
Nikko	.037
Nikon	.034, 253
Noblex	.240
Nordmende	.297, 320, 321
Okano	.346
Olympus	.035, 226
Optimus	.037, 048, 058, 104, .162, 432, 454
Optonica	.062
Orion	.004, 295, 348, 352, 479
Panasonic	.035, 077, 162, 225, .226, 378, 454
Penney	.035, 037, 038, 040, .042, 065, 105
Pentax	.042, 065, 105
Philco	.035
Phillips	.035, 062, 081, 110, 403
Pilot	.037
Pioneer	.058, 067
Portland	.020
Profax	.322
Profitronic	.240
Protec	.072
Pulsar	.039, 051
Quarter	.046
Quartz	.046
Quasar	.035, 077, 162, 454
RCA	.042, 060, 065, 077, .105, 106, 149, 202
Radio Shack	.000, 037
Radix	.037
Randef	.037
Realistic	.000, 035, 037, 045, 047 .048, 062, 066, 104
Ricoh	.034, 253
Runco	.039
SEG	.322
SEI	.004
STS	.042
Saba	.297, 320, 321
Saisho	.004
Salora	.075
Samsung	.045, 051, 053, 240
Sanky	.039, 048
Sansui	.000, 041, 067, 271

<b>VCR</b>	<b>REMOTE CODE NO.</b>
Sanyo	.046, 047, 104, 240, 268
Saville	.352
Scott	.043, 045, 121, 164, 211, 212
Sears	.000, 035, 037, 042, 046, .047, 054, 066, 104, 105
Sharp	.046, 062
Shintom	.072
Shogun	.051, 240
Shoral	.004
Siemens	.003
Singer	.072
Sinudyne	.004
Sony	.000, 011, 022, 032, 033, .034, 035, 253, 275
Sunkel	.348
Sunpak	.253
Sylvania	.000, 035, 043, 081, 103, 110
Symphonic	.000
TMK	.036, 208, 240
Tatung	.041
Teac	.000, 041
Technics	.035, 162
Teknika	.000, 035, 037
Telefunken	.187, 320, 321
Tansal	.322
Thomas	.000
Thomson	.320
Toshiba	.043, 045, 066, 212, 366
Totavision	.037, 240
Towada	.322
Unitech	.240
Universum	.325
Vector	.045
Vector Research	.038, 040
Video Concepts	.040, 045, 061
Videosonic	.240
Wards	.000, 035, 042, 047, 048, 060, 062, .072, 081, 149, 161, 212, 240
XR-1000	.000, 035, 072
Yamaha	.038
Zenith	.000, 033, 034, 039

<b>CABLE CONVERTOR</b>	<b>REMOTE CODE NO.</b>
ABC	.001, 003, 007, 008, .011, 013, 014, 017
Aliegio	.153
Andover	.544
Antronix	.022
Archer	.022, 153
Balcor	.056
British Telecom	.105
Cable Star	.056
Cablatenna	.022
Cabletime	.161, 271, 377, 448
Cableview	.022
Century	.153
Citizen	.153
Clyde	.086
Colour Voice	.025, 031
Comtec	.274
Comtronics	.040
Contec	.019
Cryptovision	.600
Deceat	.423

# REMOTE CONTROL DIRECT ENTRY CODES



<b>CABLE CONVERTOR</b>	<b>REMOTE CODE NO.</b>
Eastern	.002, 274
Everquest	.015, 040
Filmnet	.443
Focus	.400
France Telecom	.451
GC Electronics	.056
GEC	.086
Ganard	.153
Gemini	.015, 070, 242
General Instrument	.011, 276, 476
Gold Star	.040
Grundig	.529
Hamlin	.009, 020, 034, 259
Hitachi	.011
Hytex	.007
Jasco	.153
Jerrold	.003, 011, 012, 014, .015, 024, 276, 476
M.N.E. T.	.443
MNet	.443
Macon	.033
Magnavox	.027, 032, 334
Memorex	.000
Movie Time	.063
NSC	.063, 070
Oak	.007, 019
Optimus	.021
Panasonic	.000, 021, 107
Paragon	.000
Philips	.025, 027, 031, 153, 242, 290, 334
Pioneer	.533, 753
Popular Mechanics	.400
Pulsar	.000
RCA	.021
Radio Shack	.015
Recoton	.400
Regal	.020, 259
Regency	.002
Rembrandt	.011, 070
Runco	.000
SL Marx	.040
Salora	.382
Samsung	.040
Satbox	.375
Scientific Atlanta	.008, 017, 477
Signal	.015, 040
Signature	.011
Sprucer	.021
Star Sight	.542
Starcom	.003, 015
Stargate	.015, 040
Starquest	.015
Sylvania	.001
TV85	.063
Tandy	.258
Tele+1	.443
Teleservice	.281
Teleview	.040
Texscan	.001
Timeless	.274
Tocom	.012, 013, 059
Toshiba	.000
Tudl	.286
Tusa	.015
Unike	.022, 153

<b>CABLE CONVERTOR</b>	<b>REMOTE CODE NO.</b>
United Artists	.007
United Cable	.003
Universal	.022, 056, 153, 191
Videoway	.250
Viewstar	.027, 063, 258
Visi Cable+	.461
Westminster	.105
Wolsey Gaine	.544
Zenith	.000, 054, 525
Zentek	.400

<b>DSS</b>	<b>REMOTE CODE NO.</b>
Alpha Star	.772
Echostar	.775
HTS	.775
Hitachi	.819
Hughes Network System	.749
Jerrold	.627
Magnavox	.722, 724
Memorex	.724
Panasonic	.701
Philips	.722, 724
Primestar	.627
RCA	.566
Sony	.639
Toshiba	.790
Uniden	.724

<b>Satellite</b>	<b>REMOTE CODE NO.</b>
AST	.351
Akai	.515
Alba	.352, 515, 613
Aldea	.288
Amstrad	.080, 252, 345, 461, 509, 689
Ankaro	.220, 288, 369
Anitron	.183
Armstrong	.243
Astra	.108
Avalon	.396
Axis	.369
BT	.515, 668
Beko	.189
Best	.369
Boca	.243, 513
Bush	.067
Cambridge	.344, 515
Channel Master	.362
CommLink	.288
Connexions	.396
Conrad	.607
Crown	.243
DDC	.362
DNT	.396
Echostar	.396
Ferguson	.067, 183, 189, 336
Fidelity	.252
Finix	.108, 397
Fuba	.369, 396
G-Bat	.183
Galaxis	.286
Gooding	.571
Grundig	.173, 189, 571, 750
Hinari	.183

<b>Satellite</b>	<b>REMOTE CODE NO.</b>
Hirschmann	.397, 573
Houston	.668
Huth	.220, 243, 268
ITT	.108
Intervision	.592
JVC	.515, 571
Kathrein	.092, 504, 622, 658
La Sat	.513, 607
Lennox	.592
Lupus	.369
Luxor	.108, 573
Manhattan	.592
Maspro	.092, 336, 750
Matsui	.571
Mediamarkt	.248
Minerva	.571
Mintec	.576
Morgan's	.243, 513
Newhaus	.220
Nikko	.360, 713
Nokia	.108, 397, 573
Nordmende	.362
Orbitech	.501
Pace	.067, 183, 336, 455, 791
Paliadium	.571
Palsat	.501
Philips	.200, 292, 571, 750
Phonotrend	.288, 592
Plasmatic	.442
Proset	.288
Quadral	.362, 628
RFT	.220, 288
Radix	.396
SAT	.351, 461
SEG	.369
Saba	.336
Salora	.108
Satec	.183
Schwaiger	.183, 504
Seemann	.396, 578, 626
Skymaster	.288, 626
Sony	.704
Star Trak	.421
Strong	.421
Sunstar	.513
Tantec	.336
Techni Sat	.262, 501
Teleka	.243, 613
Tonna	.668
Triad	.351
Universum	.571
Vtech	.351
Wisi	.351, 396

<b>DVD</b>	<b>REMOTE CODE NO.</b>
Kenwood	.534
Mitsubishi	.521
Panasonic	.490
Philips	.539
Pioneer	.550
RCA	.522
Sony	.552
Toshiba	.503

# USING THE REMOTE'S VCR BUTTONS

When using the TV remote with a VCR, first make certain it is set to control your VCR (by the REMOTE CODE or SEARCH method).

## BEGIN

- 1 Set the TV/VCR/ACC mode switch to VCR on the remote.
- 2 Point the top of the remote toward the front of the VCR (remote sensor window) when pressing the buttons.

**STOP**

## VCR SYSTEM SWITCH

Set in the VCR position to send remote commands to the VCR.

## PLAY BUTTON

Press to begin playback of a video tape. (Or, press PLAY button and VCR/RECORD button to begin a VCR recording.)

## REWIND BUTTON

Press to rewind tapes. For some VCR's the STOP button may have to be pressed first, then REWIND. In playback mode hold down the button to view picture moving rapidly in reverse.

## STOP BUTTON

Press to stop the motion of a tape in playback, rewind, fast forward, etc.

## VCR RECORD BUTTON

 
Hold the VCR/RECORD button and the PLAY button down to begin a VCR recording.

## SMART HELP

Remember, the VCR buttons on the remote will not operate your VCR if those features are not found on your VCR remote control.

Note: All VCR functions (particularly Search, Rewind, Fast Forward, etc.) will operate the same as with the original VCR remote control provided with the VCR.

NOTE: The functions of the buttons described on this page are for VCR use only. (Please make sure the TV/VCR/ACC switch is in the VCR position.)

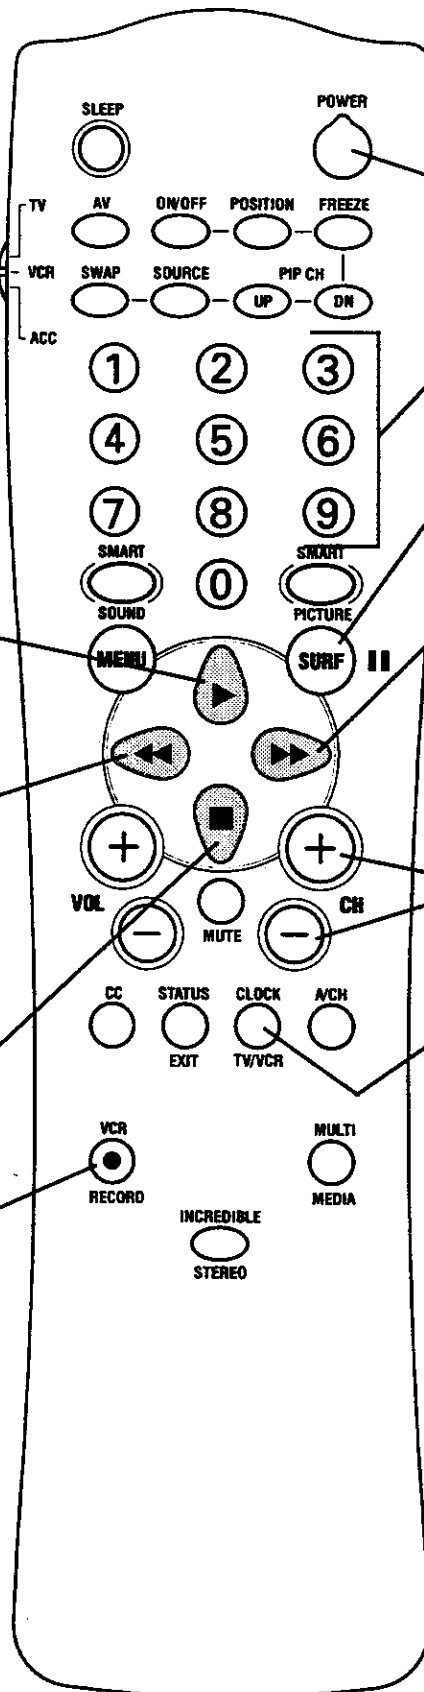

## POWER BUTTON

Press to turn the VCR ON and OFF.

## NUMBER BUTTON

Press buttons for direct VCR channel selections.

## PAUSE BUTTON

Press to temporarily stop the tape during a playback or recording. Press again to release Pause.

## FAST FORWARD BUTTON

Press to rapidly advance the tape. For some VCR's you may need to press the STOP button first, then the FAST FORWARD button. In playback mode hold the button down to view the picture moving rapidly in the forward direction.

## CHANNEL + & - BUTTONS

Press to scan up or down through the VCR channel numbers.

## (CLOCK) TV/VCR BUTTON

Press to the VCR position (VCR indicator on the front of the unit will light) to view the playback of a tape, watch a program while recording it, or to watch a TV broadcast using the VCR CH (+) (-) or Number buttons. Press again to place in the TV position (VCR indicator light will go off) to view one program while recording another program.



# USING THE PIP (PICTURE-IN-PICTURE) FEATURE

## Hooking up PIP

**P**icture in Picture (PIP) is the showing of two pictures on the screen at the same time. (One main screen picture and a smaller inset picture, or PIP).

*Note: the PIP picture must be supplied by a VCR (or other accessory device equipped with a VIDEO OUTPUT jack).*

*The following is a basic PIP hookup using a VCR to supply the secondary picture.*

### BEGIN

- 1 Connect the VIDEO OUT jack on the VCR to the VIDEO IN (yellow) jack on the rear of the TV.

Also connect the AUDIO OUT (Right and Left) jacks from the VCR to the AUDIO IN jacks (red and white) on the TV.

Also be sure that there is a normal Cable or Antenna signal hook from the VCR to the TV.

 
*This completes the a basic PIP hookup. Refer to pages 37-38 for "More PIP Connections".*

- 2 Move to the next page after the VCR to TV PIP connections have been completed.

## SMART HELP

Remember, for other possible connections see pages 37-38 for the "More PIP Connection" section.

If you have a single (Monaural) Audio Output VCR, there are two methods of connection. Use only the Right Audio IN (RED) and leave the Left Audio IN with NO connection. Or, "Y" connectors are available to complete your connection. Contact your dealer, or our Parts Information Center, 1-800-851-8885, for details.

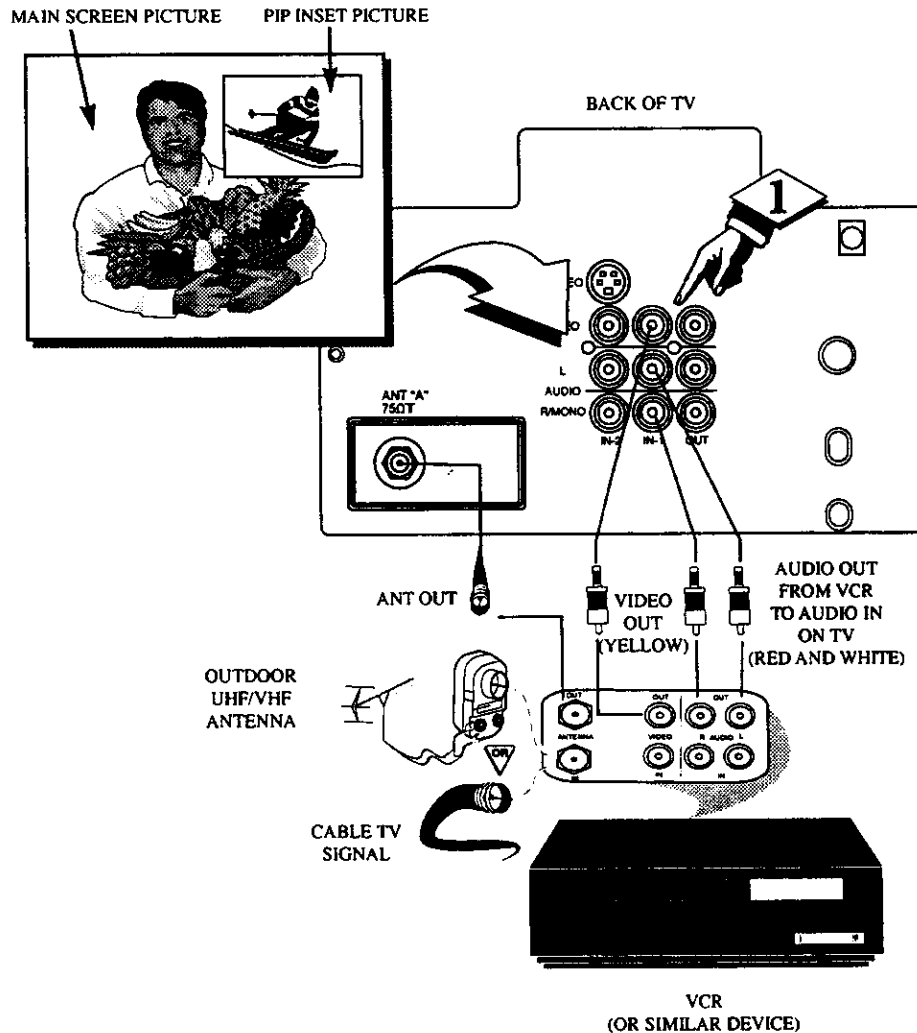

# USING THE PIP (PICTURE-IN-PICTURE) FEATURE

## CHOOSING THE PIP SOURCE

The picture for the PIP window can come through either the ANT/CABLE or any of the external Audio/Video connections at the rear of the TV. PIP Source simply tells the TV which one of these sources it is to show in the PIP window.

### BEGIN

- 1 Turn the TV and VCR (or other device hooked to the external A/V connections) ON.
- 2 Press the PIP ON/OFF button on the remote control. The PIP window should appear in the upper right hand portion of the screen.
- 2 Press the PIP SOURCE button on the remote to toggle between the different external connection.

 
The PIP SOURCE may come from the following:

**AV 1, AV 2, SVID-R:** for picture signal coming from the external Audio/Video jacks on the TV. (Must have an external device hooked up at these locations.)


**ANTENNA/CABLE:** for a picture signal coming from the ANT/CABLE Input on the back of the TV.

### SMART HELP

The PIP SOURCE can also be chosen by pressing the Multi Media Button on the remote control. MM 1, MM 2, MM 3, or the current channel (ANT/CABLE Input jack) can be selected. Try it out and see just how easy it is to use the PIP feature.

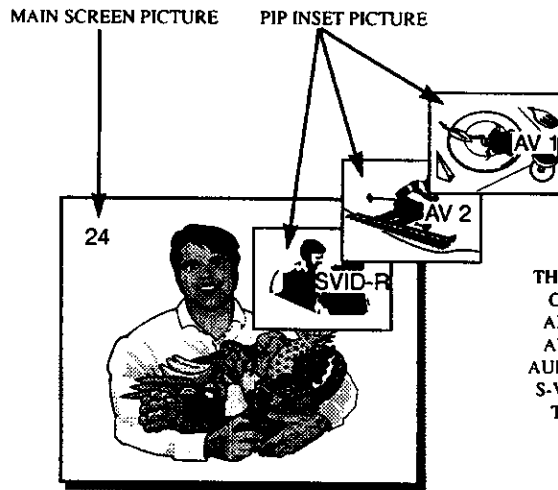

 THE PIP SOURCE PICTURE CAN COME FROM THE ANT/CABLE INPUT, THE AUDIO/VIDEO IN 1, THE AUDIO/VIDEO IN 2, OR THE S-VIDEO INPUT JACKS AT THE REAR OF THE TV.

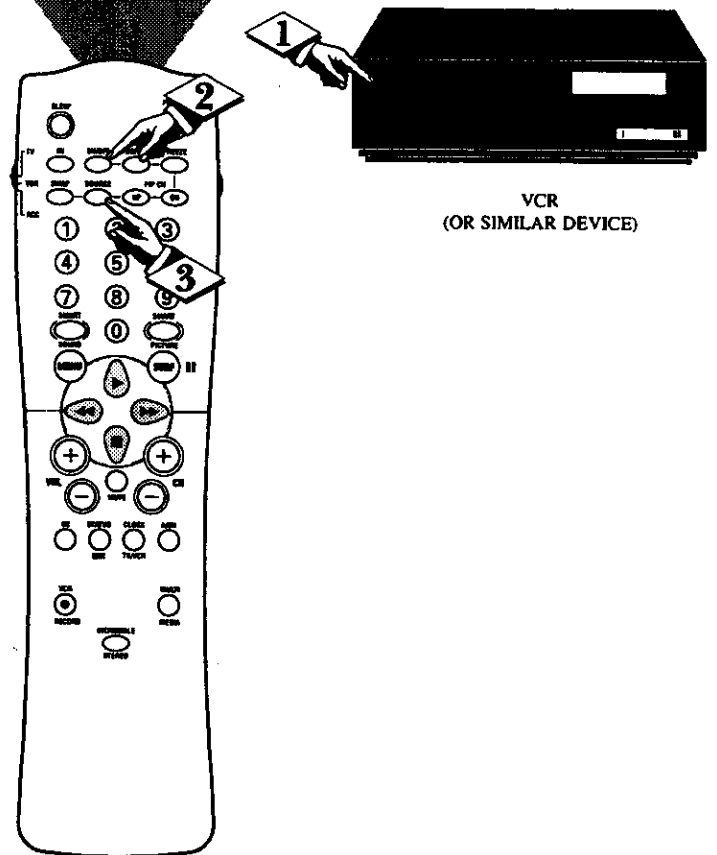

# USING THE PIP (PICTURE-IN-PICTURE) FEATURE



## REMOTE CONTROL BUTTONS

 
By using the PIP buttons on the remote control the PIP picture can be moved and swapped with the main screen. The PIP inset picture can also be frozen within the PIP window.

### BEGIN


- 1 Press the PIP ON/OFF button to show the PIP picture. PIP appears in the upper right of the screen.  
Press the PIP ON/OFF button again and the PIP picture is reduced in size.  
Pressing the ON/OFF button a third time will remove the PIP picture from the screen.
- 2 Press the PIP POSITION button on the remote to move the PIP picture to any of the four corners.
- 3 Press the PIP FREEZE button on the remote to stop the action within the PIP window. Pressing the PIP FREEZE button again to resume the normal viewing action.
- 4 Press the PIP CH(annel) UP/DN buttons on the remote to choose different channel or a different PIP source.
- 5 Press the PIP SWAP button to swap the main screen picture with the PIP inset picture. Pressing the PIP swap button again will return the main picture to the screen.



1. PIP ON/OFF

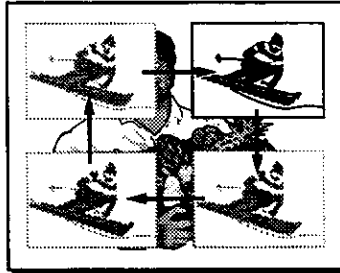

 
2. PIP POSITION

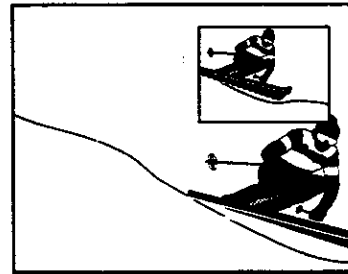

3. PIP FREEZE



 4. PIP CHANNEL UP/DN

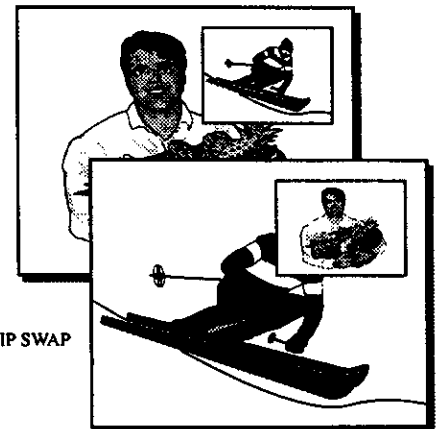

5. PIP SWAP

# ADJUSTING THE PIP COLOR AND TINT

**The Picture-In-Picture (PIP) Color and Tint controls are used to make fine tune adjustments to the color settings for PIP (when it is shown on the TV screen).**

## BEGIN

 
- 1 Press the **MENU** button on the remote to show the on-screen menu. **PICTURE** will be highlighted.
- 2 Press the **CURSOR DOWN** button twice to select the **FEATURES** menu.
- 3 Press the **CURSOR RIGHT** button and the menu will shift to the left to display the **TIMER** controls.
- 4 Press the **CURSOR DOWN** button to select the **PIP** menu.
- 5 Press the **CURSOR RIGHT** button again to shift the display to the **COLOR** and **TINT** adjustment bars.
- 6 Press the **CURSOR RIGHT** or the **CURSOR LEFT** buttons to adjust the **COLOR** and **TINT** bars to the desired levels.

STOP

## SMART HELP



Remember, although there are separate **COLOR** and **TINT** controls for PIP, the adjustment levels for these controls depend on the TV's main picture. For example: If the main picture screen is showing a black and white picture, PIP would also be seen in black and white (even though the PIP picture source is in color).

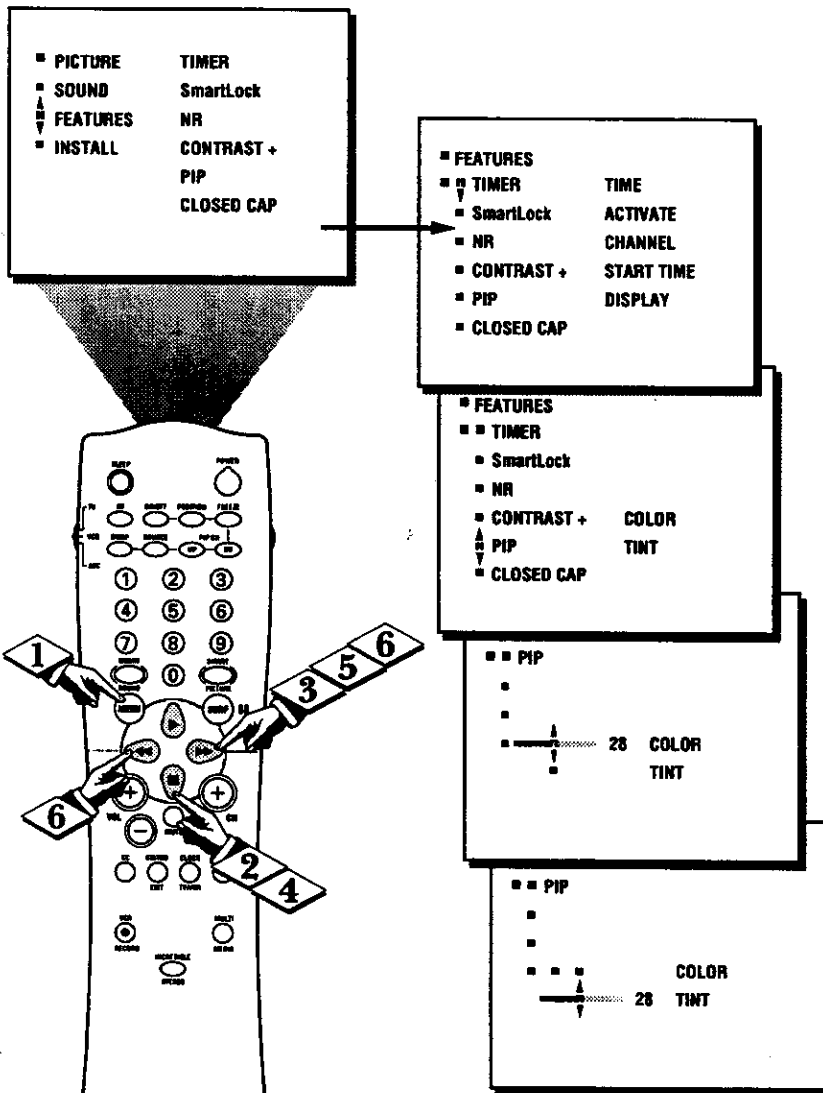


# MORE PIP (PICTURE-IN-PICTURE) CONNECTIONS

## PIP hookup with a Cable Box and VCR.

### BEGIN

- 1 First use an optional signal splitter and connect the original cable TV signal to both the CABLE IN on the Cable Converter and the ANTENNA plug on the rear of the television.
- 2 Connect the CABLE OUT on the Converter to the ANT. IN on the VCR.
- 3 Connect the VIDEO OUT jack on the VCR to the VIDEO IN jack on the TV.

 Also connect the AUDIO OUT (right and left) jacks from the VCR to the AUDIO IN jacks on the television.

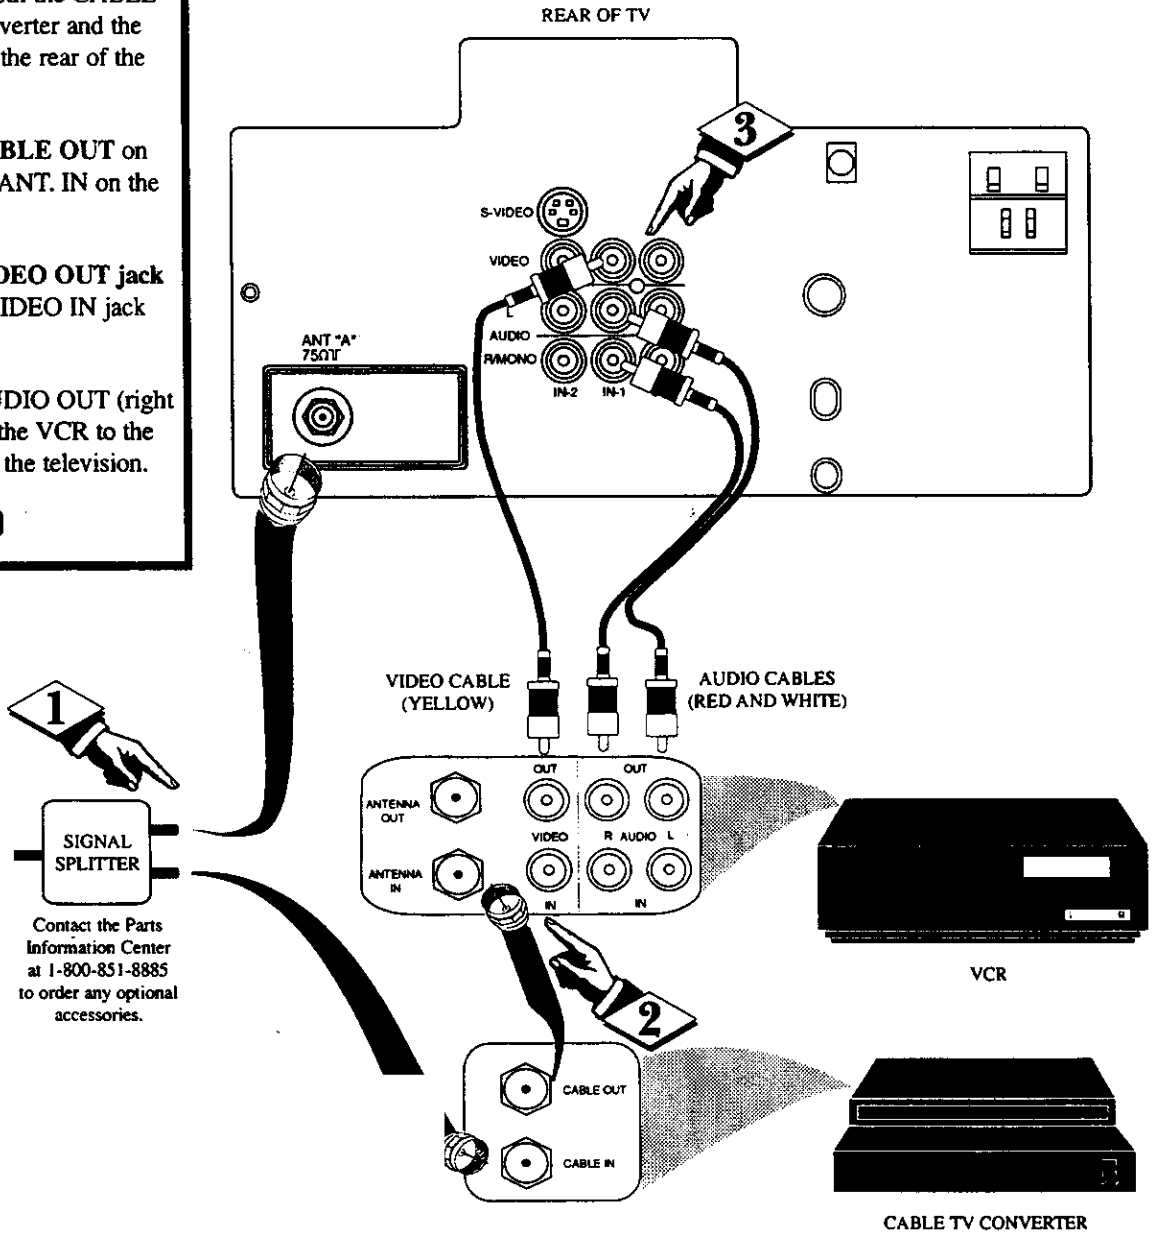

Contact the Parts Information Center at 1-800-851-8885 to order any optional accessories.


# MORE PIP (PICTURE-IN-PICTURE) CONNECTIONS

 **P**IP hookup with a VCR and a Digital Video Disc Player (or similar device).

**BEGIN**

- 1** First connect the original cable TV signal or Antenna signal to the ANT IN jack on the back of the VCR.
- 2** Connect the ANT OUT jack on the rear of the VCR to the ANT "A" input on the rear of the TV.
- 3** Connect the yellow Video Cable from the VIDEO OUT jack on the VCR to the VIDEO IN jack on the TV (labeled VIDEO IN-2). Then, connect the red and white Audio Cables from the AUDIO OUT jacks on the VCR to the AUDIO IN jacks on the rear of the TV (labeled AUDIO L & R/MONO IN-2).
- 4** Connect the yellow Video Cable from the VIDEO OUT jack on the Digital Video Disc Player to the VIDEO IN jack on the TV (labeled VIDEO IN-1). Then, connect the red and white Audio Cables from the AUDIO OUT jacks on the Digital Video Disc Player to the AUDIO IN jacks on the rear of the TV (labeled AUDIO L & R/MONO IN-2).

**Note:** When selecting the PIP SOURCE, the Digital Video Disc Player will appear on the AV 1 channel, and the VCR will appear on the AV 2 channel.

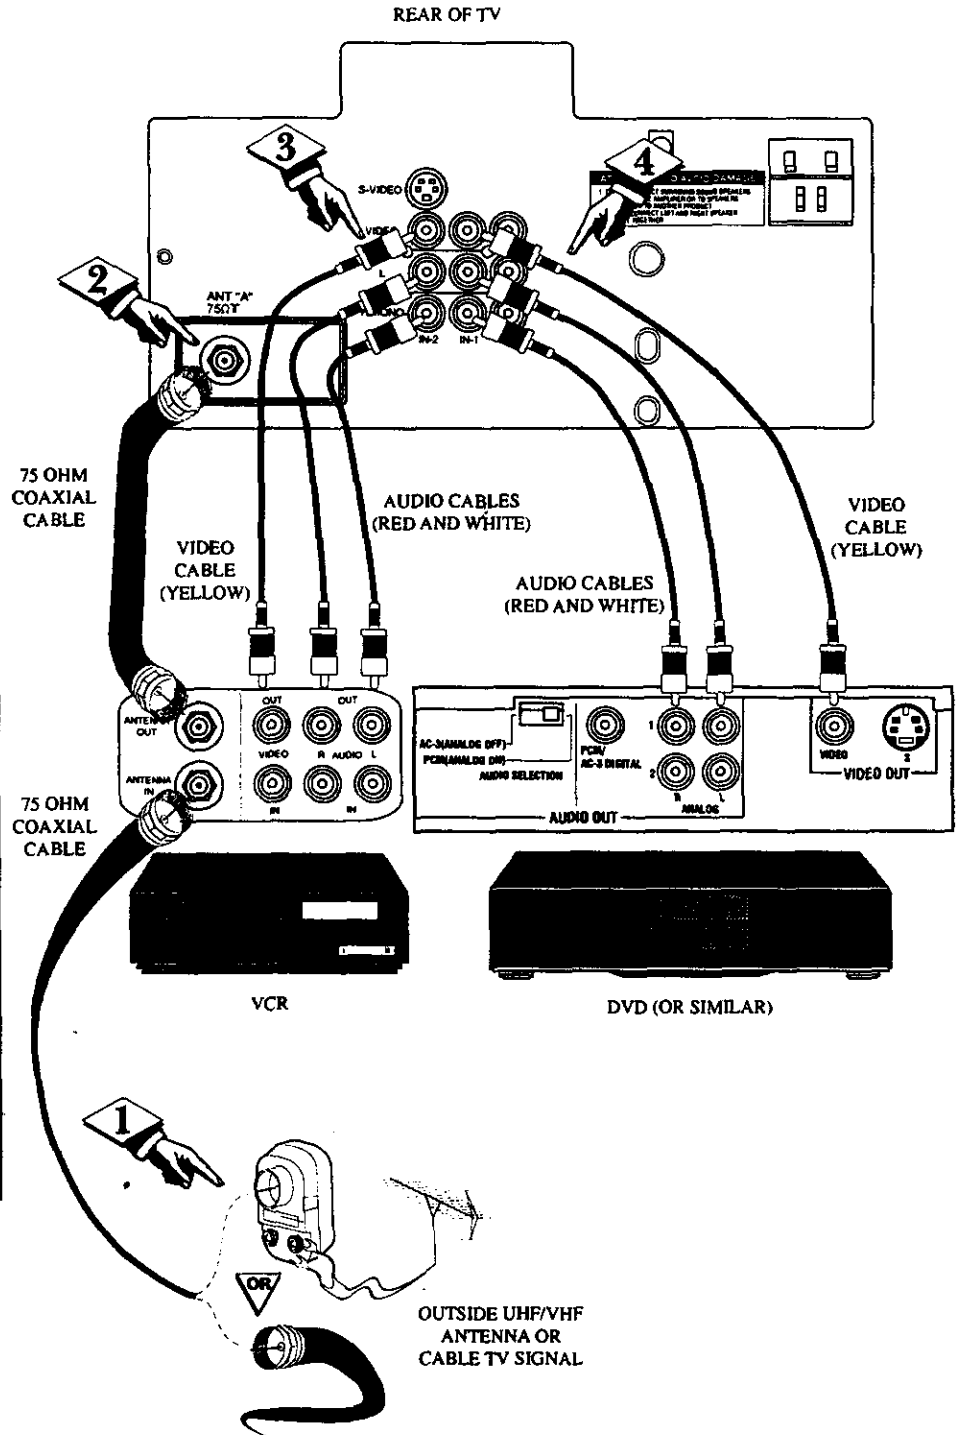

## TIPS IF SOMETHING ISN'T WORKING

*Please make these simple checks before calling for service. These tips can save you time and money since charges for TV installation and adjustment of customer controls are not covered under your warranty.*

### No Power

### No Picture

### No Sound

### Remote Does Not Work

### TV Displays Wrong Channel or No Channels Above 13

### TV Displays Black Box

**CAUTION:** A video source (such as a video game, Compact Disc Interactive - CDI, or TV information channel) which shows a constant non-moving pattern on the TV screen, can cause picture tube damage. When your TV is continuously used with such a source the pattern of the non-moving portion of the game (CDI, etc.) could leave an image permanently on the picture tube. When not in use, turn the video source OFF. Regularly alternate the use of such video sources with normal TV viewing.

- Check the TV power cord. Unplug the TV, wait 10 seconds, then reinsert plug into outlet and push POWER button again.
- Check that outlet is not on a wall switch. Be sure fuse is not blown on AC Power strip.
- Check to be sure the system mode switch (TV/VCR/ACC) is in the correct position when using the remote control to power the set ON.

- Check antenna connections. Are they properly secured to the TV's ANT/CABLE plug?
- Check the TUNER control for CABLE or ANTENNA setting.
- Press the AV button on the remote to make sure the correct signal source is selected. (AV 1, AV 2, SVID-R or MM 1, MM 2, MM 3)

- Check the VOLUME buttons.
- Check the MUTE button on the remote control.
- Check the SPEAKER on-screen control. OFF position will eliminate sound at the set.
- If attempting auxiliary equipment hook-ups, check audio jack connections.
- (If Applicable) Check Audio Receiver for correct operating mode.

- Check TV/VCR/ACC "System" switch on the remote. Move the switch to the TV position to operate the television.
- Check batteries. Replace with AA Heavy Duty (Zinc Chloride) or Alkaline batteries if necessary.
- Clean the remote and the remote sensor window on the TV.
- Check the TV power cord. Unplug the TV, wait 10 seconds, then reinsert plug into outlet and push POWER button again.
- Check to be sure TV outlet is not on a wall switch.

- Repeat channel selection.
- Add desired channel numbers (CHANNEL control) into TV memory.
- Check to be sure the TUNER control is set to the CABLE option.

- Check CLOSED CAPTION in menu and turn TEXT Mode OFF.

### Cleaning and Care

- To avoid possible shock hazard be sure the TV is unplugged from the electrical outlet before cleaning.
- When cleaning the TV screen take care not to scratch or damage the screen surface (avoid wearing jewelry or using anything abrasive). Wipe the front screen with a clean cloth dampened with water. Use even, easy, vertical strokes when cleaning.
- Gently wipe the cabinet surfaces with a clean cloth or sponge dampened in a solution of cool clear water. Use a clean dry cloth to dry the wiped surfaces.
- Never use thinners, insecticide sprays, or other chemicals on or near the cabinet, as they might cause permanent marring of the cabinet finish.

## GLOSSARY TO TELEVISION TERMS

**Alternate Channel \*** Then using the A/CH button on the remote control, toggles between the last two channels viewed.

**Auto Programming \*** When activated, this feature automatically scans for all available channels—from regular antenna or cable signals and stores only active, broadcast stations into the TV's memory.

**Channel Edit \*** Add or delete channels from the sequential tuning cycle to develop a customized list of channels you want to watch. Editing makes it easy to limit the number of channels when scanning the Channel up and down buttons or expand the number of channels available to suit your preference.

**Coaxial Cable \*** A single solid antenna wire normally matched with a metal plug (F-type) end connector that screws (or pushes) directly onto a 75 Ohm input found on the Television or VCR.

**Closed Caption \*** Broadcast standard which allows you to read the voice content of television programs on the TV screen. Designed to help the hearing impaired this feature uses on-screen "text boxes" to show dialogue and conversations while the TV program is in progress.

**Audio/Video Inputs \*** Located on the rear of the TV these connectors (RCA phono type plug) are used for the input of audio and video signals. Designed for use with VCRs (or other accessories) in order to receive higher picture resolution and offer sound connection options.

**Identify\*** Method by which a remote control searches and finds an operating code for another product (such as a VCR or Cable Converter). Once the code has been "identified" then the TV remote can operate and send commands to the other product.

**On Screen Displays (OSD) \*** Refers to the wording or messages generated by the television (or VCR) to help the user with specific menu feature controls (color adjustment, programming, etc.).

**Menu \*** An on-screen listing of feature controls shown on the Television screen that are made available for user adjustments.

**Multichannel Television Sound (MTS) \*** The broadcast standard that allows for stereo sound to be transmitted with the TV picture.

**Programming \*** The procedure of adding or deleting channel numbers into the Television's memory circuits. In this way the Television "remembers" only the locally available or desired channel numbers and skips over any unwanted channel numbers.

**Remote Sensor Window \*** A window or opening found on the Television control panel through which infrared remote control command signals are received.

**Second Audio Program (SAP) \*** Another or additional audio channel provided for in the Multichannel Television Sound (MTS) broadcast standard. The most frequently proposed use for SAP is the simultaneous bilingual broadcast of TV program material.

**Status/Exit \*** Allows the user to quickly confirm what channel number is currently being viewed. Status/Exit can also be used to clear the Television of on screen displays or information (rather than waiting for the displays to "time out" or automatically disappear from the screen).

**Twin Lead Wire \*** The more commonly used name for the two strand 300 Ohm antenna wire used with many indoor and outdoor antenna systems. In many cases this type of antenna wire requires an additional adapter (or balun) in order to connect to the 75 Ohm Input terminals designed into the more recent Televisions and VCRs.

**Incredible Stereo \*** Pseudo-acoustic management of the audio signal produces a dramatic expansion of the wall-of-sound engulfing the listener and heightening overall viewing pleasure.

**Smart Lock \*** Prevents young children from accessing particular broadcast channels (or using audio/video inputs) by electronically locking them out. Undesired channels are blocked out by entering a unique four-number code, which you choose when programming the feature. Blocked-out channels are just as quickly restored with the same process.

**Smart Clock \*** An accurate digital clock that's always right. By monitoring the vertical blanking interval of PBS broadcasts, TVs equipped with Smart Clock can automatically set the right time of day and maintain it through brown-outs, power failures, and even daylight savings time adjustments.

**Two-Tuner PIP \*** This TV has two separate tuners (and two separate tuner inputs) which allow you to watch one show with one tuner, while scanning other channels with the second tuner in the PIP window.

 


# INDEX

Accessories/Optional	21, 22-23, 33, 37-38, *Q/U-1	Picture Noise Reduction	14
Adapter Connector	33, 38, *Q/U-1	Precautions/Safety	3, 44, *Q/U-1
Add/Delete Channels	*Q/U-2	Programming Channels	*Q/U-2
Audio/Video Jackpanel	21-23, 33, 37-38	Remote Control	24-32, *Q/U-4
AVL (Automatic Volume Leveler)	25	Remote Control Direct Entry Code List	30-31
Balance Control	18	Remote Control with Accessory Equipment	27-32
Bass Control	18	Requesting Service	39, 42-44
Battery Installation	*Q/U-4	RF Coaxial Cable	22-23, 38, *Q/U-1
Cable Converter Direct Entry Code List	30-31	Satellite Receiver Direct Entry Code List	30-31
Cable TV Connections/Settings	22-23, *Q/U-2	Safety/Precautions	3, 44, *Q/U-1
Channel (Name) Display	*Q/U-3	Second Audio Program	19
Channel Memory	*Q/U-2	Sensor Remote	*Q/U-4
Closed Captioning	16	Set Up/First Time Use	*Q/U-1, 2, 3, 4
Contrast + Control	15	Sleep Timer	17
Controls/TV	*Q/U-4	Smart Lock Access Code Feature	12
Controls/Remote	24-32, *Q/U-4	Smart Lock Block Channel Feature	13
Features	5	Smart Picture Control	24
Glossary TV Terms	40	Smart Sound Control	25
Tuner Control	*Q/U-2	Status Button	*Q/U-4
Inputs/Audio and Video	22-23	Stereo	19
Language Option	*Q/U-2	Incredible Stereo Control	20
Memory/Program Channels	*Q/U-2	Surf	26
Menu Button	*Q/U-4	Tips for Service	39, 42-44
Minus(-)/Plus (+) Buttons	*Q/U-4	Treble Control	18
On Timer Channel Control	9	TV Speaker Control	21
On Timer Control	8	VCR Buttons	32, Q/U-4
On Timer Display	11	VCR/TV Connections	22-23, 33, 37-38, *Q/U-1
On Timer Start Up Control	10	Volume Bar Control	20
Picture Controls	6	Warranty	44

\* Information contained in Quick-Use (Q/U) Guide-page listed.

# Philips Consumer Electronics Company Factory Service Center Locations

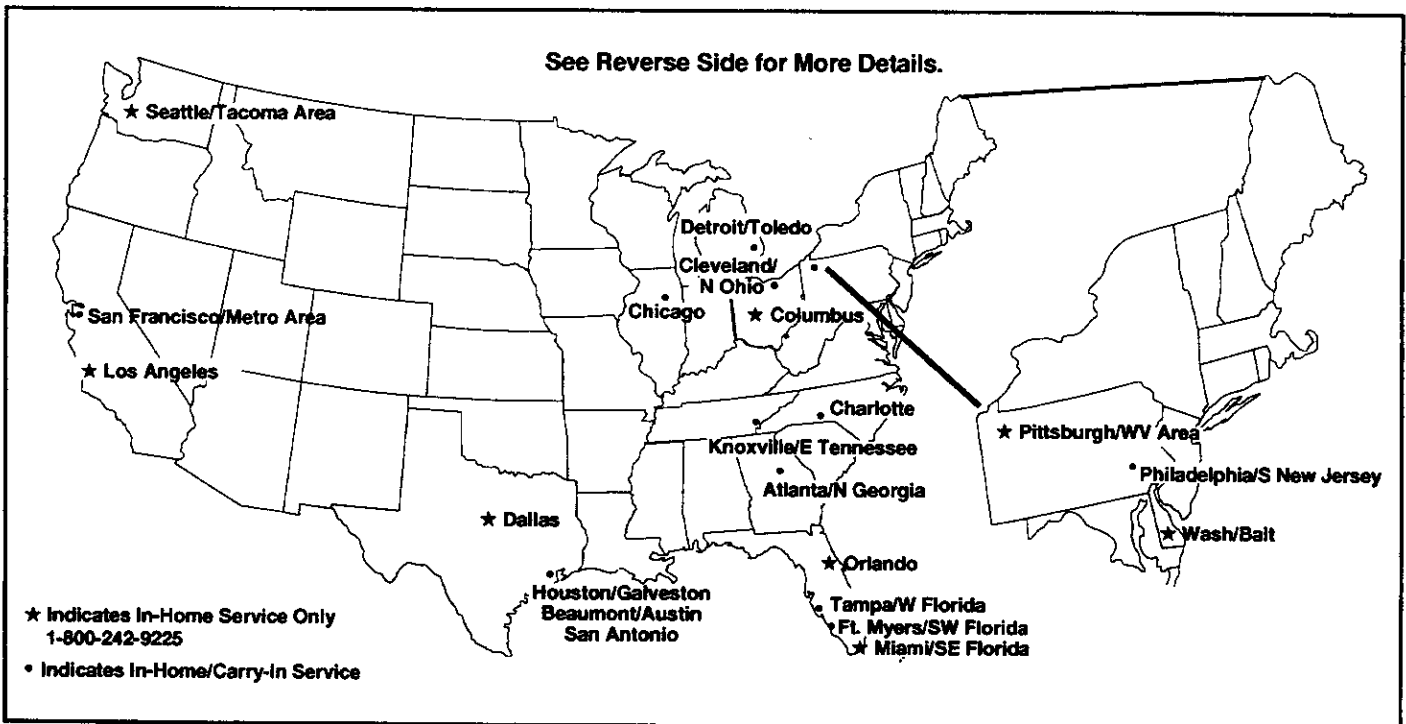

**NOTE:** If you reside in one of our Philips Factory Service Branch areas (see directory on back), you can contact the nearest Service Branch to obtain efficient and expedient repair for your product. If your product is In-Warranty, you should have proof-of-purchase to ensure No Charge Service. For Out-of-Warranty service, call the location nearest you.

**NOTA:** Si vous résidez dans une des régions desservies par une succursale de service après vente du fabricant Philips (voir liste ci-dessous), vous pourrez contacter la branche de service après vente la plus près de chez vous pour obtenir un service après vente rapide et efficace. Si le produit est sous garantie, il suffira de présenter une preuve d'achat pour bénéficier d'un service sans frais. Pour les produits non couverts par la garantie, contactez le centre le plus près de chez vous.

**NOTA:** Si Ud. reside en una de nuestras zonas para sucursales Philips de servicio al de fábrica (ver directorio más abajo), Ud. puede comunicarse con la sucursal de servicio más cercana para obtener una reparación oportuna y eficaz de su producto. Si su producto está todavía bajo garantía, Ud. debe presentar comprobante de compra para no ocasionar ningunos cargos por servicio. Para servicio después del vencimiento de la garantía, llame al lugar más cercano de los abajo indicados.

## In Canada

How you can obtain efficient and expedient carry-in, mail-in, or in-home service for your product

Please contact Philips at  
1-800-661-6162 (French speaking)  
1-800-363-7278 (English speaking)

## En Canada

Comment obtenir le service après-vente pour les produits apportés ou envoyés par la poste à notre centre de service ou le service à domicile

Veillez contacter Philips à:  
1-800-661-6162 (Francophone)  
1-800-363-7278

## En el Canadá

Cómo recibir servicio eficiente para su producto, en persona, por correo o a domicilio

Favor de comunicarse con Philips al:  
1-800-661-6162 (francófono)  
1-800-363-7278 (anglófono)

**QUALITY SERVICE IS AS CLOSE AS YOUR TELEPHONE! SIMPLY LOOK OVER THE LIST BELOW FOR THE NUMBER OF A FACTORY SERVICE CENTER NEAR YOU. YOUR PRODUCT WILL RECEIVE EFFICIENT AND EXPEDIENT CARRY-IN, MAIL-IN, OR IN-HOME SERVICE, AND YOU WILL RECEIVE PEACE OF MIND, KNOWING YOUR PRODUCT IS BEING GIVEN THE EXPERT ATTENTION OF PHILIPS' FACTORY SERVICE. AND, IF THE PHONE NUMBER LISTED FOR YOUR AREA IS LONG DISTANCE, CALL 1-800-242-9225 FOR FACTORY SERVICE.**

**COMMENT OBTENIR NOTRE SERVICE APRÈS VENTE RAPIDE ET EFFICACE SOIT PAR COURRIER, À DOMICILE, OU EN SE PRÉSENTANT À UN CENTRE DE SERVICE PHILIPS. PLUS DE 600 CENTRES DE RÉCEPTION DE PRODUITS À RÉPARER À TRAVERS LE PAYS: CONTACTER LE CENTRE DE SERVICE AUX CONSOMMATEURS LE PLUS PROCHE POUR SAVOIR L'EMPLACEMENT DE CES DÉPÔTS DANS UN RAYON DE 50 À 75 MILES (80 KM À 120 KM) DU CENTRE DE SERVICE LOCAL.**

**CÓMO OBTENER UN SERVICIO OPORTUNO Y EFICIENTE POR CORREO, EN CASA O EN PERSONA PARA SU PRODUCTO A TRAVÉS DE UN CENTRO PHILIPS DE SERVICIO. MAS DE 600 SITIOS POR TODO EL PAIS PARA LA RECEPCION DE PRODUCTOS NECESITADOS DE REPARACIONES: COMUNICARSE CON EL CENTRO DE SERVICIO DE FABRICA MAS CERCAHO PARA ESTOS LUGARES DENTRO DE UN RADIO DE 80 A 120 KM (58 A 75 MILLAS) DEL CENTRO DE SERVICIO LOCAL.**

**GEORGIA**

Philips Factory Service of Georgia  
200 N. Cobb Pkwy., Suite 120  
Marietta, GA 30062  
(770) 795-0085

**FT. MYERS, FLORIDA**

Philips Factory Service Satellite - Ft. Myers  
11601 Cleveland Ave., Suite 15  
Ft. Myers, FL 33907  
(941) 278-4242

**FLORIDA**

Philips Factory Service of Florida  
1911 US Highway 301 North  
Tampa, FL 33619  
(813) 621-8181

**WESTERN U.S.A.**

Philips Factory Service Western Region  
681 East Brokaw Rd.  
San Jose, CA 95112  
(408) 436-8566

**NORTH CAROLINA**

Philips Factory Service of N. Carolina  
520 G Clanton Rd.  
Charlotte, NC 28217  
(704) 529-6330

**TEXAS**

Philips Factory Service of Texas  
1110 N. Post Oak Rd., Suite 100  
Houston, TX 77055  
(713) 682-3990

**CENTRAL U.S.A.**

Philips Factory Service Central US  
950 Keynote Circle  
Brooklyn Heights, OH 44131  
(216) 741-3334

**MICHIGAN**

Philips Factory Service of Michigan  
25173 Dequindre  
Madison Heights, MI 48071  
(248) 544-2110

**ILLINOIS**

Philips Factory Service of Illinois  
1360 W. Hamilton Pkwy.  
Itasca, IL 60143  
(630) 775-0990

**TENNESSEE**

Philips Factory Service of East Tennessee  
6700 D Papermill Rd.  
Knoxville, TN 37919  
(423) 584-6614

**MID-ATLANTIC**

Philips Factory Service Mid-Atlantic  
352 Dunks Ferry Rd.  
Bensalem, PA 19020  
(215) 638-7500

# LIMITED WARRANTY

## COLOR TELEVISION

90 Days Free Labor

One Year Free Replacement of Parts (Two Years Free Replacement on Color Picture Tube)

This product can be repaired in-home.

### WHO IS COVERED?

You must have proof of purchase to receive warranty service. A sales receipt or other document showing that you purchased the product is considered proof of purchase.

### WHAT IS COVERED?

Warranty coverage begins the day you buy your product. For 90 days thereafter, all parts will be repaired or replaced free, and labor is free. From 90 days to one year from the day of purchase, all parts will be repaired or replaced free, but you pay for all labor charges. From one to two years from the day of purchase, you pay for the replacement or repair of all parts except the picture tube, and for all labor charges. After two years from the day of purchase, you pay for the replacement or repair of all parts, and for all labor charges.

All parts, including repaired and replaced parts, are covered only for the original warranty period. When the warranty on the product expires, the warranty on all replaced and repaired parts also expires.

### WHAT IS EXCLUDED?

Your warranty does not cover:

- labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.
- product repair and/or part replacement because of misuse, accident, unauthorized repair or other cause not within the control of Philips Consumer Electronics Company.
- reception problems caused by signal conditions or cable or antenna systems outside the unit.
- a product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- incidental or consequential damages resulting from the product. (Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This includes, but is not limited to, prerecorded material, whether copyrighted or not copyrighted.)
- a product used for commercial or institutional purposes.

### WHERE IS SERVICE AVAILABLE?

Warranty service is available in all countries where the product is officially distributed by Philips Consumer Electronics Company. In countries where Philips Consumer Electronics Company does not distribute the product, the local Philips service organization will attempt to provide service (although there may be a delay if the appropriate spare parts and technical manual(s) are not readily available).

### MAKE SURE YOU KEEP...

Please keep your sales receipt or other document showing proof of purchase. Attach it to this owner's manual and keep both nearby. Also keep the original box and packing material in case you need to return your product.

### BEFORE REQUESTING SERVICE...

Please check your owner's manual before requesting service. Adjustments of the controls discussed there may save you a service call.

### TO GET WARRANTY SERVICE IN U.S.A., PUERTO RICO OR U.S. VIRGIN ISLANDS...

Contact a Philips factory service center (see enclosed list) or authorized service center to arrange repair.

(In U.S.A., Puerto Rico and U.S. Virgin Islands, all implied warranties, including implied warranties of merchantability and fitness for a particular purpose, are limited in duration to the duration of this express warranty. But, because some states do not allow limitations on how long an implied warranty may last, this limitation may not apply to you.)

### TO GET WARRANTY SERVICE IN CANADA...

Please contact Philips at:

1-800-661-6162 (French Speaking)

1-800-363-7278 (English Speaking)

(In Canada, this warranty is given in lieu of all other warranties. No other warranties are expressed or implied, including any implied warranties of merchantability or fitness for a particular purpose. Philips is not liable under any circumstances for any direct, indirect, special, incidental or consequential damages, howsoever incurred, even if notified of the possibility of such damages.)

### REMEMBER...

Please record the model and serial numbers found on the product below. Also, please fill out and mail your warranty registration card promptly. It will be easier for us to notify you if necessary.

MODEL # \_\_\_\_\_

SERIAL # \_\_\_\_\_

*This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.*

Philips Service Company, P.O. Box 555, Jefferson City, Tennessee 37760, (423) 475-8869