


TOSHIBA

Projection Television

OWNER'S MANUAL

TP50H50
ColorStream™

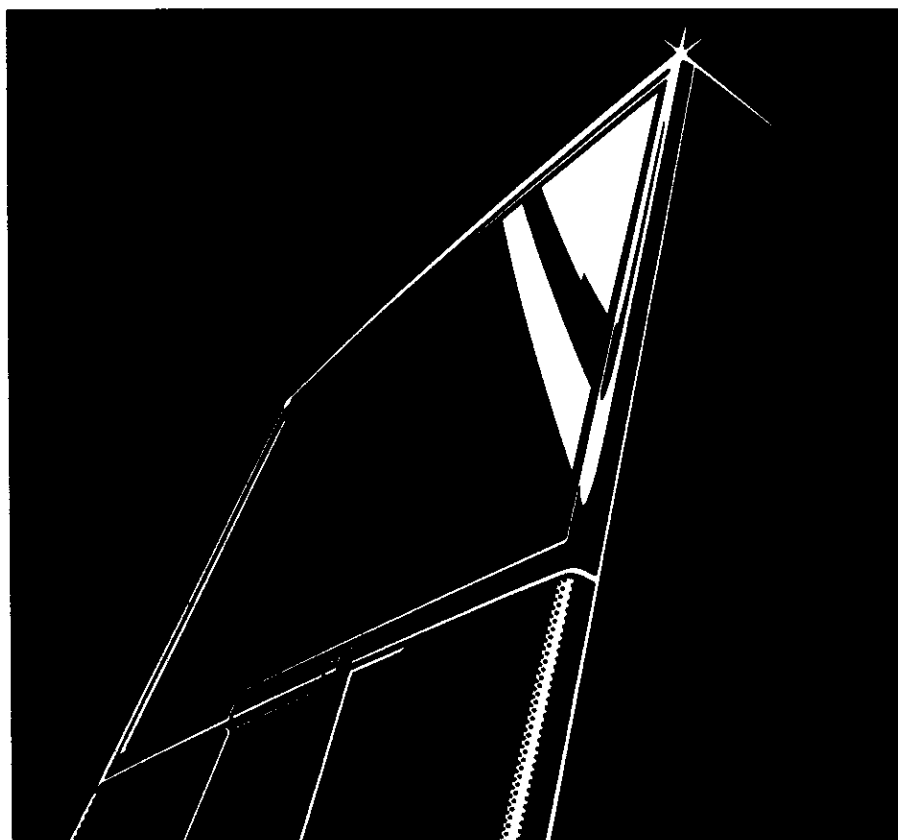

Dear Customer

Welcome to the high quality picture world created by the TOSHIBA Projection Color Television.

~~This manual will help you use the TV's many exciting and useful features.~~

~~Before operating the TV, please read all the safety and operating instructions in this manual thoroughly, and keep the manual for future reference.~~

Customer's Record

~~You will find the model number and serial number on the back of the TV.~~

~~Record these numbers in the spaces provided below.~~

~~Refer to them whenever you call upon your TOSHIBA dealer regarding this product.~~



Model Number _____

Serial Number _____

Safety Precautions

WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

	WARNING RISK OF ELECTRIC SHOCK DO NOT OPEN	
AVIS: RISQUE DE CHOC ÉLECTRIQUE NE PAS OUVRIR		
WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		




The lightning symbol in the triangle tells you that the voltage inside this product may be strong enough to cause an electric shock. DO NOT TRY TO SERVICE THIS PRODUCT YOURSELF.



The exclamation point in the triangle tells you that important operating and maintenance instructions follow this symbol.

CAUTION:

As a safety feature, the AC plug has one prong wider than the other. It will fit only one way into a standard electrical outlet. If the plug will not fit into the outlet, try turning it around. If the plug will not fit either way, the outlet is probably old and non-standard. You will need to have a new outlet installed by an electrician.
DO NOT CHANGE THE SAFETY FEATURE OF THE PLUG.

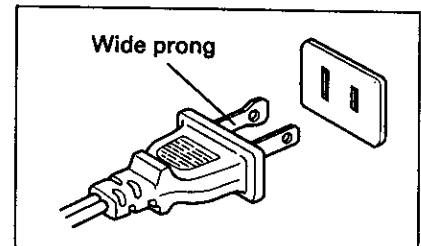

CAUTION:

TO PREVENT ELECTRIC SHOCK, DO NOT USE THIS POLARIZED PLUG WITH AN EXTENSION CORD RECEPTACLE OR OTHER OUTLET UNLESS THE PRONGS CAN BE FULLY INSERTED INTO THE OUTLET TO PREVENT ANY EXPOSURE OF THE PRONGS OF THE POLARIZED PLUG.

NOTE TO CATV SYSTEM INSTALLERS IN THE USA:

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Table of Contents

CHAPTER 1 INTRODUCTION

Care and Cleaning	4
Installation	5
To install the TV	5
Antenna/Cable TV Connections	6
To connect a home antenna	6
To connect a Cable TV	7
To connect an Antenna/Cable TV and VCR	8
Location of Controls	9
Front and Rear control views	9
Remote Control	10
Before Using the Remote Control	11
Introduction and battery installation	11
Using the Remote with VCR or Cable TV Converter	12
VCR and CABLE function buttons	12
Programming the Remote Control	13
To program the Remote Control	13
Quick Reference Menu Guide	16
Menus and functions	16

CHAPTER 2 GETTING STARTED

Programming Channel Memory	18
TV/CABLE and CH PROGRAM functions	18
ADD/ERASE function	19
Aligning the colors	20
To align the colors	20

CHAPTER 3 BASIC OPERATION

Watching TV Programs	22
To watch a TV program	22
Convenient Remote Functions	23
To use On-screen displays/Sound muting/ Channel return	23
Controlling the Picture	24
To adjust the picture	24
Controlling the Sound	26
To adjust the sound	26
Selecting Stereo and SAP Broadcasts	27
To listen to Stereo/SAP broadcasts	27

CHAPTER 4 ADVANCED OPERATION

Enhancing the Surround Sound Effect	28
To activate the Surround sound function	28
Operating the Sub-Bass System	29
To operate the Sub-Bass System	29
Setting the OFF Timer and the Clock	30
To set the OFF timer	30
To set the clock	31
Watching Picture-in-Picture	32
To display a small picture	32
To display a picture from an external source	33
To use advanced functions	34
Displaying XDS Information	35
To display XDS information	35
Operating the Closed Captioning Feature	36
To display Closed Captioning	36
To display text information	37
Locking Channels	38
To lock out channels	38
Labeling Channels	40
To program channel labels	40
Programming Your Favorite Channels	42
To program your favorite channels	42
To clear the channels you have programmed	43
Flesh Tone/Noise Reduction	44
To activate the Flesh Tone and Noise Reduction Functions	44
Changing the On-screen Display Language	45
To select a language for the on-screen displays	45






CHAPTER 5 CONNECTING OTHER EQUIPMENT

Connecting External Equipment	46
Monitor panel	46
To connect a standard VCR	47
To connect a VCR with an S-video jack	48
To dub/edit video tapes using two VCRs	49
To connect a DVD video player with Color Stream™ (Color Difference) VIDEO OUTPUT	50
To connect an audio amplifier	51

CHAPTER 6 ADDITIONAL REFERENCE

Specifications	52
Before Calling Service Personnel	53
Limited United States Warranty	54

Care and Cleaning

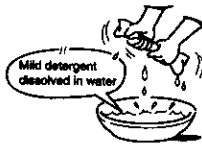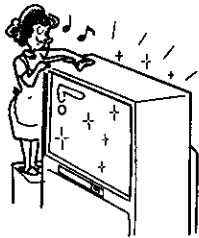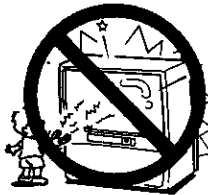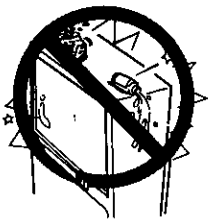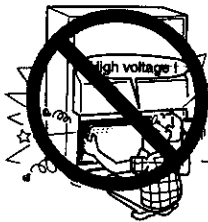

Care

Do not stand or climb on the TV.

- The TV is dangerous if broken or if it has fallen over.
- Be careful when children are present.

Do not remove the back cover and never remodel the cabinet or components.

- Let only qualified technicians check and adjust your TV.

Do not place containers with liquids such as drinks or cosmetics on the TV.

If any foreign material or water leaks into the TV, unplug the AC cord and contact your dealer.

Keep magnets, toys with magnets, electric clocks, speakers, etc. away from the TV.

If an empty channel is selected, or the TV broadcast for the day is finished, the TV will automatically turn off after about 15 minutes. This **Auto-Power-Off** feature does not operate in the VIDEO mode.

If the power supply is cut off while you are watching the TV, the **Last Mode Memory** feature automatically turns on the TV when the power is restored. If you know the power is going to be cut off, or you are leaving home for a long time, remove the power plug from the wall outlet to prevent the TV from turning on in your absence.

Cleaning

Do not use solvents such as benzine or thinner to clean the TV.

- These solvents may distort the cabinet or damage its finish.
- If rubber or vinyl products remain in contact with the TV for a long time, a stain may result.

When the cabinet becomes dirty, clean it with a soft, dry cloth.

When the cabinet is very dirty,

- ① Use a damp cloth to wipe the cabinet clean.
- ② Finish with a dry cloth.


When cleaning the screen:

- ① Turn off the TV.
- ② Clean the screen with a soft, dry cloth.

Installation

To install the TV

Downward spot lights or fluorescent lights in an overhead "Honeycomb" prevent direct illumination of the screen.

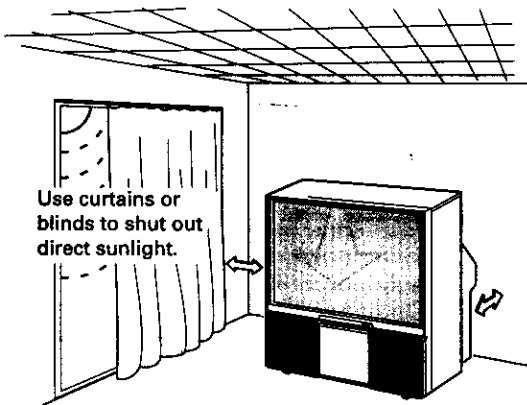

Use curtains or blinds to shut out direct sunlight.

Cover shiny surfaces (floor and walls) with non-reflective materials (carpet, rugs, wallpaper, etc.).

Where to install

Place the TV on the floor or on a sturdy platform. The mounting surface should be flat and steady. If you install the TV on a soft floor, make sure that the floor is not damaged by the weight of the TV.

Air Circulation

Place the TV far enough away from the walls to allow proper ventilation. This will prevent the TV from overheating and avoid possible damage to the TV. Avoid dusty places too.

Heat Damage

Damage may occur if you leave the TV in direct sunlight or near a heater. Avoid places subject to extremely high temperatures or humidity, and temperatures of 41°F (5°C) or lower.

Power Supply

Plug the TV into an electrical outlet with standard household power (120 volt AC, 60 Hz). Do not change the plug's safety prong.

See page 2.


Moisture Condensation

If the room temperature suddenly rises (or if the TV is moved from a cool place to a hot place), condensation may occur on the lenses resulting in picture distortion or color fading. In such a case, simply wait a while (with the power on) and the condensation will evaporate.

Best Viewing


Sit approximately 10-25 feet away from the TV. Sitting too far to the left or right of the screen will cause the picture to appear dull as will direct sunlight and room lights. Turn the TV off to check for reflections on the screen. Then remove the source of any reflections while viewing.

VERTICAL VIEWING ANGLE [SIDE VIEW]

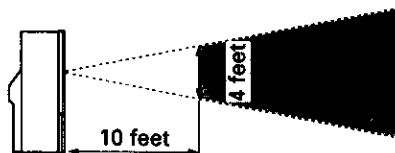

■ Viewing Range

HORIZONTAL VIEWING ANGLE [TOP VIEW]

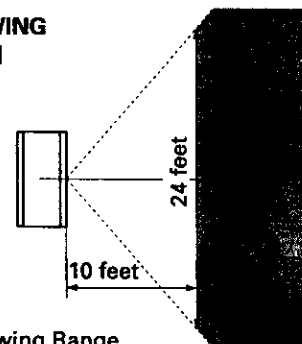


■ Viewing Range

Antenna/Cable TV Connections


- You can use either an indoor or outdoor antenna to receive VHF and/or UHF channels.
- Channels 2-13 are VHF channels, and channels 14-69 are UHF channels.
- We recommend using an outdoor antenna for better picture quality.
- You can receive Cable TV by connecting the cable supplied by your local cable company.

To connect a home antenna

Single lead-in cable

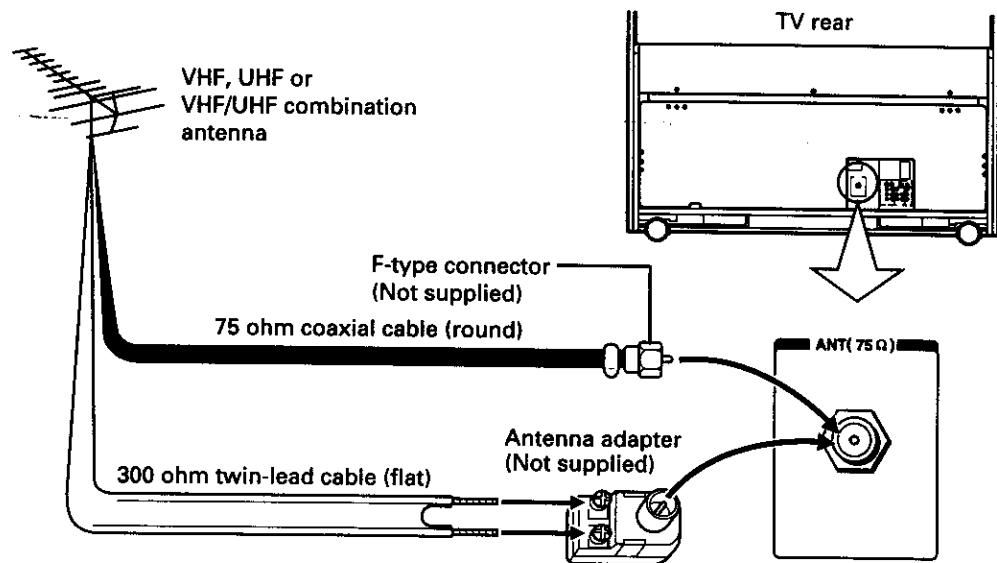

Both VHF and UHF lead-in cables

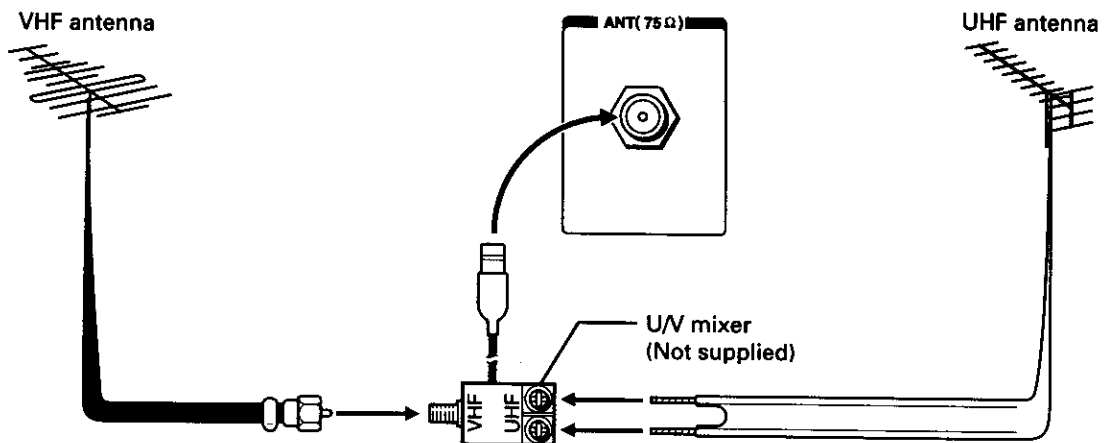

To connect Cable TV

Generally, the lead-in cable for a cable TV system can be connected directly to the TV antenna terminal just like a home antenna. (A-1)


Some cable companies, however, offer "premium pay channels". Since premium pay channel signals are scrambled, a cable TV converter/decoder is generally provided to the subscribers by the cable TV company. This decoder box is necessary for normal viewing of the scrambled channels. We recommend that you consult your cable TV company for more specific instructions on installing cable TV. (A-2)

(A-1) Cable without a decoder box (Unscrambled channels)



(A-2) Cable with a decoder box (Unscrambled and Scrambled channels)

You can select unscrambled and scrambled channels via the converter/decoder box using the converter's channel keys. Set the TV on channel 3 or 4 to match the converter's output channel.

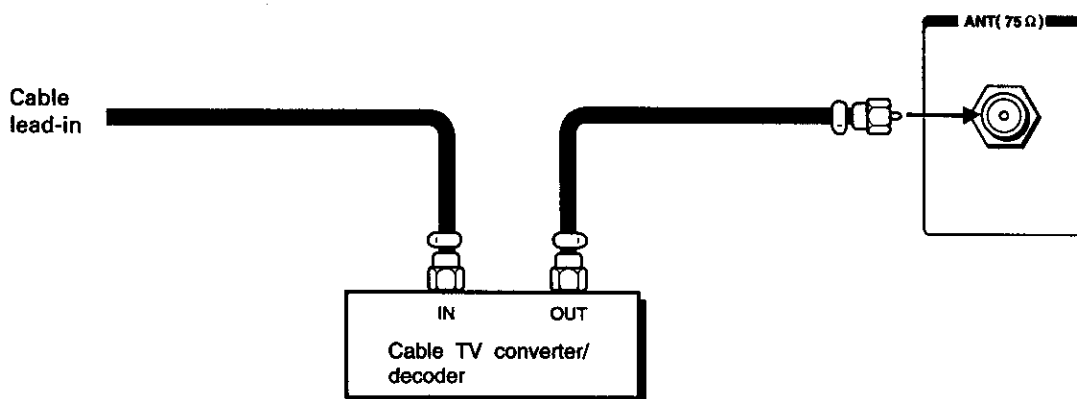


Note: The decoding device may or may not be a part of the cable converter.

Antenna/Cable TV Connections (continued)

To connect an Antenna/Cable TV and VCR


Antenna/Cable TV connection via VCR (Simplified method)

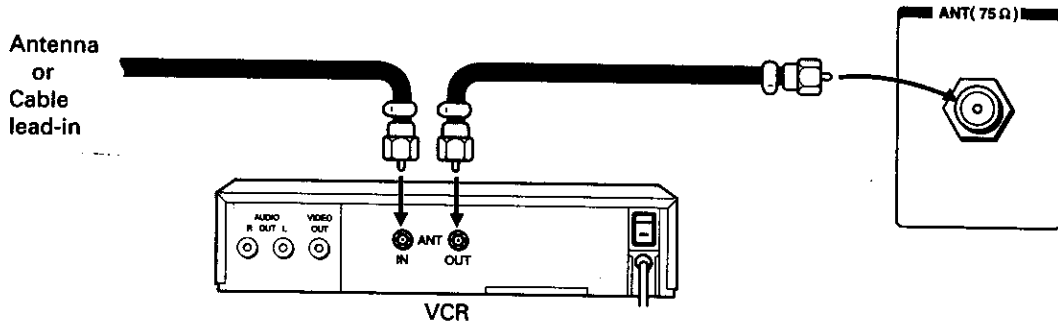

Notes:

- Tape playback may often cause the VCR to interrupt the antenna signal to the TV. If you cannot select a certain channel, try pressing the TV/VCR button on the Remote Control.
- VIDEO/AUDIO connections from the VCR to the TV are required for stereo tape playback of good quality from stereo VCRs (or Picture-in-Picture operation). See page 47.

Cable with a decoder box

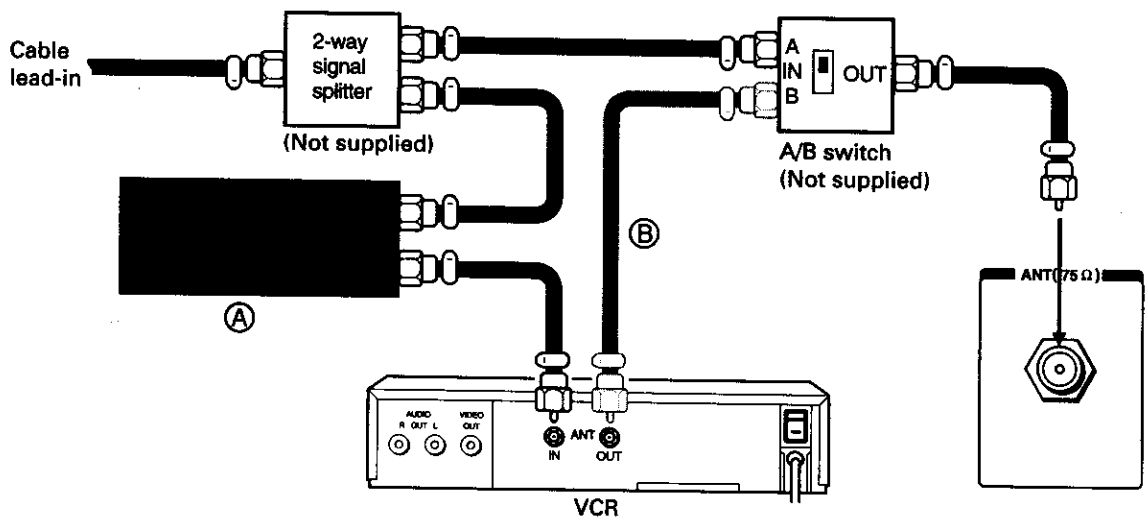


Notes:

- When connecting a cable TV converter/decoder (A):
 - The "A" position on the A/B switch allows you to select unscrambled channels using the TV's channel keys.
 - The "B" position on the A/B switch allows you to select unscrambled and scrambled channels via the cable TV converter/decoder box using the converter's channel keys. Set the TV and VCR on channel 3 or 4 to match the converter's output channel.
- The cable (B) connection is necessary only when the cable TV converter/decoder (A) is connected.
- VIDEO/AUDIO connections from the VCR to the TV are required for video tape playback from VCRs (or Picture-in-Picture operation). See page 47.

Location of Controls

- The following describes the functions of each part of the TV and the Remote Control. For the use of each control, refer to the pages in brackets.

Front and Rear control views

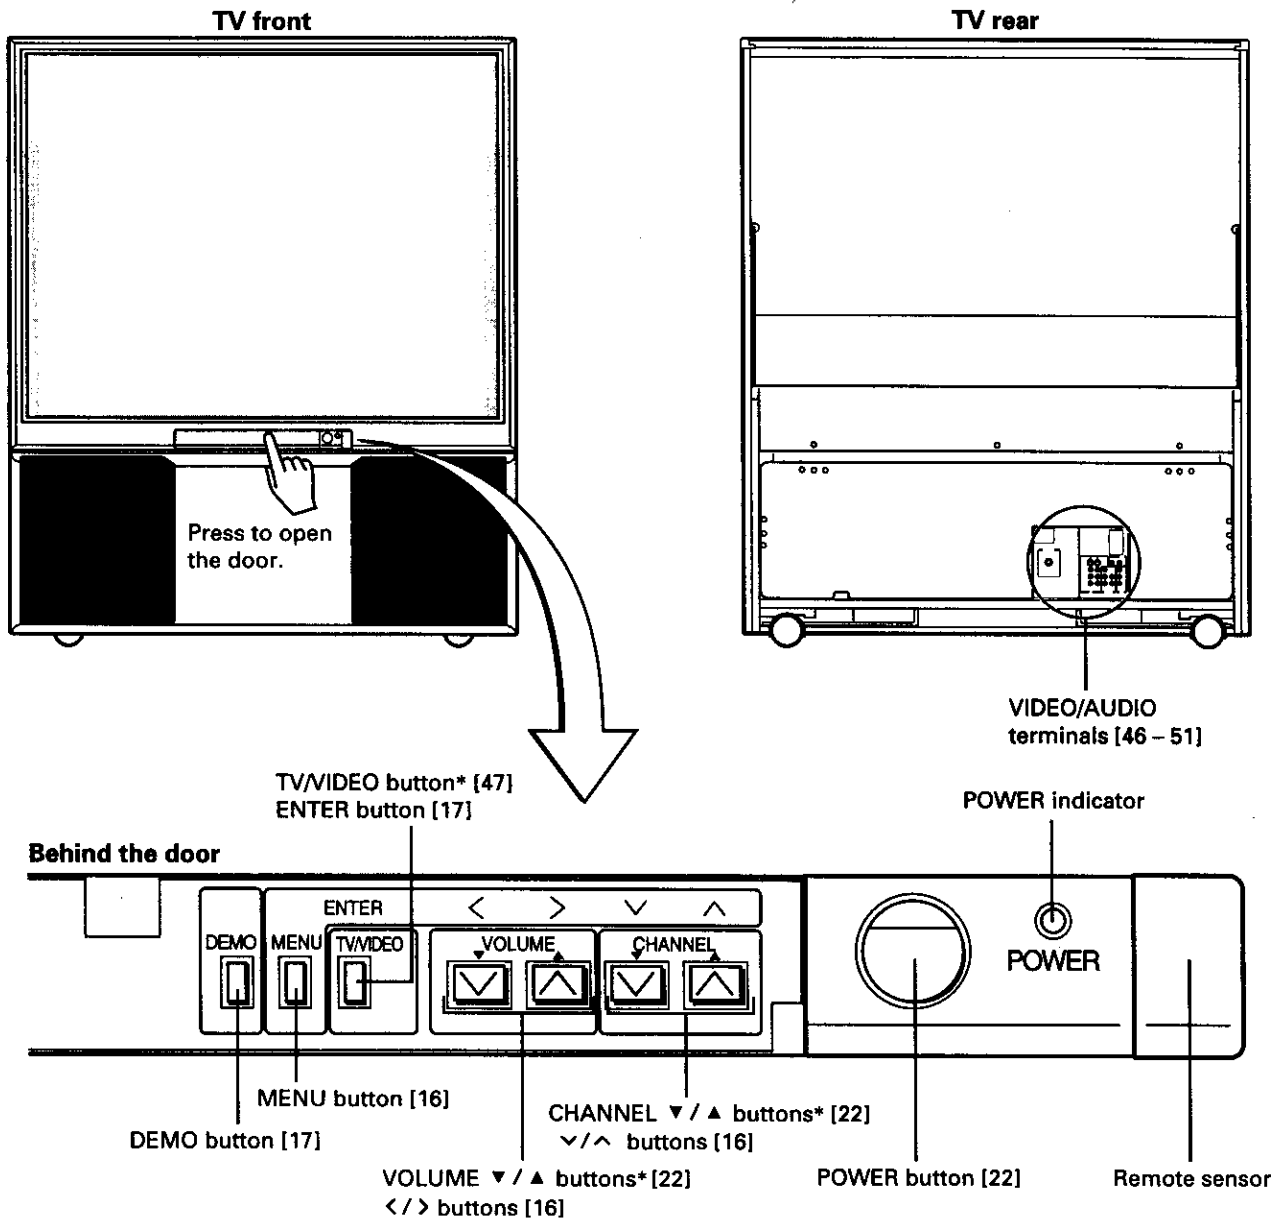


* These buttons have dual functions.

Location of Controls (continued)

Remote Control

Only the buttons used to operate the TV are described here.
 For details on the use of each control, refer to the pages in brackets.

Aim at the remote sensor on the TV

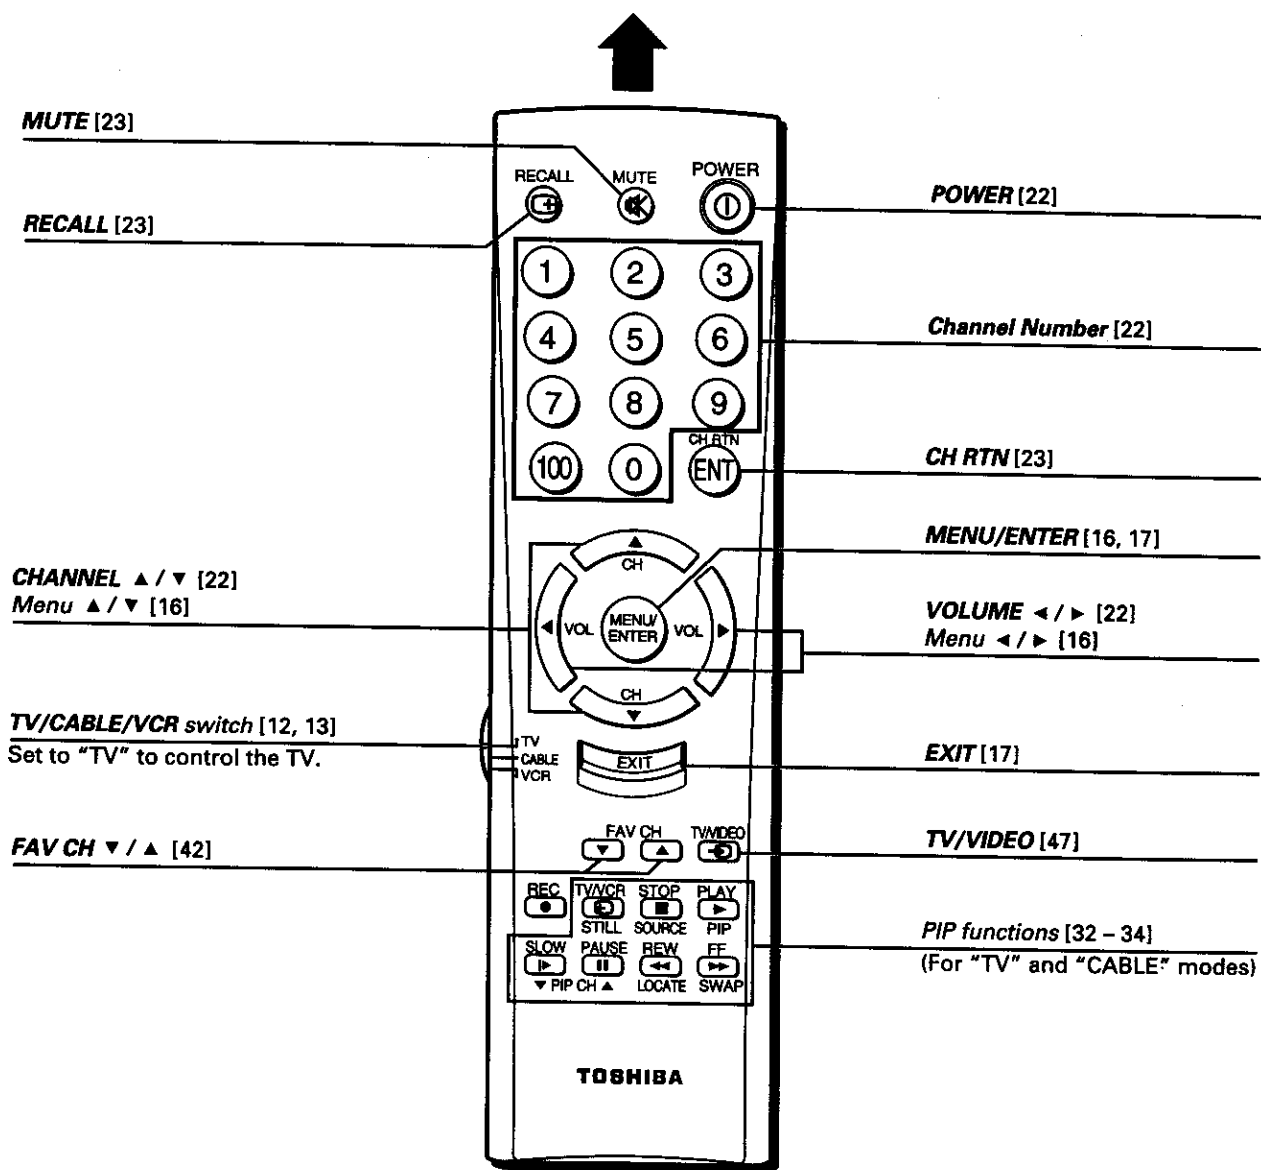

Before Using the Remote Control

Introduction and battery installation

With this Remote Control, you can operate your TV and most VCR and cable box models regardless of the manufacturer. However, this Remote Control must first be programmed to control other VCR and cable box brands. See page 13.

If you have a TOSHIBA VCR, your Remote Control has already been programmed for you.


Before attempting to operate your Remote Control, install the batteries according to "To install the batteries" below.

Notes:


- After installing new batteries, the Remote Control will set itself to the codes for TOSHIBA TVs and VCRs. If you are using the Remote Control to operate other manufacturer's equipment, you will have to reprogram those codes.
- This Remote Control may have functions not available on your VCR and cable box remote controllers. These functions may or may not operate your VCR or cable box. Refer to the owner's manuals supplied with the equipment to see which functions are available.
- The remote controller supplied with your VCR or cable box may have keys not duplicated on this Remote Control. If you want to use these functions, please use the original remote controller.

To install the batteries

- 1 Place the Remote Control face down and remove the battery cover.

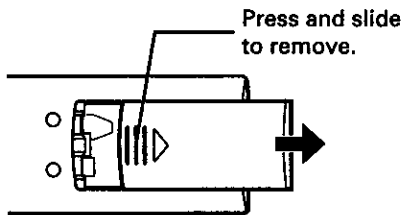

- 2 Insert two "AA" size batteries, matching the + and - signs on each battery with the + and - signs in the battery compartment.

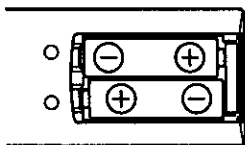

- 3 Slide the battery cover shut until the lock clicks.

CAUTIONS

- Do not throw your batteries into a fire. Dispose of your batteries in a designated disposal area.
- Do not combine used batteries with new ones.
- Do not mix battery types.

Tips for best operation


- For optimum performance, aim the Remote Control directly at the TV from a distance within 16 feet (5 m), and be sure there is no obstruction between the Remote Control and the TV.
- If your Remote Control does not always operate the TV as you wish, you probably need to replace the batteries.
- If the Remote Control will not be used for a long period of time or when the batteries are worn out, remove the batteries to prevent leakage.
- Do not drop, dampen or disassemble the Remote Control.

Using the Remote with VCR or Cable TV Converter

VCR and CABLE function buttons


- To control a TOSHIBA VCR, first set the TV/CABLE/VCR switch to "VCR." The buttons shown below will then control the VCR. The rest of the buttons operate the TV as usual.
- If you have another brand of VCR, you can probably program the Remote Control to control it. Details are on page 13.
- To control a cable TV converter, this Remote Control must be programmed to recognize the brand of your converter. See page 13. The shaded buttons can be used to control the cable TV converter. Set the TV/CABLE/VCR switch to "CABLE" whenever you want to control the cable TV converter.

Aim at the VCR or cable TV converter

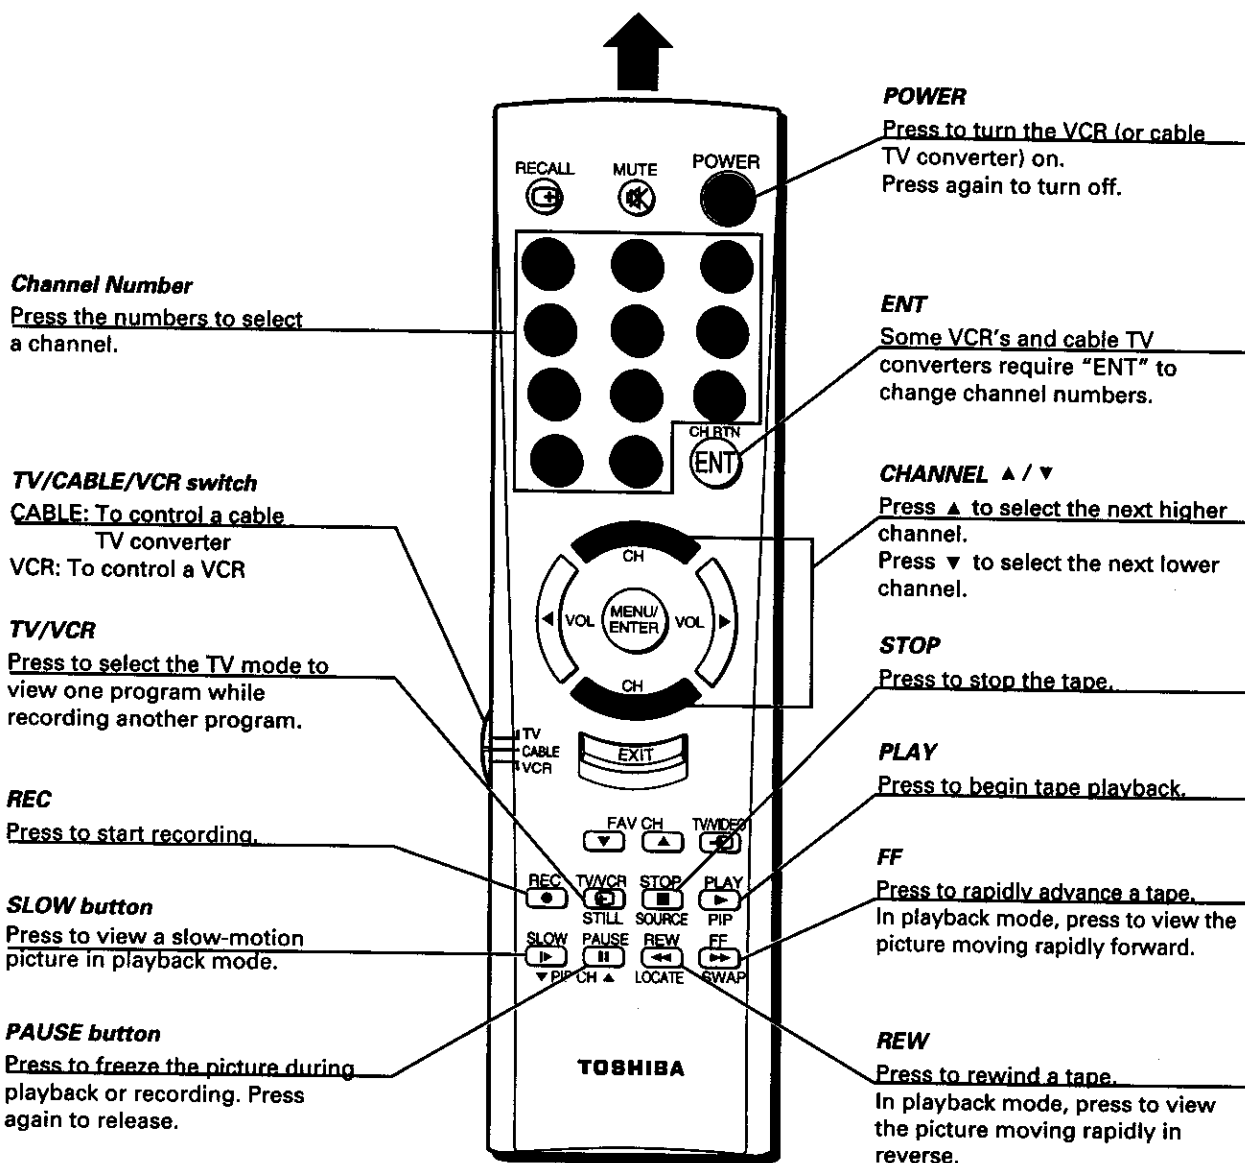

Programming the Remote Control

To program the Remote Control

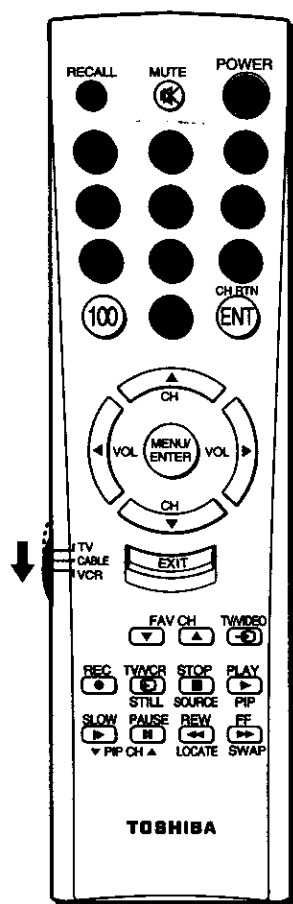

For future reference, write the code number you set.

VCR CODE: _____

CABLE CODE: _____

Note:

You have to reprogram the Remote Control when you change its batteries.

- This Remote Control is programmed to operate TOSHIBA VCRs.
- To operate VCRs (or Cable converters) other than TOSHIBA models, perform the following procedures before operating.

1 Refer to the "VCR code table" (or "Cable TV converter code table") on pages 14 and 15 to find the code number that corresponds to the brand name of your VCR (or your converter).

If more than one number is listed, try each one separately until you find the one that works.

2 Set the TV/CABLE/VCR switch to "VCR" (or "CABLE").

3 While holding down **RECALL**, press the **Number** buttons to enter the three digit code number for your brand of VCR (or converter).

4 Point the Remote Control at the VCR (or at the converter) and press **POWER** to test the code number.

—If the number is correct, the VCR should turn on.

—If the VCR does not respond to the Remote Control, repeat steps 1 through 4 with another code number.

5 Reset the TV/CABLE/VCR switch to "TV" to control the TV.

Notes:

- Some newer VCRs are capable of working on either of two remote codes. These VCRs have a switch labeled "VCR 1/VCR 2." If your VCR has this kind of switch, and does not respond to any of the code numbers for your VCR brand name, set the switch to the other position ("VCR 1" or "VCR 2") and reprogram the Remote Control.
- In some rare cases, you may not be able to operate your non-TOSHIBA equipment with the supplied Remote Control. This is because your equipment may use a code that is not provided with this Remote Control. In this case, please use the equipment's own remote control.

Programming the Remote Control (continued)

• The code numbers listed below were the most recent ones available at the time of printing. New code numbers may or may not have been added since printing.

VCR code table

BRAND NAME	CODE NUMBER	BRAND NAME	CODE NUMBER	BRAND NAME	CODE NUMBER
Adventura	019	Lloyd's	227	Ricoh	053
Aiko	297	logik	091	Runco	058
Aiwa	019	LXI	056	Samsung	064, 259
Akai	060, 068, 080, 125 261	Magnavox	054, 058, 100, 129, 168	Sanky	058, 067
American High	054	Magnin	259	Sansui	060, 086
Asha	259	Marantz	054, 100	Sanyo	065, 066, 123, 259
Audiovox	056	Marta	056	Scott	062, 064, 140, 203, 229, 230, 231
Beaumarck	259	Matsushita	054	Sears	054, 056, 061, 065, 066, 073, 085, 123, 124
Bell & Howell	123	MEI	054	Sharp	067, 081
Brandt	206	Memorex	019, 054, 056, 058, 065, 066, 067, 123, 259	Shintom	091
Broksonic	140, 203, 230, 314 380	MGA	062, 080	Shogun	259
Calix	056	MGN Technology	259	Singer	091
Canon	054	Minolta	061, 124	Sony	051, 052, 053, 054
Capeheart	039	Mitsubishi	062, 080, 086, 094, 192, 233, 261	STS	061
Carver	100	Motorola	054, 067	Sylvania	019, 054, 062, 100, 129
CCE	091, 297	MTC	019, 259	Symphonic	019, 344
Citizen	056, 297	Multitech	019, 091	Tatung	060
Colt	091	NAD	077	Teac	019, 060
Craig	056, 066, 091, 259	NEC	057, 059, 060, 069, 086	Technics	054, 181
Curtis Mathes	054, 060, 079	Nikko	056	Teknika	019, 054, 056, 071
Cybernex	259	Noblex	259	Telefunken	206
Daewoo	039, 064, 297	Olympus	054	TMK	227, 259
Daytron	039	Optimus	056, 067, 077, 123	Toshiba	062, 064, 085, 229, 231, 385
Dynatech	019	Optonica	081	Totevision	056, 259
Electrohome	056	Orion	498	Unitech	259
Electroponic	056	Panasonic	054, 096, 181, 244, 473	Vector	064
Emerex	051	Penney	054, 056, 057, 059, 061, 073, 259	Vector Research ...	057, 059
Emerson	019, 021, 056, 062, 080, 087, 140, 203, 227, 228, 230, 231, 297, 313, 314, 380, 498	Pentax	061, 084, 124	Video Concepts ...	059, 064, 080
Fisher	066, 073, 085, 123	Philco	054	Videosonic	259
Fuji	052, 054	Philips	054, 081, 100, 129	Wards	019, 054, 061, 066, 067, 081, 091, 168, 231, 259
Fnai	019, 344	Pilot	056	XR-1000	019, 054, 091
Garrard	019, 344	Pioneer	077, 086	Yamaha	057
GE	054, 079, 084, 221	Portland	039	Zenith	052, 053, 058
GoldStar	037, 056, 057	Protec	091		
Gradiente	019	Pulsar	058		
Harley Davidson ...	019	Quarter	065		
Harman/Kardon	057, 094	Quartz	065		
Harwood	087, 091	Quasar	054, 096		
Headquarter	065	Radio Shack	019, 056, 344		
HI-Q	066	Radix	056		
Hitachi	060, 061, 084, 124, 185, 254	Randex	056		
Jensen	060	RCA	061, 079, 084, 096, 124, 125, 168, 221		
JVC	027, 060, 086	Realistic	019, 054, 056, 065, 066, 067, 081, 085, 123, 259		
Kenwood	057, 060, 086				
KLH	091				
Kodak	054, 056				
Lloyd	019				

Cable TV converter code table

BRAND NAME	CODE NUMBER	BRAND NAME	CODE NUMBER
ABC	020, 022, 026, 027, 030, 032, 033, 036, 066	Signature	030
Antronix	041	SL Marx	059
Archer	041, 058, 172	Sprucer	040
Belcor	075	Standard Components....	174
Cable Star	075	Starcom	022, 034, 066
Cabletenna	041	Stargate	034, 059
Cableview	041	Starquest	034
Century	172	Sylvania	020
Citizen	172	Teleview	059
Color Voice	044, 050	Texscan	020
Comtronics	059, 079	Tocom	031, 032, 078
Contec	038	Toshiba	019
Dae Ryung	027	Tusa	034
Eastern	021	Unika	041, 172
Focus	419	United Artists.....	026
Garrard	172	United Cable	022
GC Electronics	075	Universal	041, 058, 075, 172
Gemini	034, 089	Viewstar	046, 079, 230
General		Zenith	019
Instrument	030, 295	Zentek	419
GoldStar	059, 163		
Hamlin	028, 039, 053, 278, 292		
Hitachi	030		
Hytex	026		
Jasco	172		
Jerrold	022, 030, 031, 033, 034, 066, 295		
Macom	052		
Magnavox	046		
Memorex.....	019		
Movie Time	175		
NSC	089, 175		
Oak	026, 038, 267		
Panasonic.....	019, 040, 126		
Paragon	019		
Philips	044, 046, 047, 048, 049, 050, 172		
Pioneer	042, 163, 552		
Popular			
Mechanics	419		
Pulsar	019		
RCA	040		
Recoton	419		
Regal	039, 278, 292		
Regency	021		
Rembrandt	030, 089		
Runco	019		
Samsung	059, 163		
Scientific			
Atlanta	025, 027, 036, 296		
Signal	034, 059		

Quick Reference Menu Guide

- We recommend that you familiarize yourself with these procedures for using the Menu function.

Menus and functions

1

Press **MENU** to call up an on-screen menu.


2

Press **◀** or **▶** to select the menu.




3

Press **▲** or **▼** to select an item.

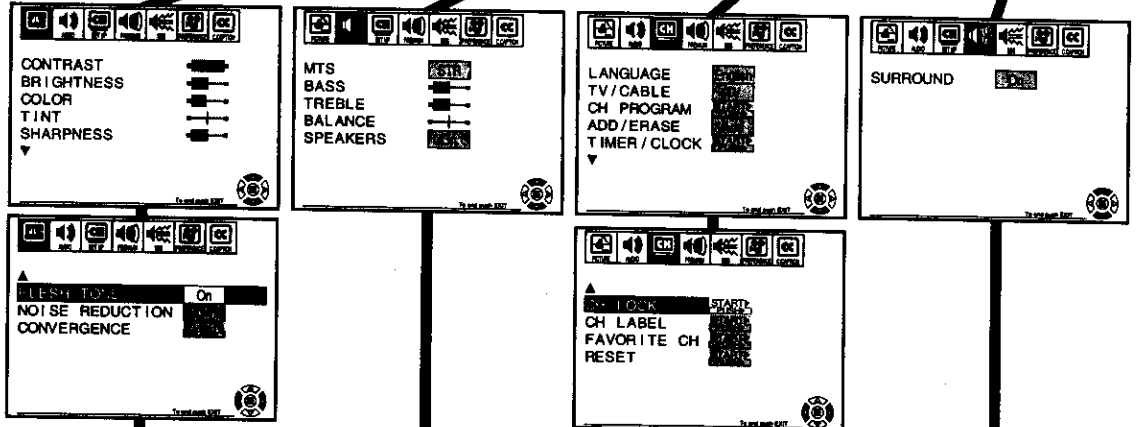


4

Press **◀** or **▶** to select or adjust a setting.

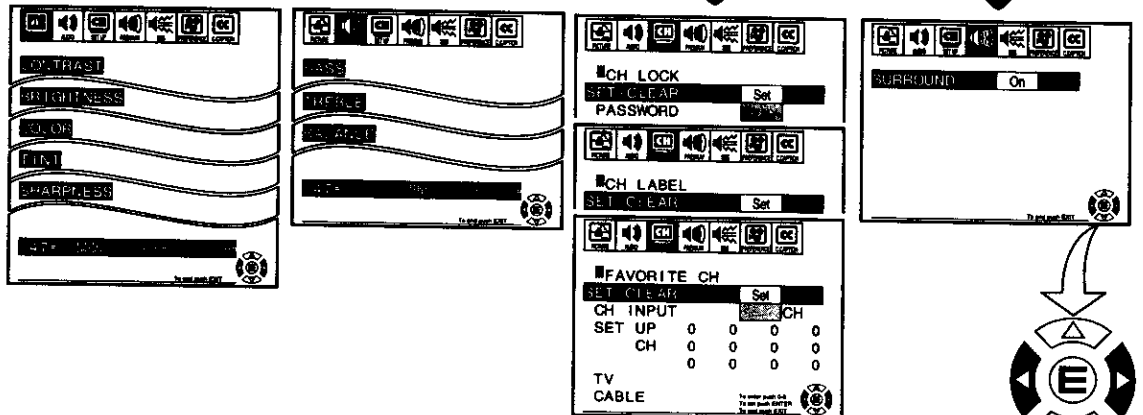

This mark indicates which button you should press next.

Menus and functions (continued)

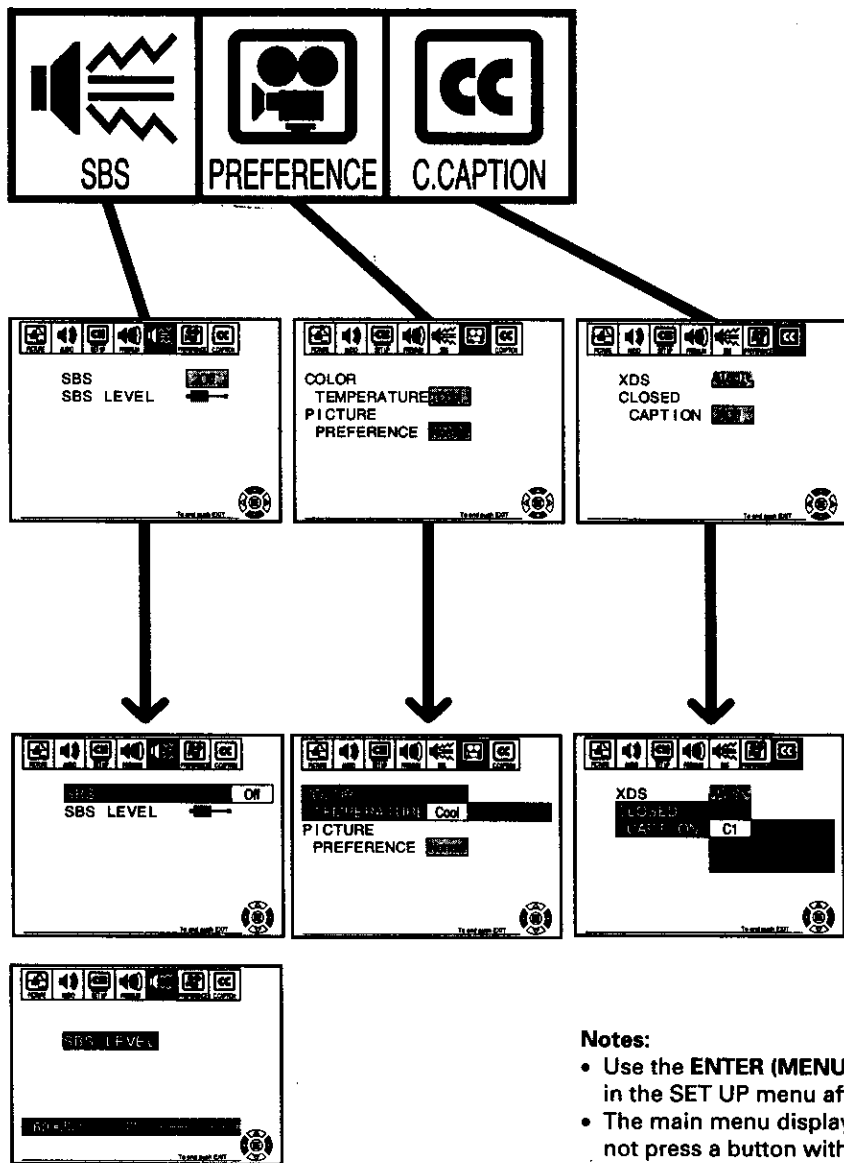

Demonstration mode

When you press **DEMO** on the TV, the TV will automatically display a variety of its on-screen menus and special features. This function is provided for demonstration purposes only. Press **DEMO**. The on-screen demonstration will start after about 4 seconds.

TOSHIBA COLOR TV
 ●TECHNOLOGY
 ●PERFORMANCE
 ●EXCITEMENT

To stop the on-screen demonstration
 Press **DEMO** again.

 
Notes:

- Use the **ENTER (MENU)** button to activate the function settings in the **SET UP** menu after step 4.
- The main menu display will disappear automatically if you do not press a button within 15 seconds, and the other displays will disappear within 6 seconds.
- If you want to close all the on-screen displays instantly, press the **EXIT** button on the Remote Control.
- The **▼ / ▲ (√ / ^)** buttons function as the **CHANNEL** **▼ / ▲** buttons when no menu display is on the screen.
- The **◀ / ▶ (< / >)** buttons function as the **VOLUME** **▼ / ▲** buttons when no menu display is on the screen.


Programming Channel Memory

- The channel memory is a list of TV channel numbers the TV tunes in when you press the **CHANNEL** \uparrow/\downarrow button. **First, use the TV/CABLE and CH PROGRAM functions to preset all active channels in your area automatically.** If necessary, arrange the preset channels with the **ADD/ERASE** function so you tune into only the desired channels.

TV/CABLE and CH PROGRAM functions





GETTING STARTED

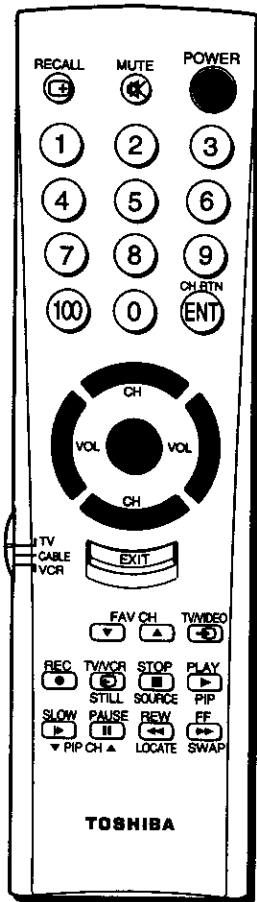



TV/CABLE function

- Press **POWER** to turn on the TV, then select an active channel. (See page 22 for details.)
- Press **MENU**, then press \leftarrow or \rightarrow until the **SET UP** menu appears.
- Press \downarrow (or \uparrow) until "**TV/CABLE**" is highlighted.
- Press \leftarrow or \rightarrow to select "**TV**" or "**Cable**" whichever you use.

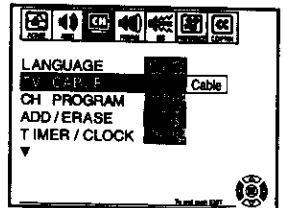
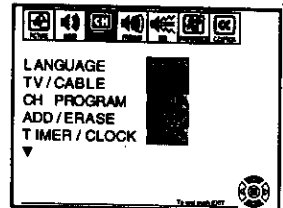


CH PROGRAM function

- Select "**CH PROGRAM**" from the **SET UP** menu (Step 2 above).
- Press \leftarrow or \rightarrow to start channel programming. The TV automatically cycles through all TV or CABLE channels depending on the mode selected, storing received channels in the channel memory.
- When channel programming is complete, the message "**COMPLETED**" appears on the screen.
- Press **CHANNEL** \uparrow/\downarrow to make sure channel programming has been done properly.

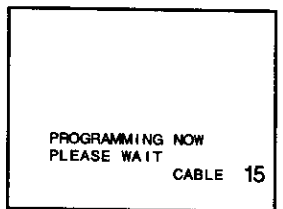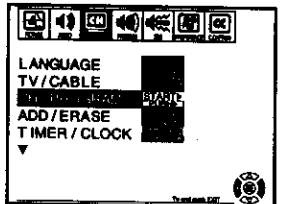

ADD/ERASE function

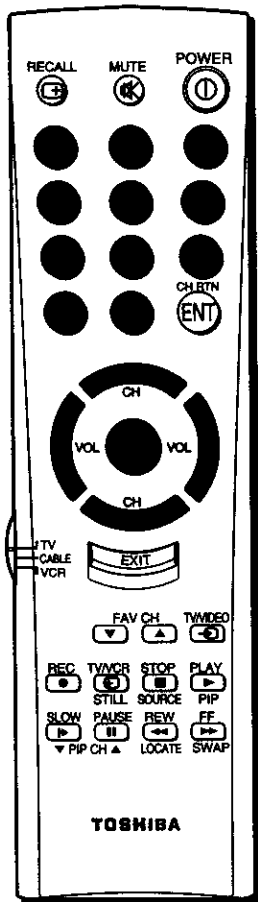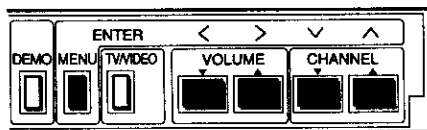


After performing the CH PROGRAM function, you can add or erase specific channels.

1 Select the channel to erase using the **CHANNEL ▲** or **▼** button, or select the channel to add with the **Channel Number** buttons.
See page 22 on how to select channels.

2 Press **MENU**, then press **◀** or **▶** until the **SET UP** menu appears.



3 Press **▼** (or **▲**) until **"ADD/ERASE"** is highlighted.

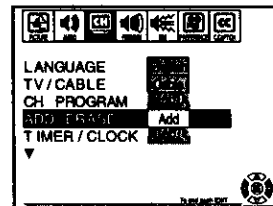

4 Press **◀** or **▶**.
To erase the channel
Press **◀** or **▶** to select **"Erase"**. The channel will be erased from the memory.



To add the channel
Press **◀** or **▶** to select **"Add"**. The channel will be memorized.

5 Repeat steps 1 through 4 for other channels.

Aligning the colors

- This projection TV uses three separate TV tubes: a red one, a green one, and a blue one. The red, green, and blue images are projected onto the screen where they converge to form a full color picture. You can see a clear picture only when they converge correctly.
- Convergence may drift over time or if you move the TV. If you can see clear images on the screen, skip this procedure.


To align the colors

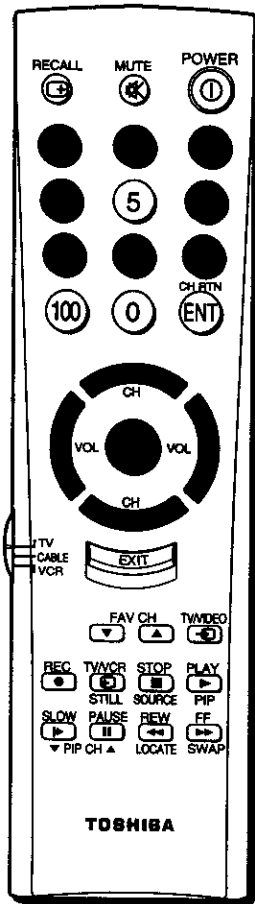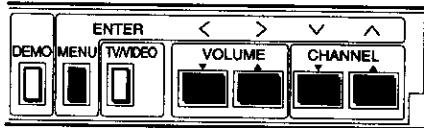


This adjustment should be made after the TV has been on for at least 30 minutes.

To check and align the colors


- 1 Press **MENU**, then press **◀** or **▶** until the PICTURE menu appears.

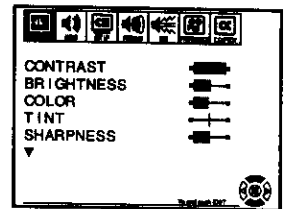


- 2 Press **▲** (or **▼**) until "CONVERGENCE" is highlighted.

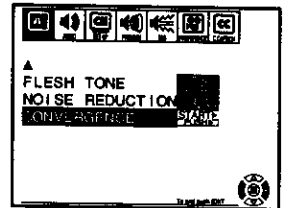


- 3 Press **◀** or **▶** to display the center CONVERGENCE menu. If alignment is correct, there will be one vertical and one horizontal white line.

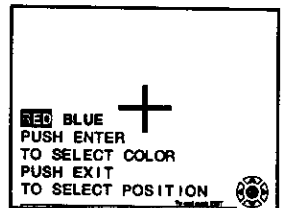

- 4 If you see separate colored lines, you have to align the colors. Press **ENTER** to select "RED" or "BLUE." The selected color is highlighted.

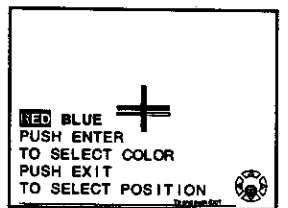


- 5 Press the **▲** (up), **▼** (down), **◀** (left) or **▶** (right) button to converge the red or blue line into the green line. When color convergence is correctly adjusted, you will see two single white lines.

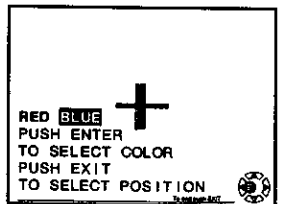


To align the colors (continued)

6 Press **EXIT** to display the circumference CONVERGENCE menu.

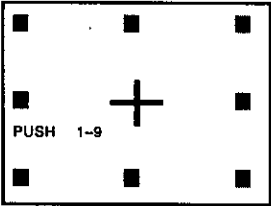


7 Press the corresponding **Number button** (1-9) to select the place you want to adjust.


Example: Number 1

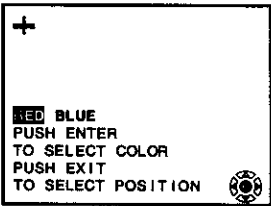

8 Press **ENTER** to select "RED" or "BLUE". The selected color is highlighted.

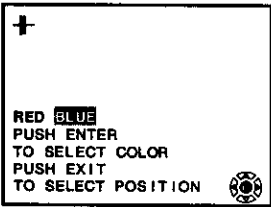


9 Press **▲, ▼, ◀, or ▶** to converge the red or blue line into the green line. Repeat steps 8 and 9 until you see two single white lines.

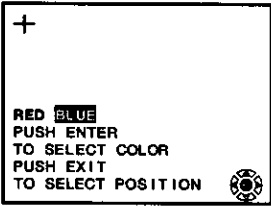

10 Press **EXIT** once to select any other place you want to adjust, then repeat steps 7 through 9.

Example: Number 6


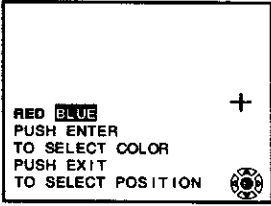


11 Press **EXIT** twice to close the CONVERGENCE menu.

Watching TV Programs

To watch a TV program

 
First set the **TV/CABLE/VCR** switch on the Remote Control to "TV".

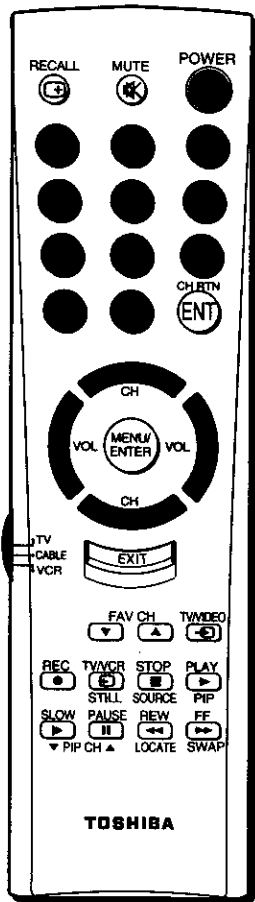

1 Press **POWER** on the Remote Control or the TV.

The following on-screen information will be displayed for a few seconds,

- Channel label (if previously preset)
- Channel number or VIDEO mode selected
- STEREO or SAP audio status

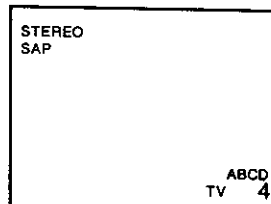


2 Select the desired program in one of the following two ways.

To scan the memorized channels in numerical sequence

Press **CHANNEL ▲** to select the next higher channel.

Press **CHANNEL ▼** to select the next lower channel.

Press the button again to select the next memorized channel.

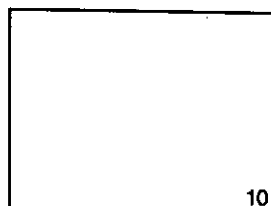

To select a channel directly

Press the **Channel Number** buttons (0 – 9 and 100).


To select channel 4, press "4" (or press "0" and "4" in order).

To select channel 38, press "3" and "8" in order.

To select channel 125, press "100," "2," and "5" in order.

3 Adjust the sound volume with the **VOLUME ◀ / ▶** on the Remote Control or the TV.

Press ▶ to increase the volume; ◀ to decrease the volume.

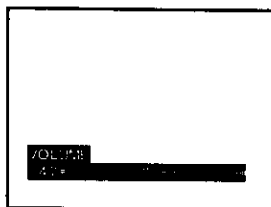

4 To turn off the TV, press **POWER** again.

If you cannot select certain channels (either TV broadcast or CABLE channels)


Check to see if the TV/CABLE function is properly set. See page 18.

Notes:

- The **CHANNEL (CH) ▼ / ▲** buttons function as the menu **▼ / ▲ (▼ / ▲)** buttons while a menu is on the screen.
- The **VOLUME (VOL) ◀ / ▶** function as the menu **◀ / ▶ (◀ / ▶)** buttons while a menu is on the screen.

Convenient Remote Functions


To use On-screen displays/Sound muting/Channel return

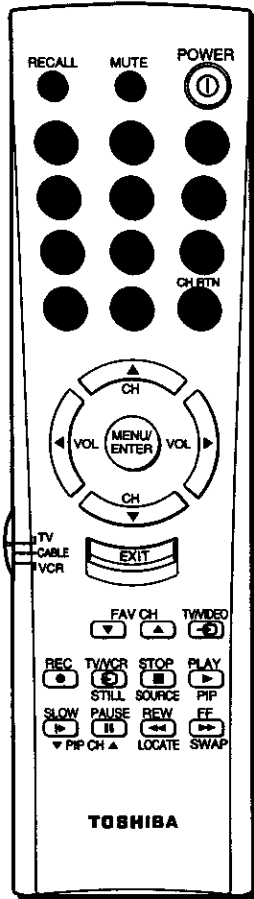

To display on-screen information


Press **RECALL** to display the following on-screen information.

- Channel label (if previously preset)
- Channel number or VIDEO mode selected
- Time (if the clock has been set)
- STEREO or SAP audio status

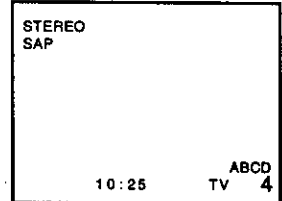

To mute the sound

- 1 Press **MUTE** to mute the sound immediately without affecting the picture.

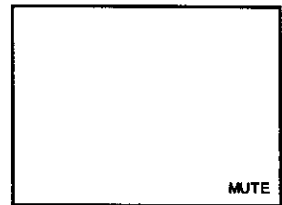

- 2 To restore the sound, press **MUTE** again.


Note:

When the **MUTE** button is pressed, the Closed Captioned feature "C1" is activated. To deactivate it, press the **MUTE** button again. This feature only functions when the Closed Caption mode is set to "Off." (See page 36.)

To return to the previously viewed channel

Using this function, you can watch two channels alternately.

- 1 Select the first channel you want to watch.
- 2 Select the other channel with the **Channel Number** buttons.
- 3 Press **CH RTN**. The previous channel returns.


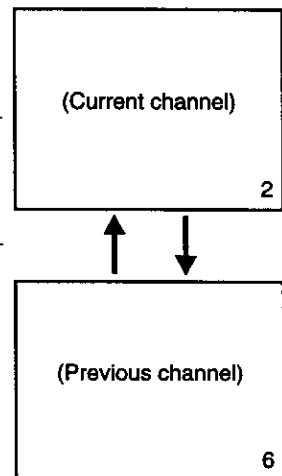


Each time you press **CH RTN**, the TV will switch back and forth between the two channels.

BASIC OPERATION

Controlling the Picture


To adjust the picture

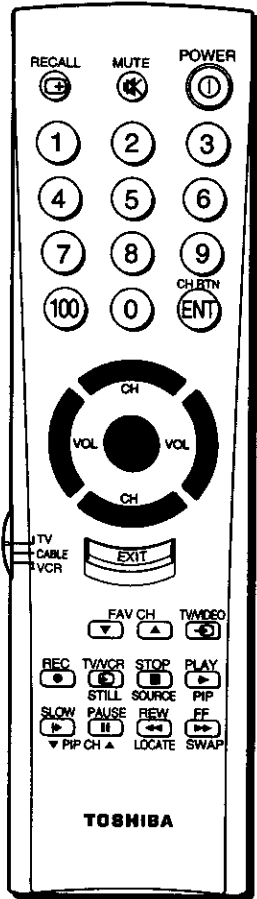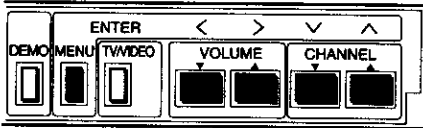

To adjust the picture quality


You can adjust the picture quality (CONTRAST, BRIGHTNESS, COLOR, TINT, and SHARPNESS) to suit your personal preference.

1 Press **MENU**, then press **◀** or **▶** until the **PICTURE** menu appears.

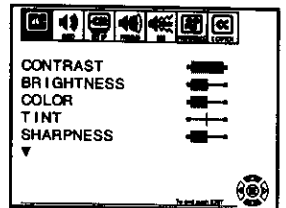


2 Press **▼** (or **▲**) until the item you want to adjust is highlighted.

Example: CONTRAST adjustment mode display

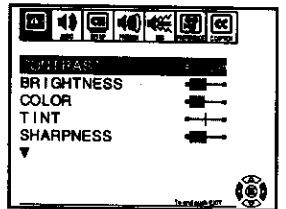

3 Press **◀** or **▶** to adjust the level.

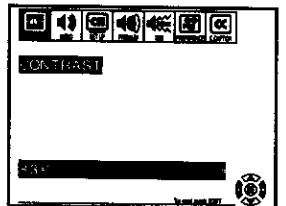



CONTRAST	lower	higher
BRIGHTNESS	darker	lighter
COLOR	weaker	stronger
TINT	reddish	greenish
SHARPNESS	softer	sharper

When you adjust any of the five PICTURE items, the new setting will be stored in the "Memory." (See page 25.)

Note:

You can reset the PICTURE setting to the factory preset status by using the RESET function. (See page 26.) When you turn on the RESET function, the TV will return to the Normal mode in the PICTURE PREFERENCE function. (The settings you have adjusted remain in the Memory mode.)


To adjust the picture (continued)

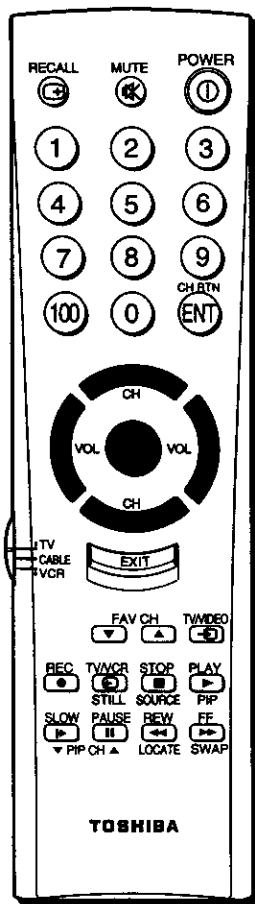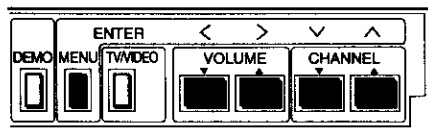


To select the color temperature

These selections change the appearance of gray and white tones of the picture.

- 1 Press **MENU**, then press **◀** or **▶** until the **PREFERENCE** menu appears.

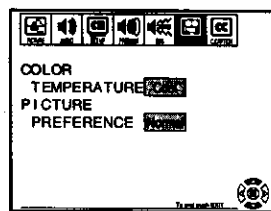

- 2 Press **▲** or **▼** until **"COLOR TEMPERATURE"** is highlighted.

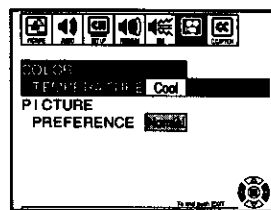


- 3 Press **◀** or **▶** to select the temperature you want.

Cool: Bluish
 Medium: Neutral
 Warm: Redish


To select the picture preference

You can select the type of picture you want from three preset picture modes (Normal, Theater, and Memory).

- 1 Select the **PREFERENCE** menu.

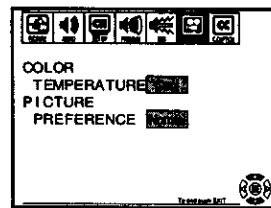

- 2 Press **▲** or **▼** until **"PICTURE PREFERENCE"** is highlighted.

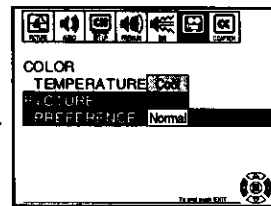

- 3 Press **◀** or **▶** to select the mode you want.

Mode	Picture quality
Normal	the picture quality preset at the factory
Theater	movie-like picture setting
Memory	the picture quality you set (See page 24.)



BASIC OPERATION

Controlling the Sound


- You can adjust the sound quality (BASS, TREBLE and BALANCE) to suit your personal preference.

BASIC OPERATION

To adjust the sound

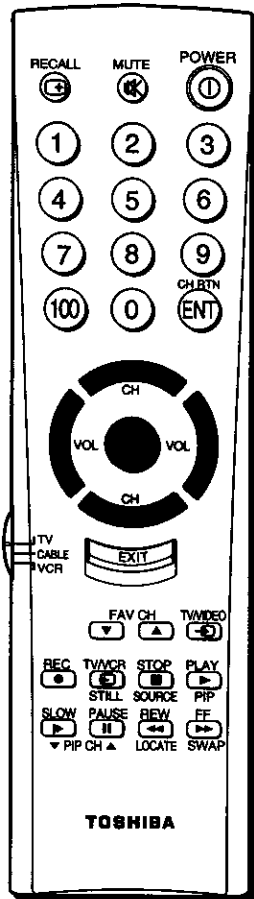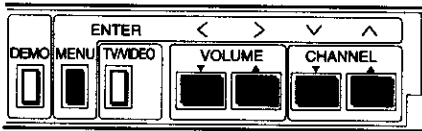


1 Press **MENU**, then press **◀** or **▶** until the **AUDIO** menu appears.

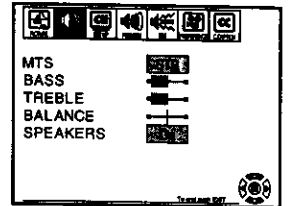


2 Press **▼** (or **▲**) until the item you want to adjust is highlighted.

Example: Adjusting "BASS."

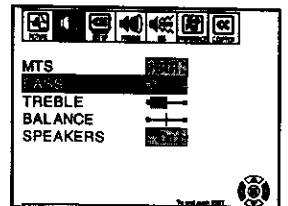

3 Press **◀** or **▶** to adjust the level.

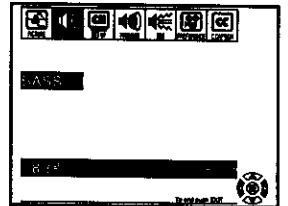


BASS	weaker	stronger
TREBLE	weaker	stronger
BALANCE	decreases the right channel	decreases the left channel

RESET function

To reset the **PICTURE** and **AUDIO** adjustments to the factory preset level (maximum **CONTRAST** and all other adjustments centered) Select **RESET** in the **SET UP** menu with **▲** or **▼**, then press **◀** or **▶**. (See page 16.)

The **RESET** function also performs the following adjustments.



- COLOR TEMPERATURE Cool
- PICTURE PREFERENCE Normal
- NOISE REDUCTION Off

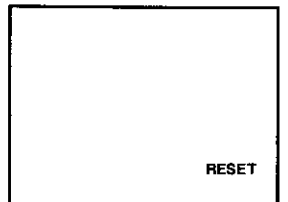

Selecting Stereo and SAP Broadcasts

- The MTS (Multi-channel TV Sound) feature allows you to improve your TV viewing with high fidelity stereo sound. MTS also provides for an extra audio channel, SAP (Second Audio Program), used to transmit a second language or other audio information.


To listen to Stereo/SAP broadcasts

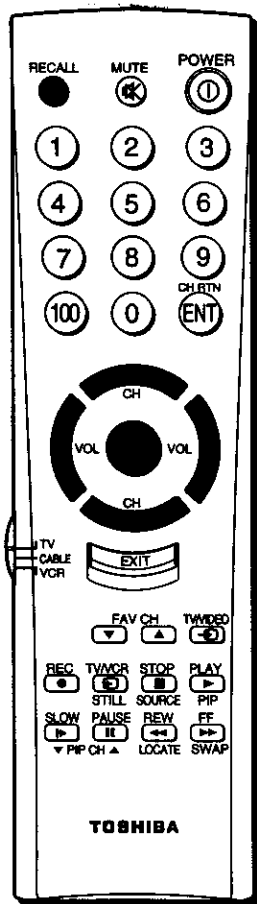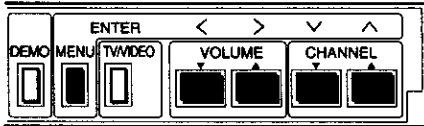


If the stereo sound is noisy
If a broadcast signal is not strong enough, and noise-free stereo sound is not available, select "MONO" in the MTS menu. The noise should be reduced.

To listen to stereo sound


When the TV receives a stereo broadcast, the word "STEREO" (or "SAP") is displayed on the screen. It is also displayed whenever the TV is turned on, a channel is selected, or the RECALL button is pressed.

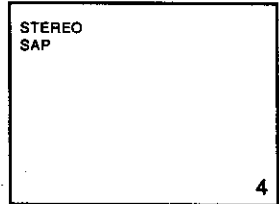

- 1 Press MENU, then press ◀ or ▶ until the AUDIO menu appears.

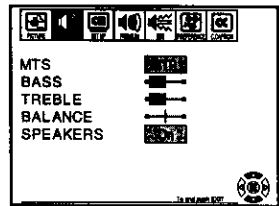

- 2 Press ▼ (or ▲) until "MTS" is highlighted.

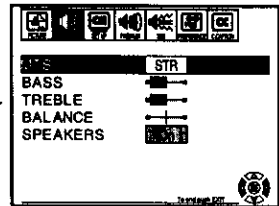


- 3 Press ◀ or ▶ to select "STR." If a stereo broadcast is received, "STR" will be displayed in yellow.

Normally this function can be left in the stereo mode "STR". Your TV will then automatically reproduce either stereo or monaural sound, whichever is broadcast.

To listen to a second language

- 1 Follow steps 1 and 2 above.
- 2 Press ◀ or ▶ to select "SAP." You will hear only the second language from the left and right speakers.

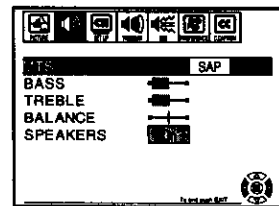



Notes:

- Be sure to select the "STR" mode if the broadcast is in stereo.
- The MTS function is not available while in VIDEO mode.

Enhancing the Surround Sound Effect


- This TV allows you to activate or deactivate the stereo surround effect.

To activate the Surround sound function

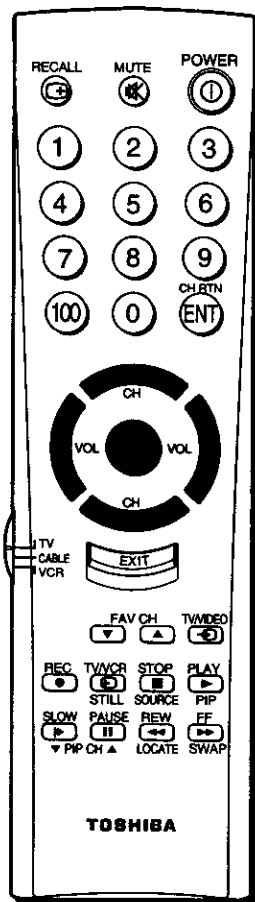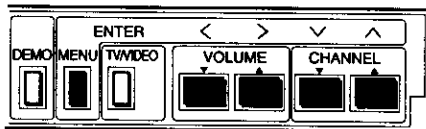


1 Select the "STR" (stereo) mode following steps 1 through 3 on the previous page.


2 Press **MENU**, then press **◀** or **▶** until the PREMIUM menu appears.

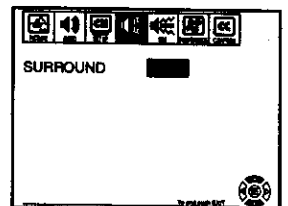

3 Press **▲** or **▼** to select "SURROUND."

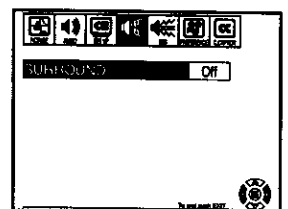

4 Press **◀** or **▶** to highlight "On."

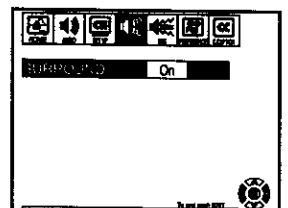

To deactivate the Surround sound function
Select "Off" in step 4 above.



Note:

Normally you can leave the MTS function set to "STR" and the SURROUND sound function set to "On". The TV will automatically produce either Surround, stereo or monaural, whichever is broadcast.

Operating the Sub-Bass System


- The Sub-Bass System allows you to improve bass performance (even when the sound volume is low).

To operate the Sub-Bass System

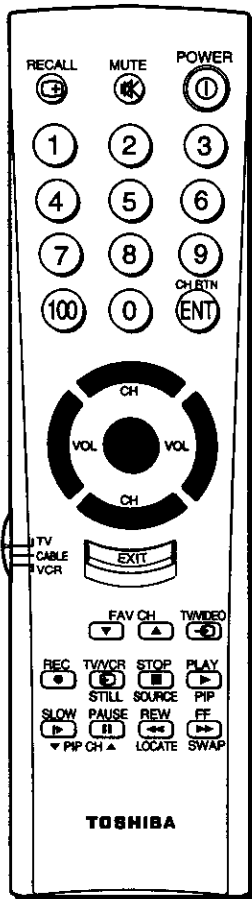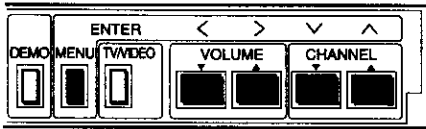


To activate the Sub-Bass System

- 1 Press **MENU**, then press **◀** or **▶** until the SBS menu appears.

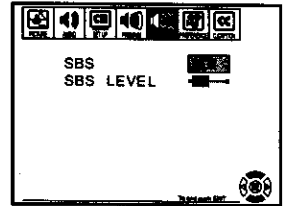


- 2 Press **▲** or **▼** until "SBS" is highlighted.

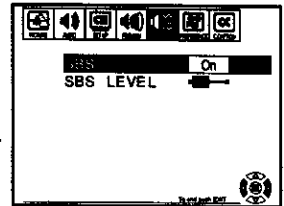

- 3 Press **◀** or **▶** to select "On."

To adjust the SBS level

- 1 Select "SBS LEVEL" in the SBS menu.

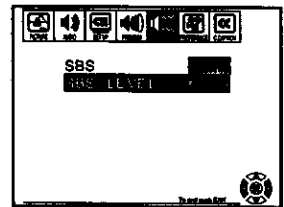

- 2 Press **◀** or **▶** to adjust the SBS level.



- ### To deactivate the Sub-Bass System function
- Select "Off" in step 3 above.


Note:

The Sub-Bass System signal does not pass through the "VARIABLE AUDIO OUTPUT" jacks. (See page 51.) However, the above on-screen displays will appear when the buttons are pressed.


Setting the OFF Timer and the Clock

- With the OFF timer, you can set the TV to turn off automatically after a pre-determined period of time (in 10 minute increments, up to 180 minutes).


To set the OFF timer

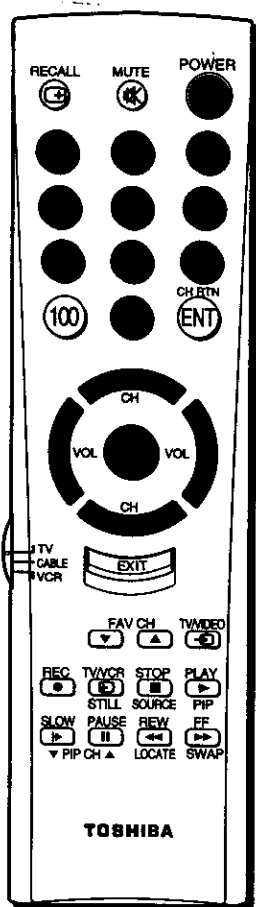


1 Press **MENU**, then press **◀** or **▶** until the **SET UP** menu appears.

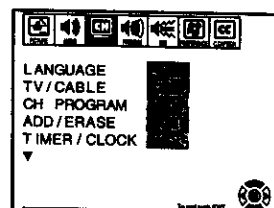


2 Press **▲** (or **▼**) until **"TIMER/CLOCK"** is highlighted.

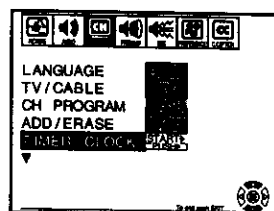

3 Press **◀** or **▶** to display the **TIMER / CLOCK** menu. Press **◀** or **▶** to select **"TIMER"**.

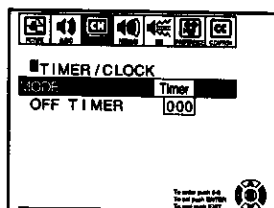

4 Press **▼** or **▲** until **"OFF TIMER"** is highlighted. Then press two **Number buttons** to enter the length of time you want the TV to stay on. The remaining number(s) to be adjusted will flash continuously.

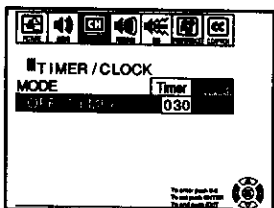

Example: 30 minutes
Press 0, then 3.


120 minutes
Press 1, then 2.

5 Press **ENTER** to start the timer. The display color will change from purple to blue, then the display will disappear.


To cancel the OFF timer

Press **POWER** twice, once to turn the TV off and once to turn it on again.


To set the clock

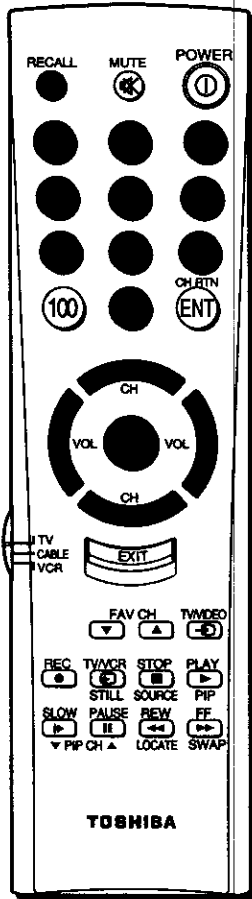


- 1 Press **MENU**, then press ◀ or ▶ until the **SET UP** menu appears.

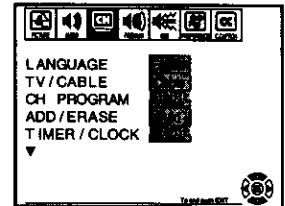

- 2 Press ▲ (or ▼) until **"TIMER/CLOCK"** is highlighted.

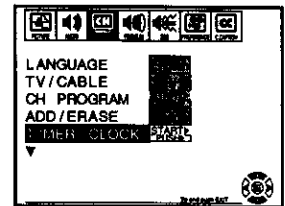


- 3 Press ◀ or ▶ to display the **TIMER/ CLOCK** menu.
Press ◀ or ▶ to select **"CLOCK"**.

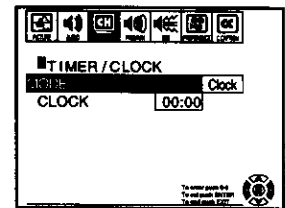

- 4 Press ▼ or ▲ until **"CLOCK"** is highlighted. Then press four **Number buttons** to enter the correct time. The remaining number(s) to be adjusted will flash continuously.

Example: To set 12:06 p.m.
Press 1, 2, 0 and 6.

- The clock operates on a 12 hour-cycle.

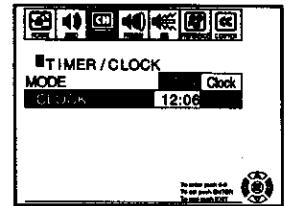

- 5 Press **ENTER** to start the clock. The display color will change from purple to blue, then the display will disappear.

To monitor the time

Press **RECALL**.

Note:

If the power source for the TV is interrupted (i.e., AC cord unplugged or power failure), the clock will have to be reset. (The time display will show "00:00.")

Watching Picture-in-Picture

- In addition to the main picture, another TV program or video source being received through the VIDEO input jacks can be displayed simultaneously as a small picture.
- When using the PIP, the TV can display two pictures at once. However, to watch **two different** pictures, one picture must be received from an antenna and the other must be from an external VIDEO source. See the next page.


To display a small picture

Note:


Signal source input through the COLOR STREAM terminals cannot be displayed as a small picture.

Also, when the main picture source is in "COLOR STREAM", PIP is not available.


- 1 Press **POWER** to turn on the TV and select the desired program.

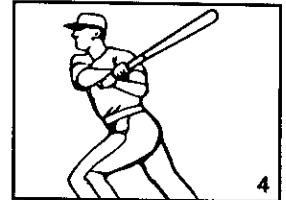

- 2 Press **PIP** once to display a small picture. The 1/9 size window picture appears. The main picture and small picture are the same.

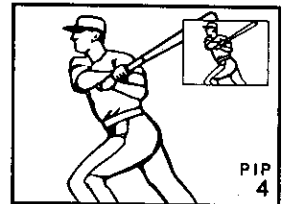

- 3 If you press **PIP** again, the 1/16 size picture appears.

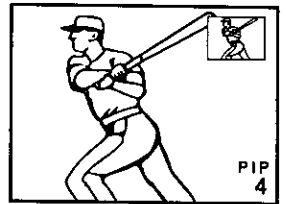


To turn off the small picture, press PIP

- **Twice**, if you are watching the 1/9 size window picture.
- **Once**, if you are watching the 1/16 size window picture.


CAUTION:

Avoid displaying stationary images on your TV screen for an extended period of time. Stationary patterns generated by the PIP display, computer displays, videogames, stock market reports etc. can become permanently ingrained on the picture tube. This damage is not protected by your warranty as it is the result of misuse. If you use your TOSHIBA Television to display still images, it is always advisable to reduce the brightness and contrast settings. Never leave a PIP display, computer display or videogame unattended.

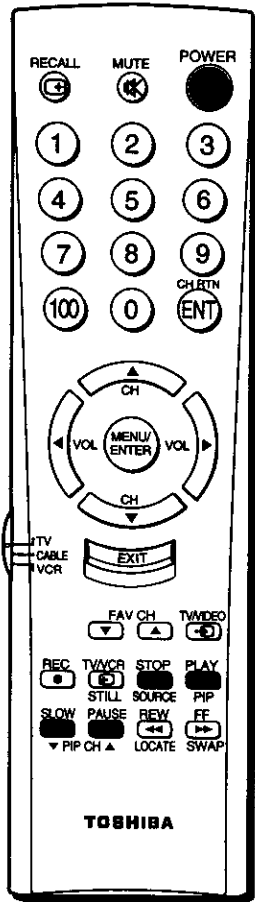


To display a picture from an external source

To connect a VCR to the TV for PIP

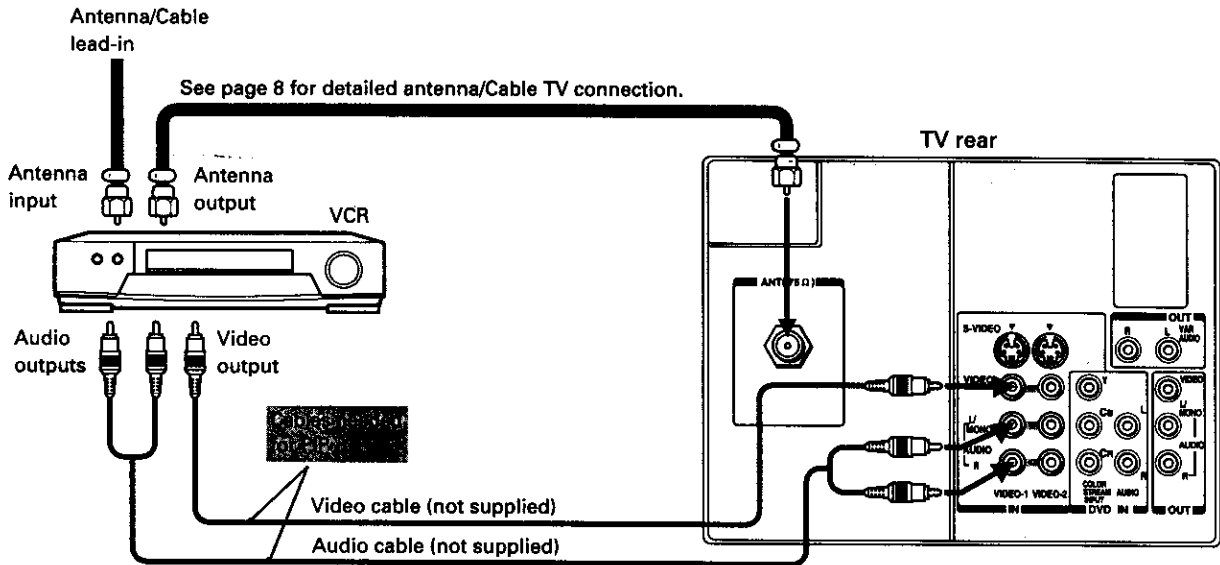

To select an input source for PIP


- 1 Press **SOURCE** repeatedly to select an input source for the small picture. Select "VIDEO 1" or "VIDEO 2."

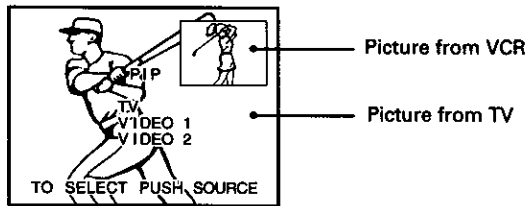

- 2 Select channels for the small picture using the VCR's channel keys.

To use the PIP CH ∇ / \blacktriangle button

- 1 Press **TV/VIDEO** to select "VIDEO 1" or "VIDEO 2" (main picture source) and press **SOURCE** to select "TV" (PIP source).

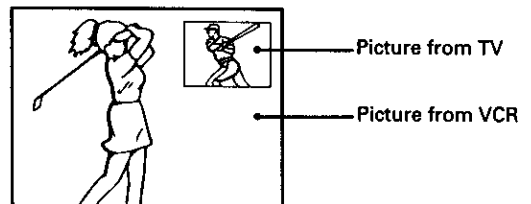


- 2 Press **PIP CH ∇** or **\blacktriangle** to select channels for the small picture.

Watching Picture-in-Picture

(continued)


To use advanced functions

ADVANCED OPERATION

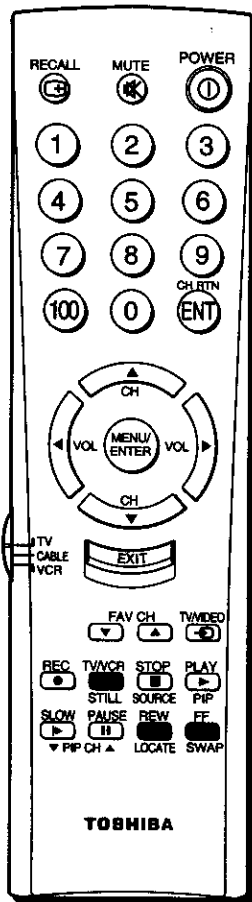


To change the position of the small picture

Press **LOCATE** repeatedly while a small picture is displayed. The display position of the small picture will change in order.

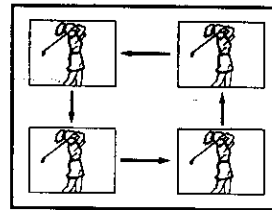


To switch the main and small picture

Press **SWAP** while a small picture is displayed. The main and small pictures will switch. To switch them again, press **SWAP** again.

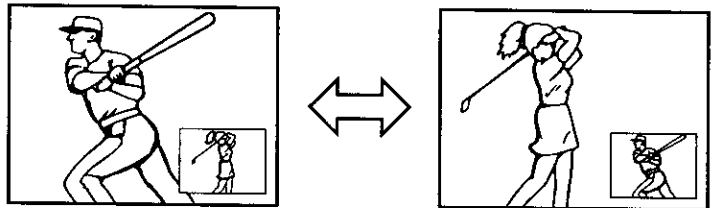

To freeze the small picture



Press **STILL** while a small picture is displayed. The small picture will become a still picture. To return it to a moving picture, press **STILL** again.

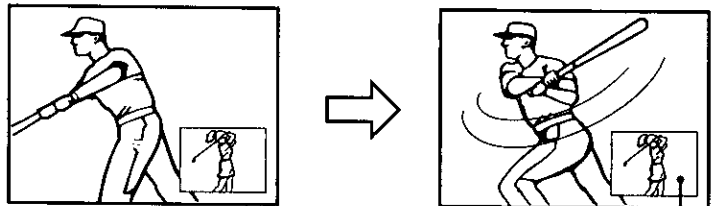

Still picture


Displaying XDS Information

To display XDS information

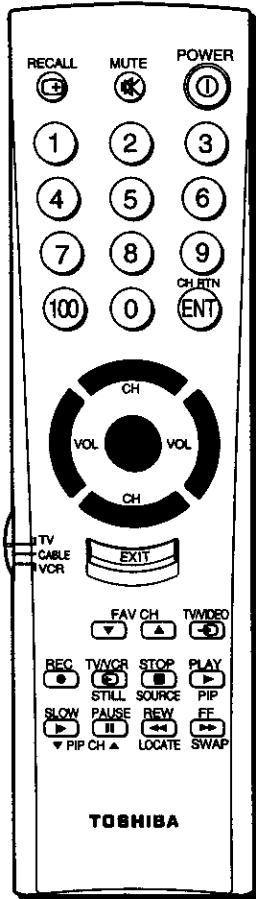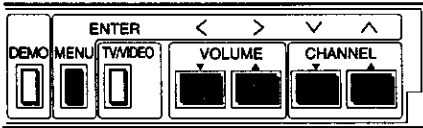


To close the XDS display
Press EXIT.

- 1 Select the desired program.
- 2 Press **MENU**, then press **◀** or **▶** until the **CLOSED CAPTION** menu appears.

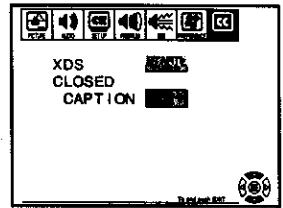


- 3 Press **▲** or **▼** until "XDS" is highlighted.

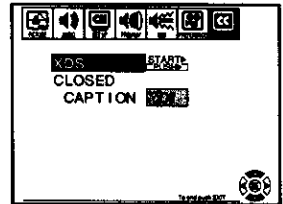

- 4 Press **◀** or **▶** to display the following XDS (eXtended Data Service) information for about 30 seconds.


- Network name ①
- Call letters ②
- Program name ③
- Program type ④
- Program length ⑤
- Elapsed time in show ⑥
- Program description ⑦

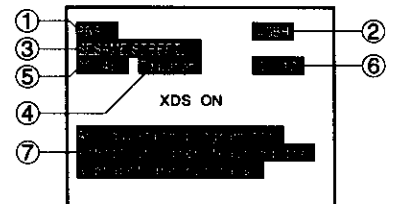

Some of the above information may not be displayed.



If the TV program you are watching does not include XDS information

Only "XDS ON" will be displayed for about 4 seconds when you select the XDS mode.

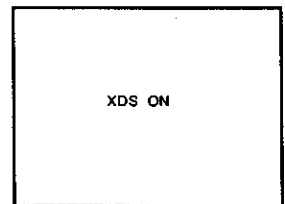

Operating the Closed Captioning Feature

To display Closed Captioning

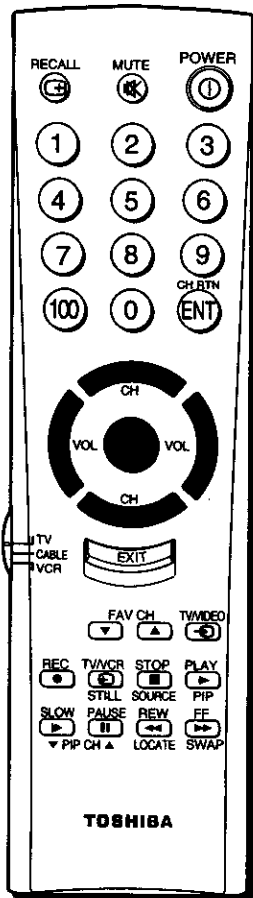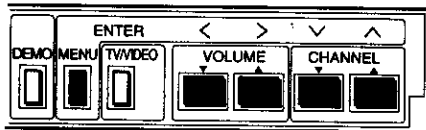


To view captions


Closed captioning is a printed version of the dialogue, narration, and/or sound effects of a TV program. Captions will appear at either the top or bottom of the screen during captioned broadcasts as shown. Captioning is especially helpful for hearing impaired individuals.

1 Select the desired program.

2 Press **MENU**, then press **◀** or **▶** until the **CLOSED CAPTION** menu appears.

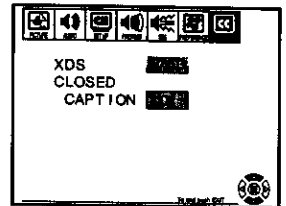

3 Press **▲** or **▼** until "**CLOSED CAPTION**" is highlighted.

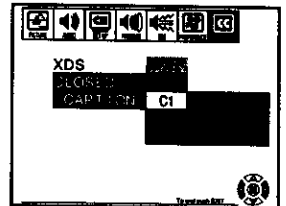

4 Press **◀** or **▶** to select the caption you want — C1 (Caption 1), C2 (Caption 2), C3 (Caption 3), or C4 (Caption 4).

Select "C1" for a transcription of the primary language in your area.

To deactivate this function




Select "Off" in step 4 above.

Note:

A closed-captioned signal may not be decoded in the following situations.

- When a video tape has been dubbed.
- When the signal reception is weak.
- When the signal reception is non-standard.



To display text information

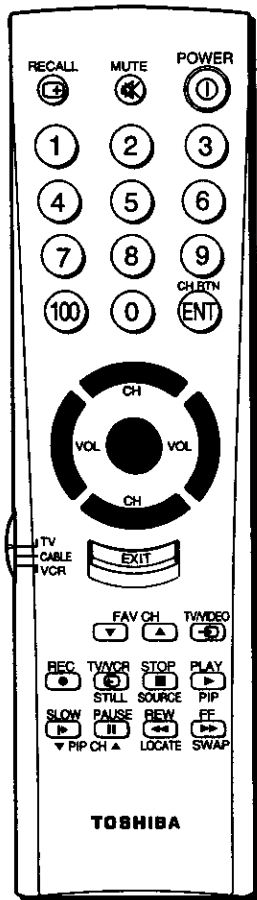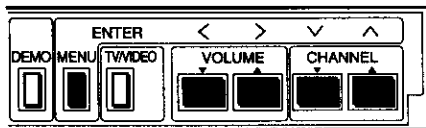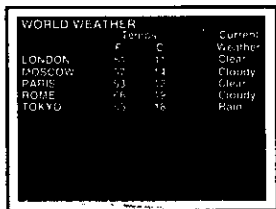

To view text

Text is information presented using all of the television screen. It is usually not related to the current program. For example, it could be a listing of closed captioned programs, news, weather information, or stock market reports.

- 1 Select the desired program.
- 2 Press **MENU**, then press **◀** or **▶** until the **CLOSED CAPTION** menu appears.
- 3 Press **▲** or **▼** until **"CLOSED CAPTION"** is highlighted.
- 4 Press **◀** or **▶** to select the text you want T1 (Text 1), T2 (Text 2), T3 (Text 3), or T4 (Text 4).

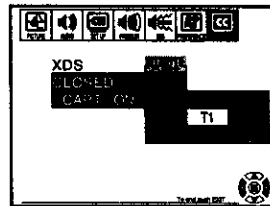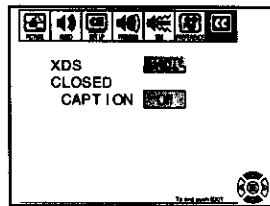

To deactivate this function
Select "Off" in step 4 above.

Note:


When you select a caption format channel and the Text mode, the Text screen will always be displayed. However, if Text character signals are not transmitted, the characters will not be displayed.

ADVANCED OPERATION

Locking Channels


- With this function, you can lock out specific channels by entering your own 4-digit code. The TV will not be able to tune to those channels for the next 24 hours, unless you enter the code. This TV has 8 memory spaces total — 4 for TV mode and 4 for CABLE mode.

To lock out channels

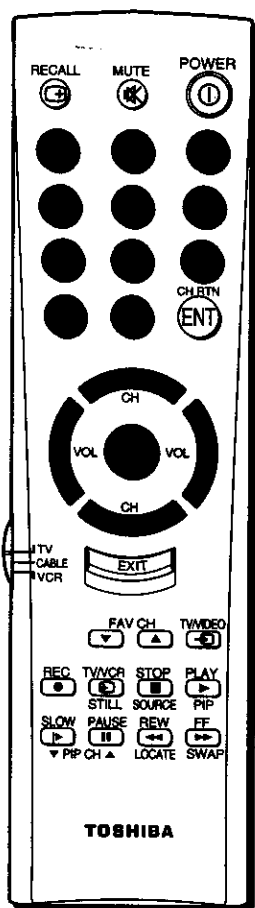


ADVANCED OPERATION


1 Press **MENU**, then press **◀** or **▶** until the **SET UP** menu appears.

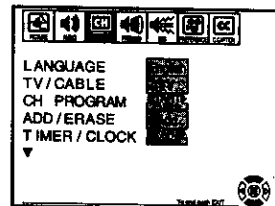


2 Press **▲** (or **▼**) until **"CH LOCK"** is highlighted.

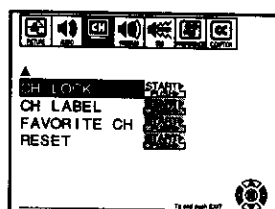

3 Press **◀** or **▶** to display the **CH LOCK** menu. **"SET/CLEAR"** will be highlighted. Press **◀** or **▶** to select **"Set."**

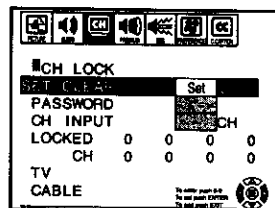


4 Press **▼** until **"PASSWORD"** is highlighted.

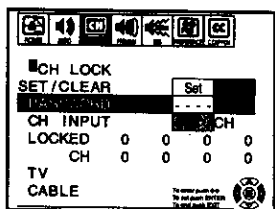


5 Press the **Number buttons (0-9)** to enter a 4-digit code. The numbers you enter will replace the dashes in the display. **Pick a number that is easy to remember.**

Example: To enter "1234".
Press 1, 2, 3, and 4 in order.
1 → 12 → 123 → 1234

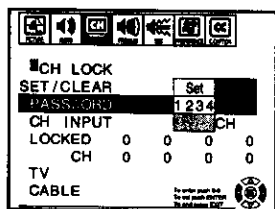


6 Press **▼** until **"CH INPUT"** is highlighted, then press the **Number buttons (0-9, 100)** to enter the channel number.

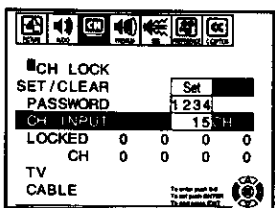

Note:
If a different code number is used to lock out a channel, the last one has priority over the preceding ones.

To lock out channels (continued)


7 Press ENTER.

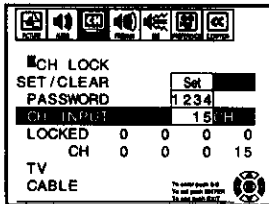


8 Repeat steps 6 and 7 for other channels.

To unlock channels


1 Select CH LOCK in the SET UP menu, then press ◀ or ▶ to select "Clear."

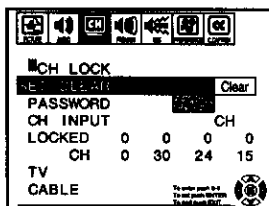


2 Press ▼ until "PASSWORD" is highlighted, and enter the 4-digit code used to lock out the channels with the Number buttons (0-9).

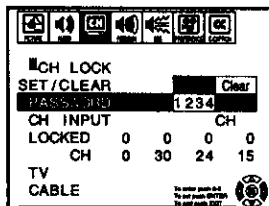

3 Press ENTER.

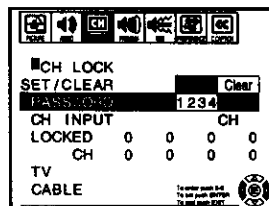

If a wrong code has been entered
These messages appear. Try to enter the correct code again.

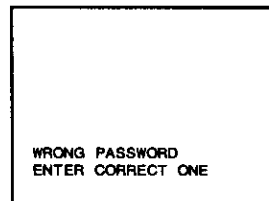


If you want to know the channels you have locked out
Call up the CH LOCK menu.

Labeling Channels

- This feature allows you to enter a 4 letter channel identifier of your choice that will appear over the channel number display. The label can be anything you want (for example the station call letters).
- The label you set will appear when you turn the TV on, select a channel, or press the **RECALL** button.


To program channel labels

ADVANCED OPERATION

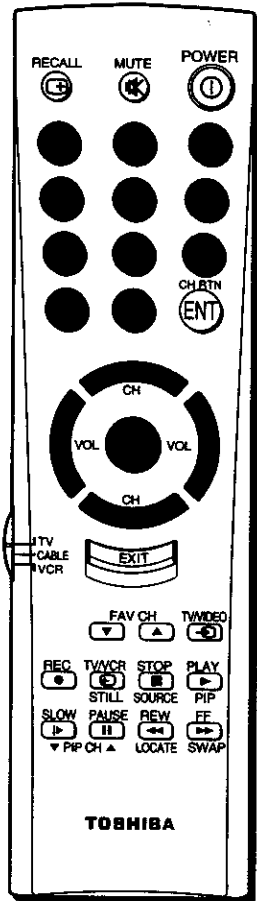


1 Press **MENU**, then press **◀** or **▶** until the **SET UP** menu appears.


Example: To assign "ABCD" to channel 4.

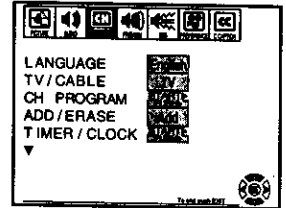

2 Press **▲** (or **▼**) until "**CH LABEL**" is highlighted.

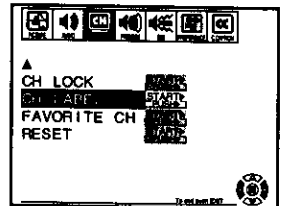


3 Press **◀** or **▶** to display the **CH LABEL** menu. "**SET/CLEAR**" will be highlighted.

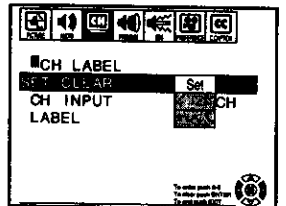


4 Press **◀** or **▶** to select "**Set.**"

5 Press **▼** until "**CH INPUT**" is highlighted, and select the channel you want to label with the **Channel Number** buttons.

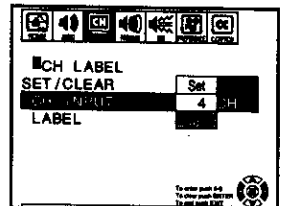



6 Press **▼** until "**LABEL**" is highlighted.

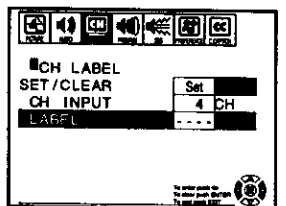


To program channel labels (continued)

7 Press ◀ or ▶ to select the first character for the label, then press ENTER.

Letters of the alphabet, numbers and other graphic symbols are available for labeling.
Each time you press the ◀ or ▶ button, the displayed character will change in the following order.

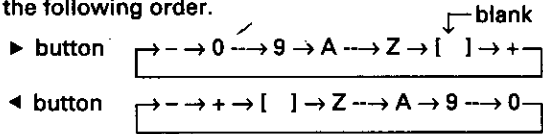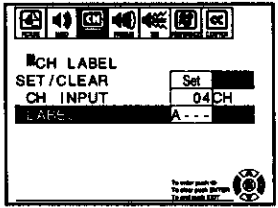

8 Repeat step 7 to enter the second, third and fourth characters.

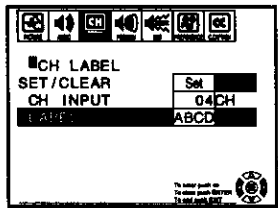


9 To label another channel, repeat steps 5 through 8. You can label 32 channels.


To clear the channel label

1 Select CH LABEL in the SET UP menu.

2 Press ◀ or ▶ to select "Clear."

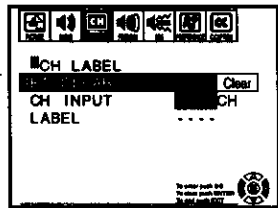

3 Press ▼ until "CH INPUT" is highlighted, then select the channel you want to clear with the Channel Number buttons.

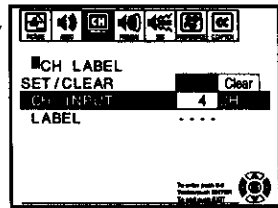

4 Press ENTER.


5 Repeat steps 3 and 4 for other channels.

Programming Your Favorite Channels

- The Favorite Channel Programming feature allows you to program up to 12 of your favorite channels.
- Once programmed, you can use **FAV CH** ∇ / \blacktriangle on the Remote Control to scan through only your favorite channels, skipping other channels you do not normally view.


To program your favorite channels

ADVANCED OPERATION

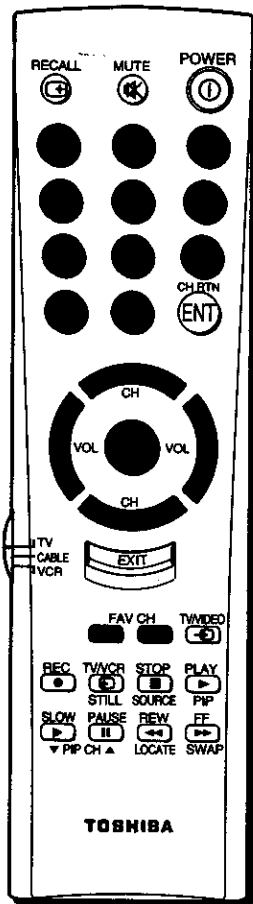


To select your favorite channels
 Press **FAV CH** ∇ / \blacktriangle .
 When you want to access all the channels
 you programmed in the TV's memory,
 press **CHANNEL (CH)** \blacktriangle / ∇ .


1 Press **MENU**, then press \blacktriangleleft or \blacktriangleright until the **SET UP** menu appears.

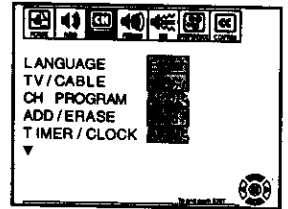

2 Press \blacktriangle (or ∇) until **"FAVORITE CH"** is highlighted.

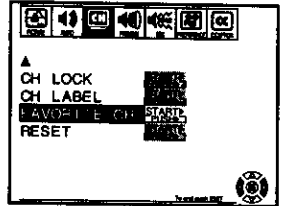


3 Press \blacktriangleleft or \blacktriangleright to display the **FAVORITE CH menu**.
"SET/CLEAR" will be highlighted.

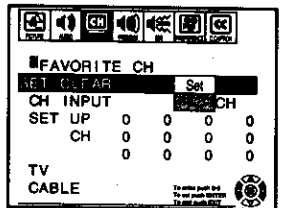


4 Press \blacktriangleleft or \blacktriangleright to select **"Set."**

5 Press ∇ until **"CH INPUT"** is highlighted, then press the **Channel Number** buttons to enter the channel number.

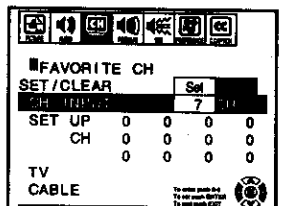


6 Press **ENTER**.

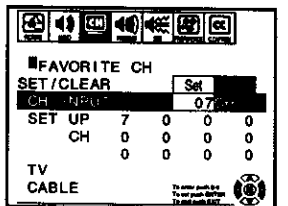

7 Repeat steps 5 and 6 for other channels.


To clear the channels you have programmed

- 1 Select FAVORITE CH menu in the SET UP menu.

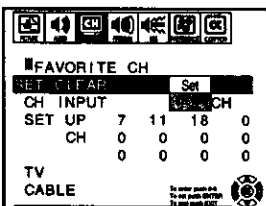


Note:
FAV CH ▼ / ▲ will function only after you have programmed your favorite channels.

- 2 Press ◀ or ▶ to select "Clear."


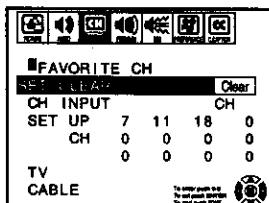


- 3 Press ENTER.
All the favorite channels you have programmed are cleared.

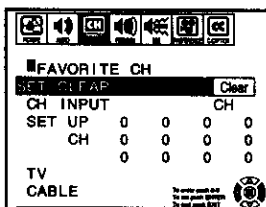

Flesh Tone/Noise Reduction

To activate the Flesh Tone and Noise Reduction Functions

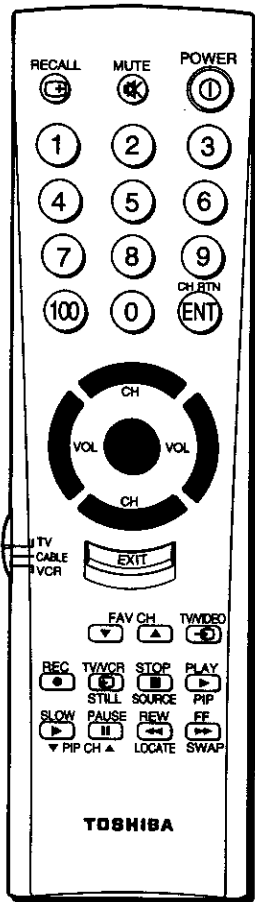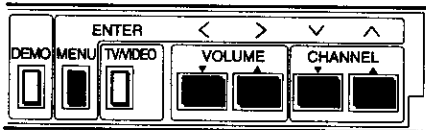


ADVANCED OPERATION


Flesh Tone Function

This function allows you to obtain natural flesh tones by correcting the difference of tint between TV stations.

- 1 Press **MENU**, then press **◀** or **▶** until the **PICTURE** menu appears.

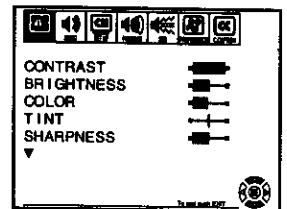

- 2 Press **▲** (or **▼**) until **"FLESH TONE"** is highlighted.

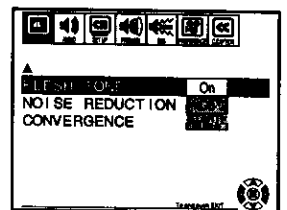


- 3 Press **◀** or **▶** to select **"On."**


Noise Reduction Function

This function allows you to reduce visible interference in your TV picture. This is useful when receiving a broadcast with a weak signal or playing back a video cassette or disk damaged by repeated use.

- 1 Press **MENU**, then press **◀** or **▶** until the **PICTURE** menu appears.

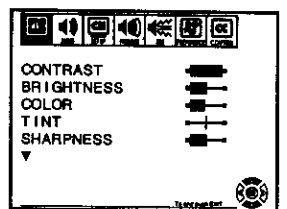

- 2 Press **▲** (or **▼**) until **"NOISE REDUCTION"** is highlighted.

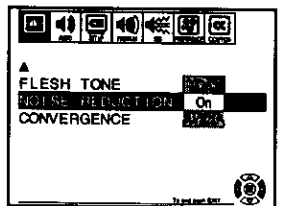



- 3 Press **◀** or **▶** to select **"On."**

To deactivate these functions
Select **"Off"** in step 3 above.


Changing the On-screen Display Language

- You can choose from three different languages (English, French and Spanish) for the on-screen displays (adjustment menus and messages).


To select a language for the on-screen displays

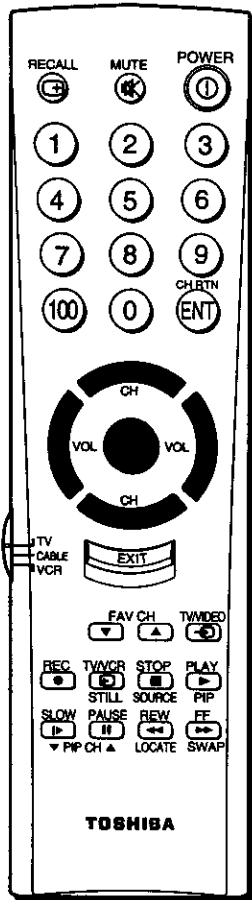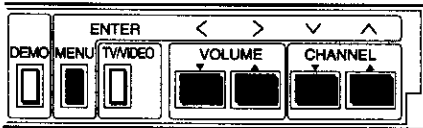


1 Press MENU, then press ◀ or ▶ until the SET UP menu appears.

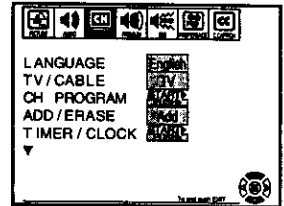


2 Press ▲ (or ▼) until "LANGUAGE" is highlighted.

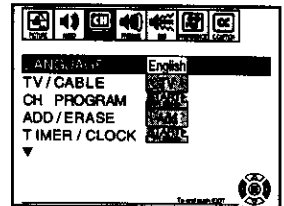


3 Press ◀ or ▶ to select the language you want.

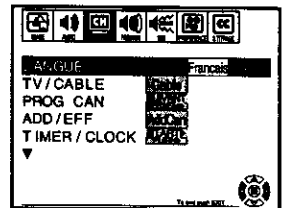


"English"

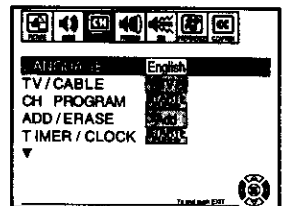

"French"

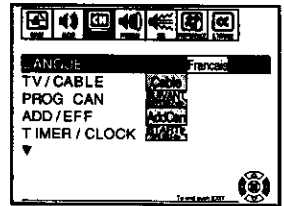


"Spanish"

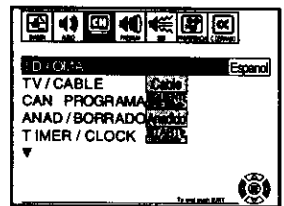

Connecting External Equipment


- Refer also to the owner's manual of the equipment to be connected.
- When connecting other equipment to the TV, first turn off all main power switches.

Monitor panel

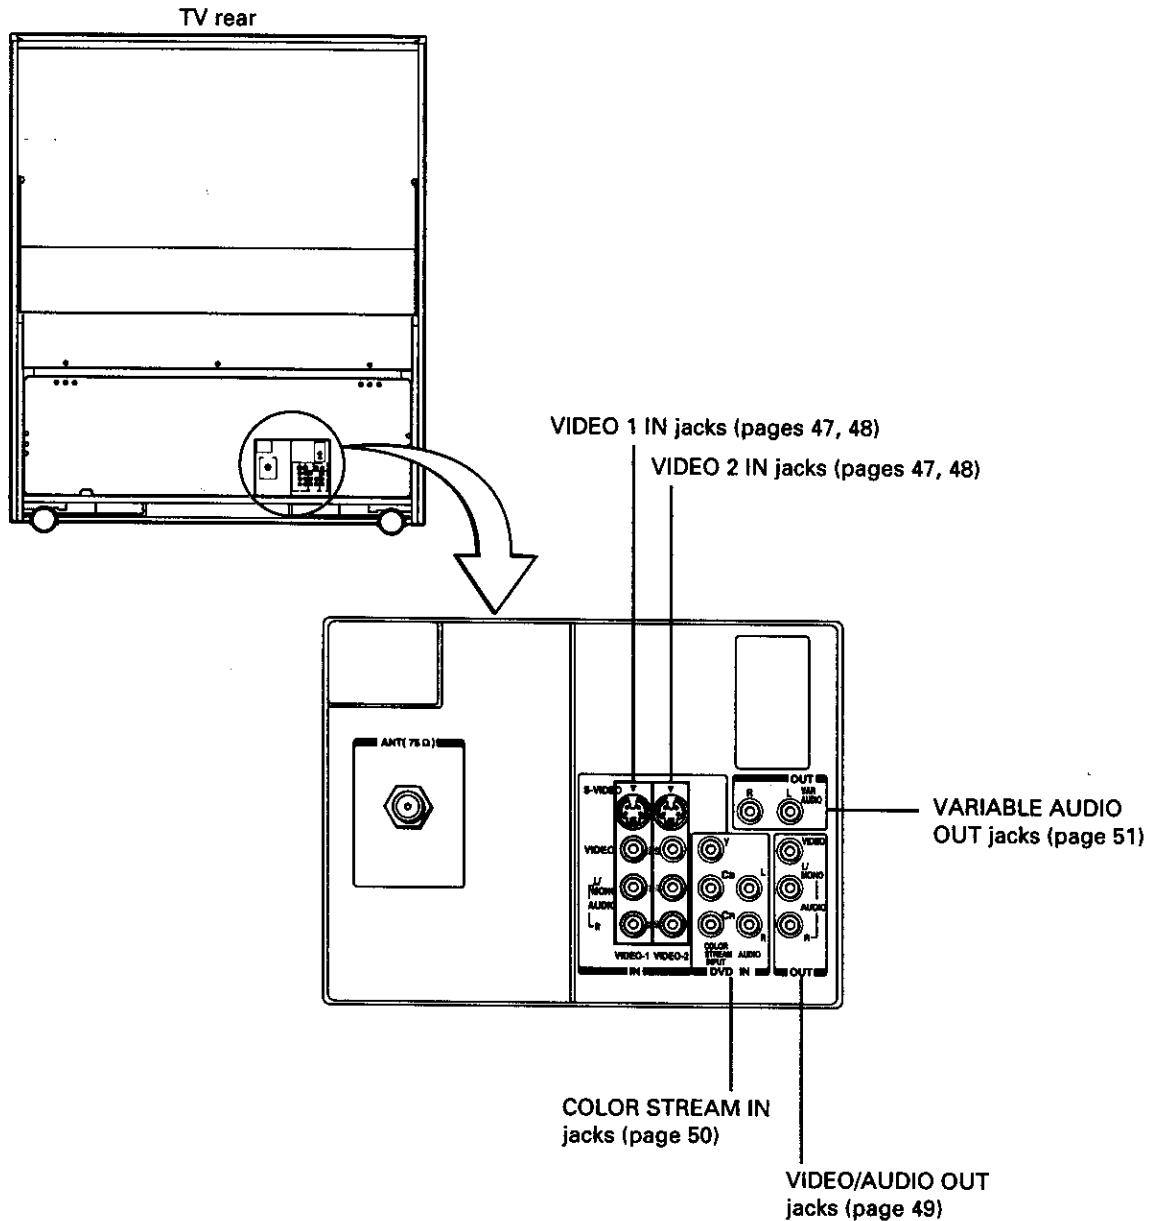


To connect a standard VCR

Connect the VIDEO 1 or VIDEO 2 IN jacks on the rear panel of the TV to the video/audio output jacks of the VCR, Laser Disc Player, video camera, etc. for playback of video recordings.

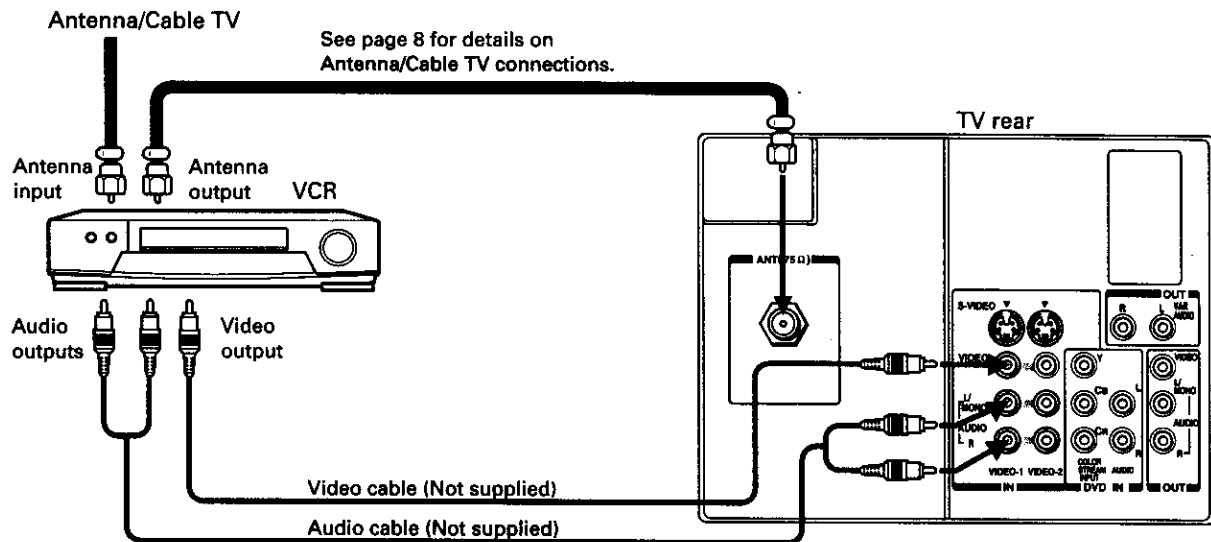

To select the video input source

Press TV/VIDEO on the Remote Control or on the TV repeatedly to select the appropriate source. Each time you press the button, the TV, VIDEO 1, VIDEO 2, or COLOR STREAM source will be selected in order. Select "VIDEO 1" in this example. The selected source will be displayed in purple.

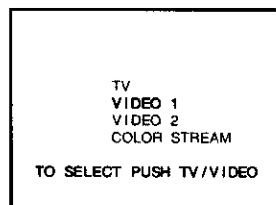

Note on the VIDEO 2 IN jacks

The VIDEO 2 IN jacks can also be used for connecting a second piece of video equipment with video/audio outputs. To view signals from equipment connected to the VIDEO 2 IN jacks, select "VIDEO 2."


Note:

If you connect a monaural VCR, connect the audio output of the VCR to the L/MONO jack.

Connecting External Equipment (continued)


To connect a VCR with an S-video jack

If you connect a VCR with an S-video jack to the "S-VIDEO" jack on the back of the TV, you must also connect the audio cables to the "VIDEO 1 IN" AUDIO jacks. The S-video cable supplies video signals only.

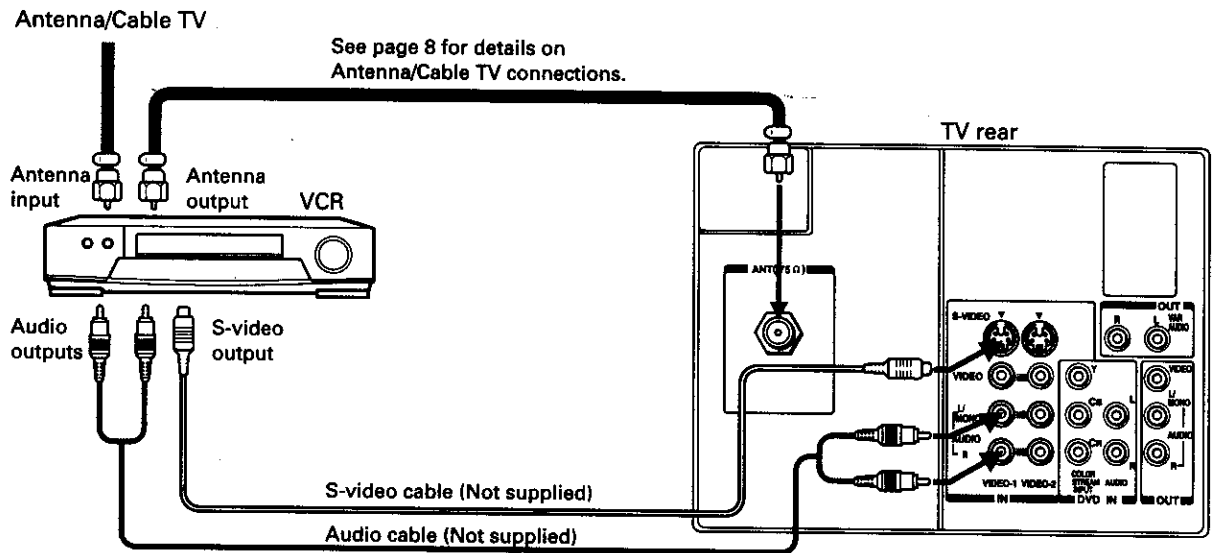

To select the video input source

- 1 Turn on the TV and the VCR.
- 2 Press **TV/VIDEO** on the Remote Control or on the TV to select "VIDEO 1" in this example.

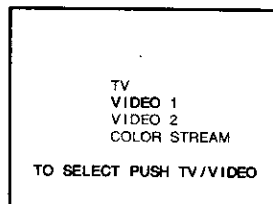

Notes on the VIDEO 2 IN jacks

The VIDEO 2 IN jacks can also be used for connecting a second piece of video equipment with S-video out. To view signals from equipment connected to the VIDEO 2 IN jacks, select "VIDEO 2".

Notes:


- When the S-video cable is connected to the S-VIDEO IN jack, the video cable (phono-type) should not be connected.
- The S-VIDEO jack accepts SEPARATED Luminance/Chrominance (Y/C) signals conforming to the NTSC standard.

- 3 Operate your VCR normally.

To dub/edit video tapes using two VCRs

To connect equipment for dubbing/editing

- 1 Connect the output jacks of the playback VCR to the input jacks (VIDEO 1 or VIDEO 2) on the TV.
- 2 Connect the output jacks (VIDEO/AUDIO OUT) on the TV to the input jacks of the recording VCR.

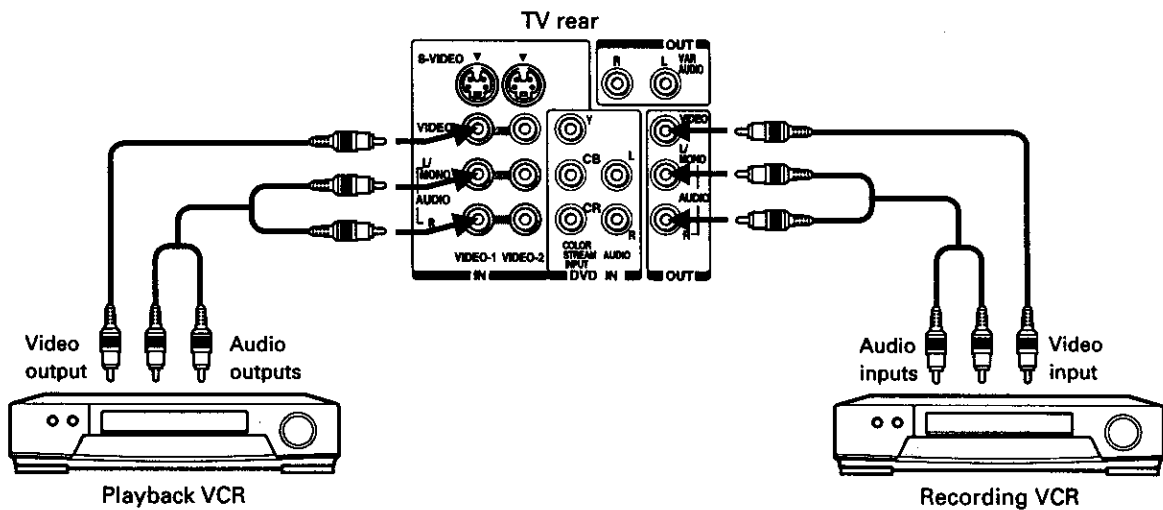

Note:

Do not connect one VCR to the output and input jacks on the TV at the same time.

To monitor dubbing/editing

- 1 Turn on the TV and both VCRs.
- 2 Press **TV/VIDEO** on the Remote Control or on the TV to select the input source of the playback VCR.
- 3 Set the recording VCR to record mode and the playback VCR to play.
- 4 You can view the video signal from the playback VCR on the TV screen while dubbing it onto the recording VCR.

CAUTION:

The unauthorized recording of television programs, video tapes and other materials may infringe upon the provisions of the copyright laws.


Notes:

- The input switch of the VCR is normally in the TV position. Change the switch of the recording VCR to the **LINE** or **CAMERA** position when using the video/audio inputs of the VCR as above. Some VCRs automatically switch when cables are plugged into the video/audio inputs.
- The PIP picture cannot be output through the VIDEO OUTPUT.

Connecting External Equipment (continued)


To connect a DVD video player with ColorStream™ (Color Difference) VIDEO OUTPUT

This connection allows you to view pictures from a DVD video player, an advanced video/audio device.

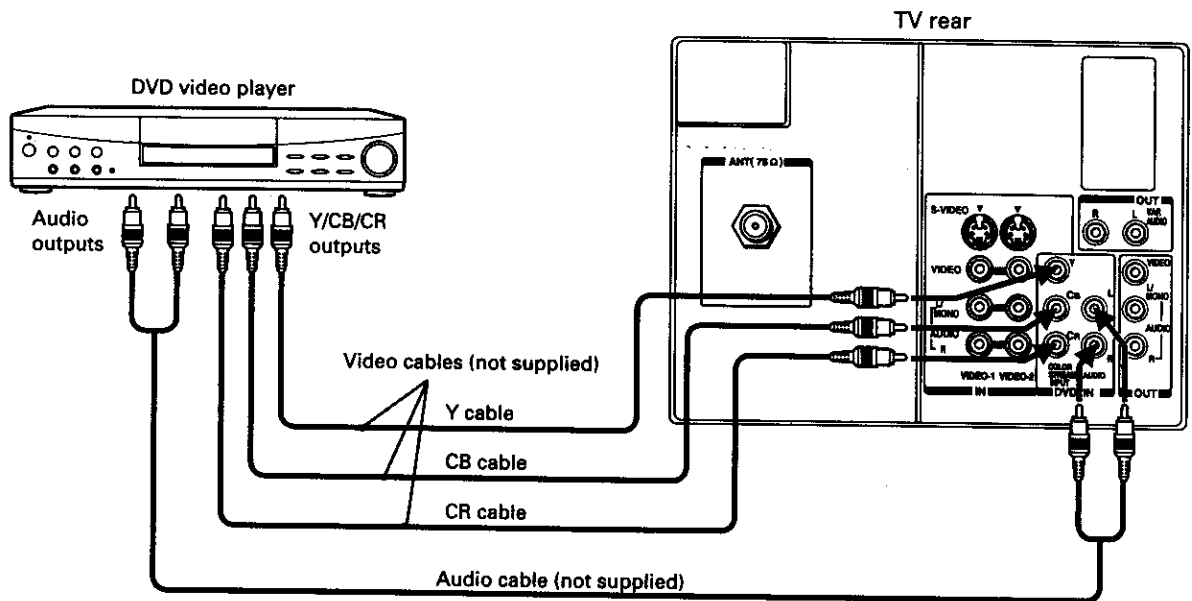

To select the video input source

- 1 Turn on the TV and the DVD video player.
- 2 Press **TV/VIDEO** on the Remote Control or on the TV to select "COLOR STREAM".

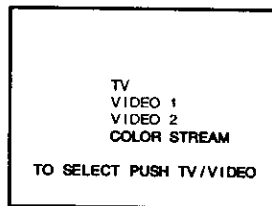


Notes:

- While the PIP is on the screen, "COLOR STREAM" will be skipped.
- When "COLOR STREAM" is selected, the VIDEO OUT signal will not have color. To receive a color VIDEO OUT signal, a VIDEO or S-VIDEO IN jack must be used instead of the ColorStream connection.

- 3 Operate your DVD video player normally.

To connect an audio amplifier


Connect the VARIABLE AUDIO OUT jacks to the auxiliary input jacks on the stereo amplifier. You can control the audio signal going to the audio equipment using the Remote Control for this TV.

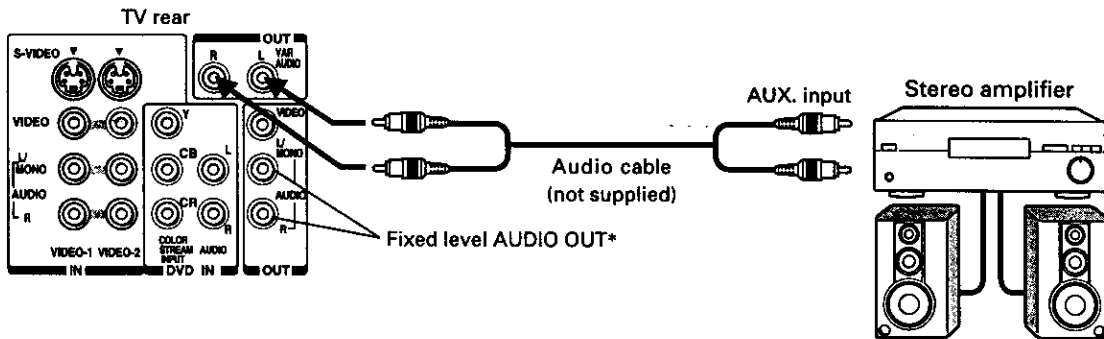


* The "fixed level" AUDIO OUT jacks are also available for connecting to an audio cassette recorder (or amplifier) to record audio from the TV. This constant audio signal is not affected by pressing the VOLUME buttons on the TV or the TV's Remote Control.

To turn off the built-in speakers


- 1 Press **MENU**, then press **◀** or **▶** until the **AUDIO** menu appears.

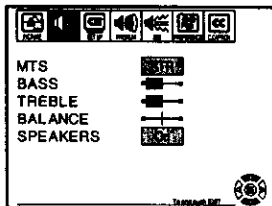

- 2 Press **▲** or **▼** until **"SPEAKERS"** is highlighted.

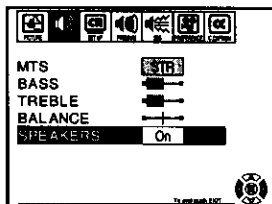

- 3 Press **◀** or **▶** to select **"Off."**

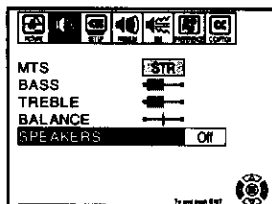

To turn on the built-in speakers
Select "On" in step 3.

Note:
Make sure the volume control of your stereo amplifier is set to a moderate listening level.

Specifications

TELEVISION SYSTEM	NTSC standard
CHANNEL COVERAGE	VHF: 2 through 13 UHF: 14 through 69 Cable TV: Mid band (A-8 through A-1, A through I) Super band (J through W) Hyper band (AA through ZZ, AAA, BBB) Ultra band (65 through 94, 100 through 125)
POWER SOURCE	120 V AC, 60 Hz
POWER CONSUMPTION	171 W (average)
AUDIO POWER	14 W + 14 W
SPEAKER TYPE	Two 6-1/4 inches (16 cm) round
VIDEO/AUDIO TERMINALS	S-VIDEO INPUT (VIDEO 1/VIDEO 2) Y-INPUT: 1 V(p-p), 75 ohm, negative sync. C-INPUT: 0.286 V(p-p) (burst signal), 75 ohm VIDEO 1/VIDEO 2 INPUT VIDEO: 1 V(p-p), 75 ohm, negative sync. AUDIO: 150 mV(rms) (30% modulation equivalent, 47 kohm) ColorStream™ (Color Difference) VIDEO/AUDIO INPUT Y-INPUT: 1V(p-p), 75 ohm CR-INPUT: 0.7 V(p-p), 75 ohm CB-INPUT: 0.7 V(p-p), 75 ohm AUDIO: 150 mV(rms), 47 kohm VIDEO/AUDIO OUTPUT VIDEO: 1 V(p-p), 75 ohm, negative sync. AUDIO: 150 mV(rms) (30% modulation equivalent, 4.7 kohm) VARIABLE AUDIO OUTPUT 0-350 mV(rms) (30% modulation equivalent, 4.7 kohm)
DIMENSIONS	Width: 42-3/4 inches (1,086 mm) Height: 50-1/4 inches (1,276 mm) Depth: 20-13/16 inches (528 mm)
MASS	217 lbs (98 kg)
SUPPLIED ACCESSORIES	Remote Control with 2 size "AA" batteries

Design and specifications are subject to change without notice.

Before Calling Service Personnel

- Before calling service personnel, please check the following chart for the possible cause of the problem you are experiencing.

Symptom	Solution	Pages
TV does not turn on	<ul style="list-style-type: none"> • Make sure power cord is plugged in, then press POWER. • Check the batteries in the Remote Control. If the batteries are dead, replace them with new ones. 	22 11
No picture, no sound	<ul style="list-style-type: none"> • Check the antenna/cable connections. 	6
No sound, picture OK	<ul style="list-style-type: none"> • Maybe the sound is muted. Press VOLUME ▲. • Maybe there is station trouble. Try another channel. • Check that the SPEAKERS function in AUDIO menu is properly set. 	22 51
Picture OK, no sound	<ul style="list-style-type: none"> • Maybe there is station trouble or local interference from an appliance. Try another channel. 	
Picture OK, sound OK	<ul style="list-style-type: none"> • Check the antenna/cable connections. • Maybe there is station trouble or local interference. Try another channel. • Adjust the picture quality. 	24
Picture OK, no closed captioning	<ul style="list-style-type: none"> • Try another channel. • Check the antenna/cable connections. • If using a VCR, check the TV/VCR switch. 	12
Picture OK, no closed captioning, VCR OK	<ul style="list-style-type: none"> • Make sure the TV/CABLE function is in "TV" mode. 	18
Picture OK, no closed captioning, VCR OK	<ul style="list-style-type: none"> • Captioning may be turned on. 	36
Picture OK, no closed captioning, VCR OK	<ul style="list-style-type: none"> • That channel may be locked out with the CH LOCK function, or erased with the ADD/ERASE function. 	38 19
Picture OK, no closed captioning	<ul style="list-style-type: none"> • Maybe there is station trouble. Try another channel. • Use a highly directional outdoor antenna. 	
Picture OK, no closed captioning	<ul style="list-style-type: none"> • Maybe there is station trouble or local interference. Try another channel. • Adjust TINT and/or COLOR in the PICTURE menu. 	24
No stereo or SAP sound from an MTS broadcast	<ul style="list-style-type: none"> • Check that the MTS function is properly set. 	27
The Remote Control does not operate	<ul style="list-style-type: none"> • Check that the TV/CABLE/VCR switch is properly set. • Maybe something is between the Remote Control and the sensor. • Maybe batteries are dead. Try replacing batteries with new ones. 	10, 12 11

Limited United States Warranty

Toshiba America Consumer Products, Inc. ("TACP") and Toshiba Hawaii Inc. ("THI") make the following limited warranties. These limited warranties extend to the original consumer purchaser or any person receiving this set as a gift from the original consumer purchaser and to no other purchaser or transferee.

Limited One (1) Year Warranty

TACP and THI warrant this product and its parts against defects in materials or workmanship for a period of one (1) year after the date of original retail purchase. During this period, TACP and THI will repair a defective product or part, without charge to you. "Authorized TACP/THI service station personnel will come to your home when warranty service is required. Depending on the type of repair required, the service will either be performed in your home or the set will be taken to the authorized TACP/THI service station for repair and returned to your home at no cost to you."

Limited Two (2) Year Warranty of Picture Tube

TACP and THI further warrant the picture tube in this product against defects in materials or workmanship for a period of two (2) years after the date of original retail purchase. During this period, TACP and THI will replace a defective picture tube without charge (1) year from the date of the original retail purchase, you pay labor charges involved in the replacement.

Rental Units

The warranty for rental units begins with the first rental or thirty (30) days from the date of shipment to the rental firm, whichever comes first.

Commercial Units

Products sold and used for commercial use have a limited ninety (90) day warranty for all parts, labor and picture tube.

Owner's Manual and Demographic Card

You should read this owner's manual thoroughly before operating this product. You should complete and mail the enclosed Demographic card within ten days after you, or the person who has given you this product as a gift, purchased this product. This is one way to enable TACP/THI to provide you with better customer service and improved products. Failure to return the Demographic card will not affect your rights under this warranty.

Your Responsibility

The above warranties are subject to the following conditions;

- (1) You must retain your bill of sale or provide other proof of purchase.
- (2) All warranty servicing of this product must be made by an Authorized TACP/THI Service Station.
- (3) **These warranties are effective only if the product is purchased and operated in the U.S.A. or Puerto Rico.**
- (4) Labor service charges for set installation, set up, adjustment of customer controls and installation or repair of antenna systems are not covered by this warranty. Reception problems caused by inadequate antenna systems are your responsibility.
- (5) Warrant extend only to defects in materials or workmanship as limited above and do not extend to any product or parts which have been lost or discarded by you or to damage to products or parts caused by misuse, accident, damage caused by Acts of God, such as lightning or fluctuations in electric power, improper installation, improper maintenance or use in violation of instructions furnished by us; or to units which have had the serial number removed, altered, defaced or rendered illegible.

How to Obtain Warranty Service

If after following all of the operating instructions in this manual and checking the section "BEFORE CALLING SERVICE PERSONNEL," you find that service is needed:

- (1) Call the TACP toll free number 1-800-631-3811 after you find a defective product or part to find the nearest TOSHIBA Authorized Service Station.
- (2) Please present your bill of sale or other proof to the Authorized Service Station. "Authorized TACP/THI service station personnel will come to your home when warranty service is required. Depending on the type of repair required, the service will either be performed in your home or the set will be taken to the TACP/THI Authorized service station for repair and returned to your home at no cost to you."

In the Continental United States call:



HAWAII

327 Kamakee Street, Honolulu, HI 96814 (808) 521-5377

All warranties implied by state law, including the implied warranties of merchantability and fitness for a particular purpose, are expressly limited to the duration of the limited warranties set forth above. With the exception of any warranties implied by state law as hereby limited, the foregoing warranty is exclusive and in lieu of all other warranties, guarantees, agreements and similar obligations of manufacturer or seller with respect to the repair or replacement of any parts. In no event shall TACP or THI be liable for consequential or incidental damages.

No person, agent, distributor, dealer or company is authorized to change, modify or extend the terms of these warranties in any manner whatsoever. The time within which action must be commenced to enforce any obligation of TACP or THI arising under this warranty or under any state, or law of the United States or any state thereof, is hereby limited to 90 days from the date you discover or should have discovered, the defect. This limitation does not apply to implied warranties arising under state law.

This warranty gives you specific legal rights and you may also have other rights which may vary from state to state. Some states do not allow limitation on how long an implied warranty lasts, when an action may be brought, or the exclusion or limitation of incidental or consequential damages, so the above provisions may not apply to you.



ATTENTION CANADIAN CONSUMERS:

Canadian consumers are requested to complete the special Canadian "Warranty Registration Form" enclosed, and forward this completed form with a copy of bill of sale to TOSHIBA OF CANADA to "Register and Validate" their warranty.

