

Use and Care Guide



KitchenAid®
FOR THE WAY IT'S MADE®

A Note to You	2
Electric Oven Safety.....	3
Getting to Know Your Electric Convection Oven.....	5
Using Your Electric Convection Oven...6	
Using the electronic oven control.....	6
Oven settings.....	9
Setting the clock.....	10
Using the timer.....	10
Baking or convection baking.....	11
Convection baking tips.....	12
Convection roasting.....	12
Convection roasting tips.....	13
Positioning racks and pans.....	13
Bakeware choices.....	14
Using aluminum foil.....	15
Adjusting oven temperature.....	15
Using the temperature probe.....	16
Using CONVECT FULL MEAL.....	18
Using EASY CONVECT™ Conversion.....	20
Broiling.....	21
Convection broiling.....	22
Timed cooking.....	24
Dehydrating.....	26
Proofing (raising) bread.....	27
The oven vent.....	27
Using the Self-Cleaning Cycle.....	28
Before you start.....	28
Before setting the controls.....	29
Setting the controls.....	29
For best cleaning results.....	30
How the cycle works.....	30
Caring for Your Electric Convection Oven.....	31
Cleaning Chart.....	31
Removing the oven door.....	32
Using and replacing oven lights.....	33
Troubleshooting.....	34
Requesting Assistance or Service.....	36
Warranty.....	40

In the U.S.A. for assistance or service,
call the Consumer Assistance Center:

1-800-422-1230

In Canada for assistance or service,
see page 37.

KITCHENAID® Lower Electric Convection Oven

Models: KEMS307G KEMS377G
KEMS308G KEMS378G

4452300A

www.kitchenaid.com

A Note to You

Thank you for buying a KITCHENAID® appliance!

KitchenAid designs the best tools for the most important room in your house. To ensure that you enjoy many years of trouble-free operation, we developed this Use and Care Guide.

It contains valuable information concerning how to operate and maintain your new appliance properly and safely. Please read it carefully. Also, please complete and mail the enclosed Product Registration Card.

Please record your model's information.

Whenever you call our Consumer Assistance Center at **1-800-422-1230** (in Canada, **1-800-807-6777**) or request service for your appliance, you need to know your complete model number and serial number. You can find this information on the model and serial number plate (see diagram in the Parts and Features section for plate location on the lower oven).

Please also record the purchase information.

Model Number _____

Serial Number _____

Purchase/
Installation Date _____

Builder/Dealer
Name _____

Address _____

Phone _____

NOTE: You must provide proof of purchase or installation date for in-warranty service.

Keep this book and the sales slip together in a safe place for future reference.

Electric Oven Safety

Your safety and the safety of others is very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to hazards that can kill or hurt you and others.

All safety messages will be preceded by the safety alert symbol and the word "DANGER" or "WARNING." These words mean:

⚠ DANGER

You will be killed or seriously injured if you don't follow instructions.

⚠ WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will identify the hazard, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electrical shock, injury to persons, or damage when using the oven, follow basic precautions, including the following:

- Proper Installation – Be sure the oven is properly installed and grounded by a qualified technician.
- Never Use the Oven for Warming or Heating the Room.
- Do Not Leave Children Alone – Children should not be left alone or unattended in area where oven is in use. They should never be allowed to sit or stand on any part of the oven.
- Wear Proper Apparel – Loose-fitting or hanging garments should never be worn while using the oven.
- User Servicing – Do not repair or replace any part of the oven unless specifically recommended in the manual. All other servicing should be referred to a qualified technician.
- Storage in Oven – Flammable materials should not be stored in an oven.
- Do Not Use Water on Grease Fires – Smother fire or flame or use dry chemical or foam-type extinguisher.
- Use Only Dry Potholders – Moist or damp potholders on hot surfaces may result in burns from steam. Do not let potholder touch hot heating elements. Do not use a towel or other bulky cloth.
- Use Care When Opening Door – Let hot air or steam escape before removing or replacing food.
- Do Not Heat Unopened Food Containers – Build-up of pressure may cause container to burst and result in injury.
- Keep Oven Vent Ducts Unobstructed.

SAVE THESE INSTRUCTIONS




IMPORTANT SAFETY INSTRUCTIONS

- **Placement of Oven Racks** – Always place oven racks in desired location while oven is cool. If rack must be moved while oven is hot, do not let potholder contact hot heating element in oven.
- **DO NOT TOUCH HEATING ELEMENTS OR INTERIOR SURFACES OF OVEN** – Heating elements may be hot even though they are dark in color. Interior surfaces of an oven become hot enough to cause burns. During and after use, do not touch, or let clothing or other flammable materials contact heating elements or interior surfaces of oven until they have had sufficient time to cool. Other surfaces of the oven may become hot enough to cause burns – among these surfaces are oven vent openings and surfaces near these openings, oven doors, and windows of oven doors.
- **Do Not Clean Door Gasket** – The door gasket is essential for a good seal. Care should be taken not to rub, damage, or move the gasket.
- **Do Not Use Oven Cleaners** – No commercial oven cleaner or oven liner protective coating of any kind should be used in or around any part of the oven.
- **Clean Only Parts Listed in Manual.**
- **Before Self-Cleaning the Oven** – Remove broiler pan and other utensils.

SAVE THESE INSTRUCTIONS


Getting to Know Your Electric Convection Oven

Oven parts and features

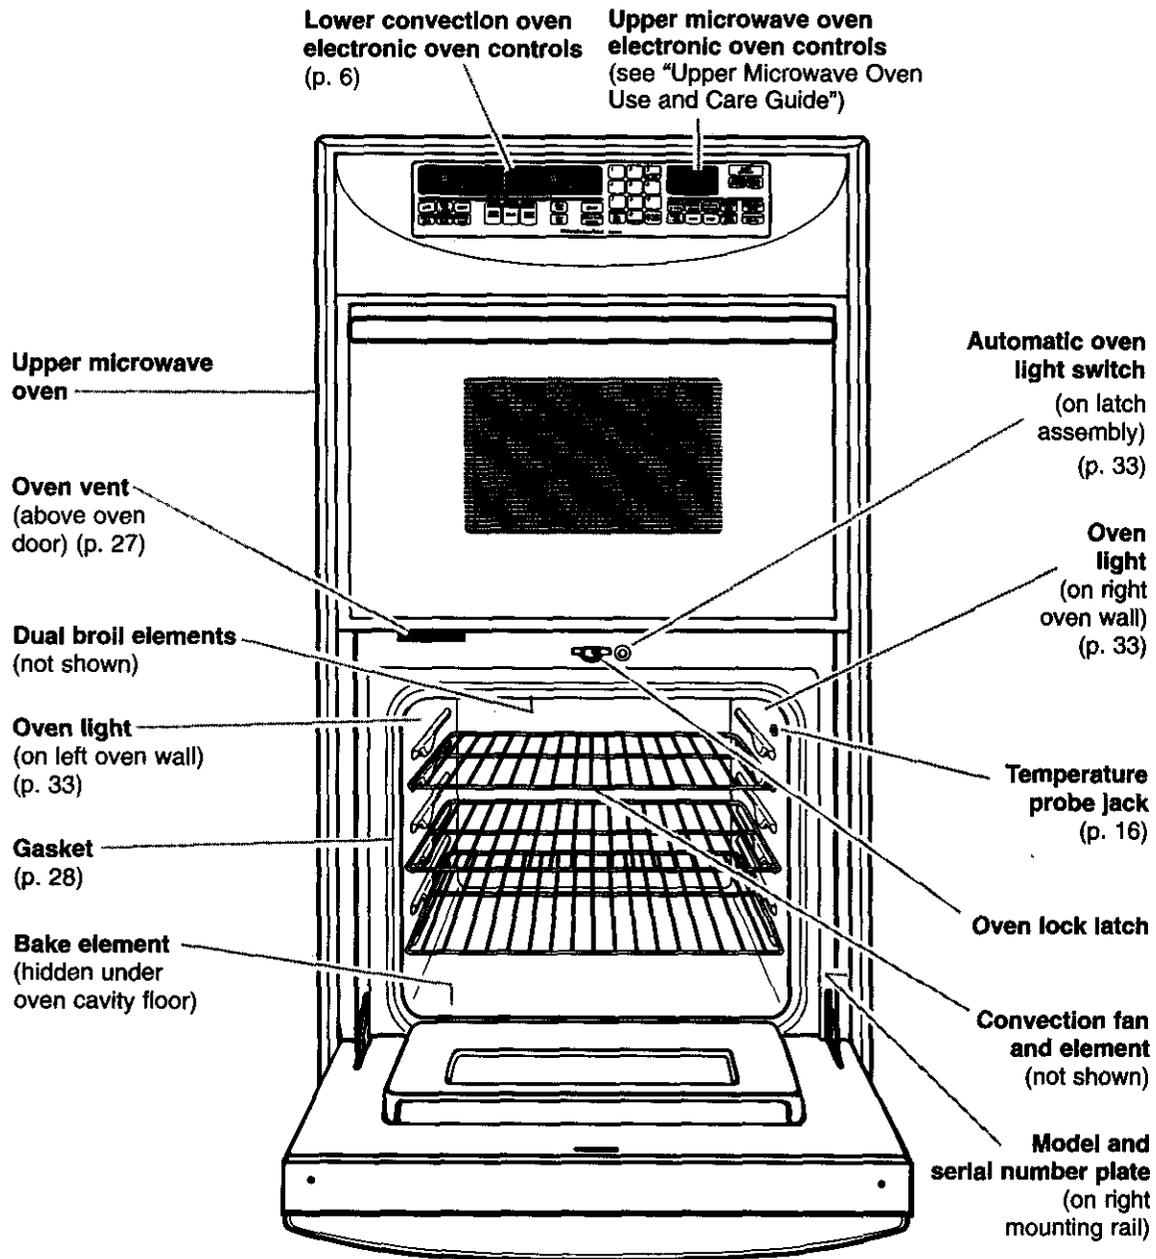

Using Your Electric Convection Oven

Using the electronic oven control

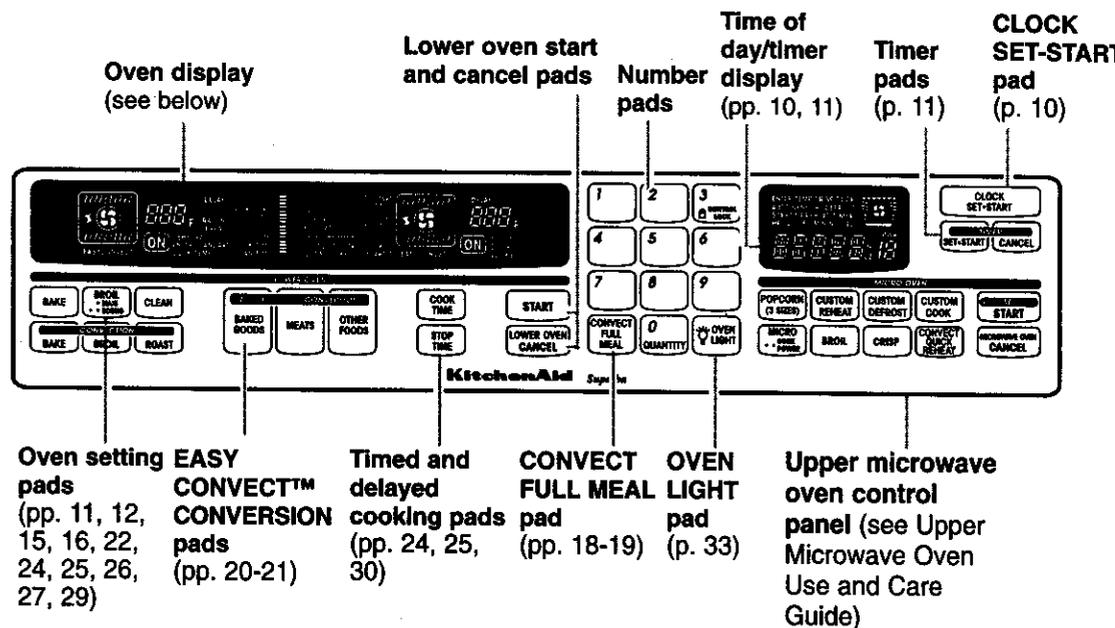

Display/clock

- When you first plug in the oven, both displays will be fully lit for a few seconds. Then the microwave oven display will show the set time and the lower oven display will show "PF" (power failure).
- If you make an incorrect entry, you will hear the following:
 - For clock entry, you will hear one short tone and see "CLOCK" on the display.
 - For Timer entry, you will hear three short tones.
 - For cook time entry, you will hear three short tones and see "Err" on the display.
 - For stop time entry, you will hear three short tones and see "Err" on the display.
 - For temperature entry, you will hear three short tones and see "Err" on the display.

Celsius/Fahrenheit

To set your oven to cook in Celsius instead of Fahrenheit: PRESS and hold for 5 seconds



You will know you are in Celsius when "F" disappears. To switch back to Fahrenheit, press and hold BROIL again for 5 seconds. ("F" will reappear.)

If you need to convert temperatures from Celsius to Fahrenheit or vice versa, you can refer to this chart:

Temperature replacement values

38°C to 100°F	163°C to 325°F
60°C to 140°F	177°C to 350°F
66°C to 150°F	191°C to 375°F
77°C to 170°F	204°C to 400°F
93°C to 200°F	218°C to 425°F
121°C to 250°F	232°C to 450°F
135°C to 275°F	246°C to 475°F
149°C to 300°F	260°C to 500°F



Starting an operation

After programming a function, you must press **START** to start the function. If you do not press **START** within 5 seconds of programming, "START?" will show on the display as a reminder.



Canceling an operation

LOWER OVEN CANCEL will cancel any lower oven function. When you press **LOWER OVEN CANCEL**, the large display will not show anything, unless the oven is too hot after canceling a Self-Cleaning cycle.



NOTE: You may hear a fan blowing in the oven after you press **LOWER OVEN CANCEL**. This is the cooling fan. It will turn off when the oven has cooled down.

Changing audible signals

Audible signals tell you if a function is entered correctly or not. They also tell you when a cycle is completed.

To change pitch and loudness of key tone:
PRESS and hold for 5 seconds



A short tone will sound and "Snd" and "Hi" or "Lo" will appear on the display. Repeat the step above to change to the other setting.

To turn on and off oven reminder tones:

PRESS and hold for 5 seconds



To turn on and off timer reminder tones:

PRESS and hold for 5 seconds



To turn on and off key pad entry and end-of-cycle tones:

PRESS and hold for 5 seconds



A short tone will sound and "Snd" and "ON" or "OFF" will appear on the display to tell you the signals have been changed. Repeat the step above to turn the signals back on.

Using the control lock

The control lock prevents unwanted use of the oven by disabling the control panel command pads.

NOTES:

- **Control lock** is available only when both the lower oven and the microwave oven are not in use. It is also not available during the Self-Cleaning cycle or the Sabbath mode.
- **Control lock** does not disable the Timer or Clock.
- **Set control lock** when cleaning the control panel to prevent oven from accidentally turning on.

To lock or deactivate the control panel:

Press and hold **CONTROL LOCK** (Number Pad 3) for 5 seconds. A single tone will sound and "CONTROL LOCK" will appear on the display.



To unlock the control panel:

Press and hold **CONTROL LOCK** (Number Pad 3) for 5 seconds. A single tone will sound after 5 seconds and "CONTROL LOCK" will disappear from the display.



Prompt for start

If "START?" is lit, this means that **START** has not been pressed. If you do not press **START**, the programmed function will automatically be canceled in 5 minutes.



Using Your Electric Convection Oven

Setting your oven for the Sabbath

If you want to set your oven to meet "no work" requirements for the Sabbath, follow these steps:

1. Press BAKE.



2. Press Number Pads to set the temperature you want.

 
Example for 325°F (163°C):



3. Press START.



4. Press and hold Number Pad 6 for 5 seconds to go into the Sabbath mode.



NOTE: The Sabbath mode is only available with the Bake function. Before going into the Sabbath mode make sure the timer is off. Also, make sure you are in an untimed Bake mode with no cook time or stop time specified.

What your oven will/will not do while in the Sabbath mode:

- The oven will not shut off automatically.
- The temperature display of the lower oven will show "Sab."
- To prevent accidental key pad presses, only the 0 to 9 and Start key pads will work.
- No tones will sound.
- No error messages or temperature changes will be displayed.
- The ON indicator remains lighted.
- Heating element icons flash before oven heating elements turn on or turn off.
- With the oven door closed, heating element icons light when the oven is heating and go off when the oven stops heating.

NOTE: If you open the oven door when the elements are off, the elements will not turn on.

Elements will not turn on immediately after the door is closed. If you open the oven door when the elements are on, the elements will turn off after a delay. Again, elements will not turn on immediately after the door is closed.

To change the temperature during the Sabbath mode for holidays:

1. Press a Number Pad for the desired temperature. Each Number Pad is programmed for a specific set temperature:

NUMBER PAD	SET TEMPERATURE
1	170°F (75° C)
2	200°F (95° C)
3	250°F (120° C)
4	300°F (150° C)
5	325°F (163° C)
6	350°F (177° C)
7	375°F (191° C)
8	400°F (204° C)
9	475°F (245° C)

2. Press and hold START for 1 second.



NOTES:

- It may take the oven up to one half hour to reach the desired temperature.
- Changing the temperature will not turn the heating elements on or off immediately. Also, the display will not show the temperature change immediately.

To end the Sabbath mode and turn off oven:

- Press and hold Number Pad 6 for 5 seconds.







If a power failure occurs during the Sabbath mode:

The oven will automatically return to the Sabbath mode at the desired temperature when power returns.





Oven settings

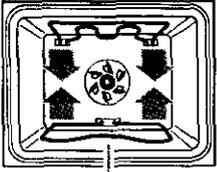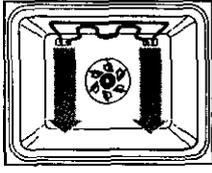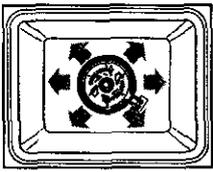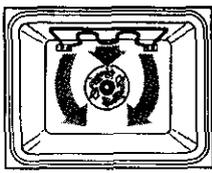SETTING	DIAGRAM	SETTING INFORMATION
<p>BAKE Use this setting for standard baking and roasting.</p>	 <p>Bake element (not visible)</p>	<ul style="list-style-type: none"> • The bottom element and both top elements heat up. • The elements will turn on and off to maintain the oven temperature. • Opening the door during Bake will cause the broil elements to turn off immediately and the bake element to turn off after 2 minutes.
<p>BROIL (MAXI/ECONO) Use Maxi Broil setting for food that covers most or all of the broiler grid. Use Econo Broil setting for food that covers only the center of the broiler grid.</p>		<ul style="list-style-type: none"> • Both top elements heat during Maxi Broil. (Maximum browning coverage.) • Only the inner element heats up during Econo Broil. (Browning coverage in center only.) • The elements will turn on and off to maintain the oven temperature. • Opening the door during Broil will cause the broil elements to turn off immediately.
<p>CONVECTION BAKE Use this setting for delicate foods and for baking breads and cakes. Use also when baking large quantities of food on more than one oven rack.</p>		<ul style="list-style-type: none"> • For faster preheating, both top (and in some models also the bottom) elements heat up until oven reaches desired temperature. After preheat, only the rear element heats up (and in some models the bottom element heats up). • For even heating, the fan at the back of the oven circulates air in the oven cavity. • The elements will turn on and off to maintain the oven temperature. • Opening the door during Convection Bake will cause the broil elements, convection fan, and rear element to turn off immediately. The bake element will turn off after 2 minutes.
<p>CONVECTION BROIL Use this setting for broiling thick cuts of meat.</p>		<ul style="list-style-type: none"> • Both top elements heat up. • For even heating, the fan at the back of the oven circulates air in the oven cavity. • The elements will turn on and off to maintain the oven temperature. • Opening the door during Convection Broil will cause the broil elements and convection fan to turn off immediately.

continued on next page




Using Your Electric Convection Oven

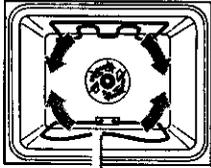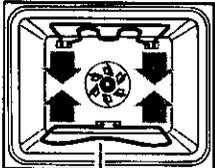SETTING	DIAGRAM	SETTING INFORMATION
<p>CONVECTION ROAST Use this setting for roasting and baking on one rack.</p>	 <p>Bake element (not visible)</p>	<ul style="list-style-type: none"> • The bottom element and both top elements heat up. • For even heating and faster cooking, the fan at the back of the oven circulates air in the oven cavity. • The elements will turn on and off to maintain the oven temperature. • Opening the door during Convection Roast will cause the broil elements and convection fan to turn off immediately. The bake element will turn off after 2 minutes.
<p>CLEAN Use this setting for self-cleaning only.</p>	 <p>Bake element (not visible)</p>	<ul style="list-style-type: none"> • The bottom element and both top elements heat up.

Setting the clock

NOTE: You can only set the clock when the lower oven and the microwave oven are not cooking food and when the timer is not counting down.

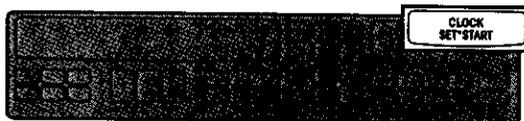

1. Press **CLOCK SET/START**.

PRESS



2. Set time.

Example for 5:30:

PRESS



3. Start clock.

If time has not been entered correctly, one short tone will sound and "CLOCK" will reappear on the display. Repeat Steps 2 and 3 to re-enter the time of day.

PRESS



OR

 


To disable the display clock:

You can clear the time of day from the display by pressing and holding **CLOCK SET/START** for 5 seconds. Repeat to see time of day on display again.

Using the timer

The Timer does not start or stop the oven. It works like a regular kitchen timer. It can be set in hours and minutes up to 99 hours, 59 minutes or in minutes and seconds up to 99 minutes, 59 seconds.



1. Press **TIMER SET/START**.

- **Once** to set minutes and seconds
- **Twice** to set hours and minutes


PRESS



2. Enter time to be counted down.

Example for 10 minutes:

PRESS

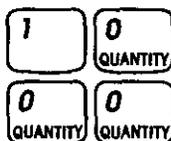

3. Start countdown.

The Timer will begin counting down immediately after you press **TIMER SET/START** or **START**.

PRESS



4. When time is up, turn off Timer.

When time is up, you will hear four tones unless end of cycle tone is disabled. (See "Changing audible signals" in the "Using the electronic oven control" section.) Press **TIMER CANCEL** to clear the display. Also, four tones will sound every minute as an audible reminder unless they are disabled.

To change the timer during its operation:

1. Press **TIMER SET/START**.
2. Enter new desired time.
3. Press **TIMER SET/START**.

To cancel the timer during its operation:


You can cancel the Timer any time during its operation. Press **TIMER CANCEL**.

PRESS



Baking or convection baking

NOTE: If you need to convert temperatures from Celsius to Fahrenheit or vice versa, see "Celsius/Fahrenheit" in the "Using the electronic oven control" section.

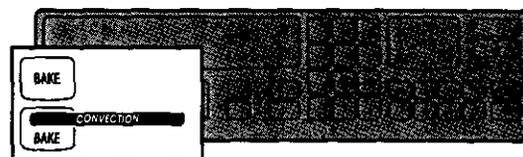

1. Position racks.

For correct rack placement, see the "Rack placement" chart in the "Cooking tips" section.

Your lower oven has 2 racks and 5 rack positions. Rack position 5 is the highest position, or farthest from the bottom of the oven. Rack position 1 is the lowest position, or closest to the bottom of the oven.

NOTES:

- **Before turning oven on**, position oven rack(s) in desired location.
- **Be sure** the rack(s) is level.
- **Use pot holders or oven mitts** to protect hands if rack(s) must be moved while oven is hot.
- **Do not let** pot holder or oven mitt touch oven bottom.

2. Choose baking setting.

PRESS



OR



continued on next page



Using Your Electric Convection Oven

3. Set temperature (optional).

Do this step if you want to set a temperature other than 350°F (177°C) for Bake.

PRESS



NOTE: See a reliable cookbook or your convection oven cookbook for temperature recommendations.

4. Preheat oven.

PRESS



The temperature display will show LO until the temperature reaches 170°F (77°C). After that, the temperature display will show the actual oven temperature at each 5° increase and stop at the set temperature. One long tone will sound when the oven is preheated.

5. Put food in oven.

NOTE: If you want to change the baking temperature after baking has begun, repeat Steps 2, 3, and 4.

6. After cooking, turn off oven.

PRESS




Convection baking tips

- **Do not use** aluminum foil when convection baking. Aluminum foil may block airflow.
- **Reduce** recommended recipe oven temperature by approximately 25°F (16°C). Use EASY CONVECT™ CONVERSION (see the "Using EASY CONVECT CONVERSION" section).
- **For some recipes**, you can reduce convection baking time compared to standard baking times. Use EASY CONVECT™ CONVERSION.

NOTE: Cooking time may be longer when you use more than one rack.


- **When baking on two or three racks**, use the CONVECTION BAKE setting for more even results. (You can also use only one rack when convection baking.)

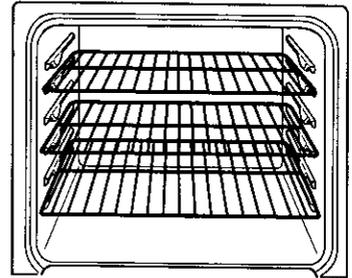

- **To use three racks during convection baking**, place one rack in position 5 (the highest position), another rack in position 1 (the closest to the oven bottom), and the third rack in position 3. This allows all three racks to be an equal distance apart for better baking.
- **Stagger** cake pans or other cookware in opposite directions on each rack when three racks are used. This will make sure pans are not directly over each other.

Convection roasting

NOTE: See the "Roasting tips" in the "Cooking tips" section.

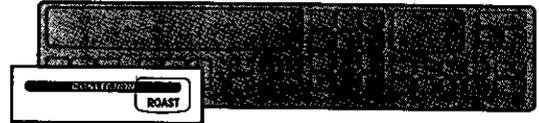

1. Prepare oven.

Position the rack properly. For correct rack placement, see "Baking or convection baking" earlier in this section. Place food in the oven. For large roasts and turkeys, place rack in position 1 or 2. (Preheating is not necessary when roasting.)

2. Choose setting.

PRESS





3. Set temperature (optional).

Do this step if you want to set a temperature other than 300°F (149°C).

PRESS



NOTE: See your convection oven cookbook for temperature recommendations.

4. Start oven.

PRESS



NOTES:

- After the temperature reaches 170°F (77°C), the temperature display will show the actual oven temperature at each 5°F (3°C) increase and stop at just about the set temperature.
- If you want to change the roasting temperature after roasting has begun, repeat Steps 2, 3, and 4.

5. After cooking, turn off oven.


PRESS



Convection roasting tips

- **Spatter can be reduced** by lining the bottom of the roasting pan with lightly crushed aluminum foil.
- **Use an accurate meat thermometer or temperature probe** (see the "Using the temperature probe" section) to determine when meat has reached desired degree of doneness. Insert the thermometer or probe into the center of the thickest portion of the meat or inner thigh or breast of poultry. For an accurate reading, the tip of the thermometer or probe should not touch fat, bone, or gristle.
- **After reading the thermometer once**, push it further into the meat ½ inch (1.7 cm) or more and read again. If the temperature drops, return the meat to the oven for more cooking.

- **Check pork and poultry** with a thermometer in 2 to 3 places to ensure adequate doneness.
- **Poultry and roasts will be easier to carve** if loosely covered with foil and allowed to stand 10 to 15 minutes after removal from the oven.
- **You can reduce** roasting times and temperatures for most standard recipes when using the Convection Roast setting. See convection roasting chart in your convection oven cookbook for recommended roasting times and temperatures.

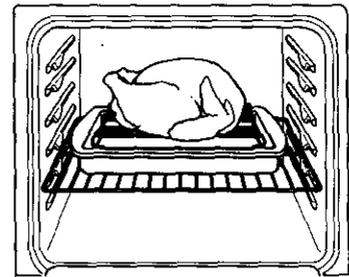


- **Use the convection roasting rack** on the broiler pan and grid (all included with your oven). (The convection roasting rack rests on the broiler pan and grid.) The long side of the rack should be parallel with the oven door for best heat distribution and airflow.

Positioning racks and pans

Place the oven racks where you need them before turning on the oven.

- **To move a rack**, pull it out to the stop position, raise the front edge and lift it out.
- **Be sure the rack(s) is level.**
- **Use pot holders or oven mitts** to protect your hands if rack(s) must be moved while the oven is hot.
- **For best performance**, cook on one rack.

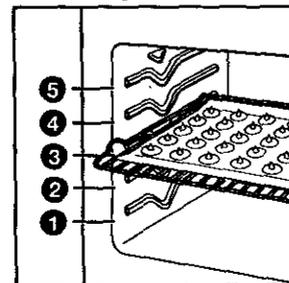

Place the rack so the top of the food will be centered in the oven.

continued on next page



Using Your Electric Convection Oven

- **When cooking with two racks**, arrange the racks on the 2nd and 4th rack guides. Two sheets of cookies may be baked if sheets are switched at approximately three quarters of the total bake time. Increase baking time, if necessary.
- **For best results** allow 2 inches (5 cm) of space around each pan and between pans and oven walls. Hot air must circulate around the pans in the oven for even heat to reach all parts of the oven. This results in better baking.

Where to place pans:

WHEN YOU HAVE	PLACE
1 pan	In center of the oven rack.
2 pans	Side by side or slightly staggered.
3 or 4 pans	In opposite corners on each oven rack. Stagger pans so no pan is directly over another.

Rack placement for specific foods:

FOOD	RACK POSITION
Frozen pies, large roasts, turkeys, angel food cakes	1st or 2nd rack guide from bottom
Bundt cakes, most quick breads, yeast breads, casseroles, meats	2nd rack guide from bottom
Cookies, biscuits, muffins, cakes, nonfrozen pies	2nd or 3rd rack guide from bottom

NOTE: For information on where to place your rack when broiling, see "Broiling guidelines" later in this section.

Bakeware choices


Baking performance is affected by the type of bakeware used. Use the bakeware size recommended in the recipe.

BAKEWARE TYPE	BEST USED FOR	GUIDELINES
Light colored aluminum	<ul style="list-style-type: none"> • Light golden crusts • Even browning 	<ul style="list-style-type: none"> • Use temperature and time recommended in recipe.
Dark aluminum and other bakeware with dark, dull, and/or non-stick finish	<ul style="list-style-type: none"> • Brown, crisp crusts 	<ul style="list-style-type: none"> • May reduce baking temperature 25°F (16°C). • Use suggested baking time. • Use temperature and time recommended in recipe for pies, breads, and casseroles. • Place rack in center of oven.
Ovenproof glassware, ceramic glass, or ceramic	<ul style="list-style-type: none"> • Brown, crisp crusts 	<ul style="list-style-type: none"> • May reduce baking temperature 25°F (16°C).
Insulated cookie sheets or baking pans	<ul style="list-style-type: none"> • Little or no bottom browning 	<ul style="list-style-type: none"> • Place in the bottom third of oven. • May need to increase baking time.
Stainless steel	<ul style="list-style-type: none"> • Light, golden crusts • Uneven browning 	<ul style="list-style-type: none"> • May need to increase baking time.
Stoneware	<ul style="list-style-type: none"> • Crisp crusts 	<ul style="list-style-type: none"> • Follow manufacturer's instructions.



Using aluminum foil


- Do not line the oven bottom with any type of foil, liners, or cookware. Permanent damage will occur to the oven bottom finish.

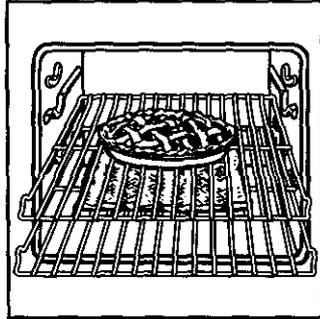

- Do not block the oven bottom vents.

- Do not cover the entire rack with aluminum foil. Doing so will reduce air circulation and overall oven performance.
- To catch spillovers from pies or casseroles place foil on the oven rack below. Foil should be turned up at edges and be at least 1 inch (2.5 cm) larger than dish.
- Place tent-shaped foil loosely over meat or poultry to slow down surface browning for long term roasting. Remove foil for the last 30 minutes.
- Use narrow strips of foil to shield piecrust edges if browning too quickly.

 Adjusting oven temperature



Although your new oven is properly adjusted to provide accurate temperatures, it may cook faster or slower than your old oven.

If, after using the oven for a period of time, you are not satisfied with the baking/roasting results, you can change the offset temperature by following the steps below. The control will "remember" the selected offset even after the power has been interrupted or lost.

NOTE: DO NOT measure oven temperature with a thermometer. Opening the oven door will lower the oven temperature and give you an inaccurate reading. Also, the thermometer temperature reading will change as your oven cycles.

1. Press and hold BAKE for 5 seconds.

PRESS



Hold for
5 seconds

Release the pad when a number and CAL appear on the temperature display and you hear a tone.

2. Set new offset temperature.

PRESS



OR



You can set the offset temperature adjustment as low as -35°F (-21°C) or as high as +35°F (21°C). Each time you press BAKE, the displayed temperature will increase by 5°F (3°C). Each time you press BROIL, the displayed temperature will decrease by 5°F (3°C). (To determine the amount of adjustment needed, see the chart later in this section.)

NOTE: If there is no "F" after the temperature, you are in the Celsius mode.

3. Enter the adjustment.

PRESS



NOTE: If you press LOWER OVEN CANCEL instead of START, the offset temperature will stay the same.

continued on next page



Using Your Electric Convection Oven


How to determine the amount of adjustment needed

The following chart tells you how much to adjust the offset temperature to get the desired cooking results. You can determine cooking results by amount of browning, moistness, and rising times for baked foods.

TO COOK FOOD ...	ADJUST BY THIS NUMBER OF DEGREES
A little more	+ 5°F to +10°F (+3°C to +6°C)
Moderately more	+15°F to +20°F (+8°C to +11°C)
Much more	+25°F to +35°F (+14°C to +19°C)
A little less	-5°F to -10°F (-3°C to -6°C)
Moderately less	-15°F to -20°F (-8°C to -11°C)
Much less	-25°F to -35°F (-14°C to -19°C)

Using the temperature probe

 The Temperature Probe is the most accurate guide to the degree of doneness of meat. Use it when baking, roasting any type of meat or poultry, or cooking casseroles with liquid.




NOTES:

- Do not use the Temperature Probe when broiling, convection broiling, dehydrating, or raising bread.
- Unplug the Temperature Probe before self-cleaning the oven.

1. Insert probe into food.

Insert the probe into the center of the thickest portion of meat or into the inner thigh or breast of poultry, away from fat or bone.

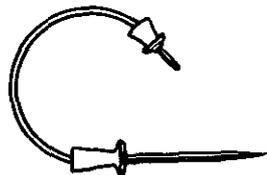

2. Put food in oven.

Place meat on the convection roasting rack, place rack on broiler pan and grid, and place pan in the center of the oven.

3. Connect probe to oven.

Locate the Temperature Probe jack on the right side of the oven wall. Insert plug into jack. (Keep the top of the probe as far as possible from the heat source.)



4. Close oven door.

5. Set temperature (optional).

PRESS



Do this step if you want to set an internal food temperature (from 130°F [54°C] to 190°F [88°C]) other than 160°F (72°C).

NOTE: See a reliable cookbook or your convection oven cookbook for internal food temperature recommendations.

6. Choose cook setting:

- BAKE,
- CONVECTION BAKE, or
- CONVECTION ROAST.

PRESS



(example for Bake)

NOTE: If you press BROIL, CONVECTION BROIL, or CLEAN pads the display will show "pull prb out."



7. Set temperature (optional).

PRESS



Do this step if you want to set an oven temperature other than the one displayed.

NOTE: See a reliable cookbook or your convection oven cookbook for oven temperature recommendations.

8. Start oven.

PRESS



NOTES:

- **If you do not choose** a cook setting and press **START**, the oven will default to bake at 350°F (177°C) and start. If you want to cook with another setting or at another temperature, do Steps 6 and 7 and press **START**.
- **The temperature display** will show the set oven temperature throughout temperature probe cooking.
- **After the food temperature** reaches 130°F (54°C), the probe display will show the actual food temperature at each 5°F (3°C) increase and stop at the set temperature. Four tones will sound and "End" will show when food reaches the set temperature. The oven then shuts off.
- **If you want to change** the probe temperature after cooking has begun:
 - Unplug the probe, then plug it back in. You will be prompted for a new probe temperature. Next, repeat Steps 4, 5, and 8 in that order. You may also change the oven temperature at this point by pressing the desired cook setting pad again.

OR

- You may change the cook setting at this point by pressing the desired cook setting pad again.

⚠ WARNING



Burn Hazard

Use an oven mitt to remove temperature probe.

Do not touch broil element.

Failure to follow these instructions can result in burns.

9. After cooking, unplug probe.

The probe symbol will remain lit until you unplug the Temperature Probe.

10. Remove food from oven.

(This prevents overcooking.)

11. Clean probe.

Wash with a soapy sponge and dry thoroughly. Use a plastic scouring pad to remove cooked-on foods. You can also clean the probe in a dishwasher.



Using CONVECT FULL MEAL



CONVECT FULL MEAL lets you choose from among ten preset oven convection cooking cycles, all using the convection fan. These cycles store commonly used cooking times, cooking temperatures, and probe temperature settings. CONVECT FULL MEAL saves you time by limiting the number of pads you have to press when cooking at a favorite setting. CONVECT FULL MEAL also lets you set your own favorite cycle (either convection or nonconvection).

1. Place food in cold oven.

If you need the Temperature Probe for your cycle (settings 6 to 0 in the "Convection full meal chart" later in this section), insert probe into food. Place food in oven and plug probe into jack.

2. Press CONVECT FULL MEAL pad.

PRESS



3. Press desired Number pad.

PRESS



Use the "Convection full meal chart" later in this section as your guide for selecting a cycle.

NOTES:

- You can change the Convection full meal cycle any time before pressing the Start pad by repeating Step 3.
- You can program your own setting, which you can then select in the future by pressing just CONVECT FULL MEAL and START pads. (See "To program your own setting" later in this section for more information.)

4. Start oven.

PRESS



5. When the Convection Full Meal cycle is done:

Four tones will sound, and the display will show "End." (Unless they have been disabled) Four reminder tones will sound every minute until you open the door, remove the probe, or press LOWER OVEN CANCEL.



Convect full meal chart

SETTING NUMBER	CONVECTION CYCLE	oven temp	TIME or PROBE TEMP	FOOD OR MEAL
1	Conv. Bake	325°F (163°C)	1 hr	Meal#1: Spinach and ricotta stuffed meat loaf, Baked potatoes, Fall apple cake
2	Conv. Roast	325°F (163°C)	1½ hrs	Meal#2: Pesto stuffed turkey breast, Caramel-sweet potato casserole, Rhubarb-pineapple crisp
3	Conv. Roast	350°F (177°C)	40 min	Meal#3: Pork chops with currant-nut stuffing, Cherry cobbler
4	Conv. Bake	375°F (191°C)	45 min	Meal#4: Herb and pecan fried chicken, Crispy potato wedges, Apple-sauce rhubarb muffins
5	Conv. Bake	425°F (218°C)	20 min	Meal#5: Spicy red snapper, Gruyere pecan biscuits
6	Conv. Roast	325°F (163°C)	140°F (60°C)	Beef, rare
7	Conv. Roast	325°F (163°C)	155°F (68°C)	Beef, medium Pork
8	Conv. Roast	325°F (163°C)	165°F (74°C)	Beef, well done
9	Conv. Roast	300°F (149°C)	135°F (56°C)	Ham, fully cooked
0	Conv. Bake	325°F (163°C)	160°F (71°C)	Casseroles

NOTE: For the recipes for Meals #1 – #5 see the cookbook that comes with your oven.

To program your own setting:

1. Press CONVECT FULL MEAL.
2. Press the Command Pad to the cook setting you want (for example, BAKE).
3. Enter the temperature and cook time you want. (The default is Bake at 170°F (75°C) for 2 hours.) Entering a cook time of 0 minutes lets you do untimed cooking.
4. To save only, press CONVECT FULL MEAL.

To cook with this setting immediately and save it, press START.

When programming your own setting:

1. Start with meat or main dish items (times are more critical with these items).
2. Choose baked goods with bake temperatures similar to those of meat or main dish items. Convection baking time of +/- 10 to 15 minutes and temperatures of +/- 25 to 50 degrees are acceptable.
3. Choose vegetables and fruits last.



Using EASY CONVECT™ CONVERSION



EASY CONVECT Conversion lets you convection cook without entering convection cook temperatures and times. Simply enter the standard cook temperature and time for the food to be cooked. The oven will reduce the temperature, or the temperature and time, for convection cooking. (Convection temperatures and times are not as long because the heated air is circulated in the oven cavity for quicker cooking.)

NOTE: The converted temperatures and times are not precise because the food categories you choose from are general. (See "EASY CONVECT Conversion setting chart" later in this section for which foods you can cook in each category.) To ensure proper cooking, the oven will prompt you to check food at the end of cook time. If food needs more cooking, the oven will continue to cook. If food does not need more cooking, press LOWER OVEN CANCEL.

⚠ WARNING

Food Poisoning Hazard

Do not let food sit in oven more than one hour before or after cooking.

Doing so can result in food poisoning or sickness.

1. Place food in oven.

NOTE: For Baked Goods and Other Foods, place food in the oven after the oven has been preheated.

2. Press one of three EASY CONVECT CONVERSION pads.

 
Example for Meats:

PRESS



3. Enter standard cook temperature.

PRESS



4. Enter standard cook time.

PRESS



NOTE: To delay convection cooking, after Step 4, press STOP TIME and enter the desired stop time. Cooking will start at the time equal to the stop time less the cook time. (Example: A cook time of 1 hour and a stop time of 4:00 would give you a start time of 3:00.)

5. Start oven.

PRESS



NOTES:

- The actual temperature reduction and time savings are different for each food category and oven type.
- For Baked Goods and Other Foods, place food in the oven after the oven has been preheated.

6. At end of cook time (nondelayed cooking):

7. Open door and check food (nondelayed cooking).

If you want to continue cooking, close door and the oven will continue cooking. If you do not want to continue cooking, press LOWER OVEN CANCEL.

8. When stop time is reached (delayed cooking only):

Four tones will sound, and the display will show "End." Four reminder tones will sound (unless they have been disabled) every minute until you open the door or press LOWER OVEN CANCEL.




Using EASY CONVECT™ CONVERSION (cont)

EASY CONVECT CONVERSION setting chart

EASY CONVECT SETTING	FOODS YOU CAN COOK WITH THIS SETTING
Baked Goods	Cakes: layer, angel food Breads: quick and yeast Biscuits and cookies Casseroles, including frozen entrees and soufflés Fish
Meats	Chicken: whole and pieces Roasts: pork, beef, and ham Meat loaf Baked potatoes NOTE: Turkey or large poultry are not included because their cooking times vary.
Other Foods	Convenience foods: French fries, nuggets, fish sticks, pizza Pies: fruit and custard

 Broiling



NOTE: Preheating is not necessary when broiling.

1. Position rack.

See "Broiling rack positions" in the "Broiling tips" section for recommended rack positions.


NOTES:

- **Before turning oven on** position oven rack(s) in desired location.
- **Be sure** the rack(s) is level.
- **Use pot holders or oven mitts** to protect hands if rack(s) must be moved while oven is hot.
- **Do not let** pot holder or oven mitt touch hot broil element.

NOTE: See the "Broiling tips" section for additional broiling tips.

2. Put food in oven.

Place food on grid in broiler pan and place in center of the oven rack.

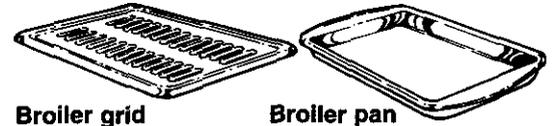

Broiler grid

Broiler pan

NOTES:

- **Place food** about 3 inches (8 cm) or more from the broil element.
- **To ensure adequate grease drainage**, do not use cookie sheets or similar pans for broiling.
- **If foil is used** to cover broiler grid, cut slits in foil to allow grease to drain away.

3. Close door.

NOTE: Do not keep the door open as on other electric ovens. Unlike other electric ovens, the broil element will only stay on with the door closed. This gives you the high heat you need for broiling. However, if you leave the door open, the broil element will go off.

continued on next page



Using Your Electric Convection Oven

4. Press BROIL.

Once for MAXI BROIL

PRESS



OR

Twice for ECONO BROIL

PRESS



5. Set temperature (optional).

PRESS



Do this step if you want to use variable temperature broiling

6. Start oven.

PRESS



NOTE: If you want to change the broiling temperature after broiling has begun, repeat Steps 4, 5, and 6.

7. When broiling is done, turn off oven.

PRESS




Variable temperature broiling

- If food is cooking too fast or you want the food to broil slower from the start, set the broil temperature between 170°F (77°C) and 325°F (163°C). The lower temperature will slow the cooking.

- Thicker and unevenly shaped cuts of fish, chicken and other meats may cook better if you use lower broiling temperatures when cooking to well-done.

Convection broiling

Use this setting when broiling thick cuts of meat.

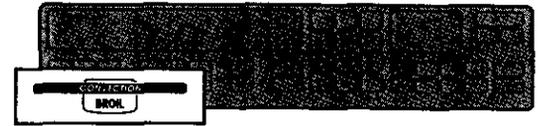

1. Position rack.

See "Broiling rack positions" in the "Broiling tips" section for recommended rack positions.

2. Close door.

NOTE: Do not try to convection broil with the door open. The fan and elements will not operate.

3. Choose CONVECTION BROIL setting.

PRESS



4. Set temperature (optional).

PRESS



Do this step if you want to set a temperature (up to 500°F [260°C]) other than 450°F (232°C).

NOTE: See your convection oven cookbook for temperature recommendations.

5. Preheat oven.

NOTE: If you want to change the convection broiling temperature after broiling has begun, repeat Steps 3, 4, and 5.

PRESS





6. Put food in oven.

Place food on grid in broiler pan and place in center of the oven rack. Turn the pan so the long side is parallel to the oven door for the most even heat and the best airflow.

NOTE: If you want to change the convection broiling temperature after broiling has begun, repeat Steps 3, 4, and 5.

7. When broiling is over, turn off oven.

PRESS


**LOWER OVEN
CANCEL**

Broiling guidelines

- Use only the broiler pan and grid provided. They are designed to drain extra juices from the cooking surface. This drainage helps prevent spatter and smoke.

- Do not cover grid with foil, in order to allow juices to drain.
- Trim excess fat to reduce spattering. Slit the fat on the edges to prevent curling.
- Use tongs to turn meat to avoid losing juices.
- Pull out oven rack to stop position before turning or removing food.
- After broiling, remove the pan from the oven when removing the food. Drippings will bake on the pan if left in the heated oven, making cleaning more difficult.
- For easier cleaning, line the bottom of the pan with aluminum foil. Clean the pan and grid as soon as possible after each use.

Recommended rack positions are numbered

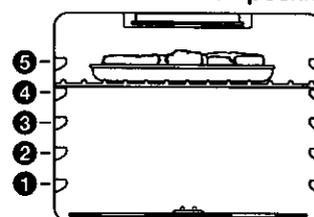

from the bottom (1) to the top (5). For best results, place food 3 inches (7.5 cm) or more from the broil element.


MEAT	RACK POSITION	TEMPERATURE	APPROXIMATE TOTAL TIME (MINUTES)
Steak, 1" (2.54 cm) thick	4	500°F (260° C)	
• rare			16
• medium			21
• well-done		25	
Steak, 1½" (3.815 cm) thick	4	500°F (260° C)	
• rare			23
• medium			28
Ground meat patties or steaks, ½" (1.27 cm) thick or less	5	500°F (260° C)	8-12
• medium			
Lamb chops, 1" (2.54 cm) thick	4	400°F (204° C)	18-20
Ham slice, ½" (1.27 cm) thick	4	500°F (260° C)	10-12
1" (2.54 cm) thick	4	500°F (260° C)	20-22
Pork chops, 1" (2.54 cm) thick	4	450°F (232° C)	25-28
Frankfurters	4	500°F (260° C)	8
Chicken pieces, bone in	3	500°F (260° C)	32
Fish, ½" (1.27 cm) thick	3	350°F (177° C)	20
1" (2.54 cm) thick	3	350°F (177° C)	20-22
Calves liver, ½" (1.27 cm) thick	4	350°F (177° C)	10-12

NOTE: Times are guidelines only and may need to be adjusted for individual tastes.



Using Your Electric Convection Oven

Timed cooking

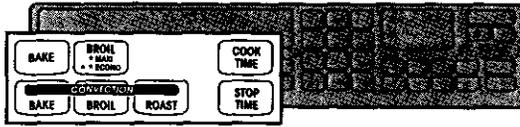

The electronic clock/oven control will turn the oven on and off at times you set, even when you are not around.

Delayed time cooking is ideal for foods which do not require a preheated oven, such as meats and casseroles. **Do not use delayed time cooking for cakes, cookies, etc. – they will not rise properly. Before using timed cooking, make sure the clock is set to the correct time of day.** (See the "Setting the clock" section.)

! WARNING

Food Poisoning Hazard

Do not let food sit in oven more than one hour before or after cooking.

Doing so can result in food poisoning or sickness.

To start now and stop automatically:

1. Prepare oven.

Position the oven rack(s) properly and place the food in the oven. For correct rack placement, see "Rack positions" in the "Baking" section and the "Rack placement" chart in the "Cooking tips" section.

2. Choose setting:

 
PRESS



- BAKE, or
- CONVECTION BAKE,
- CONVECTION ROAST
- BROIL, or
- CONVECTION BROIL

3. Set temperature (optional).

PRESS



Do this step if you want to set a temperature other than the one displayed.

NOTE: See a reliable cookbook for temperature recommendations.

4. Press COOK TIME.

PRESS



5. Set cook time.

PRESS



6. Start oven.

PRESS



Vertical bar on display will get shorter as cook time counts down.

7. When baking/roasting is done:

"End" will show on the display. Four tones will sound, followed by four reminder tones (unless they have been disabled) every minute until you open the door, or press LOWER OVEN CANCEL.



To delay start and stop automatically:

1. Prepare oven.

Position the oven rack(s) properly and place the food in the oven. For correct rack placement, see "Rack positions" in the "Baking" section and the "Rack placement" chart in the "Cooking tips" section.

2. Choose setting:

PRESS



- BAKE,
- CONVECTION BAKE,
- CONVECTION ROAST,
- BROIL, or
- CONVECTION BROIL.

3. Set temperature (optional).

Do this step if you want to set a temperature other than the one displayed.

PRESS



NOTE: See a reliable cookbook for temperature recommendations.

4. Press COOK TIME.

PRESS



5. Set cook time.

PRESS



6. Press STOP TIME.

PRESS



7. Set stop time.

PRESS



8. Press START.

PRESS



When start time is reached, the vertical bar on display will get shorter as cook time counts down.

9. When baking/roasting is done:

"End" will show on the display. Four tones will sound, followed by four reminder tones (unless they have been disabled) every minute until you open the door, or press LOWER OVEN CANCEL.

To cancel timed cooking settings:

PRESS



continued on next page



7. Start oven.

PRESS



NOTE: If you want to change the dehydrating temperature after dehydrating has begun, repeat Steps 5, 6, and 7.

8. When dehydrating is done, turn off oven.

PRESS



Proofing (raising) bread

You can use your convection oven to proof (raise) bread dough. **First proofing:** Place the dough in a lightly greased bowl and loosely cover with waxed paper coated with shortening.

1. Put bowl on Rack 2.

Place the broiler pan on Rack 1 and add two cups of boiling water. Close oven door.

2. Choose BAKED GOODS.

PRESS



Hold for
5 seconds

3. Display defaults to 100°F (38°C).

4. Start oven.

PRESS



Let dough rise until nearly doubled in size. Proofing time may be faster and will vary by the type and quantity of dough. Check dough after 20-25 minutes.

5. When proofing is done, turn off oven.

PRESS




NOTE: If you do not turn off oven after proofing bread, the oven will keep running until you press LOWER OVEN CANCEL.

Second Proofing: Shape the dough and place in baking pan(s). Cover loosely with plastic wrap coated with cooking spray. Put pan(s) on Rack 2. Place the broiler pan on Rack 1 and add 2 cups of boiling water. Close the oven door. Follow Steps 2-4 for first proofing. When proofing is done, remove baking pan(s) and the broiler pan from oven. Reset oven to preheat for baking bread. Before baking, remove plastic wrap from baking pans.

The oven vent

Hot air and moisture escape from the lower oven through a vent. This vent is above the oven door. It is needed for air circulation. **Do not block the vent(s).** Poor baking/roasting can result.

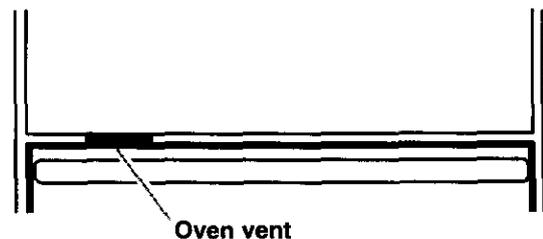



Dehydrating

You can use your convection oven to dehydrate a variety of foods.



NOTES:

- To learn detailed information about dehydration, refer to a book written specifically about dehydrating and/or preserving foods.
- If you do not turn off oven after dehydrating, the oven will keep running until you press LOWER OVEN CANCEL.

1. Prepare food.

Prepare foods as recommended in recipe.

2. Arrange food on drying racks.

Racks are not included with oven. See below to order a dehydration kit† which includes racks and a spacer or contact a local store handling specialty cookware.


3. Place drying racks in the oven to allow maximum air circulation around the racks.

NUMBER OF RACKS	USE OVEN RACK POSITION
1 rack	3
2 racks	2 and 4
3 racks	1, 3, and 5

4. Position door.

Attach the dehydration spacer*, which is specially designed to depress the oven light plunger and maintain the operation of the fan during dehydration.

The spacer provides a 1-inch (2.54) gap between the oven frame and the oven door allowing moisture to escape.

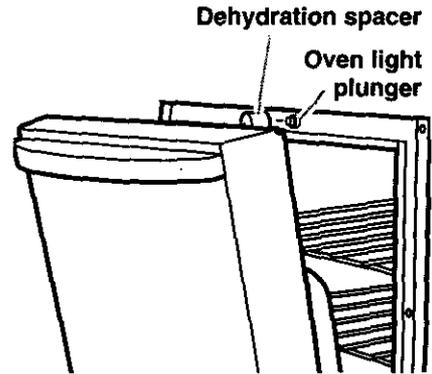

* The dehydration spacer (Part No. 814166) or the dehydration kit which includes racks and a spacer (Part No. 4395974) can be ordered from your dealer, or by calling 1-800-422-1230 and following the instructions and telephone prompts you hear.

5. Press and hold CONVECTION BAKE for 5 seconds.

PRESS



Hold for 5 seconds


6. Set temperature (optional).

PRESS




Do this step if you want to set a temperature (from 100°F [38°C] to 200°F [95°C]) other than 140°F (60°C).

Using the Self-Cleaning Cycle

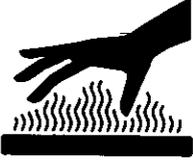	!WARNING
	<p>Burn Hazard</p> <p>Do not touch the oven during the Self-Cleaning cycle. Keep children away from oven during Self-Cleaning cycle. Do not use commercial oven cleaners in your oven. Failure to follow these instructions can result in burns, or illness from inhaling dangerous fumes.</p>

Before you start

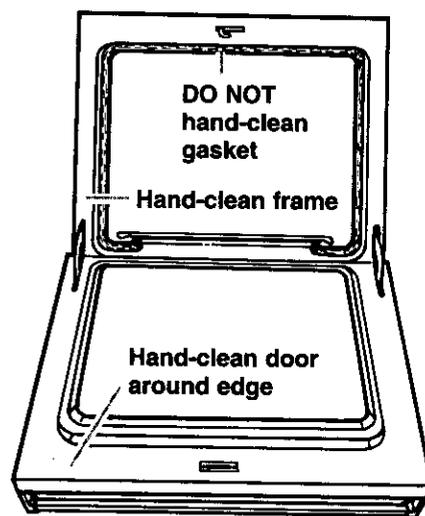

Before you start the Self-Cleaning cycle, make sure you:

NOTE: DO NOT clean, move, or bend the gasket. Poor cleaning, baking, and roasting may result.

- **Hand-clean** the areas shown. They do not get hot enough during the Self-Cleaning cycle for soil to burn away. Use hot water and detergent or a soapy, steel-wool pad for cleaning.
- **Do not** let water, cleaner, etc., enter slots on door and frame.
- **Remove** the broiler pan and grid and any cookware/bakeware being stored in the oven.

- **Wipe out** any loose soil or grease. This will help reduce smoke during the Self-Cleaning cycle.
- **Wipe up** food spills containing sugar and/or milk as soon as possible after the oven cools down. When sugar is heated to a high temperature in the Self-Cleaning cycle, the high temperature can cause the sugar to burn and react with the porcelain. This can cause staining and etching, pitting or faint white spots.
- **Remove** the oven racks from the oven if you want them to remain shiny. You can clean the oven racks in the Self-Cleaning cycle, but they will become harder to slide. (See the "Cleaning chart" in the "Caring for Your Electric Convection Oven" section.) If you clean the racks in the Self-Cleaning cycle, place them on the 2nd and 4th rack guides. (The guides are counted from bottom to top.)
- **Heat and odors are normal** during the Self-Cleaning cycle. Keep the kitchen well ventilated by opening a window or by turning on a vent hood or other kitchen vent during the cycle.

IMPORTANT: The health of some birds is extremely sensitive to the fumes given off during the Self-Cleaning cycle. Move birds to another closed and well ventilated room.



NOTES:

- Clean the oven before it gets heavily soiled. Cleaning a very soiled oven takes longer and results in more smoke than usual.
- Do not block the vent during the Self-Cleaning cycle. Air must move freely for best cleaning results.
- Do not leave any foil in the oven during the Self-Cleaning cycle. Foil could burn or melt and damage the oven surface.
- The oven light will not work during the Self-Cleaning cycle.

- Use 2½ hours for light soil.
- Use 3½ to 4½ hours for moderate to heavy soil.

Before setting the controls

- Make sure clock is set to correct time of day. The clock cannot be set during the Self-Cleaning cycle.
- Make sure the oven door is completely closed.

Setting the controls

 


To start cleaning immediately:

1. Press CLEAN.

A 3½-hour Self-Cleaning cycle will be set. (The first 3 hours are for cleaning, the last 30 minutes are for cooling.)

PRESS



2. Set cleaning time (optional).

If you want a Self-Cleaning cycle other than 3½ hours, press the desired Number pads for the new time from 2½ to 4½ hours.

PRESS



3. Start oven.

PRESS



NOTE: The door will lock right after you press START.

4. After the Self-Cleaning cycle ends:

YOU SEE



To delay cleaning start time:

1. Press CLEAN.

A 3½-hour Self-Cleaning cycle will be set. (The first 3 hours are for cleaning, the last 30 minutes are for cooling.)

PRESS



2. Set cleaning time (optional).

If you want a Self-Cleaning cycle other than 3½ hours, press the desired Number pads for the new time from 2½ to 4½ hours.

PRESS



- Use 2½ hours for light soil.
- Use 3½ to 4½ hours for moderate to heavy soil.

continued on next page



Using the Self-Cleaning Cycle

3. Press STOP TIME.

PRESS



4. Set Stop time.

Example for 7:00:

PRESS



5. Complete entry.

PRESS



NOTES:

- The door will lock and oven light will go out (if on) right after you press START.

6. After the Self-Cleaning cycle ends:

YOU SEE



To stop the Self-Cleaning cycle at any time:

PRESS



For best cleaning results


- After the oven cools to room temperature, wipe up any residue or ash with a damp cloth or sponge. If any spots remain, clean with a mild abrasive cleanser or cleaning sponge.
- Clean the oven before it gets heavily soiled. Cleaning a very soiled oven takes longer and results in more smoke than usual.
- If the Self-Cleaning cycle does not get the oven as clean as you expected, the cycle may not have been set long enough or you may not have prepared the oven properly. Set the Self-Cleaning cycle longer the next time and hand-clean areas noted in "Before you start" earlier in this section.

How the cycle works

The Self-Cleaning cycle uses very high heat to burn away soil and grease. During the cycle, the oven gets much hotter than it does for normal baking or broiling. This high heat breaks up the soil or grease and burns it away.

Your oven is preset for a 3½-hour Self-Cleaning cycle. However, you can adjust the cycle time to the amount of soil in your oven. You can set the cycle anywhere between 2½ and 4½ hours. (See "Setting the controls" earlier in this section.)

The graph at the right is representative of a normal, 3½-hour Self-Cleaning cycle. Note that the heating stops after 3 hours, but it takes longer for the oven to cool enough to unlock.

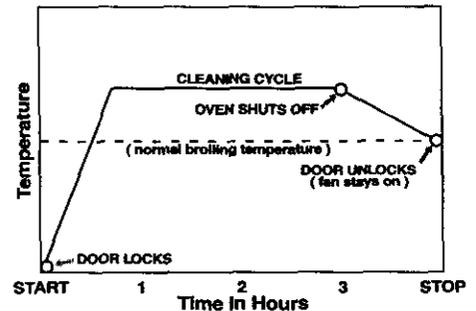

Caring for Your Electric Convection Oven



⚠ WARNING

Explosion Hazard

Do not store flammable materials such as gasoline near this appliance.

Doing so can result in death, explosion, or fire.

Cleaning Chart

Before cleaning, always make sure all controls are off and the range is cool. Refer to instructions on all cleaning products before using them to clean your range.

PART	CLEANING METHOD	SPECIAL INSTRUCTIONS
Control Panel	<ul style="list-style-type: none"> • Soap and water • Spray glass cleaner 	<ul style="list-style-type: none"> • Wash, rinse and dry with soft cloth. • Do not use steel wool or abrasive cleansers. They may damage the finish. • Apply spray cleaner to paper towel; do not spray directly on panel. <p>NOTE: Set the Control Lock to prevent the oven from accidentally turning on when you are cleaning the panel. (See "Using the control lock" in the "Using Your Oven" section.)</p>
Exterior Surfaces (excluding control panel and oven door glass)	<ul style="list-style-type: none"> • Soap and water • Mild liquid cleaner • Spray glass cleaner • Non-abrasive plastic scrubbing pad 	<ul style="list-style-type: none"> • DO NOT use abrasive or harsh cleaners like chlorine bleach, ammonia or oven cleaners. • Wash, rinse and dry with soft cloth. • Gently clean around the model and serial plate; too much scrubbing could remove the numbers.
Stainless steel surfaces		<ul style="list-style-type: none"> • DO NOT use steel wool or soap-filled scouring pads. • Rub in the direction of the grain line to avoid marring the surface. • Always wipe dry to avoid water marks. • If commercial cleaners are used, follow label directions. If product contains chlorine (bleach), wipe thoroughly with clean water and dry with a soft lint-free cloth. Chlorine is a corrosive substance.
Routine cleaning and fingerprints	<ul style="list-style-type: none"> • Liquid detergent/soap and water, or all-purpose cleaner 	<ul style="list-style-type: none"> • Wipe with damp cloth or sponge, then wipe with clean water and dry.

continued on next page 31



Caring for Your Electric Convection Oven

PART	CLEANING METHOD	SPECIAL INSTRUCTIONS
Stainless steel surfaces (cont.) Stubborn stains and baked-on residue Hard water spots	<ul style="list-style-type: none"> Mildly abrasive cleanser or stainless-steel cleaners Vinegar 	<ul style="list-style-type: none"> To avoid marring the surface, rub in the direction of grain lines with a damp cloth or sponge and cleanser. Wipe thoroughly with clean water. Repeat if necessary. Swab or wipe with cloth. Wipe with clean water and dry.
Oven door glass	<ul style="list-style-type: none"> Soap and water Non-abrasive plastic scrubbing pad Spray glass cleaner 	<ul style="list-style-type: none"> Wash, rinse and dry with soft cloth. Wipe with paper towel.
Oven cavity Food spills containing sugar and/or milk All other spills	<ul style="list-style-type: none"> Soap and water Self-cleaning cycle 	<ul style="list-style-type: none"> When oven cools, wash, rinse and dry with soft cloth or sponge. See the "Using the self-cleaning cycle" section.
Oven racks	<ul style="list-style-type: none"> Soap and water Steel wool pad Self-cleaning cycle 	<ul style="list-style-type: none"> Wash, rinse and dry. Place on 2nd and 4th rack guides. Racks will discolor and become harder to slide. After cleaning, apply vegetable oil to rack guides for easier sliding.
Broiler pan and grid	<ul style="list-style-type: none"> Soap and water Steel wool pad Dishwasher Solution of 1/2 cup (125 mL) ammonia to 1 gallon (3.78 L) water Mild abrasive cleanser or commercial oven cleaner 	<ul style="list-style-type: none"> Wash, rinse and dry. Soak for 20 minutes, then scrub with plastic scrubbing pad. DO NOT clean the pan and grid in the self-cleaning cycle.

Removing the oven door

For normal use of your oven, you do not need to remove the door. However, you can remove the door by following the instructions in this section.

The oven door is heavy. Use both hands to remove and replace the door. Do not lift and carry the door by the handle. To remove and replace the door you may need help.


To remove:

1. Open door all the way.


NOTE: Two 5/32" (4 mm) Allen wrenches or two nails of similar diameter may be used if factory furnished door removal pins have been misplaced. Be careful not to damage porcelain finish.



2. Insert small end of a door removal pin into each door hinge.

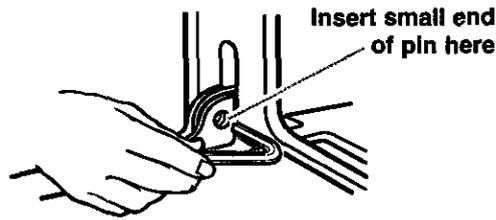


3. Grasp under handle and gently close door as far as it will shut. Pull door out at bottom to remove.

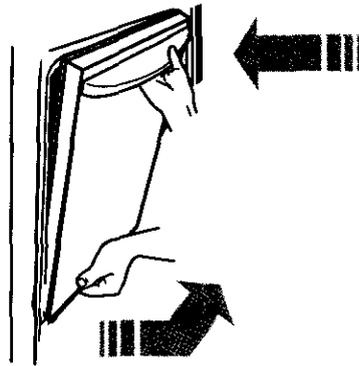

4. Set door aside on protected surface.

To replace:

1. Fit hinge arms into slots in frame. Push in at lower corners to insure that hinge arms are fully engaged.

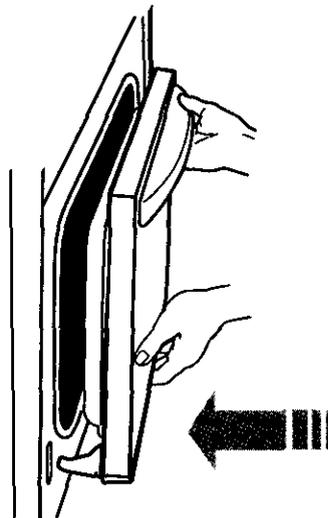

2. Open the door all the way.
3. Remove the door removal pins from each hole.
4. Close the door.

NOTE: If the door does not operate freely, you have not installed it properly. Repeat Steps 1 to 4.

Using and replacing the oven lights


The oven lights will come on when you open the oven door. To turn the lights on when the oven door is closed, press **OVEN LIGHT**  on the control panel. Press  again to turn off the lights.

NOTES:

- Make sure the oven is cool before replacing the light bulb.
- The oven lights will not work during the Self-Cleaning cycle.

Replacing the oven light:

1. Unplug oven or disconnect power.
2. Remove glass light cover by grasping the front edge of cover and pulling it away from the side wall of the oven.

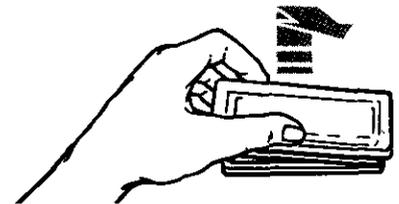

3. Remove the light bulb from its socket. Replace the bulb with another halogen bulb (12 volt, 5 watt maximum, available at most hardware stores).
4. Replace the light cover by snapping it back into wall.
5. Plug in oven or reconnect power.

Troubleshooting

Most cooking problems often are caused by little things you can find and fix without tools of any kind. Check the lists below and on the next page before calling for assistance or service. If you still need help, see "Requesting Assistance or Service" on page 36 or 37.

If nothing operates, check the following:

- Is the oven wired into a live circuit with the proper voltage? (See Installation Instructions.)
- Have you blown a household fuse or tripped a circuit breaker?

Other possible problems and their causes:

PROBLEM	CAUSE/SOLUTION
The oven will not operate	<ul style="list-style-type: none"> • You have not set the electronic control correctly. Refer to the section in this manual describing the function you are operating. • You have programmed a delayed start time. Wait for the start time to be reached or cancel and reset the control.
The Self-Cleaning cycle will not operate	<ul style="list-style-type: none"> • You have programmed a delayed start time. Wait for the start time to be reached or cancel and reset the control.
Display is blank	<ul style="list-style-type: none"> • You have set the display not to show the clock time. To see the clock time again, press and hold CLOCK SET/START for 5 seconds.
The oven temperature seems too low or too high	<ul style="list-style-type: none"> • Adjust the oven temperature control. (See "Adjusting the oven temperature control" section.)
Slow baking or roasting	<ul style="list-style-type: none"> • Increase baking or roasting time. • Increase temperature 25°F (14°C) • Preheat oven to selected temperature before placing food in when preheating is recommended. • Choose bakeware that will allow 2 inches (5 cm) of air space around all sides. • Open oven door to check food when timer signals shortest time suggested in recipe. • Oven peeking can make cooking times longer.
Baked items too brown on bottom	<ul style="list-style-type: none"> • Preheat oven to selected temperature before placing food in oven. • Choose bakeware that will allow 2 inches (5 cm) of air space around all sides. • Position rack higher in oven. • Decrease oven temperature 15° to 25°F (8° to 14°C).

PROBLEM	CAUSE/SOLUTION
Unevenly baked items	<ul style="list-style-type: none"> • Check that the oven is level. • Bake in center of oven with 2 inches (5 cm) of space around each pan. • Check to make sure batter is level in pan.
Crust edge browns before pie is done	<ul style="list-style-type: none"> • Shield edge with foil.
The display is showing "PF"	<ul style="list-style-type: none"> • There has been a power failure. Reset the clock.
A letter followed by a number shows on the display (for example "E3," "F1")	<ul style="list-style-type: none"> • Press LOWER OVEN CANCEL. If the code reappears, note the code and call for service.
The key pads do not operate	<ul style="list-style-type: none"> • The Control Lock has been set. Turn off the Control Lock by pressing and holding CONTROL LOCK (Number Pad 3) for 5 seconds. • The Sabbath mode has been set ("Sab" appears on the display). Turn off the Sabbath mode by pressing and holding Number Pad 6 for 5 seconds.

If none of these items is causing your problem, see "Requesting Assistance or Service".

Requesting Assistance or Service

Before calling for assistance or service, please check the "Troubleshooting Guide" section. It may save you the cost of a service call. If you still need help, follow these instructions.

If you need assistance or service in the U.S.A.:

Call the KitchenAid Consumer



Assistance Center toll free: 1-800-422-1230. Our consultants are available to assist you.

When calling:

Please know the purchase date, and the complete model and serial number of your appliance (see the "A Note to You" section). This information will help us to better respond to your request.

Our consultants provide assistance with:

- Features and specifications on our full line of appliances.
- Installation information.

- Use and maintenance procedures.
- Accessory and repair parts sales.
- Specialized customer assistance (Spanish speaking, hearing impaired, limited vision, etc.).
- Referrals to local dealers, service companies, and repair parts distributors.

KitchenAid designated service technicians are trained to fulfill the product warranty and provide after-warranty service, anywhere in the United States.

To locate the KitchenAid designated service company in your area, you can also look in your telephone directory Yellow Pages.

If you need replacement parts

If you need to order replacement parts, we recommend that you only use factory specified parts. These parts will fit right and work right, because they are made with the same precision used to build

every new KITCHENAID® appliance. To locate factory specified replacement parts in your area, call our Consumer Assistance Center telephone number or your nearest designated service center.

For further assistance

If you need further assistance, you can write to KitchenAid with any questions or concerns at:

KitchenAid Brand Home Appliances
Consumer Assistance Center
c/o Correspondence Dept.
2000 North M-63
Benton Harbor, MI 49022-2692

Please include a daytime phone number in your correspondence.



If you need assistance or service in Canada:

Call the KitchenAid Consumer



**Assistance Center toll free:
8:30 a.m. - 6 p.m. (EST) at
1-800-461-5681. Our consult-
ants are available to assist
you.**

When calling:

Please know the purchase date, and the complete model and serial number of your appliance (see the "A Note to You" section). This information will help us to better respond to your request.

Our consultants provide assistance with:

- Features and specifications on our full line of appliances.

If you need service:

Contact Inglis Limited Appliance Service from anywhere in Canada at **1-800-807-6777**.

- Accessory and repair parts sales.
- Specialized customer assistance (French speaking, hearing impaired, limited vision, etc.).
- Referrals to local dealers, service companies, and repair parts distributors.

KitchenAid designated service technicians are trained to fulfill the product warranty and provide after-warranty service, anywhere in Canada.

To locate the KitchenAid designated service company in your area, you can also look in your telephone directory Yellow Pages.

If you need replacement parts

If you need to order replacement parts, we recommend that you only use factory specified parts. These parts will fit right and work right, because they are made with the same precision used to build

every new KITCHENAID® appliance. To locate factory specified replacement parts in your area, call our Consumer Assistance Center telephone number or your nearest designated service center.

For further assistance

If you need further assistance, you can write to KitchenAid with any questions or concerns at:

Consumer Relations Department
KitchenAid Canada
1901 Minnesota Court
Mississauga, Ontario L5N3A7

Please include a daytime phone number in your correspondence.



KitchenAid®

Lower Electric Convection Oven

Warranty

LENGTH OF WARRANTY:	KITCHENAID WILL PAY FOR:	KITCHENAID WILL NOT PAY FOR:
ONE-YEAR FULL WARRANTY FROM DATE OF PURCHASE.	Replacement parts and repair labor costs to correct defects in materials or workmanship. Service must be provided by a KitchenAid designated servicing company.	A. Service calls to: <ol style="list-style-type: none"> 1. Correct the installation of the oven. 2. Instruct you how to use the oven. 3. Replace house fuses or correct house wiring. B. Repairs when oven is used in other than normal single family household use.
SECOND-THROUGH FIFTH-YEAR LIMITED WARRANTY FROM DATE OF PURCHASE.	Replacement parts for any oven electric element to correct defects in materials or workmanship. Replacement parts for solid state touch control system to correct defects in materials or workmanship.	C. Damage resulting from accident, alteration, misuse, abuse, acts of God, improper installation, or installation not in accordance with local electrical codes. D. Any labor costs during the limited warranties. E. Replacement parts or repair labor costs for units operated outside the United States and Canada. F. Pickup and delivery. This product is designed to be repaired in the home.
SECOND-THROUGH TENTH-YEAR LIMITED WARRANTY FROM DATE OF PURCHASE.	Replacement parts for the porcelain oven cavity/inner door if the part rusts through due to defects in materials or workmanship.	G. Repairs to parts or systems resulting from unauthorized modifications made to the appliance. H. In Canada, travel or transportation expenses for customers who reside in remote areas.

5/99

KITCHENAID AND KITCHENAID CANADA SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states or provinces do not allow the exclusion or limitation of incidental or consequential damages, so this exclusion or limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state or province to province.

Outside the United States and Canada, a different warranty may apply. For details, please contact your authorized KitchenAid dealer.

If you need service, first see the "Requesting Assistance or Service" section of this book. After checking "Requesting Assistance or Service," additional help can be found by calling our Consumer Assistance Center telephone number, **1-800-422-1230**, from anywhere in the U.S. For service in Canada, see the "Requesting Assistance or Service" section.