



VIDEO CAMCORDER

LIBRARY:
Received 11/02/99ccc
Copied _____
Entered _____
LIS _____
Received NPPDS
Scanned NOV 03 1999
Batch # _____

CPR 250

Owner's manual

Warranty Registration

It is important that you record your RCA Camcorder serial number and other information here, in case you need a complete description for any reason, such as theft. You will find the model and serial numbers on the bottom of the Camcorder. You will also find both numbers recorded on your registration form.

If your dealer did not give you a copy of your Camcorder's registration, contact him promptly and ask for it. If your Camcorder is not registered, we will not be able to contact you should there be a safety inspection, modification or product recall under applicable laws or regulations. Also, you must be able to show your registration or evidence of purchase date to receive warranty parts and service. *We suggest you attach your sales slip and warranty registration to this booklet and keep them in a safe place for future reference.*

RCA Warranty Registration		RCA	
Name: _____		Model No./Type: _____	
Address: _____		Serial Number (if applicable): _____	
City: _____ State: _____ Zip: _____		Date of Sale: _____	
Customer: _____		Month: _____ Day: _____ Year: _____	
Address: _____		City: _____ State: _____ Zip: _____	
RCA Consumer Electronics		DO NOT STAPLE	


Purchase Date _____

Dealer Name & Address _____

Model: CPR250 Serial Number: _____

Safety Precautions

Your Video Camcorder AC Adapter/Charger will operate on **120 volts, 60 Hz only** and has a polarized plug. Because one blade of the plug is wider than the other, the plug fits in the wall socket only one way. Do not defeat the safety feature of this plug. If you need an extension, use a polarized cord.

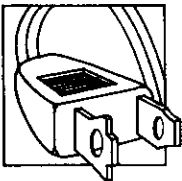

CAUTION: To prevent electric shock do not use the polarized plug on this Video Camcorder or AC Adapter/Charger with an extension cord, receptacle, or other outlet unless the blades can be fully inserted to prevent blade exposure.

MISE EN GARDE: Pour prévenir les chocs électriques, ne pas utiliser la fiche polarisée de cet appareil avec une rallonge, une prise de courant ou une autre sortie, à moins que les lames ne puissent être insérées à fond sans qu'aucune partie ne soit laissée à découvert.

CAUTION: To reduce the risk of electric shock, do not remove the cover or back. No user-serviceable parts are inside. If you spill liquid on the Camcorder disconnect the AC Adapter/Charger power cord to prevent possible fire or shock hazard and consult authorized service personnel. Moisture can damage internal parts. Refer all service to RCA Authorized Video Camera Servicenter or RCA Factory Service Branch personnel only.

CAUTION: Read "Important Safety Instructions for AC Adapter/Charger" on next page before use.

CAUTION: Maintain electrical safety. Powerline-operated equipment or accessories connected to this unit should bear the UL listing mark or CSA certification mark on the accessory itself and should not have been modified so as to defeat the safety features. This will help avoid any potential hazard from electric shock or fire. If in doubt, contact qualified service personnel.

WARNING: To prevent fire or shock hazard, do not expose Camcorder and AC Adapter/Charger to rain or moisture.

CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN			MISE EN GARDE RISQUE DE CHOC ELECTRIQUE NE PAS OUVRIR
---	---	---	--



The symbol of a lightning flash within a triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shocks.



An exclamation point within a triangle is intended to alert the user to the presence of important operating and maintenance (service) instructions in the literature accompanying the product.

IMPORTANT SAFETY INSTRUCTIONS FOR AC ADAPTER/CHARGER

- Before using AC adapter/charger, read all instructions and cautionary markings on (1) AC adapter/charger, (2) battery, and (3) product using battery.
- **CAUTION:** To reduce risk of injury, charge only rechargeable battery, type CB060/CB120. Other types of batteries may burst, causing personal injury and damage.
- Do not expose charger to moisture of any kind.
- Use of an attachment not recommended or sold by the battery charger manufacturer may result in risk of fire, electric shock, or injury to persons.
- To reduce risk of damage to electric plug and cord, pull by plug rather than cord when disconnecting charger.
- Make sure cord is located so that it will not be stepped on, tripped over, or otherwise subjected to damage or stress.
- Use of improper extension cord could result in a risk of fire and electric shock. If extension cord must be used, make sure that:
 - ① Pins on plug of extension cord are the same number, size, and shape as those of plug on charger.
 - ② Extension cord is properly wired and in good electrical condition; and
 - ③ Wire size below is met:

Minimum AWG size	Length of extension cord (feet)
18	Equal to or less than 100
16	Equal to or less than 150
- Do not operate charger with damaged cord or plug—replace them immediately.
- Do not operate charger if it has received a sharp blow, been dropped, or otherwise damaged in any way; take it to qualified serviceman.
- Do not disassemble charger; take it to an RCA Authorized Video Camera Servicenter or RCA Factory Service Company when service or repair is required. Incorrect reassembly may result in a risk of electric shock or fire.
- To reduce risk of electric shock, unplug charger from outlet before attempting any maintenance or cleaning.

Introduction

Congratulations on your choice of an RCA Camcorder. You have selected a precision-engineered product designed to give you years of performance and enjoyment.

Although your Camcorder is very simple to use, it is important that you read and carefully follow the instructions in this guide until you are completely familiar with the proper operating procedures. This manual is arranged in the order that we anticipate you will use it to operate your new Camcorder, and if you follow the instructions one step at a time, you should be able to use your Camcorder like a pro in about an hour. If you should experience a problem, always refer first to the Trouble Checks

on Page 24. In many cases, a simple solution is all that's needed; and it could save you a costly service call.

BE SURE TO SAVE THESE OPERATING INSTRUCTIONS

for future reference.

Should your Camcorder require service during the warranty period, refer to the back cover of this manual for a description of what RCA will do and instructions on how to request service.

Contents

FEATURES AND FUNCTIONS

What Your Camcorder Can Do For You	3
RCA VIDEO CASSETTES	3
PREPARATIONS FOR USE	
Unpacking Your Camcorder	4
Quick Operation Steps For Experienced Users	4
LOCATION AND USE OF CONTROLS	
Camcorder Operating Controls and Their Functions	5-8
BASIC OPERATION	
How to Power Your Camcorder	9
Using the Battery to Power Your Camcorder	9
Charging Your Battery	9
Battery Level Indicator	9
Using the AC Adapter/Charger	10
Using the Optional DC Car Cord	10
How to Record With Your Camcorder	11
Using Your Camcorder's Special Recording Features	11
Electronic Viewfinder (EVF)	12
Eyepiece Focus Control	12
Quick Review	12
EFV Status Display Graphics	12
Battery Level Indicator	12
Tape Counter and Display	13
Memory Stop Feature	13
Setting and Recording the Date	13
<i>NORMAL/SHUTTER</i> Switch and <i>SHUTTER SPEED</i> Button	14
<i>AUTO IRIS</i> Control	14
Color Balance	14
Focusing Your Camcorder (Auto, Manual and Macro)	15
Power Zoom Buttons	15
How to Play Back Tapes With Your Camcorder	16
Connection to a Standard TV	16
Connection to a Video Monitor	17
Connection to a VCR	17
Playing Tapes Through the Viewfinder	18
Playing Tapes Through a TV or Video Monitor	18
HOW TO COPY YOUR TAPES ON A HOME VCR	19
HOW TO RECORD FROM YOUR TV/MONITOR ON YOUR CAMCORDER	19
MAKING BETTER VIDEOS/TRAVELING TIPS/TAPE TIPS	20
CARE AND MAINTENANCE	21
CAMCORDER ACCESSORIES	
Tripod Mounting	22
Shoulder Strap	22
Optional Accessories	23
TROUBLE CHECKS	24
INDEX	25-26
SPECIFICATIONS	Back Cover
RCA CAMCORDER LIMITED WARRANTY	Back Cover

Features and Functions

What Your Camcorder Can Do For You

Your RCA Camcorder combines the features of a video camera and a VHS video cassette recorder in one lightweight, easy-to-use unit. As a result, you can now perform all of the following:

- **Make your own video home movies.** Tape your video memories quickly and easily, with color and sound, on inexpensive VHS cassettes. VHS cassettes are available in your choice of 60 Min. (T-60), 2 Hr. (T-120) and 2 Hr., 40 min. (T-160) lengths. For optimum picture quality, your Camcorder records and plays back tapes exclusively in the VHS Standard Play mode, known as SP.
- **Play back tapes immediately through built-in electronic viewfinder.** Black & white electronic viewfinder shows exactly what is being recorded during taping—and allows “instant replays” after recording so you can review what you have taped.
- **Play back pre-recorded tapes on standard TV or Monitor.** Using included cables, you can use your Camcorder to play pre-recorded tapes on any TV. Adapters are included for use with either a standard TV or a Video Monitor. (Tapes must have been recorded in SP speed.)
- **Shutter Speed Control.** You can choose from four higher shutter speeds for recording fast-moving outdoor sporting events.
- **Choose Automatic or Manual Shutter Speed Control.** You can let the Camcorder automatically control the shutter speed for you or choose from four higher shutter speeds for recording outdoor sporting events or fast-moving family action.
- **Record from another VCR or Monitor.** With an optional adapter, you can hookup your Camcorder to another VCR or Monitor and use the Camcorder to record TV shows or copy your home tapes.
- **Use your Camcorder on AC or DC power.** Included with your Camcorder is an AC Adapter/Charger and a Rechargeable Battery. With the AC adapter/charger attached, you can power the Camcorder from the nearest AC outlet. With the charged battery attached, you can use your Camcorder virtually anywhere for up to one hour. With an optional 12-volt DC cord, you can even power the Camcorder from your car's cigarette lighter socket.
- **Create professional-looking video productions.** Your Camcorder has the latest convenient features to make your videotaping as trouble-free and enjoyable as possible. You can zoom in or out at the touch of a button. The Camcorder will adjust focus automatically so you don't have to bother. You can easily fade in and out of a scene with the Auto Iris Control. A “quick review” button lets you double check recording results and set up your next scene. What's more, a date display lets you record the date on your home tapes. For quick scene location, both visual search and a viewfinder tape counter are provided. There's even a viewfinder adjustment that makes it easy to use the Camcorder if you wear eyeglasses.
- **Add optional accessories for greater creative versatility.** RCA offers a full line of compatible accessories for your Camcorder to increase your creative range when making video productions. Some optional accessories are shown on pages 22 and 23.

RCA Video Cassettes

Note: To insert and remove a cassette, be sure to connect the power source to your Camcorder.

Video Cassettes

RCA recommends that RCA cassettes be used with this unit. The tape in these cassettes is of high-quality formulation. It has been manufactured to RCA's critical specifications, for excellent performance. Use of tape not meeting these specifications could considerably reduce the performance of your Camcorder.


Use of poor quality tapes or tapes that have been damaged or mishandled can contaminate the video heads, resulting in a snowy picture or no picture at all during playback. Because RCA has no control over the type of tape purchased or rented by consumers, **head cleaning is not covered by RCA's warranty.** It is considered normal maintenance.

Playing a new RCA tape for approximately 15 minutes will often satisfactorily clean the heads and improve your picture. If a snowy picture

or no-picture condition persists, consider the use of a chemical non-abrasive head cleaning tape (RCA Stock No. AV009W) available from your dealer or many electronic supply stores.

Erase Protection

To prevent accidental erasure of recorded material, remove the safety tab from the back of the cassette as shown below. Recording is impossible when this tab is removed. To record again on a cassette that has the tab removed, simply cover the safety-tab hole with vinyl tape as shown.

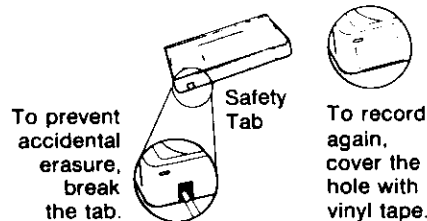


Recording Time

The Camcorder records and plays back in VHS standard speed (SP). Listed below are the maximum SP recording times for popular RCA VHS cassettes.

CASSETTE	RECORDING TIME
T-60	60 Min.
T-120	2 Hrs.
T-160	2 Hrs., 40 Min.


To insert or remove cassettes:

CAUTION: Insert cassette only one way with safety tab facing up and tape windows facing out.

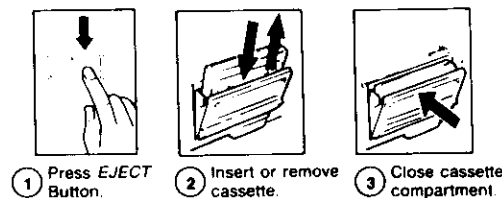

Preparations for Use

Unpacking Your Camcorder

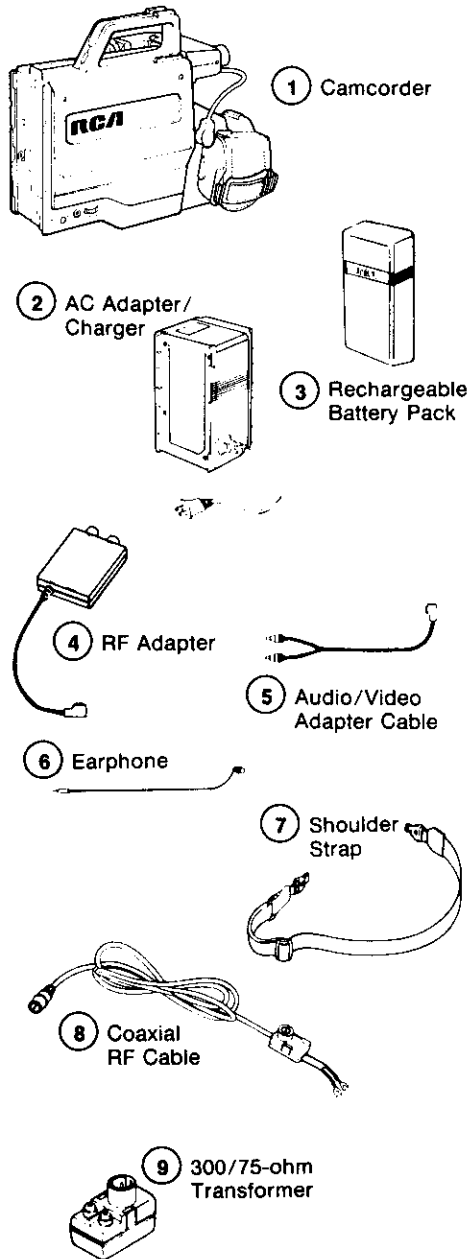

Since you are reading this manual, you have obviously opened your Camcorder's packing box and have probably already unpacked most of the items. Once you've removed the packing materials, *the first thing you should do* is make sure you have everything you need. In the Camcorder's box, you should find the following items:

1. the Camcorder itself;
2. an AC adapter/charger;
3. a rechargeable battery pack;
4. an RF adapter;
5. an audio/video adapter cable;
6. an earphone;
7. a shoulder strap;
8. a coaxial RF cable;
9. a 300/75-ohm transformer.


If any of these items are missing or appear damaged, contact your RCA dealer immediately. Also, you should save all of the packing materials; they will come in handy in the event you have to store or ship the Camcorder. In preparing your Camcorder for initial use, you will need only the Camcorder, the AC adapter/charger and the battery. Put the other items aside for now. We will discuss their use later in this guide.

Quick Operation Steps for Experienced Users

If you've used a video camera and VCR before, you can probably get your Camcorder up and running quickly by using the following steps:

- 1a. For AC operation, attach the AC adapter/charger (see Page 10) and plug it into an AC outlet.
- 1b. For battery operation, you will have to first attach the battery to the AC adapter/charger and charge the battery. This procedure is described on Page 9. (The battery takes about one hour to fully charge. While you are waiting, why not read the rest of the manual.) After the battery is charged, attach it to the Camcorder, following the directions on Page 9.
2. Set the *MAN/AUTO FOCUS* switch to *AUTO*; set the *NORMAL/SHUTTER* switch to *NORMAL* and put the *AUTO IRIS* control in the center position (*AUTO*).
3. Slide the Camcorder's *POWER* switch to the *ON* position, and you are ready to go. Remember the Camcorder uses standard VHS cassettes and records exclusively at the SP speed. After inserting a cassette, place the *CAMERA/PLAYBACK* switch in the *CAMERA* position for recording, and in *PLAYBACK* position for playback through the viewfinder. The thumb trigger control switches you from Record to Pause with a single touch when in *CAMERA* mode.
4. After using the Camcorder for the first time, be sure to read the rest of the manual for full details of its features, accessories, and proper care.

Location and Use of Controls

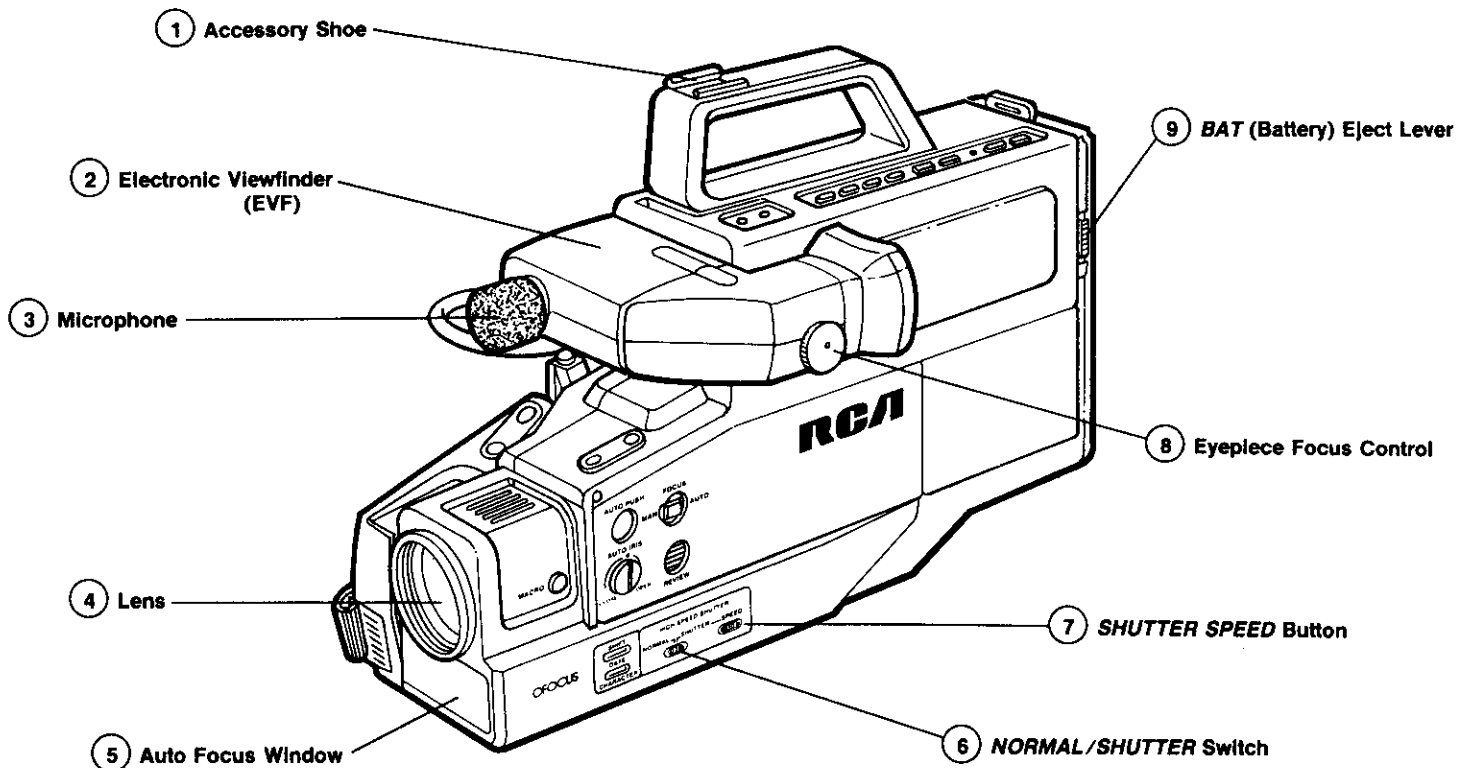


Camcorder Operating Controls and Their Functions

Pages 5 through 8 tell you where the Camcorder controls are located and what they do. As you read the description of each control, find that control on your own Camcorder to familiarize yourself with its location.

- 1 Accessory Shoe**
This fitting is used to attach a light or other lightweight video accessories to your Camcorder.
CAUTION: Excessive heat from a light could cause damage to the Camcorder's case. Use of a light is not recommended.
- 2 Electronic Viewfinder (EVF)**
The electronic viewfinder displays what the Camcorder lens sees. The electronic viewfinder also functions as a convenient black & white monitor during playback of recorded video.

- 3 Microphone**
The microphone is mounted on the Electronic Viewfinder near the front of the Camcorder and is more sensitive to sounds coming from the direction in which the lens is pointed.
- 4 Lens**
Your Camcorder is equipped with an f1.6, 6:1 power zoom lens which directs incoming light to the solid state MOS image sensor.
- 5 Auto Focus Window**
To automatically focus the camera lens, this window transmits and receives infrared light which is reflected off the subject. Make sure you don't obstruct this window when recording.
- 6 NORMAL/SHUTTER Switch**
Set this switch to the *NORMAL* position for normal use. Set this switch to the *SHUTTER* position when you wish to control the shutter speed with the *SHUTTER SPEED* Button (7). Details are on page 14.

- 7 SHUTTER SPEED Button**
This button lets you select four additional shutter speeds when the *NORMAL/SHUTTER* Switch (6) is in the *SHUTTER* position. The shutter speed is displayed in the electronic viewfinder. A blinking shutter speeds indicates you need more light. Details are on page 14.
- 8 Eyepiece Focus Control**
Use this control to adjust viewfinder focus. These adjustments will not affect the focus of the image recorded by the Camcorder. This control permits most users who wear glasses to remove them while focusing the Camcorder.
It's easiest to set the correct focus by focusing on the viewfinder on-screen displays (such as the date, battery level, etc.).
- 9 BAT (Battery) Eject Lever**
Slide this lever Down to release the battery or the AC adapter/charger from the Camcorder.

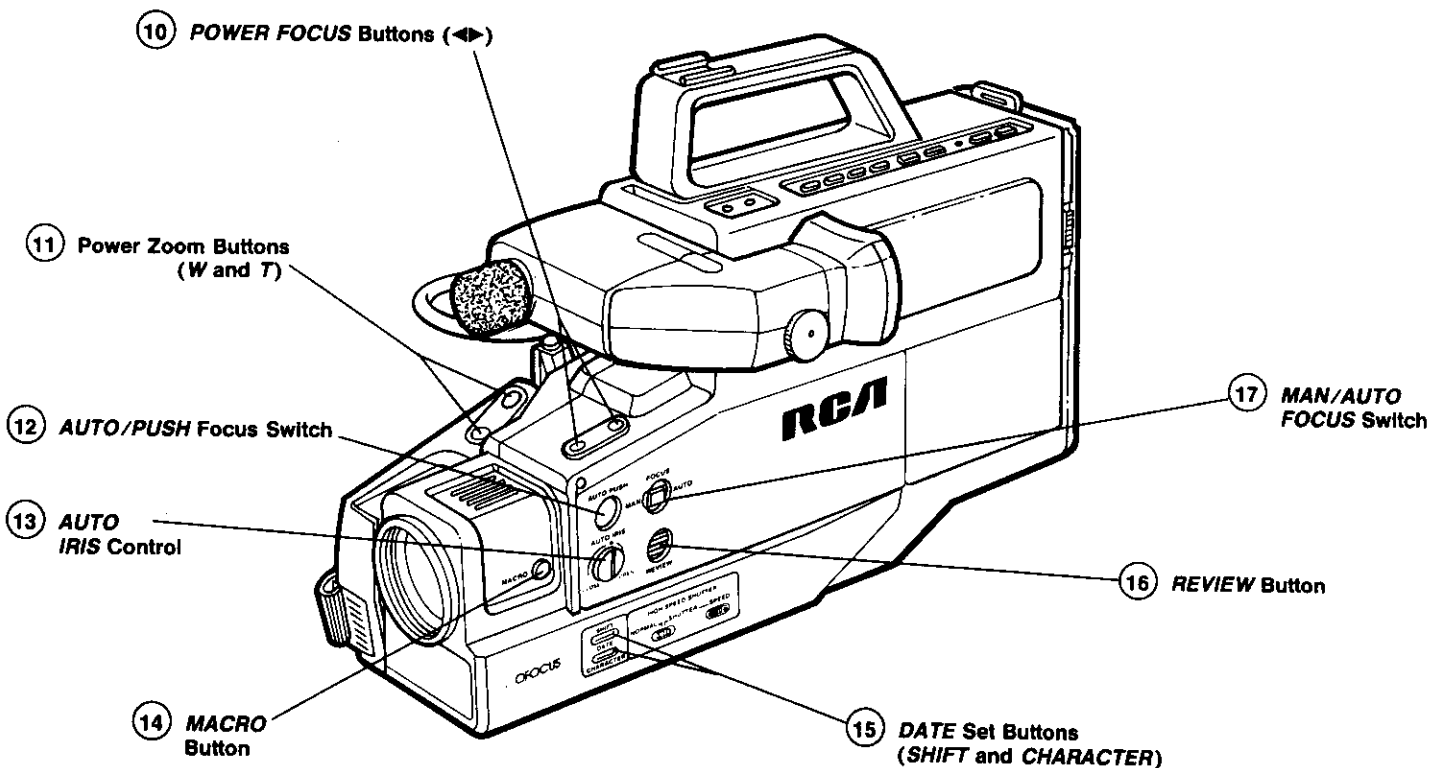

10 POWER FOCUS Buttons (◄►)
Pressing these buttons will change the focus of the lens when the Camcorder is in the Manual Focus mode (*MAN/AUTO FOCUS* Switch **17** in the *MAN* position.)

11 Power Zoom Buttons (*W* and *T*)
These buttons control the Camcorder's power zoom motor. Press the button labeled *W* and the zoom lens will move in the Wide Angle direction. Press the button labeled *T* and the zoom lens will move in the Telephoto (close-up) direction. When you grasp the Camcorder properly using the hand strap, the zoom buttons are easily controlled by your index and middle fingers.

12 AUTO/PUSH Focus Switch
When this switch is depressed and held in, automatic focus is activated and remains activated until the switch is released. This is useful if you are shooting a relatively static scene in *MANUAL FOCUS* and need to adjust for a change in scene by using *AUTO FOCUS* quickly and momentarily.

13 AUTO IRIS Control
With this control in the center position, the Camcorder automatically adjusts the lens opening for the best picture. The lens iris opening can also be manually adjusted to compensate for unusual lighting. When the subject is in bright light and the background is dark, turn this control counterclockwise to close the lens iris opening. When the background is in bright light and the subject appears too dark, adjust the control clockwise to open the lens iris. This control can also be used to easily fade in and out of scenes. Details are on page 14.

14 MACRO Button
For shots as close as 3/8 inch from your subject, press and hold the Power Zoom Button "*W*" down while pushing in and holding the *MACRO* Button. After putting the Camcorder in the Macro Mode, press the Power Zoom Button "*W*" or "*T*" until sharp focus is achieved. Details are on page 15.

Press and hold the "*T*" zoom button to return to normal operation.


15 DATE Set Buttons (*SHIFT* and *CHARACTER*)
These buttons are used to enter the current date in your Camcorder so they can be recorded on your tapes for future reference. Details are on page 13.

16 REVIEW Button
Press the *REVIEW* button while the Camcorder is in the Record/Pause mode to view the last four seconds of a completed recording segment. Details are on page 12.

17 MAN (MANUAL)/AUTO FOCUS Switch
Set this switch to the *AUTO* position for automatic focus, and to the *MAN* position when you wish to use the *POWER FOCUS* Buttons **10**. Details are on page 15.

Continued on next page.

Location and Use of Controls, Cont'd.

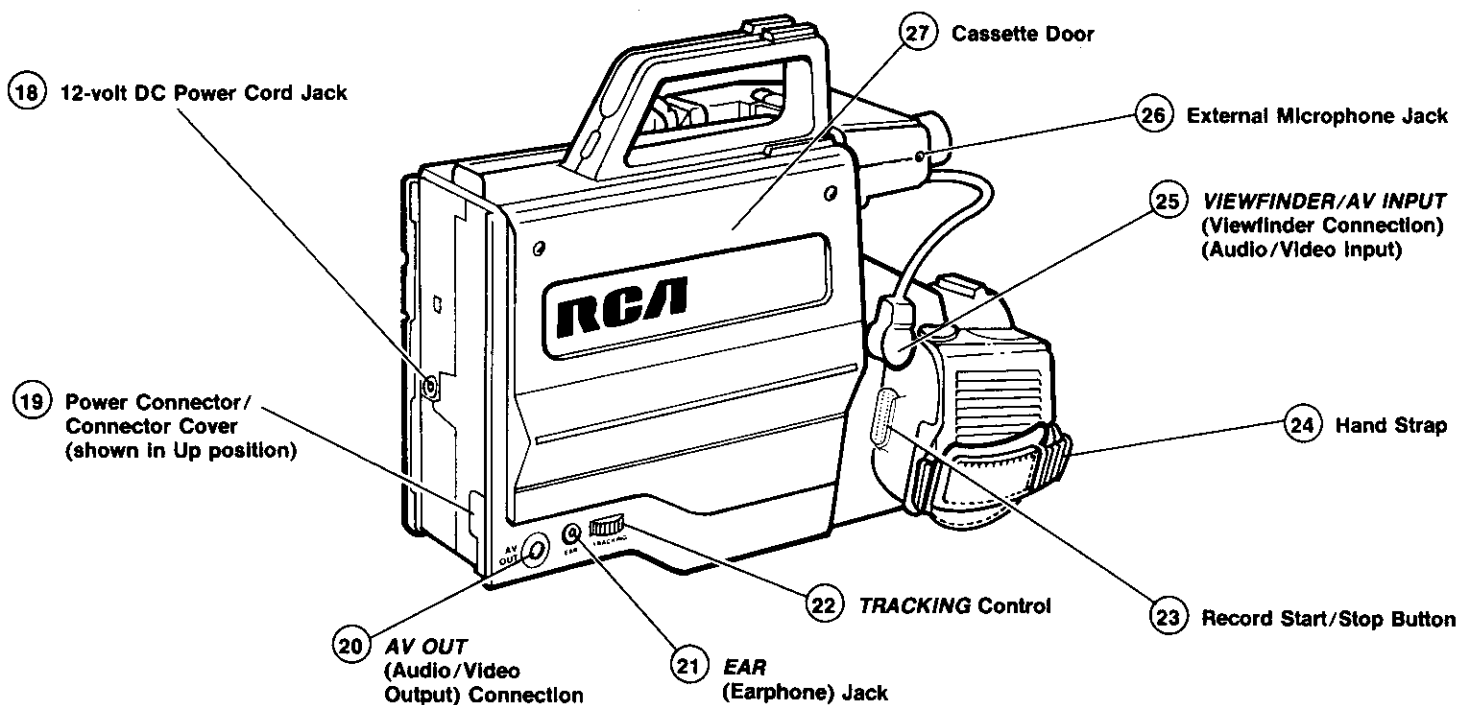

- 18 12-volt DC Power Cord Jack**
This jack lets you operate your Camcorder from the cigarette lighter socket of a car (using the optional DCC012 power cord) or any other suitable 12-volt DC source.
- 19 Power Connector/Connector Cover**
This connector is used to attach the battery or the AC adapter/charger. The connector cover protects the power connector from damage and should be in the Up position at all times.
- 20 AV OUT (Audio/Video Output) Connection**
Connect the supplied audio/video connector cable or RF adapter to this jack, and the video being recorded or played back on the Camcorder can be displayed on your TV or Monitor, or even recorded on another VCR. The RF adapter connects the Camcorder to the standard antenna of a TV. The audio/video cable connects the Camcorder to the direct inputs of a video monitor or VCR.
- 21 EAR (Earphone) Jack**
You can plug the supplied earphone into this jack for private monitoring of audio during recording or playback.
- 22 TRACKING Control**
When playing prerecorded tapes or tapes recorded on other VHS video recorders, black or white streaks


may appear on your TV or display monitor screen. Turn the *TRACKING* control slowly in either direction until the streaks disappear. The *TRACKING* control has no effect during recording.

- 23 Record Start/Stop Button**
This thumb control is used to change the Camcorder from Pause to Record and vice versa. With the Camcorder in the *CAMERA* Mode, push this button and the graphic "*REC*" will appear in the viewfinder. (This graphic appears whenever the Camcorder is recording.) Press this button again and the Camcorder will enter the Pause Mode. It is not necessary to hold down the Record Start/Stop Button while recording.
- 24 Hand Strap**
This strap is designed to provide comfort and ease of operation while using the Camcorder. The strap is adjustable for a personalized fit.
- 25 VIEWFINDER/AV INPUT (Viewfinder Connection) (Audio/Video Input)**
The viewfinder cable plugs into this connection linking it with the Camcorder's audio/video circuitry. You can also disconnect the viewfinder and attach the optional VAA002 audio/video input adapter to this connection, allowing Camcorder recording of external audio and video from

VCRs, component tuners and other devices. The optional CGA020 or CGA030 Character Generator/Titlel also uses this jack.

- 26 External Microphone Jack**
If you wish to use an optional external microphone during recording, plug it into this jack. When an external microphone is connected, the Camcorder's built-in microphone automatically is shut off.
- 27 Cassette Door**
This door can be opened for cassette insertion or removal whenever the Camcorder is attached to a power source. To open the cassette door, press the *EJECT* button (34) on the Camcorder's top control panel. Insert a standard VHS cassette and close the door by hand.

CAUTION: When the battery reaches its empty level during use, the Camcorder will shut off. When this occurs there will normally be enough power left in the battery to eject the tape. If not, **do not attempt to force the cassette door open.** This will damage your Camcorder. To remove the cassette, simply power your Camcorder with the AC Adapter/Charger or recharge the battery before attempting to eject the tape.

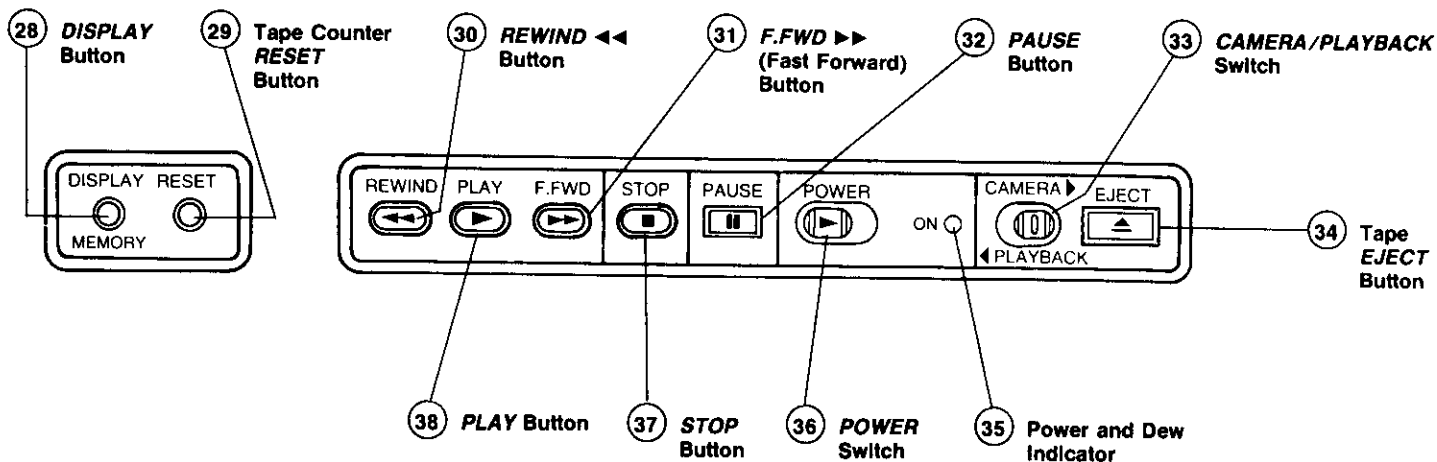

TOP CONTROL PANEL

- 28 DISPLAY Button**
 This button controls the graphics that appear in the Electronic Viewfinder. When the *CAMERA/PLAYBACK* Switch (33) is in the *PLAYBACK* position, pressing this button causes the Battery Level Indicator and tape counter to appear. Press again to remove the graphics.
 When the *CAMERA/PLAYBACK* Switch (33) is in the *CAMERA* position, pressing this button causes the date display to appear. Press again to display the battery level indicator and tape display. Press again to remove all graphics.
- 29 Tape Counter RESET Button**
 When the tape counter is displayed in the viewfinder, pressing this button resets the counter to "0000". Details are on page 13.
- 30 REWIND ◀◀ Button**
 Press to rewind a tape after either recording or playback when the Camcorder is in the *STOP* Mode.
 When the Camcorder is in the *PLAYBACK* Mode, this Button becomes the Reverse Search Button. Press and hold this button to visually scan your tape in reverse. To return to normal playback, release the *REWIND* ◀◀ Button.
- 31 F.FWD ▶▶ (Fast Forward) Button**
 Press this button while the Camcorder is in the *STOP* Mode to rapidly advance the tape in the forward direction.
 When the Camcorder is in the *PLAYBACK* Mode, this button becomes the Forward Search Button. Press and hold to visually scan your tape forward. To return to normal playback, release the *F.FWD* ▶▶ Button.
- 32 PAUSE Button**
 Press this button during playback to display a still picture on the viewfinder. Press again to return to normal play. During recording, a thumb trigger control activates the Pause function.
- 33 CAMERA/PLAYBACK Switch**
 Place this switch in the *CAMERA* position to put the Camcorder in the Record/Pause Mode for recording.
 Place this switch in the *PLAYBACK* position for viewing tapes.
- 34 Tape EJECT Button**
 Press this button to open the cassette door for tape insertion or removal. The Camcorder must be attached to a power source in order to load or remove a cassette.
- 35 Power and Dew Indicator**
 This light glows whenever the Camcorder is turned on. Blinking of the power light indicates excessive moisture in your Camcorder, and an internal protection feature will prevent the unit from operating until the moisture is gone. Leave the power on, and when the light stops blinking, the unit can be operated.
- 36 POWER Switch**
 This switch turns the Camcorder's power on and off.
- 37 STOP Button**
 The *STOP* button is used to stop playback, rewind, and fast forward operations. This button has no effect during recording.
- 38 PLAY Button**
 With the *CAMERA/PLAYBACK* switch in the *PLAYBACK* position, press the *PLAY* button to play back recorded material.

Basic Operation: Power Supplies


How to Power Your Camcorder

Your Camcorder is designed to be used with any of three different power sources. When videotaping in locations away from conventional AC power sources, you may power your Camcorder by using the battery, or power it from the cigarette lighter socket in your car with RCA's optional DCC012 DC car cord. The Camcorder may also be powered by household current (120 volts, 60 Hz only) when using the supplied AC adapter/charger.

CAUTION: Do not attempt to use a "power converter" to use your AC Adapter/Charger on a power source other than 120 volts, 60 Hz or the Adapter/Charger may be damaged. If you plan to travel to a foreign country that does not use 120 volt, 60 Hz power, an optional CPS04 Adapter/Charger may be purchased from your RCA dealer. The CPS04 is designed for use on 100-240 volts, 50/60 Hz.


These two pages will tell you how to charge and attach the battery to your Camcorder as well as how to power the Camcorder from AC power or from the cigarette lighter socket of a car.

Using the Battery to Power Your Camcorder

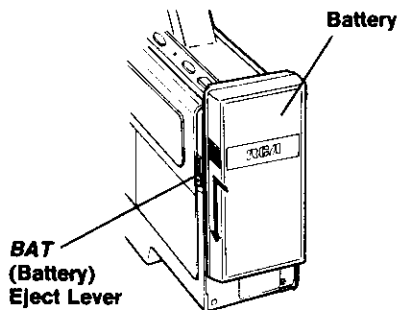

- ① Be sure the Camcorder's Connector Cover is in the Up position. (See page 7 for location.)
- ② Align the tabs on the battery with the notches on the back of the Camcorder.
- ③ Slide the battery in the direction of the arrow, as shown.
- ④ Slide the Camcorder's **POWER** button to **ON**. If the battery is properly connected, the Power Indicator should light.
- ⑤ To remove the battery, hold the Battery Eject Lever (*Bat*) Down, while sliding the battery Up.

Charging Your Battery

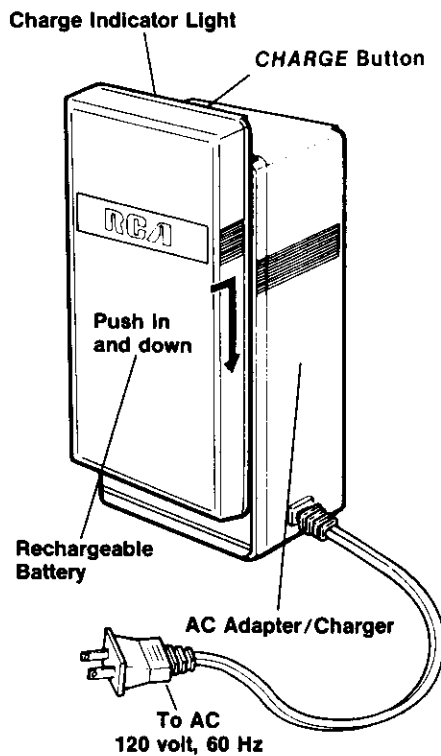

CAUTION: When a battery is attached, do not turn the AC adapter/charger upside down, even if the adapter/charger is attached to the Camcorder. The battery may fall off and be damaged. It could also cause injury.


Recharging the Camcorder's standard battery takes approximately 1 hour, depending on the battery's condition. After repeated charging and use, operation time will gradually decrease. When operation time becomes too short to be useful, it's time to replace the battery.

When fully charged, your Camcorder battery should supply about 1 hour of operating time. The battery is charged using the procedure below:

- ① Attach the battery to the AC adapter/charger as shown at the right. Align the reference notches on the battery with the notches on the back of the AC adapter/charger. Then push the battery flush with the adapter and slide it downward.
- ② Plug the AC adapter/charger into the nearest AC outlet (120 volts, 60 Hz).
- ③ Push the **CHARGE** button in. The Charge Indicator will light while the battery is being charged. When the light goes out, the battery is fully charged.
- ④ Remove the battery from the AC adapter/charger by sliding the battery up and off.
- ⑤ Attach your charged battery to the Camcorder as shown on the left.

NOTE: The AC adapter/charger may be attached to the Camcorder during battery charging, but you cannot charge the battery and operate the Camcorder from the AC adapter/charger at the same time. When all three components are connected, the AC adapter/charger's **CHARGE** Button determines where power will be directed.

Battery Level Indicator

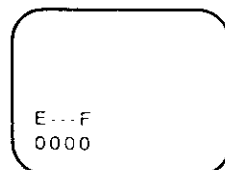


Whenever the tape counter display is present in the viewfinder, it appears with a 3-dash read-out indicating the approximate status of Camcorder battery power. When the battery is fully charged, the display reads "E---F". After several minutes, only two dashes appear. When the battery is very near empty, only one dash remains. When the last dash starts blinking, you should find an

alternative power source or recharge the battery before continuing to use your Camcorder.

CAUTION: When the battery reaches its empty level during use, the Camcorder will shut off. However, the battery should have enough reserve power to eject the cassette when you press the **EJECT** Button. If the Camcorder does not eject the cassette when you press **EJECT**, do not attempt to force the cassette door open. This will damage your Camcorder. To remove the cassette, simply power your Camcorder with the AC adapter/charger or recharge the battery before attempting to eject the tape.

Using the AC Adapter/Charger to Power Your Camcorder

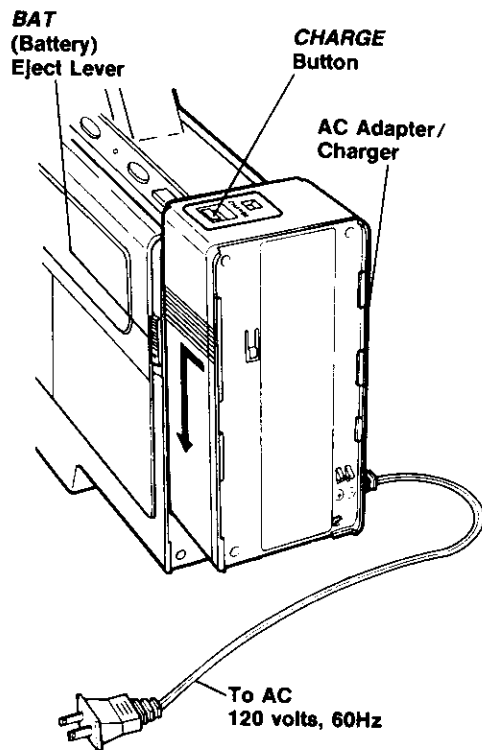

- ① Be sure the Camcorder's Connector Cover is in the Up position. (See page 7 for location.)
- ② Align the tabs on the adapter/charger with the notches on the back of the Camcorder.
- ③ While holding the adapter/charger against the back of the Camcorder, slide the adapter/charger down in the direction of the arrow, as shown.
- ④ Plug the adapter/charger into the nearest AC outlet (120 volts, 60 Hz only).
- ⑤ Slide the Camcorder's *POWER* switch to *ON*. If the AC adapter/charger is properly connected, the Power Indicator should light.

Do not push the *CHARGE* button on the AC adapter/charger or the power to your Camcorder will be turned off.


- ⑥ To remove the AC adapter/charger, hold the Battery Eject Lever (*BAT*) Down while sliding the adapter/charger Up.

Note: The AC adapter/charger may be attached to the Camcorder during battery charging, but you cannot charge the battery and operate the Camcorder from the AC adapter/charger at the same time.

When all three components are connected, the AC adapter/charger's *CHARGE* Button determines where power will be directed.

Note: The AC Adapter/Charger automatically powers the Camcorder unless the *CHARGE* Button is pushed.

Using the Optional DC Car Cord to Power Your Camcorder

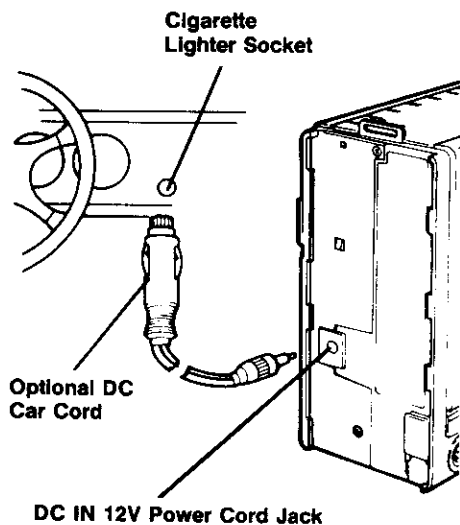

To power your Camcorder from a car's 12-volt electrical system, you will need RCA's optional DCC012 DC car cord. The proper steps for using the Camcorder with the DC car cord are outlined below.

- ① Connect the small plug on the DC car cord to the DC IN 12V Power Cord jack on the back of the Camcorder.
- ② Insert the other end of the DC car cord into the vehicle's cigarette lighter socket.
- ③ Slide the Camcorder's *POWER* Switch to *ON*. If the car cord is properly connected, the Power Indicator should light. Your car's ignition does not have to be turned on for Camcorder operation.


CAUTION: The DCC012 DC car cord is designed to be used only with automobiles having 12-volt *negative ground* electrical systems.

WARNING: To avoid possible damage to Camcorder, make sure the car cord you plan to use has positive tip polarity such as RCA model DCC012 and is used with a 12-volt negative ground electrical system.

Basic Operation: Recording

How to Record with Your Camcorder

After you have your Camcorder connected to a power source (AC adapter/charger, battery, or DC cord), use the following steps to make a recording.

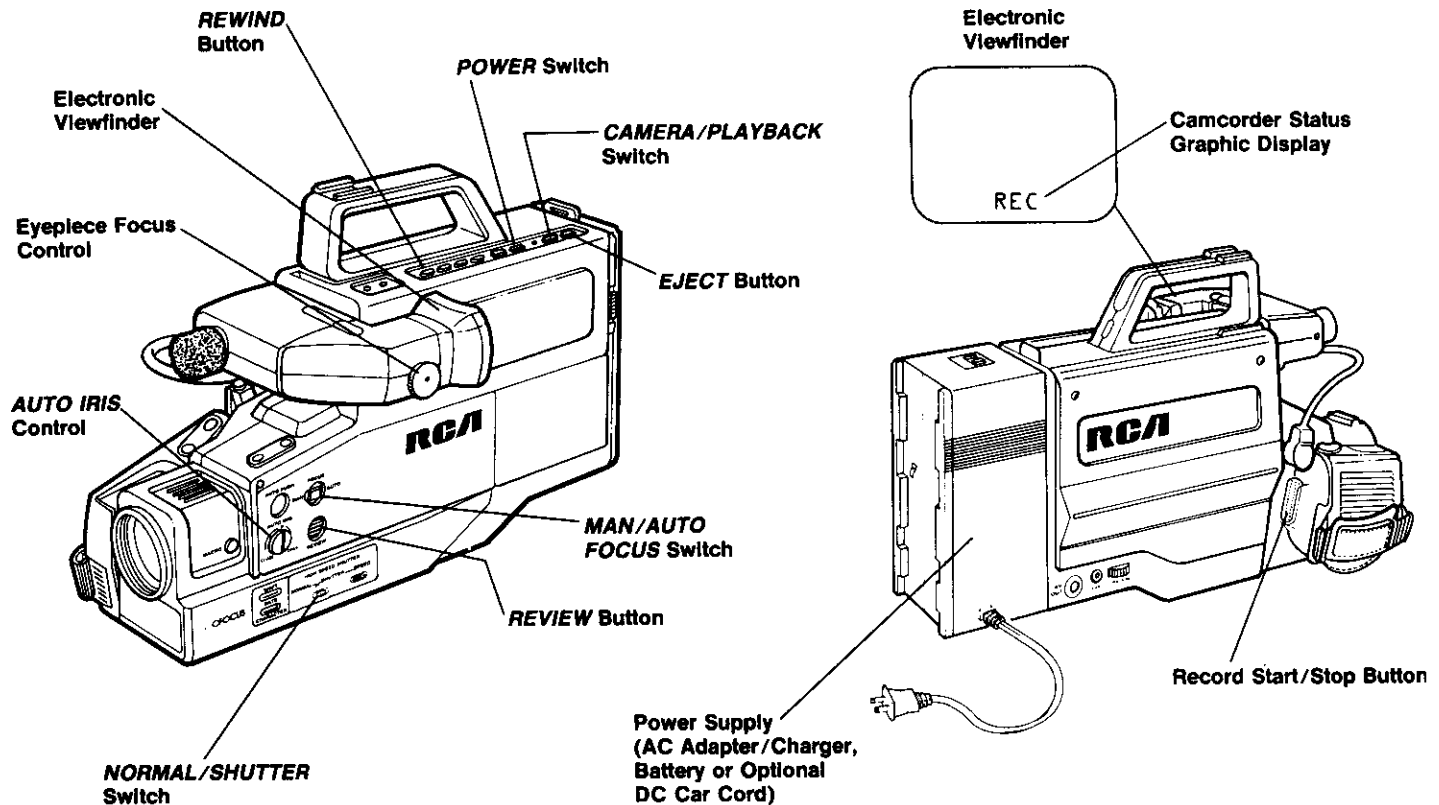

- 1 Slide the Camcorder's *POWER* Switch to the *ON* position. The Power Indicator Light should come on.
- 2 Put the Camcorder's *CAMERA/PLAYBACK* Switch in the *CAMERA* position.
- 3 Set the *MAN/AUTO FOCUS* Switch to *AUTO*; set the *AUTO IRIS* Control to the center (*AUTO*) position; set the *NORMAL/SHUTTER* Switch to *NORMAL*.
- 4 Press the Camcorder's *EJECT* button, insert a VHS cassette and close the cassette door.
- 5 Put your eye to the Camcorder viewfinder and select a scene you wish to record. Don't forget to adjust the Eyepiece Focus Control for your vision.
- 6 Press the Record Start/Stop button to begin recording. The graphic "REC" will appear in the Electronic viewfinder. (It is not necessary to hold down the Record Start/Stop button.)
- 7 Press the Record Start/Stop button again to stop recording and enter the Pause mode. The status graphic "REC" displayed in the Electronic Viewfinder will disappear. Press the *REVIEW* button to review the last four seconds of recorded material. Pressing the Record Start/Stop Button again will activate the Record mode.
- 8 After you have completed taping your subject, put the *CAMERA/PLAYBACK* switch in the *PLAYBACK* position and rewind the cassette, by pressing the *REWIND* Button. If you do not wish to play your recording back on your Camcorder, press the *EJECT* button and remove the cassette.

CAUTION

NEVER attempt to force open the cassette door. If the battery reaches its empty level during recording, the Camcorder will shut off. Normally there will be enough power left in the battery to eject the tape. If not, simply recharge the battery or power your Camcorder with the AC Adapter/Charger before attempting to eject the tape.

Using Your Camcorder's Special Recording Features

The steps listed above give you the basics of activating Camcorder recording. However, you should also get to know the Camcorder's special features on pages 12-15. These features can help you shoot like a pro even if you've never used a video camera or recorder before.


Recording Features

Electronic Viewfinder (EVF)

The Camcorder's electronic viewfinder is a miniature black & white monitor that displays the picture seen by the Camcorder when recording. The EVF can also be used for viewing tape playback, as explained on page 18.


- **EVF tilt adjustment:**

For convenient viewing, the EVF can be tilted about 90° up and 45° down.

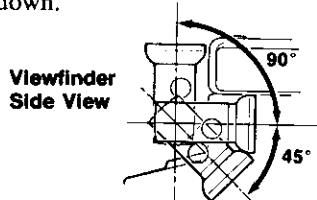


- **Adjusting the Viewfinder**

The Viewfinder can be adjusted so you can easily use your right or left eye.

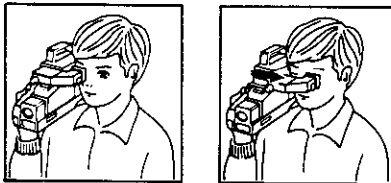

Right Eye — or — Left Eye


Eyepiece Focus Control

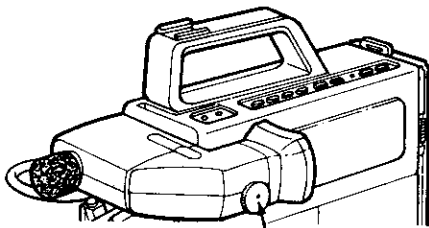

Eyepiece Focus Control

- The Eyepiece Focus Control located on the electronic viewfinder allows you to set the focus of the viewfinder for your personal vision.
- If you wear eyeglasses, you can probably remove them and operate the Camcorder. Remove your eyeglasses and look through the viewfinder while adjusting the Eyepiece Focus Control.
- It's easiest to set the correct focus by focusing on one of the viewfinder's on-screen displays (such as date, battery level, etc.).
- The Eyepiece Focus Control does not affect the focus of the image actually recorded by your Camcorder.

Quick Review

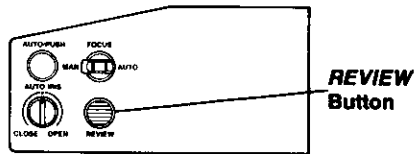


Side of Camcorder

During a recording session, you can review the last few seconds of a taped scene by pressing the **REVIEW** Button and watching the viewfinder. (Quick Review operates only when the Camcorder is in the Record/Pause mode). Quick Review helps you recall the last scene you recorded on a tape and lets you set up the next scene. After Quick Review playback, the Camcorder returns to the Record/Pause mode.

Note: After you have reviewed the last scene recorded, Quick Review returns the tape to its previous point. As a result, you can use this feature and then return to recording without creating a "gap" or picture break-up between taped segments.

Battery Level Indicator

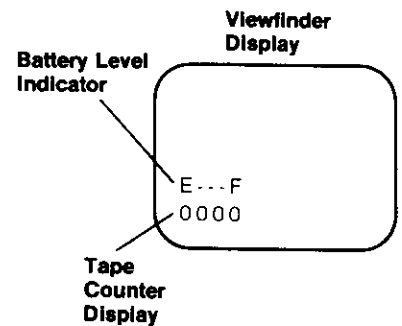


Battery level indicator: A battery level graphic appears whenever the tape counter display is present in the viewfinder.

When the battery is fully charged, the display reads "E---F". After several minutes, only two dashes appear. When the battery is near empty, only one dash remains. When the last dash blinks, you should find an alternative power source or recharge the battery before continuing to use the Camcorder.

Note: When the battery is near empty during recording and the battery level graphic is not displayed in the viewfinder, an "E" blinks to warn you.

EVF Status Display Graphics

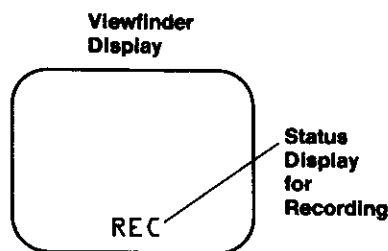

The status graphics displayed in the viewfinder include "FF" (Fast Forward), "REW" (Rewind), and "REC" (Record).


CAUTION

NEVER attempt to force open the cassette door. If the battery reaches its empty level during recording, the Camcorder will shut off. Normally there will be enough power left in the battery to eject the tape. If not, simply recharge the battery or power your Camcorder with the AC Adapter/Charger before attempting to eject the tape.

Continued on next page.

Recording Features, Cont'd.

Tape Counter and Display

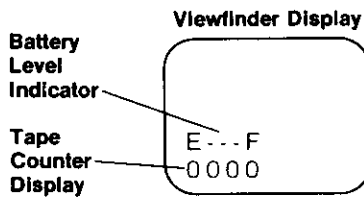

When the *CAMERA/PLAYBACK* Switch is set in the *PLAYBACK* position, pressing the *DISPLAY* button on the Camcorder's top control panel causes a 4-digit counter display to appear in the viewfinder along with the battery level graphic as shown above.

When the *CAMERA/PLAYBACK* Switch is set in the *CAMERA* position, pressing the *DISPLAY* Button twice causes the Tape Counter and Battery Level graphics to appear in the viewfinder.

The tape counter acts as a handy reference to help you locate taped segments.

Press the *RESET* Button to set the counter to 0000 before starting to record or play. Note the number on the tape counter at the beginning and end of each program you want to record. This will allow you to use the counter to locate desired programs.

To remove the Tape Counter and Battery Level Indicators display from the viewfinder, press the *DISPLAY* Button again.

Memory Stop feature:

The tape counter also includes a Memory Stop feature. When the tape counter is displayed, the tape automatically stops when the counter reads "0000" during Fast Forward and Reverse.

This is useful if there is a section of tape you want to review immediately after recording, or if you want to return to the same point several times in a row.

To use the counter memory:

- Reset the counter to "0000" when you reach the point on a tape you wish to index.
- Continue to play or record the tape, and when you wish to return to the index point, simply press *REWIND*.

Note: *CAMERA/PLAYBACK* switch must be in *PLAYBACK* position.

Setting and Recording the Date


The date can be set and recorded on your tapes to act as a handy reference when viewing them at a later time.

The date graphic will be recorded on your tape whenever it appears in the Electronic Viewfinder and the Camcorder is in the Record Mode.


- Set the current date as explained below.
- Display the date graphics in the Electronic Viewfinder when you begin recording.

Setting the Date:


- 1 Attach a power source to your Camcorder and turn it on by sliding the *POWER* Switch to *ON*.
- 2 Place the *CAMERA/PLAYBACK* Switch in the *CAMERA* position.

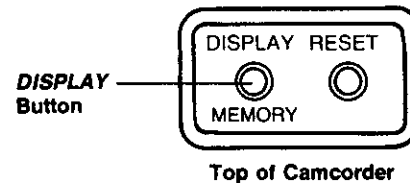

- 3 Press the *DISPLAY* Button shown above located on the top of your Camcorder. The date graphics shown below will be displayed in the viewfinder.

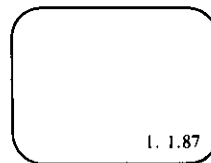

Viewfinder Display Showing the date

 

Side of Camcorder

- 4 Press the *CHARACTER* button located on the side of your Camcorder until the correct month appears. Release *CHARACTER* and press the *SHIFT* button.

Note: If a character is not blinking, push *SHIFT* button and then press *CHARACTER* button to change blinking character.

- 5 Repeat Step 4 to set the correct day and year.

- 6 Press the *DISPLAY* Button twice to remove all display graphics from the viewfinder.

Note: Pressing the *DISPLAY* Button once causes the Tape Counter and Battery Level Graphics to appear in the viewfinder.

Correcting the Date:

To correct the date after it has been set:

- Press the *SHIFT* Button until the incorrect month, day or year is flashing.
- Press the *CHARACTER* Button until the correct month, day or year appears in the display, and then press *SHIFT* Button.


Recording the Date:

The date is automatically recorded on your tape whenever you record while the Date Graphic Display appears in the Electronic Viewfinder.

- Place the *CAMERA/PLAYBACK* Switch in the *CAMERA* position and press the *DISPLAY* Button on the top of your Camcorder. Set the current date, using the above procedure, if necessary.
- When the current date is set and appears in the graphic display of the Electronic Viewfinder, begin recording.

To remove all display graphics from the Electronic Viewfinder, press the *DISPLAY* Button on the top of the Camcorder twice. Pressing it once causes the Tape Counter and Battery Level Indicators to appear.

Note: Your Camcorder will continue to keep the correct date in memory for approximately 4 hours after the Camcorder's power has been turned off.

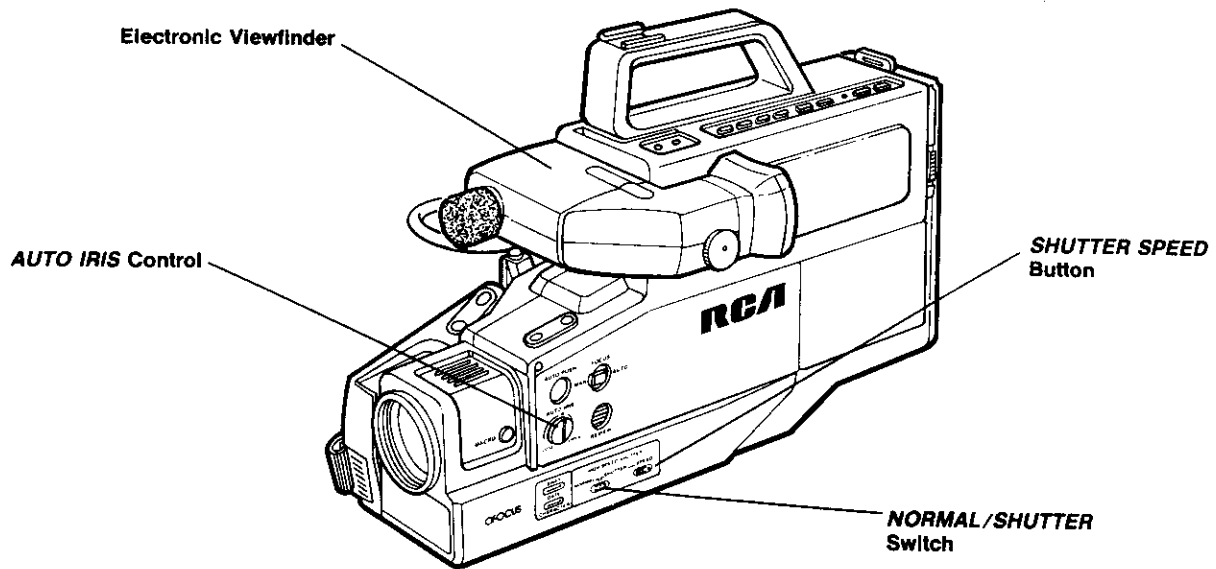

NORMAL/SHUTTER Switch and SHUTTER SPEED Button

This feature allows you to select four higher shutter speeds to record fast moving action.


When the *NORMAL/SHUTTER* Switch is in the *NORMAL* position, the Camcorder's shutter speed is automatically set at 1/60 second. This speed is recommended for indoor videos and most of your recording.

When the *NORMAL/SHUTTER* Switch is in the *SHUTTER* position, you can select four additional shutter speeds (1/120, 1/250, 1/1000 and 1/2000) using the *SHUTTER SPEED* Button.

When the *NORMAL/SHUTTER* Switch is in the *SHUTTER* position, the shutter speed of 1/120 second is selected. Every time you push the *SHUTTER SPEED* Button, the shutter speed will increase.

To display the shutter speed graphic, press the *DISPLAY* Button to erase Battery Level Indicator and Date displays.

The display below will appear in the electronic viewfinder when the *NORMAL/SHUTTER* Switch is in the *SHUTTER* position.

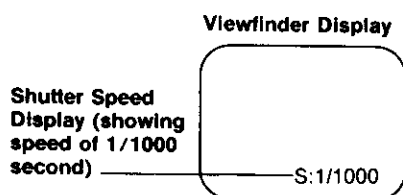

The higher shutter speed you have selected (1/120, 1/250, 1/1000, 1/2000) will appear in the Electronic Viewfinder.

(No speed will be displayed when the *NORMAL/SHUTTER* Switch is in *NORMAL*.)

Note: Higher shutter speeds require more light. The shutter speed display graphic (1/120, 1/250, 1/1000, or 1/2000) will flash when you need more light.

The higher shutter speeds are **only** recommended when you are taping an outdoor sporting event that you plan to view in slow motion or stop action on a good-quality home VCR that features "field-still" special effects (3-, 4-, or 5-head VCR's).

A tape recorded at the higher shutter speeds may not show movement and change of scenes as smoothly as recordings at the *NORMAL* (1/60) Shutter Speed. When recording at high shutter speeds, use of fluorescent, mercury vapor or sodium lighting may cause a "flickering" effect.

AUTO IRIS Control

With the *AUTO IRIS* Control in the center (*AUTO*) position, your Camcorder electronically senses the available light in a scene and automatically opens or closes the lens iris for the best possible recording. However, you also have the option of manually opening or closing the *AUTO IRIS* control to compensate for unusual lighting.

Typical situations in which you might want to change the *AUTO IRIS* setting are:

- When your subject appears too dark in front of a bright background (for example, a person standing in front of a window). In this case, turn the *AUTO IRIS* Control clockwise to make the subject brighter.
- When the subject is in bright light and the background is dark, turn the *AUTO IRIS* Control counterclockwise to make the subject darker.


You can also use the *AUTO IRIS* control to "fade" in or out of a scene. Simply turn the *AUTO IRIS* control counterclockwise to fade out, and turn it back to *AUTO* to fade in.

Color Balance

Your Camcorder is equipped with an automatic color balance system which maintains proper color balance continuously.

Continued on next page.

Recording Features, Cont'd.

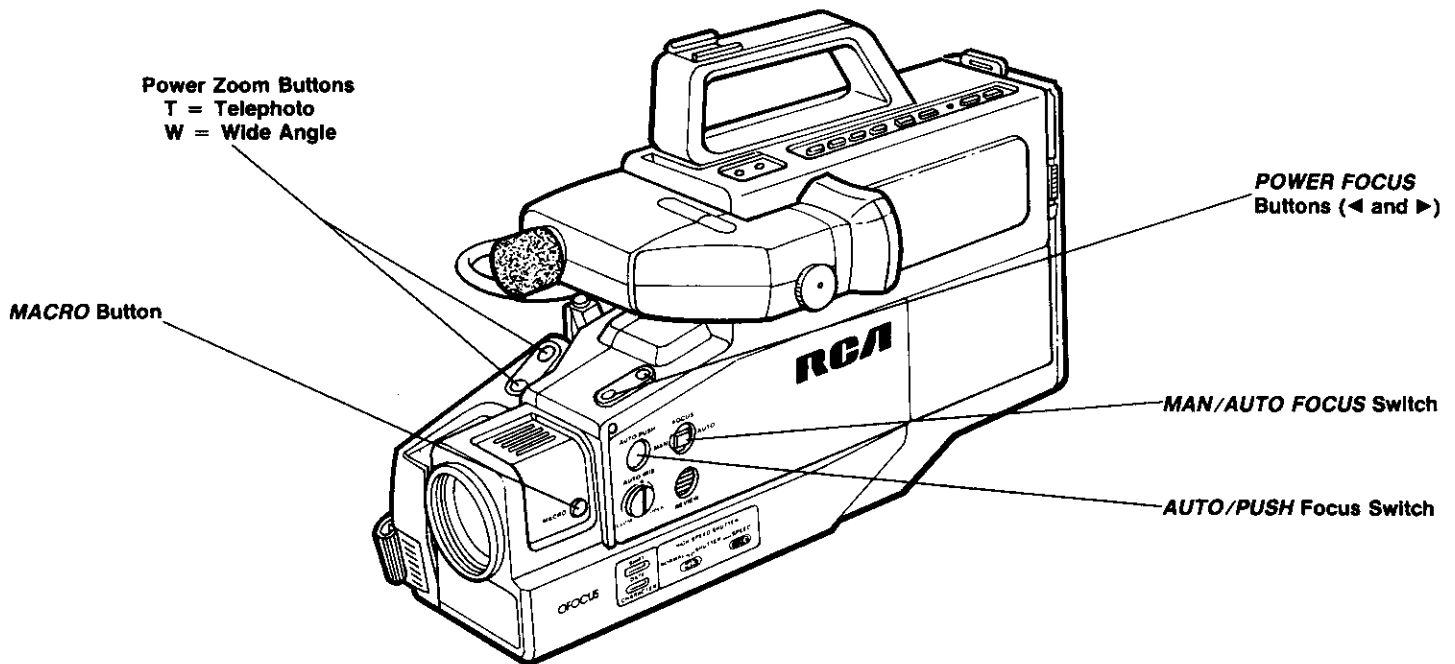

Focusing Your Camcorder

- **Auto Focus:** Set the *MAN/AUTO FOCUS* Switch to the *AUTO* position for automatic focus operation.

Note: The Camcorder's Auto Focus system uses infrared light and will focus on the nearest object that reflects this light. The following cautions should be observed when using Auto Focus:

- ① Sloping or inclined surfaces may not be focused because the reflected light will not be returned to the Auto Focus window.
 - ② When shooting through a window, the Auto Focus system may focus on the window glass instead of your subject.
 - ③ Dark objects, such as a subject's clothing may absorb the infrared light. Manual Focus may be required.
 - ④ If any of the above conditions exist, put the *MAN/AUTO FOCUS* switch in the *MAN* (Manual) position and use manual focusing. Auto Focus may not work reliably on subjects more than approximately 35 feet away from the Camcorder.
- **Manual Focus:** For manual focusing, set the *MAN/AUTO Focus* Switch to the *MAN* position. Then, before you start recording, zoom in on your subject using the


Power Zoom Button "*T*" (Telephoto) and adjust the *POWER FOCUS* Button ◀ or ▶ so that a sharp, clear picture is displayed in the viewfinder. By using this procedure for manual focus, the camera will maintain proper focus when the power zoom is returned to the wide-angle position.

You can also quickly and momentarily switch from *MANUAL* to *AUTO FOCUS* by pushing the *AUTO/PUSH* Focus Switch in. When the switch is held in this position, automatic focus is activated and remains activated until the switch is released. This is useful if you are shooting a relatively static scene in *MANUAL FOCUS* and need to quickly and momentarily use *AUTO FOCUS* to adjust for a change in scene.

- **Macro Focus:** For shots as close as 3/8 inch from your subject, first place the *MAN/AUTO FOCUS* Switch in the *MAN* position. Press the *MACRO* Button and hold it in while pressing the Power Zoom Button "*W*". This places the Camcorder in the Macro Mode. Press the Power Zoom Button "*W*" or "*T*" to focus the Camcorder.

Note: Zooming is not possible when in the Macro Mode; to change the size of the subject, move the lens closer or further away from it.

Power Zoom Buttons

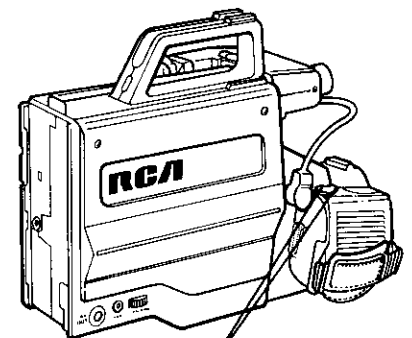

Power Zoom Buttons

T = Telephoto
W = Wide Angle

The 6:1 motorized zoom lens allows you to zoom in and out for close-ups or wide-angle shots just by pressing one of the Power Zoom fingertip controls.

- Press "*T*" and the lens will move in the "telephoto" (close-up) direction.
- Press the button labeled "*W*" and the lens will move in the "wide angle" direction.

When you grasp the Camcorder properly, using the hand strap the zoom buttons are easy to control with your index and middle fingers.

Basic Operation: Playback

How to Play Back Tapes with Your Camcorder

The tapes you record on your Camcorder can be played back and viewed in many different ways:


- ① Through the Electronic Viewfinder on your Camcorder.
- ② In a home VHS VCR.
- ③ On your TV or monitor.

You can also copy your tape on a standard VHS tape in your VCR.

The following section shows you how to connect your Camcorder to a TV, monitor or VCR and explains how to play back the tapes.

NOTE: Although you can use the battery to power the Camcorder during tape playback, you will want to use the AC Adapter/Charger if you intend to watch more than an hour's worth of recorded material.

How to Connect Your Camcorder to a Standard TV for Playback

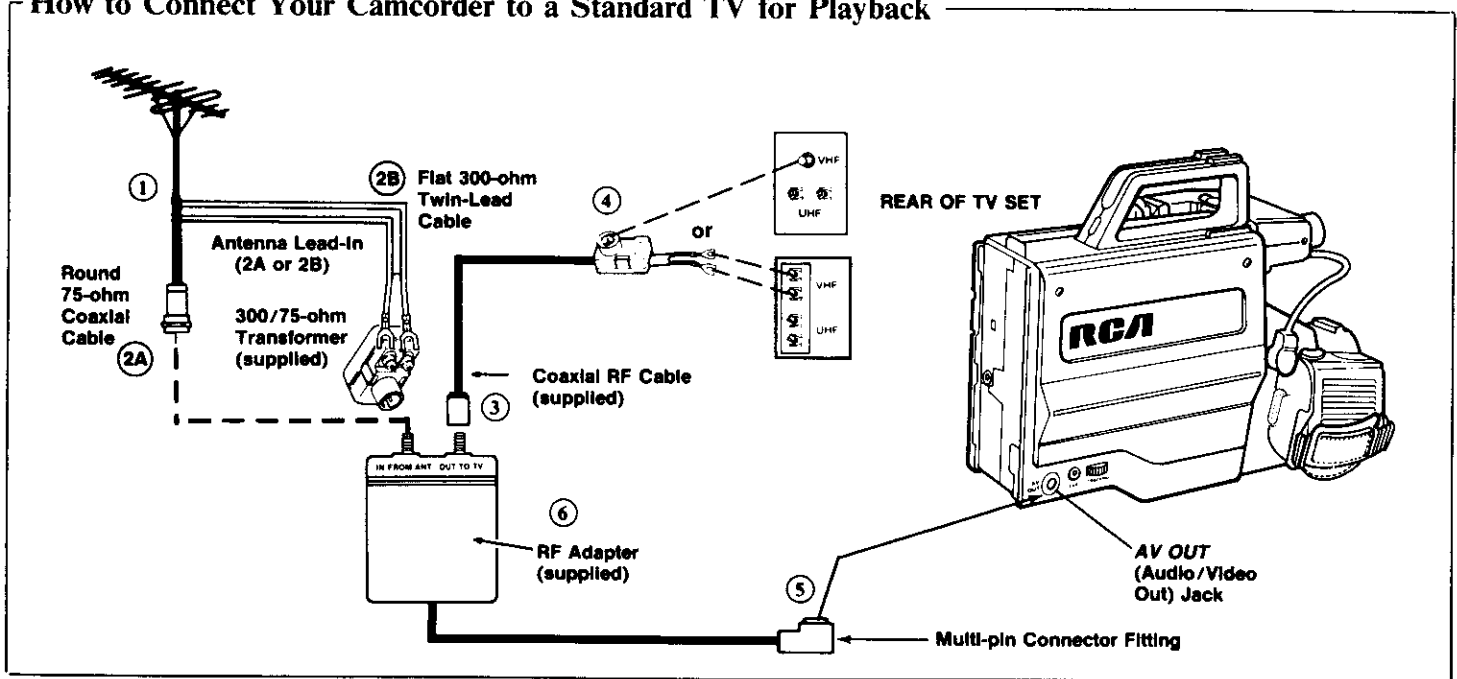

Follow the steps below if you have a standard TV. You will need the *RF Adapter* and *coaxial RF cable* packed in your Camcorder.

If your antenna cable is the flat 300-ohm twin-lead type that is attached by 2 screws, you will also need the *300/75-ohm transformer* that was packed with your Camcorder.

- ① Disconnect the VHF antenna from your TV set. (You can leave the UHF wires alone.)
- ② Connect your VHF antenna to the RF adapter packed with your Camcorder.
 - A If your antenna cable is a round 75-ohm cable, connect it to the *IN FROM ANT* terminal on the RF adapter.
 - B If your antenna cable is a flat 300-ohm twin-lead, you will need the 300/75-ohm transformer that was packed in

your Camcorder. Connect the flat-lead connectors to the screw terminals on the 300/75-ohm transformer. Then connect the transformer to the *IN FROM ANT* terminal on the RF adapter.


- ③ Attach one end of the coaxial RF cable packed in your Camcorder to the *OUT TO TV* terminal on the RF adapter.
- ④ Connect the other end of the coaxial RF cable to the *VHF IN* terminal on the back of your TV. (If your TV has screw terminals, connect the adapter's flat lead connectors to the screw terminals.)
- ⑤ Plug the multi-pin connector fitting on the RF adapter into the *AV OUT* (Audio/Video Out) jack on the Camcorder. To aid connection, match the tabs on the fitting with the notches on the Camcorder jack. Don't force the fitting. If it does

not slide in easily, check your marks and try again. (If the Camcorder is used as a camera while connected to the TV, be sure to turn the set's volume down to prevent a high-pitched squeal caused by feedback.)

- ⑥ Set the *RF OUTPUT* switch on the RF adapter to Channel 3 or 4, whichever is not used as a broadcast channel in your area. Turn on the TV and tune it to the channel you have chosen.
- ⑦ During playback, you may fine tune the TV channel if necessary. (For details of playback operation, refer to page 18.)
- ⑧ For normal TV viewing, you may leave the RF adapter hooked up to the TV set. Just disconnect the adapter from the Camcorder or turn off the Camcorder's power.

Playback Operation, Cont'd.

How to Connect Your Camcorder to a Video Monitor for Playback

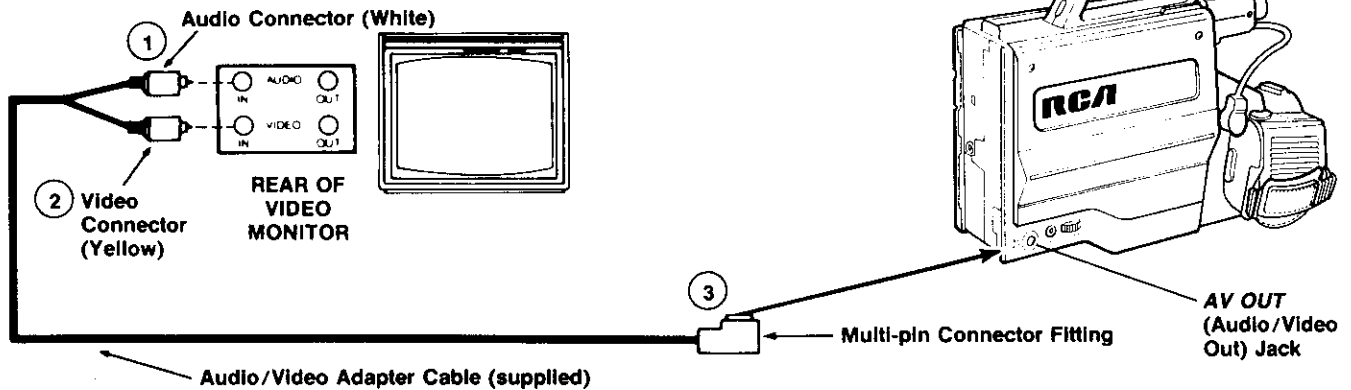

The *audio/video adapter cable* packed with your Camcorder is used to connect your Camcorder to a video monitor having jacks for direct audio/video inputs.

- ① Connect the white audio connector plug on your audio/video adapter cable to the *AUDIO IN* jack on the back of your monitor.
- ② Connect the yellow video connector plug on the audio/

video adapter cable to the *VIDEO IN* jack on the back of your monitor.


- ③ Plug the multi-pin connector fitting on the other end of your audio/video adapter cable into the *AV OUT* (Audio/Video Out) jack on your Camcorder. **CAUTION:** Do not force the connector fitting. Match the tabs on the connector fitting to the notches on the Camcorder jack. If the connector does not

slide in easily, check your marks and try again.

The Camcorder now is connected to the Monitor for tape playback. (For details of playback operation, refer to Page 18.)

Note: If the Camcorder is operated in the Camera mode while connected to the monitor, turn the monitor's volume down to prevent the high-pitched squeal caused by audio feedback.

How to Connect Your Camcorder to a VCR

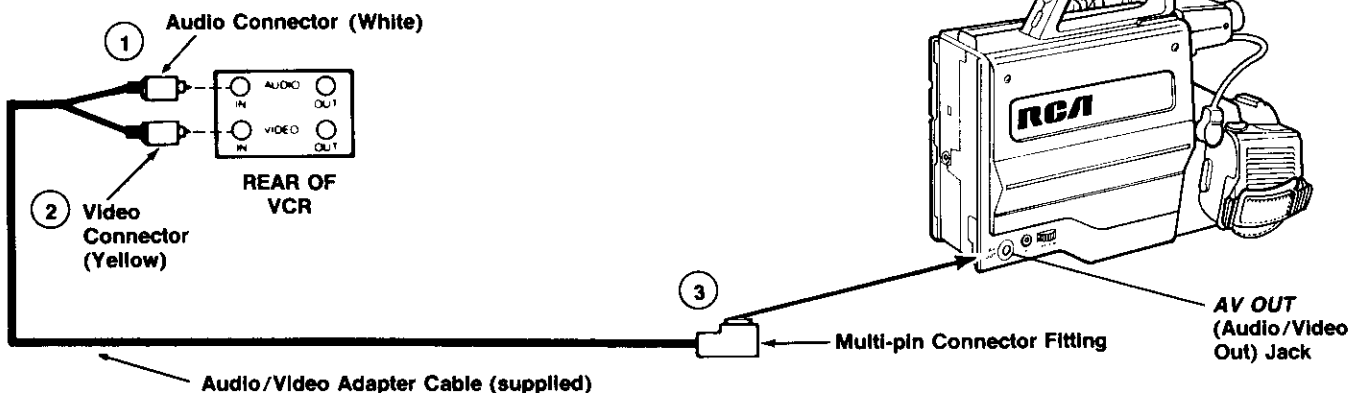

The *audio/video adapter cable* packed with your Camcorder is used to connect your Camcorder to another VCR.

- ① Connect the white audio connector plug on your audio/video adapter cable to the *AUDIO IN* jack on the back of your VCR.
- ② Connect the yellow video connector plug on the audio/

video adapter cable to the *VIDEO IN* jack on the back of your VCR.

- ③ Plug the multi-pin connector fitting on the other end of your audio/video adapter cable into the *AV OUT* (Audio/Video Out) jack on your Camcorder. **CAUTION:** Do NOT force the connector fitting. Match the tabs on the connector to the notches on the Camcorder jack.

If the connector does not slide in easily, check your marks and try again.

Your Camcorder is now connected to the VCR for tape copying. Detailed information on tape copying is on Page 19.

CAUTION: The unauthorized recording of copyrighted material may infringe the rights of others. Such recordings should not be made.


Playing Tapes Through the Viewfinder

Viewfinder playback is the simplest way to watch tapes using the Camcorder, but because the display is black & white, this method is generally used only to review scenes immediately after recording.

To view a tape through the Camcorder's electronic viewfinder, follow these steps:

- ① Turn the Camcorder on by sliding the *POWER* Switch to the *ON* position. Press the *EJECT* button and insert the cassette you wish to view.
- ② Place the *CAMERA/PLAYBACK* switch in the *PLAYBACK* position.
- ③ If you wish to hear the tape's audio, plug the earphone into the earphone jack (*EAR*).
- ④ Press the *PLAY* button. Playback can be viewed by watching the viewfinder screen. (Remember to adjust the Eyepiece Focus Control for your vision).
- ⑤ If you wish to visually scan the tape in forward or reverse, press and hold the *F.FWD* (Fast Forward) or *REWIND* button while in the *PLAY* mode. Release the button to return to normal playback speed.
- ⑥ If you wish to stop the action, press the *PAUSE* button while in the *PLAY* mode. Press the *PAUSE** button again to return to normal playback.
- ⑦ Don't forget to rewind the cassette when you are finished viewing tape playback.

*Pause is designed for momentary interruptions and should not be used for an extended period of time. If the Camcorder remains in the Play/Pause mode for more than 5 minutes, the Camcorder will automatically go to stop mode to prevent excessive tape wear.

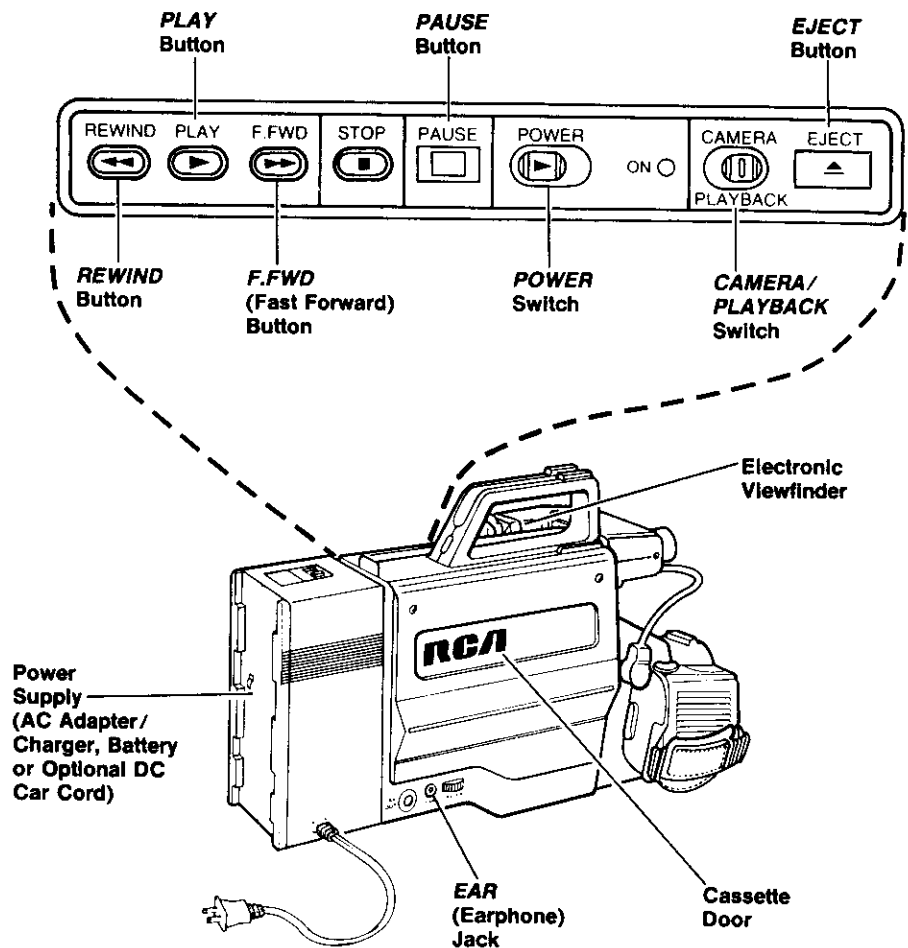

Playing Tapes Through a TV or Video Monitor

Follow these steps when you wish to play back tapes on your TV or Video Monitor (after you have connected your Camcorder to the appropriate display device) (See pages 16 & 17 for connecting instructions).

- ① Turn the Camcorder on by sliding the *POWER* Switch to the *ON* position. Press the *EJECT* button and insert the cassette you wish to view.
- ② Place the *CAMERA/PLAYBACK* switch in the *PLAYBACK* position.
- ③ Press the *PLAY* button to begin playback.
- ④ If you wish to visually scan the tape in forward or reverse, press and hold the *F.FWD* (Fast Forward) or *REWIND* button while in the *PLAY* mode. Release the button to return to normal playback speed.
- ⑤ If you wish to stop the action, press the *PAUSE** button while in the *PLAY* mode. Press the *PAUSE* button again to return to normal playback.
- ⑥ Don't forget to rewind the cassette when you are finished viewing tape playback.

NOTE: The picture will contain some horizontal lines during forward search, reverse search, and stop action.

*Pause is designed for momentary interruptions and should not be used for an extended period of time. If the Camcorder remains in the Play/Pause mode for more than 5 minutes, the Camcorder will automatically go to stop mode to prevent excessive tape wear.

Tape Copying and Recording on Your Camcorder from a TV or Monitor

How To Copy Your Tapes on a Home VCR

You can make extra copies of your videos to share with friends and family if you have a home VCR.


- ① Attach your Camcorder to your VCR as illustrated on Page 17.
- ② Put your VCR in the *LINE* or *CAMERA* mode.
Note: If your VCR does not have a *LINE* or *CAMERA* mode, consult your owner's manual for proper operation when the *AUDIO/VIDEO* external *IN* jacks are being used.

- ③ Place a new tape into your VCR.
- ④ Turn on your Camcorder. Press the *EJECT* button and insert the cassette you wish to copy into your Camcorder.
- ⑤ Put your VCR in the *RECORD* mode and press *PLAY* on your Camcorder.
- ⑥ Remember to rewind your tapes when you have completed your copying and put your VCR out of the *LINE* or *CAMERA* mode for normal use.

CAUTION: The unauthorized recording of copyrighted material may infringe the rights of others. Such recordings should not be made.

Note: You can tune your TV or monitor to your VCR channel (3 or 4) and watch what you are recording.

How to Record from Your TV/Monitor on Your Camcorder

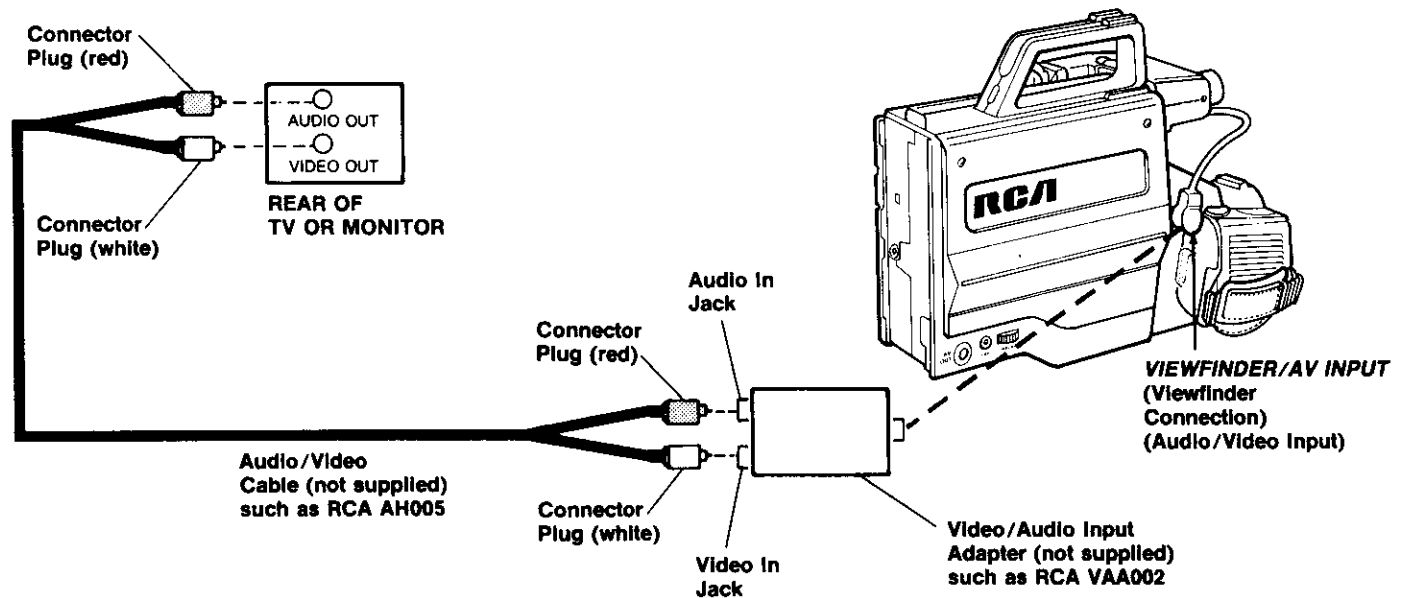

If your TV or Monitor has *AUDIO OUT* and *VIDEO OUT* jacks, you can connect your Camcorder and record from your TV or Monitor with your Camcorder.

- ① Connect the TV or Monitor as shown above making sure the same color is connected to *AUDIO* jacks on both the TV/Monitor and adapter and the same color to the *VIDEO* jacks on both the TV/Monitor and adapter.
- ② Remove the viewfinder cable and attach the optional VAA002 adapter to the Camcorder.
- ③ Attach a power supply to your Camcorder. If you plan to record for over an hour, you will probably want to use the AC Adapter/Charger.
- ④ Push the *EJECT* button on your Camcorder and place a cassette in your recorder.
- ⑤ Put the *CAMERA/PLAYBACK* switch in the *CAMERA* position.
- ⑥ Turn on your TV and tune it to the channel you wish to record.
- ⑦ Press the Record Start/Stop Button on the side of the Camcorder.
- ⑧ When you are finished recording, press the Record Start/Stop button again.
- ⑨ Remember to rewind your tape when you are finished.

Making Better Videos

Camcorder Recording Tips

Use your Camcorder's Power Zoom to help you focus manually. Before you start recording, zoom in on your subject, adjust the **POWER FOCUS** Buttons (◀ and ▶) until you see a clearly focused image in the viewfinder, then zoom back to the desired angle of view. Provided the subject-to-Camcorder distance does not change, the subject will remain in sharp focus over the entire zoom range.

REMEMBER: It's easier to make professional-looking videos if you check the focus before you start recording.

Keep your Auto Focus window clean and unobstructed to help assure proper Auto Focus operation.

Try to make sure indoor scenes you record have sufficient light. This improves picture quality and color reproduction.

Avoid long "still" shots of landmarks and scenic attractions. Your

recordings will be more interesting if they include people and detail.

"Local color" will give your travel videos lasting appeal. Consider taping a familiar or landmark scene from an unfamiliar vantage point to give your tape added interest. Remember to check your lighting before recording.

Use your **AUTO IRIS** control to fade in and out of scenes.

Practice recording under a variety of lighting conditions. This will help prepare you to respond whenever you see a scene you want to tape.

Try to avoid taping backlit subjects indoors. Bright light behind your subject may cause it to appear very dark and low in detail. Adjusting your **AUTO IRIS** control can help overcome this problem.

Include close-up shots of individuals when taping a family outing or other

group functions. These close-ups make your video memories special.

Be aware of video and audio backgrounds. Background visual details you barely notice while you're taping may show up as visual "clutter" when you review your taped scene. Background noises (especially television sets and radios, household appliances, traffic sounds) can detract from the sounds you want to record. And **REMEMBER:** Don't bump or tap your Camcorder's microphone while you're taping, because this sound will be recorded on your tape!

Don't move the Camcorder rapidly from side to side while you're recording. A steady, gradual "pan" avoids blurring and jitter in your taped scene.

Keep your Camcorder level while taping. Otherwise, your scenes will appear tilted. Keep a close eye on this in your viewfinder!

Travelling Tips

Make sure you have any plug adapters you may need *before* taking your Camcorder to other countries. Ask your RCA dealer for advice. This will assure that you can power your Camcorder and AC Adapter/Charger as needed.

Jot down your Camcorder's serial number and keep this note separate from your equipment when travelling. If your Camcorder is lost or stolen, you will be able to identify it.

Double check your equipment before taking your Camcorder on a trip or outing. Make sure you have with you all the equipment and accessories you'll need. Compiling a checklist makes it easy to be prepared. Bring this Owner's Manual with you for handy reference.

Make a list of sights and scenes you wish to record on a trip. This will help assure that you don't miss an important recording. Be alert for unexpected interesting scenes as well.

Don't leave your Camcorder and tapes in a car for more than a brief period. Excessive heat or cold can damage them.

Use extra care and caution to avoid damage to your Camcorder and accessories when operating them at a beach or pool. Spray, sand and dust should be avoided. Clean your lens gently and thoroughly if it has been exposed to the elements. Remember to use only proper lens cleaning supplies available at camera stores to protect your lens.

Carry your Camcorder in a proper case when travelling. (See Page 23 for RCA's specially designed Soft Carrying Case.) An ordinary suitcase or carry bag doesn't offer the protection and custom fit your Camcorder needs. For safety, treat your Camcorder as carry-on baggage to protect it from rough handling.

CAUTION: Do not attempt to use a "power converter" to use your AC Adapter/Charger on a power source other than 120 volts, 60 Hz or the Adapter/Charger may be damaged. If you plan to travel to a foreign country that does not use 120 volt, 60 Hz power, an optional CPS04 Adapter/Charger may be purchased from your RCA dealer. The CPS04 is designed for use on 100-240 volts, 50/60 Hz.

Tape Tips

Don't try to use a tape if it has been damaged or exposed to moisture. The tape may jam or damage your Camcorder.

Remember to break off the safety tab on your cassettes after making an important recording. This will help you safeguard crucial tapes from accidental erasure.

Remember to label your tapes before storing them. Preparing your label before you use your tape helps assure that you will know what it contains.

Be careful not to misplace tape boxes. These are essential for proper tape storage. If a tape box becomes wet, do not use it. It can damage your tape and Camcorder.

Care and Maintenance

Proper Care of Your Camcorder

- Be especially careful to keep dust from entering the Camcorder's cassette door. Dust and grit are abrasive and will cause excessive wear both of tapes and of the recording/playback heads.
- RCA recommends that RCA video cassettes be used with this unit. These tapes have been manufactured to RCA's critical specifications. Use of tapes not meeting these specifications could considerably reduce the performance of your Camcorder.
- Use of poor quality tapes can contaminate the video heads, resulting in a snowy picture or no picture at all during playback.
- Playing a new RCA tape for approximately 15 minutes may satisfactorily clean the heads and improve the picture. If a snowy picture or no-picture condition persists, consult your authorized RCA Servicenter or the RCA Service Company.
- To clean the lens, always use lens-cleaning tissues and a commercially prepared cleaning solution designed for use on camera lenses. Improper cleaning can scratch the lens. *Do not touch the lens with your fingers!* The oil from your skin can damage the lens.

Things to Avoid

- Do not attempt to disassemble your Camcorder. There are no user-serviceable parts inside.
- *Never attempt to force open the cassette door.* If the battery reaches its empty level during recording, the Camcorder will shut off but the battery should have enough reserve power to eject the cassette when you press the *EJECT* button. If the Camcorder does not eject the cassette, do not attempt to force open the cassette door. This will damage your Camcorder. To remove the cassette, simply power your Camcorder with the AC adapter/charger or recharge the battery before attempting to eject the tape.
- Do not use the Camcorder in extremely humid environments.
- If you attach a video light to your Camcorder, make sure it does not get too hot. Excessive heat could damage the Camcorder.
- Do not use the Camcorder for extended periods in temperatures below 40°F or above 95°F.
- Do not expose the Camcorder or AC Adapter/Charger to rain or moisture. If either component becomes wet, immediately turn off power and take the unit to the RCA Service Company or an RCA Authorized Video Camera/Camcorder Servicenter.
- Do not operate your Camcorder in a strong magnetic field. Otherwise, you risk interference to or erasure of recorded information.
- Avoid operating your Camcorder immediately after moving it from a cold location to a warm location. Give the Camcorder 1-1½ to 2 hours to reach a stable temperature before inserting a video cassette. When moved from a cold area to a warm location, moisture may condense on the head drum inside the machine. This moisture could cause the tape to stick to the headwheel and damage the headwheel or tape.

Storing Your Camcorder

- Store and handle your Camcorder so that it is not subjected to swinging, shaking, or dropping. The Camcorder can be damaged by improper storage or handling.
- Don't store the Camcorder in temperatures below -22°F or above 149°F.
- Always remove the cassette and AC Adapter/Charger or battery from the Camcorder when the Camcorder is not in use.
- Retain the original carton for future storage or shipping purposes.



CAUTION: Avoid operating your Camcorder right after you have moved it from a cold location directly to a warm location. Let it warm up for about 1-1/2 to 2 hours before inserting a video cassette tape. When moved from a cold spot to a warm spot, moisture may condense on the head drum inside the machine. The moisture may cause the tape to stick and damage the head wheel or tape.

Camcorder Accessories

Mounting Your Camcorder on an Optional Tripod

The Camcorder may be attached to a tripod when you wish to make recordings without holding the Camcorder. This will keep the Camcorder very steady and produce excellent video results. Mount the Camcorder onto a tripod by attaching the mounting screw on the tripod to the mounting hole on the bottom of the Camcorder, as shown at right.

CAUTION: Before using a tripod, make sure it is stable enough to hold the Camcorder without falling over.

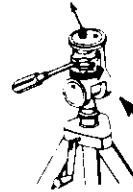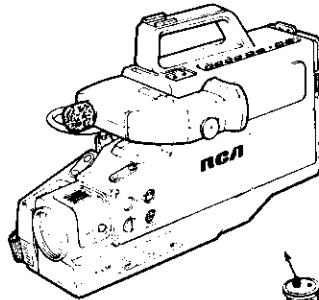

Tripod such as RCA #AC009, AC011, AC001, or AC018


CAUTION: When attaching your Camcorder to a tripod, be careful not to force the tripod screw into the Camcorder's tripod mounting hole.

The tripod screw should not protrude into the Camcorder more than approximately $\frac{1}{8}$ ". Forcing the screw could damage the mounting hole.

Using the Camcorder's Shoulder Strap

Among the accessories packed with your Camcorder is a shoulder strap.

The proper procedures for attaching the shoulder strap is in the diagram illustrated.

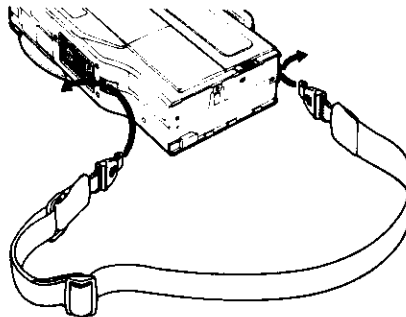

***Note:** When using the Camcorder with the shoulder strap, you may find it convenient to tilt the viewfinder up. This helps prevent the viewfinder from striking your body as you move, which could damage it under certain conditions.

The shoulder strap is designed to let you carry the Camcorder from your shoulder and—when you are ready to record—bring the unit to shooting position in one quick movement.*

Continued on next page

Camcorder Accessories, Cont'd.

Optional Accessories



KK040 Soft Carrying Case
accommodates Camcorder and accessories.



 
KK046 Hard Carrying Case
affords greater protection for Camcorder and accessories when traveling.



CB060 One Hour Battery:
Additional 1-hour battery for powering your Camcorder. Battery recharges from AC Adapter/Charger.



CB120 Long Play Battery:
2-hour battery extends operating time an additional 2 hours. Battery recharges from AC Adapter/Charger.




CPS04 AC Adapter/Charger
operates on 100-240 volts, 50/60 Hz and lets you operate your Camcorder in foreign countries. Consult your dealer before going on vacation, you may need a plug adapter also in some countries.



CGA020 or CGA030 Character Generator/Title Generator makes it easy to create professional titles and special effects on your tapes. Includes a memory feature and built-in belt clip.



DCC012 DC Power Cord lets you operate your Camcorder from your car's 12-volt negative ground electrical system.

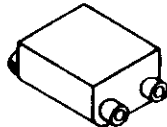

VAA002 Video/Audio Input Adapter Adapter permits you to record video and audio from an external source.



LX152A or LX153 Lens Extender increases Camcorder's magnification by 1.5 times throughout its zoom range. Contained in a snap-closure black vinyl case with padded interior.

Note: The LX153 is lighter and recommended for this Camcorder.




WAL01A or WAL02 Wide Angle Lens Lens expands Camcorder's field of view by a factor of .6 to permit wide panoramas without planning. Black vinyl snap-closure case with padded interior for easy access storage.


Note: The WAL02 is lighter and recommended for this Camcorder.



FSA036A Slide Adapter permits transfer of slides to tape. Kit includes three step rings, three sizes of frame holders and one filter. Accommodates 35mm slides.

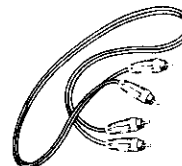

 AH005 VHS Dubbing Cable Lets you connect your TV to your Camcorder using the VAA002 Video/Audio Adapter to record from your TV/Monitor on your Camcorder. **Note:** Your TV/Monitor must have VIDEO OUT and AUDIO OUT jacks.



AV009W Head Cleaning Kit Non-abrasive wet system VHS VCR head cleaner. Be sure to follow directions carefully.

Trouble Checks

Check This List First If You Have a Problem

Sometimes problems can be solved easily by checking a few basics. Before you call for help or take your Camcorder to an RCA Authorized Servicer or the RCA Service Company, check the troubleshooting tips below. You could save time and money.

If service should be necessary, RCA Authorized Video Camera Servicers and the RCA Service Company are trained and equipped to furnish it.

No Power (indicator will not come on)

- If using battery, recharge.
- If using AC adapter/charger, make sure unit is plugged into working outlet.
- If using AC adapter, do not push *CHARGE* button or power to your Camcorder will be turned off.

Won't Record or Play Back

- If power light is blinking, there is moisture in unit. Leave power on and wait for light to stop blinking.
- No cassette in Camcorder.
- Eject and reinsert cassette.
- Broken tape; try another cassette.
- End of tape; rewind cassette.

Won't Play Back

- Place *CAMERA/PLAYBACK* switch in *PLAYBACK* position.

Won't Record

- Safety tab has been removed from cassette. (See page 3.)
- Place *CAMERA/PLAYBACK* switch in *CAMERA* position.

No Picture in Viewfinder (EVF)

- Check EVF cable connection.

Tape Stops During Rewind or Fast Forward

- Memory function is active. If tape counter is displayed, press *REWIND* or *FAST FORWARD* again or remove Tape Counter Display from EVF and press again to rewind or fast forward cassette.

Camcorder Remains in Still Frame Mode

- Press *PAUSE* button for normal playback.

Blinking Shutter Speed (1/120, 1/250, 1/1000 or 1/2000) in Viewfinder (EVF)

- There is not enough light to record at this shutter speed.
- Put *NORMAL/SHUTTER* Switch in *NORMAL* position or reduce shutter speed.

Poor Auto Focus Operation

- Place *MAN/AUTO FOCUS* Switch in *AUTO* position.
- Make sure operator is not covering Auto Focus window during recording.
- Subject is dark or behind glass. Auto Focus may not work under these conditions. Switch to manual focus.
- Lens is smudged and image appears unfocused.
- Viewfinder Eyepiece Focus Control is misadjusted. (See Page 12.)
- Camcorder is in *MACRO* mode. Press and hold down Power Zoom Button "T" to release *MACRO* mode and then focus on the object.

Poor Picture Quality During Recording

- Insufficient light. If picture looks too dark in the viewfinder with *AUTO IRIS* control in *AUTO* position, add light to scene.

Poor Picture Quality During Playback

- If picture contains black and white streaks, adjust *TRACKING* control to correct.

Picture Too Dark

NORMAL/SHUTTER switch is in *SHUTTER* position but there is not enough light. Shutter should be off for most shooting, especially indoors.

Index

- 0000 Tape Counter 8,13
- 12-volt DC Power Cord Jack 7,10
- AC Adapter/Charger 9,10,23
- Accessories (Included) 4
- Accessories (Optional) 22,23
- Accessory Shoe 5
- Adapter/Charger 9,10,23
- Adapter/Charger (foreign countries) 9,23
- Adapter/Charger (supplied) 9,10
- Adapter/Charger Safety Instructions 2
- Audio/Video Input 7
- Audio/Video Output Jack 7,16,17
- Auto Focus Mode 6,15
- Auto Focus Window 5
- AUTO IRIS* Control 6,14
- AUTO/MAN* FOCUS Switch 6,15
- AUTO/PUSH* Focus Switch 6
- AV OUT* Jack 7,16,17
- Basic Operation: Powering 9
- Basic Operation: Recording 11
- BAT* (Battery) Eject Lever 5,9,10
- Batteries (Optional) 23
- Battery Eject Lever 5,9,10
- Battery Level Indicators 9,12
- Battery Operation 9
- CAMERA/PLAYBACK* Switch 8
- Car Cord (Optional) 7,10,23
- Care & Maintenance 21
- Cassette Door 7
- Caution (Cold to Warm) 21
- CHARACTER* Button 6,13
- CHARGE* Button 9
- Charge Indicator Light 9
- Charging Battery 9
- Checklist (Trouble Checks) 24
- Cigarette Lighter Cord 7,10,23
- Color Balance 14
- Connection to Monitor 17
- Connection to TV 16,17
- Connection to VCR 17,19
- Contents 2
- Copy Tapes on VCR 19
- Correcting Date 13
- Counter Display 8,9,13
- Date (Correcting) 13
- Date (Recording) 13
- DATE* Set Buttons 6,13
- DC IN 12V* Jack 10
- DCC012 Car Cord 7,10,23
- Dew Indicator 8
- Display (Battery Level) 9,12
- DISPLAY* Button 8,13
- Displays in Viewfinder 12,13,14
- E---F Graphics 9,12
- EAR* (Earphone) Jack 7
- EJECT* Button 7,8,9
- EJECT* Tape Button 8
- Electronic Viewfinder 5,12
- Erase Protection (Tapes) 3
- EVF (Electronic Viewfinder) 5,12
- EVF Tilt Adjustment 12
- Experienced User Steps 4
- External Microphone Jack 7
- Eyeglass Control 5,12
- Eyepiece Focus Control 5,12
- F.FWD* (Fast Forward) Button 8
- Fast Forward Button (*F.FWD*) 8
- Features 3
- Flickering Effect 14
- Focus Buttons 6
- Focusing Camcorder 15
- Foreign Countries (Adapter/Charger) 9,23
- Functions (Features) 3
- Graphics (Battery Level) 9,12
- Graphics (*DISPLAY* Button) 8
- Hand Strap 7
- Input Adapter (VAA002) 7,19,23
- Inserting Tapes 3
- Introduction 2
- IRIS* Control 6,14
- Left Eye (Viewfinder) 12
- Lens 5
- Location of Controls 5,6,7,8
- Macro Button 6,15
- Macro Focus 15
- Maintenance & Care 21
- Making Better Videos (Tips) 20
- MAN/AUTO* FOCUS Switch 6,15
- Manual Focus Mode 6,15
- Memory Stop Feature 13
- Microphone 5
- Microphone Jack (External) 7
- Moisture (Caution) 21
- Moisture Warning 8,21
- Monitor Connection 17
- Negative Ground Systems 10
- NORMAL/SHUTTER* Switch 5,14
- PAUSE* Button 8
- PLAY* Button 8
- Play Back Tapes 16-19
- Play Tapes 16-19
- PLAYBACK/CAMERA* Switch 8
- Playing Tapes Thru Viewfinder 18
- Power Connector & Cover 7
- Power Focus Buttons 6
- POWER* Indicator 8
- POWER* Switch 8
- Power Zoom Buttons (*W & T*) 6,15

Powering Camcorder	9	Specifications	Back Cover
Precautions (Safety)	1	Start/Stop Record Button	7,11
Private Listening (Earphone Jack)	7	Status Display	12
Proper Care of Camcorder	21	<i>STOP</i> Button	8
<i>PUSH/AUTO</i> Focus Switch	6	Storing Camcorder	21
Quick Operation Steps	4	Streaks in Picture	7
Quick Review	6,12	<i>T & W</i> Buttons (Power Zoom)	6,15
<i>REC</i> Display in Viewfinder	7,11,12	Table of Contents	2
<i>REC</i> Graphic in Viewfinder	11	Tape Counter	13
Recharging Battery	9	Tape Counter <i>RESET</i> Button	8,13
Record From TV	19	Tape <i>EJECT</i> Button	8
Record Start/Stop Button	7,11	Tape Tips	20
Recording Basics	11	Tapes (Video Cassettes)	3
Recording Date	13	Telephoto Zooms	6,15
Recording Features	12-15	Things to Avoid	21
Recording Time (Tapes)	3	Tilt Adjustment (EVF)	12
Recording Tips	20	Tips	20
Registration	1	<i>TRACKING</i> Control	7
Removing Tape (Empty Battery)	7,9,11	Travelling Tips	20
Removing Tapes	3	Tripod	22
<i>RESET</i> Button (Tape Counter)	8,13	Trouble Checks	24
Review (Quick Review)	6,12	TV Connection	16,17
<i>REVIEW</i> Button	6,12	Unpacking	4
<i>REWIND</i> Button	8	VAA002 Input Adapter	7,19,23
RF Adapter	7	VCR Connection	17,19
RF Adapter	16	Video Cassettes (Tapes)	3
Right Eye (Viewfinder)	12	Viewfinder (Adjusting)	12
Safety Precautions	1	Viewfinder (Location)	5
Safety Tab (Cassettes)	3	Viewfinder (Playing Tapes)	18
Setting Date	13	Viewfinder Connection	7
<i>SHIFT</i> Button	6,13	<i>W & T</i> Buttons (Power Zoom)	6,15
Shoe (Accessory Shoe)	5	Warranty	Back Cover
Shoulder Strap	22	Warranty Registration	1
<i>SHUTTER SPEED</i> Button	5,14	Wide Angle Zooms	6,15
<i>SHUTTER/NORMAL</i> Switch	5,14	Zoom Buttons (<i>W & T</i>)	6,15

Specifications

General

Power requirement: 12VDC
Power consumption: 9.5 watts (nominal)
Weight: 4.4 lbs. (2.0 kg)
Dimensions: $4\frac{7}{8}$ " (W) \times $9\frac{13}{16}$ " (H) \times $13\frac{15}{16}$ " (D) (117 \times 250 \times 337 mm)

Video Recorder Section

Format: VHS
Record/Playback System:
Four video record/playback heads
Video Signal: EIA Standard NTSC
Color

Camera Section

Scanning: 525 Lines/60 Fields/30
Frames
Required Minimum Illumination:
7 lux (0.7 foot-candle)
Image Sensor: $\frac{2}{3}$ " solid state MOS
Imager
Tripod Mount: One $\frac{1}{4}$ " \times 20 threaded
hole
Lens Diameter: 46mm

RCA Limited Warranty

What does your warranty cover:

- Any manufacturing defect in material or workmanship.

For how long after purchase:

- Ninety days for labor charges.
- One year for parts.
- The warranty period for rental Camcorders begins with the first rental.

What will RCA do:

- Pay any RCA Authorized Video Camera Servicenter the labor charges to repair your Camcorder.
- Provide new or, at our option, rebuilt replacement parts for the RCA Video Camera Servicenter to make the repairs.

How do you get service:

- Take your Camcorder to any RCA Authorized Video Camera Servicenter or RCA Service Company. For their names and locations, ask your dealer or RCA Distributor, or look in the Yellow Pages.
- Show the service technician your Warranty Registration or evidence of purchase date.
- Pick up your Camcorder when repairs are completed.

What does your warranty *not* cover:

- Customer instruction. Your Owner's Manual provides information regarding operating instructions and user controls. For additional information ask your dealer.
- Cleaning of video/audio heads, which is normal maintenance.
- Damage from misuse or neglect.
- Camcorders which have been modified or incorporated into other products.
- Camcorders purchased or serviced outside the USA.

How does state law relate to this warranty:

- This warranty gives you specific legal rights, and you also have other rights which vary from state to state.

What if you purchased your Camcorder in Canada:

- Refer to the Canadian Warranty.

Si un livret d'instructions en français n'est pas inclus avec votre appareil, vous pouvez en obtenir un (INDIQUER LE NUMÉRO DE MODÈLE, VOTRE NOM, ET VOTRE ADRESSE) en vous adressant à:

RCA Inc.
Service des données techniques
5575 ave. Royalmount,
Ville Mont-Royal, Québec, Canada
H4P 1J8



RCA Corporation
Consumer Electronics Division
600 N Sherman Dr, PO Box 1976
Indianapolis, IN 46206-1976

©1987 RCA Corporation
Trademark(s) ® Registered
Marca(s) Registrada(s)
Printed in Japan
Part Number 2826 090-1
Job #A53409
E72118/E97130
4655367