

IMPORTANT - PLEASE KEEP FOR USE OF THE LOCAL ELECTRICAL INSPECTOR

CANADIAN INSTALLATION INSTRUCTIONS 30" ELECTRIC BUILT-IN WALL OVENS

READ "SAFETY PRECAUTIONS" IN USE & CARE BOOK BEFORE USING OVEN

In order to assure the best results in service, proper operation and maximum efficiency, the original installation and adjustment should be made by your dealer, his authorized agent, or by your local utility company before you attempt to operate the oven.

LOCATION

Place oven where it will be well lighted. For proper baking and cooking results, oven must be level. Use a spirit level on center oven rack to level. THIS ELECTRIC OVEN IS APPROVED FOR INSTALLATION IN COMBUSTIBLE CABINETS. SEE INSTALLATION DIAGRAM FOR THE OVEN ON THE REVERSE SIDE OF THE INSTRUCTION SHEET.

OUTSIDE WIRING


Your local utility company will tell you whether the present electric service to your home is adequate. It may be necessary to increase the size of the wiring to the house and service switch to take care of the electrical load demanded by the oven and/or top section. The wattage (K. W. rating) load for the oven is specified on the name plate on the unit.

HOUSE WIRING

Most local building regulations and codes require that all electrical wiring be done by licensed electricians. All wiring should conform to local or Canadian Electrical Codes. This oven requires a single phase 120/240 or a 120/208 volt, 60 Hz, AC circuit. Wiring codes require that a separate circuit be run from the main entrance panel to the oven. The main entrance panel is to be equipped with a separate disconnect switch and fuse as required by the local or Canadian electrical codes.


RANGE CONNECTIONS

The flexible armored conduit supplied with the oven must be connected to the approved electrical breaker box supplied with your oven. See figure number 1.

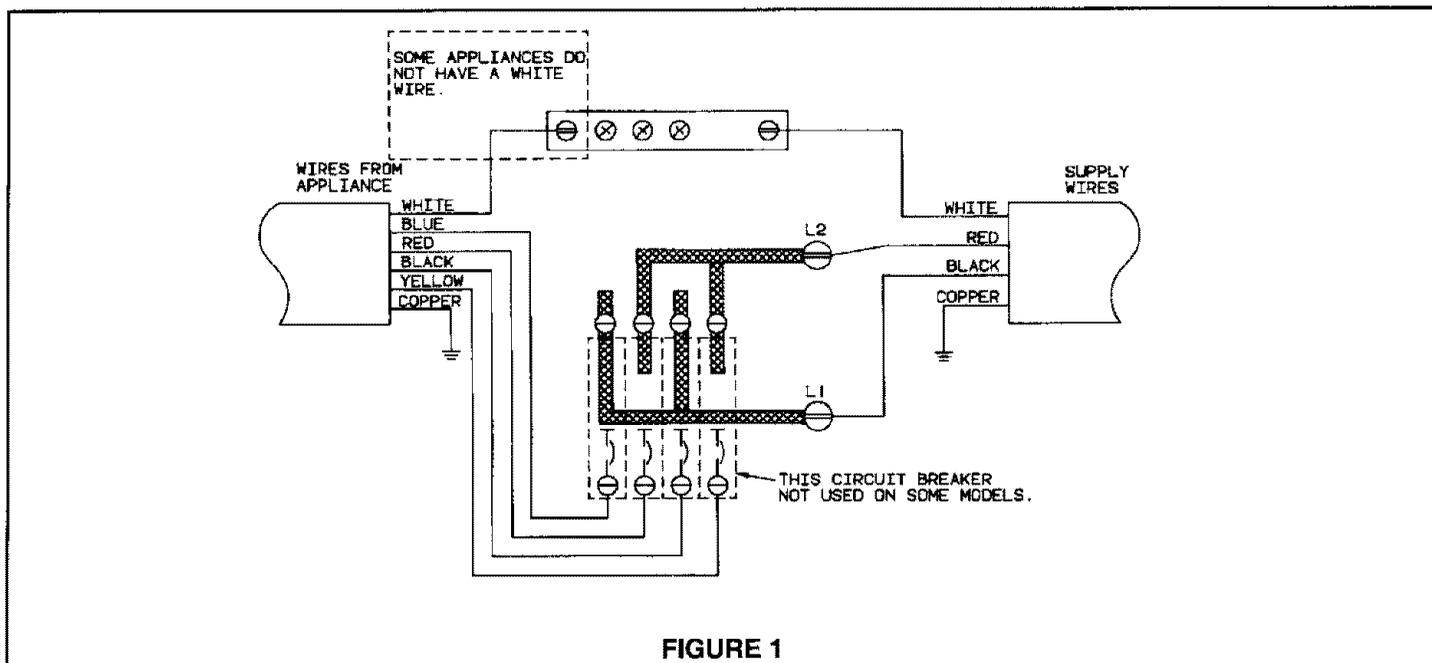


WARNING: Be sure OVEN IS DISCONNECTED FROM POWER SUPPLY BEFORE EXAMINING ANY OF THE ELECTRICAL EQUIPMENT.

SINGLE 30" WALL OVEN INSTALLATION

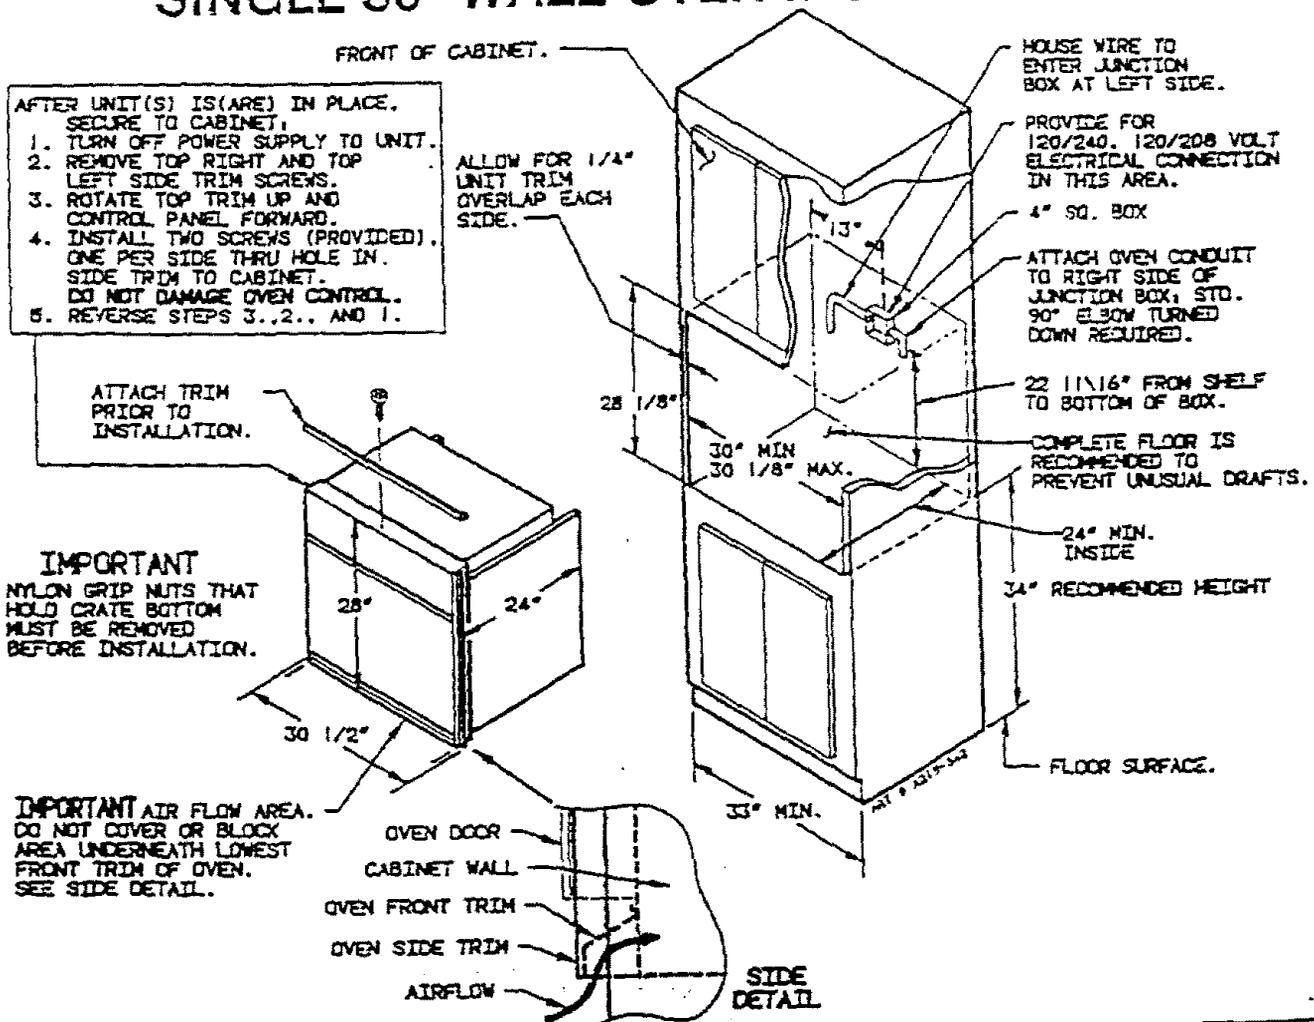

SINGLE 30" UNDERCOUNTER INSTALLATION

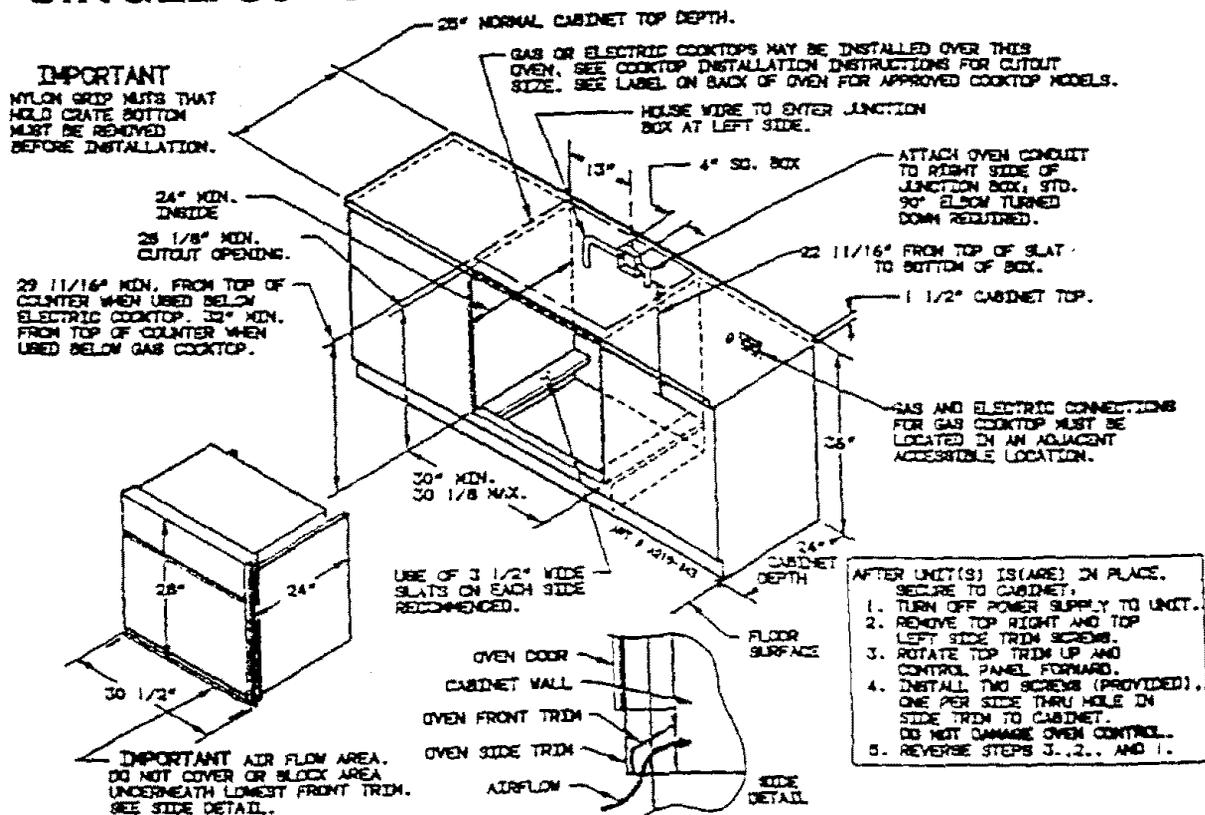

30" WALL OVEN/MICROWAVE COMBO INSTALLATION

IMPORTANT

NYLON GRIP NUTS THAT HELD CRATE BOTTOM MUST BE REMOVED BEFORE INSTALLATION.

FRONT OF CABINET

ALLOW FOR 1/4" UNIT TRIM OVERLAP EACH SIDE.

HOUSE WIRE TO ENTER CABINET CUTOUT AREA ABOVE LOCATION OF JUNCTION BOX THEN ENTER LEFT SIDE OF JUNCTION BOX.

MAY REQUIRE REROUTING OR RECESSING HOUSE WIRE ON REPLACEMENT INSTALLATIONS.

PROVIDE FOR 120/240 OR 120/208 VOLT ELECTRICAL CONNECTION IN THIS AREA.

COMPLETE FLOOR IS RECOMMENDED TO PREVENT UNUSUAL DRAFTS.

RANGE WIRES TO ENTER TOP OF JUNCTION BOX.

42 3/4" MAX
42 5/8" MIN

12"
27" TO BOTTOM OF BOX

24" MIN INSIDE

23" RECOMMENDED HEIGHT

ART #A219-846


30 1/4" MAX
30 1/8" MIN

SECURE OVEN TO CABINET THROUGH HOLES PROVIDED IN TRIM WITH FOUR SCREWS SHIPPED WITH UNIT.

42 7/8"

30 1/2"

23 3/4"

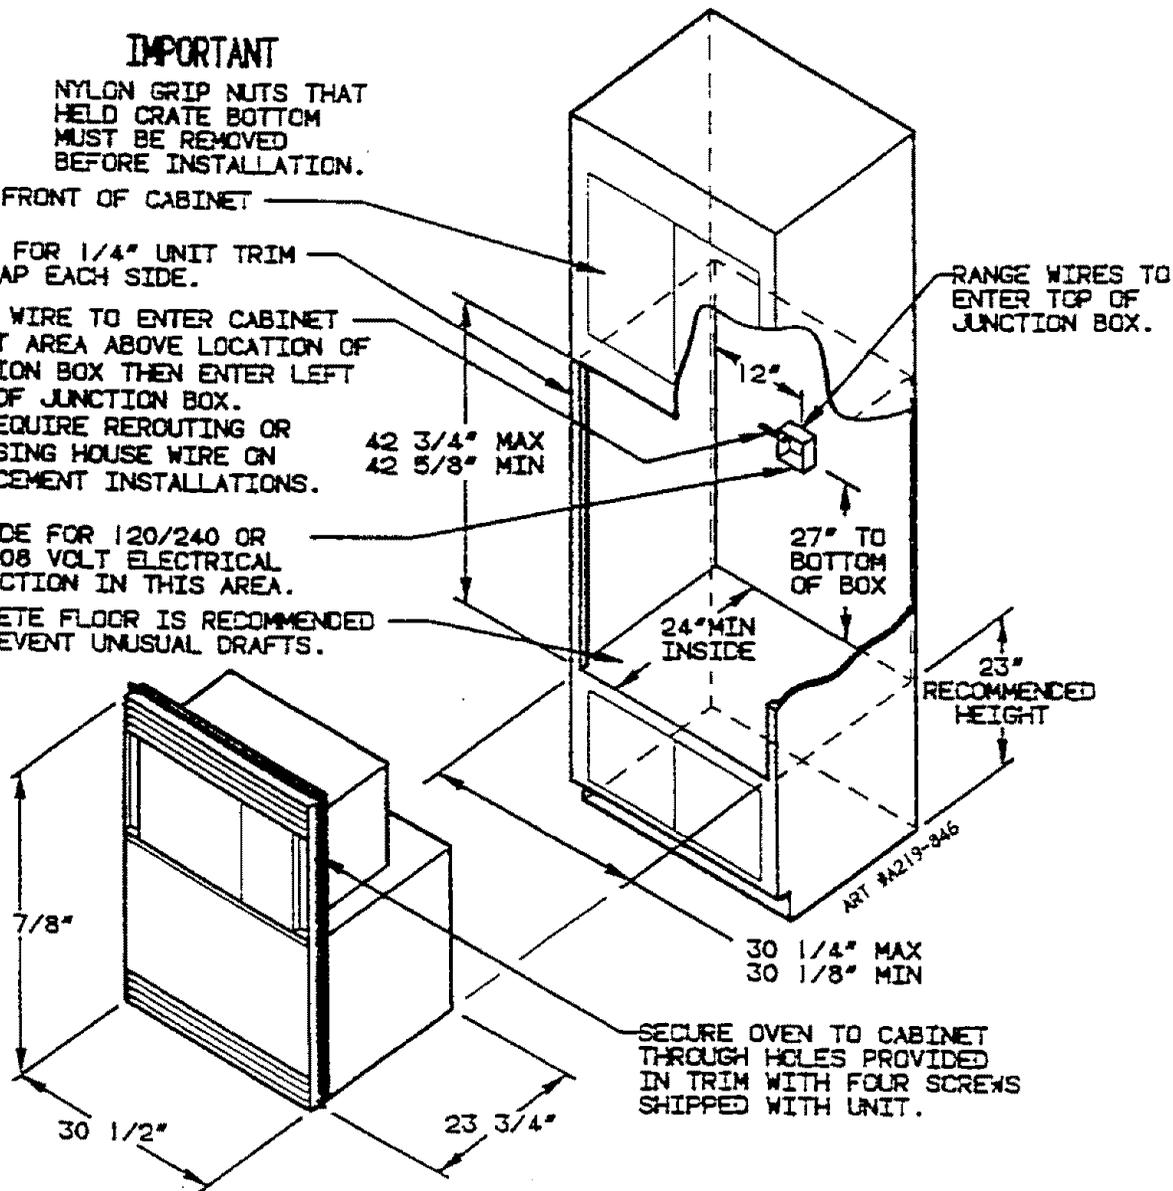

30" WALL OVEN/MICROWAVE COMBO INSTALLATION

IMPORTANT

NYLON GRIP NUTS THAT HELD CRATE BOTTOM MUST BE REMOVED BEFORE INSTALLATION.



FRONT OF CABINET

ALLOW FOR 1/4" UNIT TRIM OVERLAP EACH SIDE.

HOUSE WIRE TO ENTER CABINET CUTOUT AREA ABOVE LOCATION OF JUNCTION BOX THEN ENTER LEFT SIDE OF JUNCTION BOX. MAY REQUIRE REROUTING OR RECESSING HOUSE WIRE ON REPLACEMENT INSTALLATIONS.

PROVIDE FOR 120/240 OR 120/208 VOLT ELECTRICAL CONNECTION IN THIS AREA.

COMPLETE FLOOR IS RECOMMENDED TO PREVENT UNUSUAL DRAFTS.

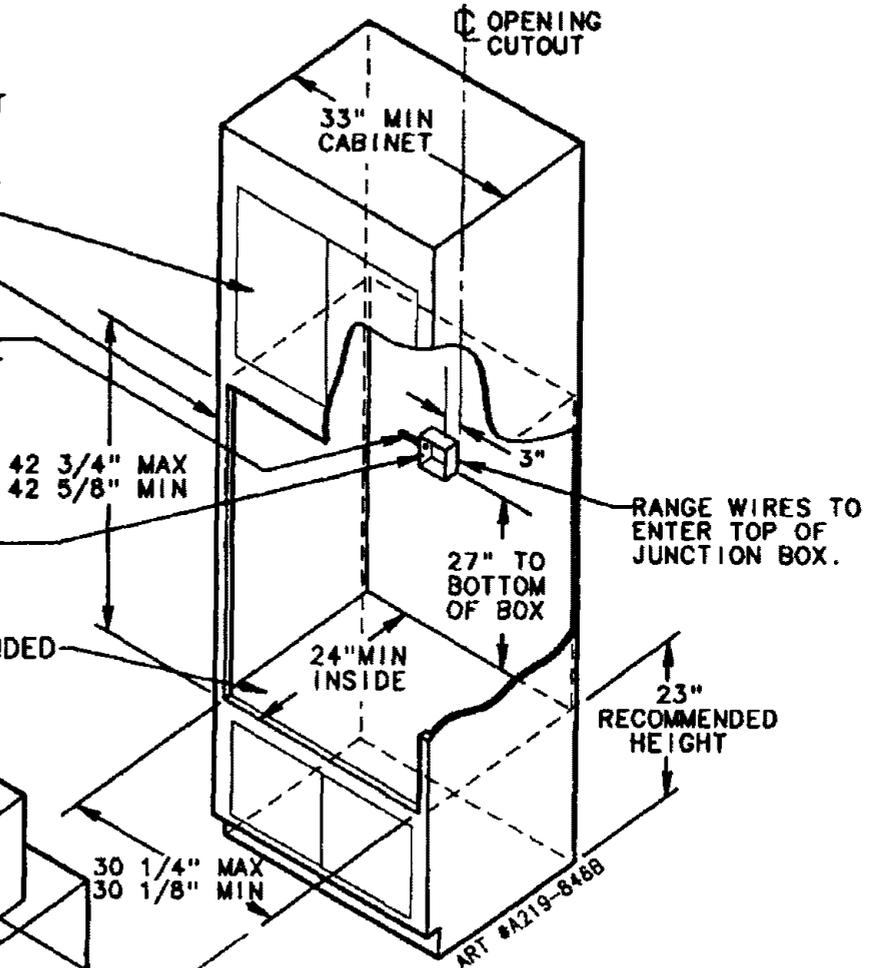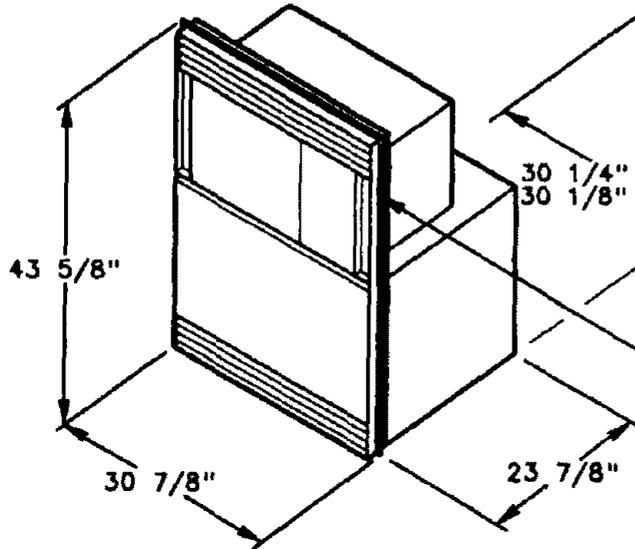

SECURE OVEN TO CABINET THROUGH HOLES PROVIDED IN TRIM WITH FOUR SCREWS SHIPPED WITH UNIT.