


Instruction Manual



4.6 Amp Motor / 0.080 In. Line **ELECTRIC WEEDWACKER**®

Model No.
358.745320

- **Safety**
- **Assembly**
- **Operation**
- **Maintenance**
- **Español**

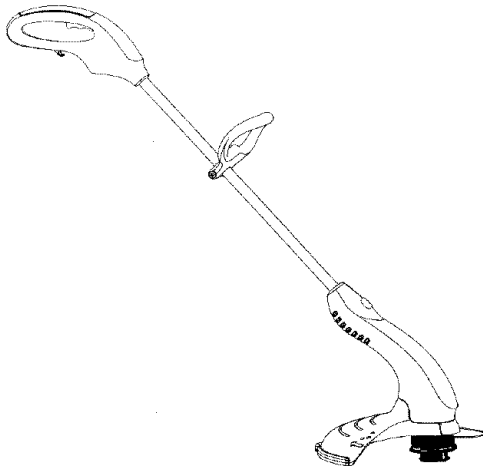

WARNING:

Read and follow all Safety Rules and Operating Instructions before first use of this product.



For answers to your questions about this product:
Call 7 am-7 pm, Mon-Sat; Sun, 10 am-7 pm

1-800-235-5878 (Hours listed are Central Time)

Sears, Roebuck and Co., Hoffman Estates, IL 60179 U.S.A.

TABLE OF CONTENTS

| | | | |
|-----------------------|---|-----------------------|------------|
| Warranty Statement | 2 | Parts Available | 9 |
| Safety Rules | 2 | Storage | 9 |
| Assembly | 5 | Troubleshooting Table | 10 |
| Operation | 6 | Spanish | 11 |
| Maintenance | 8 | Parts Ordering | Back Cover |
| Service & Adjustments | 8 | | |

LIMITED WARRANTY STATEMENT

FULL ONE YEAR WARRANTY ON CRAFTSMAN ELECTRIC WEEDWACKER® LINE TRIMMER

If this Craftsman Electric Weedwacker® Line Trimmer fails to perform properly due to a defect in material or workmanship within (1) one year from the date of purchase, Sears will replace it free of charge.

This warranty does **not** cover the nylon line.

WARRANTY SERVICE IS AVAILABLE BY RETURNING THE CRAFTSMAN ELECTRIC WEEDWACKER® LINE TRIMMER TO THE NEAREST SEARS STORE OR SERVICE CENTER IN THE UNITED STATES.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Sears, Roebuck and Co., D/817WA, Hoffman Estates, IL 60179

SAFETY RULES

WARNING: When using electric gardening appliances, basic safety precautions must always be followed to reduce the risk of fire, electric shock, and serious injury. Read and follow all instructions.




SAFETY INFORMATION
ON THE UNIT

This power unit can be dangerous! Operator is responsible for following the warnings and instructions in this manual and on the unit. Read entire instruction manual before using unit! Be thoroughly familiar with the controls and the proper use of the unit. Restrict the use of this unit to persons who read, understand, and follow unit and manual warnings and instructions. Never allow children to operate this unit. Close attention is necessary when used near children.

DANGER: Never use blades or flailing devices. Unit is designed for line trimmer use only. Use of any other accessories or attachments will increase the risk of injury.



WARNING: Trimmer line throws objects violently. You and others can be blinded/injured. Wear safety glasses, boots, and leg protection. Keep body parts clear of rotating line. Safety Glasses or similar eye protection

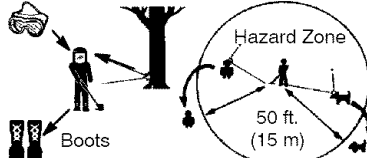

Keep children, bystanders, and animals 50 feet (15 meters) away. If approached stop unit immediately. If situations occur which are not covered in this manual, use care and good judgement. If you need assistance, call 1-800-235-5878.


OPERATOR SAFETY

- Dress properly. Always wear safety glasses or similar eye protection when operating, or performing maintenance on your unit. (Safety glasses are

available.) Always wear face or dust mask if operation is dusty. Always wear heavy, long pants, long sleeves, boots, and gloves. Do not go barefoot or wear sandals.

- Secure hair above shoulder length. Secure or remove loose clothing and jewelry or clothing with loosely hanging ties, straps, tassels, etc. They can be caught in moving parts.
- Being fully covered also helps protect you from debris and pieces of toxic plants thrown by spinning line.
- Stay Alert. Do not operate unit when you are tired, ill, upset or under influence of alcohol, drugs, or medication. Watch what you are doing; use common sense.
- Avoid unintentional starting of the unit. Never carry unit with your finger on the switch. Be sure the switch is in the OFF position and never touch the switch when connecting extension cord.

ELECTRICAL SAFETY

 **WARNING:** Avoid a dangerous environment. To reduce the risk of electrical shock, do not use in rain, in damp or wet locations, or around swimming pools, hot tubs, etc. Do not expose to snow, rain, or water to avoid the possibility of electrical shock.

- Use a voltage supply as shown on unit.
- Avoid dangerous situations. Do not use in the presence of flammable liquids or gases to avoid creating a fire or explosion and/or causing damage to unit.
- To reduce the risk of electrical shock, this equipment has a polarized plug (one blade is wider than the other) and will require the use of a polarized extension cord. The appliance plug will fit into a polarized extension cord only one way. If the plug does not fit fully into the extension cord, reverse the plug. If the plug still does not fit, obtain a correct polarized extension cord. A polarized extension cord will require the use of a polarized wall outlet. This plug will fit into the polarized wall outlet only one way. If plug does not fit fully into the wall outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper wall outlet. Do not change the equipment plug, extension cord receptacle, or extension cord plug in any way.

- To reduce risk of electrical shock, use extension cords specifically marked as suitable for outdoor appliances having electrical rating not less than the rating of unit. Cord must be marked with suffix "W-A" (in Canada "W"). Make sure your extension cord is in good condition. Inspect extension cord before use and replace if damaged. Do not use a damaged cord. Cord insulation must be intact with no cracks or deterioration. Plug connectors must be undamaged. An undersized extension cord will cause a drop in line voltage resulting in loss of power and overheating. If in doubt, use the next heavier gauge. The lower the gauge number, the heavier the cord (see SELECT AN EXTENSION CORD in the OPERATION section).
- Do not use multiple cords.
- Do not abuse cord. Never carry the unit by the extension cord or yank extension cord to disconnect unit.
- Tie cord to cord retainer and connect to recessed plug as shown in this manual to prevent damage to unit and/or extension cord and to reduce the possibility of the extension cord disconnecting from the unit during operation. See ATTACH THE EXTENSION CORD TO YOUR TRIMMER in the OPERATION section.
- Do not use the unit if the switch does not turn the unit on and off properly. Repairs to the switch must be made by your Sears Service Center.
- Keep the extension cord clear of operator and obstacles at all times. Do not expose cords to heat, oil, water, or sharp edges.
- To avoid the possibility of electric shock, avoid body contact with any grounded conductor, such as metal fences or pipes.
- Ground Fault Circuit Interrupter (GFCI) protection should be provided on circuit or outlet to be used. Receptacles are available having built-in GFCI protection and may be used for this measure of safety.

UNIT SAFETY

- Inspect unit before use. Replace damaged parts. Make sure all handles, guards, and fasteners are in place and securely fastened. Parts that are damaged must be repaired or replaced by a Sears Service Center. These include head parts that are cracked, or chipped, guards, and any other part that is damaged.

- Do not repair unit yourself.
- Use only Craftsman® brand trimmer line (see SERVICE AND ADJUSTMENTS). Never use wire, rope, string, etc.
- Use specified trimmer spool. Make sure spool is properly installed and all parts are securely fastened.
- Use only Craftsman replacement parts and accessories as recommended.

CUTTING SAFETY

- Inspect area to be cut. Remove objects (rocks, broken glass, nails, wire, string, etc.) which can be thrown or become entangled in cutting head.
- Do not overreach or stand on unstable support. Keep firm footing and balance.
- Keep the cutting head below waist level. Do not raise handles above your waist. Cutting head can come dangerously close to your body.
- Keep away from cutting head and spinning line.
- Use unit properly. Use only for trimming, edging, scalping, and mowing. Do not force unit. It will do the job better and with less risk of injury at the rate for which it was designed.
- Use only in daylight or in good artificial light.

MAINTENANCE SAFETY

⚠ WARNING: Disconnect unit from the power supply before performing maintenance, or when changing trimmer line.

- Maintain unit according to recommended procedures. Keep cutting line at proper length. Follow instructions for changing trimmer line.
- Have all service and maintenance not explained in this manual performed by a Sears Service Center to avoid creating a hazard.
- Never douse or squirt the unit with water or any other liquid. Clean unit and labels with a damp sponge. Keep handles dry, clean, and free from oil and grease.
- Keep the air vents clean and free of debris to avoid overheating the motor. Clean after each use.

TRANSPORTING AND STORAGE


- Stop the unit and disconnect the power source when not in use.
- Carry the unit with motor stopped.
- Store the unit so the line limiter blade (on underside of shield) cannot cause injury.
- Store unit indoors in a high, dry place out of the reach of children. Store unit unplugged.
- Do not hang unit so that the trigger switch is depressed.

DOUBLE INSULATION CONSTRUCTION

This unit is double insulated to help protect against electric shock. Double insulation construction consists of two separate "layers" of electrical insulation instead of grounding.

Tools built with this insulation system are not intended to be grounded. No grounding means is provided on this unit, nor should a means of grounding be added to this unit. As a result, the extension cord used with your unit can be plugged into any standard 120 volt electrical outlet.

Safety precautions must be observed when operating any electrical tool. The double insulation system only provides added protection against injury resulting from an internal electrical insulation failure.

⚠ WARNING: All electrical repairs to this unit, including housing, switch, motor, etc., must be diagnosed and repaired by qualified service personnel. Replacement parts for a double insulated appliance must be recommended by the manufacturer. A double insulated appliance is marked with the words "double insulation" or "double insulated". The symbol (square within a square)  may also be marked on the appliance. Failure to have the unit repaired by qualified service personnel can cause the double insulation construction to become ineffective and result in serious injury.

SAVE THESE INSTRUCTIONS

ASSEMBLY

CARTON CONTENTS

Check carton contents against the following list.

Model 358.745320

- Trimmer
- Shield
- Assist handle with wing nut and bolt
- Container of line

Examine parts for damage. Do not use damaged parts.


NOTE: If you need assistance or find parts missing or damaged, call 1-800-235-5878.

ASSEMBLY

⚠ WARNING: If received assembled, review all assembly steps to ensure your unit is properly assembled and all fasteners are secure.

ATTACHING THE ASSIST HANDLE


1. Place unit on a flat surface.
2. Loosen and remove wing nut and bolt from assist handle.
3. Firmly push the assist handle over the tube. To make installation easier, tilt handle toward trigger housing while pushing down (see illustration).
4. Reinstall bolt in handle. Thread wing nut onto bolt.
5. Adjust the handle up or down the tube to a comfortable position; tighten wing nut securely.

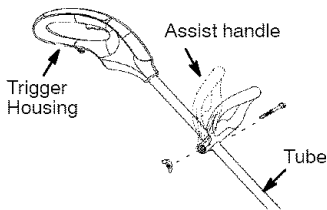

ATTACHING THE SHIELD

⚠ WARNING: The shield must be properly installed. If shield is not properly installed, damage to unit (including motor failure) will result. The shield provides partial protection to the operator and others from the risk of thrown objects. Your unit is equipped with a line limiter blade. The line limiter blade (on underside of shield) is sharp and can cut you.


NOTE: Edge guide must be positioned on shield prior to installation on motor housing (see following illustration).

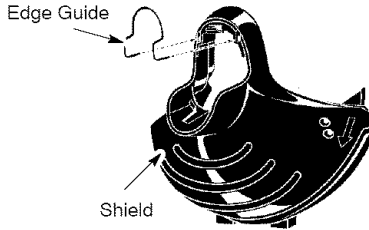

1. Hold shield at angle to the trimmer motor housing. Align the front locking tab of the shield with the front notch of the motor housing (see illustration below).
2. Move shield toward motor housing, ensuring trimmer head passes through opening in shield without catching on shield locking tabs.

NOTE: Ensure the cutting head remains free to rotate and the line is not caught between the shield and the motor housing.

3. Tilt front of the shield towards front notch of motor housing. Push front locking tab of the shield into the front notch of the motor housing. An audible snap must be heard.
4. Push back of the shield toward the motor housing as illustrated until the rear locking tabs snap securely into the rear notches. Make sure the shield is securely attached to the motor housing and is assembled to the unit as shown on the front cover of this manual.

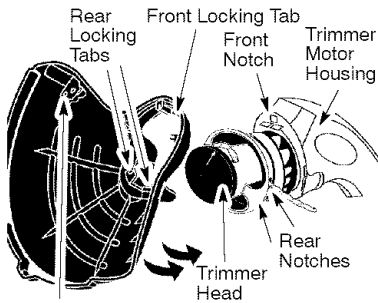


CAUTION: Sharp line limiter blade

OPERATION

KNOW YOUR TRIMMER

READ THIS INSTRUCTION MANUAL AND SAFETY RULES BEFORE OPERATING YOUR UNIT. Compare the illustrations with your unit to familiarize yourself with the location of the various controls and adjustments. Save this manual for future reference.

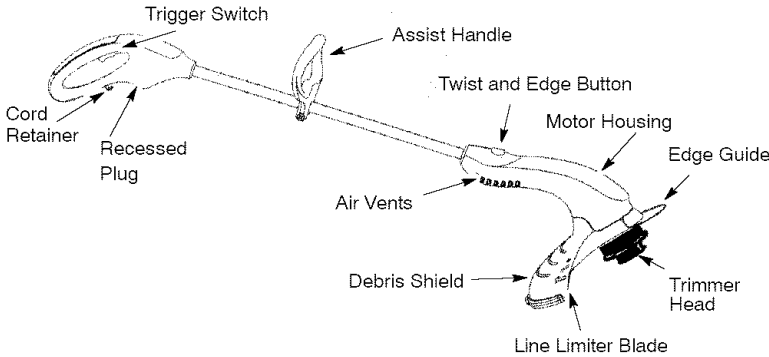

RECESSED PLUG

The RECESSED PLUG is used to connect the unit to an extension cord.

CORD RETAINER

The CORD RETAINER is used to secure the extension cord to the unit.

TRIGGER SWITCH

The TRIGGER SWITCH is used to turn on the unit. Squeeze the trigger switch to operate the unit. Release to stop.

LINE LIMITER BLADE

The LINE LIMITER BLADE cuts the cutting line to the proper cutting length.

ASSIST HANDLE

The ASSIST HANDLE is used to help hold and guide the unit.

TRIMMER HEAD

The TRIMMER HEAD holds the cutting line and rotates during operation.

TWIST AND EDGE BUTTON

The TWIST AND EDGE BUTTON is used to twist the lower portion of the unit into an edging position.

EDGE GUIDE

The EDGE GUIDE protects the unit from contacting the ground during edging.

OPERATING INSTRUCTIONS

Use only a voltage supply as specified on your unit.

SELECT AN EXTENSION CORD

| Extension Cord Gauge Chart | |
|----------------------------|----------|
| Length of Cord | Gauge |
| 25 Ft. (7.5 m) | 18 Gauge |
| 50 Ft. (15 m) | 16 Gauge |
| 100 Ft. (30 m) | 16 Gauge |


Extension cords are available for this unit at Sears.

Extension Cord
(16 Gauge) 71-85708


ATTACH THE EXTENSION CORD TO YOUR TRIMMER

Loop your extension cord through the handle and around the hook as shown. Insure the plug and cord are firmly and fully engaged.

CAUTION: Failure to use cord retainer could result in damage to the unit, extension cord, or both.

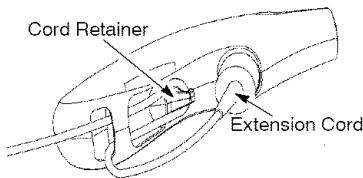

CORRECT OPERATING POSITION

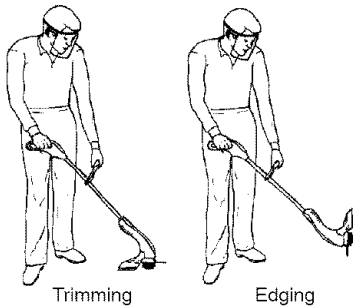

⚠ WARNING: Always wear eye protection. Never lean over the trimmer head. Rocks or debris can ricochet or be thrown into eyes and face and cause blindness or other serious injury. When operating unit, stand as shown and check for the following:


- Wear eye protection and heavy clothing.
- Hold trigger handle with right hand and assist handle with left hand.
- Keep unit below waist level.
- Cut only from your right to your left to ensure debris is thrown away from you. Without bending over, keep line near and parallel to the ground (perpendicular when edging) and not crowded into material being cut.

⚠ WARNING: Use only 0.080 inch (2 mm) diameter line. Other sizes of line will result in improper cutting head function or can cause serious injury. Do not use other materials such as wire, string, rope, etc. Wire can break off during cutting and become a dangerous missile that can cause serious injury. See page 2 for warning concerning other cutting devices.

TRIMMING

Hold the bottom of the trimmer head about 3 inches (8 cm) above the ground and at an angle. Allow only the tip of the line to make contact. Do not force trimmer line into work area.

Trimming

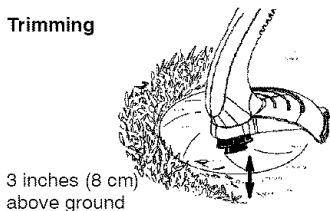

3 inches (8 cm)
above ground


EDGING POSITION

You can press this button and twist the lower portion 180° counterclockwise into an edging position.



EDGING


While edging allow the tip of the line to make contact. Do not force the line. The edge guard helps protect the unit and keeps the unit from contacting the ground. Take extra caution while edging as objects can be thrown from the trimmer line.

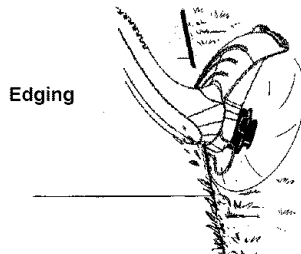

SCALPING

The scalping technique removes unwanted vegetation. Hold the bottom of the trimmer head about 3 inches (8 cm) above the ground and at an angle. Allow the tip of the line to strike the ground around trees, posts, monuments, etc. This technique increases line wear.


Scalping

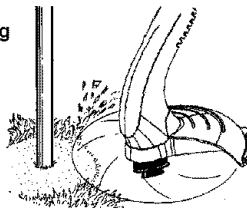

MOWING

Your trimmer is ideal for mowing in places conventional lawn mowers cannot reach. In the mowing position, keep the line parallel to the ground. Avoid pressing the head into the ground as this can scalp the ground and damage the tool.


Mowing

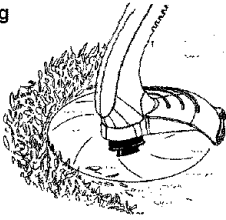

SWEEPING

The fanning action of the rotating line can be used for a quick and easy clean up. Keep the line parallel to and above the surfaces being swept and move the tool from side to side.

Sweeping

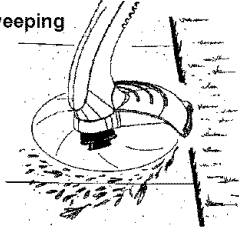

MAINTENANCE

CUSTOMER RESPONSIBILITIES

⚠ WARNING: Disconnect power source before performing maintenance.

| CARE & MAINTENANCE TASK | WHEN TO PERFORM |
|-------------------------------------|-----------------|
| Check for loose fasteners and parts | Before each use |
| Check for damaged or worn parts | Before each use |
| Inspect and clean unit and labels | After each use |

GENERAL RECOMMENDATIONS

The warranty on this unit does not cover items that have been subjected to operator abuse or negligence. To receive full value from the warranty, the operator must maintain unit as instructed in this manual. Various adjustments will need to be made periodically to properly maintain your unit.

BEFORE EACH USE

CHECK FOR LOOSE FASTENERS AND PARTS

- Housing Screws
- Assist Handle
- Debris Shield

CHECK FOR DAMAGED OR WORN PARTS

Contact a Sears Service Center for replacement of damaged or worn parts.

- Trigger Switch - Ensure switch functions properly by pressing and releasing the trigger switch. Make sure motor stops.
- Debris Shield - Discontinue use of unit if debris shield is damaged.

AFTER EACH USE INSPECT AND CLEAN UNIT AND LABELS

- After each use, inspect complete unit for loose or damaged parts. Clean the unit using a damp cloth with a mild detergent.
- Wipe off unit with a clean dry cloth.

SERVICE AND ADJUSTMENTS


REPLACING THE LINE

- Always use Craftsman replacement line.


Only use the line size specified and designed for this unit for cutting grass and small weeds.

NOTE: Before inserting new line into the holes in the cutting head, locate the three hole pattern. Follow directions as shown on the line glide plate.

1. Remove the old line from the cutting head.
2. Clean entire surface of cutting head.
3. Insert both ends of your line through the proper holes in the side of the cutting head.

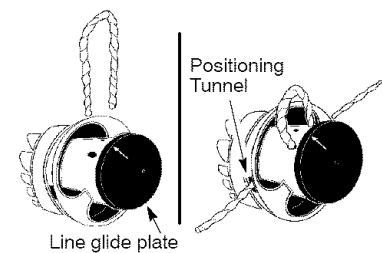

4. Pull the line and make sure the line is against the hub and extended full through the positioning tunnels.

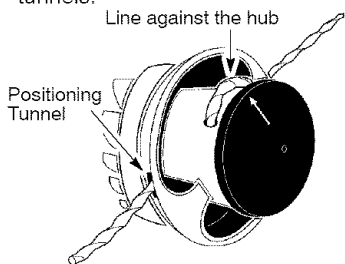


5. Correctly installed line will be the same length on both ends.

CAUTION: If line is installed incorrectly, the cutting head will not function properly and damage to the unit may occur.

NOTE: Line glide plate must be installed in cutting head before inserting new line. To reinstall line glide plate (if needed), align arrow with center hole of three hole pattern on side of cutting head as shown.

Center hole of three hole pattern

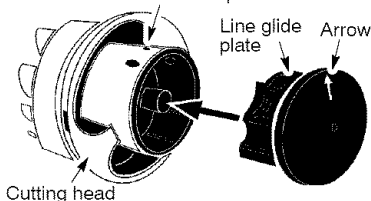

USER REPLACEABLE SERVICE PARTS

| REPLACEMENT PART | PART NUMBER |
|-------------------------------|-------------|
| Container of Replacement Line | 71-85907 |
| Assist Handle | 530403805 |
| Bolt Carriage, 1/4-20 | 530403886 |
| Wing Nut | 530016152 |
| Shield Assembly | 530404393 |
| Edge Guide | 530403845 |

STORAGE

WARNING: Perform the following steps after each use.

- Stop the unit and disconnect the power source when not in use.
- Carry the unit with motor stopped.
- Store the unit so the line limiter blade cannot cause injury.

- Store unit and extension cord indoors in a high, dry place out of the reach of children. Store unit unplugged.
- Store unit with all guards in place. Position unit so that any sharp object cannot accidentally cause injury.

TROUBLESHOOTING TABLE

⚠ WARNING: Always stop unit and disconnect from the power source before performing all of the recommended remedies below except remedies that require unit to be operating.

| TROUBLE | CAUSE | REMEDY |
|--|---|--|
| Trimmer head stops under a load or does not turn when switch is pressed. | <ol style="list-style-type: none">1. Crowding line against material being cut.2. Electrical failure.3. Thrown circuit breaker.4. Debris stopping head. | <ol style="list-style-type: none">1. Allow tip of line to do the cutting.2. Contact Sears Service (see back cover).3. Check breaker box.4. Remove debris. |
| Line breaks while cutting. | <ol style="list-style-type: none">1. Line improperly routed in head.2. Incorrect line size3. Dirt build-up on unit. | <ol style="list-style-type: none">1. Check line routing.2. Use only 0.080 inch (2 mm) dia. line.3. Clean unit. |
| Line welds onto cutting head. | <ol style="list-style-type: none">1. Line size is incorrect.2. Crowding line against material being cut. | <ol style="list-style-type: none">1. Use only 0.080 inch (2 mm) dia. line.2. Allow tip of line to do the cutting. |
| Line usage is excessive. | <ol style="list-style-type: none">1. Line improperly routed in head.2. Line size is incorrect.3. Crowding line against material being cut.4. Cutting head worn or damaged. | <ol style="list-style-type: none">1. Check line routing.2. Use only 0.080 inch (2 mm) dia. line.3. Allow tip of line to do the cutting.4. Contact Sears Service (see back cover). |