

Installation Instructions


Bottom Freezer – Fresh Food Fan Assembly

WR60X10356

IMPORTANT: When replacing WR60X10356 fresh food fan motor on the serial range HD – FF (May 2014 – Mar 2015), the software **MUST** be updated for proper performance of the refrigerator.

Included: WR60X10356 - 13.6VDC Fresh Food Fan Assembly, Repair Indicator Decal and Installation Instructions.

1. Check for a decal located below the model and serial tag to determine whether this motor has already been installed. If the motor has been previously installed, only Step 2 is required when replacing existing motor.
2. Replace the fresh food fan motor. Ensure the motor is installed with the label facing up and the fan wiring on the right as shown below.

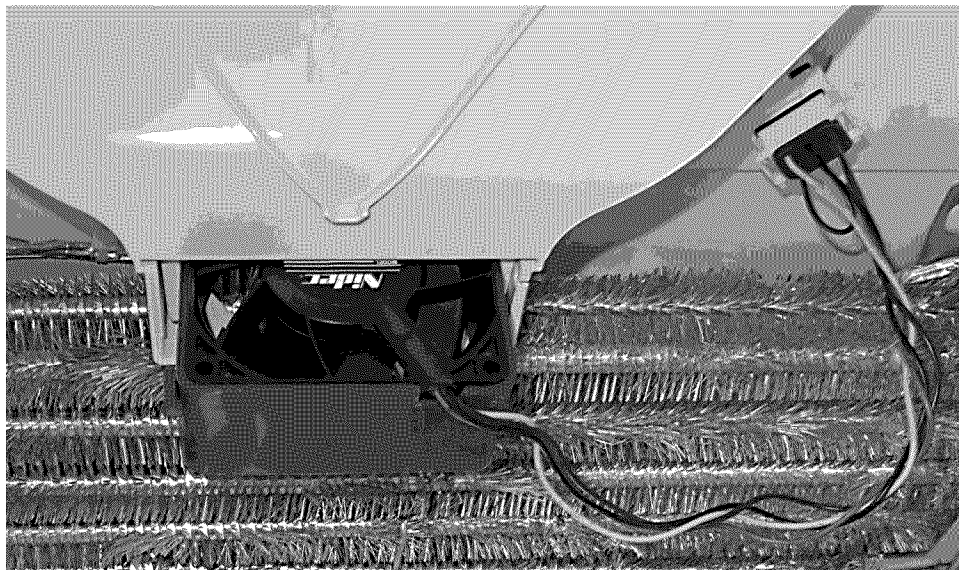

3. Update the control board software with Appliance Programmer (*Factory Service only*) or SUM (Software Update Module) WR98R465901 (*all others*). Follow instructions supplied with the SUM.
4. Place the enclosed decal on the fresh food liner directly under the model and serial tag indicating this motor has been installed and software has been updated.

******DO NOT REPLACE THE MAIN BOARD******

