




LiNX™
CORDLESS
PET HAND
VAC

LiNX™
CORDLESS
ASPIRATEUR À MAIN
POUR POILS

LiNX™
CORDLESS
ASPIRADORA DE
MANO PARA
PELOS DE MASCOTAS

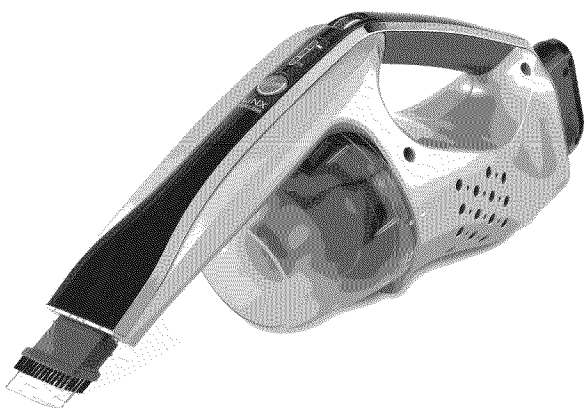

OWNER'S MANUAL GUIDE D'UTILISATION • MANUAL DEL USUARIO

Operating and Servicing Instructions

Please read these instructions carefully before using your HOOVER® Hand Vac.

Instructions d'Utilisation et d'Entretien

Lire attentivement ces instructions avant d'utiliser l'aspirateur à main HOOVER®.

Instrucciones de Funcionamiento y Mantenimiento

Por favor lea estas instrucciones con cuidado antes de usar su aspiradora manual HOOVER®.

©2009 Techtronic Floor Care Technology Limited.

All Rights Reserved. Tous droits réservés. Todos los derechos reservados. #59143005-R0, 6/09

THIS VACUUM IS INTENDED FOR HOUSEHOLD USE ONLY. IMPORTANT SAFETY INSTRUCTIONS

WARNING:

CLEANER ASSEMBLY MAY INCLUDE SMALL PARTS. SMALL PARTS CAN PRESENT A CHOKING HAZARD.

When using an electrical appliance, basic precautions should always be followed, including the following:

- READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.
- ALWAYS FOLLOW THESE SAFETY INSTRUCTIONS.
- SEE SEPARATE MANUAL PERTAINING TO BATTERY AND CHARGING OPERATION.
- DO NOT LEAVE VACUUM CLEANER UNATTENDED.
- WARNING: FULLY ASSEMBLE VACUUM CLEANER BEFORE OPERATING.
- WARNING: THIS PRODUCT CONTAINS CHEMICALS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER, BIRTH DEFECTS OR REPRODUCTIVE HARM. WASH HANDS AFTER USING.

WARNING: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Do not use product or charge battery on wet surfaces. Do not expose to rain. Store indoors.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use charger with damaged cord or plug. If vacuum or charger is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center for inspection. Call the Exclusive Hoover Platinum Collection™ Member Services Line 1.877.MYPLTNM (1.877.697.5866) Mon.-Fri. 8am-5pm EST (USA & Canada) or visit www.hoover.com for the nearest service center.
- Do not pull or carry by charger cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug charger by pulling on cord. To unplug charger, grasp the plug, not the cord.
- Do not handle charger (including charger plug and terminals), battery, or appliance with wet hands.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Do not use the vacuum cleaner without filter and dirt cup in place.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids such as gasoline, or use in areas where they may be present.
- Leaks from battery cells can occur under extreme conditions. If any liquid gets on the skin wash quickly with soap and water. If any liquid gets into the eyes, do not rub eyes, immediately flush them with clean water continuously for a minimum of 15 minutes. Seek medical attention immediately.
- Use only the charger (Hoover® Part# BH50005) supplied by the manufacturer to recharge.
- Store the vacuum cleaner indoors. Put the vacuum cleaner away after use to prevent tripping accidents.
- Use only battery (Hoover® Part # BH50000) supplied by manufacturer to operate this product.
- Always turn off and remove battery before connecting or disconnecting optional motorized power brush, or before servicing.
- Do not dispose of battery in a fire or trash compactor. See battery disposal section at end of this manual for directions.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Do not incinerate the charger, battery, or appliance even if it is severely damaged. The batteries can explode in a fire.
- Use only with motorized power brush (Hoover® Part# BH50035).

SAVE THESE INSTRUCTIONS

1. FEATURES



1.1

FRONT

1. Combination Crevice/Brush Tool
2. Fuel Gauge
3. On/Off Switch (0=OFF, I=ON)
4. Battery
5. Dirt Cup

DIRT CUP

5. Dirt Cup
6. Pre-Screen
7. Filter (inside pre-screen)

ACCESSORIES*

8. Pet Upholstery Tool
9. LiNX® Power Head
10. Deluxe Dusting Brush
11. Mesh Storage Bag


*Available on select models.

If you need assistance:

Visit our website at www.hoover.com. Click on the "Customer Service" link to find the service outlet nearest you OR Call 1-800-944-9200 for an automated referral to authorized service outlet locations (U.S. only) OR Call the Exclusive Hoover Platinum Collection™ Member Services Line 1.877.MYPLTNM (1.877.697.5866), Mon-Fri 8am-5pm EST. For assistance in French or Spanish, call 1.800.263.6376, Mon-Fri 8am-7pm EST. www.hoover.com.

2. HOW TO OPERATE


Charge Battery

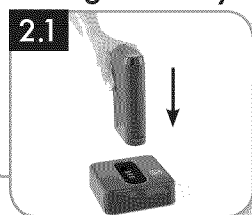

Charge battery fully before first use. Fully discharged battery will take up to 3 hours to charge.

NOTE: See battery and charger manual for battery charging instructions. Use only manufacturer's supplied or recommended battery and charger.


Insert Battery

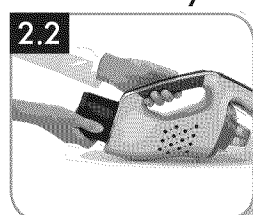

Insert charged battery into battery cavity until latch is locked into place.


NOTE: When inserting and removing battery, ensure the switch is in the off position marked "0".

ON/OFF Switch

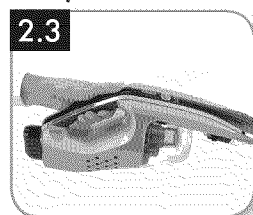


To turn vacuum on, roll switch forward to position marked "I".

Remove Battery

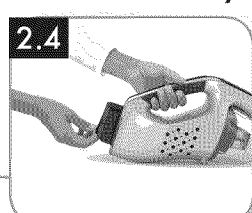

To remove and charge battery, pull on release lever located on end of battery and pull out gently.

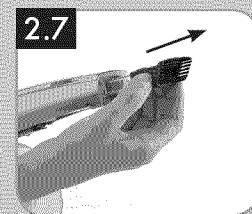


BRUSH TOOL
Pull brushes forward on Crevice Tool to reveal Brush Tool.
Reverse steps 1-3 to store Crevice or Brush Tool.


Attachments

WARNING: Remove battery before inserting or removing all attachment tools.


CAUTION: Not recommended for use on leather.

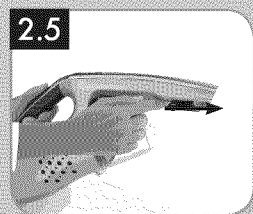


CREVICE TOOL
Push Crevice Tool forward to release.

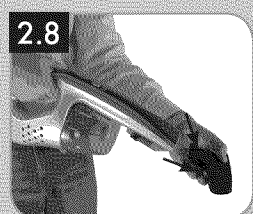

LiNX® Power Head
Align pins on LiNX® Power Head with small openings on nozzle and insert until securely in place. To utilize LiNX® Power Head pivot feature, move handle in a vertical motion while cleaning. Pull out to remove.

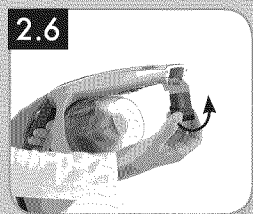

Pivot Crevice Tool
Slide tool up and lock into place.

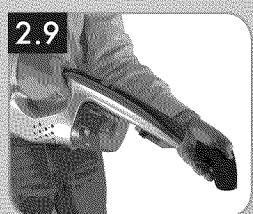

ADDITIONAL PET TOOLS
Slide tool with Hoover® logo facing up into nozzle until locked securely in place. To remove, pull tool directly out.

3. MAINTENANCE


WARNING: Remove battery before performing service or maintenance.

Dirt Cup & Filter Removal & Replacement


IMPORTANT: For best results, clean after each use.

REGULAR MAINTENANCE: Each time the dirt cup is emptied, the filter should be cleaned. (Filter will be discolored after use. This will not affect the filter's performance.)


Removal

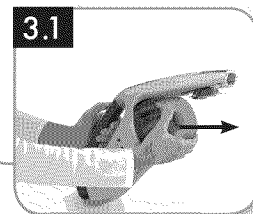


Grip dirt cup and twist off in direction indicated on hand vac until unlock symbol is aligned with mark.

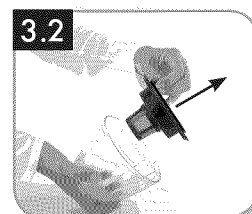


Pull pre-screen from dirt cup.

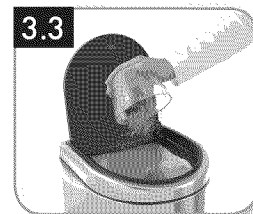

Empty dirt cup over trash can to remove debris.

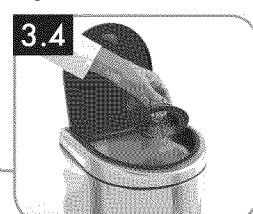

To remove debris from pre-screen, gently tap over trash.

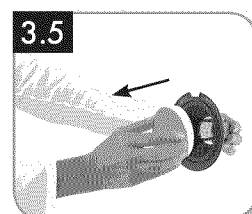


Pull out filter and brush or wash clean with cold water.

WARNING: Always dry for 24 hours before replacing.


WARNING: Do not use detergent or hot water to clean.

For filter replacement, please call 1-877-697-5866 or visit our website at www.hoover.com to locate a dealer nearest you. **Filter Service Part #001331007.**


Replacement

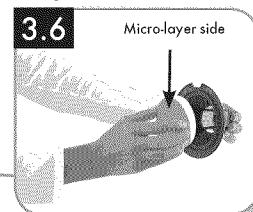

Replace filter in pre-screen with micro-layer side facing out.

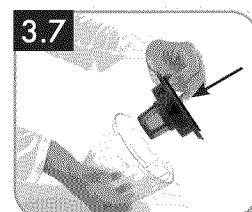

Replace filter and pre-screen in dirt cup.

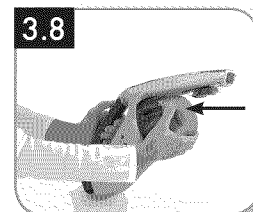


Replace dirt cup by twisting on in direction indicated on hand vac until lock symbol is aligned with mark.

Cleaning LiNX® Power Head



Remove Power LiNX™ Head Tool from nozzle and turn over. Press eject button on side of tool to release brushroll and remove.

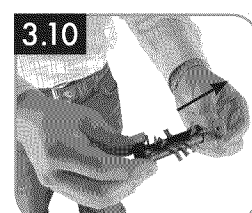

Remove red end cap and clean away hair and debris. **IMPORTANT:** Do not discard red end cap.



Ensure red end cap is replaced. Place opposite end onto hexagonal drive gear and pivot into place until brushroll snaps secure.

4. BATTERY FUEL GAUGE DISPOSAL & SERVICE

Battery Fuel Gauge: Battery Capacity Indicator Information

All three LEDs will momentarily light when the product's power switch is turned on. Then the Battery Fuel Gauge will indicate the pack's remaining capacity as noted below. NOTE: Unit and lights will turn off when battery is fully discharged. Once battery is fully discharged, return switch to off position.

3 LEDs lit	Remaining battery capacity > 75%
2 LEDs lit	Remaining battery capacity > 50%
1 LED lit	Remaining battery capacity > 25%
1 LED blinking	Remaining battery capacity < 25%

Battery Disposal

WARNING: RISK OF EXPLOSION OR EXPOSURE TO TOXIC MATERIAL

CAUTION: The battery used in this device may present a risk of fire or chemical burn if mistreated. Do not disassemble, heat above manufacturer's maximum temperature limit (60°C/140°F), or incinerate. Replace battery with HOOVER® battery Part # BH50000 only. Use of another battery may present a risk of fire or explosion. Dispose of used battery promptly. Keep away from children. Do not disassemble and do not dispose of in fire.

Do not attempt to disassemble the battery or remove any component projecting from the battery terminals. The battery and charger have no user serviceable parts. Fire or injury may result. Prior to disposal, protect exposed terminals with heavy insulating tape to prevent shorting.

Lithium-ion Batteries

The battery must be collected, recycled or disposed of in an environmentally sound manner. The EPA certified RBRC Battery Recycling Seal on the lithium-ion (Li-ion) battery indicates Techtronic Industries, a corporate affiliate of Hoover, Inc., is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful life, when taken out of service in the United States or Canada. The RBRC program provides a convenient alternative to placing used Li-ion batteries into the trash or the municipal waste stream, which may be illegal in your area.

Please visit www.rbrc.org/call2recycle/ for information on Li-ion battery recycling and disposal bans/restrictions in your area. Hoover, Inc., involvement in this program is part of our commitment to preserving our environment and conserving our natural resources.

Service

ANY SERVICING SHOULD BE DONE BY AN AUTHORIZED SERVICE REPRESENTATIVE

Call The Exclusive Hoover Platinum Collection™ Member Services Line 1.877.MYPLTNM (1.877.697.5866) USA & Canada Mon-Fri 8am-5pm EST.

In the event that further assistance is required, see your Yellow Pages for an authorized HOOVER® Dealer or visit www.hoover.com. Costs of any transportation to and from any place of repair are to be paid by the owner. The service parts used in this unit are easily replaced and readily available from an authorized HOOVER® Dealer or retailer. Always identify your product by the model number and manufacturing code when requesting information or ordering replacement parts. (The model number appears on the bottom of the product.)

5. TROUBLESHOOTING & SERVICE

If a minor problem develops, it usually can be remedied quite easily when the cause is identified by using the checklist below.

PROBLEM	POSSIBLE REASON	POSSIBLE SOLUTION
Product does not turn on	1. Battery is not in product. 2. Battery is not inserted properly. 3. Battery is not charged. 4. Battery is too hot. 5. Internal component damage.	1. Insert battery into product. 2. Make sure battery is fully seated in battery cavity. 3. Remove and charge battery or replace with second charged battery. 4. Remove battery and let cool for 30 minutes, replace battery and retry or replace with second charged battery. 5. Call for service: Exclusive Hoover Platinum Collection™ Member Services Line 1.877.MYPLTNM (1.877.697.5866).
Product turns off	1. Battery is fully discharged. 2. Battery is too hot.	1. Remove and charge battery or replace with second charged battery. 2. Remove battery and let cool for 30 minutes, replace battery and retry or replace with second charged battery.
Product does not pick up	1. Internal component damage. 2. Dirt cup may be full. 3. Filter may be dirty. 4. Pre-screen may be dirty.	1. Call for service: Exclusive Hoover Platinum Collection™ Member Services Line 1.877.MYPLTNM (1.877.697.5866). 2. Empty dirt cup. 3. Clean and/or wash filter. 4. Remove, clean and replace.
Brushroll will not turn	1. Brushroll Obstruction. 2. Motor Protection Device tripped. 3. Internal Damage.	1. Remove battery and ensure product is turned off. Eject brushroll and clear obstruction. 2. Turn product to off position, product will reset in approximately 30 seconds. 3. Call for service: Exclusive Hoover Platinum Collection™ Member Services Line 1.877.MYPLTNM (1.877.697.5866).

Special SIX Year Limited Warranty for Hoover LiNX™ Cordless Pet Hand Vac (Domestic Use)

WHAT THIS WARRANTY COVERS

When used and maintained in normal household use and in accordance with the Owner's Manual, your Hoover LiNX Cordless™ product is warranted against original defects in material and workmanship for a full six years from date of purchase (the "Warranty Period"). During the Warranty Period, Hoover® will provide labor and parts, at no cost to you, to correct any such defect in products purchased in the United States, U.S. Military Exchange and Canada.

HOW TO MAKE A WARRANTY CLAIM

If this product is not as warranted, take or send the product to either a Hoover® Sales and Service Center or Hoover® Authorized Warranty Service Dealer along with proof of purchase. For automated referral to authorized service outlets in the U.S.A., phone: 1.800.944.9200 OR visit Hoover® online at www.hoover.com. For additional assistance or information concerning this warranty or the availability of warranty service outlets, phone The Exclusive Hoover Platinum Collection™ Member Services Line, Phone 1.877.697.5866, Mon-Fri 8am-5pm EST. In Canada, contact Hoover® Canada, 100 Stouffer Blvd. Brockville, ONT K6B 5J9, Phone: 1.877.697.5866, Mon-Fri 8am-5pm EST. For assistance in French or Spanish, call 1.800.263.6376, Mon-Fri 8am-7pm EST.

WHAT THIS WARRANTY DOES NOT COVER

This warranty does not cover battery, charger, attachment tools, brushroll or filter. This Warranty does not cover: use of the product in a commercial operation (such as maid, janitorial and equipment rental services), improper maintenance of the product, damage due to misuse, acts of God, nature, war, terrorism or other acts beyond the control of Hoover, owner's acts or omissions, use outside the country in which the product was initially purchased and resales of the product by the original owner. This warranty does not cover pick up, delivery, transportation or house calls. However, if you mail your product to a Hoover Sales and Service Center for warranty service, cost of shipping will be paid one way. NOTE: See Battery and Charger manual for warranty information on these products.

This warranty does not apply to products purchased outside the United States, including its territories and possessions, a U.S. Military Exchange and Canada.

OTHER IMPORTANT TERMS

This Warranty is not transferable and may not be assigned. This Warranty shall be governed and construed under the laws of the state of Ohio. The Warranty Period will not be extended by any replacement or repair performed under this Warranty.

THIS WARRANTY IS THE EXCLUSIVE WARRANTY AND REMEDY. ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT WILL HOOVER BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND OR NATURE TO OWNER OR ANY PARTY CLAIMING THEREON, WHETHER OR BASED IN CONTRACT, NEGLIGENCE, TORT OR STRICT PRODUCTS LIABILITY OR ARISING FROM ANY CAUSE WHATSOEVER. Some states do not allow the exclusion of consequential damages, so the above exclusion may not apply to you. This warranty gives you specific rights; you may also have others that vary from state to state.

FRANÇAIS

CET ASPIRATEUR A ÉTÉ CONÇU POUR USAGE DOMESTIQUE SEULEMENT. CONSIGNES DE SÉCURITÉ IMPORTANTES

AVERTISSEMENT :

L'ASSEMBLAGE DE L'APPAREIL COMPREND DES PETITES PIÈCES. CES DERNIÈRES PRÉSENTENT UN DANGER D'ÉTOUFFEMENT.

Pendant l'utilisation d'un appareil électrique, toujours prendre des précautions élémentaires, notamment :

- LIRE TOUTES LES INSTRUCTIONS AVANT D'UTILISER CET APPAREIL.
- TOUJOURS SUIVRE CES CONSIGNES DE SÉCURITÉ.
- POUR CONNAÎTRE LES INSTRUCTIONS RELATIVES À LA CHARGE DE LA PILE, CONSULTER LE GUIDE D'UTILISATION DE LA PILE ET DU CHARGEUR (GUIDE SÉPARÉ).
- NE PAS LAISSER L'ASPIRATEUR SANS SURVEILLANCE.
- AVERTISSEMENT : ASSEMBLER ENTIÈREMENT L'ASPIRATEUR AVANT DE L'UTILISER.
- MISE EN GARDE : CE PRODUIT CONTIENT DES SUBSTANCES CHIMIQUES RECONNUES PAR L'ÉTAT DE LA CALIFORNIE COMME CAUSANT LE CANCER, DES ANOMALIES CONGÉNITALES OU DES PROBLÈMES DE REPRODUCTION. SE LAVER LES MAINS APRÈS AVOIR UTILISÉ LE PRODUIT.

AVERTISSEMENT : AFIN DE RÉDUIRE LES RISQUES D'INCENDIE, DE CHOC ÉLECTRIQUE OU DE BLESSURES :

- Ne pas utiliser l'appareil ni charger la pile sur une surface mouillée. Ne pas exposer l'appareil à la pluie. Ranger à l'intérieur.
- Ne pas permettre que l'appareil soit utilisé comme un jouet. Être particulièrement vigilant lorsque l'appareil est utilisé par des enfants ou à proximité d'enfants.
- Utiliser cet appareil uniquement de la façon décrite dans ce guide. Utiliser uniquement les accessoires recommandés par le fabricant.
- Ne pas utiliser le chargeur si la fiche ou le cordon sont endommagés. Si l'aspirateur ou le chargeur fonctionnent mal, s'il est tombé ou a été endommagé ou laissé à l'extérieur, ou s'il est tombé dans l'eau, il doit être apporté à un Centre de service pour y être inspecté. Veuillez appeler le Service exclusif d'assistance téléphonique aux membres de la gamme Platinum Collection™ au 1 877 MYPLTNM (1 877 697-5866), du lundi au vendredi de 8 h à 17 h (HNE, aux États-Unis et au Canada) ou visiter le www.hoover.com pour connaître le centre de service le plus proche.
- Ne pas tirer sur le cordon du chargeur ni utiliser le cordon du chargeur pour transporter l'appareil, utiliser le cordon comme une poignée, fermer une porte sur le cordon ou tirer le cordon autour de coins ou d'arêtes vives. Ne pas faire passer l'appareil sur le cordon. Garder le cordon éloigné de toute surface chauffée.
- Ne pas tirer sur le cordon pour débrancher le chargeur. Saisir la fiche et non le cordon pour débrancher le chargeur.
- Ne pas manipuler le chargeur (y compris la fiche et les bornes), la pile ou l'appareil avec les mains mouillées.
- Garder les cheveux, les vêtements amples, les doigts et toute autre partie du corps à bonne distance des ouvertures et des pièces mobiles de l'appareil.
- Ne pas utiliser l'aspirateur pour ramasser toute matière qui dégage de la fumée ou qui brûle, comme des cigarettes, des allumettes ou des cendres chaudes.
- Ne pas utiliser l'aspirateur sans filtre et vide-poussière.
- Faire preuve d'une grande prudence pendant le nettoyage d'escaliers.
- Ne pas utiliser l'appareil pour ramasser des liquides inflammables ou combustibles comme de l'essence, ni dans des endroits où de telles matières peuvent être présentes.
- Les piles peuvent fuir si elles sont soumises à des conditions extrêmes. Si le liquide touche la peau, la laver rapidement avec de l'eau et du savon. S'il y a contact avec les yeux, ne pas se frotter les yeux, mais les rincer immédiatement sous l'eau courante pendant au moins 15 minutes et consulter immédiatement un médecin.
- N'utiliser que le chargeur (no de pièce Hoover™ : BH50005) fourni par le fabricant pour recharger la pile.

