CRAFTSMAN[®]

EASY DUMP CART


Model 610.246262 User Guide

- 16 cu. ft. heaped capacity.
- 1250 pound weight capacity.
- Removable tail gate.

If you read and follow these instructions, this product can be assembled in 55 minutes or less. If you don't read these instructions, assembly may take over two hours!

TO MINIMIZE ASSEMBLY TIME:

- DO NOT tighten fasteners until instructed to do so.
- Illustrated items shaded red are the parts being assembled in that instruction section.
- Assemble unit on cardboard box to avoid scratches or damage to parts.
- For best results, two people are required for assembly.

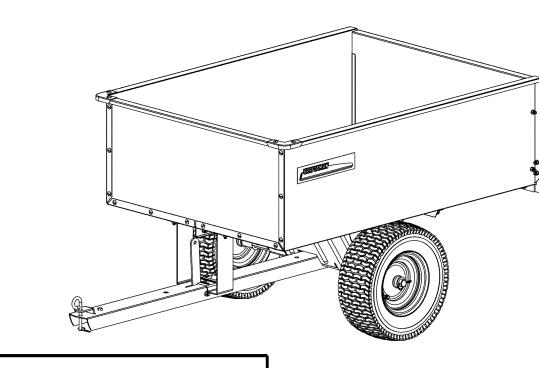




If there are any missing parts, or if you have any questions on assembly, operation, maintenance or safety, please call




All fasteners are readily available for purchase at your nearest Sears store or local hardware store.

Hardware Bag Contents

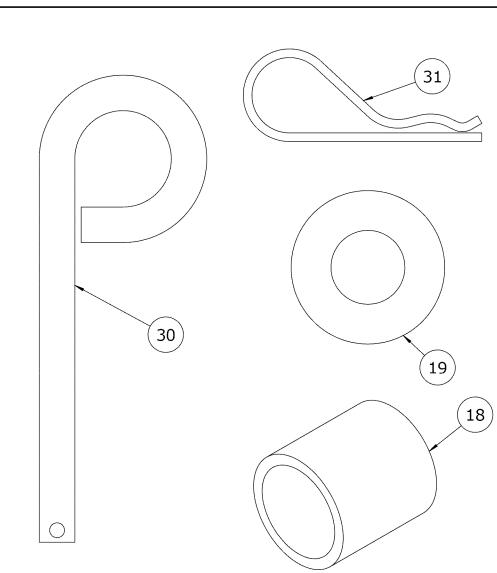

| BAG 1. | | | | |
|----------|------|-----------------------|--|--|
| REF. NO. | AMT. | DESCRIPTION | | |
| 18 | 2 | 1 3/8" axle spacer | | |
| 19 | 4 | 3/4" axle washer thin | | |
| 30 | 1 | hitch pin | | |
| 31 | 3 | hairpin cotter #7 | | |

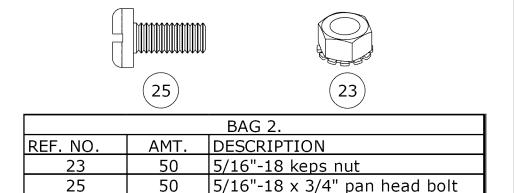

TOOLS SUGGESTED FOR ASSEMBLY

- Large blade screwdriver
- 1/2" wrench and/or socket
- pliers
- cordless drill

SAFETY INSTRUCTIONS

- Never exceed load capacity of cart 1250 lbs.
- When operating on slopes, use lowest ground speed and limit load to 200 lbs.
- Do not carry passengers in cart.
- Do not use this cart on public roads.
- Operate up and down slopes, never across the face of slopes.
- Avoid sudden turns or maneuvers.

MAINTENANCE & STORAGE

- Periodically check all nuts and bolts for tightness.
- Check tire pressure regularly.
- Grease wheels using zerk fitting at axle for longer life.
- Keep cart clean and dry to prevent rust and corrosion.
- Store inside a clean, dry area when not in use.


OPERATION

- With cart attached to tractor, remove tailgate, and then pullback on latch bar. Cart body will tilt backwards, dumping contents. Once empty, replace tailgate, then pull cart body down until it latches.
- Make sure to use the hairpin cotter with the hitch pin
- when attaching to the tractor.
- Follow all operating instructions in tractors user guide.

FOR MISSING PARTS, Call 1-800-652-2321, Monday - Friday, 8 a.m. - 5 p.m. E.S.T.

Page 2.

Carton Contents

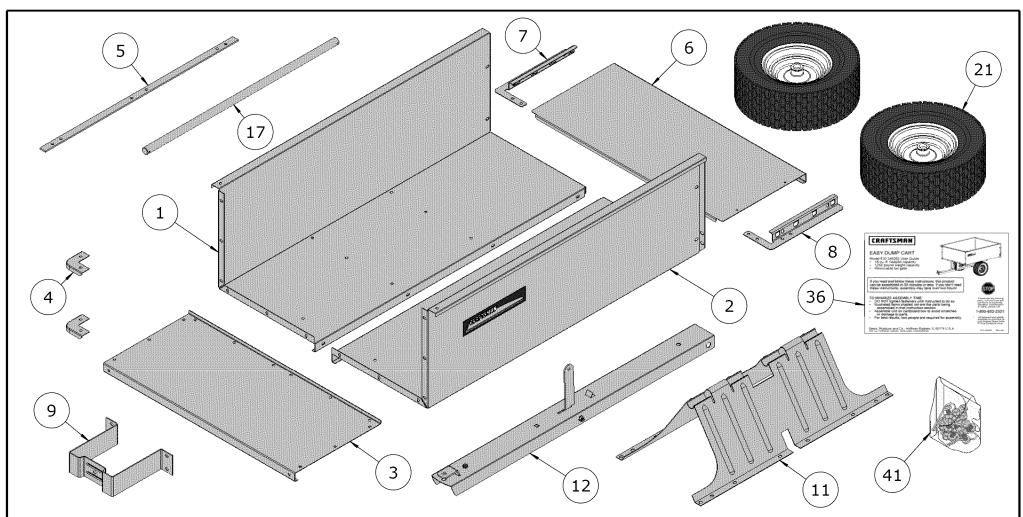


| REF. NO. | AMT. | DESCRIPTION | REF. NO. | AMT. | DESCRIPTION |
|----------|------|---------------------|----------|------|-----------------|
| 1 | 1 | right body half | 9 | 1 | front support |
| 2 | 1 | left body half | 11 | 1 | axle holder |
| 3 | 1 | front gate | 12 | 1 | hitch assembly |
| 4 | 2 | corner | 17 | 1 | axle |
| 5 | 1 | rear support bar | 21 | 2 | wheel #3 |
| 6 | 1 | tail gate | 36 | 1 | assembly manual |
| 7 | 1 | gate retainer right | 41 | 1 | hardware bag |
| 8 | 1 | gate retainer left | | | - |

FOR MISSING PARTS, Call 1-800-652-2321, Monday - Friday, 8 a.m. - 5 p.m. E.S.T. Page 3.

Body Assembly

Step 1. Position body halves (1 & 2) as shown.

- Step 2. Loosely assemble body halves (1 & 2). Square assembly and tighten bolts.
- Bolt body halves together so that the four holes are aligned, as shown. Note:

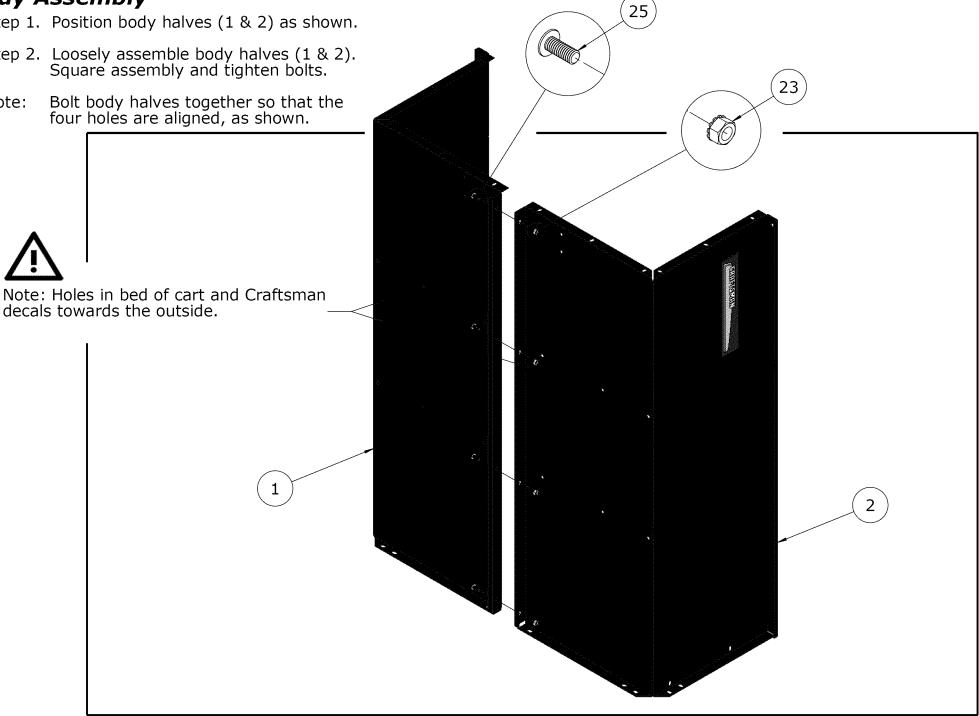


Add Front Support & Axle Holder

Step 3. Loosely attach front support (9).

Step 4. Loosely attach axle holder (11).



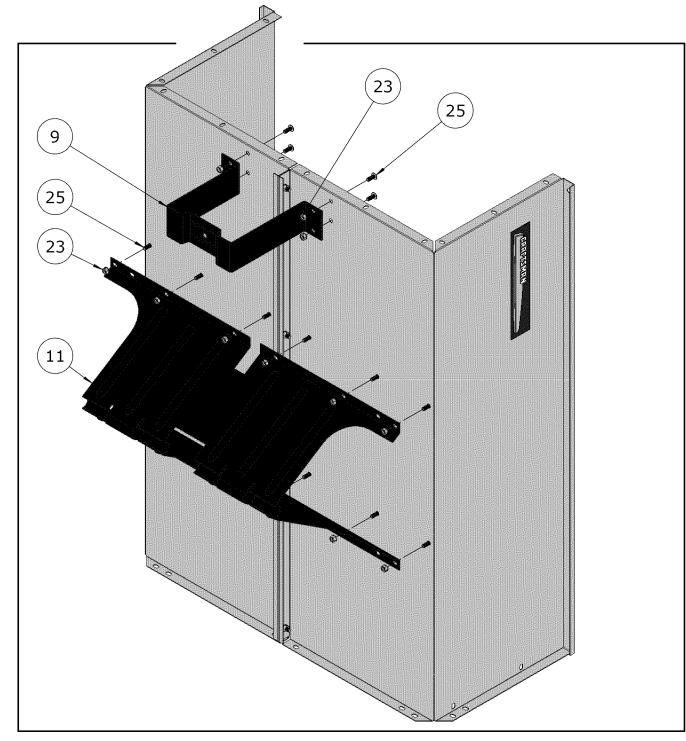


FOR MISSING PARTS, Call 1-800-652-2321, Monday - Friday, 8 a.m. - 5 p.m. E.S.T. Page 5.

Front Gate / Corner Assembly

Step 5. Lay assembly down as shown.

Step 6. Insert front gate (3), inside bed of cart, behind body flanges.

- Step 7. Loosely assemble front gate to bed with bolts provided.
- Step 8. Loosely attach two corners (4).

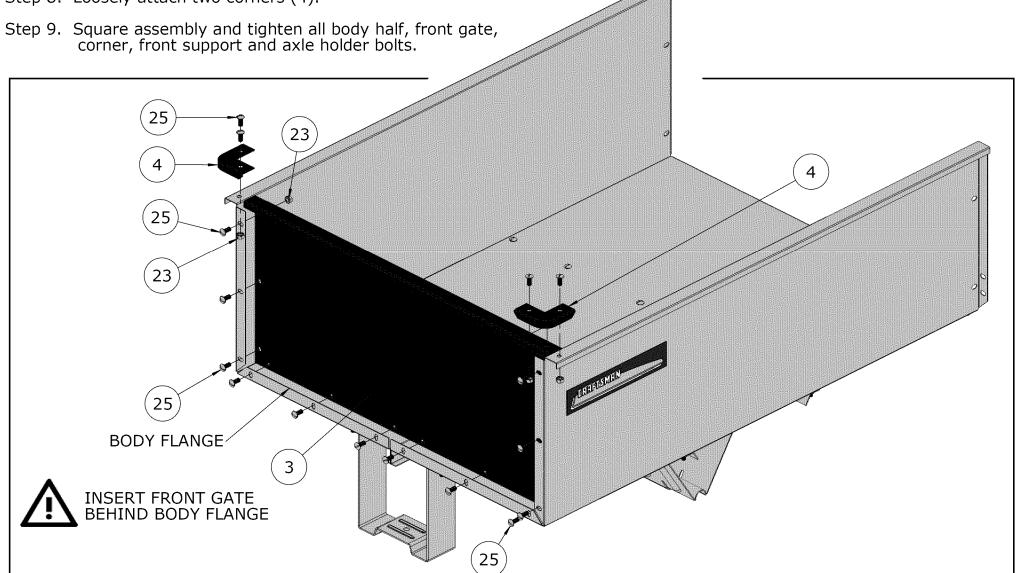

Add Axle, Hitch, & Wheels


31

21

17

- Step 10. Slide axle (17) through axle holder (11) and hitch (12).
- Step 11. Place axle washer (19), HDPE spacer (18), axle washer (19) and wheel (21) onto axle. Repeat for other side. Note: Make sure valve stem on wheels face towards the outside of cart.
- Step 12. Insert hair pin cotter (31) in each end of axle (17).

Step 13. Set cart upright on wheels.

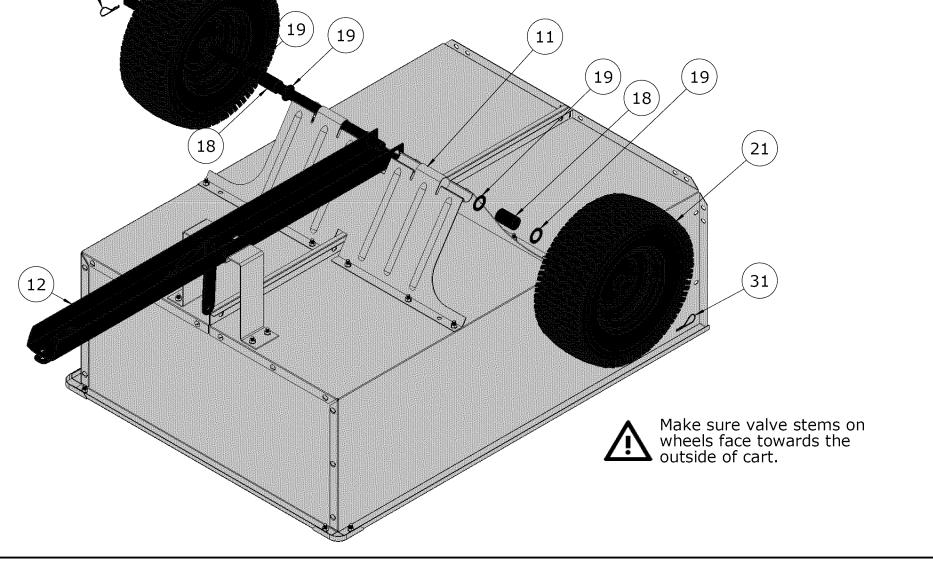


FOR MISSING PARTS, Call 1-800-652-2321, Monday - Friday, 8 a.m. - 5 p.m. E.S.T. Page 7.


Rear Assembly

Step 14. Loosely attach rear support bar (5) **BEHIND** rear flanges of the assembled body halves using center two holes only.

- Step 15. Loosely attach gate retainers (7 & 8) using common holes to each side.
- Step 16. Insert tailgate (6) and tighten all support bar and gate retainer bolts.

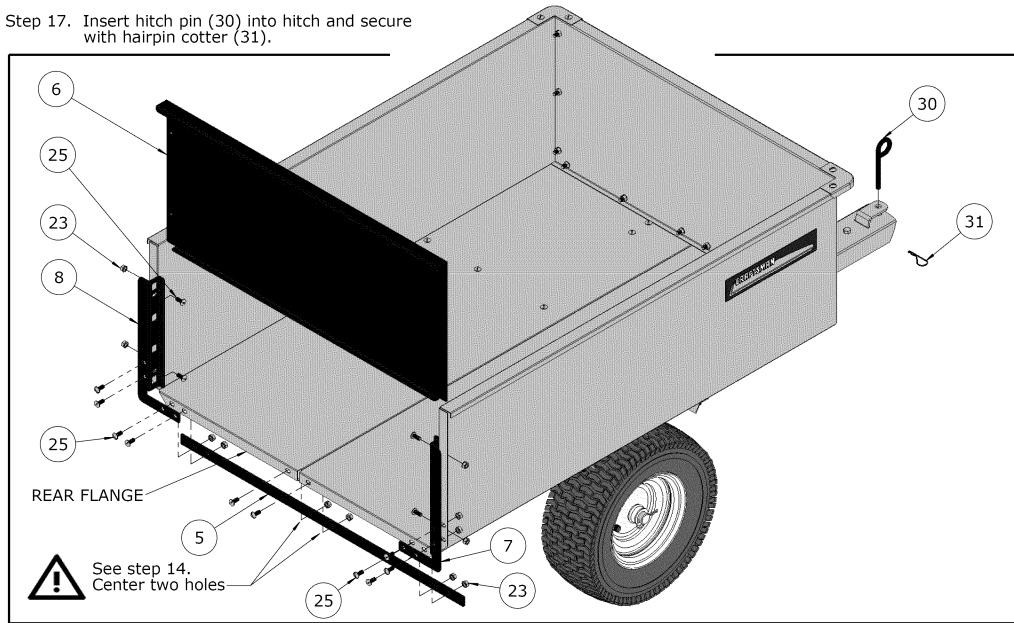

FOR MISSING PARTS, Call 1-800-652-2321, Monday - Friday, 8 a.m. - 5 p.m. E.S.T. Page 8.

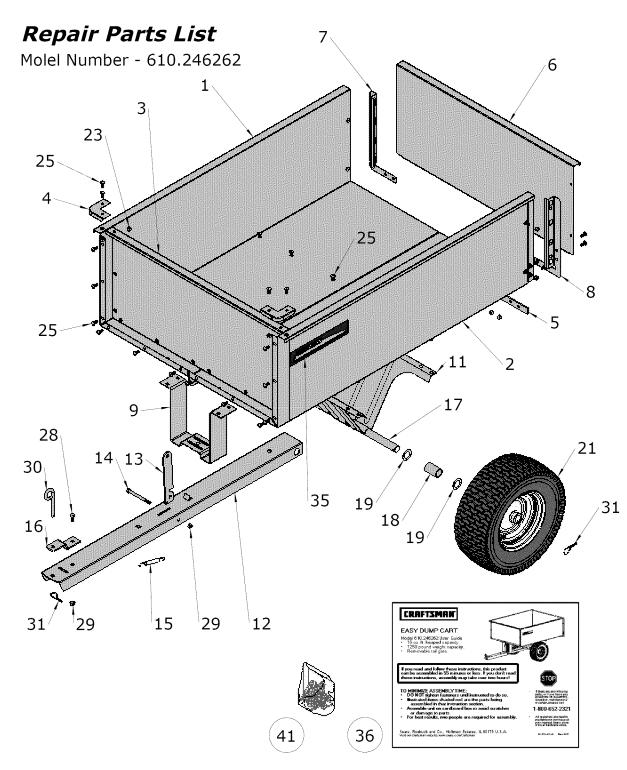

| REF. NO. | PART NO. | AMT. | DESCRIPTION | |
|----------|--------------|------|-----------------------------|--|
| 1 | 262-01 | 1 | RIGHT BODY HALF | |
| 2 | 262-02 | | LEFT BODY HALF | |
| 3 | | | FRONT GATE | |
| 4 | 55-04 | | CORNER | |
| 5 | 26-05 | 1 | REAR SUPPORT BAR | |
| 6 | 262-06 | 1 | TAIL GATE | |
| 7 | 55-7A | 1 | GATE RETAINER RIGHT | |
| 8 | 55-8A | 2 | GATE RETAINER LEFT | |
| 9 | 9 55-9A | | FRONT SUPPORT | |
| 11 | 26-11 | 1 | AXLE HOLDER | |
| 12 | 26-12A | 1 | HITCH ASSEMBLY | |
| 13 | 55-13A | 1 | LATCH POST BAR | |
| 14 | STDBH3754000 | 1 | LATCH BOLT 3/8"-16 x 4" HEX | |
| 15 | 55-15A | 1 | LATCH SPRING | |
| 16 | 26-16A | 1 | HITCH BRACKET | |
| 17 | 26-17 | 1 | AXLE | |
| 18 | 26-18 | 2 | HDPE SPACER | |
| 19 | STDWA1000T | 4 | AXLE WASHER | |
| 21 | 26-21 | 2 | WHEEL | |
| 23 | STDNK313 | 50 | 5/16"-18 KEPS NUT | |
| 25 | STDBP3130750 | 50 | 5/16"-18 x 3/4 PAN HEAD | |
| 28 | STDBH3750750 | 1 | 3/8"-16 X 3/4" HEX HEAD | |
| 29 | STDNC375 | 2 | 3/8"-16 LOCK NUT | |
| 30 | STDHP375 | 1 | HITCH PIN | |
| 31 | STDPH7 | 3 | HAIR PIN | |
| 35 | 262-D | 2 | DECAL | |
| 36 | 36 262-36 | | USER GUIDE | |
| 41 | 262-BB | 1 | HARDWARE BAG | |

FOR MISSING PARTS, Call 1-800-652-2321, Monday - Friday, 8 a.m. - 5 p.m. E.S.T. Page 9.

FULL TWO-YEAR WARRANTY

If this product fails due to a defect in material or workmanship within one year from the date of purchase, Sears will at our option repair or replace it free of charge. This warranty excludes tires and wheels, which are expendable and become worn during normal use.

This warranty does not cover:

- Repairs necessary because of operator abuse or negligence.
- Equipment used for commercial or rental purposes.

Contact your nearest Sears Service Center to arrange for product repair, or return this product to place of purchase for replacement.

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. This warranty applies only while this product is in use in the United States.

Sears, Roebuck and Co, Dept. 817 WA, Hoffman Estates, IL 60179

| PRODUCT RECORD | ORDERING INFORMATION | | |
|---|---|--|--|
| In the space below record the model number and purchase date of your cart. The model number can be found on the decal on the hitch. | After the one year warranty period all parts may be ordered by calling Sears service at 1-800-4MY-HOME (1-800-469-4663) | | |
| | When ordering repair parts, always give the | | |
| Model Number | following information: | | |
| | Product - <u>16 C.F. Heaped Easy Dump Cart</u>. Model Number - <u>610.246262</u>. | | |
| Purchase Date | | | |
| | • Part Number - * | | |
| Keep this booklet and your Sears receipt in a safe place for future reference. | • Part Description - * | | |
| place for future reference. | | | |
| | *Found on the repair part list. Reference page 9. | | |
| | | | |