



YSP-4300

[YSP-CU4300 + NS-WSW160]

YSP-3300

[YSP-CU3300 + NS-WSW160]

Digital Sound Projector™

Owner's Manual

English
for North America

What you can do with this unit


Make sure you read precaution in "Safety and Accessory Information" (separate booklet) carefully before using this unit.

Audio/video device

Preparation

Connections/Basic settings

Playback

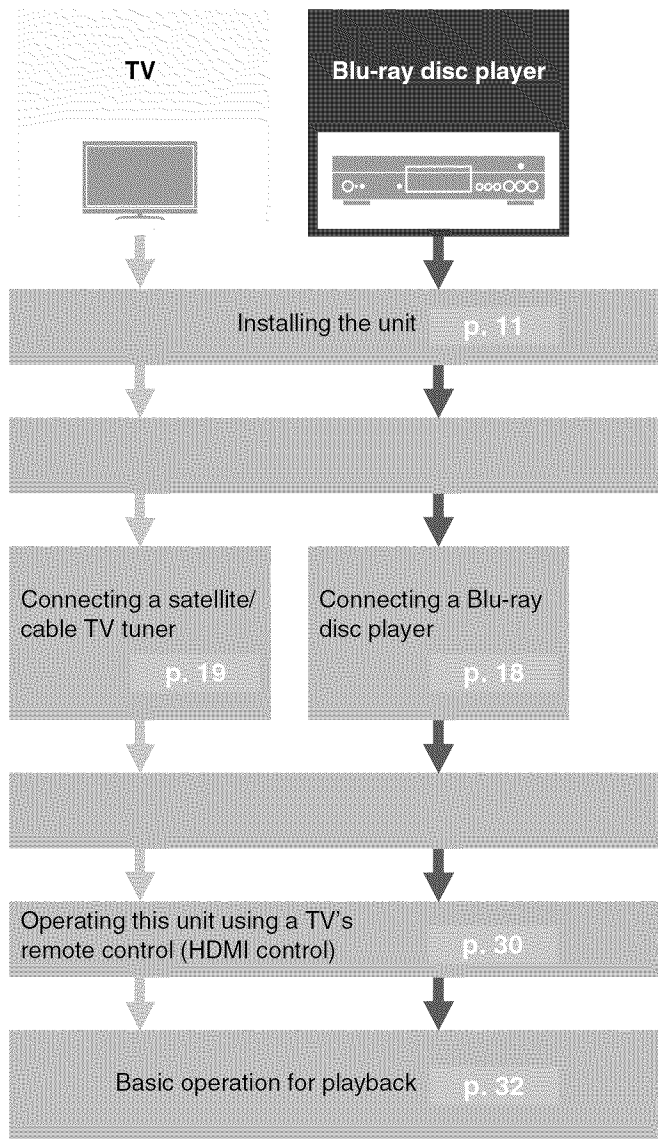

Various functions

HDMI control (link) function

p. 30

TV remote repeater function

p. 12

UniVolume

p. 40

IntelliBeam


p. 23

System memory

p. 28

Eco function

p. 41

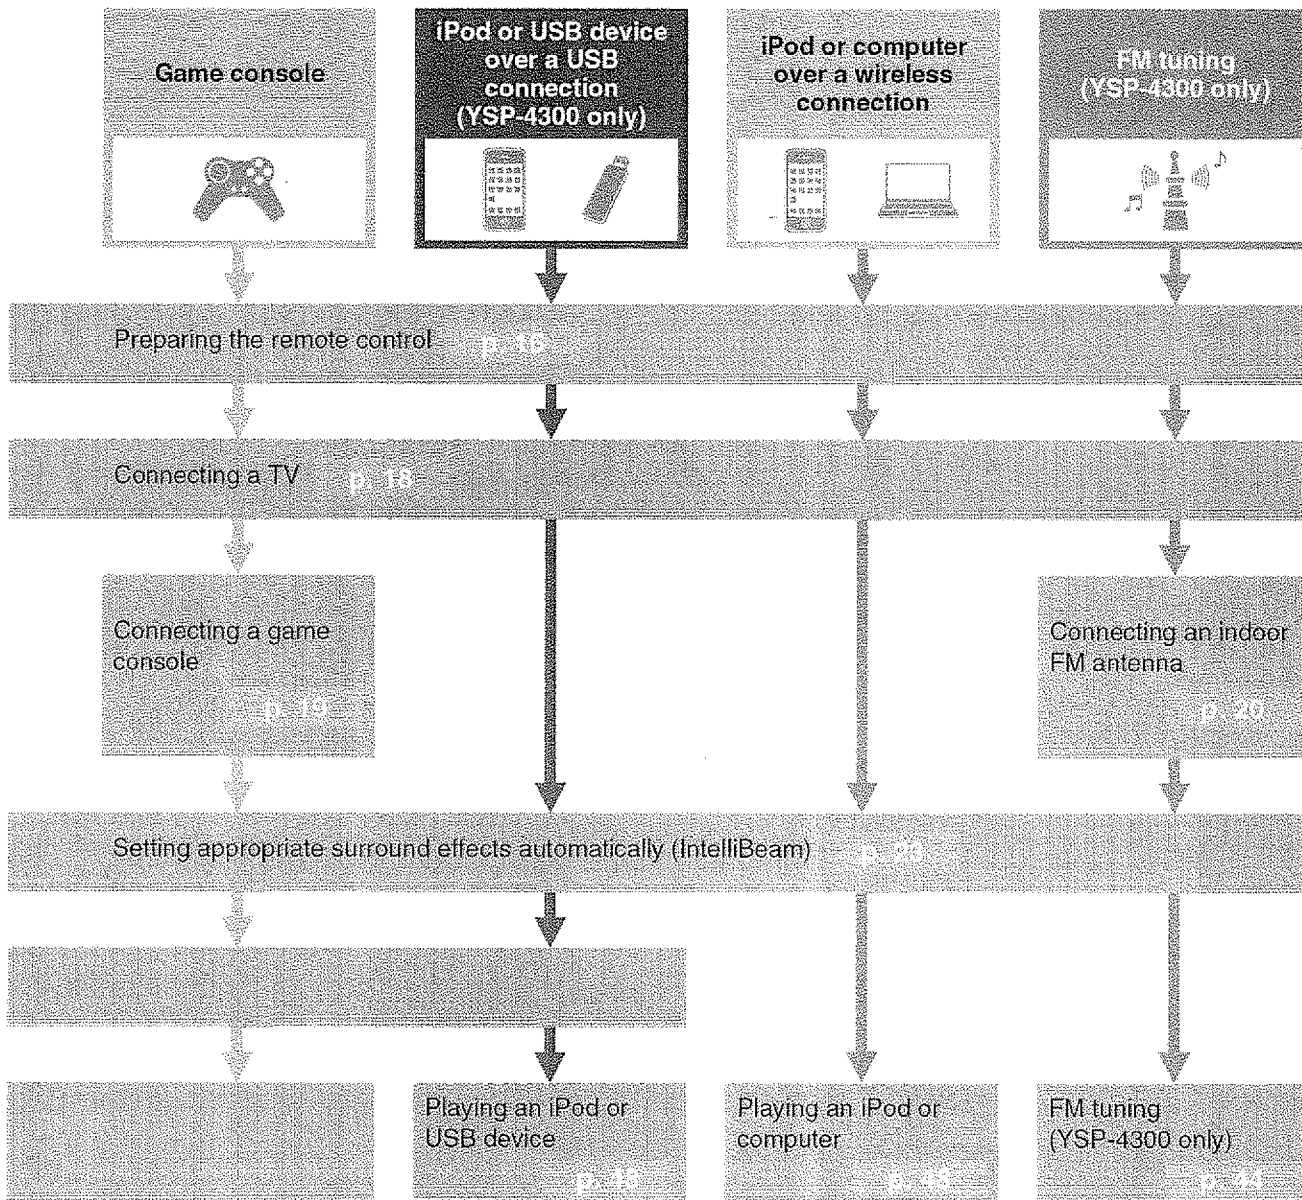

CINEMA DSP **p. 34**

Compressed Music Enhancer **p. 33**

Target playback **p. 39**

Wireless playback for an iPod or computer **p. 48**

Playback for an iPod or USB device over a USB connection (YSP-4300 only) **p. 48**

FM tuner (YSP-4300 only) **p. 44**

Contents

PREPARATION

Controls and functions.....5

Center unit front panel (front, top).....	5
Center unit rear panel (back).....	6
Subwoofer rear panel (back).....	7
Front panel display.....	8
Remote control.....	9

Installation.....11

Recommended installation.....	11
Conditions that make it difficult for sound beams to achieve surround sound.....	11
Enjoying surround effects regardless of conditions (My Surround).....	12
If the TV remote control does not work properly after the center unit is installed (TV Remote Repeater function).....	12
If the center unit cannot be installed on a TV stand (increasing the height of the center unit).....	12
Positioning the subwoofer on its side.....	13
Installing this unit.....	14
Preparing remote control.....	16
Installing the batteries.....	16
Operation range.....	16

Connections.....17

Connecting a TV and a Blu-ray disc player.....	18
Connecting a game console or satellite/cable TV tuner.....	19
Connecting the FM antenna (YSP-4300 only).....	20
Connecting the wireless subwoofer.....	20

Initial settings.....21

Establishing a wireless connection.....	21
Group IDs.....	21
Displaying the menu screen on the TV.....	21
Selecting the language for menu display.....	22
Auto setup for appropriate surround effects (IntelliBeam).....	23
Installing the IntelliBeam microphone.....	23
Using AUTO SETUP (IntelliBeam).....	24
Saving this unit's settings to system memory.....	28
Operating the unit by TV's remote control (HDMI control).....	30

PLAYBACK

Playback features.....32

Basic operation for playback.....	32
Enjoying sound based on your preference.....	33
Switching between surround playback, stereo playback, and target playback modes.....	33
Playing back digitally compressed formats (MP3, WMA, etc.) with enriched sound (Compressed Music Enhancer).....	33
Adjust volume for each channel.....	33
Enjoying realistic surround sounds (CINEMA DSP).....	34
Changing the audio output method for surround playback... ..	36
Setting the surround decoder.....	38
Delivering sound to a specified location (Target playback mode).....	39
Using useful features.....	40
Automatic volume level adjustment (UniVolume).....	40
Saving energy with the Eco function.....	41
Switching information displayed in the front panel display... ..	41
Settings each input source (Option menu).....	42
FM tuning (YSP-4300 only).....	44
Tuning into the desired FM station (Frequency tuning).....	44

Receiving weak signal.....	45
Registering FM stations and tuning in (Preset tuning).....	45
Playing music stored on an iPod or computer over a wireless connection.....	48
Playing music stored on an iPod or USB device over a USB connection (YSP-4300 only).....	48
Connecting an iPod.....	48
Operating an iPod via the TV screen.....	49
Using the iPod to control operation.....	52
Charging the iPod.....	53
Connecting a USB device.....	54
Operating a USB device via the TV screen.....	55

SETTINGS

Setup menu.....58

Setting the setup menu.....	58
Setup menu list.....	59
BEAM settings.....	60
HORIZONTAL ANGLE.....	60
BEAM TRAVEL LENGTH.....	60
FOCAL LENGTH.....	60
IMAGE LOCATION.....	61
CHANNEL OUT.....	61
SOUND settings.....	62
SPEAKER LEVEL.....	62
Adaptive DRC.....	62
DYNAMIC RANGE.....	63
Dolby PLIIx PARAMETER.....	63
HDMI setup.....	63
HDMI CONTROL.....	63
HDMI AUDIO OUT.....	63
TV INPUT.....	63
yAired settings.....	64
iPod INTERLOCK.....	64
GROUP ID.....	64
DISPLAY settings.....	65
DIMMER.....	65
OSD LANGUAGE.....	65
DISTANCE UNIT.....	65
INFORMATION settings.....	65
AUDIO.....	65
VIDEO.....	65
SYSTEM.....	65

Advanced setup.....66

TROUBLESHOOTING

Troubleshooting.....68

General.....	68
FM tuner (YSP-4300 only).....	70
USB device (YSP-4300 only).....	70
Remote control.....	70

Messages.....71

iPod (when connected via USB jack)/ USB device (YSP-4300 only).....	71
--	----

APPENDIX


Glossary.....72

Specifications.....74

Available signal information.....	76
-----------------------------------	----

Index.....77


About this manual

- In this manual, operations that can be performed using either the front panel keys or the remote control are explained using the remote control.
- In this manual, iPod(s), iPhone(s), and iPad(s) are hereafter referred to collectively as iPod(s).
-  indicates a tip for your operation.
- Notes contain important information and operating instructions.
- In this manual, the YSP-CU4300 center unit is used for illustrative purposes. Illustrations for both the YSP-CU4300 and YSP-CU3300 are provided where necessary.


Controls and functions

Center unit front panel (front, top)

YSP-CU4300

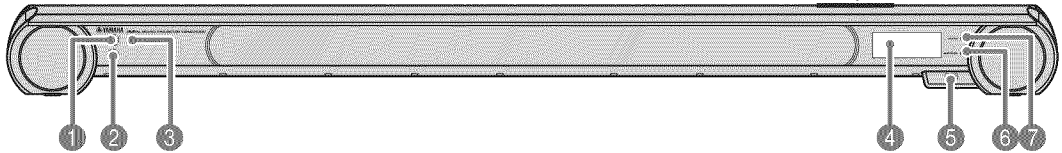

YSP-CU3300

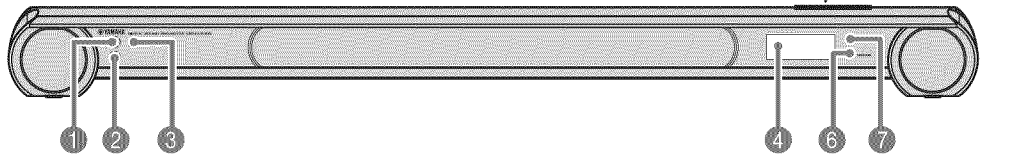

1 Remote control sensor

Receives infrared signals from the remote control (☞p. 9).

2 Remote control sensor of a TV

Receives infrared signals from the TV remote control when the TV Remote Repeater function is enabled (☞p. 12).

3 Wireless module

Receives and sends wireless signals. Do not place metal objects in front of the wireless module as they may interfere with the wireless module's ability to receive and send wireless signals.

4 Front panel display

Shows information about the operational status of this unit (☞p. 8).

5 USB jack (YSP-4300 only)

Enables connection of a USB device (☞p. 48, 54).

6 SURROUND indicator

Lights up according to the input signal.

7 STATUS indicator

Lights up when the power is turned on, and goes off in the standby mode.

8 INPUT key

Selects the playback component (☞p. 32).

9 VOLUME (+/-) key

Adjusts the volume of the unit (☞p. 32).

10 ⏻ key


Turns on the unit or set it to the standby mode.

Note

In the standby mode, this unit consumes a small amount of power in order to search for HDMI signals or to receive infrared signals from the remote control.


Displayed color	Input signal
Blue	Following surround audio signal formats: Dolby TrueHD, Dolby Digital Plus, DTS-HD Master Audio, DTS-HD High Resolution, Multi-channel Linear PCM
Orange	Surround audio signal other than above
Off	Stereo/monaural audio signal or no signal

Center unit rear panel (back)

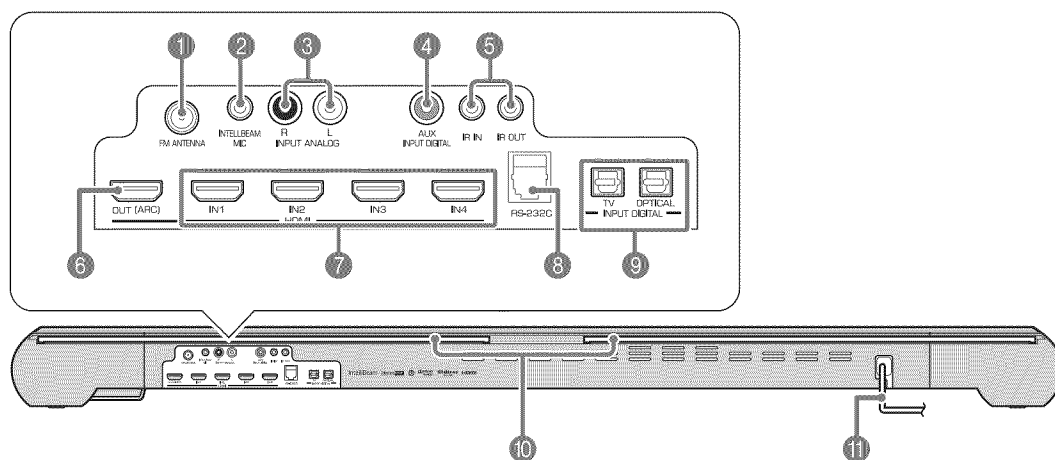

- 1 FM ANTENNA jack (YSP-4300 only)**
Connect an FM antenna (p. 20).
- 2 INTELLIBEAM MIC jack**
Connect the supplied IntelliBeam microphone (p. 24).
- 3 INPUT ANALOG L/R jacks**
For connecting analog cable to the external components (p. 19).
- 4 AUX INPUT DIGITAL jack**
For connecting a coaxial digital audio cable to the external components (p. 19).
- 5 IR IN/OUT jacks**
Control expansion jacks for commercial use only.
- 6 HDMI OUT (ARC) jack**
For connecting an HDMI compatible TV and monitor (p. 18).
- 7 HDMI IN jacks**
For connecting HDMI compatible Blu-ray disc player, satellite and cable TV tuner and game console (p. 18, 19).
- 8 RS-232C terminal**
A control expansion terminal for commercial use only.
- 9 INPUT DIGITAL TV/OPTICAL jacks**
For connecting an optical cable to the external components (p. 18, 19).
- 10 TV Remote Repeater**
Receives signals from a TV remote control via the front of the center unit and transmits those signals to the TV when the center unit obstructs the remote control sensor on the TV (p. 12).
- 11 Power cable**
For connecting to an AC wall outlet (p. 18).

Subwoofer rear panel (back)

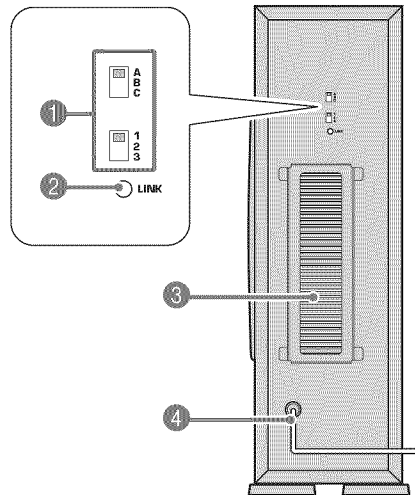

1 Group ID switches

When the center unit and subwoofer are connected wirelessly, sound is output from the subwoofer (yAired). For a wireless connection, use the same group ID as the center unit and YIT-W12TX (p. 20).

2 LINK indicator

Shows wireless connection status (p. 21).


3 Heat discharge unit

Discharges heat generated inside the subwoofer. Do not cover the heat discharge unit.

4 Power cable

For connecting to an AC wall outlet (p. 20).

Front panel display ¹⁾

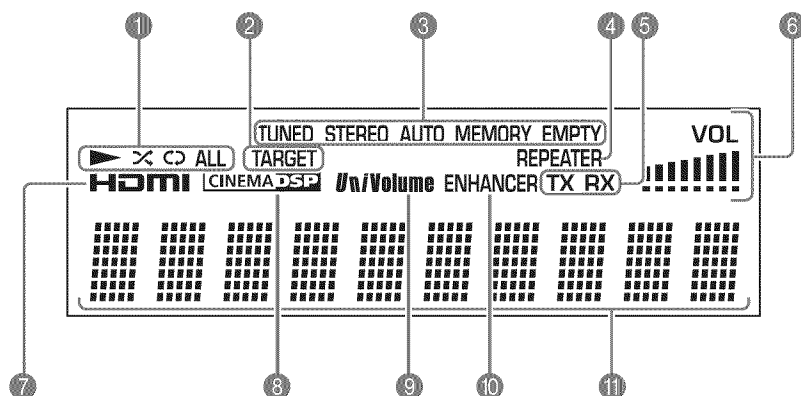

1 Playback indicators (YSP-4300 only)

Lights while music stored on an iPod or USB device connected to the USB jack is playing (p. 48, 54).

2 TARGET indicator

Lights when target playback mode enabled (p. 39).

3 Tuner indicators (YSP-4300 only)

Lights up when this unit is tuned into an FM station (p. 44).

4 REPEATER indicator

Lights when the TV Remote Repeater function is enabled (p. 10).

5 Wireless indicators

TX Lights while the connection to the subwoofer is being established (p. 20).

RX Lights while the connection to YIT-W12TX is being established. For details of YIT-W12TX, refer to "Safety and Accessory Information" (separate booklet).

6 VOL indicator

Indicates the current volume level (p. 32).

7 HDMI indicator

Lights up when HDMI signals are input.

8 CINEMA DSP indicator

Lights up when a sound field program is selected (p. 34).

9 UNIVOLUME indicator

Lights up when the UniVolume function is enabled (p. 40).

10 ENHANCER indicator

Lights up when the Compressed Music Enhancer function is enabled (p. 33).


11 Multi information display

Display playback device input source and surround information (p. 41). Displays settings and information as alphanumeric characters.




Note that the front panel display turns off when the Eco function is enabled and remains off unless an operation is performed.

Remote control

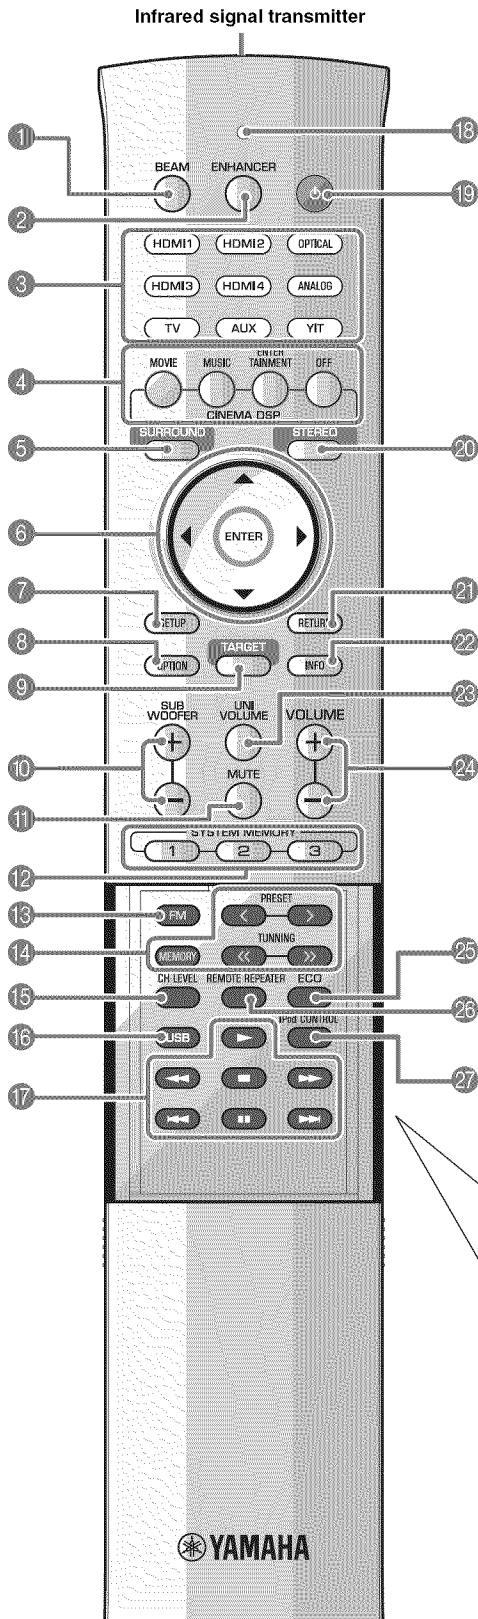

- 1 **BEAM key**
Switches the sound beam output method (p. 37).
- 2 **ENHANCER key**
Turns Compressed Music Enhancer to on or off (p. 33).
- 3 **Input selector keys**
Select the playback component (p. 32).
- 4 **CINEMA DSP program keys**
When playback is in surround playback mode, select the CINEMA DSP programs (p. 34).
- 5 **SURROUND key**
Switches to surround playback mode (p. 34).
- 6 **▲/▼/◀/▶ keys, ENTER key**
Change the setting (p. 58).
- 7 **SETUP key**
Displays the setup menu (p. 58).
- 8 **OPTION key**
Displays the option menu for each input source (p. 42).
- 9 **TARGET key**
Switches to target playback mode (p. 39).
- 10 **SUBWOOFER (+/-) key**
Adjusts the volume of the subwoofer.

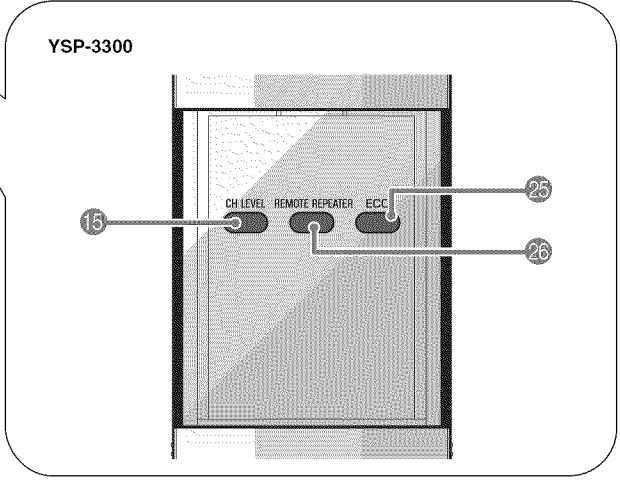

PREPARATION

PLAYBACK

SETTINGS

TROUBLESHOOTING

APPENDIX

Controls and functions

- 11 MUTE key**
Mute the sound (p. 32).
- 12 SYSTEM MEMORY keys**
Saves IntelliBeam measurements, speaker volume, and other settings (p. 28).
- 13 FM key (YSP-4300 only)**
Switches this unit's input source to FM radio.
- 14 Tuner operation keys (YSP-4300 only)**
Press to select or register an FM station (p. 44).
- 15 CH LEVEL key**
Adjusts the volume balance during playback (p. 33).
- 16 USB key (YSP-4300 only)**
Switches this unit's input source to USB (p. 48).
- 17 Playback operation keys (YSP-4300 only)**
Perform playback operations for music stored on an iPod or USB device (p. 48).
- 18 Transmission indicator**
Lights with operation using this unit's remote control.
- 19 ⏻ key**
Turns on the unit or set it to the standby mode (p. 32).
- 20 STEREO key**
Switches to stereo playback mode (p. 33).
- 21 RETURN key**
Returns to the previous menu screen.
- 22 INFO key**
Switches the information display on the front panel as follows.
- Input: Input name
 - Beam: Beam mode setting (stereo, beam stereo, target, or surround playback mode)
 - Decoder: Sound signal decoder currently selected
 - Cinema DSP: Sound field program of CINEMA DSP (only in surround playback mode)
- Information displayed varies according to the selected input source (p. 41, 51, 53, 56).
- 23 UNIVOLUME key**
Turns the UniVolume function on or off (p. 40).
- 24 VOLUME (+/-) key**
Adjusts the volume of the unit (p. 32).
- 25 ECO key**
Turns the Eco function on or off (p. 41).
- 26 REMOTE REPEATER key**
Turns the TV Remote Repeater function on or off (p. 12).
- 27 iPod CONTROL key (YSP-4300 only)**
Press to display the iPod browse/playback screen on the TV (p. 51).

Demo mode

This unit outputs sound beam down-mixed to 1 channel moving horizontally to right and left. By this function, you can feel how sound beam is output from this unit.

To activate Demo mode:

1 Press the **TARGET** key on the remote control.

2 Press the **CINEMA DSP OFF** key.

"AUTO DEMO" is shown in the front panel display when demo mode starts.


To exit demo mode, press the **CINEMA DSP OFF** key again. The display returns to target playback mode display.

Installation

To achieve desired surround sound effects, install this unit where there are no objects such as furniture obstructing the path of sound waves, referred to as “sound beam(s)” in this manual (#p. 14). Depending on the location where the unit is installed, it may be easier to connect external devices such as a TV first. See “Connections” (#p. 17).

Notes

- This unit requires sufficient space for heat discharge.
 - A minimum of 5 cm (2 in) above and behind and 1 cm (13/32 in) to the sides of the center unit
 - A minimum of 20 cm (7-7/8 in) above, behind, and to the sides of the subwoofer
- Do not cover the subwoofer heat discharge unit on the back of the subwoofer.
- Be sure to install this unit where it does not fall subject to vibrations, such as from an earthquake, and where it is out of the reach of children.
- When using a cathode-ray tube (CRT) TV, do not install this unit directly above your TV.
- If the picture on your TV screen becomes blurred or distorted, we recommend moving this unit away from your TV.

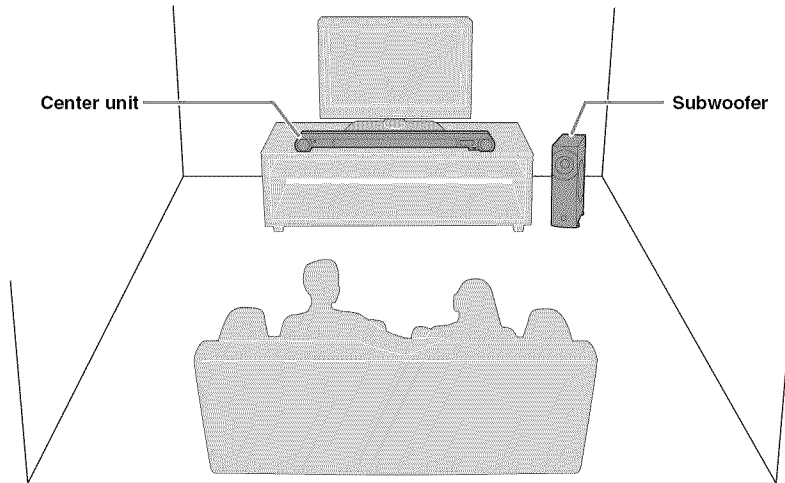

Some TVs have sensors such as the motion sensor or signal transmitter for 3D glasses in front. Installing the center unit may interrupt the sensors or signal transmitter from functioning. Set the center unit away from your TV.

Recommended installation

Center unit

- Install the center unit in the center of the left and right walls.
- Place the center unit on a TV stand in front of the TV. Use the TV Remote Repeater function if the center unit obstructs the remote control sensor on the TV (#p. 12). Increase the height of the center unit if the TV stand is too high for center unit installation (#p. 12).
- The listening position (such as sofa, etc.) should be located at the front of the center unit.
- The distance between the listening position and the center unit should be more than 1.8 m (6 ft).
- This unit can be mounted on a wall using WALL MOUNT BRACKET SPM-K20 (option). Refer to the SPM-K20 Install Manual and SPM-K20 Information for YSP-CU4300/ YSP-CU3300.

Subwoofer

- To prevent sound reflecting off of walls, angle the subwoofer slightly toward the center of the room.
- When installing the subwoofer on a rack, be sure the rack is strong enough to support the subwoofer and that it leaves sufficient space for heat discharge.
- The center unit and subwoofer communicate wirelessly. Subwoofer performance may be affected if the subwoofer is placed on a metal rack, or if there is a metal plate between the subwoofer and the center unit.
- The subwoofer can also be placed on its side (#p. 13).

Conditions that make it difficult for sound beams to achieve surround sound

This unit creates surround sound by reflecting projected sound beams off the walls of your listening room. The surround sound effects produced by this unit may not be sufficient when this unit is installed in the following locations.

- Rooms with walls inadequate for reflecting sound beams
- Rooms with acoustically absorbent walls
- Rooms with measurements outside the following range:
 - W (3 to 7 m (10 to 23 ft)) × H (2 to 3.5 m (7 to 11.5 ft)) × D (3 to 7 m (10 to 23 ft))
- Rooms with less than 1.8 m (6 ft) from the listening position to this unit
- Rooms where objects such as furniture are likely to obstruct the path of sound beams
- Rooms where the listening position is close to the walls
- Rooms where the listening position is not in front of this unit

Enjoying surround effects regardless of conditions (My Surround)


The My Surround function creates rich surround sound effects in rooms with less than optimal surround sound conditions (p. 11). See “Changing the audio output method for surround playback” (p. 36, 37) for more information.

If the TV remote control does not work properly after the center unit is installed (TV Remote Repeater function)

The TV may not respond to commands from its remote control if the center unit obstructs the remote control sensor on the TV. Should this occur, press the **REMOTE REPEATER** key on this unit’s remote control more than 3 seconds to set the TV Remote Repeater function to enable. The REPEATER indicator on the front panel display will light.

When the TV remote control is aimed at the center unit’s remote control sensor, the TV Remote Repeater on the back of this unit transmits signals from the TV remote control to the TV.

Signals from the TV remote control can be transmitted to the TV while this unit is in standby mode.

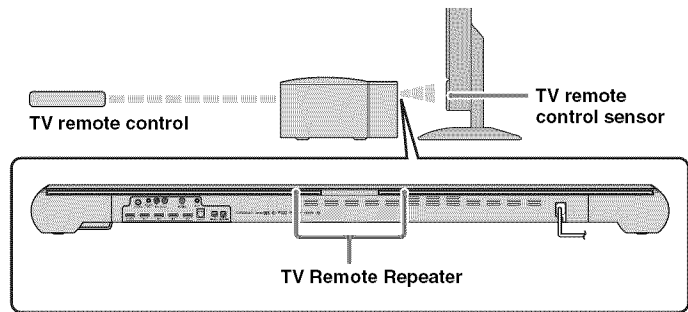


Note

This function can be used while the TV remote control is using infrared signals.

If the center unit cannot be installed on a TV stand (increasing the height of the center unit)

In most cases, the center unit can be placed on a TV stand. The supplied spacers can be attached to increase the height of the unit if necessary. Attach both the left and right spacers to the unit.


Align the protrusions on the back of the spacer with the mounting holes on the bottom of the center unit and press the spacer firmly into place.

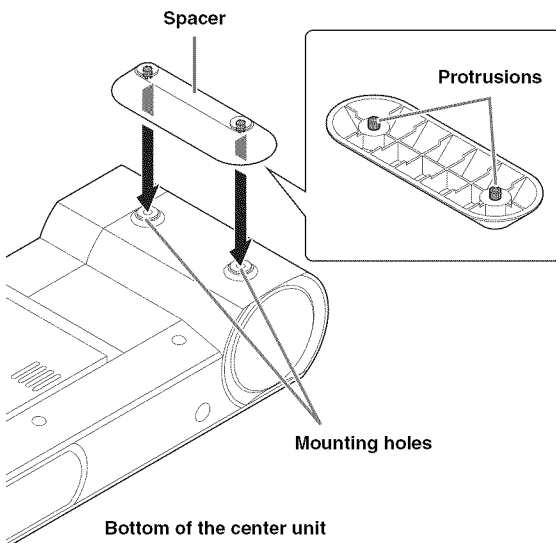

Removing the spacers


Pull the spacers straight up.

Pull the spacer straight up.

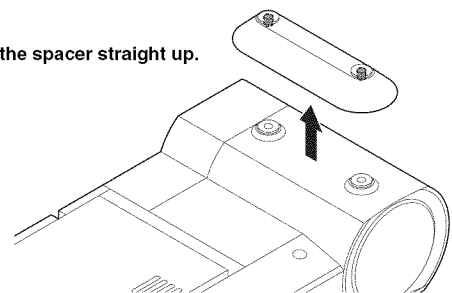

Positioning the subwoofer on its side

The subwoofer can be laid on its side when positioned on a rack.

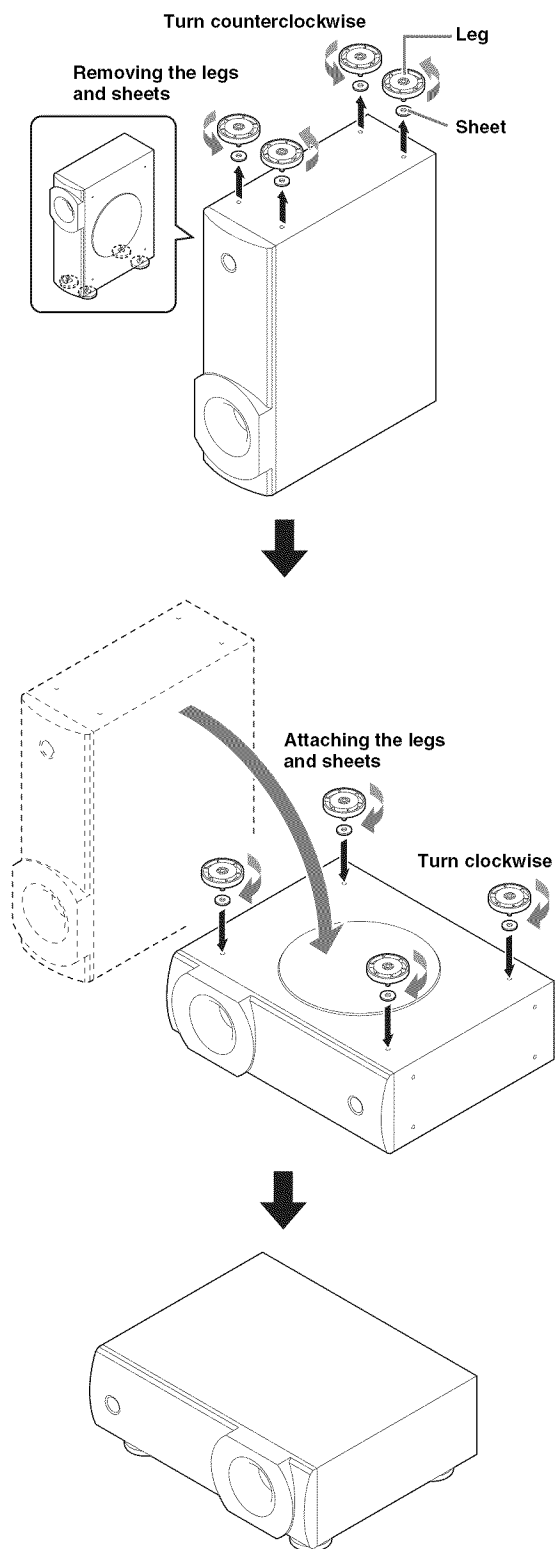

Installing this unit


This unit outputs sound beam as shown in the illustrations below. Install this unit where there are no obstacles such as furniture obstructing the path of sound beams. Otherwise, the desired surround sound effects may not be achieved.

You may install this unit in parallel with the wall or in the corner.

Parallel installation

Install this unit in the exact center of the wall when it is measured from the left and right corners.

Parallel installation
(with 5Beam)

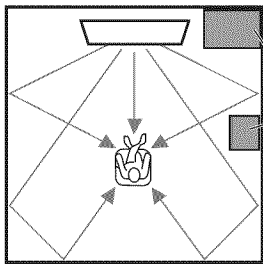


Objects, such as furniture

Corner installation

Install this unit in the corner at a 40° to 50° angle from the adjacent walls.



Corner installation
(with Stereo+3Beam)

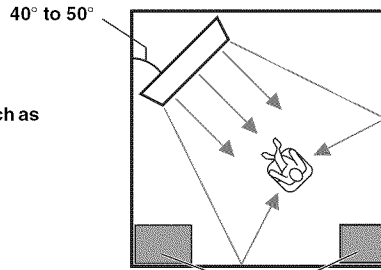

Objects, such as furniture

Parallel installation




Install this unit as close to the exact center of the wall as possible.

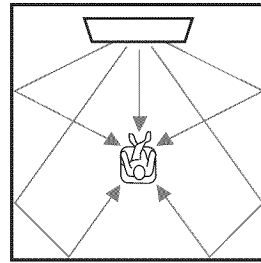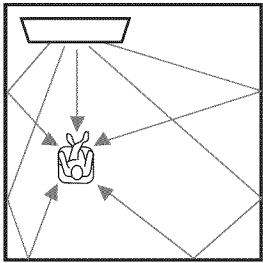

Ideal installation condition

Install this unit as close to the exact front of your normal listening position as possible.


The distance between listening position and the unit should be more than 1.8 m (6 ft).

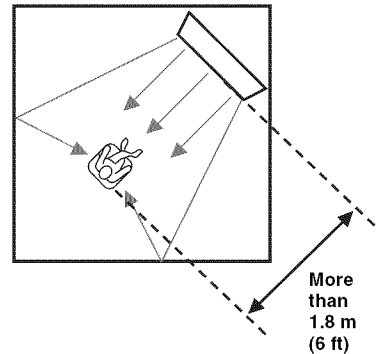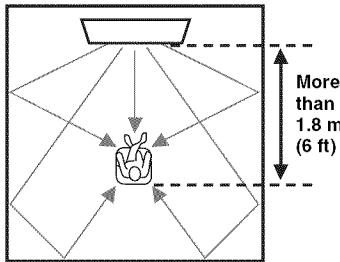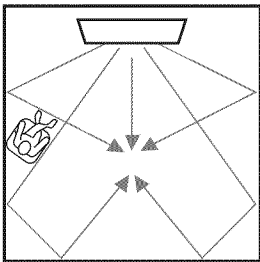


Installing in a non-square room

Install this unit so that the sound beams can be reflected off the walls.

Irregularly shaped rooms with solid walls on all sides

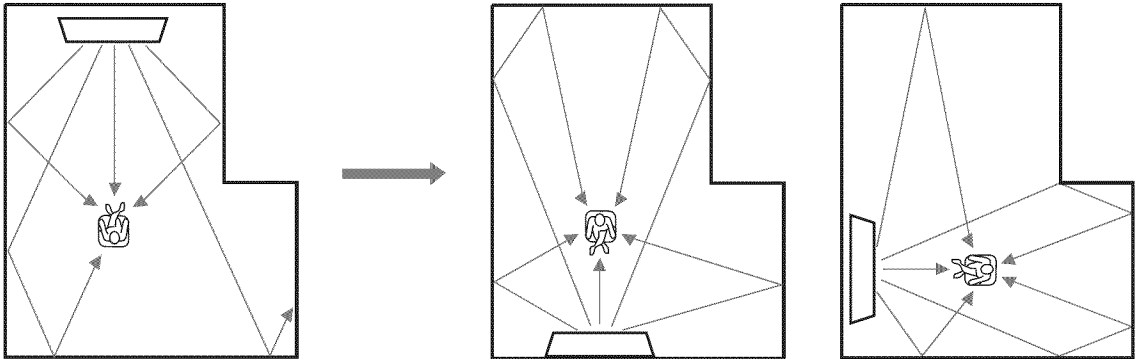


Irregularly shaped rooms that are open to a hallway on one side

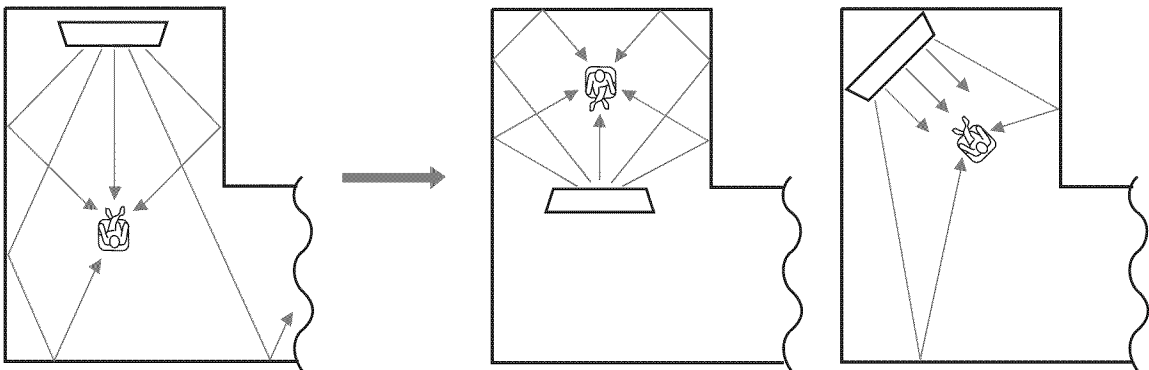

Example for installing the unit in living room


- As sound beams normally pass through tables, tables are not obstacles. And a cupboard installed facing the wall reflects sounds.
- In a case of the listening room as shown in the right illustration, adjusting the position of the right channel after AUTO SETUP (p. 23) enables to achieve more desired surround sound effects (p. 61).
- As the curtains absorb sounds, the sound features of the listening room is different from the case with the curtain opened and the case with the curtain closed. Using saving settings function enables to save the best settings for each case of listening room (p. 28).

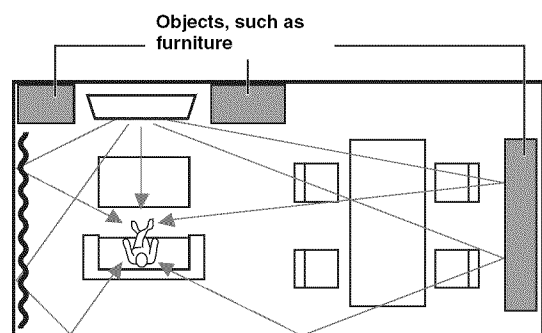


Preparing remote control

Before installing batteries or using the remote control, be sure to read battery and remote control precautions in "Safety and Accessory Information" (separate booklet).

Installing the batteries

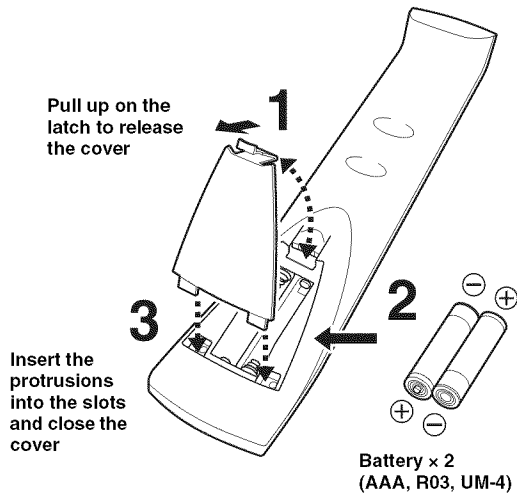

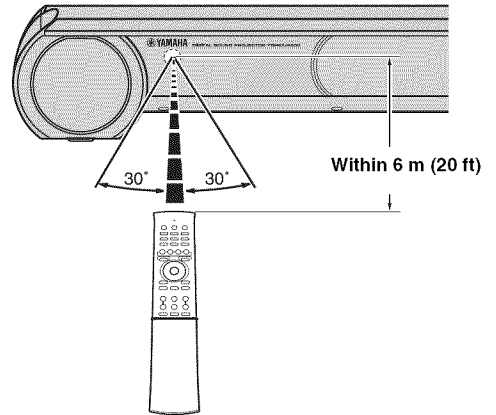


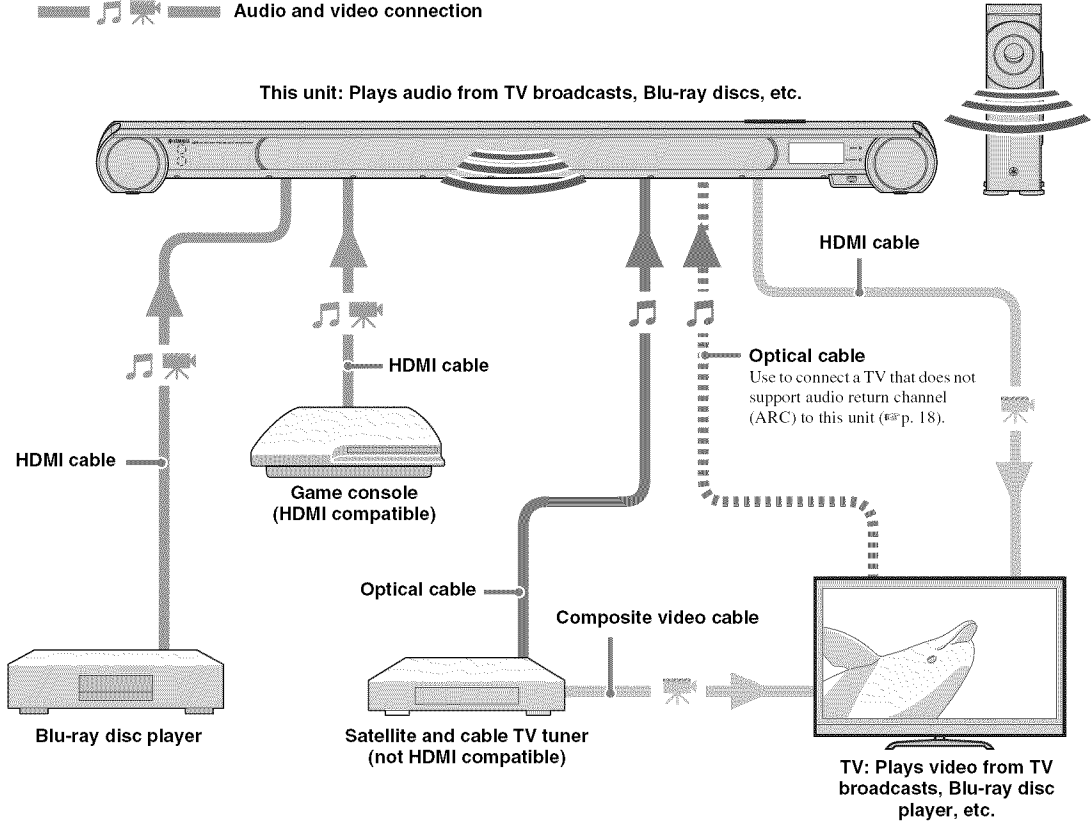
Operation range



Connections

When external devices such as a TV, Blu-ray disc player, and/or game console are connected, audio and video signals are transmitted as shown below.

-  Audio connection
-  Video connection
-  Audio and video connection



- Do not connect the power cable until all connections are completed.
- Do not use excessive force when inserting the cable plug. Doing so may damage the cable plug and/or jack.

Connecting a TV and a Blu-ray disc player

For the cable connection, follow the procedure below.

1 HDMI cable (optional)


Input the digital audio/video signals of the Blu-ray disc player to this unit.

2 HDMI cable (optional)

The digital video of the Blu-ray disc player is reflected on TV.

3 Optical cable (supplied)

Play back digital sounds of TV on this unit.

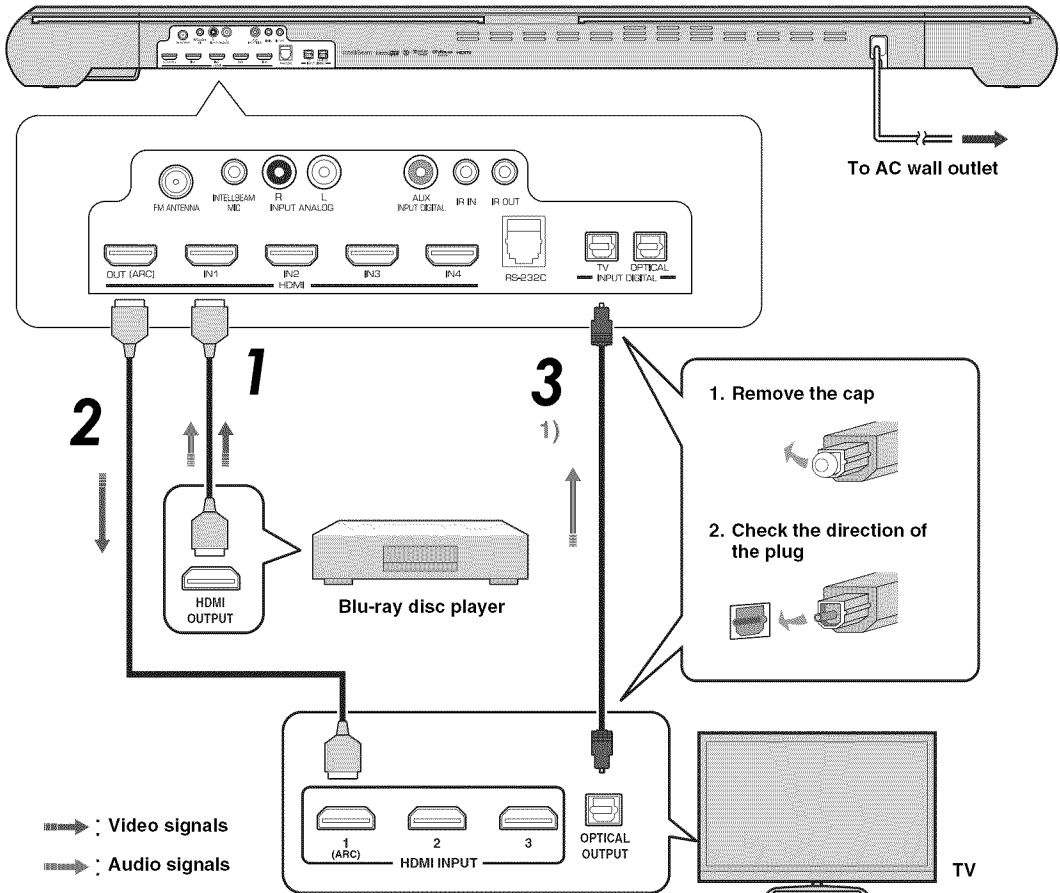

1)

Audio return channel (ARC) supported TV


- Connect an HDMI cable to the audio return channel supported jack (the jack with "ARC" indicated) on TV. In this case, you do not need to connect an optical cable.
- Activate the HDMI control function of this unit so as to activate the audio return channel (ARC) (p. 63).

What is audio return channel (ARC)?

A function transmits digital audio signal output from TV to this unit through an HDMI cable. By this function, an optical cable to connect TV and this unit is not needed.

Connecting a game console or satellite/cable TV tuner

	External device (example)	Connecting cable
HDMI compatible	1 Satellite/cable TV tuner	HDMI cable (optional)
	2 Game console	HDMI cable (optional)
	3 Game console	HDMI cable (optional)
not HDMI compatible	4 Satellite/cable TV tuner	Optical cable (supplied) Composite video cable (optional)
	5 Game console	RCA stereo cable (optional) Composite video cable (optional)

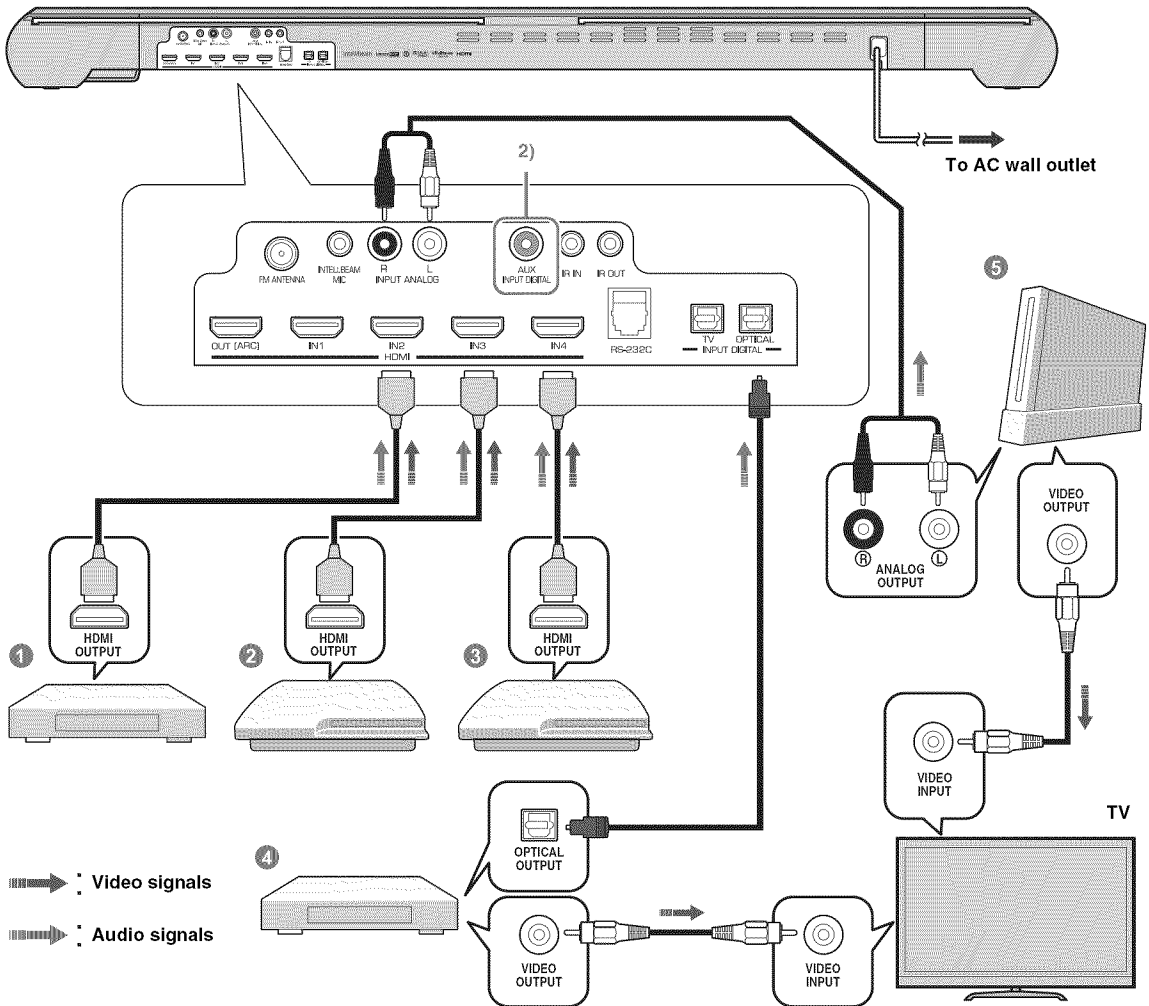

2)

To connect a device with an AUX output jack, connect its AUX output jack to the AUX INPUT DIGITAL (coaxial) jack on this unit via a commercial coaxial digital audio cable.

PREPARATION

PLAYBACK


SETTINGS

TROUBLESHOOTING

APPENDIX

Connecting the FM antenna (YSP-4300 only)

Connect the supplied FM antenna via the FM ANTENNA jack.

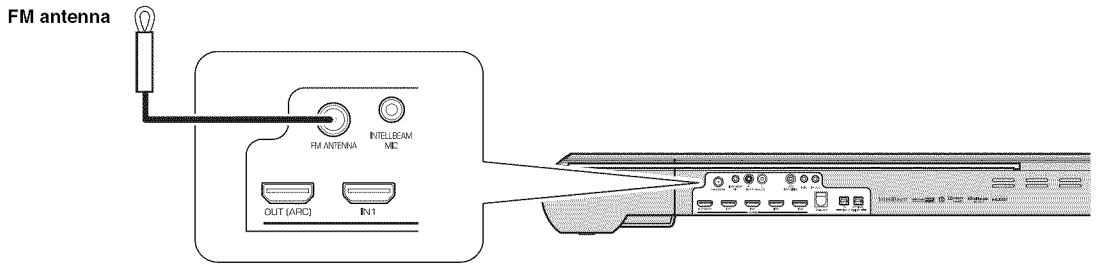


Connecting the wireless subwoofer

To connect the subwoofer (NS-WSW160) to the center unit wirelessly (yAired), the same group ID must be assigned to the center unit and subwoofer. The default group ID for both components is A1, enabling wireless connection by simply plugging the subwoofer's power cable into an electrical outlet. When using the transmitter (YIT-W12TX)¹⁾, the same group ID must be assigned to the center unit and subwoofer. The default group ID of YIT-W12TX is A1.

The LINK indicator lights when the subwoofer is on and the subwoofer and center unit are connected wirelessly.

When the center unit enters standby mode, the subwoofer and LINK indicator turn off.

Tip
See page 21 for more information on group ID.

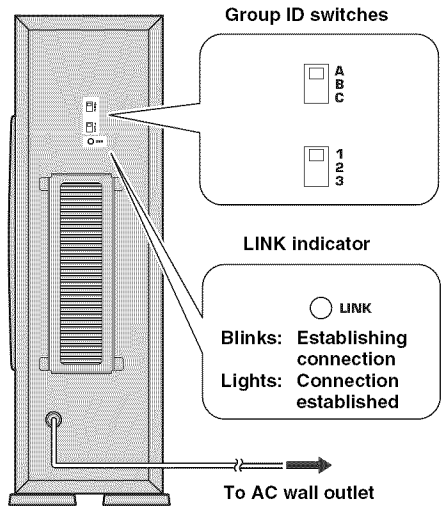

¹⁾

For details of YIT-W12TX, refer to "Safety and Accessory Information" (separate booklet).

Initial settings

Establishing a wireless connection

Yamaha's proprietary yAired technology enables the wireless connection of the center unit and subwoofer. Wireless connection of the subwoofer allows for subwoofer installation without concern for cables. When the transmitter (YIT-W12TX) is used, iPods or computers can be connected wirelessly to play music stored on these devices through this unit.

For details of YIT-W12TX, refer to "Safety and Accessory Information" (separate booklet).

When playing content from a TV or Blu-ray disc player, the center unit transmits audio signals that are received by the subwoofer. When YIT-W12TX is used to play songs stored on an iPod or computer, YIT-W12TX sends audio signals that are received by the center unit and subwoofer.

The same group ID must be assigned to all components. By default, the center unit, subwoofer, and YIT-W12TX are assigned a group ID of A1. This group ID does not need to be changed.

Group IDs

The center unit, subwoofer, and YIT-W12TX can be assigned a group ID from three possible sets: A1–A3, B1–B3, C1–C3. A1–A3, B1–B3: Audio delay is less than that of the C1–C3 set. C1–C3: Use when playing music stored on a computer via this unit (p. 48).

To prevent wireless connection of another yAired Yamaha sound system or device installed near this unit or the YIT-W12TX, assign a different group ID to this unit and the YIT-W12TX.

Changing the group ID

Center unit

Change the group ID from "GROUP ID" in the setup menu (p. 64).

Subwoofer

Use the group ID switches on the back of the subwoofer to change the group ID (p. 20).

YIT-W12TX

Use the group ID switches on the side of YIT-W12TX to change the group ID. For details of YIT-W12TX, refer to "Safety and Accessory Information" (separate booklet).



Displaying the menu screen on the TV

Visual operation of this unit is possible by displaying its menu screen on the TV.

Use the button for switching between input sources on the TV's remote control to select this unit.


When this unit and the TV are connected as shown below, select "HDMI 1".

TV remote control (example)

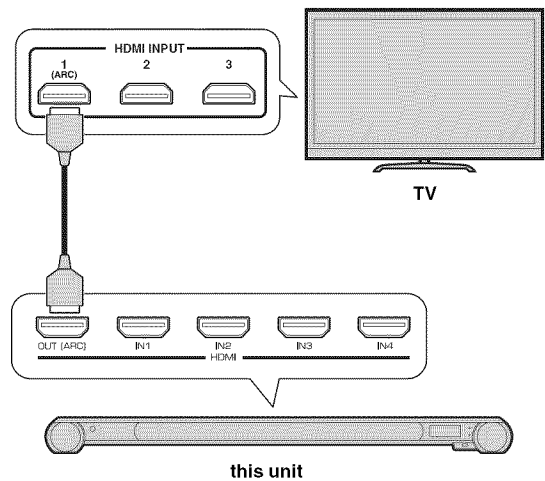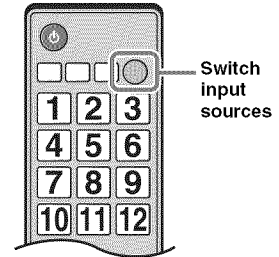


The menu display

The setup menu is displayed on the TV screen when the SETUP key is pressed. When the TV is receiving HDMI signals, the menu is superimposed over video content. Press the SETUP key a second time to cancel setup menu display.

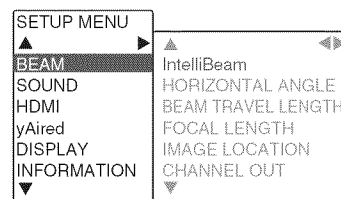


Note

The setup menu (p. 58) can only be displayed on a TV screen. It cannot be shown in the front panel display.

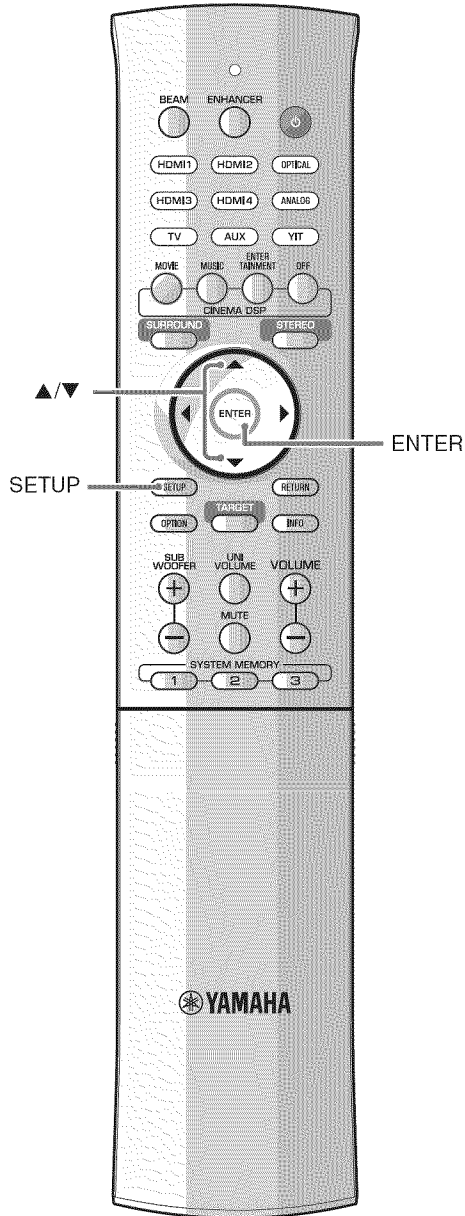

Selecting the language for menu display

- 1** Turn the unit and TV on.
- 2** Switch the TV's input to display video input from this unit (see p. 21).
- 3** Press and hold the **SETUP** key until the "OSD LANGUAGE" menu appears on your TV.¹⁾

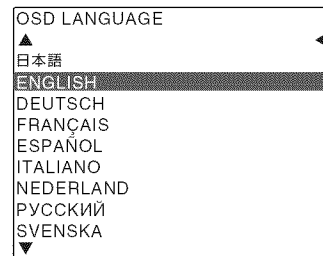

- 4** Press the ▲/▼ key to select the desired language.

Selectable item: 日本語, ENGLISH, DEUTSCH, FRANÇAIS, ESPAÑOL, ITALIANO, NEDERLANDS, РУССКИЙ, SVENSKA
Initial setting: ENGLISH

- 5** Press the **SETUP** key to exit the setup menu.

1)

When the screen is not displayed

Confirm the following cases.

- The HDMI input jack of your TV and the HDMI OUT (ARC) jack of the unit are connected.
- The input of your TV is set to "HDMI 1 (example)".

Auto setup for appropriate surround effects (IntelliBeam)

Due to differences in room sizes and shapes, positioning of this unit, and the lifestyle of users, settings for each channel must be adjusted in order for this unit to provide the optimal listening experience.

This unit is equipped with IntelliBeam, which automatically adjusts settings for each channel. IntelliBeam offers two features, “beam optimization” and “sound optimization”.

Beam optimization:

This feature optimizes the beam angle so that the parameter best matches your listening environment.

Sound optimization:

This feature optimizes the beam delay, volume, and quality so that the parameters best match your listening environment.

This unit performs these two automatic optimizations with the aid of the supplied IntelliBeam microphone.²⁾

Notes


- The AUTO SETUP procedure may not be run successfully if this unit is installed in one of the rooms described in “Conditions that make it difficult for sound beams to achieve surround sound” on page 11. The My Surround function can be used to enjoy rich surround sound in these types of rooms as well. See “Changing the audio output method for surround playback” (p. 36, 37) for more information.
- Do not connect the IntelliBeam microphone to an extension cable as doing so may result in an inaccurate sound optimization.
- After you have completed the AUTO SETUP procedure, be sure to disconnect the IntelliBeam microphone.
- The IntelliBeam microphone is sensitive to heat.
 - Keep the IntelliBeam microphone away from direct sunlight.
 - Do not place the IntelliBeam microphone on top of this unit.

Installing the IntelliBeam microphone

Place the IntelliBeam microphone at your normal listening position.



- Use the supplied cardboard microphone stand or a tripod to place the IntelliBeam microphone at the same height as your ears would be when you are seated.
- Position the IntelliBeam microphone so that it is parallel with the floor.

Assembling the supplied cardboard microphone stand

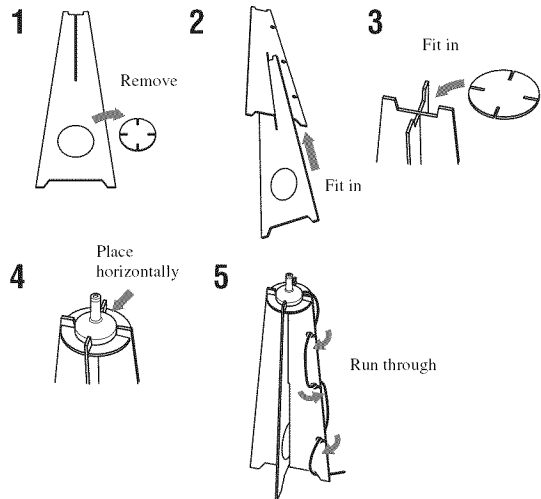

Make sure that there are no obstacles between the IntelliBeam microphone and the walls in your listening room as these objects obstruct the path of sound beams.


However, any objects that are in contact with the walls will be regarded as a protruding part of the walls.

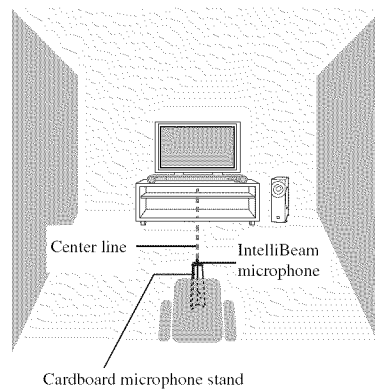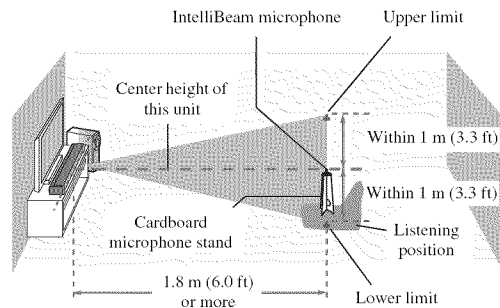

2)

- “BEAM+SOUND OPTIMIZE” screen appears automatically when the IntelliBeam microphone is connected. “BEAM OPTIMIZE ONLY” or “SOUND OPTIMIZE ONLY” can be selected separately in the setup menu (p. 26).

- Up to three sets of automatically configured settings can be stored in this unit’s memory (p. 28). You can save the several data depending on listening room and you can change the setting conveniently.

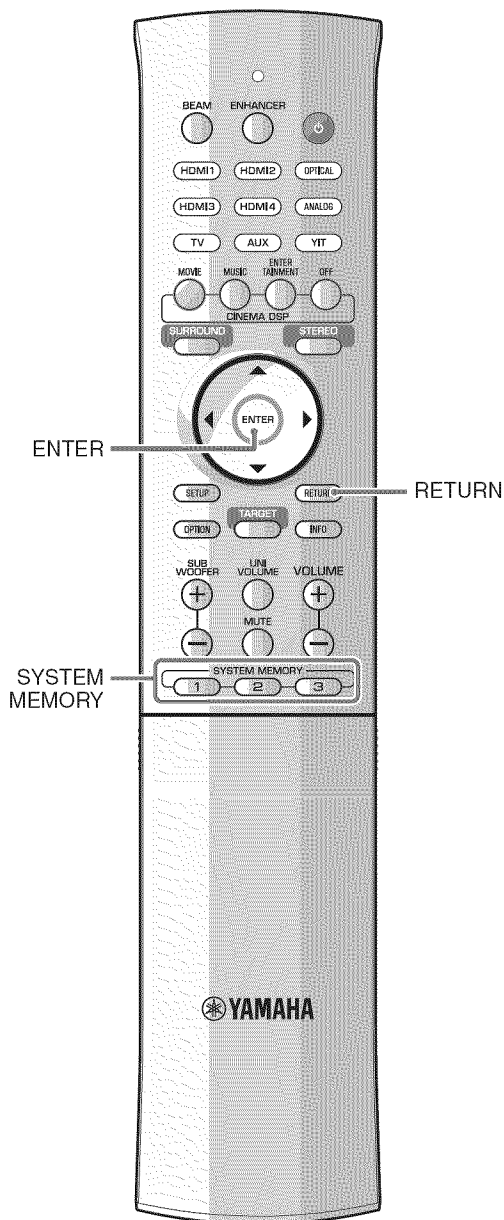


Using AUTO SETUP (IntelliBeam)

Notes

- It is normal for loud test tones to be output during the AUTO SETUP procedure. Make sure that there are no children around in the listening room while the AUTO SETUP procedure is in progress.
- If there are curtains in your listening room, we recommend following the procedure below.
 - 1 Open the curtains to improve sound reflection.
 - 2 Run "BEAM OPTIMIZE ONLY" (see p. 26).
 - 3 Close the curtains.
 - 4 Run "SOUND OPTIMIZE ONLY" (see p. 26).
- Make sure that your listening room is as quiet as possible. For accurate measurement, turn off air conditioner or other devices that make noises.

- 1 Turn the unit and your TV on.**
- 2 Switch TV input to display video input from this unit (see p. 21).**
- 3 Connect the IntelliBeam microphone to the INTELLIBEAM MIC jack on the rear of the unit.**

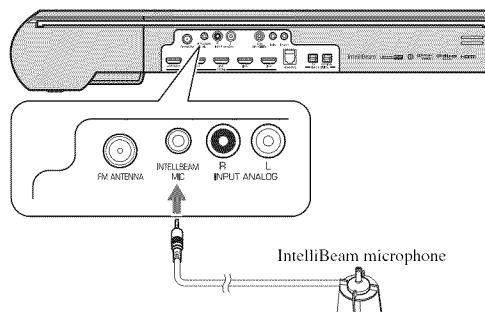

The screen below is displayed after connecting IntelliBeam microphone to the unit.¹⁾

AUTO SETUP
(PREPARATION & CHECK)
Please connect the MIC.
Please place the MIC at least
1.8m/6ft away from Sound Pro-
jector. The MIC should be set
at ear level when seated.
Measurement takes about 3min.
After [ENTER] is pressed,
please leave the room.
[ENTER]:Start [RETURN]:Cancel

Note

Follow the instructions below and then leave the room. If you remain in the room, you may obstruct the beam, or the microphone may pick up any sounds you make, possibly resulting in improper configuration of settings.

4 Press the **ENTER** key to start the **AUTO SETUP** procedure and then leave the room within 10 seconds.²⁾

The screen automatically changes during the AUTO SETUP procedure.

AUTO SETUP START
Will begin in 10 sec.
Please leave the room

[RETURN]:Cancel

(After 3 min.)

SHOW RESULT
MEASURE COMPLETE.
ENVIRONMENT CHECK: Success
BEAM MODE: 5Beam/Plus2
[ENTER]:Save set-up.
[RETURN]:Do not save set-up.

If the AUTO SETUP procedure is complete, this unit rings the chimes.³⁾

5 Press the **ENTER** key to confirm the results.⁴⁾


Measurement results are applied to this unit.

AUTO SETUP COMPLETE
Please remove the MIC
from Sound Projector
and the listening position.
Press [SYSTEM MEMORY] key
to save set-up in the memory.

- The measurement results are stored in the internal memory of this unit until you run the AUTO SETUP procedure again or configure the settings manually.
- You can save the several measurement results pressing the **SYSTEM MEMORY** key (☞p. 28).

6 Remove the IntelliBeam microphone.

The “AUTO SETUP COMPLETE” screen closes.⁵⁾
Keep the IntelliBeam microphone in a safe place.

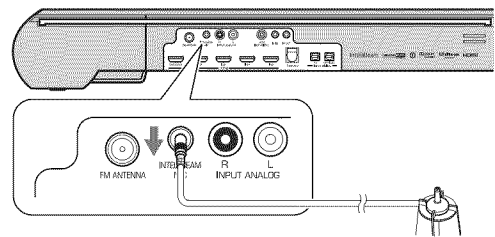

1)

“BEAM+SOUND OPTIMIZE” is selected automatically. When you perform “BEAM OPTIMIZE ONLY” or “SOUND OPTIMIZE ONLY” only, refer to “AUTO SETUP via setup menu” (☞p. 26).

2)

- Wait outside the room during the AUTO SETUP procedure. Remaining in the room after the AUTO SETUP process begins may result in the improper configuration of settings as your body may obstruct sound beams or the microphone may pick up sounds you make inadvertently.
- The AUTO SETUP procedure takes about 3 minutes.
- To cancel the AUTO SETUP procedure after it is started, press the **RETURN** key.

3)

If an error occurs, an error buzzer sounds and an error message is displayed. For details on error messages, see “If an error message is displayed” (☞p. 27).


- If “ENVIRONMENT CHECK:Failure” is displayed, accurate measurement may not have been possible. See “ERROR-E1” under “Error messages” (☞p. 27) for the remedy to this most common error. Press the **RETURN** key and begin measurement again.
- Depending on the environment of your listening room, the front left and right beam angles and left and right surround beam angles may be set to the same value even if “BEAM MODE :5Beam” is displayed as a result.

4)

If you do not want to apply the results, press **RETURN** key.

5)

When AUTO SETUP is performed from the setup menu, the menu selection screen of the setup menu appears.

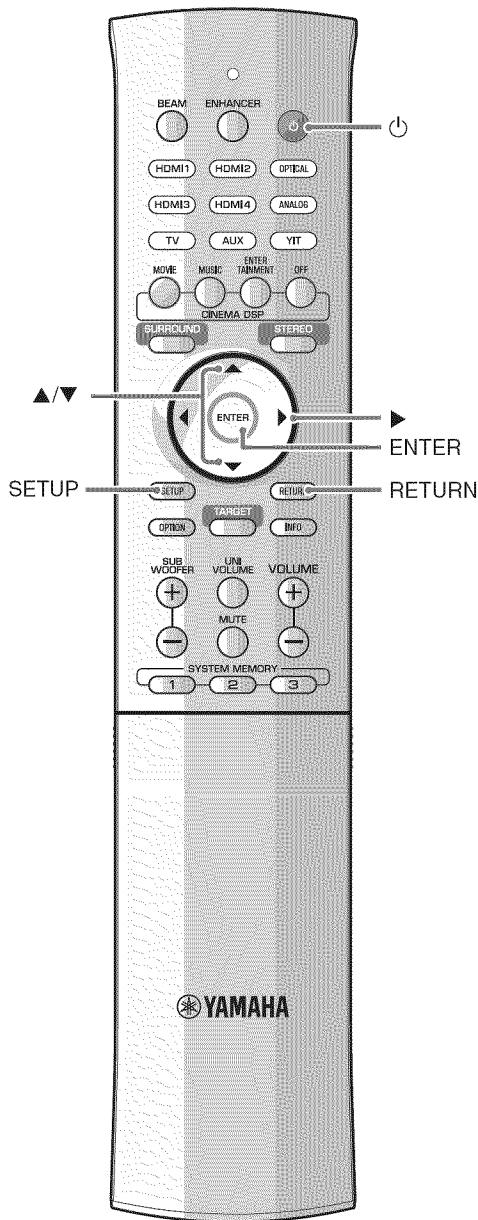

AUTO SETUP via setup menu

1 Place the IntelliBeam microphone at your normal listening position, and press the **SETUP** key.

See “Installing the IntelliBeam microphone” (p. 23) for instructions on positioning the IntelliBeam microphone.

2 Press the ▲/▼ key to select “BEAM” and then press the ► key.¹⁾

3 Press the ▲/▼ key to select “IntelliBeam” and then press the ► key.¹⁾

4 Press the ▲/▼ key to select one of the items below and then press the ► key.¹⁾

Select Item:

“BEAM+SOUND OPTIMIZE”

(Beam optimization and sound optimization)

Select this optimization feature if you make settings for the first time. This menu takes about 3 minutes.

“BEAM OPTIMIZE ONLY”

(Beam optimization only)

Use to optimize the beam angle so that the parameter best matches your listening environment. This menu takes about 1 minute.

“SOUND OPTIMIZE ONLY”

(Sound optimization only)

Use to optimize the beam delay, volume, and quality so that the parameters best match your listening environment. This menu takes about 2 minutes.

You must optimize the beam angle with “BEAM OPTIMIZE ONLY” before starting “SOUND OPTIMIZE ONLY”. Select this optimization feature in the following cases:

- If you have opened or closed the curtains in your listening room before using this unit
- If you have manually set the beam angle.

5 Connect the IntelliBeam microphone to this unit after “AUTO SETUP (PREPARATION & CHECK)” screen is displayed.

For the details on connecting IntelliBeam microphone, refer to “Using AUTO SETUP (IntelliBeam)” (p. 24).

6 Follow steps 4, 5, and 6 under “Using AUTO SETUP (IntelliBeam)” to configure settings, and then remove the microphone.

1) 

The **ENTER** key performs the same function as the ► key.

If an error message is displayed

If an error message is displayed on the TV screen, see “Error messages” below to determine the cause and resolve the problem. Follow the instructions below to begin measurement again.

[ERROR E-1]

Press the **ENTER** key to run the AUTO SETUP procedure again. Or press the **▶** key to continue the measurement.

[ERROR E-7]

Press the **⏻** key to turn this unit to the standby mode, then run AUTO SETUP procedure again after turning this unit on.

[ERROR E-9]

- 1 Be sure that a wireless connection between the subwoofer and center unit has been established (Ⓞp. 20).
- 2 Press the **RETURN** key.
The “IntelliBeam” menu is displayed.
- 3 Select “BEAM+SOUND OPTIMIZE”, “BEAM OPTIMIZE ONLY”, or “SOUND OPTIMIZE ONLY” and press the **▶** key.¹⁾
- 4 Follow steps 4, 5, and 6 to measure again (Ⓞp. 25).

[ERROR E-2] through [ERROR E-6]

- 1 Press the **RETURN** key.
The “IntelliBeam” menu is displayed.
- 2 Select “BEAM+SOUND OPTIMIZE”, “BEAM OPTIMIZE ONLY”, or “SOUND OPTIMIZE ONLY” and press the **▶** key.¹⁾
- 3 Follow steps 4, 5, and 6 to measure again (Ⓞp. 25).

Error messages

ERROR E-1: Please test in quieter environment.	
Cause	Remedy
There is too much noise in your listening room.	Make sure that your listening room is as quiet as possible. You may want to choose certain hours during the day when there is not much noise coming from outside.

ERROR E-2: No MIC detected. Please check MIC connection and re-try.	
Cause	Remedy
The IntelliBeam microphone is disconnected.	Connect the IntelliBeam microphone to the INTELLIBEAM MIC jack on the rear of this unit and begin measurement again.

ERROR E-3: Unexpected control is detected. Please re-try.	
Cause	Remedy
Some other operations were performed on this unit.	Begin measurement again. Do not perform any other operations with this unit during measurement.


ERROR E-4: Please check MIC position. MIC should be set in front of Sound Projector. Please re-try.	
Cause	Remedy
The IntelliBeam microphone is not placed in front of this unit.	Position the IntelliBeam microphone in front of this unit and begin measurement again.

ERROR E-5: Please check MIC position. MIC should be set above 1.8m/6.0ft and re-try.	
Cause	Remedy
The IntelliBeam microphone is not placed in the right distance from this unit.	Position the IntelliBeam microphone at a distance of more than 1.8 m (6.0 ft) from this unit and begin measurement again.

ERROR E-6: Volume level is lower than expected. Please check MIC position/connection and re-try.	
Cause	Remedy
The IntelliBeam microphone cannot collect the sound produced by this unit.	Position the IntelliBeam microphone properly, check the connection, and then begin measurement again.

ERROR E-7: Unexpected error happened. Please turn off and re-try.	
Cause	Remedy
An internal system error occurred.	Press the ⏻ key to turn this unit to the standby mode, then run AUTO SETUP procedure again after turning this unit on.

ERROR E-9: Check the connection with subwoofer.	
Cause	Remedy
The subwoofer is not connected wirelessly.	Be sure that a wireless connection between the subwoofer and center unit has been established (Ⓞp. 20) and measure again.

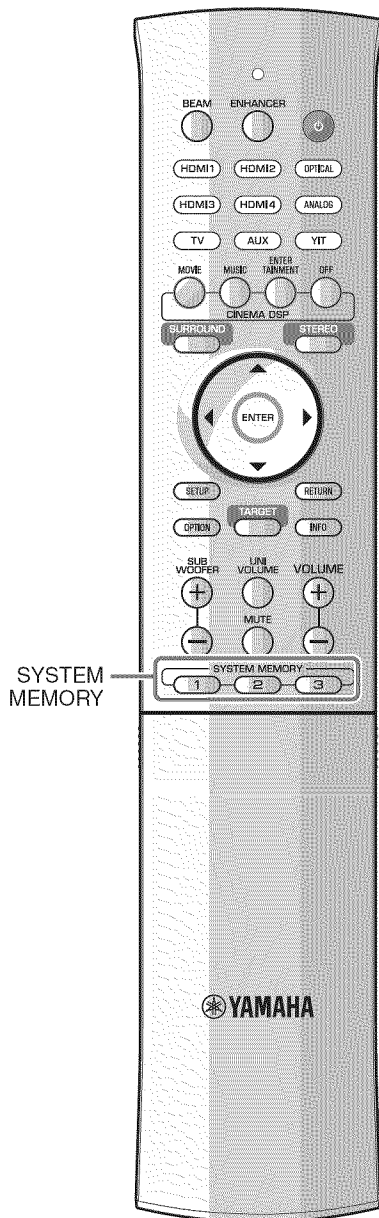

Saving this unit's settings to system memory

Three sets of settings can be saved to this unit's memory, enabling quick loading of settings optimized for specific listeners or environmental changes as needed. Refer to the examples below to save IntelliBeam measurement results and settings such as surround setting to system memory, or to load a pre-defined settings.

The following settings can be saved to system memory.

- Surround playback (p. 33), stereo playback (p. 33), or target playback mode (p. 33)
(The sound beam output method (p. 36) can also be saved for surround playback mode.)
- IntelliBeam measurement results (p. 23)
(When "HORIZONTAL ANGLE", "BEAM TRAVEL LENGTH", "FOCAL LENGTH", and "IMAGE LOCATION" are configured in the setup menu (p. 58), these settings are applied to IntelliBeam's AUTO SETUP measurements.)
- Surround: CINEMA DSP (p. 34), surround decoder (p. 38)
- Channel level (p. 33, 62)
- Tone control (p. 43)

Example 1 Saving the IntelliBeam measurements for different environments to system memory

If materials that absorb sound, such as curtains, obstruct sound beams, the effectiveness of those beams decreases. Measure with the curtains open and again with them closed. Save both sets of settings to system memory 1 and 2, and load the appropriate settings as needed.

Example 2 Saving frequently used settings to system memory

SYSTEM MEMORY 1: Surround setting

SYSTEM MEMORY 2: A target playback mode setting that projects sound beams toward the kitchen

SYSTEM MEMORY 3: A target playback mode setting that projects sound beams toward the living room

Example 3 Saving preferred listener settings to system memory

SYSTEM MEMORY 1: Settings configured for Dad

SYSTEM MEMORY 2: Settings configured for Mom

SYSTEM MEMORY 3: Settings configured for parties

Saving settings to system memory

1 Hold down the **SYSTEM MEMORY 1, 2, or 3** key until “M1 Save?”, “M2 Save?”, or “M3 Save?”, corresponding to the button pressed, is displayed.

2 Press the same **SYSTEM MEMORY** key again.¹⁾

When the **SYSTEM MEMORY 1** key is pressed, “M1 Saving” is displayed, and settings are saved.

Loading settings

1 Press the **SYSTEM MEMORY 1, 2, or 3** key corresponding to settings to be loaded.


If the **SYSTEM MEMORY 1** key is pressed, “M1 Load?” will be displayed.

2 Press the same **SYSTEM MEMORY** key again.

When the **SYSTEM MEMORY 1** key is pressed, “M1 Loading” is displayed, and settings are loaded.

1) 

- If system settings are already stored in the selected memory number, this unit overwrites the old settings.
- The memory function cannot be set when “MEMORY PROTECT” is set to “ON” in the advanced setup menu (*p. 66).

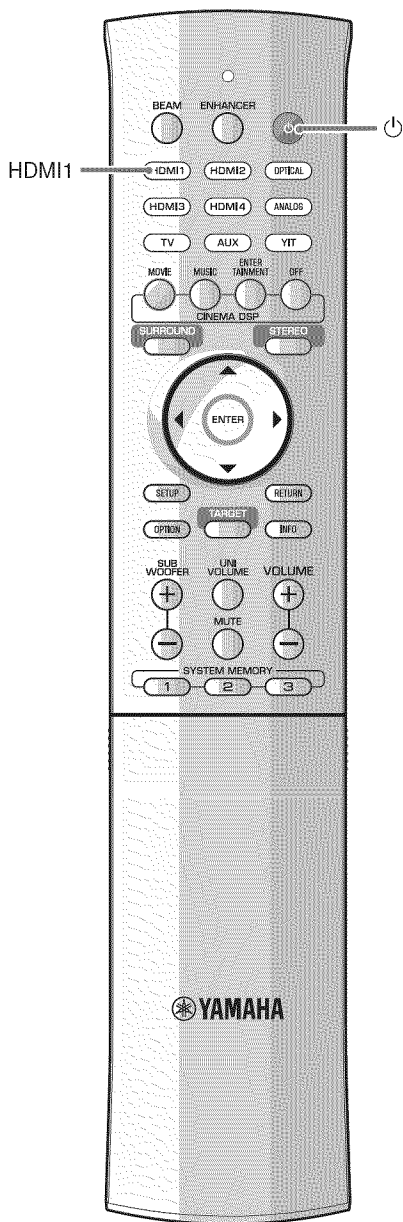

Operating the unit by TV's remote control (HDMI control)

What is the HDMI control function?

This unit can be operated using a TV's remote control if the TV supports the HDMI control function and is connected to this unit via HDMI cable (e.g. REGZA Link; some TVs excluded). The following 6 functions are supported.¹⁾

Remote control of TV (Example)

1. Turn on/off

Both the TV and this unit turn on/off at the same time.

2. Switch input sources

- The input source for this unit switches accordingly when the TV's input source is switched. The input source for this unit also switches when a Blu-ray disc player is selected as the input source from the TV's menu display.
- The input source can be switched while this unit is in standby mode.

3. Control volume

This unit's volume can be adjusted when "HDMI AUDIO OUT" (☞p. 63) is set to "AMP" (default).

4. Switch the audio output device (TV or this unit)

5. HDMI signal pass-through

HDMI input signals are output from the HDMI OUT (ARC) jack. Video and audio content from an HDMI input source are output from the TV when this unit is in standby mode.

6. ARC function

Audio signals output from the HDMI (ARC) jack on the TV can be input to this unit.

First, try the operations described above with your TV's remote control. If you are able to perform these operations, you may continue operating this unit with your TV's remote control. If you are not able to perform these operations, configure HDMI control settings (☞p. 31).

With some TVs, the following additional functions can be controlled.

- Turning the UniVolume function on and off
- Navigating this unit's setup menu displayed on the TV
- Operating the browse/playback screens for an iPod or USB device connected to the USB jack (YSP-4300 only)



- Even if your TV supports the HDMI control function, some functions may not be available. For details, refer to the manual supplied with your TV.
- If you connect this unit to a device such as a Blu-ray disc player that supports HDMI control via HDMI cable, you can control that device using the HDMI control function. For details, refer to the manual supplied with each device.
- We suggest using devices (TV, Blu-ray disc player, etc.) from the same manufacturer.

Setting the HDMI control function

1 Turn on all components connected to this unit via HDMI cable.

2 Enable the HDMI control function of all components connected to this unit via HDMI cable.

For this unit, set "HDMI CONTROL" to "ON" (see p. 63).²⁾
For external components, refer to the manual supplied with each component.³⁾

3 Turn off the TV and then turn on it again.


Registering HDMI compatible components to the TV⁴⁾

1 Select this unit as the input source of the TV.

2 Turn on an external components, such as a Blu-ray disc player, connected to this unit via HDMI cable.

3 Select the input source of this unit to Blu-ray disc player and check whether the image in the player is correctly displayed or not.

If the Blu-ray disc player is connected via HDMI IN1 jack, press the **HDMI1** key.

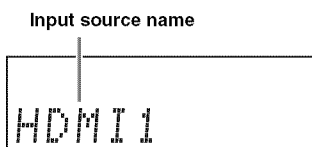

4 Check if the HDMI control function works (turn on this unit or adjust the volume level using the remote control of the TV).

If the HDMI control function is not working

Be sure that all components are correctly connected to this unit, and that settings are properly configured as described below.

- The TV is connected to the HDMI OUT (ARC) jack of this unit.
- "HDMI CONTROL" (see p. 63) is set to "ON" in the setup menu.
- The HDMI control function is enabled on the TV. (Also check the relative settings such as power interlock function or speaker priority.)

When the HDMI control function is not still working even after the above has been checked,

- Turn off this unit and the TV, and then turn them back on again.
- Disconnect the AC power supply cable of the unit and external components connected to the unit via HDMI cable. Plug them in again after about 30 seconds.
- After OPTICAL, ANALOG, AUX, YIT, or USB⁵⁾ input has been enabled, switch the input source for the TV and this unit to the components connected via HDMI cable.

Changing the connection method and connected components

When the connected components and jacks are changed, reset this unit with the following procedure.

1 Disable the HDMI control function of the TV and Blu-ray disc player, turn off all connected components, and change the connections.

2 Perform steps 1 to 3 of "Setting the HDMI control function".

2)

- The default setting is "OFF".
- **When "HDMI CONTROL" is set to "ON"**
When the Eco function (see p. 41) is enabled, this unit enters standby mode if the TV is selected for audio output using the TV's remote control.

3)

The example of TV settings

- From the setup menu on your TV, select "Link setting" → "HDMI control setting", then set a setting such as "HDMI control function" to "ON".
- Setting such as "Speaker priority" should be set to "AV amplifier".


4)

For some HDMI compatible components, registering HDMI compatible components to TV is not required in this case when the HDMI control function is enabled.


5)

YSP-4300 only

Playback features

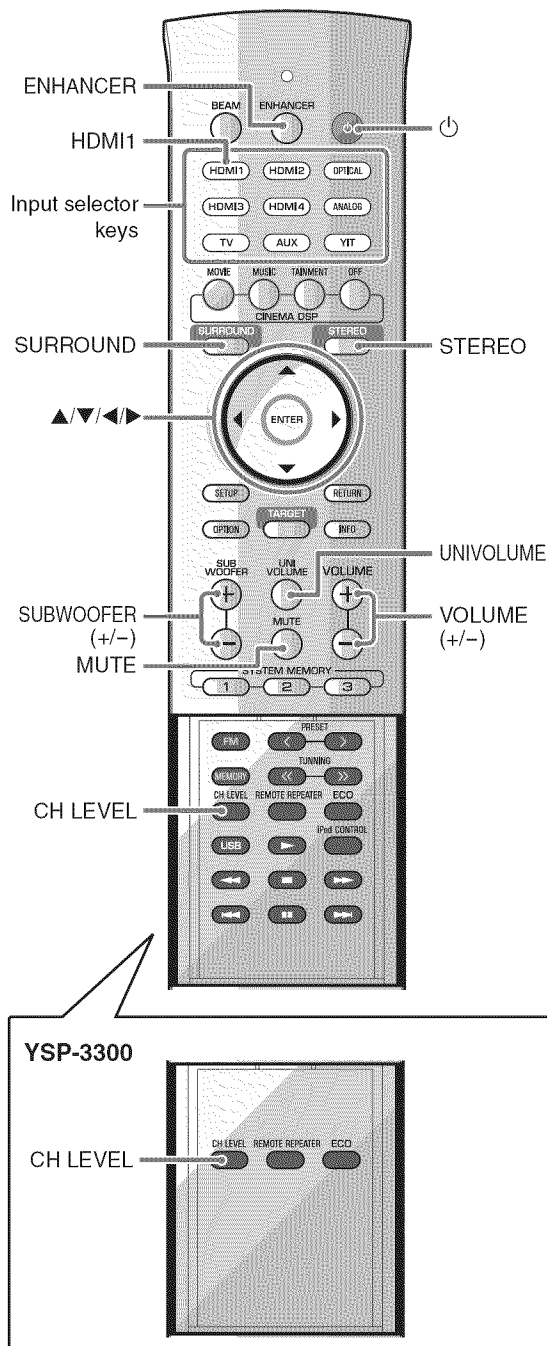


Basic operation for playback

- 1** Press the  key to turn on this unit.
- 2** Turn on components (TV, Blu-ray disc player, game console, etc.) connected to this unit.
- 3** Select a component by pressing the input selector key corresponding to the connection of external components.

Press the **HDMI1** key to play audio/video content from a Blu-ray disc player connected via the HDMI IN1 jack.


Input source name



- 4** Play back component selected in step 3.
- 5** Press the **VOLUME (+/-)** key to adjust the volume.
Press the **SUBWOOFER (+/-)** key to adjust the volume of the subwoofer.¹⁾

- When audio is output from both TV speaker and this unit, mute the TV sound.
- When sound input to HDMI IN jack is output from the TV, the volume level does not change even if you press the **VOLUME (+/-)** key or the **MUTE** key.
- To mute the sound, press the **MUTE** key. While the mute function is activated, the VOL indicator in the front panel display blinks. To resume the volume, press the **MUTE** key again or press the **VOLUME (+/-)** key.

- 6** Select from surround playback, stereo playback, or target playback mode, and configure sound setting according to your preferences (see p. 33).

Press the  key to turn this unit to the standby mode.

1) 

- The subwoofer volume can be adjusted separately from the whole volume.
- Lowering the subwoofer volume is recommended at night.

Enjoying sound based on your preference

This unit supports the following capabilities to enjoy sound based on your preference.


- Switching between surround playback, stereo playback, and target playback modes
- Compressed Music Enhancer
- Volume adjustment for each channel
- CINEMA DSP
- Switching between surround audio output methods
- Surround sound decoder

Switching between surround playback, stereo playback, and target playback modes

Stereo playback mode

Press the **STEREO** key to switch to stereo playback mode.

Press the **STEREO** key to switch between standard stereo and beam stereo playback modes.

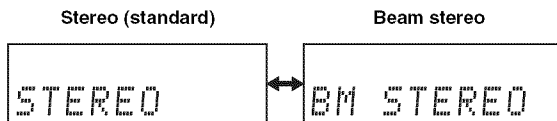

When “STEREO” is selected, the front channels are the primary channel sources for output of stereo sound.

When “BM STEREO” is selected, left and right channel sounds are output as sound beams from the front left and right channels. This expands the area to which sound is output.

Surround playback mode

Press the **SURROUND** key to switch to surround playback mode.

Surround sound is output as sound beams. See page 36 for instructions on switching between the sound beam output methods.

Target playback mode

Press the **TARGET** key to switch to target playback mode.

Target playback mode focuses sounds from all channels as sound beams from a single channel to achieve optimal listening for a specified listener. See page 39 for more information.

2)

- By default, this function is set to “ON” when the input source is YIT or USB (YSP-4300 only). It is set to “OFF” with any other input source.
- Compressed Music Enhancer does not work in case of the following digital audio signals:
 - Dolby TrueHD, DTS-HD Master Audio, etc.
 - Signal that sampling rate is more than 48 kHz.

3)

Refer to “SPEAKER LEVEL” (p. 62) when adjusting the volume of each channel with the test sound.

Playing back digitally compressed formats (MP3, WMA, etc.) with enriched sound (Compressed Music Enhancer)

Play back digitally compressed format such as MP3 and WMA, with emphasis on bass and treble for extended dynamic sounds.

Press the **ENHANCER** key to turn the **Compressed Music Enhancer** function on.²⁾

Press the key again to turn the function off.

Adjust volume for each channel

Volume for each channel can be adjusted during playback to balance audio output.³⁾

1 Press the **CH LEVEL** key to select adjustable channel from the followings.

- FL: Front left
- FR: Front right
- C: Center
- SL: Surround left
- SR: Surround right
- SW: Subwoofer

When My Surround (MY SUR.) is selected (p. 37):

- C: Center
- SL/SR: Surround left and right
- SW: Subwoofer


2 Press the **▲/▼** key to adjust the volume.⁴⁾

Adjustable range: -20 to +20

4)

Example of volume balance

- If you have problems hearing words: Select C (center) to increase the level.
When the sound is not like surround sound: Select SL (surround left) and SR (surround right) to increase the level.
- The volume of the subwoofer also can be adjusted by using the **SUBWOOFER (+/-)** key.

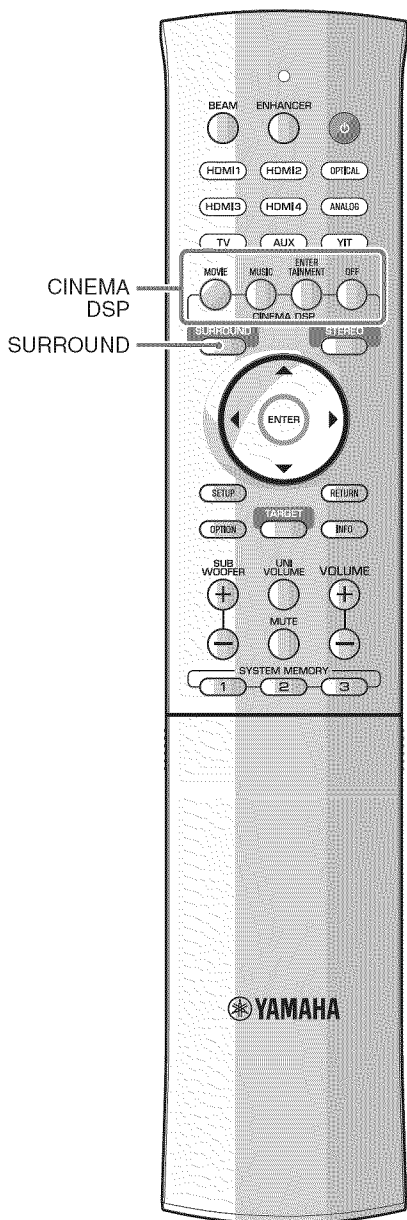

Enjoying realistic surround sounds (CINEMA DSP)

Playback surround sounds using Yamaha's exclusive CINEMA DSP.¹⁾

- 1 Press the **SURROUND** key to switch to the surround mode.
- 2 Press the **CINEMA DSP (MOVIE, MUSIC, or ENTERTAINMENT)** key repeatedly to select the desired program.²⁾³⁾

The CINEMA DSP category name appears in the front panel display and the CINEMA DSP indicator (☼p. 8) lights up.

1) ☼

CINEMA DSP

This unit is equipped with a Yamaha CINEMA DSP (digital sound field processing) chip containing several sound field programs used to enhance your playback experience. Most of the CINEMA DSP programs are precise digital recreations of actual acoustic environments of famous concert halls, music venues, and movie theaters.

2) ☼

The CINEMA DSP programs are not available in the following conditions.

- Audio signals with sampling frequency of higher than 48 kHz are being played back.
- When using My Surround function (☼p. 37).
- When playing back in stereo playback mode.
- When target playback mode is enabled (☼p. 39).

3) ☼


This unit automatically memorizes the settings assigned to each input source. When you select another input, the unit automatically recalls the last settings for the selected input.

CINEMA DSP options

MOVIE (use the MOVIE key to select)
<p>Sci-Fi This program clearly reproduces dialogs and special sound effects of the latest science fiction films and lets you feel a broad and expansive cinematic space.</p>
<p>Adventure This program reproduces the thrilling environment of the latest action films and lets you feel the dynamic and excitement of fast-moving scenes.</p>
<p>Spectacle This program reproduces the wide and grand environment and lets you have added impressions on spectacular scenes with strong visual impacts.</p>

MUSIC (use the MUSIC key to select)
<p>Concert This program creates a rich surround effect of a large round concert hall with a great deal of presence, emphasizing the extension of sounds, and lets you feel as if you are seated close to the center of the stage.</p>
<p>Jazz Club This program recreates the acoustic environment of “The Bottom Line”, a famous jazz club in New York once and lets you feel as if you are seated right in front of the stage.</p>
<p>Music Video This program produces a vibrant environment and lets you feel as if you are at an actual jazz or rock concert.</p>

ENTERTAINMENT (use the ENTERTAINMENT key to select)
<p>Sports This program reproduces the energetic environment of live sports broadcasting, converging a commentator’s voice on the center and broadening the overall atmosphere of the stadium, and lets you feel as if you are seated at an actual stadium or a ball park.</p>
<p>Talk Show This program reproduces excitement of live talk shows. It enhances the ambience of gaiety while keeping the conversations at a comfortable volume.</p>
<p>Drama This program stables reverberations that match a wide range of movie genres from serious dramas to musicals and comedies, and offers an optimum 3D feeling, reproducing effects tones and background music softly but cubically around clear words.</p>
<p>Game This program is suitable for role-playing and adventure games. It utilizes the sound field effects for movies to represent the depth and spatial feeling of the field during play, while offering movie-like surround effects in the movie scenes in the game.</p>
DSP Off (press the OFF key)
<p>Set CINEMA DSP to Off.</p>

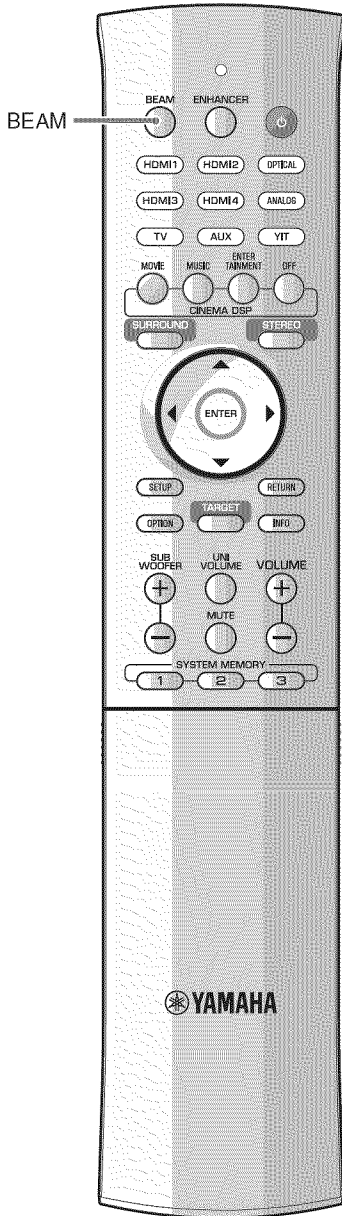

Changing the audio output method for surround playback

Specify the sound beam output method for surround sound playback.

Press the **BEAM key to switch the sound beam output method.**

With 5.1-channel (or 2-channel) input

Sound beams are output from 5.1 channels. Choose from 5BEAM (5 Beam), ST+3BEAM (Stereo + 3 Beam), 3BEAM (3 Beam), and MY SUR. (My Surround).







With 7.1-channel (or 6.1-channel) input


Sound beams are output from 7.1 channels. Choose from 5BEAM+2 (5 Beam Plus 2), ST+3BEAM+2 (Stereo + 3 Beam Plus 2), 3BEAM (3 Beam), and MY SUR. (My Surround).

Tips

- The default sound beam channel output setting is "AUTO". At the default setting, sound is output from the appropriate number of channels according to input signal as indicated above.
With 2-/5.1-channel input: 5.1-channel output
With 6.1-/7.1-channel input: 7.1-channel output
- The output method can be locked at 5.1 or 7.1-channel output from "CHANNEL OUT" in the setup menu (Ⓜ p. 61).

Sound beam output options and characteristics

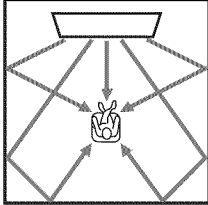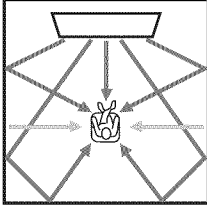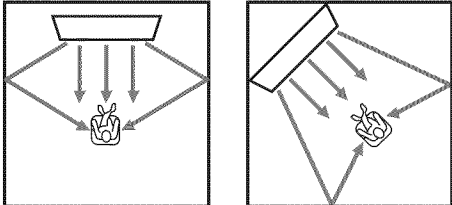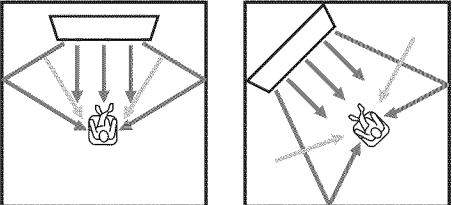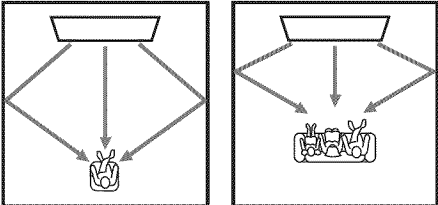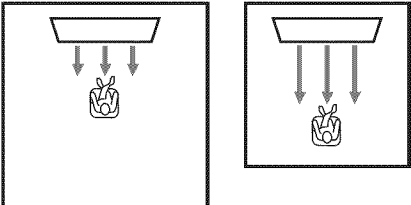Objective/ possible scenario	Number of channels	
	Beam modes for "5.1ch"	Beam modes for "7.1ch"
For enjoying surround sound effects on the movie, etc. to the fullest	<p>5BEAM (5 Beam)</p>  <p>Outputs sound beams from the front right and left, center, and surround right and left channels.</p>	<p>5BEAM+2 (5 Beam Plus 2)</p>  <p>Outputs sound beams from the front right and left, center, and surround back right and left channels. Surround left channel sources are mixed with front left and surround back left channel sources.</p> <p>Surround left channel (→→) content is generated from the front left and surround back left channels that output sound beams. The same is true for right channels.</p>
For watching live recordings	<p>ST+3BEAM (Stereo + 3 Beam)</p>  <p>Outputs normal sound from the front right and left channels and sound beams from the center and surround right and left channels.</p>	<p>ST+3BEAM+2 (Stereo + 3 Beam Plus 2)</p>  <p>Outputs normal sound from the front right and left channels and sound beams from the center and surround back right and left channels. Surround left channel sources are mixed with front left and surround back left channel sources.</p> <p>Surround left channel (→→) content is generated from the front left and surround back left channels that output sound beams. The same is true for right channels.</p>
For a group watching movies, or when watching a movie from a position near a back wall.	<p>3BEAM (3 Beam)</p> <p>Outputs sound beams from the front right and left and center channels. Other channel sources are mixed into the front right and left channels.</p>	
For small listening areas or when surround sound effects are insubstantial due to the listening room conditions.	<p>MY SUR. (My Surround)</p> <p>For the full effect of My Surround, your listening position must face toward the front of this unit. Even surround sound effects are insubstantial with other settings, you can enjoy sound with surround effects.</p>	

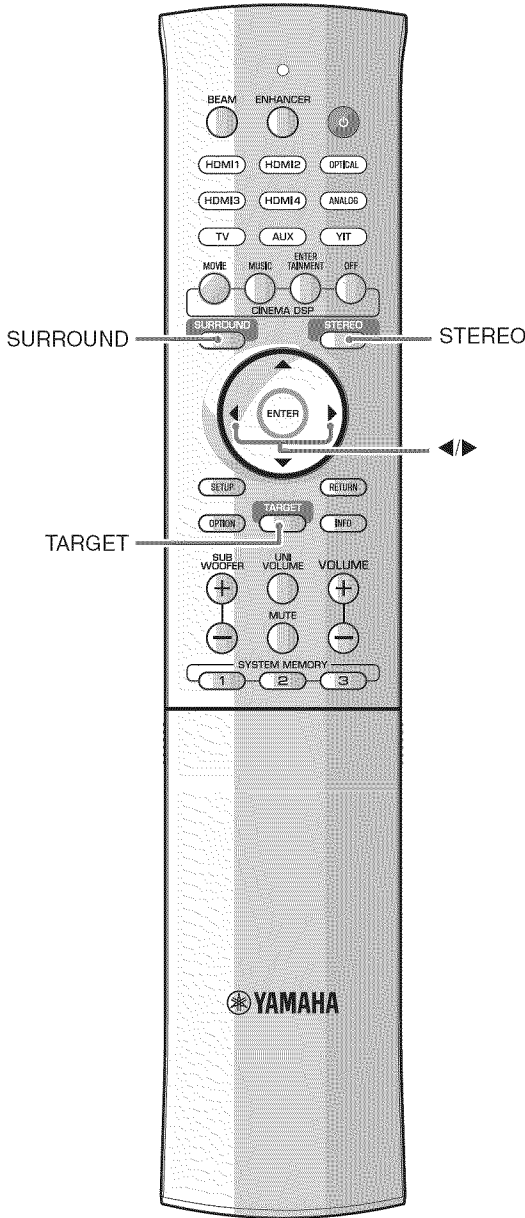

Setting the surround decoder

When this unit plays back 2-channel or 5.1-channel sources in the surround mode, surround decoder enables them playback for 7.1-channel.¹⁾ You can enjoy a variety of surround sound effects by switching the decoder.²⁾

To enable a surround decoder, press the **SURROUND** key to select “DSP Off”.

Select the desired decoder from the setup menu → “SOUND” → “MATRIX DECODER”.

See “Setting the setup menu” under “Setup menu” (p. 58) for instructions on accessing the setup menu.

Available decoders and recommended sources 2ch → 5ch

Decoder		Recommended source
PLII (Dolby Pro Logic II)	Movie Music Game	Movies Music Games
Neo:6 (DTS Neo:6)	Cinema Music	Movies Music

2ch → 7ch

Decoder		Recommended source
PLIIx (Dolby Pro Logic IIx)	Movie Music ³⁾ Game	Movies Music Games
Neo:6 (DTS Neo:6)	Cinema Music	Movies Music

1)

About the surround decoder for playback of 5.1-channel sources

When “Ch Out” (channel output) is set to “7.1ch”, this unit decodes 5.1-channel sources and then playback them in up to 7.1-channel surround (p. 36). One of the following decoders is automatically selected depending on the input signals.

5.1ch input source	Decoder
PCM, Dolby Digital, Dolby Digital Surround EX, Dolby TrueHD, Dolby Digital Plus	Dolby Pro Logic IIx Movie/Music
DTS Digital, DTS-ES matrix, DTS-HD Master Audio, DTS-HD High Resolution Audio	DTS-ES matrix
DTS-ES discrete	DTS-ES discrete

2)

- Available decoders vary depending upon the selected sound beam channel output setting (p. 37).
- Decoders are disabled when stereo playback mode (p. 33), My Surround (p. 36, 37), or target playback mode (p. 39) is enabled.


3)

Dolby Pro Logic IIx Music parameters (Center Width, Panorama, and Dimension) can be adjusted from the setup menu (p. 63).


Delivering sound to a specified location (Target playback mode)

Target playback mode outputs sound beams from a single channel for optimal listening from a specific position. Refer to the illustrations below.

To limit sound to the immediate area

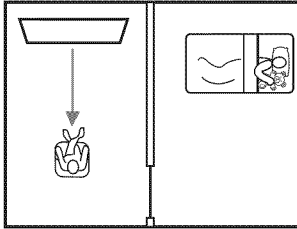

For clear sound at a distance

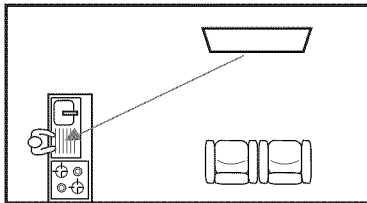


Beam angle can be adjusted while audio or video content is playing.

1 Press the **TARGET** key.

2 Use the ◀▶ key to adjust beam angle.

- Angle to the left increases each time the ◀ key is pressed; angle to the right increases each time the ▶ key is pressed. A maximum angle of 90° in either direction is possible.
- When playing content stored on an iPod or USB device connected to the USB jack, press the ◀▶ key while "TARGET" is displayed (YSP-4300 only).

Beam angle adjusted 16° to the left



Disabling target playback mode

Press the **SURROUND** or **STEREO** key to turn target playback mode off.

Tip

Surround decoders and CINEMA DSP are disabled in target playback mode.

Using useful features



Automatic volume level adjustment (UniVolume)

This function automatically compensates for extreme differences in volume for more comfortable listening in the following types of situations.

- When switching the channel
- When a TV program changed to commercial
- When one program is finished and another program started

Press the **UNIVOLUME** key to turn the UniVolume function on.¹⁾

Press the key again to turn the function off.

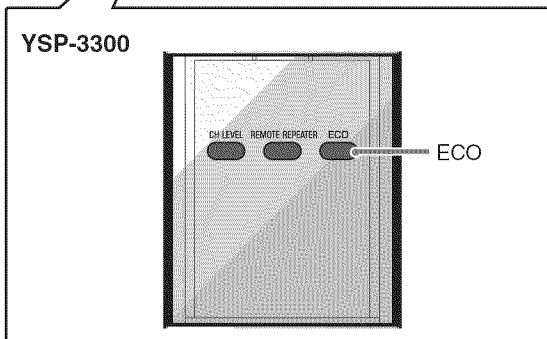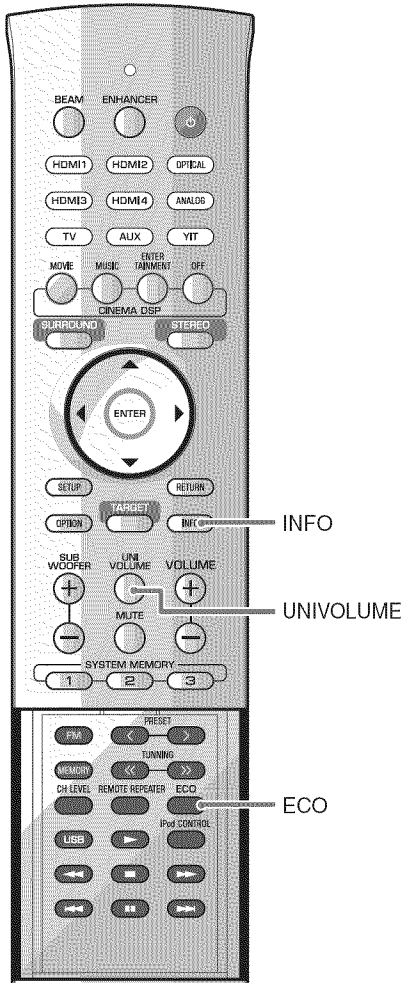

1) 

- The default setting is "OFF".
- We recommend turning off the UniVolume function during playback of music.

Saving energy with the Eco function

When the Eco function is enabled, this unit automatically enters standby mode as follows.

- No operations are performed with this unit for 3 hours²⁾
- No input signal is received for 30 minutes
- Playback of content stored on the iPod connected to YIT-W12TX is stopped for 2 minutes
- The iPod to which YIT-W12TX is connected is turned off.
- The iPod to which YIT-W12TX is connected enters sleep mode.
- The YIT-W12TX is disconnected from the iPod.
- The YIT-W12TX is disconnected from the computer.

Press the **ECO** key.

“ECO ON” is displayed and the front panel display turns off.



The brightness of STATUS and SURROUND indicators is minimized.

Tips

The following restrictions apply when the Eco function is enabled.

- This unit will not turn on when content stored on the iPod to which YIT-W12TX is connected is played. For details of YIT-W12TX, refer to “Safety and Accessory Information” (separate booklet).
- If this unit is configured to output audio from the TV using the HDMI control function (p. 31), this unit will enter standby mode.

Disabling the Eco function

Press the **ECO** key.

“ECO OFF” is displayed in the front panel display.


Switching information displayed in the front panel display

The input source and surround information is displayed.

Press the **INFO** key.

Display changes as follows each time the **INFO** key is pressed. The specific information displayed varies according to the input source.

Input source: HDMI1– 4, YIT, TV, OPTICAL, ANALOG, FM³⁾

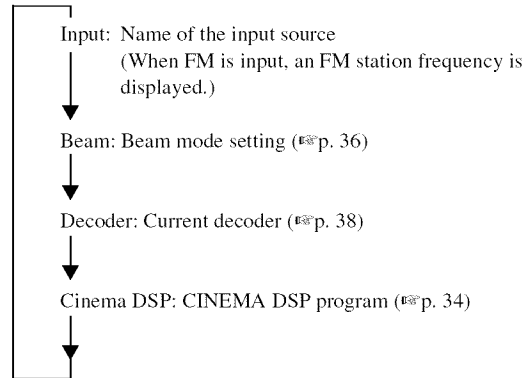



See pages 53 and 56 for instructions on switching display when the input source is USB.³⁾

2) 

This unit enters standby mode after 12 hours have passed since the last operation was performed, even when the Eco function has been set to “OFF”.

3) 

YSP-4300 only

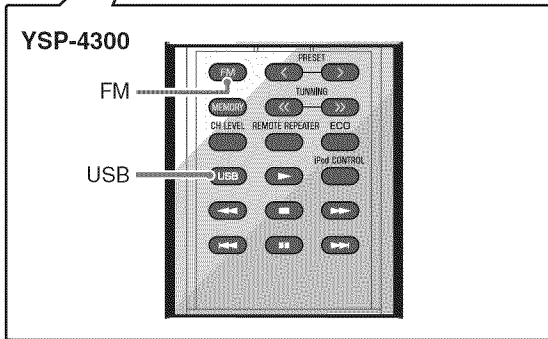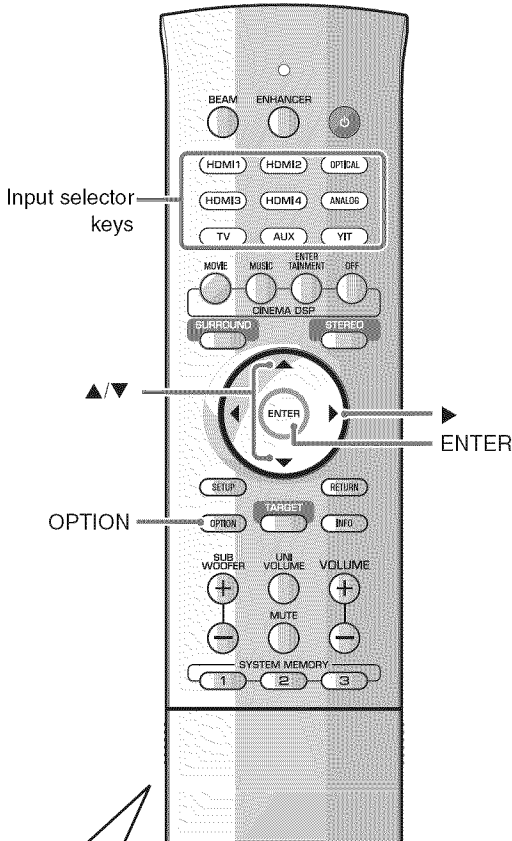

Settings each input source (Option menu)

Option settings can be specified for each input source (HDMI1–4, TV, OPTICAL, AUX, ANALOG, YIT, FM¹⁾, USB¹⁾). The configurable items vary depending on the input source selected.

- 1** Press the input selector key to select the input source that you want configured.
- 2** Press the **OPTION** key.

The option menu is displayed in the front panel display (it is not displayed on the TV screen).



- 3** Select the items by pressing the **▲/▼** key, then press the **▶** key.²⁾
- 4** Change setting value by pressing the **▲/▼** key.
- 5** Press the **OPTION** key to exit the option menu.

1) -

YSP-4300 only

2) -

The **ENTER** key performs the same function as the **▶** key.

Option menu items

The following menu items are provided for each input.

Input source	Menu items
HDMI-4	TREBLE, BASS, VOLUME TRIM, AUDIO DELAY, AUDIO ASSIGN
TV	TREBLE, BASS, VOLUME TRIM, AUDIO DELAY
OPTICAL	
AUX	
ANALOG	
YIT	TREBLE, BASS, VOLUME TRIM
FM (YSP-4300 only)	TREBLE, BASS, VOLUME TRIM, AUTO PRESET ³⁾ , CLEAR PRESET ³⁾ , FM MODE ³⁾
USB (YSP-4300 only)	TREBLE, BASS, VOLUME TRIM, REPEAT ⁴⁾ , SHUFFLE ⁴⁾

The option menu items are listed below. These settings are applied to the currently selected input source. The default settings are marked with “*”.

Adjusting tones (TREBLE, BASS)

Adjust the output level of high (treble) and low (bass) tones.

Adjustable range: -12 to +12 (default: 0)

Adjusting input level of each jack (VOLUME TRIM)

Adjust the input level for each jack to compensate for variations in volume between different input devices.

Adjustable range: -12 to +12 (default: 0)

Audio delay control (AUDIO DELAY)

TV images sometimes lag behind the sound. You can use this function to delay the sound output to synchronize it with the video image.

Adjustable range:

HDMI-4: AUTO*, 0 ms to 500 ms

TV, OPTICAL, AUX, ANALOG: 0 ms* to 500 ms

When “AUTO” is selected, output timing is automatically adjusted. This setting is only available when the TV connected via HDMI cable supports the audio delay automatic adjustment feature.

Assigning HDMI audio to a different input jack (AUDIO ASSIGN)

When HDMI-4 is the selected input source, sound can be input from the OPTICAL or AUX (digital coaxial) jack rather than the HDMI jack.

Selectable item: HDMI*, OPTICAL, AUX

Tip

While the AUX INPUT DIGITAL (coaxial) jack is the default AUX setting, sound is input as follows depending upon the setting specified for “TV INPUT” (see p. 63) in the setup menu.

“TV INPUT” set to “OPTICAL” (default)

When “AUX” is selected, sound is input from the AUX INPUT DIGITAL (coaxial) jack.

“TV INPUT” set to “COAXIAL”


When “AUX” is selected, sound is input from the INPUT DIGITAL TV (optical) jack.

3)

See “FM tuning (YSP-4300 only)” (see p. 44).

4)

- See “Connecting a USB device” (see p. 54).
- The REPEAT and SHUFFLE features in the option menu can be used when an iPod is connected to this unit via the USB cable supplied with the iPod (see p. 51).
- The REPEAT feature can be used when a USB device is connected to this unit (see p. 57).

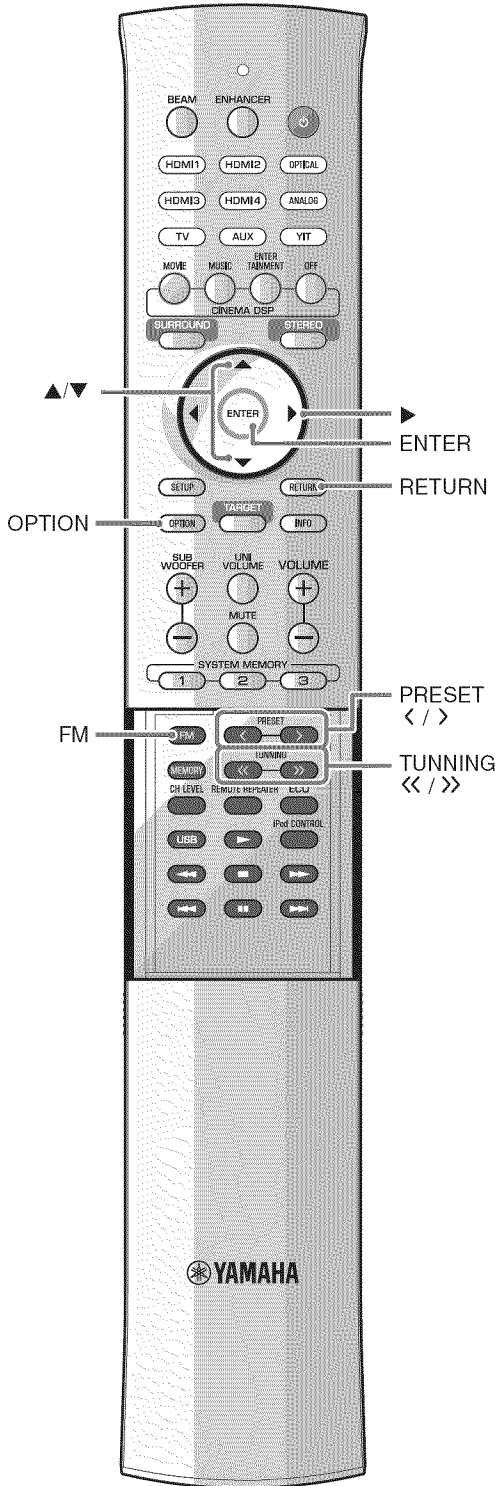

FM tuning (YSP-4300 only)

The FM tuner of this unit provides the following two modes for tuning.

Frequency tuning mode

You can tune into a desired FM station by searching its frequency.


Preset tuning mode

Up to 40 stations can be registered and assigned a preset number. Select a preset number to tune into the station registered with that preset.

Tip
Adjust the FM antenna connected to this unit for the best reception.

Tuning into the desired FM station (Frequency tuning)

1 Press the **FM** key.




2 Press the **TUNING <</>** key to specify the frequency.

When you press the key more than 1 second

The tuner automatically searches for active broadcasting stations. Once the search starts, release the key.

When you press and release the key

Each time a key is pressed, frequency increases or decreases by 0.2 MHz.



The TUNED indicator lights while station signal is received.

The STEREO indicator also lights when that signal contains stereo sound.


Receiving weak signal

If reception is poor, making listening difficult, it may be improved by switching from stereo to monaural sound.


1 Press the **OPTION** key.

The option menu (see p. 42) appears.

2 Press the **▲/▼** key to select “FM MODE” and press the **▶** key.¹⁾



3 Press the **▲/▼** key to select “MONO”.



4 Press the **OPTION** key to exit from the menu.

Registering FM stations and tuning in (Preset tuning)

You can register up to 40 FM stations automatically or manually.

Registering stations automatically



The tuner automatically detects FM stations with strong signals and registers the stations.

1 Press the **FM** key.

2 Press the **OPTION** key.

The option menu (see p. 42) appears.

3 Press the **▲/▼** key to select “AUTO PRESET” and then press the **▶** key.¹⁾²⁾

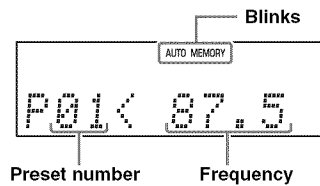

- Press the **ENTER** key to begin registering FM radio stations, or wait 5 seconds for automatic registration to begin.
- “Complete” is displayed when registration is complete.
- Press the **ENTER** key to search stations again.


4 Press the **OPTION** key to exit the option menu.

1)

The **ENTER** key performs the same function as the **▶** key.

2)

- You can select the preset number at which the preset starts by pressing the **▲/▼** or **PRESET </>** key after pressing the **▶** key in step 3.
- To cancel the registration, press the **RETURN** key.

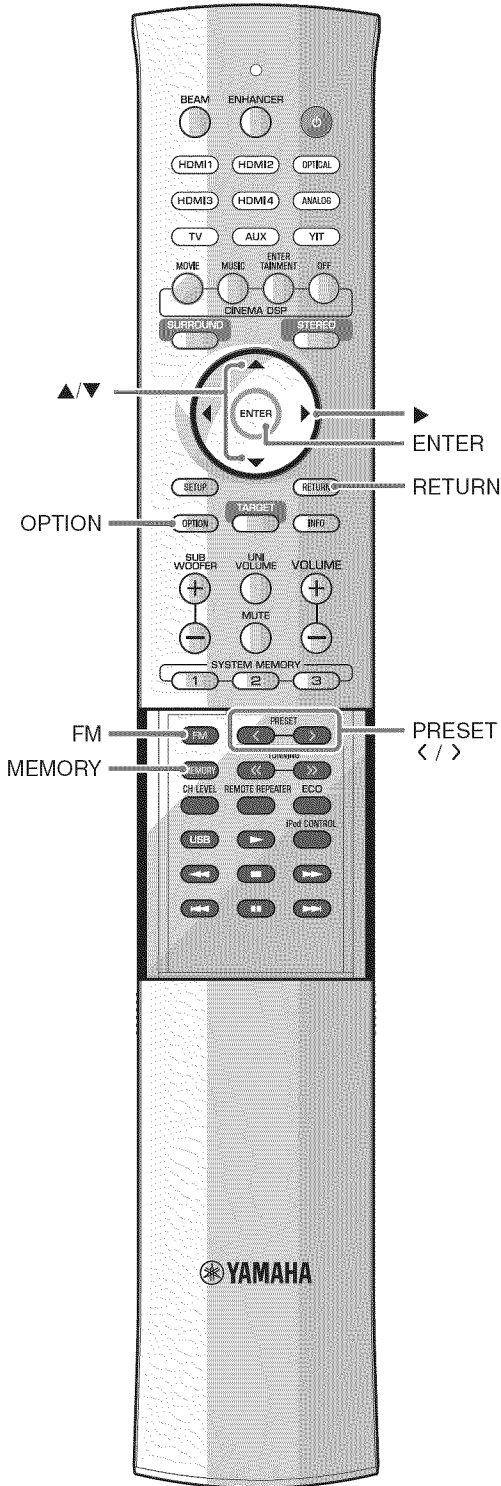


Registering stations manually

You can manually register FM stations.

1 Tune into the desired FM station (see p. 44).

2 Press the **MEMORY** key.


The preset number to which the selected station will be registered is displayed.

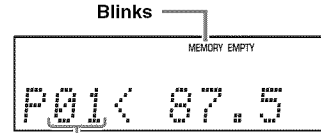

Preset number

Proceed to step 4 to register the selected station with preset number displayed.

3 Press the **PRESET </>** key to select the preset number to which the station will be registered.

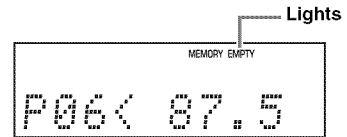

When you select a preset number to which no station is registered, EMPTY indicator blinks.

4 Press the **MEMORY** key.

When registration is complete, the front panel display returns to the original state.

Tips

- By holding down the **MEMORY** key in step 2 for more than 2 seconds, you can skip the following steps and automatically register the selected station to an empty preset number (next to the lastly-registered preset number).
- To cancel registration, press the **RETURN** key in step 3 or leave this unit without any operations for about 30 seconds.

Calling a preset station

You can call preset stations.

- 1 Press the **FM** key.
- 2 Press the **PRESET </>** key to select the desired preset number.

Tips

- Preset numbers to which no stations are registered are skipped.
- “No Presets” is displayed if no stations are registered.

Clearing preset stations

You can clear registration of the preset stations.

- 1 Press the **FM** key.
- 2 Press the **OPTION** key.

The option menu (p. 42) appears.

- 3 Press the **▲/▼** key to select “CLEAR PRESET” and then press the **►** key.¹⁾

A preset station is displayed.



Tip

To cancel the clearing operation, press the **RETURN** key.

- 4 Press the **PRESET </>** key²⁾ to select a preset station to be cleared, and then press the **ENTER** key.

- The preset station is cleared and the next preset number is displayed.
- To clear the multiple preset stations, repeat step 4.
- “No Presets” is displayed if no stations have been registered, or if all preset stations are cleared.


- 5 Press the **OPTION** key to exit the option menu.

1)

The **ENTER** key performs the same function as the **►** key.

2)

The **▲/▼** key performs the same function as the **PRESET </>** key.

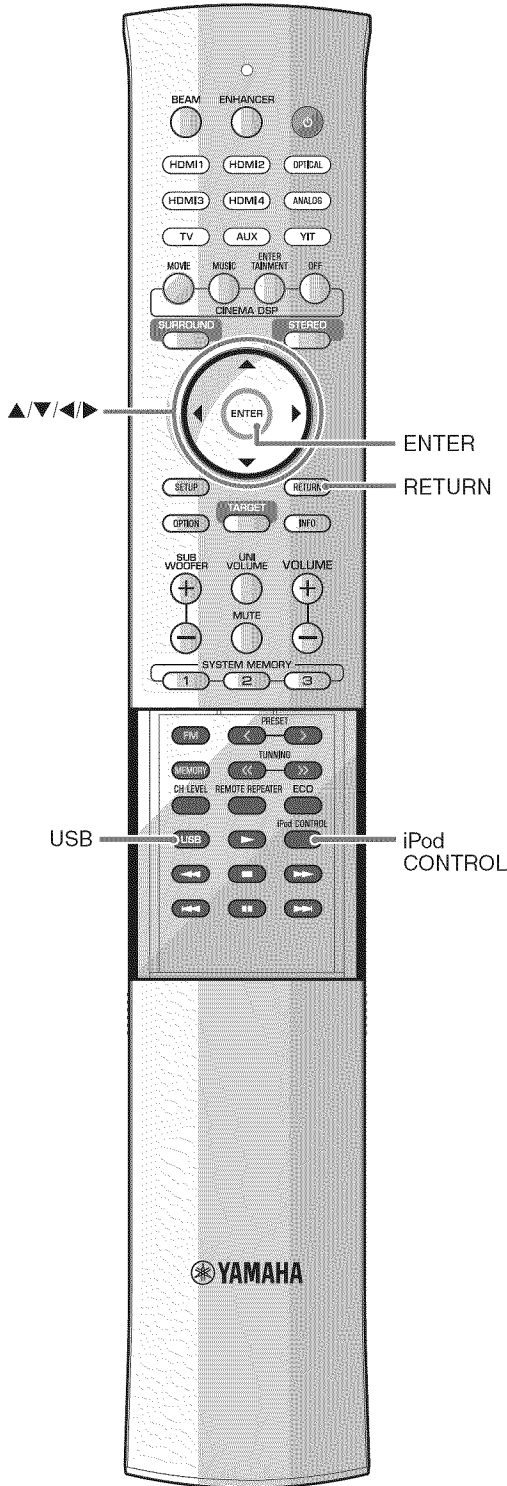

Playing music stored on an iPod or computer over a wireless connection

A wireless connection between this unit and the transmitter (YIT-W12TX) can be established to play music stored on an iPod or computer through this unit. For details of YIT-W12TX, refer to “Safety and Accessory Information” (separated booklet).

Playing music stored on an iPod or USB device over a USB connection (YSP-4300 only)

Connect an iPod or other USB device (p. 54) to this unit via the USB jack to play music stored on the iPod or USB device.


Connecting an iPod

Connect the iPod to this unit via the USB cable supplied with the iPod.


The following operations are supported when an iPod is connected to this unit via the USB cable supplied with the iPod.

- This unit’s remote control can be used to operate the iPod.
- A list of contents stored on the iPod and music playback information can be displayed on the TV screen.

- 1** Connect the USB cable supplied with the iPod to the iPod.

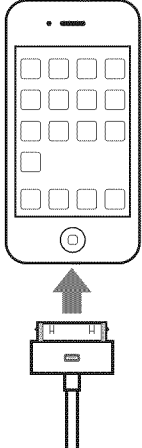

2 Connect the **USB** cable to the **USB** jack on the front of this unit.

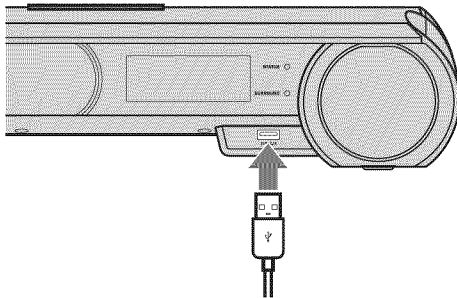

“Plugged” will be displayed.



3 Press the **USB** key to switch the input source to **USB**.

4 Select content stored on the iPod and start playback.¹⁾

- Press the **iPod CONTROL** key to operate the iPod using controls displayed on the TV screen.
- When controlling the iPod itself (see p. 52), turn off the TV screen by pressing the **iPod CONTROL** key.


Operating an iPod via the TV screen

When an iPod is connected to this unit via the USB cable supplied with the iPod, operation can be controlled via the TV screen.

- See “Displaying the menu screen on the TV” (see p. 21) for instructions on displaying the iPod operation screen on the TV.
- iPod operation cannot be controlled via the TV screen when an iPod is connected to this unit wirelessly via YIT-W12TX. Use iPod operations to control the iPod.

1 Press the **USB** key to switch the input source to **USB**.


A screen like that shown below is displayed when the input source is switched to USB. If this screen is not displayed, press the **iPod CONTROL** key.

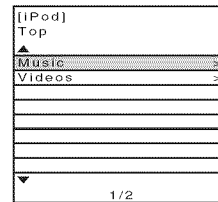

If “No device” is displayed on the TV screen²⁾, check all iPod and USB connections.

2 Press the **▲/▼/◀/▶** keys to select content, and press the **ENTER** key to apply the selection.

Once a song has been selected, playback begins and the playback screen is displayed.




Tips

- Press the **◀** key³⁾ to return to the previous menu.
- Use this unit’s remote control to pause playback or skip songs (see p. 52).


1) Play video content on the iPod screen.

2) “No Device” is displayed in the front panel display.

3) The **RETURN** key performs the same function as the **◀** key.

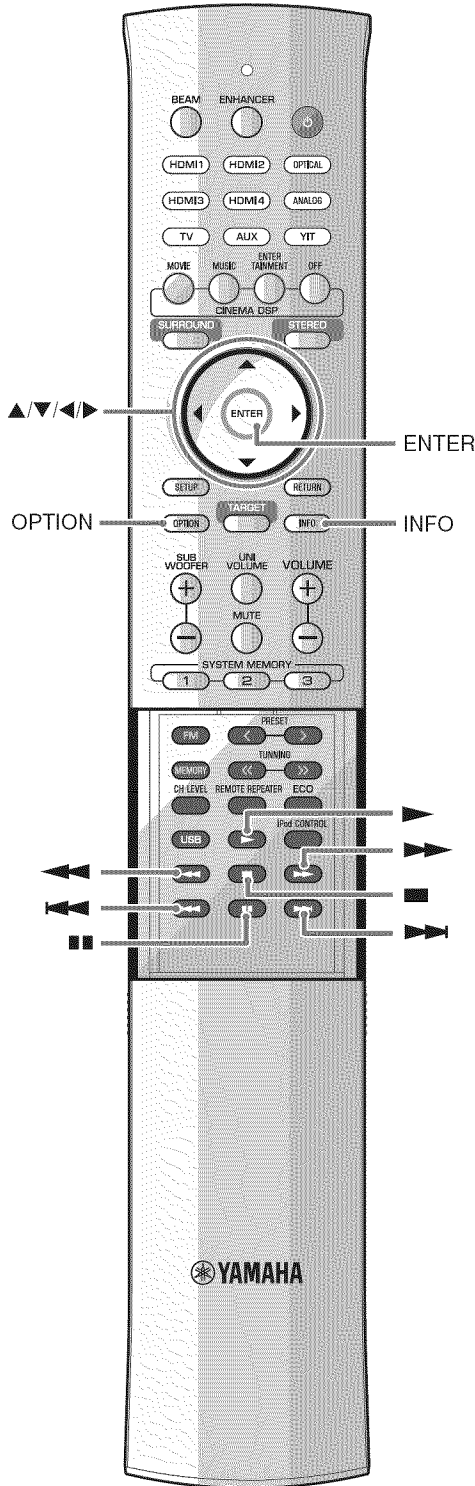

Browse screen

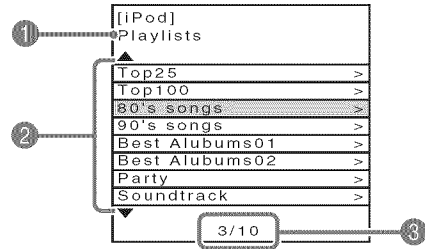

1 List name

2 Content list


Press the ▲/▼ key to select content. Press the ► key to display a list of songs. Select a song and press the ENTER key to begin playback.

3 Content number/totals

Press the ▲/▼/◀/▶ key to perform the following operations.

Previous page	Hold down the ▲ key to display the previous page.
Next page	Hold down the ▼ key to display the next page.
Playback screen	Select the song currently playing and press the ► key to display the playback screen.

Playback screen

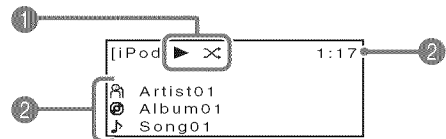

1 Playback icon

SHUFFLE and REPEAT settings (see p. 51), as well as playback status (playing/pause/fast-forward/rewind), are displayed.

2 Music information


The name of the artist, album and song titles, and playback time are displayed.

Displaying information on the current song

Information on the current song can be displayed in the front panel display.

Press the **INFO** key.

Information displayed changes as follows each time the **INFO** key is pressed.

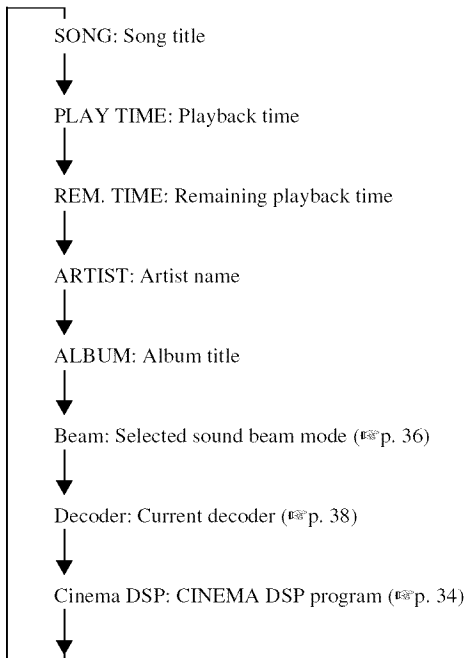

When no music is playing, information is displayed in the browse screen in the following order: current content name, Beam, Decoder, Cinema DSP, current content name.

Using the remote control

This unit's remote control can be used to operate the iPod.

Keys	Descriptions
	Play the selected song.
	Pause playback.
	Stop playback.
	Hold down to rewind the current song.
	Hold down to fast-forward the current song.
	Skip to the beginning of the current song (or the previous song).
	Skip to the next song.

Using the SHUFFLE and REPEAT features

Settings for the SHUFFLE and REPEAT features in the option menu can be specified. The option menu is displayed only in the front panel display.

1 Set the input source to **USB** and press the **OPTION** key.

2 Press the **▲/▼** key to select “**REPEAT**” or “**SHUFFLE**”.



3 Press the **▶** key.¹⁾



4 Press the **▲/▼** key to select a setting.




Option		Description
SHUFFLE	OFF	Disable the shuffle feature.
	SONGS	Play songs from all albums in random order. The shuffle icon is displayed in the playback screen (p. 50).
	ALBUMS	Play albums in random order. The shuffle icon is displayed in the playback screen (p. 50).
REPEAT	OFF	Disable the repeat feature.
	ONE (one song)	Repeat the current song. The repeat (one) icon is displayed in the playback screen (p. 50).
	ALL	Repeat all songs in an album. The repeat (all) icon is displayed in the playback screen (p. 50).

5 Press the **OPTION** key to exit the option menu.

1)

The **ENTER** key performs the same function as the **▶** key.

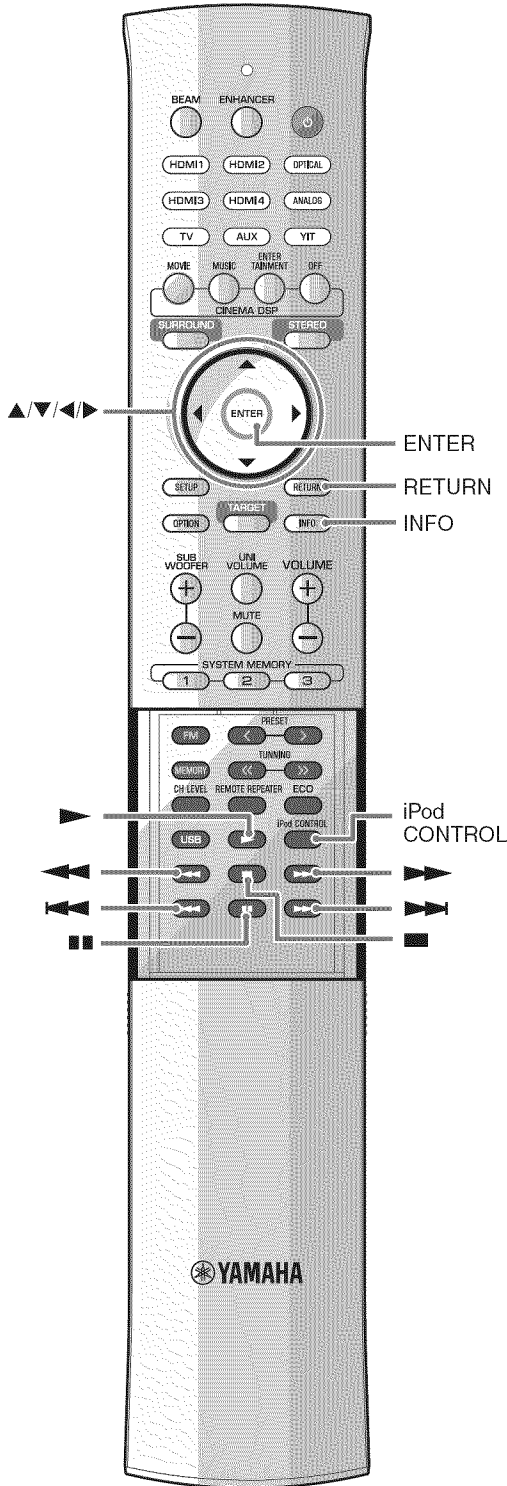

Using the iPod to control operation

Playback can be controlled directly from the iPod.

1 Press the iPod CONTROL key.

The TV screen will go blank, and operations can be controlled directly from the iPod. Press the **iPod CONTROL** key again to display the browse screen again.

2 Select content stored on the iPod and press or tap the iPod's play button.

See documentation provided with the iPod for instructions on operating the iPod.

Using the remote control

This unit's remote control can be used to operate the iPod.


Keys	Descriptions
	Play or pause the selected song.
	Stop playback.
	Hold down to rewind the current song.
	Hold down to fast-forward the current song.
	Skip to the beginning of the current song (or the previous song).
	Skip to the next song.

Switching information displayed in the front panel display

The input source and surround information is displayed.

Press the **INFO** key.

Display changes as follows each time the **INFO** key is pressed.

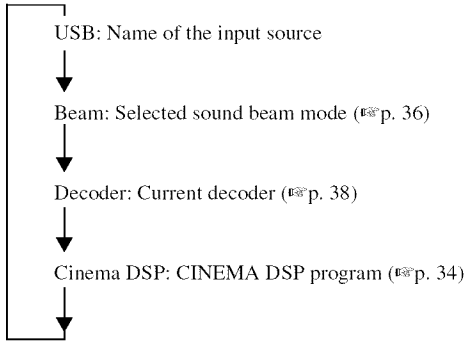


Charging the iPod

iPods can be charged as follows.¹⁾

Connect the iPod to this unit via the USB cable supplied with the iPod.

Connect the iPod to this unit while this unit is turned on.²⁾
Charging continues when this unit enters standby mode.

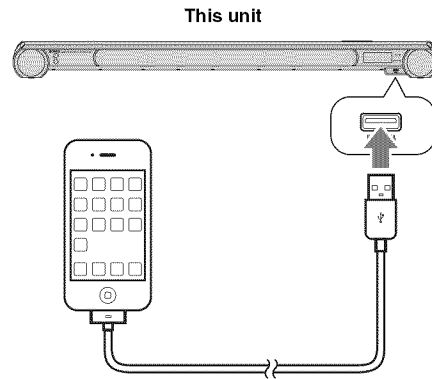


1)

The iPod can also be charged when YIT-W12TX connected to the iPod is connected to a computer via the USB cable for YIT-W12TX. For details of YIT-W12TX, refer to "Safety and Accessory Information" (separate booklet).

2)

The iPod cannot be charged if it is connected to this unit while this unit is in standby mode.

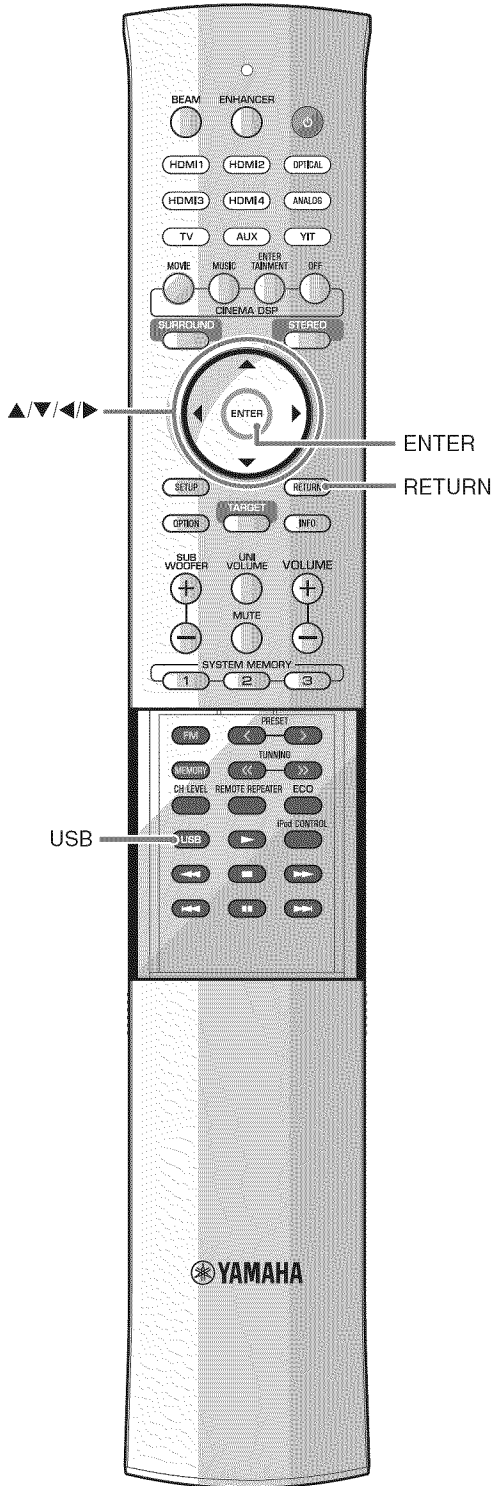

Connecting a USB device

Audio files (WAV, MP3, WMA, MPEG-4 AAC) stored on the device can be played by connecting the device to this unit.


This unit supports sampling frequencies up to 48 kHz with playback of content stored on a USB device.

This unit supports USB mass-storage class devices formatted using the FAT16 or FAT32 file system (except USB hard disks). See documentation supplied with the USB device for more information.

The following operations are possible with playback from a USB device

- Use this unit's remote control to control playback of music through this unit.
- Display a list of content stored on the USB device, or content playback information, on the TV screen.

Connect a USB device to the USB jack on the front of this unit.

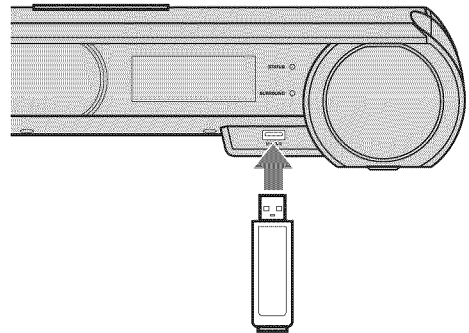

"Plugged" will be displayed.

Plugged

Notes

- Be sure to connect the USB device in the proper orientation.
- It may take some time for this unit to load content from a USB device if the device contains a large volume of data. "Loading..." is displayed in the front panel display and on the TV screen while this device loads data.


Operating a USB device via the TV screen

Use controls displayed on the TV screen to select and play content stored on a USB device.

See “Displaying the menu screen on the TV” (p. 21) for instructions on displaying the USB operation screen on the TV.

1 Press the **USB** key to switch the input source to USB.


A screen like that shown below is displayed when the input source is switched to USB.

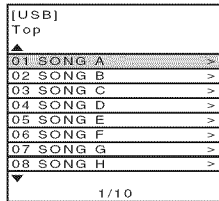

If “No device” is displayed on the TV screen, check USB connections.

2 Use the **▲/▼/◀▶** keys to select a folder (directory) or song and press the **ENTER** key to apply the selection.

Once a song has been selected, playback begins and the playback screen is displayed.




Tips

- Press the **◀** key¹⁾ to return to the previous menu.
- Use this unit's remote control to pause playback or skip songs (p. 57).
- Audio files not supported by this unit will not be displayed.

1)

The **RETURN** key performs the same function as the **◀** key.

Browse screen

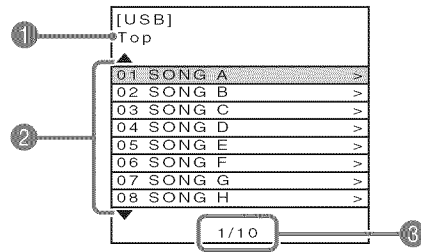

1 List name

2 Song list


A list of songs and folders stored on the USB device is displayed (up to 15 alphanumeric characters for each name). Press the **▲/▼** key to select a song, and press the **ENTER** key to start playback.

3 Content number/totals

Press the **▲/▼/◀/▶** key to perform the following operations.

Previous page	Hold down the ▲ key to display the previous page.
Next page	Hold down the ▼ key to display the next page.
Playback screen	Select the content currently playing and press the ▶ key to display the playback screen.

Playback screen

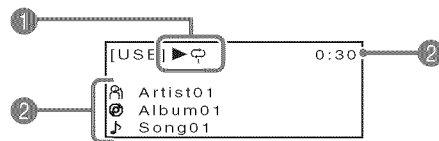


1 Playback icon

REPEAT settings (p. 57), as well as playback status (playing/pause/fast-forward/rewind), are displayed.

2 Music information

The name of the artist, album and song titles, and playback time are displayed.

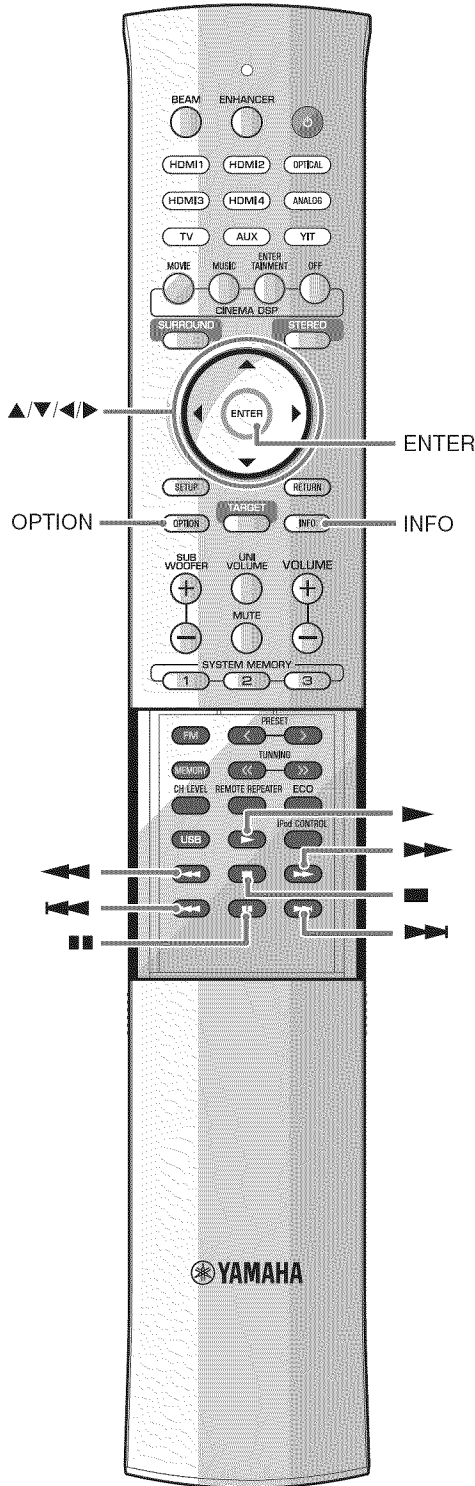


Displaying information on the current song

Information on the current song can be displayed in the front panel display.¹⁾

Press the **INFO** key.

Information displayed changes as follows each time the **INFO** key is pressed.

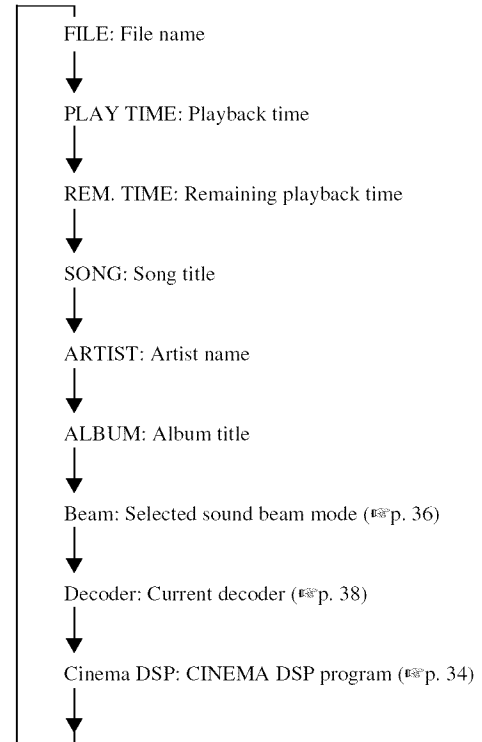








When no music is playing, information is displayed in the browse screen in the following order: current content name, Beam, Decoder, Cinema DSP, current content name.

¹⁾ -

Only alphanumeric characters are displayed. “_” is displayed for unsupported characters.

Using the remote control

This unit's remote control can be used to control playback and navigate songs stored on the USB device.

Keys	Descriptions
	Play the selected song.
	Pause playback.
	Stop playback.
	Hold down to rewind the current song.
	Hold down to fast-forward the current song.
	Skip to the beginning of the current song (or the previous song).
	Skip to the next song.

Using the REPEAT feature

Use the REPEAT feature in the option menu to specify whether or not music stored on the USB device repeats with playback. The option menu is displayed only in the front panel display.

1 Set the input source to USB and press the **OPTION** key.

2 Press the **▲/▼** key to select "REPEAT".



3 Press the **▶** key.²⁾



4 Press the **▲/▼** key to select a setting.




	Option	Description
REPEAT	OFF	Disable the repeat feature.
	ONE (one song)	Repeat the current song. The repeat (one) icon is displayed in the playback screen (see p. 55).
	FOLDER	Repeat all songs in the current folder. The repeat icon is displayed in the playback screen (see p. 55).
	ALL	Repeat all songs stored on the USB device. The repeat (all) icon is displayed in the playback screen (see p. 55).
	RANDOM	Plays songs in random order. The random and repeat icon is displayed in the playback screen (see p. 55).

5 Press the **OPTION** key to exit the option menu.

2) 

The **ENTER** key performs the same function as the **▶** key.

Setup menu

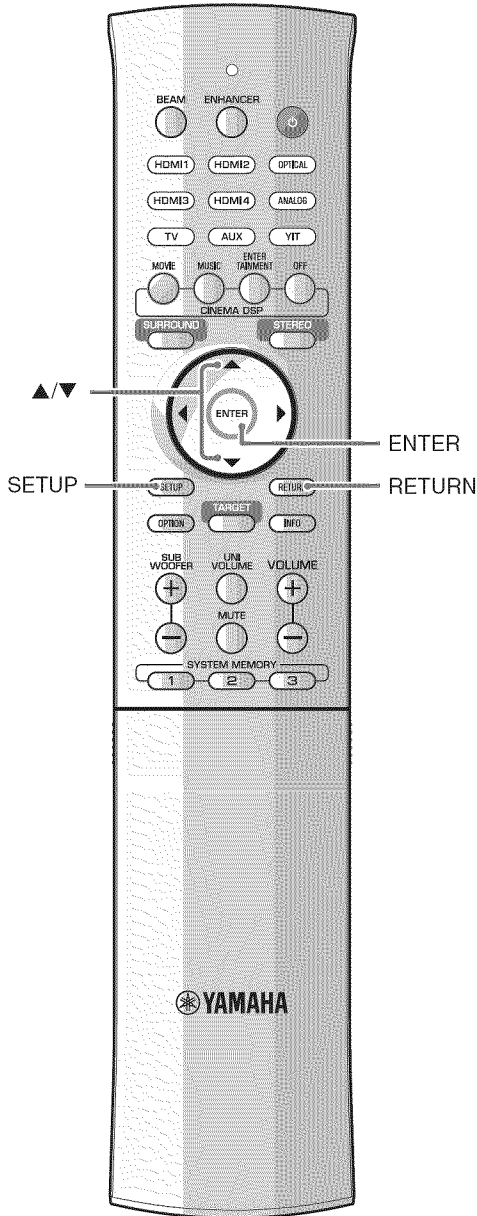


A variety of settings for this unit can be specified and adjusted from the setup menu. Among the options available are the sound beam output method for optimal surround sound effects, speaker volume control, and HDMI settings.

- The setup menu is displayed on, and operated from, the TV screen (it cannot be displayed in the front panel display). See “Displaying the menu screen on the TV” (p. 21) for instructions on displaying the setup menu on the TV.


Setting the setup menu

1 Press the **SETUP** key.¹⁾

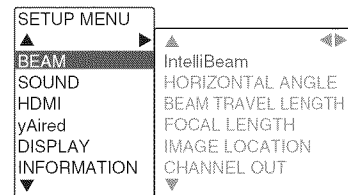

2 Press the **▲/▼** key to select a menu and then press the **▶** key.²⁾

Repeat these steps to display the desired menu.

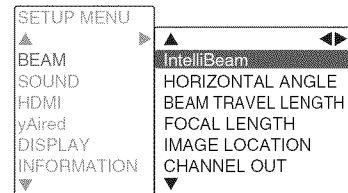

3 Press the **▲/▼** key to change the setting value of each menu.³⁾

4 Press the **SETUP** key again to exit the setup menu.

Press the **◀** key⁴⁾ to return to the previous menu.

1) Note

Hold down the **SETUP** key to display “OSD LANGUAGE” directly on the screen (p. 22, 65).

2)

The **ENTER** key performs the same function as the **▶** key.

3)

The default settings are marked with “*”.

4)

The **RETURN** key performs the same function as the **◀** key.

Setup menu list

Category	Menu	Sub menu	Features	Page
BEAM	IntelliBeam	BEAM+SOUND OPTIMIZE	Optimizes the beam and sound settings automatically.	Ⓔp. 26
		BEAM OPTIMIZE ONLY	Optimizes the beam settings automatically.	Ⓔp. 26
		SOUND OPTIMIZE ONLY	Optimizes the sound settings automatically.	Ⓔp. 26
	HORIZONTAL ANGLE	Front L, Front R, Center, Surround L, Surround R	Adjust horizontal sound beam angle.	Ⓔp. 60
	BEAM TRAVEL LENGTH	Front L, Front R, Center, Surround L, Surround R, Subwoofer	Adjust sound beam length.	Ⓔp. 60
	FOCAL LENGTH	Front L, Front R, Center, Surround L, Surround R	Adjust sound beam focal length.	Ⓔp. 60
	IMAGE LOCATION	ADJUSTMENT, LEFT, RIGHT	Adjusts the sound position of the front right and left channels.	Ⓔp. 61
	CHANNEL OUT	_____	Specify sound beam channel output setting.	Ⓔp. 61
SOUND	SPEAKER LEVEL	Front L, Front R, Center, Surround L, Surround R, Subwoofer	Adjusts the volume of each channel.	Ⓔp. 62
	Adaptive DRC	_____	Choose whether or not dynamic range is adjusted based on this unit's volume level.	Ⓔp. 62
	DYNAMIC RANGE	_____	Specify dynamic range.	Ⓔp. 63
	MATRIX DECODER	_____	Specify a surround decoder.	Ⓔp. 38
	Dolby PLIIx PARAMETER	Center Width, Panorama, Dimension	Specify Dolby Pro Logic IIx Music parameters.	Ⓔp. 63
HDMI	HDMI CONTROL	_____	Turn HDMI control on or off.	Ⓔp. 63
	HDMI AUDIO OUT	_____	Choose whether HDMI audio input is played via this unit or the TV.	Ⓔp. 63
	TV INPUT	_____	Switch TV input jack between optical digital and digital coaxial (AUX).	Ⓔp. 63
yAired	iPod INTERLOCK	_____	Enable or disable the link between this unit and an iPod to determine whether or not iPod operations can be used to turn this unit on, or apply standby mode, with wireless connection of this unit and the YIT-W12TX.	Ⓔp. 64
	GROUP ID	_____	Assign a group ID to this unit.	Ⓔp. 64
DISPLAY	DIMMER	_____	Adjust front panel display brightness.	Ⓔp. 65
	OSD LANGUAGE	_____	Changes the language used for menus displayed on the TV screen.	Ⓔp. 65
	DISTANCE UNIT	_____	Specify units used for length and distance in menus.	Ⓔp. 65
INFORMATION	AUDIO	_____	Display audio input signal information.	Ⓔp. 65
	VIDEO	_____	Display video input signal information.	Ⓔp. 65
	SYSTEM	_____	Display this unit's firmware version.	Ⓔp. 65

BEAM settings


When "AUTO SETUP" in the "IntelliBeam" menu (p. 24) is used, recommended beam settings are automatically applied by this unit. "HORIZONTAL ANGLE", "BEAM TRAVEL LENGTH", "FOCAL LENGTH" (except "Center"), and "IMAGE LOCATION" settings, however, can later be fine-tuned.

Surround sound channel output can also be modified from the "BEAM" menu.

HORIZONTAL ANGLE


Adjust the horizontal angle of sound beams for each channel using test tones.

Adjust toward L (left) to move the direction of the output to the left and adjust toward R (right) to move it to the right.

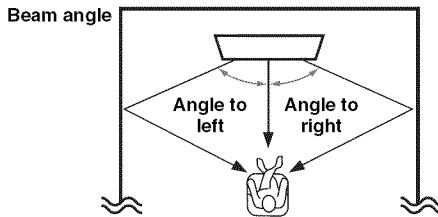

Sub menu¹⁾: Front L, Front R, Center, Surround L, Surround R

Control range: L90° to R90°

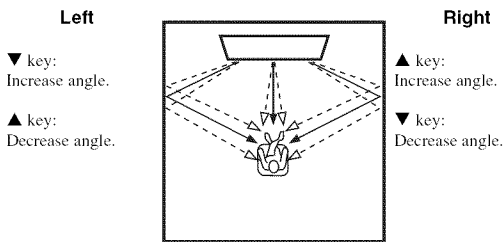

BEAM TRAVEL LENGTH²⁾


Specify the distance that sound beams travel for each channel. The distance starts at this unit, ends at the listening position, and includes refraction off a wall. The audio delay is adjusted and sound from each channel arrives at the listening position simultaneously.

Sub menu¹⁾: Front L, Front R, Center, Surround L, Surround R

Control range: 0.3 m to 24.0 m (1.0 ft to 80.0 ft)

Sub menu: Subwoofer

Control range: 0.3 m to 15.0 m (default: 2.5 m) (1.0 ft to 50.0 ft (default: 8.5 ft))

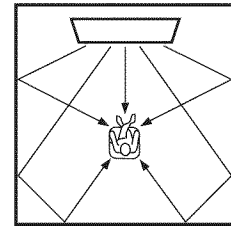


The length of each arrow indicates the beam travel length.

FOCAL LENGTH³⁾

Expand the optimal listening area (sweet spot).

The illustration below shows how output from all channels is once concentrated in a focal point and then expanded from that point. Apply negative (-) values to broaden the sweet spot, or positive (+) values to narrow the sweet spot.

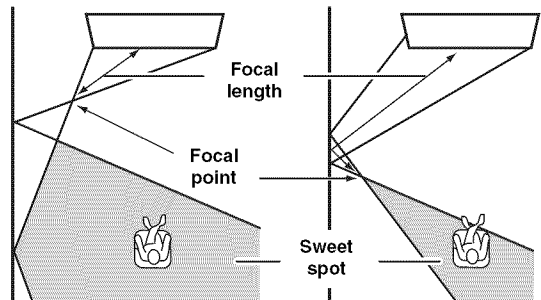

We recommend using the default setting (-0.5 m or -1.5 ft) for "Center".

Sub menu¹⁾: Front L, Front R, Surround L, Surround R

Control range: -1.0 m to +13.0 m (-3.5 ft to +43.5 ft)

Sub menu: Center

Control range: -1.0 m to +13.0 m (default: -0.5 m) (-3.5 ft to +43.5 ft (default: -1.5 ft))

1)

Channels that cannot be configured are displayed in grey as settings are specified as indicated in "Changing the audio output method for surround playback" (p. 36).

2) Note

Configure this setting only when you have adjusted "HORIZONTAL ANGLE".

3)

"AUTO SETUP" (p. 24) automatically enables a range for optimal listening (sweet spot) that is broader than the width of this unit.

Example

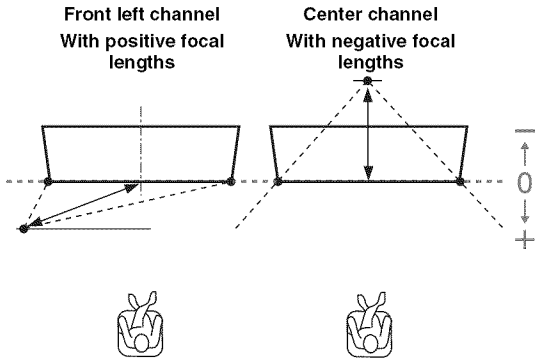


IMAGE LOCATION

If sound from the left and right channels is unnatural, first adjust the volume of each channel (p. 33, 62).

If this does not resolve the problem, adjust left- and right-channel image location.

Use to adjust the direction from which the front left and right channel sound is heard so that each sound can be heard closer to the center channel.

Use this feature to redirect audio signals if the sound coming from the front left and right channels seems unnatural.

You can adjust this parameter only when "5Beam/Plus2", "5Beam" or "3Beam" is selected in "Changing the audio output method for surround playback" (p. 36).

Sub menu: ADJUSTMENT

Select "ON" to configure the sound direction.


Selectable item: OFF*, ON

1 Adjust the image location for the front left channel (LEFT).


The higher the percentage, the louder the output from the center channel.

Control range: 0%* to 95%

Left-channel sound is unnatural

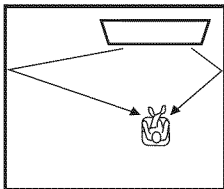

With the front left channel adjusted

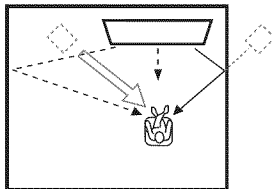


2 Adjust the image location for the front right channel (RIGHT).


The higher the percentage, the louder the output from the center channel.

Control range: 0%* to 95%

Right-channel sound is unnatural

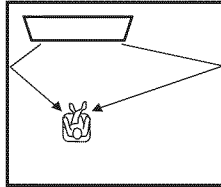

With the front right channel adjusted

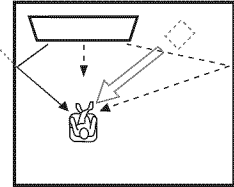

CHANNEL OUT


Sub menu: 5.1ch, 7.1ch, AUTO*

Specify the sound beam output method (5.1ch, 7.1ch, AUTO).

When "AUTO" is selected, sound beams are output from the appropriate number of channels based on input signal as follows.

- 2- or 5.1-channel input: 5.1-channel output
- 6.1- or 7.1-channel input: 7.1-channel output

The available sound beam output methods vary depending upon the current "CHANNEL OUT" setting (p. 36).

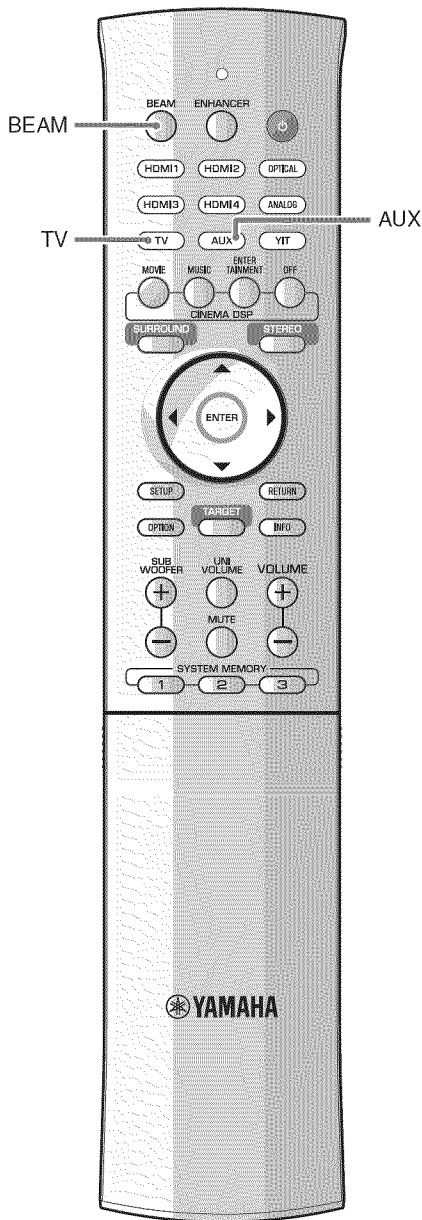

SOUND settings

SPEAKER LEVEL


Adjust the volume of each channel to balance output levels. Use test sounds output from each channel to adjust volume for optimal balance.¹⁾

Sub menu: Front L, Front R, Center, Surround L, Surround R, Subwoofer
Adjustable range: -20 to +20

Adaptive DRC²⁾

Adjust this unit's volume and dynamic range³⁾ for optimal balance. When "ON" is selected, dynamic range is adjusted as follows for optimal listening at low volumes, such as might be used at night.

When the volume level is low:
 Narrow the dynamic range. Loud sound is played back softer, and soft sound which is hard to be listened to is played back louder.
 When the volume level is high:
 Widen the dynamic range. For both soft and loud sounds, source sound is played back without adjusting volume.

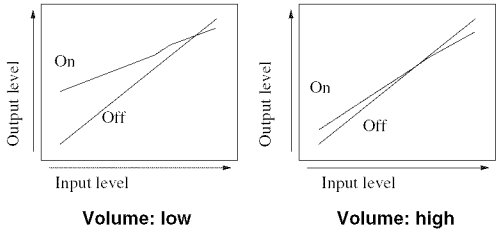

Selectable item: ON*, OFF
 "ON": Adjust the dynamic range automatically.
 "OFF": The dynamic range is not adjusted automatically.

1) When the sound beam output method is set to "MY SUR." (My Surround) with the **BEAM** key, the following items can be configured. Sub menu: Center, Surround L/R, Subwoofer

2) When set to "ON", "DYNAMIC RANGE" is automatically set to "Max".
 • This setting is not available when the UniVolume function is enabled.

DYNAMIC RANGE³⁾

Adjust this unit's dynamic range.

Selectable items: Max*, Standard, Min/Auto

Max: Outputs sound without adjusting the dynamic range of the input signals.⁴⁾

Standard: The dynamic range recommended for regular home use.

Min/Auto:

Min: Sets dynamic range at a level that supports comfortable listening at low volumes.

Auto: Sets dynamic range in accordance with information received from input signal.

Dolby PLIIx PARAMETER

Adjust Dolby Pro Logic IIX Music surround decoder parameters.

Sub menu: Center Width

The greater the value, the broader the sound to the left and right. Smaller values restrict sound to the center.

Adjustable range: 0 to 7 (default: 3)

Sub menu: Panorama

When this is set to "ON", sounds from the front left and right channels are routed to the left and right for a surround, panoramic effect.

Selectable item: OFF*, ON

Sub menu: Dimension

This setting adjusts the difference in levels between the front and surround channels. The greater the value, the higher the volume from the front channel. The smaller the value, the higher the volume from the surround channels.

Adjustable range: -3 to +3 (default: 0)

HDMI setup

Use to configure the settings related to HDMI signals and the HDMI control function.

HDMI CONTROL

Turn HDMI control (p. 30) on or off.

Selectable item: OFF*, ON

"OFF": Disable the control function. The standby power consumption of this unit decreases.

"ON": Enable the control function.

HDMI AUDIO OUT

Use to select a component to play back HDMI audio signals. This setting is effective when "HDMI CONTROL" is set to "OFF".⁵⁾

Selectable item: AMP*, TV

"AMP": Play back the input sound signal.

"TV": Plays audio content from the TV connected to the HDMI OUT (ARC) jack.

TV INPUT

If your TV is not ARC compatible (or if the ARC feature has been disabled), TV audio is input via the INPUT DIGITAL TV (OPTICAL) jack (default). This unit's input source can be changed to the AUX INPUT DIGITAL (COAXIAL) jack.⁶⁾

Selectable item: OPTICAL*, COAXIAL

3)

Dynamic range describes the difference between minimum and maximum volume.

4)


"Adaptive DRC" is automatically set to "OFF" when the settings other than "Max" is selected.

5)

HDMI video signals input to one of the HDMI IN jacks of this unit are always output from the HDMI OUT (ARC) jack of this unit.

6)

If this unit's input source is switched to "COAXIAL", audio is input from the device (TV) connected to the AUX INPUT DIGITAL jack on this unit when the **TV** key is pressed. Audio is input from the device connected to the INPUT DIGITAL TV jack on this unit when the **AUX** key is pressed.

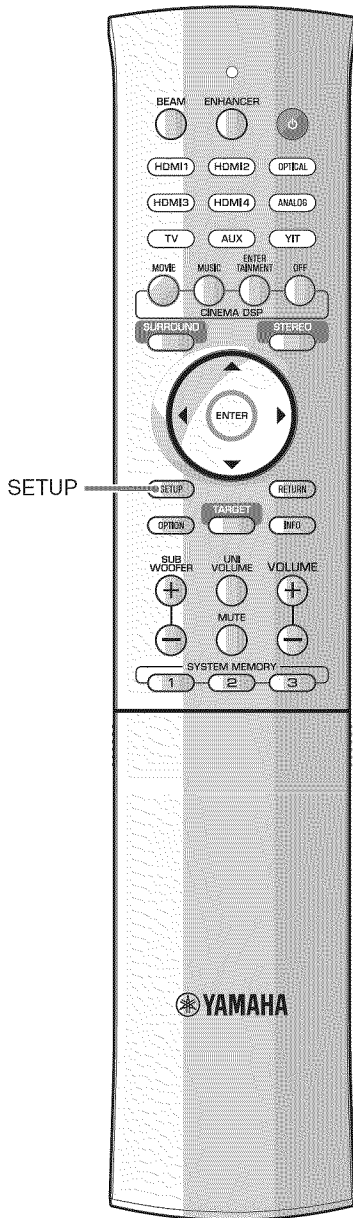

yAired settings

Configure the wireless function utilizing Yamaha's proprietary yAired technology.

iPod INTERLOCK

When this function is set to "ON", this unit turns on when content stored on an iPod connected to the unit via YIT-W12TX begins playing. See "Playing back iPod music" in "Safety and Accessory Information" (separate booklet) for more information.

Selectable item: OFF*, ON

GROUP ID

Assign the center unit a different group ID.

Selectable item: [A1]* to [A2], [B1] to [B3], [C1] to [C3]

DISPLAY settings

DIMMER

Adjust the brightness of the front panel display. The smaller the value, the dimmer the display.

When the Eco function is enabled, the specified brightness is applied for only a few seconds.

Selectable item: -4 to -1, 0* (brightest)

OSD LANGUAGE ¹⁾

Use to select the language used for menus displayed on the TV screen.

Selectable item: 日本語 (Japanese), ENGLISH* (English), DEUTSCH (German), FRANÇAIS (French), ESPAÑOL (Spanish), ITALIANO (Italian), NEDERLANDS (Dutch), РУССКИЙ (Russian), SVENSKA (Swedish)

“日本語”: Menus are displayed in Japanese.

“ENGLISH”: Menus are displayed in English.

“DEUTSCH”: Menus are displayed in German.

“FRANÇAIS”: Menus are displayed in French.

“ESPAÑOL”: Menus are displayed in Spanish.

“ITALIANO”: Menus are displayed in Italian.

“NEDERLANDS”: Menus are displayed in Dutch.

“РУССКИЙ”: Menus are displayed in Russian.

“SVENSKA”: Menus are displayed in Swedish.

DISTANCE UNIT

Use to change the display unit of measurement.

Selectable item: METERS, FEET*

If units used for displaying measurements are changed from “METERS” to “FEET” or vice versa, the change will not be reflected in current settings. Configure settings again to reflect the change in units.

INFORMATION settings

Display information for the audio and video signal input to this unit.

AUDIO

The following information on the current audio input signal is displayed.

Format	Digital audio format
Number of channels	The number of channels contained within the input signal—front/surround/low field effects (LFE). Example: “3/2/0.1” means signal contains 3 front channels, 2 surround channels, and LFE. If the signal contains channels other than front, surround, and LFE, the total number of channels may be displayed. Example: “5.1ch”.
Sampling frequency	The sampling frequency of the digital input signal
Bit rate ²⁾	The per-second bit rate of the input signal

VIDEO

The following information on the current video input signal is displayed.

Type	HDMI or DVI
Resolution	Video signal resolution

SYSTEM

Display the version of firmware currently installed on this unit.


1)

- Hold down the **SETUP** key to display “OSD LANGUAGE” directly on the TV screen.
- The settings may be changed automatically when using the TV which supports the HDMI control function.
- Display language can only be selected for menus displayed on the TV screen. Only alphanumeric characters are displayed in the front panel display.



2)


Audio bit rate may not be displayed for some input signals.

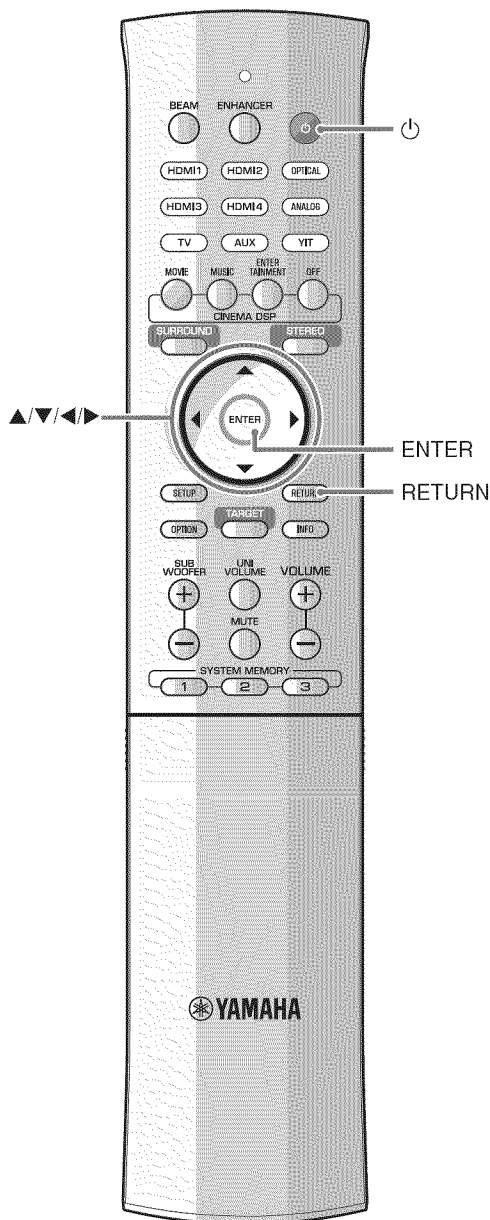Advanced setup





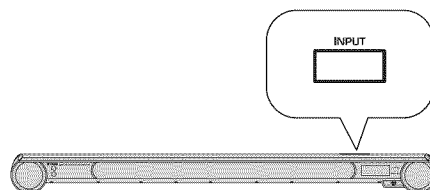


The advanced setup enables more precise configuring of this unit's function. For example, maximum volume can be specified and the INPUT key on the top panel can be disabled. No adjustment is necessary for normal operation.

- 1** Press the  key to turn this unit to the standby mode.
- 2** While holding down the **INPUT** key on the top panel, press the  key on the remote control to turn on the power.



"ADVANCED" appears in the front panel display. The advanced setup menu is not displayed on the TV screen.


- 3** Release the **INPUT** key on the top panel.
- 4** Press the  key to display the desired menu in the front panel display and then press the  key.¹⁾²⁾
- 5** Press the  key to change setting.³⁾
- 6** Press the  key to set this unit to the standby mode.

The new setting is reflected when you turn on the unit by pressing the  key.

1) 

The **ENTER** key performs the same function as the  key.

2) 

To return to the previous menu, press the  or **RETURN** key.

3) 

The default settings are marked with "**".

Menu	Description	Selectable item/Adjustable range
TURN ON VOLUME	Sets the volume level at power-on.	OFF* (Not set), 1 to 70
MAX VOLUME	Sets the maximum volume level.	1 to 99, MAX* (Maximum)
INPUT LOCK	Enables/disables the INPUT key on the front panel.	ON (Disabled), OFF* (Enabled)
PANEL LOCK	Enables/disables the keys on the front panel.	ON (Disabled), OFF* (Enabled)
R.INPUT POWER	Enables/disables power-on by remote control input selector keys when the unit is in the standby mode.	ON (Enables power-on), OFF* (Disables power-on)
AC ON STANDBY	Sets whether or not this unit returns to its previous state when AC power is restored after a temporary power loss.	ON* (Enters standby mode), OFF (Restores the state before power was lost)
MEMORY PROTECT	Protect system memory 1/2/3 (*p. 28).	ON (Protect is performed), OFF* (Protect is not performed)
YRB FL ⁴⁾	Use the YRB-100 reflection board for the front left channel.	YES (The reflection board is used), NO* (The reflection board is not used)
YRB FR ⁴⁾	Use the YRB-100 reflection board for the front right channel.	YES (The reflection board is used), NO* (The reflection board is not used)
YRB SL ⁴⁾	Use the YRB-100 reflection board for the surround left channel.	YES (The reflection board is used), NO* (The reflection board is not used)
YRB SR ⁴⁾	Use the YRB-100 reflection board for the surround right channel.	YES (The reflection board is used), NO* (The reflection board is not used)
FW UPDATE	Confirm firmware version/update firmware.	02.00.04* (The firmware version is displayed) ⁵⁾ , START OK? (Firmware is updated)
INITIALIZE ⁶⁾	Resets all settings to their default values.	OK (All settings are restored to their default values), CANCEL* (Settings are not restored to their default values)

4) 

When a menu for the YRB settings is selected, on-screen instructions for installing the reflection board is displayed. See documentation provided with the YRB-100 for instructions on installing the YRB-100.

5) 

“02.00.04” is an example of firmware version display in the advanced setup menu.

6) 

When the unit freezes, the problem may solve by restoring to their default values.

Troubleshooting

Refer to the chart below when this unit does not function properly. If the problem you are experiencing is not listed below or if the instruction below does not help, set this unit to the standby mode, disconnect the AC power supply cable, and contact the nearest authorized Yamaha dealer or service center.

General

Problem	Cause	Remedy	See page
This unit does not operate properly.	The internal microcomputer has been frozen by an external electric shock (such as lightning or excessive static electricity) or by a power supply with low voltage.	Disconnect the AC power supply cable from the outlet and plug it again in after 30 seconds.	-
	If both the TX and RX indicators are blinking, a problem has occurred with this unit's wireless function.	Unplug the center unit and subwoofer power cables and contact your nearest authorized Yamaha dealer or service center.	-
This unit fails to turn on when \odot key is pressed, or enters the standby mode soon after the power has been turned on.	The AC power supply cable is not firmly connected to the AC wall outlet.	Connect the AC power supply cable firmly to the AC wall outlet.	18
	The internal microcomputer has been frozen by an external electric shock (such as lightning or excessive static electricity) or by a power supply with low voltage.	Disconnect the AC power supply cable from the outlet and plug it again in after 30 seconds.	-
This unit suddenly enters the standby mode.	The internal temperature becomes too high and the overheat protection circuitry has been activated.	Wait for about 1 hour for this unit to cool down, turn it back on after confirming an adequate amount of ventilation space and not to cover this unit with a cloth.	11
	The Eco function has been activated.	Turn on the power and play back the source again.	41
	Some time has passed since the wireless connection was terminated with "iPod INTERLOCK" set to "ON" while YIT-W12TX is in use.	Resume wireless connection or detect audio of iPod and turn on the unit.	-
No sound.	Incorrect input or output cable connections.	Connect the cable properly.	18, 19
	No appropriate input source has been selected.	Select an appropriate input source with the input selector keys.	32
	The volume is turned down.	Turn up the volume.	32
	The sound is muted.	Press the MUTE or VOLUME (+/-) key to resume audio output and adjust the volume level.	32
	There is input signal cannot be played back by this unit.	Play a source whose signals can be reproduced by this unit. Change the system settings of the source component.	76
	"HDMI AUDIO OUT" is set to "TV".	Set to "AMP".	63
	"HDMI CONTROL" is set to "OFF".	When connecting ARC (Audio Return Channel) supported TV and this unit using an HDMI cable only, set "HDMI CONTROL" to "ON".	63
		To use this unit with "HDMI CONTROL" set to "OFF", use an optical cable to connect the TV's audio output jack to this unit's INPUT DIGITAL TV (optical) jack.	19
	Sound from an HDMI control-enabled TV is set for output from the TV's built-in speakers.	Use the TV's HDMI settings to set audio output to any option other than the TV's built-in speakers.	-
The sound of effect channel for cable broadcasting may become noise.	The source has a surround effect.	Do not put surround effect by this unit.	-
No sound or too small sound from a specific channel.	The output level of the channel is muted.	Raise the output level of the channel.	33, 62
	The beam setting is inappropriate.	Adjust the beam setting.	36
	You play back the source in stereo playback mode.	Switch to surround playback mode.	34
	Some audio output methods do not output sound beams for certain channels.	Switch the sound beam output method.	36

Problem	Cause	Remedy	See page
Surround sound effects are insubstantial.	When connecting this unit with playback component and TV digitally, the output setting of the playback component and TV is not valid.	Refer to the manual supplied with your component and check the setting.	-
	The playback component is set for constant output from 2 channels (PCM, etc.).	Change the playback component's audio output setting.	-
	The listening room is not a regular shape, or the unit or listening position is not at the center of the right and left wall of the listening room.	Relocate the unit or listening position.	14
	There is no wall in the path of the sound beam.	Try placing a flat object, such as a board, in the path of the sound beam.	-
	When My Surround is selected, listening position is not in front of the unit.	Listen in front of this unit.	37
No sound from the subwoofer.	The subwoofer is not connected wirelessly.	Check if the LINK indicator on the back of the subwoofer lights. When the indicator does not light, check the subwoofer, center unit, and YIT-W12TX are assigned the same group ID.	20 21
	The volume of the subwoofer is low.	Increase the volume of the subwoofer with the SUBWOOFER + key.	32
	The volume of low (bass) tones from the subwoofer is low.	Content from an input source with a limited support for low tones is playing.	Play content from an input source with broader support for low tones to see if volume is still low.
		Move or reposition the subwoofer.	11
The image is not displayed on TV screen.	The HDMI cable is not securely connected.	Connect the HDMI cable properly.	18, 19
Menu screen of this unit is not displayed.	The iPod CONTROL key was pressed during iPod operation with the input source set to USB.	Press the iPod CONTROL key again to display the playback or Browse screen on the TV.	49
	The input switch of TV is not set correctly.	Set the TV's input source to this unit.	21
A digital or high-frequency equipment produces noises.	The unit may be placed close to digital equipment or high-frequency equipment.	Move the equipment away from the unit.	-
The HDMI control function does not work properly.	"HDMI CONTROL" is set to "OFF".	Set "HDMI CONTROL" to "ON".	63
	The HDMI control function is disabled on your TV.	Refer to the manual supplied with your TV and check the setting.	-
	The number of the connected HDMI components exceeds the limit.	Disconnect some of the HDMI components.	-
Audio delay control function is not effective even "AUDIO DELAY" is set to "AUTO".	The TV does not support the audio delay auto adjustment feature.	Adjust timing of sound output manually from "AUDIO DELAY" in the option menu.	43
"Disable" appears in the front panel display after key operation.	The key is unable to function in the current condition.		-

PREPARATION

PLAYBACK

SETTINGS

TROUBLESHOOTING

APPENDIX

FM tuner (YSP-4300 only)

Problem	Cause	Remedy	See page
FM stereo reception is noisy.	The characteristics of FM stereo broadcasts may cause this problem when the transmitter is too far away or the antenna input is poor.	Check the antenna connections.	20
		Try using a high-quality directional FM antenna.	–
		Switch to monaural mode.	45
There is distortion, and clear reception cannot be obtained even with a good FM antenna.	There is multi-path interference.	Adjust the antenna position to eliminate multi-path interference.	–
The desired station cannot be tuned into with the automatic tuning method.	The characteristics of FM stereo broadcasts may cause this problem when the transmitter is too far away or the antenna input is poor.	Use a high-quality directional FM antenna.	–
		Use the manual tuning method.	44
Previously preset stations can no longer be tuned into.	This unit has been disconnected for a long period.	Preset the stations again.	45

USB device (YSP-4300 only)

Problem	Cause	Remedy	See page
The USB device is not recognized.	The USB device is not properly connected to the USB jack on this unit.	Turn off this unit and reconnect the USB device.	54
	The USB device has been formatted using a file system other than FAT16 or FAT32.	Use a USB device formatted using the FAT16 or FAT 32 file system (except USB hard drives).	–
Folders and files stored on the USB device are not displayed.	The USB device uses a file structure that this unit is unable to recognize.	This unit can recognize a folder hierarchy with up to 8 layers, and up to 65,000 files per layer. Modify the folder structure on the USB device to meet these specifications.	–
	Data stored on the USB device is encrypted.	Use a USB device that does not support encryption.	–

Remote control

Problem	Cause	Remedy	See page
The remote control does not work and/or function properly.	The wrong distance or angle.	The remote control functions within a maximum range of 6 m (20 ft) and no more than 30 degrees off-axis from the front panel.	16
	Direct sunlight or lighting (from an inverter type of fluorescent lamp, etc.) is striking the remote control sensor of this unit.	Reposition this unit.	–
	The batteries are weak.	Replace all batteries.	16
The TV cannot be operated using the TV Remote Repeater function.	The TV Remote Repeater function is disabled.	Enable the TV Remote Repeater function.	12
	A remote control using technology other than infrared is used (this unit may not support some infrared remote controls).	The TV Remote Repeater function cannot be used. Move the center unit so that it does not block the remote control sensor on the TV, and use the TV's remote control to operate the TV.	–
	The center unit and TV are too close together or too far apart.	Move the center unit to adjust the distance between the TV Remote Repeater and the TV (remote control sensor). If necessary, attach or remove center unit spacers.	12
	The center unit's power cable is unplugged.	Plug in the power cable.	18
	There is an object, such as a power cable, between the center unit and TV.	Remove the obstacle.	–

Messages

iPod (when connected via USB jack)/USB device (YSP-4300 only)

Message	Features	Remedy	See page
Unknown iPod	The iPod being used is not supported by this unit.	Connect supported iPod to this unit.	75
Comm.Err	The USB device cannot be accessed. The iPod cannot be accessed.	Apply standby mode for this unit and reconnect the USB device. If the message continues to be displayed, move music files stored on the USB device to a different USB device.	54
		Turn the iPod off and then on again.	-
No Content	The selected folder on the USB device does not contain files supported by this unit.	Select a folder that contains files supported by this unit.	54
File Corrupted	Songs stored on the USB device cannot be played. Songs stored on the iPod device cannot be played.	Be sure that the file is supported by this unit. If the file does not play on other devices either, it may be corrupted.	54
		Be sure that the file is supported by this unit. If the file does not play on the iPod either, the file or the iPod's memory may be corrupted.	-
No Device	The USB device or iPod is not connected to this unit.	Be sure that the USB device or iPod is properly connected to this unit.	48, 54
	A problem with the USB device or iPod is preventing this unit from recognizing the connection.	Connect a different USB device or iPod to this unit.	-
Loading...	This unit is performing a task such as loading files and content stored on the USB device or iPod. This process takes some time. The message will disappear once the task is completed.	_____	-
Unplugged	The USB device or iPod has been disconnected from this unit. The message will disappear after approximately 3 seconds.	_____	-

Glossary

Channel (ch)

A channel is an audio type that has been divided based on the range and other characteristics.

Ex. 7.1 channel

- For front speakers, Left (1ch), Right (1ch)
- For center speaker (1ch)
- For surround speakers, Left (1ch), Right (1ch)
- For surround back speakers, Left (1ch), Right (1ch)
- For the subwoofer (1ch × 0.1* = 0.1ch)

* In contrast to a full 1-channel band, a component designed to enhance low frequency sound for added effect.


Deep Color

Deep Color is a type of video signal that can be transmitted by the HDMI jacks of this unit. Deep Color refers to the use of various color depths in displays, up from the 24-bit depths in previous versions of the HDMI specification. This extra bit depth allows HDTVs and other displays go from millions of colors to billions of colors and eliminate on-screen color banding for smooth tonal transitions and subtle gradations between colors. The increased contrast ratio can represent many times more shades of gray between black and white. Also Deep Color increases the number of available colors within the boundaries defined by the RGB or YCbCr color space.

Digital Sound Projector


This front surround speaker system is a revolutionary system capable of true surround sound. The Digital Sound Projector synthesizes up to five channels of sound beams and outputs front, center, and surround channel signals from the center unit. By reflecting front and rear beams off of walls, this system enables true surround sound. 7-channel playback can also be achieved by combining front and surround signals.

This unit uses the subwoofer for an additional 0.1 channel. A typical speaker system requires seven speakers (two front speakers, a center speaker, two surround speakers, two surround back speakers, and a subwoofer) in addition to an amplifier to achieve 7.1-channel playback.

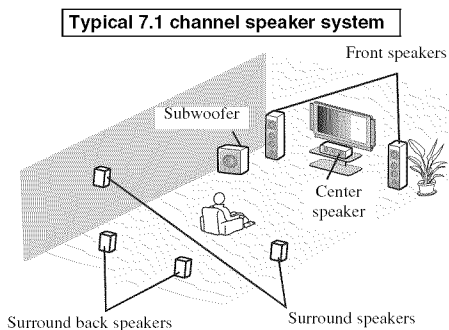

This unit creates surround sound by reflecting projected sound beams off the walls of your listening room.

The sound image of the system

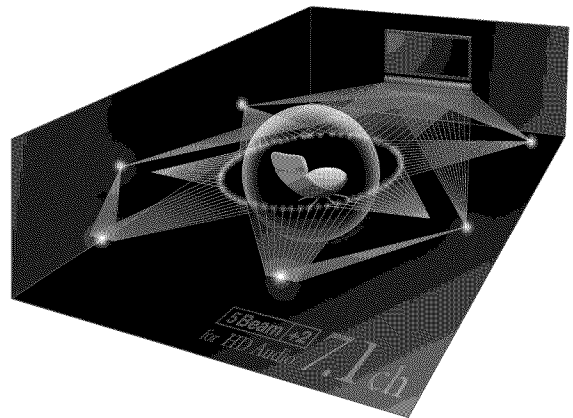

Dolby Digital

Dolby Digital is a digital surround sound system which is developed by Dolby Laboratories provides completely independent multi-channel audio. With 3 front channels (left, center, and right) and 2 surround stereo channels, Dolby Digital provides five full-range audio channels. By using 2 channel stereo for the surround speakers, more accurate moving sound effects and surround sound environment are possible than with Dolby Surround.

Dolby Digital Plus

Dolby Digital Plus is an advanced audio technology developed for high-definition programming and media including HD broadcasts, and Blu-ray Disc. Selected as an audio standard for Blu-ray Disc, this technology delivers multichannel sound with discrete channel output. Supporting bitrates up to 6.0 Mbps, Dolby Digital Plus can carry up to 7.1 discrete audio channels simultaneously. Supported by HDMI and designed for the optical disc recorders and AV receivers/amplifiers of the future, Dolby Digital Plus also remains fully compatible with the existing multichannel audio systems that incorporate Dolby Digital.

Dolby Pro Logic IIx

Dolby Pro Logic IIx is a new technology enabling discrete multichannel playback from 2-channel or multi-channel sources. There are three modes available: "Music mode" for music sources, "Movie mode" for movie sources (for 2-channel sources only) and "Game mode" for game sources.

Dolby TrueHD

Dolby TrueHD is an advanced lossless audio technology developed for high-definition disc-based media including Blu-ray Disc. Selected as an audio standard for Blu-ray Disc, this technology delivers sound that is bit-for-bit identical to the studio master, offering a high-definition home theater experience. Supporting bitrates up to 18.0 Mbps, Dolby TrueHD can carry up to 8 discrete channels of 24-bit/96 kHz audio simultaneously. Dolby TrueHD also remains fully compatible with the existing multichannel audio systems and retains the metadata capability of Dolby Digital, allowing dialog normalization and dynamic range control.

DTS

Digital surround sound system developed by DTS, Inc., which provides 5.1 channel audio. With an abundance of audio data, it is able to provide authentic-sounding effects.

DTS-HD High Resolution Audio

DTS-HD High Resolution Audio is a high resolution audio technology developed for high-definition disc-based media including Blu-ray Disc. Selected as an audio standard for Blu-ray Disc, this technology delivers sound that is virtually indistinguishable from the original, offering a high-definition home theater experience. Supporting bitrates up to 6.0 Mbps for Blu-ray Disc, DTS-HD High Resolution Audio can carry up to 7.1 discrete channels of 24-bit/96 kHz audio simultaneously.

DTS-HD Master Audio

The lossless high quality audio format created for an optical disc such as Blu-ray Disc. It is selected as an audio standard for Blu-ray Disc. Supporting bitrates up to 24.5 Mbps for Blu-ray Disc, DTS-HD High Master Audio can carry up to 7.1 discrete channels of 24-bit/96 kHz audio simultaneously.

HDMI

HDMI (High-Definition Multimedia Interface) is the industry supported, uncompressed, all-digital audio/video interface. When used in combination with HDCP (High-bandwidth Digital Content Protection), HDMI provides a secure audio/video interface that meets the security requirements of content providers and system operators.

PCM (Pulse Code Modulation)

Linear PCM is a signal format under which an analog audio signal is digitized, recorded, and transmitted without using any compression. This is used as a method of recording CDs and DVD audio. The PCM system uses a technique for sampling the size of the analog signal per very small unit of time. Standing for pulse code modulation, the analog signal is encoded as pulses and then modulated for recording.

Sampling frequency

The number of sampling (process for digitalizing analog signals) per second. In principle, the higher the sampling rate, the wider the frequency range that can be played back, and the higher the quantized bit rate, the finer the sound that can be reproduced.

Sound beam

The Digital Sound Projector features a number of compact beam speakers installed in orderly rows. Optimized audio signals are output as sound from each speaker for precise directional focusing of sounds. These focused sounds are called sound beams.

x.v.Color

x. v. Color is a type of video signal that can be transmitted by the HDMI jacks of this unit. It is a more extensive color space than sRGB, and allows the expression of colors that could not be expressed before. While remaining compatible with the color gamut of sRGB standards, "x.v.Color" expands the color space and can thus produce more vivid, natural images. It is particularly effective for still pictures and computer graphics.

Specifications

YSP-CU4300

Amplifier section

- Rated Output Power
 - Woofer (100 Hz, 1% THD, 4 Ω)..... 124 W
 - Tweeter (1 kHz, 1% THD, 4 Ω)..... 37.4 W
- Maximum Effective Output Power
 - Woofer (100 Hz, 10% THD, 4 Ω)..... 150 W
 - Tweeter (1 kHz, 10% THD, 4 Ω)..... 44 W

Speaker section

- Speaker Type..... Acoustic Suspension non-magnetic shielding type
- Driver
 - Tweeter..... 2.8 cm (1-1/8 in) Cone × 22
 - Woofer..... 6.5 cm (2-1/2 in) Cone × 2
- Impedance 4 Ω (Woofer, Tweeter)

Input jack

- Audio Input
 - Optical 2 (TV, OPTICAL)
 - Coaxial 1 (AUX)
 - Analog 1 pair
- HDMI Input..... 4 (HDMI IN 1 to 4)

Output jack

- HDMI Output (ARC) 1

Other jack

- INTELLIBEAM 1
- USB 1
- RS-232C 1 (System control)
- IR IN (U.S.A., Canada, Europe, Russia, and China models only)
 - 1 (System control)
- IR OUT..... 1 (System control)

FM section

- Tuning range
 - [U.S.A. and Canada models]..... 87.5 to 107.9 MHz
 - [Other models]..... 87.50 to 108.00 MHz

Wireless

- Frequency 2.4 GHz
- Transmission Range Approx. 20 m (66 ft) (without interference)

General

- Power Supply
 - [U.S.A. and Canada models]..... AC 120 V, 60 Hz
 - [Taiwan model] AC 110–120 V, 50/60 Hz
 - [Other models]..... AC 220–240 V, 50/60 Hz
- Power Consumption 60 W
- Standby Power Consumption
 - HDMI Control off and iPod Interlock off Less than 0.5 W
- Dimensions (W × H × D)
 - Excluding supplied spacers
 - 1102 × 86 × 161 mm (43-3/8 × 3-3/8 × 6-3/8 in)
 - Including supplied spacers
 - 1102 × 99.5 × 161 mm (43-3/8 × 3-7/8 × 6-3/8 in)
- Weight 6.9 kg (15.2 lbs)

YSP-CU4300 + NS-WSW160

- Frequency Response... 30 Hz to 22 kHz (-10 dB, Stereo playback mode)
- Crossover frequency..... 160 Hz (Stereo playback mode)
160 Hz, 500 Hz (Surround playback mode)

For the specifications of NS-WSW160, see the NS-WSW160 Owner's Manual.

YSP-CU3300

Amplifier section

- Rated Output Power
 - Woofer (100 Hz, 1% THD, 6 Ω)..... 90 W
 - Tweeter (1 kHz, 1% THD, 4 Ω)..... 27.2 W
- Maximum Effective Output Power
 - Woofer (100 Hz, 10% THD, 6 Ω)..... 100 W
 - Tweeter (1 kHz, 10% THD, 4 Ω)..... 32 W

Speaker section

- Speaker Type..... Acoustic Suspension non-magnetic shielding type
- Driver
 - Tweeter..... 2.8 cm (1-1/8 in) Cone × 16
 - Woofer 6.5 cm (2-1/2 in) Cone × 2
- Impedance 6 Ω (Woofer), 4 Ω (Tweeter)

Input jack

- Audio Input
 - Optical 2 (TV, OPTICAL)
 - Coaxial 1 (AUX)
 - Analog 1 pair
- HDMI Input..... 4 (HDMI IN 1 to 4)

Output jack

- HDMI Output (ARC)..... 1

Other jack

- INTELLIBEAM 1
- RS-232C 1 (System control)
- IR IN (U.S.A., Canada, Europe, Russia, and China models only)
 - 1 (System control)
- IR OUT 1 (System control)

Wireless

- Frequency 2.4 GHz
- Transmission Range Approx. 20 m (66 ft) (without interference)

General

- Power Supply
 - [U.S.A. and Canada models]..... AC 120 V, 60 Hz
 - [Taiwan model] AC 110–120 V, 50/60 Hz
 - [Other models] AC 220–240 V, 50/60 Hz
- Power Consumption 40 W
- Standby Power Consumption
 - HDMI Control off and iPod Interlock off Less than 0.5 W
- Dimensions (W × H × D)
 - Excluding supplied spacers
 - 1002 × 86 × 161 mm (39-1/2 × 3-3/8 × 6-3/8 in)
 - Including supplied spacers
 - 1002 × 99.5 × 161 mm (39-1/2 × 3-7/8 × 6-3/8 in)
- Weight 6.3 kg (13.9 lbs)

YSP-CU3300 + NS-WSW160

- Frequency Response ... 30 Hz to 22 kHz (-10 dB, Stereo playback mode)
- Crossover frequency 160 Hz (Stereo playback mode)
160 Hz, 500 Hz (Surround playback mode)

For the specifications of NS-WSW160, see the NS-WSW160 Owner's Manual.

* Specifications are subject to change without notice.

Supported USB device (YSP-CU4300)**iPod/iPhone/iPad (as of June 2012)**

- iPod touch (1st, 2nd, 3rd and 4th generation)
- iPod nano (3rd, 4th, 5th and 6th generation)
- iPhone 4S, iPhone 4, iPhone 3GS, iPhone 3G, iPhone
- iPad (3rd generation), iPad 2, iPad



The “yAired” and “yAired” are trademarks of Yamaha Corporation.

IntelliBeam

The “IntelliBeam” logo and “IntelliBeam” are trademarks of Yamaha Corporation.



The “CINEMA DSP” logo and “Cinema DSP” are registered trademarks of Yamaha Corporation.

UniVolume

“UniVolume” is a trademark of Yamaha Corporation.



Manufactured under license from Dolby Laboratories. Dolby, Pro Logic, Surround EX, and the double-D symbol are trademarks of Dolby Laboratories.



Manufactured under license under U.S. Patent Nos: 5,956,674; 5,974,380; 6,226,616; 6,487,535; 7,212,872; 7,333,929; 7,392,195; 7,272,567 & other U.S. and worldwide patents issued & pending. DTS-HD, the Symbol, & DTS-HD and the Symbol together are registered trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.

USB memory

- Mass storage class device (FAT16/FAT32)
- Supported audio data format
 - WAV (8kHz–48kHz, 16bit)
 - MP3 (8kHz–48kHz, 5kbps–320kbps)
 - WMA (8kHz–48kHz, 5kbps–384kbps)
 - MPEG4-AAC (8kHz–48kHz, 8kbps–320kbps)

HDMI

“HDMI,” the “HDMI” logo and “High-Definition Multimedia Interface” are trademarks, or registered trademarks of HDMI Licensing LLC.

x.v.Color

“x.v.Color” is a trademark of Sony Corporation.



Manufactured under license from Cambridge Mechatronics Ltd.

Worldwide patents applied for.

The “1” logo and “Digital Sound Projector™” are trademarks of Cambridge Mechatronics Ltd.



“Made for iPod,” “Made for iPhone,” and “Made for iPad” mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance.

iPad, iPhone, iPod, iPod nano, iPod touch, and Macintosh are trademarks of Apple Inc., registered in the U.S. and other countries.

Windows™

Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

Windows XP, Windows Vista, Windows 7, Windows Media Audio and Windows Media Player are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Available signal information

HDMI signal compatibility

Receivable audio signals

Audio signal types	Audio signal formats	Compatible media
2ch Linear PCM	2ch, 32–192 kHz, 16/20/24 bit	CD, DVD-Video, DVD-Audio, etc.
Multi-ch Linear PCM	8ch, 32–192 kHz, 16/20/24 bit	DVD-Audio, Blu-ray disc, HD DVD, etc.
Bitstream (SD Audio)	Dolby Digital, Dolby Digital Surround EX, DTS, DTS-ES	DVD-Video, etc.
Bitstream (HD Audio)	Dolby TrueHD, Dolby Digital Plus, DTS-HD Master Audio, DTS-HD High Resolution Audio	Blu-ray disc, HD DVD



- Refer to the supplied instruction manuals of the input source component, and set the component appropriately.
- When CPPM copy-protected DVD-Audio is played back, video and audio signals may not be output depending on the type of the DVD player.
- This unit is not compatible with HDCP-incompatible HDMI or DVI components. Refer to the supplied instruction manuals of HDMI or DVI components for HDCP compatibility.
- To decode audio bitstream signals on this unit, set the input source component appropriately so that the component outputs the bitstream audio signals directly (does not decode the bitstream signals on the component). Refer to the supplied instruction manuals for details.

Repeatable video signals¹⁾

- This unit is compatible with the video signals of the following resolutions:
 - Deep Color
 - x.v.Color
 - 3D video signal
 - 4K2K compatible
- 480i/60 Hz
- 576i/50 Hz
- 480p/60 Hz
- 576p/50 Hz
- 720p/60 Hz, 50 Hz
- 1080i/60 Hz, 50 Hz
- 1080p/60 Hz, 50 Hz, 24 Hz

Digital audio signal (optical/coaxial)

Audio signal types	Audio signal formats	Compatible media
2ch Linear PCM	2ch, 32–96 kHz, 16/20/24 bit	CD, DVD-Video, DVD-Audio, etc.
Bitstream	Dolby Digital, Dolby Digital Surround EX, DTS, DTS-ES	DVD-Video, etc.



¹⁾ The resolution of transmitted video signal varies according to specifications of the TV connected to this unit.

Index

Numerics

2ch.....	38
3BEAM (3 Beam).....	37
5.1ch.....	37, 38
5BEAM (5 Beam).....	37
5BEAM+2 (5 Beam Plus 2).....	37
7.1ch.....	37

A

Adaptive DRC.....	62
ADVANCED.....	66
Advanced setup menu.....	66
ARC.....	18
AUDIO ASSIGN.....	43
AUDIO DELAY.....	43
Audio output method.....	36
Audio signal information.....	65
AUTO PRESET.....	45
Auto setup (IntelliBeam).....	23

B

BASS.....	43
Beam optimization.....	23
BEAM OPTIMIZE ONLY.....	26
Beam stereo.....	33
BEAM TRAVEL LENGTH.....	60
BEAM+SOUND OPTIMIZE.....	26
Blu-ray disc player.....	18
Brightness adjustment (front panel display).....	65
Browse screen.....	50, 55

C

Calling a preset station.....	47
Cardboard microphone stand.....	23
Channel (ch).....	72
CHANNEL OUT.....	61
Channel output.....	36, 38
Channel output level adjustment.....	62
Charging the iPod.....	53
CINEMA DSP.....	34
CINEMA DSP indicator.....	8
CLEAR PRESET.....	47
Coaxial digital audio cable.....	19
Compressed Music Enhancer.....	33
Computer playback.....	48

D

Deep Color.....	72
-----------------	----

Digital Sound Projector.....	72
DISTANCE UNIT.....	65
Dolby Digital.....	38, 72
Dolby Digital Plus.....	38, 72
Dolby PLIIx PARAMETER.....	63
Dolby Pro Logic II.....	38
Dolby Pro Logic IIx.....	72
Dolby Pro Logic IIx Music.....	63
Dolby TrueHD.....	33, 72
DTS.....	73
DTS-HD High Resolution Audio.....	73
DTS-HD Master Audio.....	33, 73
DYNAMIC RANGE.....	63

E

Eco function.....	41
ENHANCER indicator.....	8
Entertainment.....	35
Error buzzer.....	25
Error message.....	25

F

Firmware of this unit.....	65, 67
FM antenna.....	20
FM MODE.....	45
FM tuning.....	44
FOCAL LENGTH.....	60
Frequency tuning.....	44
Front panel.....	5
Front panel display.....	8

G

Game console.....	19
Group ID.....	21, 64
Group ID switches.....	7

H

HDMI.....	73
HDMI audio assignment.....	43
HDMI AUDIO OUT.....	63
HDMI cable.....	18
HDMI CONTROL.....	63
HDMI control function.....	30
HORIZONTAL ANGLE.....	60

I

IMAGE LOCATION.....	61
Installing this unit.....	11

Index

INTELLIBEAM MIC jack	6		
IntelliBeam microphone	23		
iPod CONTROL key	52		
iPod INTERLOCK	64		
iPod playback (USB connection)	48		
iPod playback (wireless connection)	48		
<hr/>			
L			
<hr/>			
Language for menu display	22		
LINK indicator	7		
<hr/>			
M			
<hr/>			
Menu screen.....	21		
Movie.....	35		
MP3	33		
Music	35		
MY SUR. (My Surround).....	36, 37		
<hr/>			
O			
<hr/>			
Optical cable	18		
Option menu	42		
OSD LANGUAGE.....	65		
Output timing adjustment (image and sound)	43		
<hr/>			
P			
<hr/>			
PCM (Pulse Code Modulation)	73		
Playback indicators.....	8		
Playback screen	50, 55		
Power cable	6, 7, 18		
Preset tuning	45		
<hr/>			
R			
<hr/>			
RCA stereo cable.....	19		
Rear panel (center unit)	6		
Rear panel (subwoofer)	7		
Registering HDMI components to TV	31		
Registering stations	46		
Remote control	9		
Remote control sensor	5		
REPEAT	51, 57		
Repeat playback (iPod).....	51		
Repeat playback (USB device).....	57		
REPEATER indicator.....	8		
RX indicator	8		
<hr/>			
S			
<hr/>			
Sampling frequency	34, 54, 65, 73		
Sampling rate	33		
Satellite/cable TV tuner	19		
Setup menu	58		
SHUFFLE	51		
Shuffle playback (iPod).....	51		
Sound beam	73		
Sound beam output method	36		
Sound optimization	23		
SOUND OPTIMIZE ONLY	26		
Spacers	12		
ST+3BEAM (Stereo + 3 Beam)	37		
ST+3BEAM+2 (St + 3 Beam Plus 2)	37		
STATUS indicator	5		
Stereo playback mode.....	33		
Subwoofer volume	32		
Surround decoder.....	38		
Surround playback mode	33		
Surround sound	34		
Sweet spot	60		
System memory	28		
<hr/>			
T			
<hr/>			
TARGET indicator	8		
Target playback mode.....	33, 39		
Test sound.....	62		
Tone adjustment.....	43		
Transmitter (YIT-W12TX).....	48		
TREBLE	43		
Tuner indicators	8		
TV	18, 21, 30		
TV audio input.....	63		
TV Remote Repeater function	12		
TX indicator	8		
<hr/>			
U			
<hr/>			
UniVolume	40		
USB device playback	54		
USB jack	5		
<hr/>			
V			
<hr/>			
Video signal information	65		
VOL indicator.....	8, 32		
Volume	32		
Volume Trim	43		

W

Weak signal	45
Wireless connection.....	20, 21
Wireless module	5
WMA	33

X

x.v.Color	73
-----------------	----

Y

yAired	21, 64
--------------	--------





U


NS-WSW160

Wireless Subwoofer



Owner's Manual


IMPORTANT SAFETY INSTRUCTIONS

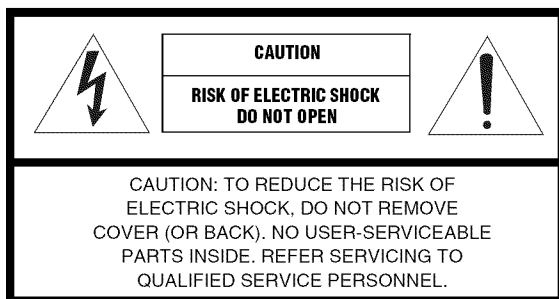

■ Explanation of Graphical Symbols



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert you to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer’s instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



We Want You Listening For A Lifetime

Yamaha and the Electronic Industries Association’s Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion – and, most importantly, without affecting your sensitive hearing.

Since hearing damage from loud sounds is often undetectable until it is too late, Yamaha and the Electronic Industries Association’s Consumer Electronics Group recommend you to avoid prolonged exposure from excessive volume levels.



IMPORTANT

Please record the serial number of this unit in the space below.

MODEL:

Serial No.:

The serial number is located on the rear of the unit.

Retain this Owner’s Manual in a safe place for future reference.

FCC INFORMATION (for US customers)

1. **1 IMPORTANT NOTICE: DO NOT MODIFY THIS UNIT!**

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements.

Modifications not expressly approved by Yamaha may void your authority, granted by the FCC, to use the product.

2. **IMPORTANT:**

When connecting this product to accessories and/or another product use only high quality shielded cables. Cable/s supplied with this product **MUST** be used. Follow all installation instructions. Failure to follow instructions could void your FCC authorization to use this product in the USA.

3. **NOTE:**

This product has been tested and found to comply with the requirements listed in FCC Regulations, Part 15 for Class "B" digital devices. Compliance with these requirements provides a reasonable level of assurance that your use of this product in a residential environment will not result in harmful interference with other electronic devices.

This equipment generates/uses radio frequencies and, if not installed and used according to the instructions found in the user's manual, may cause interference harmful to the operation of other electronic devices.

Compliance with FCC regulations does not guarantee that interference will not occur in all installations. If this product is found to be the source of interference, which can be determined by turning the unit "OFF" and "ON", please try to eliminate the problem by using one of the following measures:

Relocate either this product or the device that is being affected by the interference.

Utilize power outlets that are on different branch (circuit breaker or fuse) circuits or install AC line filter/s.

In the case of radio or TV interference, relocate/reorient the antenna. If the antenna lead-in is 300 ohm ribbon lead, change the lead-in to coaxial type cable.

If these corrective measures do not produce satisfactory results, please contact the local retailer authorized to distribute this type of product. If you can not locate the appropriate retailer, please contact Yamaha Corporation of America A/V Division, 6600 Orangethorpe Ave., Buena Park, CA 90620.

The above statements apply **ONLY** to those products distributed by Yamaha Corporation of America or its subsidiaries.

- This device complies with Part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s).
- Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received including interference that may cause undesired operation.
See the "Troubleshooting" section at the end of this manual if interference to radio reception is suspected.

FCC WARNING

Change or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTICE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC/IC radiation exposure limits set forth for uncontrolled equipment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65 and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated with at least 20 cm and more between the radiator and person's body (excluding extremities: hands, wrists, feet and ankles).

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

FOR CANADIAN CUSTOMERS

To prevent electric shock, match wide blade of plug to wide slot and fully insert.

This Class B digital apparatus complies with Canadian ICES-003.

POUR LES CLIENTS RÉSIDANT AU CANADA

Afin d'éviter les risques de décharges électriques, veillez à insérer à fond la large broche de la fiche dans la large fente de la prise de courant.

Cet appareil numérique de Classe B est conforme à la norme canadienne ICES-003.

Caution: Read this before operating this unit.

- To assure the finest performance, please read this manual carefully. Keep it in a safe place for future reference.
- Install this unit in a cool, dry, clean place - away from windows, heat sources, sources of excessive vibration, dust, moisture and cold. Avoid sources of humming (transformers, motors). To prevent fire or electrical shock, do not expose this unit to rain or water.
- The voltage to be used must be the same as that specified on the rear panel. Using this unit with a higher voltage than specified is dangerous and may cause a fire and/or electric shock.
- Do not use force on switches, controls or connection wires. When moving the unit, first disconnect the power plug and the wires connected to other equipment. Never pull the wires themselves.
- When not planning to use this unit for a long period (i.e., vacation, etc.), disconnect the AC power plug from the wall outlet.
- To prevent lightning damage, disconnect the AC power plug when there is an electric storm.
- Since this unit has a built-in power amplifier, heat will radiate from the rear panel. Place the unit apart from the walls, allowing at least 20 cm of space above, behind and on both sides of the unit to prevent fire or damage. Furthermore, do not position with the rear panel facing down on the floor or other surfaces.
- Do not cover the rear panel of this unit with a newspaper, a tablecloth, a curtain, etc., in order not to obstruct heat radiation. If the temperature inside the unit rises, it may cause fire, damage to the unit and/or personal injury.
- Do not place the following objects on this unit:
 - Glass, china, small metallic, etc.
If glass, etc., falls as a result of vibrations and breaks, it may cause bodily injury.
 - A burning candle etc.
If the candle falls as a result of vibration, it may cause fire and bodily injury.
 - A vessel containing water
If the vessel falls as a result of vibration and water spills, it may cause damage to the speaker, and/or you may get an electric shock.
- Do not place this unit where foreign material, such as dripping water. It might cause fire, damage to this unit, and/or personal injury.
- Never put a hand or a foreign object into the YST port located on the right side of this unit. When moving this unit, do not hold the port, as it might cause personal injury and/or damage to this unit.
- Never place a fragile object near the YST port of this unit. If the object falls or drops as a result of the air pressure, it may cause damage to the unit and/or personal injury.
- Never open the cabinet. It might cause an electric shock, since this unit uses a high voltage. It might also cause personal injury and/or damage to this unit. If something drops into the set, contact your dealer.
- When using a humidifier, be sure to avoid condensation inside this unit by allowing enough space around this unit or avoiding excess humidification. Condensation might cause fire, damage to this unit, and/or electric shock.
- Super-bass frequencies reproduced by this unit may cause a turntable to generate a howling sound. In such a case, move this unit away from the turntable.
- This unit may be damaged if certain sounds are continuously output at high volume level. For example, if 20 Hz-50 Hz sine waves from a test disc, bass sounds from electronic instruments, etc., are continuously output, or when the stylus of a turntable touches the surface of a disc, reduce the volume level to prevent this unit from being damaged.
- If you hear distortion (i.e., unnatural, intermittent “rapping” or “hammering” sounds) coming from this unit, reduce the volume level. Extremely loud playing of a movie soundtrack’s low frequency, bass-heavy sounds or similarly loud popular music passages can damage this speaker system.
- Vibration generated by super-bass frequencies may distort images on a TV. In such a case, move this unit away from the TV set.
- Do not attempt to clean this unit with chemical solvents as this might damage the finish. Use a clean, dry cloth.
- Be sure to read the “Troubleshooting” section regarding common operating errors before concluding that the unit is faulty.
- Install this unit near the wall outlet and where the AC power plug can be reached easily.

Radio waves may affect electro-medical devices.
Do not use this unit near medical devices or inside medical facilities.
Do not use this unit within 22 cm (9 inches) of persons with a heart pacemaker implant or defibrillator implant.


WARNING
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

Power is continuously supplied to this unit as long as its power cable is plugged in. When this unit is turned off using an external audio device, it enters standby mode, a state in which it consumes very little power.

Contents

Features of the Wireless Subwoofer NS-WSW160	1	Connecting the subwoofer wirelessly.....	2
Installing the subwoofer	1	Troubleshooting	3
Positioning the subwoofer on its side.....	2	Specifications	3

Features of the Wireless Subwoofer NS-WSW160

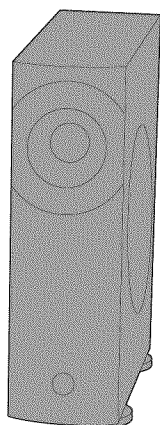

The NS-WSW160 is a wireless subwoofer that supports Yamaha's proprietary yAired technology. It receives wireless signals from a yAired-enabled Yamaha device to output audio content from that device. Check our website for devices compatible with this unit.


yAired

The "yAired" and "yAired" are trademarks of Yamaha Corporation.

Installing the subwoofer


Notes

- The subwoofer requires sufficient space for heat discharge. When installing the subwoofer, be sure to leave a minimum space of 20 cm (7-7/8 in) of open space above and behind and to the sides of the subwoofer. Do not cover the subwoofer heat discharge unit on the back of the subwoofer.
 - Be sure to install the subwoofer where it does not fall subject to vibrations, such as from an earthquake, and where it is out of the reach of children.
 - When using a cathode-ray tube (CRT) TV, do not install this unit directly above your TV.
 - If the picture on your TV screen becomes blurred or distorted, we recommend moving this unit away from your TV.
-
- To prevent sound reflecting off of walls, angle the subwoofer slightly toward the center of the room.
 - If the subwoofer is placed directly facing a wall and your listening position is in the center of the room, you may not be able to obtain enough bass sound from the subwoofer. This is because "standing waves" are forming between the two parallel walls and cancelling out the bass sounds.
 - When installing the subwoofer on a rack, be sure the rack is strong enough to support the subwoofer and that it leaves sufficient space for heat discharge.
 - Subwoofer performance may be affected if the subwoofer is placed on a metal rack, or if there is a metal plate between the subwoofer and the device to which the subwoofer is connected wirelessly.
 - The subwoofer can also be placed on its side (see p. 2).

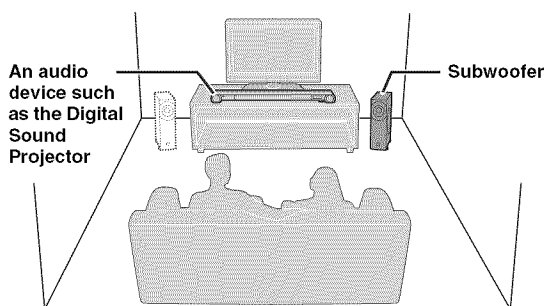


Positioning the subwoofer on its side

The subwoofer can be laid on its side when positioned on a rack.

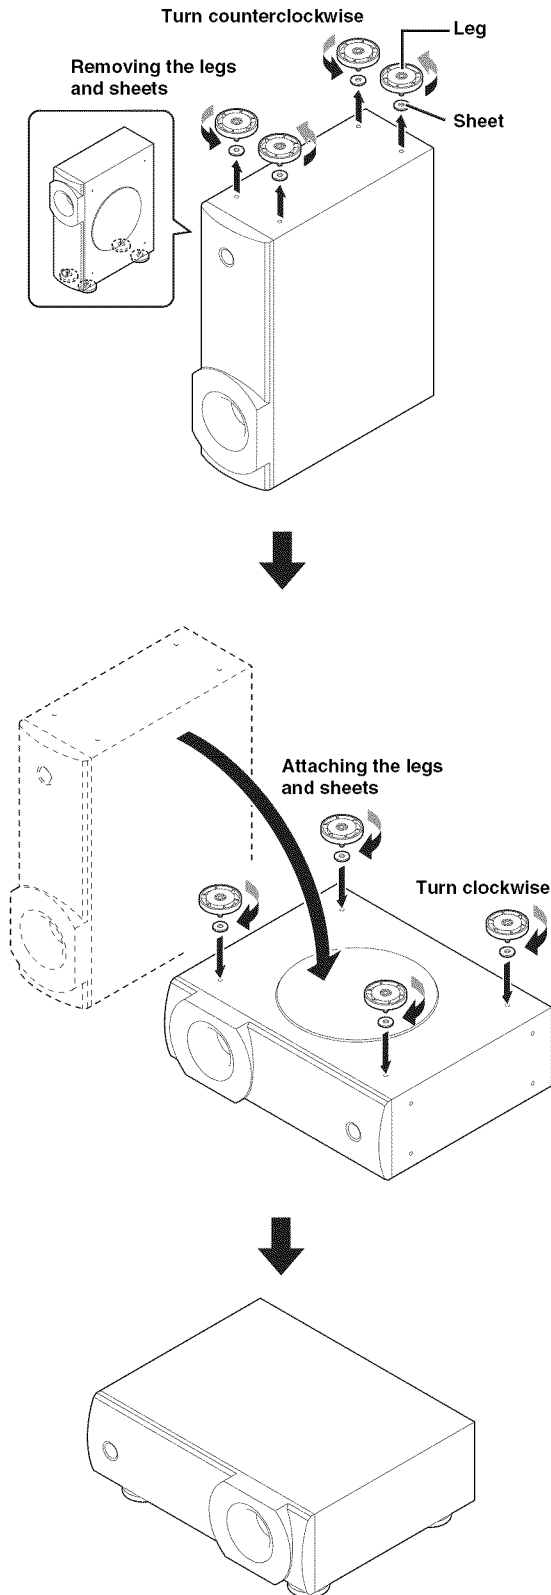

Connecting the subwoofer wirelessly

To connect the subwoofer to other yAired-enabled Yamaha devices wirelessly, the same group ID must be assigned to all the devices. The default group ID of the subwoofer is A1. The LINK indicator lights when the subwoofer is on and the subwoofer and other devices are connected wirelessly.

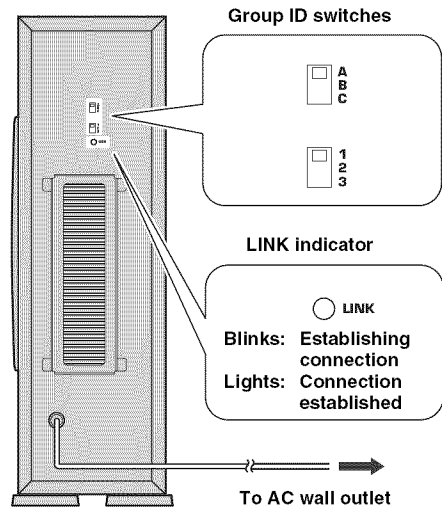

Troubleshooting

If this product doesn't work as expected, look for a possible cause below. If the issue you are experiencing is not listed, or you cannot resolve it after reading through these instructions, disconnect the power cable and contact an authorized Yamaha dealer or service center.

Problem	Cause	Remedy
No sound from the subwoofer.	The subwoofer is not connected wirelessly.	Make sure the power cable is connected properly. Check if the LINK indicator lights on the rear of the subwoofer (see p. 2). When the indicator does not light, check that devices to be connected wirelessly are assigned the same group ID.
	The volume of the subwoofer is low.	Increase the volume of the subwoofer with the volume control for subwoofer on the connected device wirelessly.
The subwoofer is too quiet.	The source material doesn't contain much bass.	Try playing source material that contains more bass.
		Reposition the subwoofer (see p. 1).

Specifications

Type	Advanced Yamaha Active Servo Technology
Driver	16 cm (6-1/2 in) cone woofer non-magnetic shielding type
Output power	75 W (100 Hz, 5 Ω, 10% T.H.D)
Dynamic power	130 W
Frequency response	30 Hz–200 Hz
Wireless	
Frequency	2.4 GHz
Transmission Range	Approx. 20 m (66 ft) (without interference)

Power supply	
[U.S.A. and Canada models]	AC 120 V, 60 Hz
[Taiwan model]	AC 110–120 V, 60 Hz
[Australia model]	AC 240 V, 50 Hz
[U.K., Europe and Russia models]	AC 230 V, 50 Hz
[China model]	AC 220 V, 50 Hz
[Korea model]	AC 220 V, 60 Hz
[Asia model]	AC 220–240 V, 50/60 Hz
Power consumption	70 W
Dimensions (W x H x D)	
Upright positioning	
.....	145 × 446 × 371 mm (5-3/4 × 17-1/2 × 14-5/8 in)
Positioned on side	
.....	435 × 146 × 371 mm (17-1/8 × 5-3/4 × 14-5/8 in)
Weight	9.0 kg (19.8 lbs)

Specifications are subject to change without notice.



YAMAHA
YSP-4300 / YSP-3300
Quick Reference Guide

This Quick Reference Guide explains steps to connect external components to the unit and start playback. For detailed operation, refer to the "Owner's Manual" in the supplied CD-ROM.

Installing YSP-4300/YSP-3300

Center unit Subwoofer

Center unit

- Place the center unit on a flat, level surface.
- Do not place the center unit on a soft surface such as a rug or carpet.
- Do not place the center unit in a location where it will be exposed to direct sunlight or other heat sources.
- Do not place the center unit in a location where it will be exposed to moisture or other liquids.
- Do not place the center unit in a location where it will be exposed to dust or other debris.
- Do not place the center unit in a location where it will be exposed to strong magnetic fields.
- Do not place the center unit in a location where it will be exposed to strong electromagnetic interference.
- Do not place the center unit in a location where it will be exposed to strong radio frequency interference.
- Do not place the center unit in a location where it will be exposed to strong static electricity.
- Do not place the center unit in a location where it will be exposed to strong vibrations.
- Do not place the center unit in a location where it will be exposed to strong shocks.
- Do not place the center unit in a location where it will be exposed to strong impacts.
- Do not place the center unit in a location where it will be exposed to strong pressure.
- Do not place the center unit in a location where it will be exposed to strong tension.
- Do not place the center unit in a location where it will be exposed to strong bending.
- Do not place the center unit in a location where it will be exposed to strong twisting.
- Do not place the center unit in a location where it will be exposed to strong stretching.
- Do not place the center unit in a location where it will be exposed to strong compression.
- Do not place the center unit in a location where it will be exposed to strong shear.
- Do not place the center unit in a location where it will be exposed to strong torsion.
- Do not place the center unit in a location where it will be exposed to strong flexion.
- Do not place the center unit in a location where it will be exposed to strong extension.
- Do not place the center unit in a location where it will be exposed to strong contraction.
- Do not place the center unit in a location where it will be exposed to strong relaxation.
- Do not place the center unit in a location where it will be exposed to strong oscillation.
- Do not place the center unit in a location where it will be exposed to strong resonance.
- Do not place the center unit in a location where it will be exposed to strong vibration.
- Do not place the center unit in a location where it will be exposed to strong shock.
- Do not place the center unit in a location where it will be exposed to strong impact.
- Do not place the center unit in a location where it will be exposed to strong pressure.
- Do not place the center unit in a location where it will be exposed to strong tension.
- Do not place the center unit in a location where it will be exposed to strong bending.
- Do not place the center unit in a location where it will be exposed to strong twisting.
- Do not place the center unit in a location where it will be exposed to strong stretching.
- Do not place the center unit in a location where it will be exposed to strong contraction.
- Do not place the center unit in a location where it will be exposed to strong relaxation.
- Do not place the center unit in a location where it will be exposed to strong oscillation.
- Do not place the center unit in a location where it will be exposed to strong resonance.



Subwoofer

- Place the subwoofer on a flat, level surface.
- Do not place the subwoofer on a soft surface such as a rug or carpet.
- Do not place the subwoofer in a location where it will be exposed to direct sunlight or other heat sources.
- Do not place the subwoofer in a location where it will be exposed to moisture or other liquids.
- Do not place the subwoofer in a location where it will be exposed to dust or other debris.
- Do not place the subwoofer in a location where it will be exposed to strong magnetic fields.
- Do not place the subwoofer in a location where it will be exposed to strong electromagnetic interference.
- Do not place the subwoofer in a location where it will be exposed to strong radio frequency interference.
- Do not place the subwoofer in a location where it will be exposed to strong static electricity.
- Do not place the subwoofer in a location where it will be exposed to strong vibrations.
- Do not place the subwoofer in a location where it will be exposed to strong shocks.
- Do not place the subwoofer in a location where it will be exposed to strong impacts.
- Do not place the subwoofer in a location where it will be exposed to strong pressure.
- Do not place the subwoofer in a location where it will be exposed to strong tension.
- Do not place the subwoofer in a location where it will be exposed to strong bending.
- Do not place the subwoofer in a location where it will be exposed to strong twisting.
- Do not place the subwoofer in a location where it will be exposed to strong stretching.
- Do not place the subwoofer in a location where it will be exposed to strong contraction.
- Do not place the subwoofer in a location where it will be exposed to strong relaxation.
- Do not place the subwoofer in a location where it will be exposed to strong oscillation.
- Do not place the subwoofer in a location where it will be exposed to strong resonance.

Parallel installation

Corner installation

Check, such as furniture

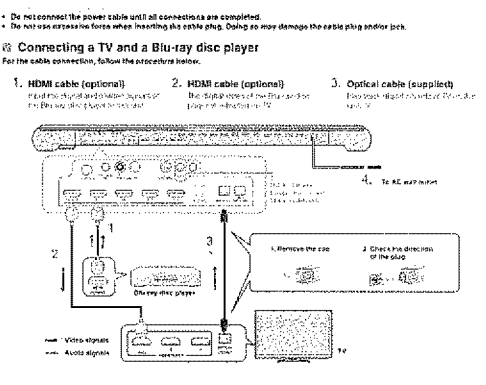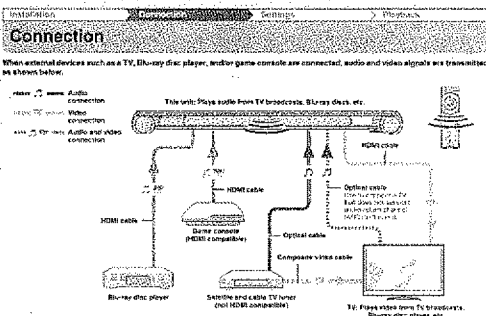

oTip

Audio return channel (ARC) supported TV


- Connect an HDMI cable to the audio return channel (ARC) jack (a port with "ARC" indicated) on TV. In this case, you do not need to connect the optical cable.
- Adjust the TV's audio function settings to enable audio return channel (ARC) (refer to TV's owner's manual for details).

When an audio return channel (ARC) TV

A function that transmits digital audio back to the TV through an HDMI cable. By this function, you can utilize the speaker TV and the subwoofer.




Connecting a game console or satellite/cable TV tuner

External device connection	Connecting cable
HDMI connection	<ul style="list-style-type: none"> 1. Connect to the TV tuner 2. Connect to the TV tuner 3. Connect to the TV tuner
Optical cable connection	<ul style="list-style-type: none"> 1. Connect to the TV tuner 2. Connect to the TV tuner 3. Connect to the TV tuner

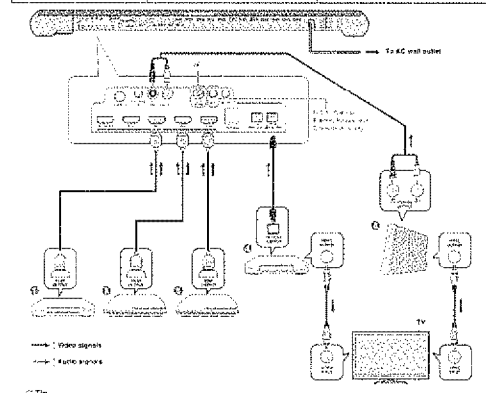

oTip

To utilize the audio return channel (ARC) function, you need to use the supplied HDMI cable. Do not use other HDMI cables.

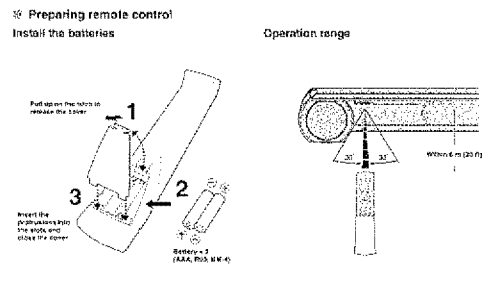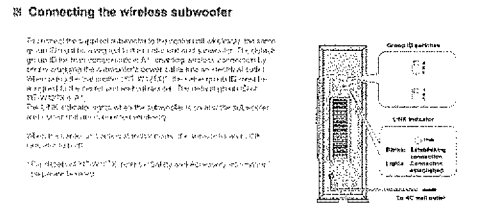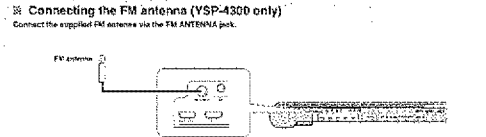

Carrying out AUTO SETUP for appropriate surround effects


The IntelliBeam technology allows you to achieve sound adjustments that best match your listening environment. It is normal for loud brief noises to be emitted during the AUTO SETUP procedure. Make sure that there are no children around in the listening room while the AUTO SETUP procedure is in progress.

1. Place the IntelliBeam microphone at your normal listening position.

Remove the IntelliBeam microphone, place it on the IntelliBeam microphone stand, and then place the stand on the listening position.



Place the IntelliBeam microphone stand on the IntelliBeam microphone stand. Place the IntelliBeam microphone stand on the listening position. Place the IntelliBeam microphone stand on the listening position. Place the IntelliBeam microphone stand on the listening position.

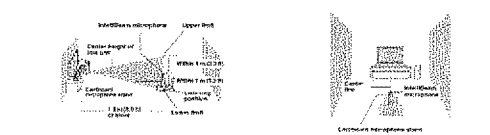

2. Press the **Q** key on the remote control.

Remote control is not shown.




3. Turn the TV on and switch the TV's input to display video content from this unit.

After the TV is switched on, use the TV's remote control to switch the TV's input to the HDMI 1 input. For details, refer to the TV's manual. Press the **Q** key to return the IntelliBeam microphone stand to the listening position.

Tip
You can adjust the IntelliBeam microphone stand's position from the IntelliBeam microphone stand's remote control. Press the **Q** key to return the IntelliBeam microphone stand to the listening position.

4. Connect the IntelliBeam microphone to the INTELLIBEAM MIC jack on the rear of the unit.

Remove the IntelliBeam microphone, and connect it to the INTELLIBEAM MIC jack on the rear of the unit.



5. Make sure that your listening room is as quiet as possible.

For best results, make sure that your listening room is as quiet as possible.

Follow the steps below to make sure that your listening room is as quiet as possible. Do not use the IntelliBeam microphone stand for anything other than listening. Do not use the IntelliBeam microphone stand for anything other than listening. Do not use the IntelliBeam microphone stand for anything other than listening.

6. Press the ENTER key to start the AUTO SETUP procedure and then leave the room within 10 seconds.

The unit will automatically start the AUTO SETUP procedure. Do not use the IntelliBeam microphone stand for anything other than listening. Do not use the IntelliBeam microphone stand for anything other than listening.


Tip
If you are using the IntelliBeam microphone stand, you can adjust the IntelliBeam microphone stand's position from the IntelliBeam microphone stand's remote control. Press the **Q** key to return the IntelliBeam microphone stand to the listening position.

7. Press the ENTER key.

After the AUTO SETUP procedure is complete, press the ENTER key to return the IntelliBeam microphone stand to the listening position.


8. Remove the IntelliBeam microphone.

Remove the IntelliBeam microphone, and place it on the IntelliBeam microphone stand.



Playing back

Use the front panel and/or remote controls to select the input source and play back content. For details, refer to the TV's manual. Press the **Q** key to return the IntelliBeam microphone stand to the listening position.

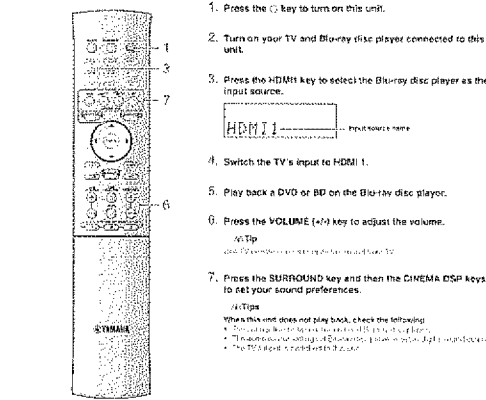

A) Enjoying TV in surround sound

1. Select the desired TV channel.
2. Press the TV key.



1. Press the **Q** key to turn on this unit.
2. Turn on your TV and Blu-ray disc player connected to this unit.
3. Press the HDMI key to select the Blu-ray disc player as the input source.
HDMI 1 Input source here
4. Switch the TV's input to HDMI 1.
5. Play back a DVD or BD on the Blu-ray disc player.
6. Press the VOLUME (+) key to adjust the volume.
Tip
Use the IntelliBeam microphone stand's remote control to adjust the volume.
7. Press the SURROUND key and then the CINEMA DSP keys to set your sound preferences.
Tip
When this unit does not play back, check the following:
• The IntelliBeam microphone stand's remote control is not used.
• The IntelliBeam microphone stand's remote control is not used.
• The IntelliBeam microphone stand's remote control is not used.

B) FM tuning (YSP-4300 only)

1. Press the FM key.
2. Press the TUNING <</> key to specify the frequency.




C) Playing music stored on an iPod via YIT-W12TX

1. Connect YIT-W12TX to the iPod.
2. Start playback of music stored on the iPod.



D) Playing music stored on a computer via YIT-W12TX

1. Connect YIT-W12TX to the computer via the USB cable for YIT-W12TX.
2. Play music stored on the computer.



E) Playing music stored on an iPod or USB device over a USB connection (YSP-4300 only)

1. Connect the iPod to the USB jack on the front of this unit using the USB cable supplied with the iPod.
2. Connect a USB device to the USB jack on the front of this unit.



For details, refer to the iPod's manual. For details, refer to the USB device's manual. For details, refer to the USB device's manual.



YSP-4300/ YSP-3300

[YSP-CU4300 + NS-WSW160 / YSP-CU3300 + NS-WSW160]

Digital Sound Projector™

Safety and Accessory Information

For more detailed information, refer to the Owner's Manual on the CD-ROM. To view the Owner's Manual, click "English" in the screen displayed automatically when you insert the CD-ROM into your PC. Then follow the on-screen instructions. If the screen is not displayed automatically, open the "index.html" in the CD-ROM.

Caution: Do not attempt to play this CD-ROM on an audio CD player.

PDF versions of this manual and "Owner's Manual" can be downloaded from the following website.



<http://download.yamaha.com/>

[For U.S. customers only]

Visit the following website for additional information, FAQ's, downloads such as "Owner's Manual" and product updates.

<http://usa.yamaha.com/support/>


IMPORTANT SAFETY INSTRUCTIONS

	CAUTION	
RISK OF ELECTRIC SHOCK DO NOT OPEN		
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		

■ Explanation of Graphical Symbols



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert you to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



We Want You Listening For A Lifetime

Yamaha and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion – and, most importantly, without affecting your sensitive hearing.

Since hearing damage from loud sounds is often undetectable until it is too late, Yamaha and the Electronic Industries Association's Consumer Electronics Group recommend you to avoid prolonged exposure from excessive volume levels.



FCC INFORMATION (for US customers)

1. 1 IMPORTANT NOTICE: DO NOT MODIFY THIS UNIT!

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modifications not expressly approved by Yamaha may void your authority, granted by the FCC, to use the product.

2. IMPORTANT: When connecting this product to accessories and/or another product use only high quality shielded cables. Cable/s supplied with this product **MUST** be used. Follow all installation instructions. Failure to follow instructions could void your FCC authorization to use this product in the USA.

3. NOTE: This product has been tested and found to comply with the requirements listed in FCC Regulations, Part 15 for Class "B" digital devices. Compliance with these requirements provides a reasonable level of assurance that your use of this product in a residential environment will not result in harmful interference with other electronic devices.

This equipment generates/uses radio frequencies and, if not installed and used according to the instructions found in the users manual, may cause interference harmful to the operation of other electronic devices.

Compliance with FCC regulations does not guarantee that interference will not occur in all installations. If this product is found to be the source of interference, which can be determined by turning the unit "OFF" and "ON", please try to eliminate the problem by using one of the following measures:

Relocate either this product or the device that is being affected by the interference.

Utilize power outlets that are on different branch (circuit breaker or fuse) circuits or install AC line filter/s.

In the case of radio or TV interference, relocate/reorient the antenna. If the antenna lead-in is 300 ohm ribbon lead, change the lead-in to coaxial type cable.

If these corrective measures do not produce satisfactory results, please contact the local retailer authorized to distribute this type of product. If you can not locate the appropriate retailer, please contact Yamaha Corporation of America A/V Division, 6600 Orangethorpe Ave., Buena Park, CA 90620.

The above statements apply **ONLY** to those products distributed by Yamaha Corporation of America or its subsidiaries.

- This device complies with Part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s).
- Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received including interference that may cause undesired operation. See the "Troubleshooting" section on the Owner's manual if interference to radio reception is suspected.

FCC WARNING

Change or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTICE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installation.



This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



This equipment complies with FCC/IC radiation exposure limits set forth for uncontrolled equipment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65 and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated with at least 20 cm and more between the radiator and person's body (excluding extremities: hands, wrists, feet and ankles). This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

The name plate is located on the bottom of the unit.

YSP-CU4300

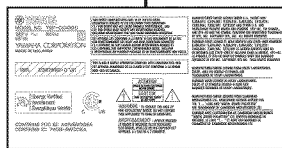

YSP-CU3300

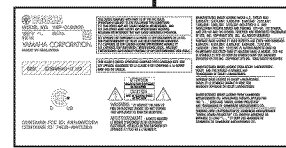

(Examples of the name plate)

FOR CANADIAN CUSTOMERS

To prevent electric shock, match wide blade of plug to wide slot and fully insert.
This Class B digital apparatus complies with Canadian ICES-003.

POUR LES CLIENTS RÉSIDANT AU CANADA


Afin d'éviter les risques de décharges électriques, veillez à insérer à fond la large broche de la fiche dans la large fente de la prise de courant.
Cet appareil numérique de Classe B est conforme à la norme canadienne ICES-003.

IMPORTANT

Please record the serial number of this unit in the space below.
MODEL:
Serial No.:
The serial number is located on the bottom of the unit.
Retain the Owner's Manual in a safe place for future reference.

This unit may affect radio waves of iPhone when iPhone is charged by using this unit. In addition, radio waves of this unit and iPhone may interfere with each other. If you have a problem with your telephone call, disconnect your iPhone from this unit. (YSP-CU4300 only)

Caution: Read this before operating this unit.

- 1 To assure the finest performance, please read this manual carefully. Keep it in a safe place for future reference.
- 2 Install this unit in a well ventilated, cool, dry, clean place – away from direct sunlight, heat sources, vibration, dust, moisture, and/or cold. For proper ventilation, allow the following minimum clearances.
Top : 5 cm (2 in)
Rear: 5 cm (2 in)
Sides: 1 cm (13/32 in)
- 3 Locate this unit away from other electrical appliances, motors, or transformers to avoid humming sounds.
- 4 Do not expose this unit to sudden temperature changes from cold to hot, and do not locate this unit in an environment with high humidity (i.e. a room with a humidifier) to prevent condensation inside this unit, which may cause an electrical shock, fire, damage to this unit, and/or personal injury.
- 5 Avoid installing this unit where foreign object may fall onto this unit and/or this unit may be exposed to liquid dripping or splashing. On the top of this unit, do not place:
 - Other components, as they may cause damage and/or discoloration on the surface of this unit.
 - Burning objects (i.e. candles), as they may cause fire, damage to this unit, and/or personal injury.
 - Containers with liquid in them, as they may fall and liquid may cause electrical shock to the user and/or damage to this unit.
- 6 Do not cover this unit with a newspaper, tablecloth, curtain, etc. in order not to obstruct heat radiation. If the temperature inside this unit rises, it may cause fire, damage to this unit, and/or personal injury.
- 7 Do not plug in this unit to a wall outlet until all connections are complete.
- 8 Do not operate this unit upside-down. It may overheat, possibly causing damage.
- 9 Do not use force on switches, knobs and/or cords.
- 10 When disconnecting the power cable from the wall outlet, grasp the plug; do not pull the cable.
- 11 Do not clean this unit with chemical solvents; this might damage the finish. Use a clean, dry cloth.
- 12 Only voltage specified on this unit must be used. Using this unit with a higher voltage than specified is dangerous and may cause fire, damage to this unit, and/or personal injury. Yamaha will not be held responsible for any damage resulting from use of this unit with a voltage other than specified.
- 13 To prevent damage by lightning, keep the power cable disconnected from a wall outlet or this unit during a lightning storm.
- 14 Do not attempt to modify or fix this unit. Contact qualified Yamaha service personnel when any service is needed. The cabinet should never be opened for any reasons.
- 15 When not planning to use this unit for long periods of time (i.e. vacation), disconnect the AC power plug from the wall outlet.
- 16 Be sure to read the “TROUBLESHOOTING” section (of “OWNER’S MANUAL” on the supplied CD-ROM) on common operating errors before concluding that this unit is faulty.
- 17 Before moving this unit, press  to set this unit to the standby mode, and disconnect the AC power plug from the wall outlet.
- 18 Condensation will form when the surrounding temperature changes suddenly. Disconnect the power cable from the outlet, then leave this unit alone.


- 19 When using this unit for a long time, this unit may become warm. Turn the power off, then leave this unit alone for cooling.
- 20 Install this unit near the AC outlet and where the AC power plug can be reached easily.
- 21 The batteries shall not be exposed to excessive heat such as sunshine, fire or the like. When you dispose of batteries, follow your regional regulations.

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

WARNING

THE POWER SUPPLY CABLE OF THIS UNIT MUST BE CONNECTED TO THE MAIN SOCKET OUTLET VIA A PROTECTIVE EARTHING CONNECTION.

This unit is not disconnected from the AC power source as long as it is connected to the wall outlet, even if this unit itself is turned off by . This state is called the standby mode. In this state, this unit is designed to consume a very small quantity of power.

Radio waves may affect electro-medical devices.
Do not use this unit near medical devices or inside medical facilities.

Do not use this unit within 22 cm (9 inches) of persons with a heart pacemaker implant or defibrillator implant.

(Power key)

Turns on the power of this unit or sets it to the standby mode.

■ Notes on remote controls and batteries

- Do not spill water or other liquids on the remote control.
- Do not drop the remote control.
- Do not leave or store the remote control in the following conditions:
 - places of high humidity, such as near a bath
 - places of high temperatures, such as near a heater or stove
 - places of extremely low temperatures
 - dusty places
- Insert the battery according to the polarity markings (+ and -).
- Change all batteries if you notice the following conditions:
 - the operation range of the remote control narrows
 - the transmit indicator does not flash or is dim
- If the batteries run out, immediately remove them from the remote control to prevent an explosion or acid leak.
- If you find leaking batteries, discard the batteries immediately, taking care not to touch the leaked material. If the leaked material comes into contact with your skin or gets into your eyes or mouth, rinse it away immediately and consult a doctor. Clean the battery compartment thoroughly before installing new batteries.
- Do not use old batteries together with new ones. This may shorten the life of the new batteries or cause old batteries to leak.
- Do not use different types of batteries (such as alkaline and manganese batteries) together. Specification of batteries may be different even though they look the same.
- Before inserting new batteries, wipe the compartment clean.
- If the remote control is without batteries for more than 2 minutes, or if exhausted batteries remain in the remote control, the contents of the memory may be cleared. In such a case, install new batteries and set the remote control code.
- Dispose of batteries according to your regional regulations.
- Keep batteries away from children. If a battery is accidentally swallowed, contact your doctor immediately.
- When not planning to use the remote control for long periods of time, remove the batteries from the remote control.
- Do not charge or disassemble the supplied batteries.

Supplied accessories

Before connecting, make sure you have received all of the following items.

The YSP-4300

Center unit (YSP-CU4300)



Wireless subwoofer (NS-WSW160)



The YSP-3300

Center unit (YSP-CU3300)



Wireless subwoofer (NS-WSW160)




YSP-CU4300/YSP-CU3300 supplied accessories

Remote control




Battery x 2 (AAA, R03, UM-4)




Optical cable




Indoor FM antenna (YSP-4300 only)




Center unit spacer x 2




IntelliBeam microphone




Cardboard microphone stand

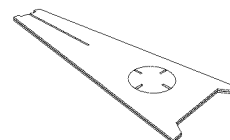

Owner's Manual CD-ROM

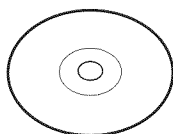

Quick Reference Guide

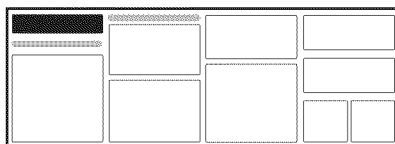

Safety and Accessory Information (this booklet)




■ Optional component

Yamaha Wireless Transmitter for iPod (YIT-W12)

The YIT-W12TX uses Yamaha's "yAired" technology to establish a wireless connection with another "yAired"-compatible Yamaha device. This enables playback of music stored on an iPod, iPhone, iPad, or computer via the Yamaha device.

iPods, iPhones, and iPads can also be charged when the YIT-W12TX is connected to an iPod, iPhone, or iPad, and the USB cable supplied with the YIT-W12TX is used to connect the device to a computer.

Wireless transmitter (YIT-W12TX)



USB cable






Registering Your New Yamaha Product is Fast and Easy

Thank you for purchasing a new product from Yamaha Electronics. We'd like to continue providing you with high quality products and better service. So, we've made it simple to register your new product purchase online. Please take a few minutes to visit our website at www.yamaha.com/YEC/registration/ and complete the information and questions included there. We appreciate your business and we look forward to hearing from you.

Failure to complete the registration form does not diminish your warranty rights in any way.

Register online at www.yamaha.com/YEC/registration/

Product registration applies to USA customers only.

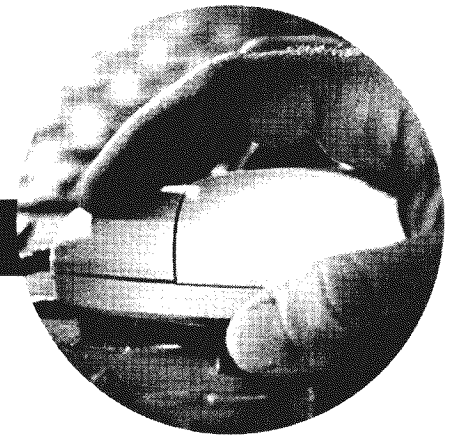



Register Your New Yamaha Product

Thank you for purchasing a new product from Yamaha Electronics. We would like to continue providing you with high quality products and better service. Please take a few minutes to visit our website and complete the product registration process at www.yamaha.com/YEC/registration/


Yamaha is committed to doing it's part in protecting the environment and reducing the impact on our natural resources. As a result, this product is supplied with an electronic copy of the **manual on the enclosed disc** for use on your computer.

We appreciate your business and look forward to hearing from you soon.

Register online at www.yamaha.com/YEC/registration/

Product registration applies to USA customers only.

Failure to complete the registration form does not diminish your warranty rights in any way.

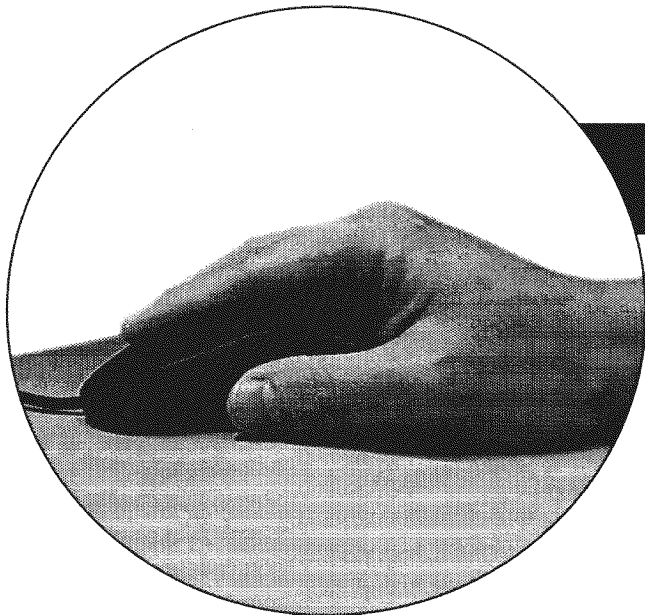



LIMITED WARRANTY ON HOME AUDIO PRODUCTS

Thank you for selecting a YAMAHA product. YAMAHA products are designed and manufactured to provide a high level of defect-free performance. Yamaha Corporation of America ("YAMAHA") is proud of the experience and craftsmanship that goes into each and every YAMAHA product. YAMAHA sells its products through a network of reputable, specially authorized dealers and is pleased to offer you, the Original Owner, the following Limited Warranty, which applies only to products that have been (1) directly purchased from YAMAHA's authorized dealers in the USA, including Puerto Rico (the "Warranted Area") and (2) used exclusively in the Warranted Area. YAMAHA suggests that you read the Limited Warranty thoroughly, and invites you to contact your authorized YAMAHA dealer or YAMAHA Customer Service if you have any questions.

THIS WARRANTY COVERS THE LISTED PRODUCTS AGAINST DEFECTS IN MATERIALS OR WORKMANSHIP FOR THE NUMBER OF YEARS IDENTIFIED BELOW.

Warranty Term

Type of Product

Duration of Warranty from Date of Purchase by or for the Original Owner

A/V and Stereo Receivers, Processor and Integrated Amplifiers, Separate Amplifiers and Preamplifiers, Tuners, CD Players and Changers, HDD Players and Recorders, Network Players, Powered Loudspeakers, Media Controllers and Speaker Systems purchased individually, as a pair, or as part of an Integrated or Packaged System.

..... 2 years

Cassette Decks, Blu-ray Disc Players, DVD Players and Changers, Integrated Systems (Receiver or Amplifier combined or on same chassis with CD, DVD or Blu-ray Disc Player), Desktop Audio Systems (i.e. TSX and PDX Series), Multimedia Speakers, Headphones, Earphones and Accessories.

..... 1 year

Coverage: YAMAHA will, at its option, repair or replace the product covered by this warranty if it becomes defective, malfunctions or otherwise fails to conform with this warranty under normal use and service during the term of this warranty, without charge for labor or materials. Repairs may be performed using new or refurbished parts that meet or exceed YAMAHA specifications for new parts. If YAMAHA elects to replace the product, the replacement may be a reconditioned unit. You will be responsible for any installation or removal charges and for any initial shipping charges if the product(s) must be shipped for warranty service. However, YAMAHA will pay the return shipping charges to any destination within the USA if the repairs are covered by the warranty. This warranty does not cover (a) damage, deterioration or malfunction resulting from accident, negligence, misuse, abuse, improper installation or operation or failure to follow instructions according to the Owner's Manual for this product; any shipment of the product (claims must be presented to the carrier); repair or attempted repair by anyone other than YAMAHA or an authorized YAMAHA Service Center; (b) any unit which has been altered or on which the serial number has been defaced, modified or removed; (c) normal wear, battery or battery replacement and any periodic maintenance; (d) deterioration due to perspiration, corrosive atmosphere or other external causes such as extremes in temperature or humidity; (e) damages attributable to power line surge or related electrical abnormalities, lightning damage or acts of God; (f) RFI/EMI (Interference/noise) caused by improper grounding or the improper use of either certified or uncertified equipment, if applicable; or (g) interference arising from the use of wireless communication devices (e.g. 2.4 GHz cordless telephones), or other radio frequency emitting products such as microwave ovens, whether such interference impairs the operation of the product or vice-versa. Consult the Owner's Manual for guidance on set-up procedures for minimizing the risks of interference. Any evidence of alteration, erasing or forgery of proof-of-purchase documents will cause this warranty to be void. This warranty covers only the Original Owner and is not transferable.

In Order to Obtain Warranty Service: Warranty service will only be provided for defective products within the Warranted Area. Contact your local authorized YAMAHA dealer who will advise you of the procedures to be followed. If this is not successful, contact YAMAHA at the address, telephone number or website shown below. YAMAHA may request that you send the defective product to a local authorized YAMAHA Servicer or authorize return of the defective product to YAMAHA for repair. For products requiring in-home service, contact your local authorized Yamaha dealer to arrange for service. If you are uncertain as to whether a dealer has been authorized by YAMAHA, please contact YAMAHA's Service Department at the number shown below, or check Yamaha's website at <http://usa.yamaha.com>. Product(s) shipped for service should be packed securely and must be accompanied by a detailed explanation of the problem(s) requiring service, together with the original or a machine reproduction of the bill of sale or other dated, proof-of-purchase document describing the product, as evidence of warranty coverage. Should any product submitted for warranty service be found ineligible therefore, an estimate of repair cost will be furnished and the repair will be accomplished only if requested by you and upon receipt of payment or acceptable arrangement for payment.

Limitation of Implied Warranties and Exclusion of Damages: ANY IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE SHALL BE LIMITED IN DURATION TO THE APPLICABLE PERIOD OF TIME SET FORTH ABOVE. YAMAHA SHALL NOT BE RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE, DAMAGE TO ANY OTHER EQUIPMENT OR OTHER ITEMS AT THE SITE OF USE OR INTERRUPTION OF PERFORMANCES OR ANY CONSEQUENCES. YAMAHA'S LIABILITY FOR ANY DEFECTIVE PRODUCT IS LIMITED TO REPAIR OR REPLACEMENT OF THE PRODUCT, AT YAMAHA'S OPTION. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This is the only express warranty applicable to the product specified herein; Yamaha neither assumes nor authorizes anyone to assume for it any other express warranty.

If you have any questions about service received or if you need assistance in locating an authorized YAMAHA Servicer, please contact:



CUSTOMER SERVICE
Yamaha Corporation of America
6600 Orangethorpe Avenue, Buena Park, California 90620-1373
Telephone: 800-292-2982
<http://usa.yamaha.com>

Do not return any product to the above address without a written Return Authorization issued by YAMAHA.