



# Owners Manual

FOR POTABLE WATER  
HEATING ONLY  
NOT SUITABLE FOR  
SPACE HEATING

## Model No.

<b>153.329260</b>	<b>40 Gal. Short</b>
153.329261	40 Gal. Short
153.329360	30 Gal.
153.329361	30 Gal.
153.329460	40 Gal.
153.329461	40 Gal.
153.329560	50 Gal.
153.329561	50 Gal.
153.329660	66 Gal.
153.329661	66 Gal.
153.329860	80 Gal.
153.329861	80 Gal.



LISTED

Caution:  
Read and Follow  
All Safety Rules and  
Operating Instructions  
Before First Use of  
This Product.

Save this Manual for Future Reference.



## POWER MISER™ 9 ELECTRIC WATER HEATER

- Safety Instructions
- Installation
- Operation
- Care and Maintenance
- Troubleshooting
- Parts List



GAMA certification applies to all residential electric water heaters with capacities of 20 to 120 Gallons. Input rating of 12 Kw or less at a voltage no greater than 250 V.

### **⚠ WARNING**

**READ THE GENERAL SAFETY SECTION BEGINNING ON INSIDE COVER AND THEN THIS ENTIRE MANUAL BEFORE INSTALLING OR OPERATING THIS WATER HEATER.**

**Sears, Roebuck and Co., Hoffman Estates, IL 60179 U.S.A.**

# Safety Precautions

## ▲ WARNING

Improper installation, adjustment, alteration, service or maintenance can cause **DEATH, SERIOUS BODILY INJURY, OR PROPERTY DAMAGE**. Refer to this manual for assistance or consult your local Sears Service Center for further information.

## ▲ WARNING

At the time of manufacture this water heater was provided with a combination temperature-pressure relief valve certified by a nationally recognized testing laboratory that maintains periodic inspection of production of listed equipment or materials, as meeting the requirements for Relief Valves and Automatic Gas Shutoff Devices for Hot Water Supply Systems, and the current edition of ANSI Z21.22 • CSA 4.4 and the code requirements of ASME. If replaced, the valve must meet the requirements of local codes, but not less than a combination temperature and pressure relief valve certified as meeting the requirements for Relief Valves and Automatic Gas Shutoff Devices for Hot Water Supply Systems, ANSI Z21.22 • CSA 4.4 by a nationally recognized testing laboratory that maintains periodic inspection of production of listed equipment or materials.

The valve must be marked with a maximum set pressure not to exceed the marked hydrostatic working pressure of the water heater (150 lbs. p.s.i.) and a discharge capacity not less than the water heater input rate as shown on the model rating plate. (Electric heaters - watts divided by 1000 x 3412 equal BTU/Hr. rate.)

Your local jurisdictional authority, while mandating the use of a temperature-pressure relief valve complying with ANSI Z21.22 • CSA 4.4 and ASME, may require a valve model different from the one furnished with the water heater.

Compliance with such local requirements must be satisfied by the installer or end user of the water heater with a locally prescribed temperature-pressure relief valve installed in the designated opening in the water heater in place of the factory furnished valve.

For safe operation of the water heater, the relief valve must not be removed from its designated opening or plugged.

The temperature-pressure relief valve must be installed directly into the fitting of the water heater designated for the relief valve. Position the valve downward and provide tubing so that any discharge will exit only within 6 inches above, or at any distance below the structural floor. Be certain that no contact is made with any live electrical part. The discharge opening must not be blocked or reduced in size under any circumstances. Excessive length, over 30 feet, or use of more than four elbows can cause restriction and reduce the discharge capacity of the valve.

No valve or other obstruction is to be placed between the relief valve and the tank. Do not connect tubing directly to discharge drain unless a 6" air gap is provided. To prevent bodily injury, hazard to life, or property damage, the relief valve must be allowed to discharge water in quantities should circumstances demand. If the discharge pipe is not connected to a drain or other suitable means, the water flow may cause property damage.

The Discharge Pipe:

- Must not be smaller in size than the outlet pipe size of the valve, or have any reducing couplings or other restrictions.
- Must not be plugged or blocked.
- Must be of material listed for hot water distribution.
- Must be installed so as to allow complete drainage of both the temperature-pressure relief valve, and the discharge pipe.
- Must terminate at an adequate drain.
- Must not have any valve between the relief valve and tank.

## ▲ WARNING

**HAZARD OF ELECTRICAL SHOCK!** Before removing any access panels or servicing the water heater, make sure the electrical supply to the water heater is turned "OFF". Failure to do this could result in **DEATH, SERIOUS BODILY INJURY, OR PROPERTY DAMAGE**.

## ▲ WARNING

**HOTTER WATER CAN SCALD:** Water heaters are intended to produce hot water. Water heated to a temperature which will satisfy space heating, clothes washing, dish washing, and other sanitizing needs can scald and permanently injure you upon contact. Some people are more likely to be permanently injured by hot water than others. These include the elderly, children, the infirm, or physically/mentally handicapped. If anyone using hot water in your home fits into one of these groups or if there is a local code or state law requiring a certain temperature water at the hot water tap, then you must take special precautions. In addition to using the lowest possible temperature setting that satisfies your hot water needs, a means such as a mixing valve, shall be used at the hot water taps used by these people or at the water heater. Mixing valves are available at plumbing supply or hardware stores. Follow manufacturers instructions for installation of the valves. Before changing the factory setting on the thermostat, read the "Temperature Regulation" section in this manual.

## ▲ WARNING

**WATER HEATERS EQUIPPED FOR ONE VOLTAGE ONLY:** This water heater is equipped for one type voltage only. Check the rating plate near the bottom access panel for the correct voltage. **DO NOT** use this water heater with any voltage other than the one shown on the model rating plate. Failure to use the correct voltage can cause problems which can result in **DEATH, SERIOUS BODILY INJURY, OR PROPERTY DAMAGE**. If you have any questions or doubts consult your electric company.

## ▲ WARNING

**INSULATING JACKETS:** When installing an external water heater insulation jacket on an electric water heater:

- a. **DO NOT** cover the temperature-pressure relief valve.
- b. **DO NOT** put insulation over the access covers or any access areas.
- c. **DO NOT** remove operating instructions, and safety related warning labels and materials affixed to the water heater.
- d. **DO** obtain new warning and instruction labels from Sears for placement on the jacket directly over the existing labels.

## ▲ WARNING

Do not use this appliance if any part of it has been under water. An electrical short or malfunction could occur. The water heater should be replaced.

## ▲ CAUTION

**WATER HEATERS EVENTUALLY LEAK:** Installation of the water heater must be accomplished in such a manner that if the tank or any connections should leak, the flow of water will not cause damage to the structure. When such locations cannot be avoided, a suitable drain pan should be installed under the water heater. Drain pans are available at your local Sears Store. Such a drain pan must be piped to an adequate drain.

# Table of Contents

Safety Precautions.....	2
Table of Contents.....	3
Introduction.....	4
Product Specifications.....	4
Preparing for the New Installation.....	4
Materials and Basic Tools Needed.....	5
Materials Needed.....	5
Basic Tools.....	5
Installation Instructions.....	6-15
Removing the Old Water Heater.....	6
Facts to Consider About the Location.....	7
Facts to Consider About the Convertible Element.....	7
Water Piping.....	8
T&P Valve and Pipe Insulation.....	8
Temperature-Pressure Relief Valve.....	9
Filling the Water Heater.....	10
Converting the Lower Element.....	10-12
Wiring Diagrams.....	13
Wiring.....	14
Installation Checklist.....	15
Service and Adjustment.....	16-20
Temperature Regulation.....	16
Thermostats.....	16
Thermostat Settings.....	16
Upper and Lower Thermostat Adjustment.....	17
Temperature-Pressure Relief Valve Operation.....	17
Draining.....	17
Element Cleaning and Replacement.....	18-20
Anode Rod Inspection.....	20
Drain Valve Washer Replacement.....	20
Service.....	20
Troubleshooting Guide.....	21-24
Start Up Conditions.....	21
Thermal Expansion.....	21
Strange Sounds.....	21
Operational Conditions.....	22
Smelly Water.....	22
“Air” in Hot Water Faucets.....	22
Rumbling Noise.....	22
High Temperature Shut Off System.....	22,23
Not Enough or No Hot Water.....	23
Water is Too Hot.....	23
Leakage Checkpoints.....	24
Parts Order List.....	26-31
Warranty.....	32

# Introduction

**Thank You** for purchasing a Sears water heater. Properly installed and maintained, it should give you years of trouble free service. If you should decide that you want the new water heater professionally installed, contact the local Sears Service Center or any Sears store. They will arrange for prompt, quality installation by Sears authorized contractors.

## Abbreviations Found In This Instruction Manual

U.L. - Underwriters Laboratories Inc.  
 NEC - National Electrical Code  
 ANSI - American National Standards Institute

# Product Specifications

MODEL NUMBER	TANK CAPACITY IN GALLONS	DIMENSIONS IN INCHES		RECOVERY RATE GALS. PER HOUR @90°F. RISE	ELEMENT WATTAGE AT 240 VOLTS		MINIMUM WIRE SIZE* (GAUGE)	MAXIMUM FUSE OR CIRCUIT BREAKER SIZE (AMPS)
		DIAMETER	HEIGHT		UPPER	LOWER		
153.329260 153.329261	40	25"	32½"	17.3	3800	3800	12	20
				25.0	3800	5500	10	30
153.329360 153.329361	30	19"	47"	17.3	3800	3800	12	20
				25.0	3800	5500	10	30
153.329460 153.329461	40	19"	60"	17.3	3800	3800	12	20
				25.0	3800	5500	10	30
153.329560 153.329561	50	21½"	61"	17.3	3800	3800	12	20
				25.0	3800	5500	10	30
153.329660 153.329661	66	23"	61"	17.3	3800	3800	12	20
				25.0	3800	5500	10	30
153.329860 153.329861	80	25"	61½"	17.3	3800	3800	12	20
				25.0	3800	5500	10	30

\*Wiring size based on standard 60°C copper wire. If distance from fuse box to water heater is more than 90 feet, refer to your local electrical code.

# Preparing for the New Installation

- Read the "Safety Precautions" section, page 2 of this manual first and then the entire manual carefully. If you don't follow the safety rules, the water heater will not operate properly. It could cause DEATH, SERIOUS BODILY INJURY AND/OR PROPERTY DAMAGE. This manual contains instructions for the installation, operation, and maintenance of this electric water heater. It also contains warnings throughout the manual that you must read and be aware of. All warnings and all instructions are essential to the proper operation of the water heater and your safety. Since we cannot put everything on the first few pages, READ THIS ENTIRE MANUAL BEFORE ATTEMPTING TO INSTALL OR OPERATE THE WATER HEATER.
- The installation must conform with the instructions in this manual; electric company rules; and Local Codes, or in the absence of Local Codes, with the current edition of the NEC, National Electrical Code, NFPA 70. This publication is available from your local government or public library or electric company or by writing Underwriters Laboratories Inc., 333 Pfingsten Road, Northbrook, IL 60062.
- If after reading this manual you have any questions or do not understand any portion of the instructions, call Sears Service Center.
- Carefully plan the place where you are going to put the water heater. Correct electrical wiring and connections are very important in preventing death from possible electrical shock and fires. Examine the location to ensure the water heater complies with the "Facts to Consider About the Location" section.
- For California installation this water heater must be braced, anchored, or strapped to avoid falling or moving during an earthquake. See instructions for correct installation procedures. Instructions may be obtained from the California office of the State Architect, 400 P Street, Sacramento, CA 95814.
- Massachusetts Code requires this water heater to be installed in accordance with Massachusetts 248-CMR 2.00: State Plumbing Code and 248-CMR 5.00.


# Materials and Basic Tools Needed

## Materials Needed


To simplify the installation Sears has available the installation parts shown below. You may or may not need all of these materials, depending on your type of installation.



**WATER HEATER INSTALLATION KIT WITH FLEXIBLE CONNECTORS FOR 3/4" OR 1/2" THREADED OR COPPER PLUMBING**

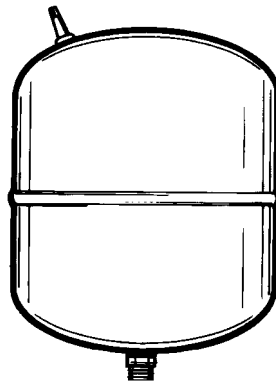

**EXPANSION TANKS FOR THERMAL EXPANSION CONDITIONS AVAILABLE IN 2 GALLON AND 5 GALLON CAPACITY THROUGH LOCAL SEARS STORE OR SERVICE CENTER**

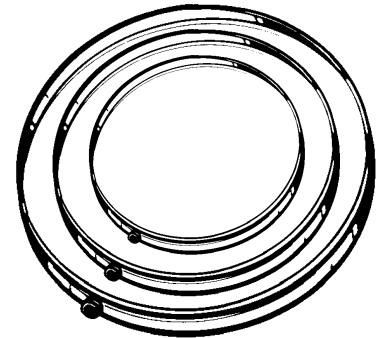

**DRAIN PANS AVAILABLE IN 20" DIAMETER FOR WATER HEATERS HAVING A DIAMETER 18" OR LESS, 24" DIAMETER FOR WATER HEATERS HAVING A DIAMETER 22" OR LESS AND AVAILABLE IN 28" DIAMETER FOR WATER HEATERS HAVING A DIAMETER 26" OR LESS**

## Basic Tools

You may or may not need all of these tools, depending on your type of installation. These tools can be purchased at your local Sears store.

- Pipe Wrench (2)
- Screwdriver
- 6 Foot Tape or Folding Rule
- Garden Hose
- Drill
- Pipe Dope or Teflon Tape



**GARDEN HOSE**




**6 FOOT TAPE**



**PIPE WRENCH**



**SLOT-HEAD SCREW DRIVER**




**PHILLIPS SCREWDRIVER**



**PIPE DOPE (SQUEEZE TUBE)**




**ROLL OF TEFLON TAPE (Use only on water connections)**

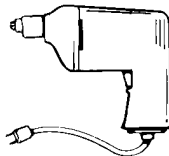

**DRILL**

## ADDITIONAL TOOLS NEEDED WHEN SWEAT SOLDERING

- Tubing Cutters or Hacksaw
- Propane Torch
- Soft Solder
- Solder Flux
- Emery Cloth
- Wire Brushes



**HACKSAW**



**3/4" WIRE BRUSH**



**1/2" WIRE BRUSH**



**ROLL OF LEAD FREE SOFT SOLDER**



**ROLL OF EMERY CLOTH**



**SOLDER FLUX**



**PROPANE TORCH**




**TUBING CUTTER**


# Installation Instructions

## Removing the Old Water Heater


① Turn "OFF" electrical supply to the water heater.

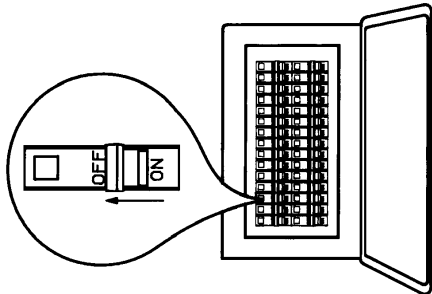



② Turn "OFF" the water supply to the water heater at the water shutoff valve or water meter.

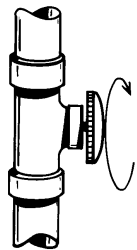


③ Attach a hose to the water heater drain valve and put the other end in a floor drain or outdoors. Open the water heater drain valve. Open a nearby hot water faucet which will relieve pressure in the water heater and speed draining.

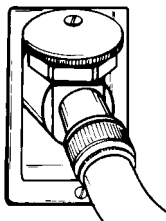

⑤ a. If you have copper piping to the water heater, the two copper water pipes can be cut with a hacksaw approximately 4" away from where they connect to the water heater. This will avoid cutting off the pipes too short. Additional cuts can be made later if necessary. Disconnect the temperature-pressure relief valve drain line. When the water heater is drained, disconnect the hose from the drain valve. Close the drain valve. The water heater is now completely disconnected and ready to be removed.

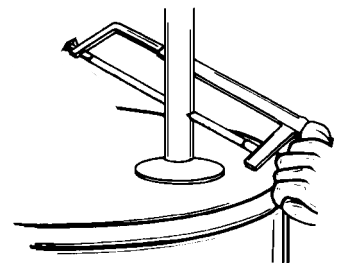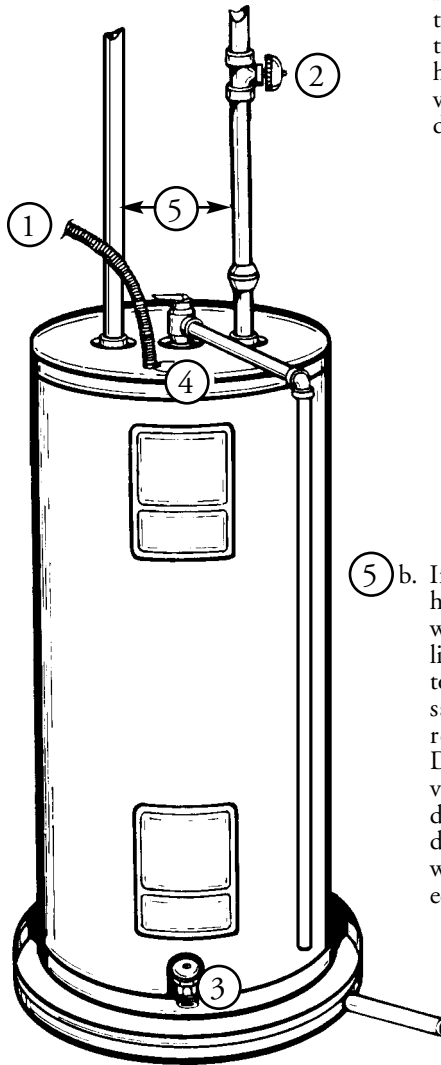


⑤ b. If you have galvanized pipe to the water heater, loosen the two galvanized pipes with a pipe wrench at the union in each line. Also disconnect the piping remaining to the water heater. These pieces should be saved since they may be needed when reconnecting the new water heater. Disconnect the temperature-pressure relief valve drain line. When the water heater is drained, disconnect the hose from the drain valve. Close the drain valve. The water heater is now completely disconnected and ready to be removed.

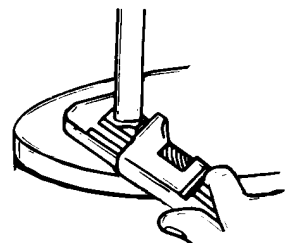

### ▲ WARNING

The water passing out of the drain valve may be extremely hot. To avoid being scalded, make sure all connections are tight and that the water flow is directed away from any person.

④ Check again to make sure the electrical supply is turned "OFF" to the water heater. Then disconnect the electrical supply connection from the water heater junction box.

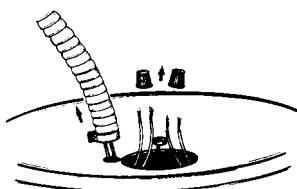

### ▲ WARNING

Mineral buildup or sediment may have accumulated in the old water heater. This causes the water heater to be much heavier than normal and this residue, if spilled out, could cause staining.

# Installation Instructions (cont'd)

## Facts to Consider About the Location

You should carefully choose an indoor location for the new water heater, because the placement is a very important consideration for the safety of the occupants in the building and for the most economical use of the appliance. This water heater is not intended for outdoor installation.

Whether replacing an old water heater or putting the water heater in a new location, the following critical points must be observed.

- The location selected should be indoors as close to and as centralized with the water piping system as possible. This water heater, as well as all water heaters, will eventually leak. Do not install without adequate drainage provisions where water flow will cause damage.

<b>⚠ CAUTION</b>
<p><b>WATER HEATERS EVENTUALLY LEAK:</b> Installation of the water heater must be accomplished in such a manner that if the tank or any connections should leak, the flow of water will not cause damage to the structure. When such locations cannot be avoided, a suitable drain pan should be installed under the water heater. Drain pans are available at your local Sears stores. Such a drain pan must be piped to an adequate drain.</p>

<b>⚠ CAUTION</b>
<p><b>INSTALLATION IN RESIDENTIAL GARAGES:</b> The water heater must be located and/or protected so it is not subject to physical damage by a moving vehicle.</p>

- The location selection must provide adequate clearances for servicing and proper operation of the water heater.


## Facts to Consider About The Convertible Lower Element

The Upper Element (if a double element model), is a conventional 3800 watt element which only operates at its rated wattage on 240 volts. (See rating plate on water heater).

The Lower Element of the water heater can be converted from operation at 3800 watts to 5500 watts on a 240 volt system.

Read and follow water heater warnings and instructions. If after reading these instructions in this manual, if you do not understand any portion, call Sears Service Center.

<b>⚠ WARNING</b>
<p><b>Before making the conversion to 5500 watts, check the (1) power supply...must be 240 volts, (2) wiring...10 gauge AWG, Type TW, 60°C or equivalent, and (3) Circuit breakers or fusing...capable of 30 amp loading. Also, the installation must conform with this manual, local codes and electric utility rules. Failure to comply can result in DEATH, SERIOUS BODILY INJURY, OR PROPERTY DAMAGE.</b></p>

ELECTRIC WATER HEATER					ECO INSTALLED
IN CORRESPONDENCE RE- GARDING THIS HEATER AL- WAYS MENTION MODEL & SERIAL NO'S.				LISTED 124N	
MODEL NUMBER		CAPACITY		SERIAL NUMBER	
FACTORY EQUIPPED WITH					U.S. GAL.
UPPER ELEMENT	LOWER ELEMENT	MAXIMUM	VOLTS	CHECK (✓) HERE	MAXIMUM HYDROSTATIC WORKING PRESSURE
				<input checked="" type="checkbox"/>	150
WATTS OPTIONAL WATTAGE		WATTS	WATTS	A.C. ONLY IF INSTALLED AS FACTORY EQUIPPED	P.S.I.
UPPER ELEMENT	LOWER ELEMENT	MAXIMUM	CHECK (✓) HERE		
			<input checked="" type="checkbox"/>		
WATTS			IF CONVERTED		
					WARNING SEE CONVERSION INSTRUCTION


**NOTE:** Whether or not the element conversion is made the model rating plate must be marked. Using a hard point ink pen, check the appropriate block within the model rating plate, which is located adjacent to the lower access panel.

# Installation Instructions (cont'd)

## Water Piping

### \*⚠ WARNING

**HOTTER WATER CAN SCALD:** Water heaters are intended to produce hot water. Water heated to a temperature which will satisfy space heating, clothes washing, dish washing, and other sanitizing needs can scald and permanently injure you upon contact. Some people are more likely to be permanently injured by hot water than others. These include the elderly, children, the infirm, or physically/mentally handicapped. If anyone using hot water in your home fits into one of these groups or if there is a local code or state law requiring a certain temperature water at the hot water tap, then you must take special precautions. In addition to using the lowest possible temperature setting that satisfies your hot water needs, a means such as a mixing valve, shall be used at the hot water taps used by these people or at the water heater. Mixing valves are available at plumbing supply or hardware stores. Follow manufacturers instructions for installation of the valves. Before changing the factory setting on the thermostat, read the "Temperature Regulation" section in this manual.

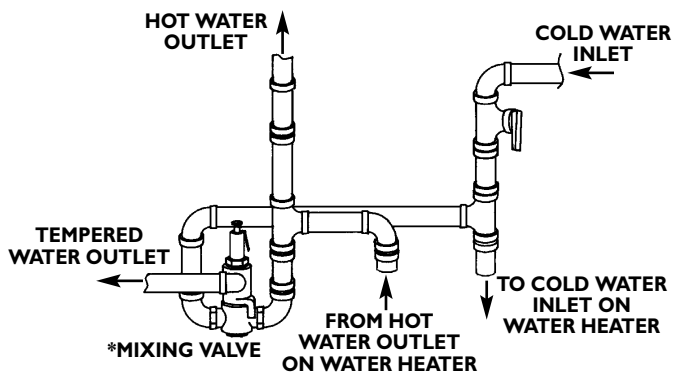

The illustration shows the attachment of the water piping to the water heater. The water heater is equipped with 3/4" water connections.


If a water heater is installed in a closed water supply system; such as one having a back-flow preventer, check valve, water meter with a check valve, etc. in the cold water supply; means shall be provided to control thermal expansion. Contact the local utility or Sears Service Center on how to control this situation.

**NOTE:** If using copper tubing, solder tubing to an adapter before attaching the adapter to the cold water inlet connection. Do not solder the cold water supply line directly to the cold water inlet. It will harm the dip tube and damage the tank.

- Look at the top cover of the water heater. The hot water outlet is marked hot. Put two or three turns of teflon tape around the threaded end of the threaded-to-sweat coupling and around both ends of the 3/4" threaded nipple. Using flexible connectors, connect the hot water pipe to the hot water outlet of the water heater.
- Look at the top cover of the water heater. The cold water inlet is marked cold. Put two or three turns of teflon tape around the threaded end of the threaded-to-sweat coupling and around both ends of the 3/4" threaded nipple. Using flexible connectors, connect the cold water pipe to the cold water inlet of the water heater.

**NOTE:** Your water heater is super insulated to minimize heat loss from the tank. Further reduction in heat loss can be accomplished by insulating the hot water lines from the water heater.

### Installation completed using Installation Kit

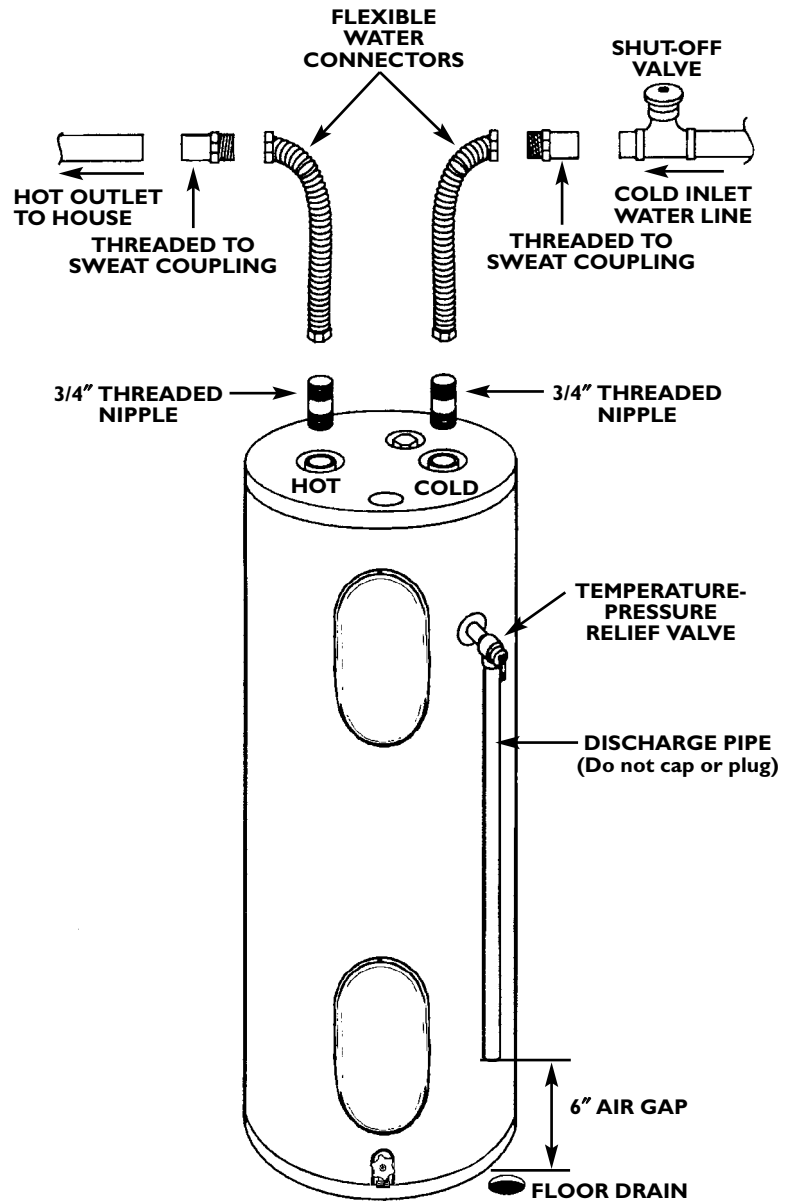


## T&P Valve and Pipe Insulation

Remove insulation for T&P Valve and pipe connections from carton.

Fit pipe insulation over the incoming cold water line and the hot water line. Make sure that the insulation is against the top cover of the heater.

Fit T&P Valve insulation over valve. Make sure that the insulation does not interfere with the lever of the T&P valve.

Secure all insulation using tape.

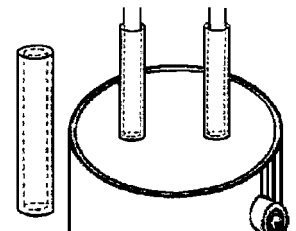



# Installation Instructions (cont'd)

## Temperature-Pressure Relief Valve

### ▲ WARNING

At the time of manufacture this water heater was provided with a combination temperature-pressure relief valve certified by a nationally recognized testing laboratory that maintains periodic inspection of production of listed equipment or materials, as meeting the requirements for Relief Valves and Automatic Gas Shutoff Devices for Hot Water Supply Systems, and the current edition of ANSI Z21.22 • CSA 4.4 and the code requirements of ASME. If replaced, the valve must meet the requirements of local codes, but not less than a combination temperature and pressure relief valve certified as meeting the requirements for Relief Valves and Automatic Gas Shutoff Devices for Hot Water Supply Systems, ANSI Z21.22 • CSA 4.4 by a nationally recognized testing laboratory that maintains periodic inspection of production of listed equipment or materials.

The valve must be marked with a maximum set pressure not to exceed the marked hydrostatic working pressure of the water heater (150 lbs. p.s.i.) and a discharge capacity not less than the water heater input rate as shown on the model rating plate. (Electric heaters - watts divided by 1000 x 3412 equal BTU/Hr. rate.)

Your local jurisdictional authority, while mandating the use of a temperature-pressure relief valve complying with ANSI Z21.22 • CSA 4.4 and ASME, may require a valve model different from the one furnished with the water heater.

Compliance with such local requirements must be satisfied by the installer or end user of the water heater with a locally prescribed temperature-pressure relief valve installed in the designated opening in the water heater in place of the factory furnished valve.

For safe operation of the water heater, the relief valve must not be removed from its designated opening or plugged.

The temperature-pressure relief valve must be installed directly into the fitting of the water heater designated for the relief valve. Position the valve downward and provide tubing so that any discharge will exit only within 6 inches above, or at any distance below the structural floor. Be certain that no contact is made with any live electrical part. The discharge opening must not be blocked or reduced in size under any circumstances. Excessive length, over 30 feet, or use of more than four elbows can cause restriction and reduce the discharge capacity of the valve.

No valve or other obstruction is to be placed between the relief valve and the tank. Do not connect tubing directly to discharge drain unless a 6" air gap is provided. To prevent bodily injury, hazard to life, or property damage, the relief valve must be allowed to discharge water in quantities should circumstances demand. If the discharge pipe is not connected to a drain or other suitable means, the water flow may cause property damage.


#### The Discharge Pipe:

- Must not be smaller in size than the outlet pipe size of the valve, or have any reducing couplings or other restriction.
- Must not be plugged or blocked.
- Must be of material listed for hot water distribution.
- Must be installed so as to allow complete drainage of both the temperature-pressure relief valve, and the discharge pipe.
- Must terminate at an adequate drain.
- Must not have any valve between the relief valve and tank.

### ▲ WARNING

The temperature-pressure relief valve must be manually operated at least once a year. Caution should be taken to ensure that (1) no one is in front of or around the outlet of the temperature-pressure relief valve discharge line, and (2) the water manually discharged will not cause any bodily injury or property damage because the water may be extremely hot.


If after manually operating the valve, it fails to completely reset and continues to release water, immediately, close the cold water inlet to the water heater, follow the draining instructions, and replace the temperature-pressure relief valve with a new one.

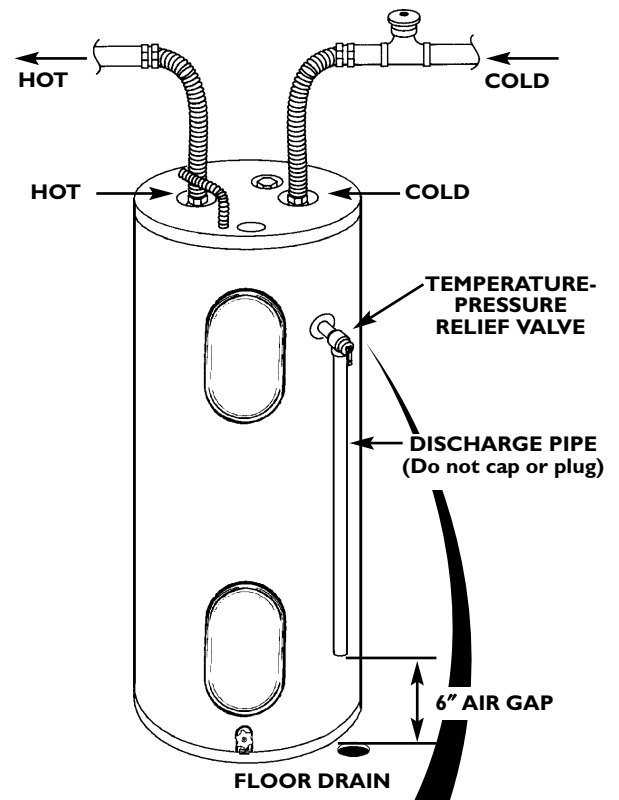

### WARNING "RELIEF VALVE OPENING"

This water heater is provided with a combination Temperature-Pressure Relief Valve listed as complying with the standard for Relief Valves and Automatic Gas Shutoff Devices for Hot Water Supply Systems, ANSI Z21.22 and the code requirements of ASME.

Your local jurisdictional authority, while mandating the use of a Temperature-Pressure Relief Valve complying with ANSI Z21.22 and ASME, may require a valve model different from the one furnished with the water heater. Compliance with such local requirements must be satisfied by the installer or end user of the water heater with a locally prescribed Temperature-Pressure Relief Valve installed in the designated opening in the water heater.

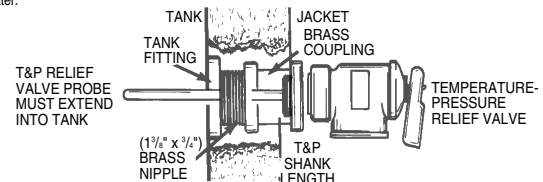

- If a short shank (less than 2") temperature-pressure relief valve is to be installed (as shown), a nipple and coupling must be used.
- If a long shank (2" or longer) is to be installed, do not use the nipple and coupling.

\*Install Temperature-Pressure protective equipment required by local codes, but not less than a combination Temperature-Pressure Relief Valve certified as meeting the requirements for Relief Valves and Automatic Gas Shutoff Devices for Hot-Water Supply Systems, ANSI Z21.22 by a nationally recognized testing laboratory that maintains periodic inspection of production of listed equipment or materials. The valve must be oriented, provided with tubing, or otherwise installed so that discharge can exit only within 6 inches above, or at any distance below the structural floor, and cannot contact any live electrical part.

For safe operation of the water heater, the Relief Valve must not be removed or plugged. See manual heading - "Temperature-Pressure Relief Valve" for installation and maintenance of Relief Valve, discharge pipe and other safety precautions.

# Installation Instructions (cont'd)

## Filling the Water Heater

To fill the water heater with water:

- Close the water heater drain valve by turning the handle to the right (clockwise). The drain valve is on the lower front of the water heater.
- Open the cold water supply valve to the water heater.  
**NOTE: The cold water supply valve must be left open when the water heater is in use.**
- To insure complete filling of the tank, allow air to exit by opening the nearest hot water faucet. Allow water to run until a constant flow is obtained. This will let air out of the water heater and the piping.

<b>⚠ CAUTION</b>
Never use this water heater unless it is completely full of water. To prevent damage to the tank and heating element, the tank must be filled with water. Water must flow from the hot water faucet before turning "ON" power.

- Check all new water piping for leaks. Repair as needed.

## Converting the Lower Element


These instructions only cover the conversion of the convertible element, read this entire manual before attempting to install or operate the water heater. The water heater is factory set to operate at 3800 watts. The lower element can be converted to operate at 5500 watts. Refer to the "Facts to Consider About the Convertible Lower Element" section.

The **Upper Element**, (if a double element model) is a conventional 3800 watt element which only operates at its rated wattage on 240 volts. (See rating plate on water heater).

The **Lower Element** of the water heater can be converted from operation at 3800 watts to 5500 watts on a 240 volt system.

If after reading these instructions and this manual, if you do not understand any portion, call Sears Service Center.


<b>⚠ WARNING</b>
Before making the conversion to 5500 watts, check the (1) power supply...must be 240 volts, (2) wiring...10 gauge AWG, Type TW, 60°C or equivalent, and (3) Circuit breakers or fusing...capable of 30 amp loading. Also, the installation must conform with this Manual, local codes and electric utility rules. <b>FAILURE TO COMPLY CAN RESULT IN DEATH, SERIOUS BODILY INJURY OR PROPERTY DAMAGE.</b>

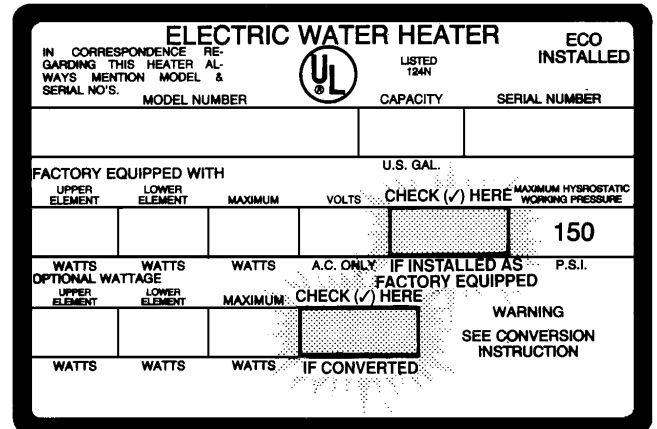


**NOTE:** Whether or not the element conversion is made the model rating plate must be marked. Using a hard point ink pen, check the appropriate block within the model rating plate, which is located adjacent to the lower access panel.

Necessary element conversion parts are located in a small bag contained within the electrical junction box on top of the water heater.

### CONVERSION PARTS

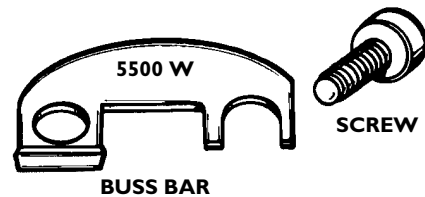


1. Before beginning the conversion turn "OFF" electric power supply to the water heater.

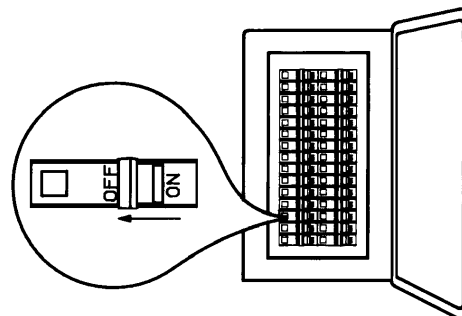


<b>⚠ WARNING</b>
<b>HAZARD OF ELECTRICAL SHOCK!</b> Before removing any access panels or servicing the water heater, make sure the electrical supply to the water heater is turned "OFF". <b>FAILURE TO DO THIS COULD RESULT IN DEATH, SERIOUS BODILY INJURY, OR PROPERTY DAMAGE.</b>

# Installation Instructions (cont'd)


2. The convertible element is located behind the lower access panel of the water heater. Remove the two screws securing the access panel, and remove panel.

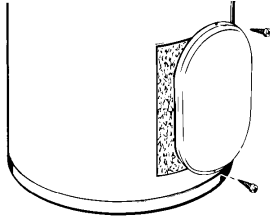


3. Remove the insulation block and pad.

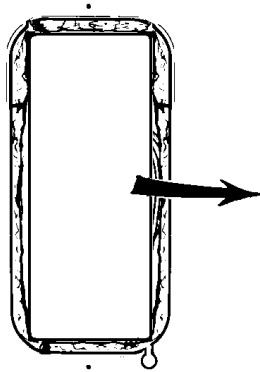


4. **Lower Element:** Lift out the tab as shown to unclip the terminal cover from the thermostat. The terminal cover can now be removed from the thermostat.

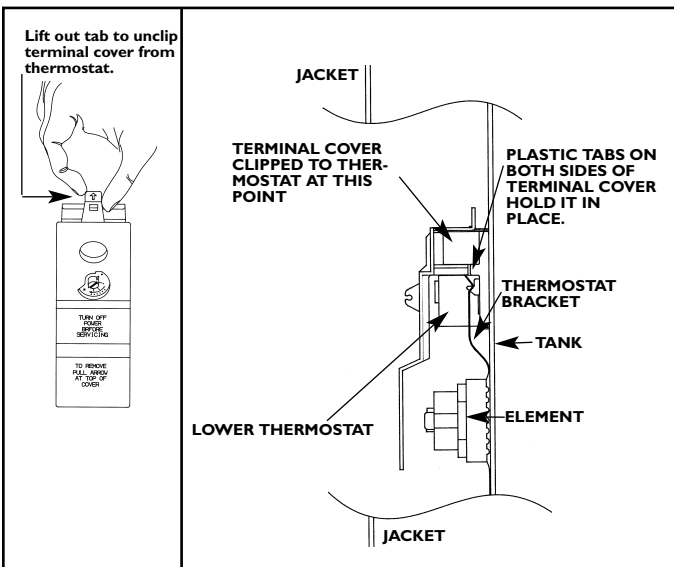


5. Remove the screws from terminal 2 of the element, and move the looped end of the wire aside.

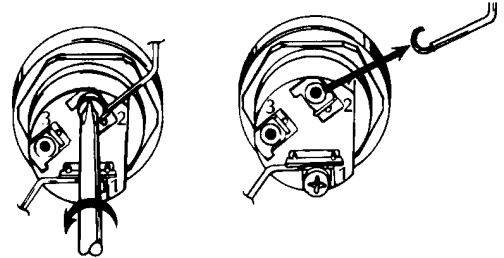

6. The buss bar is labeled 5500 W. Place the buss bar over terminals 2 and 3 with the 5500 W visible. Install the extra screw provided into terminal 3.

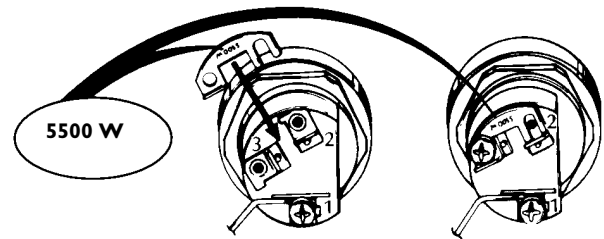

7. The wire removed from terminal 2 has a looped end. It must remain looped and now be placed (as shown) on top of the buss bar, over the opening of terminal 2, and secured using the remaining screw.

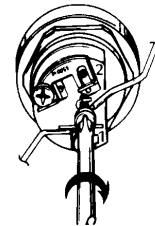

8. Tighten terminals 2 and 3 to ensure proper electrical connection.

**▲ WARNING**  
 Failure to tighten terminal screws can cause a fire which can result in DEATH, SERIOUS BODILY INJURY, OR PROPERTY DAMAGE.


# Installation Instructions (cont'd)

## Converting the Lower Element (cont'd)


9. Replace terminal cover on thermostat making sure that the locking tabs on the terminal cover are in place.

**⚠ WARNING**  
Make sure the thermostat is flush against the tank, the terminal cover is in place, and the insulation is replaced. Failure to do so can result in **DEATH, SERIOUS BODILY INJURY, OR PROPERTY DAMAGE.**


10. Replace the insulation block and pad so that it completely covers the thermostat and element.

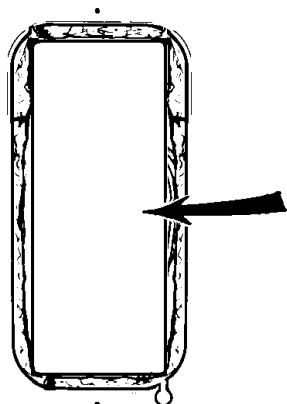

11. Replace the access panel.

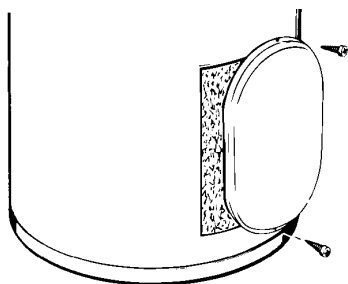

12. Complete wiring to the water heater, or if completed, turn "ON" electric power to the water heater after filling the tank with water.

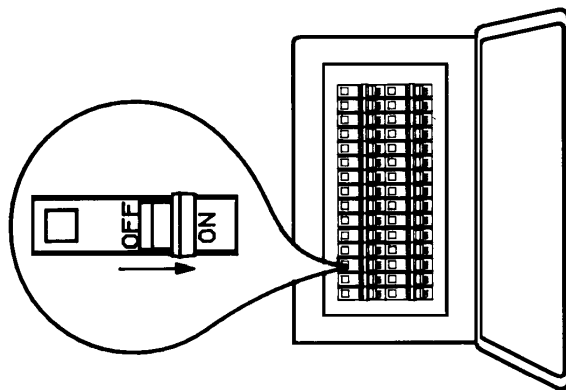


**⚠ CAUTION**  
Never use this water heater unless it is completely full of water. To prevent damage to the tank and heating element, the tank must be filled with water. Water must flow from the hot water faucet before turning "ON" power.


# Installation Instructions (cont'd)

## Wiring Diagrams




STANDARD WIRING FOR  
2 WIRE LEAD WATER HEATERS  
NON-SIMULTANEOUS OPERATION  
240 VOLT DOUBLE ELEMENT

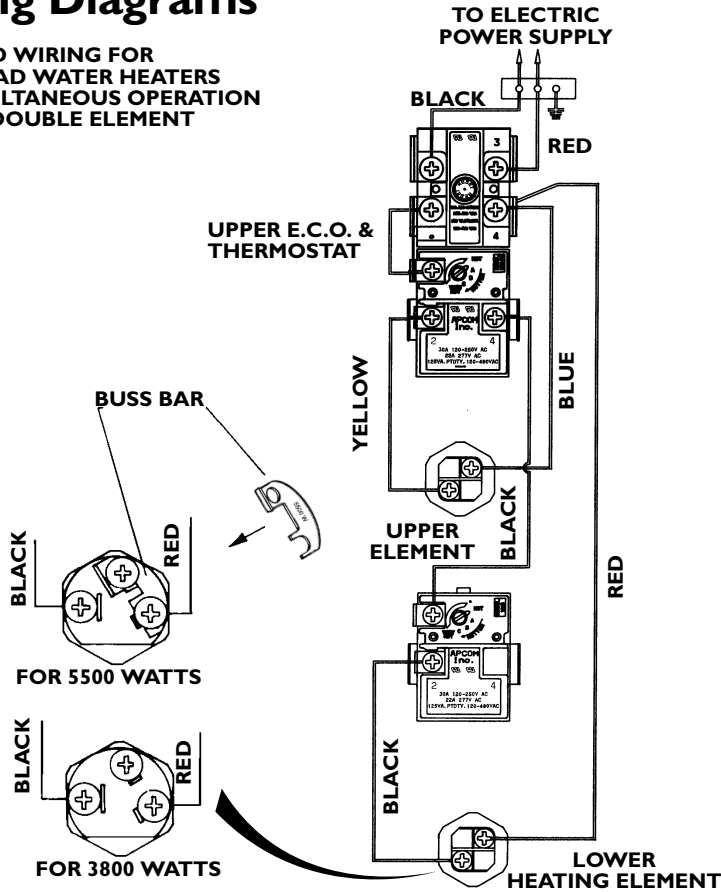

WIRING FOR 3 WIRE LEAD WATER HEATERS  
NON-SIMULTANEOUS OPERATION  
240 VOLT DOUBLE ELEMENT

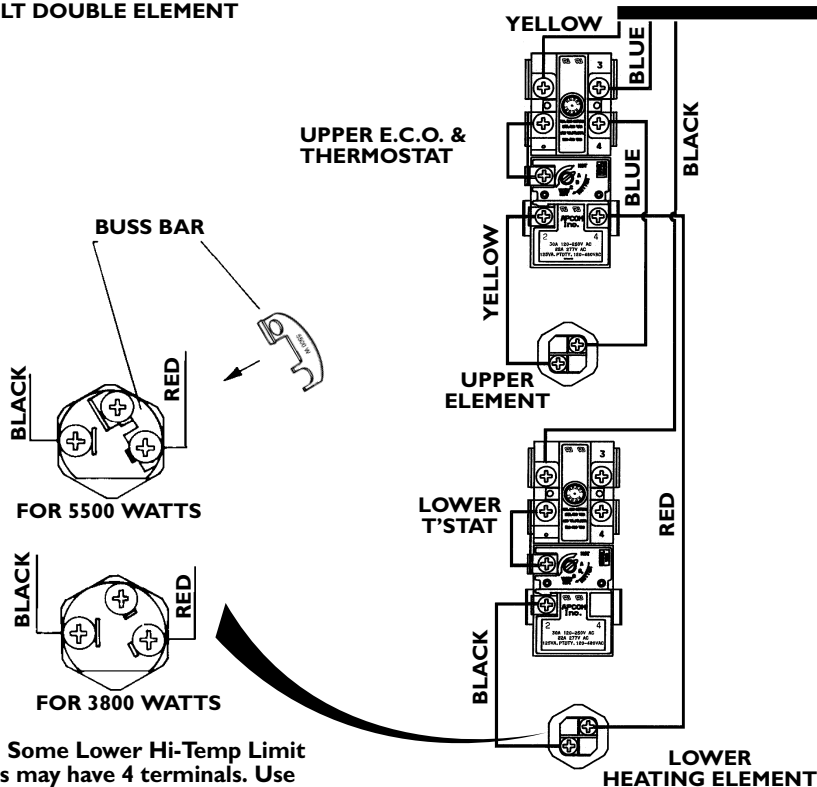

THREE TYPES OF FIELD CONNECTIONS YOU MAY HAVE

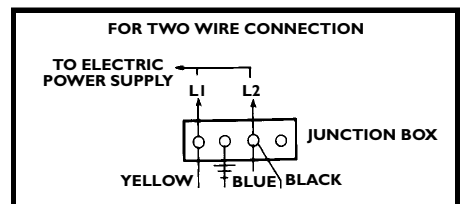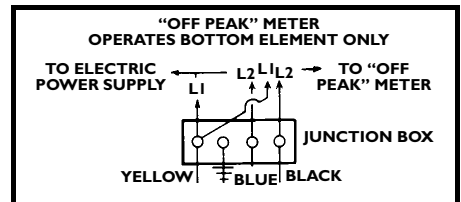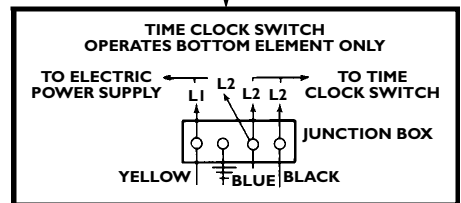

\*NOTE: Some Lower Hi-Temp Limit Switches may have 4 terminals. Use only the 2 terminals on left.

# Installation Instructions (cont'd)

## Wiring

### ▲ CAUTION

Never use this water heater unless it is completely full of water. To prevent damage to the tank and heating element, the tank must be filled with water. Water must flow from the hot water faucet before turning on power.

You must provide all wiring of the proper size outside of the water heater. You must obey local codes and electric company requirements when you install this wiring.

If you are not familiar with electric codes and practices, or if you have any doubt, even the slightest doubt, in your ability to connect the wiring to this water heater, obtain the service of a competent electrician. Contact your Sears salesperson to arrange for a professional electrician.

### ▲ WARNING

**WATER HEATERS EQUIPPED FOR ONE VOLTAGE ONLY:** This water heater is equipped for one type voltage only. Check the rating plate near the bottom access panel for the correct voltage. **DO NOT** use this water heater with any voltage other than the one shown on the model rating plate. Failure to use the correct voltage can cause problems which can result in **DEATH, SERIOUS BODILY INJURY, OR PROPERTY DAMAGE.** If you have any questions or doubts consult your electric company.

### ▲ CAUTION

If wiring from your fuse box or circuit breaker box was aluminum for your old water heater, replace it with copper wire. If you wish to reuse the existing aluminum wire, have the connection at the water heater made by a competent electrician. Contact your Sears salesperson to arrange for a professional electrician.

1. Provide a way to easily shut off the electric power when working on the water heater. This could be with a circuit breaker or fuse block in the entrance box or a separate disconnect switch.
2. Install and connect a circuit directly from the main fuse or circuit breaker box. This circuit must be the right size and have its own fuse or circuit breaker. Refer to the chart in the "Product Specifications" section for the correct size wire and fuse or circuit breaker.
3. If metal conduit is used for the grounding conductor:
  - A. The grounding electrode conductor shall be of copper, aluminum, or copperclad aluminum. The material shall be of one continuous length without a splice or joint.
  - B. Rigid metal conduit, intermediate metal conduit, or electrical metallic tubing may be used for the grounding means if conduit or tubing is terminated in fittings approved for grounding.

C. Flexible metal conduit or flexible metallic tubing shall be permitted for grounding if all the following conditions are met:

1. The length in any ground return path does not exceed 6 feet.
2. The circuit conductors contained therein are protected by overcurrent devices rated at 20 amperes or less.
3. The conduit or tubing is terminated in fittings approved for grounding.

For complete grounding details and all allowable exceptions, refer to the current edition of the National Electrical Code, NFPA 70.


4. A standard 1/2" conduit opening has been made in the water heater junction box for the conduit connection.
5. Wiring Diagrams (See Wiring Diagrams Section) have been supplied showing the two most common types of connections between the water heater and the power supply. You can easily see which type connection you have by removing the junction box cover on top of the water heater.

**A. Two Wire Connection Diagrams:** is the most common requiring you to simply connect red to red, black to black, and the ground wire to the green ground screw in the junction box of the water heater.

**B. Three Wire Connection Diagram:** is used when you are connecting the water heater to power a supply that has a "Time Clock" or "Off Peak" Meter. To make these connections refer to block 1 or 2 in this wiring diagram for the type of system you have.

**NOTE: If you have purchased a three wire connection water heater but you are not on a "Time Clock" or "Off Peak" meter and have a standard two wire connection power supply, simply follow the connection diagram in block 3 of the Three Wire Connection Diagram.**


6. Use wire nuts and connect the power supply wiring to the wires inside the water heater's junction.
7. The water heater must be electrically "grounded" by the installer. A green ground screw has been provided on the water heater's junction box. Connect ground wire to this location.
8. Replace the wiring junction cover using the screw provided.

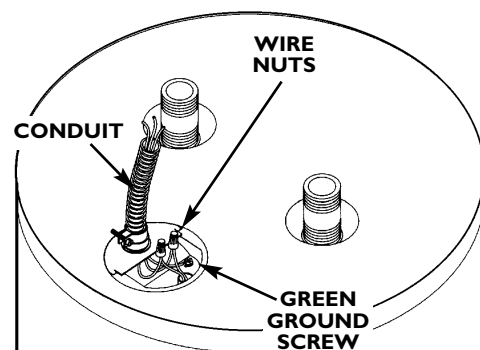

# Installation Instructions (cont'd)

## Installation Checklist

- Whether or not the element conversion is made, the model rating plate must be marked. Using a hard point ink pen, check the appropriate block within the model rating plate, which is located adjacent to the lower access panel.
- Is the fuse or circuit breaker size correct as shown in the chart in the "Product Specifications" section?
- Are the wires from the circuit breaker or fuse service to the water heater's junction box on the correct wire size (gauge) as shown in the chart in the "Product Specifications" section?
- Is the new temperature-pressure relief valve properly installed, and piped to an adequate drain? See "Temperature-Pressure Relief Valve" section.
- Is the water heater completely filled with water? See "Filling the Water Heater" instructions in the "Installation Instructions" section.
- Will a water leak damage anything? See "Facts to Consider About the Location" section.
- Are the cold and hot water lines connected to the water heater correctly? See "Water Piping" instructions in the "Installation Instructions" section.
- Is there adequate clearance for maintenance around the water heater?
- Do you need to call your electric company to check your wiring?

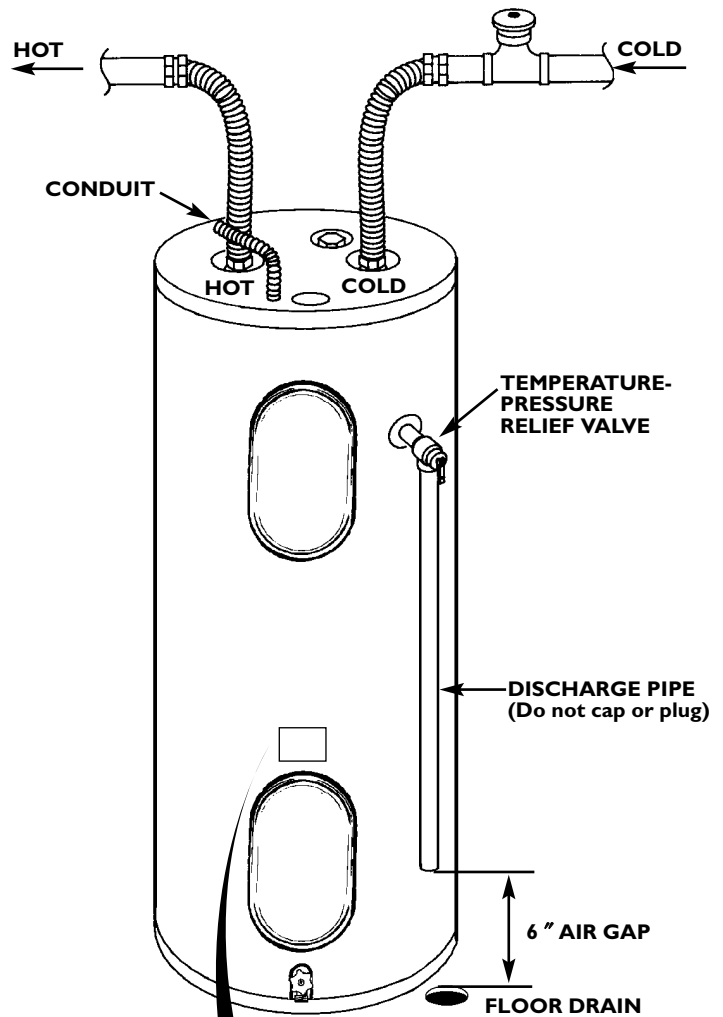

ELECTRIC WATER HEATER						ECO INSTALLED
IN CORRESPONDENCE RE-GARDING THIS HEATER ALWAYS MENTION MODEL & SERIAL NO'S.		RE-REGISTERED		LISTED 124N		
MODEL NUMBER		CAPACITY		SERIAL NUMBER		
FACTORY EQUIPPED WITH						U.S. GAL.
UPPER ELEMENT	LOWER ELEMENT	MAXIMUM	VOLTS	CHECK (✓) HERE	MAXIMUM HYDROSTATIC WORKING PRESSURE	150
WATTS	WATTS	WATTS	A.C. ONLY	IF INSTALLED AS	P.S.I.	
OPTIONAL WATTAGE	UPPER ELEMENT	LOWER ELEMENT	MAXIMUM	CHECK (✓) HERE	FACTORY EQUIPPED	
WATTS	WATTS	WATTS	IF CONVERTED		WARNING	SEE CONVERSION INSTRUCTION

**MODEL RATING PLATE**

# Service and Adjustment

## Temperature Regulation


### ⚠ WARNING

**HOTTER WATER CAN SCALD:** Water heaters are intended to produce hot water. Water heated to a temperature which will satisfy space heating, clothes washing, dish washing, and other sanitizing needs can scald and permanently injure you upon contact. Some people are more likely to be permanently injured by hot water than others. These include the elderly, children, the infirm, or physically/mentally handicapped. If anyone using hot water in your home fits into one of these groups or if there is a local code or state law requiring a certain temperature water at the hot water tap, then you must take special precautions. In addition to using the lowest possible temperature setting that satisfies your hot water needs, a means such as a mixing valve, shall be used at the hot water taps used by these people or at the water heater. Mixing valves are available at plumbing supply or hardware stores. Follow manufacturers instructions for installation of the valves. Before changing the factory setting on the thermostat, read the "Temperature Regulation" section in this manual.


### ⚠ WARNING

Never allow small children to use a hot water tap, or to draw their own bath water. Never leave a child or handicapped person unattended in a bathtub or shower.

The lower thermostat is factory set at a position which approximates 120°F (HOT) and is adjustable if a different water temperature is desired. Read all warnings in this manual and on the water heater before proceeding.

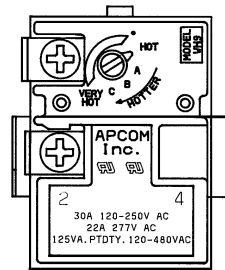

**ADJUSTABLE LOWER THERMOSTAT**  
(2 wire lead models)

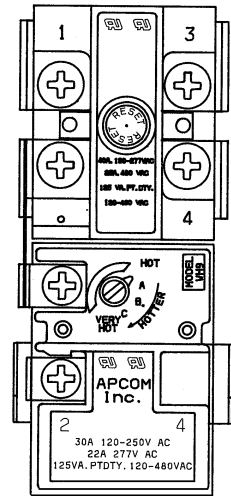


**ADJUSTABLE LOWER THERMOSTAT WITH HIGH LIMIT**  
(3 wire lead models)

## Thermostats

The thermostats of this water heater have been factory set at a position which approximates 120°F (HOT) to reduce the risk of scald injury.

The upper thermostat is factory set at a position which approximates 120°F (HOT) and is adjustable if a different water temperature is desired. Read all warnings in this manual and on the water heating before proceeding.

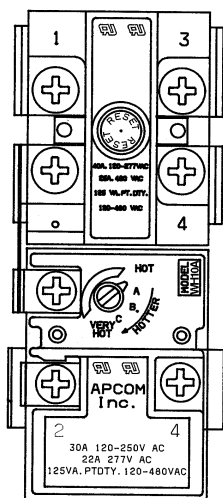

**ADJUSTABLE UPPER THERMOSTAT**

## Temperature Settings

**HOT**—Is a thermostat setting of approximately 120°F, which will supply hot water at the most economical temperatures.

**A**—Is a thermostat setting of approximately 130°F.

**B**—Is a thermostat setting of approximately 140°F.

**C**—Is a thermostat setting of approximately 150°F.

**VERY HOT**—Is a thermostat setting of approximately 160°F. It is recommended that the dial be set lower whenever possible.

**NOTE:** Water temperature range of 120°—140°F recommended by most dishwasher manufacturers.

Temperature Setting	Time to Produce 2nd & 3rd Degree Burns on Adult Skin
160°F	About 1/2 seconds
150°F	About 1-1/2 seconds
140°F	Less than 5 seconds
130°F	About 30 seconds
120°F	More than 5 minutes



# Service and Adjustment (cont'd)

## Upper and Lower Thermostat Adjustment

(Refer to thermostat illustrations under "Thermostats")


**NOTE:** It is not necessary to adjust the upper thermostat. However, if it is adjusted above the factory set point of 120°F (HOT) is recommended that it not be set higher than the lower thermostat setting.

The upper and lower thermostats are adjustable if a different water temperature is desired. Read all warnings in the "Temperature-Regulation" section before proceeding.

1. Turn "OFF" the electrical power to the water heater at the junction box.
2. Take off the upper and/or lower access panel, insulation block and pad.
3. The slotted adjustment (using a screwdriver) can be turned clockwise (↻) to increase the temperature setting or counter clockwise (↺) to decrease the temperature setting.
4. Replace the insulation block, pad and access panel.
5. Turn "ON" the power supply.

## Temperature-Pressure Relief Valve Operation

The temperature-pressure relief valve must be manually operated at least once a year.

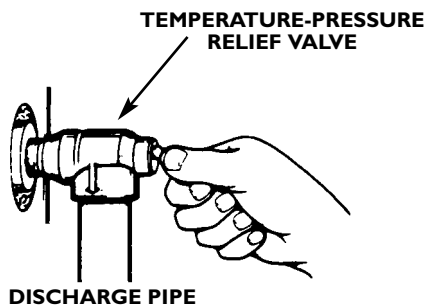

### ⚠ WARNING

The temperature-pressure relief valve must be manually operated at least once a year. Caution should be taken to ensure that (1) no one is in front of or around the outlet of the temperature-pressure relief valve discharge line, and (2) the water manually discharged will not cause any property damage or bodily injury. The water may be extremely hot.

If after manually operating the valve, it fails to completely reset and continues to release water, immediately close the cold water inlet to the water heater, follow the draining instructions, and replace the temperature-pressure relief valve with a new one.

Failure to install and maintain a new properly listed temperature-pressure relief valve will release the manufacturer from any claim which might result from excessive temperature or pressure.

### ⚠ WARNING

If the temperature-pressure relief valve on the appliance weeps or discharges periodically, this may be due to thermal expansion. Your water heater may have a check valve installed in the water line or a water meter with a check valve. Consult your local Sears Service Center for further information. Do not plug the temperature-pressure relief valve.

## Draining

The water heater should be drained if being shut down during freezing temperatures. Also periodic draining and cleaning of sediment from the tank may be necessary.

- Before beginning turn "OFF" the electric power supply to the water heater.

### ⚠ WARNING

**HAZARD OF ELECTRICAL SHOCK!** Before removing any access panels or servicing the water heater, make sure the electrical supply to the water heater is turned "OFF". Failure to do this could result in DEATH, SERIOUS BODILY INJURY, OR PROPERTY DAMAGE.

- CLOSE the cold water inlet valve to the water heater.
- OPEN a nearby hot water faucet and leave open to allow for draining.
- Connect a hose to the drain valve and terminate to an adequate drain or outdoors.
- OPEN the water heater drain valve to allow for tank draining.

**NOTE:** If the water heater is going to be shut down and drained for an extended period, the drain valve should be left open with hose connected allowing water to terminate to an adequate drain.

- Close the drain valve.
- Follow "Filling the Water Heater" instructions in the "Installation Instructions" section.
- Turn "ON" power to the water heater.

### ⚠ CAUTION

Never use this water heater unless it is completely full water. To prevent damage to the tank and heating element, the tank must be filled with water. Water must flow from the hot water faucet before turning "ON" power.


# Service and Adjustment (cont'd)

## Element Cleaning/ Replacement

**NOTE:** These instructions are written for element cleaning and element replacement for the lower element. If it is necessary to clean or replace the upper element, then repeat these instructions.

To remove the element from your tank in order to clean or replace it:

1. Before beginning turn "OFF" the electric power supply to the water heater.

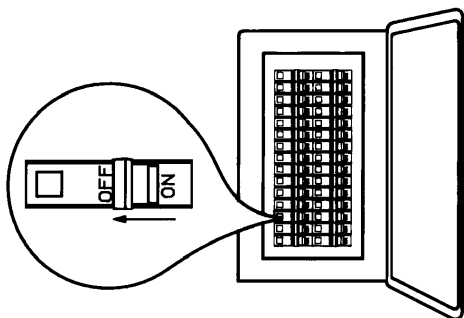


**⚠ WARNING**  
**HAZARD OF ELECTRICAL SHOCK!** Before removing any access panels or servicing the water heater, make sure the electrical supply to the water heater is turned "OFF". Failure to do this could result in **DEATH, SERIOUS BODILY INJURY, OR PROPERTY DAMAGE.**

2. Turn off the water supply to the water heater at the water shutoff valve or water meter.




3. Attach a hose to the water heater drain valve and put the other end in a floor drain or outdoors. Open the water heater drain valve. Open a nearby hot water faucet which will relieve pressure in the water heater and speed draining.

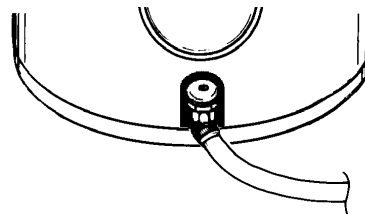


**⚠ WARNING**  
The water passing out of the drain valve may be extremely hot. To avoid being scalded, make sure all connections are tight and that the water flow is directed away from any person.

4. Remove the two screws securing the access panel, and remove panel.


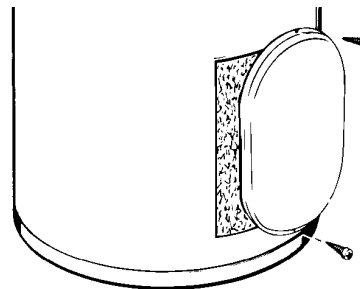


5. Remove the insulation block and pad.

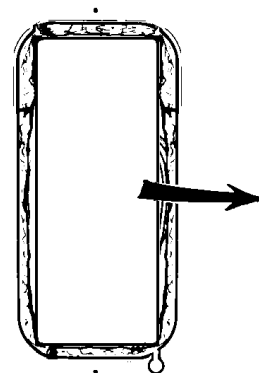


# Service and Adjustment (cont'd)

6. Lift out the tab as shown to unclip the terminal cover from the thermostat. The terminal cover can now be removed from the thermostat.

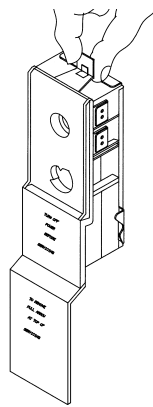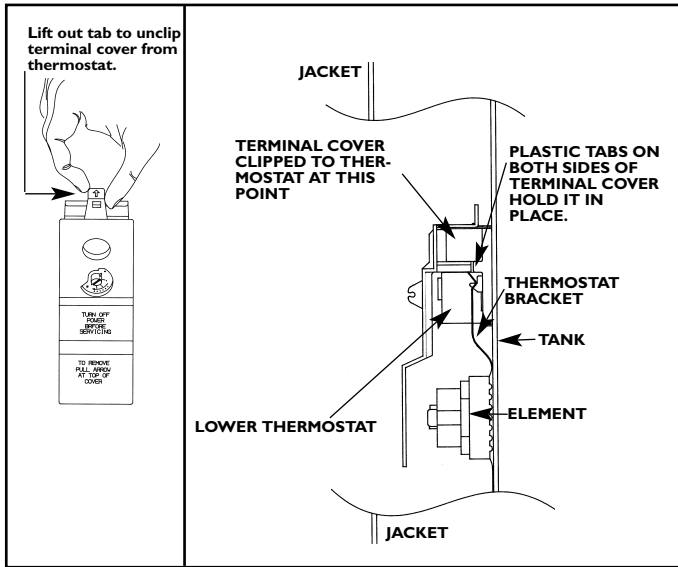

**TERMINAL COVER ON UPPER THERMOSTAT**

7. Disconnect the two wires on the element and unscrew the old element from the tank.

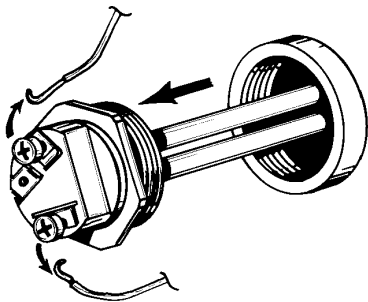


8. Clean the area around the element opening. Remove any sediment from or around the element opening and inside the tank.  
 9. If you are cleaning the element you have removed, do so by scraping or soaking in vinegar or a de-liming solution.

## ⚠ WARNING

Replacement elements must (1) be the same voltage and (2) no greater wattage than listed on the model rating plate affixed to the water heater.

10. A new gasket should be used in all cases to prevent a possible water leak. (See Element Gasket in the "Parts Order List" Chart). Place the new element gasket on the thread side of the cleaned or new element and screw into tank, securing tightly using an element wrench.

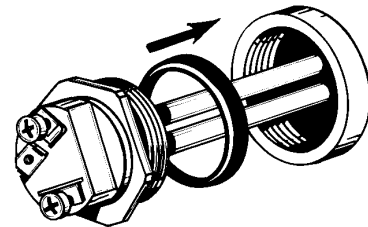


11. Close the water heater drain valve by turning the handle to the right (clockwise). The drain valve is on the lower front of the water heater.  
 12. Open the cold water supply valve to the water heater.  
**NOTE: The cold water supply valve must be left open when the water heater is in use.**  
 13. To insure complete filling of the tank, allow air to exit by opening the nearest hot water faucet. Allow water to run until a constant flow is obtained. This will let air out of the water heater and the piping.

## ⚠ CAUTION

Never use this water heater unless it is completely full of water. To prevent damage to the tank and heating element, the tank must be filled with water. Water must flow from the hot water faucet before turning "ON" power.


14. Check element for water leaks. If leakage occurs, tighten element or repeat steps 2 and 3, remove element and reposition gasket. Then repeat steps 10 through 14.  
 15. Reconnect the two wires to the element and then check to make sure the thermostat remains firmly against the surface of the tank.

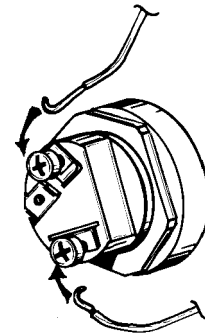


# Service and Adjustment (cont'd)

## Element Cleaning/ Replacement (cont'd)

16. Replace terminal cover on thermostat making sure that the locking tabs on the terminal cover are in place.
17. Replace the insulation block and pad so that it completely covers the thermostat and element.

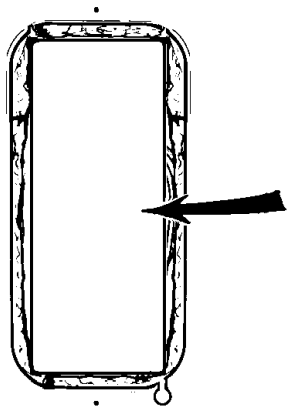

18. Replace access panel.
19. Turn "ON" electric power to water heater.

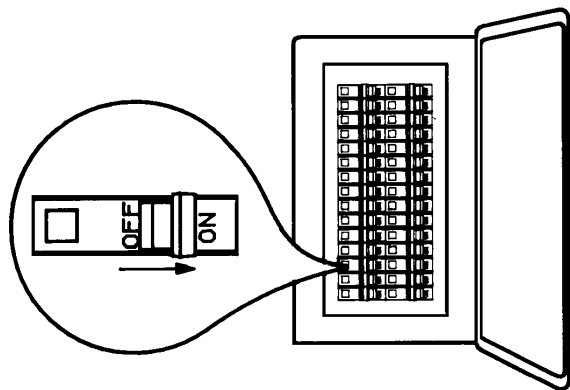

## Anode Rod Inspection

The anode rod is used to protect the tank from corrosion. Most hot water tanks are equipped with an anode rod. The submerged rod sacrifices itself to protect the tank. Instead of corroding the tank, water ions attack and eat away the anode rod. This does not affect the water's taste or color. The rod must be maintained to keep the tank in operating condition.

Anode deterioration depends on water conductivity, not necessarily water condition. A corroded or pitted anode rod indicates high water conductivity and should be checked and/or replaced more often than an anode rod that appears to be intact. Replacement of a depleted anode rod can extend the life of your water heater. Inspection should be conducted by a Sears service technician, and at a minimum should be checked annually after the warranty period.

## Drain Valve Washer Replacement

**NOTE: For replacement, use a  $\frac{1}{32}$ " x  $\frac{13}{64}$ " x  $\frac{1}{8}$ " thick washer available at your nearest hardware store. For ordering a replacement washer, refer to the "Parts Order List" section.**

- Before beginning turn "OFF" the electrical power supply to the water heater.

### ▲ WARNING

**HAZARD OF ELECTRICAL SHOCK! Before removing any access panels or servicing the water heater, make sure the electrical supply to the water heater is turned "OFF". Failure to do this could result in DEATH, SERIOUS BODILY INJURY, OR PROPERTY DAMAGE.**

- Follow "Draining" instructions. See "Draining" section.
- Turning counter clockwise, remove the hex cap below the screw handle.
- Remove the washer and put the new one in place.
- Screw the handle and cap assembly back into the drain valve and retighten using a wrench. **DO NOT OVER TIGHTEN.**
- Follow "Filling the Water Heater" instructions in the "Installation Instructions" section.
- Check for leaks.
- Turn "ON" electric power to the water heater.



## Service

Before calling for repair service, read the Start Up Conditions and Operational Conditions found in the Troubleshooting Guide of this manual.

If a condition persists or you are uncertain about the operation of the water heater, let a qualified person check it out.

**Contact SEARS Repair Services at 1-800-4-MY-HOME (1-800-469-4663).**

# Troubleshooting Guide



## Start Up Conditions

### THERMAL EXPANSION

Water supply systems may, because of such events as high line pressure, frequent cut-offs, the effects of water hammer among others, have installed devices such as pressure reducing valves, check valves, back flow preventers, etc...to control these types of problems. When these devices are not equipped with an internal by-pass, and no other measures are taken, the devices cause the water system to be closed. As water is heated, it expands (thermal expansion) and closed systems do not allow for the expansion of heated water.

The water within the water heater tank expands as it is heated and increases the pressure of the water system. If the relieving point of the water heater's temperature-pressure relief valve is reached, the valve will relieve the excess pressure. **The temperature-pressure relief valve is not intended for the constant relief of thermal expansion.** This is an unacceptable condition and must be corrected.

It is recommended that any devices installed which could create a closed system have a by-pass and/or the system have an expansion tank to relieve the pressure built by thermal expansion. Thermal expansion tanks are available from Sears stores and through the Sears Service Centers. Contact the local plumbing inspector, water supplier and/or the Sears Service Center for assistance in controlling these situations.

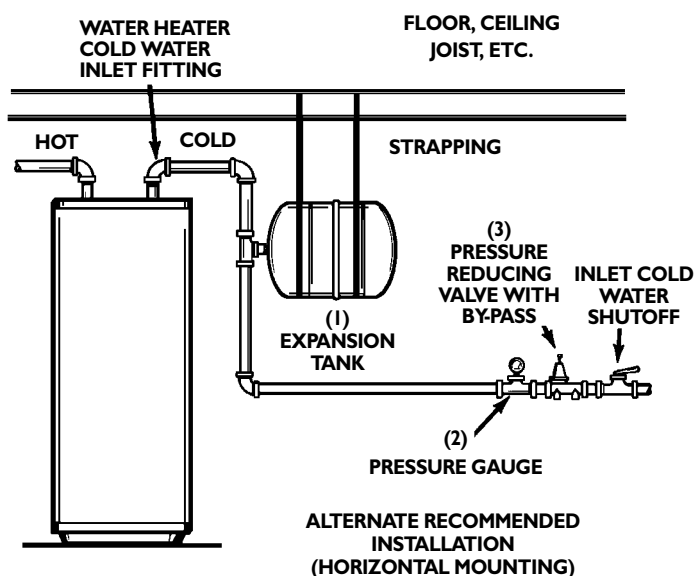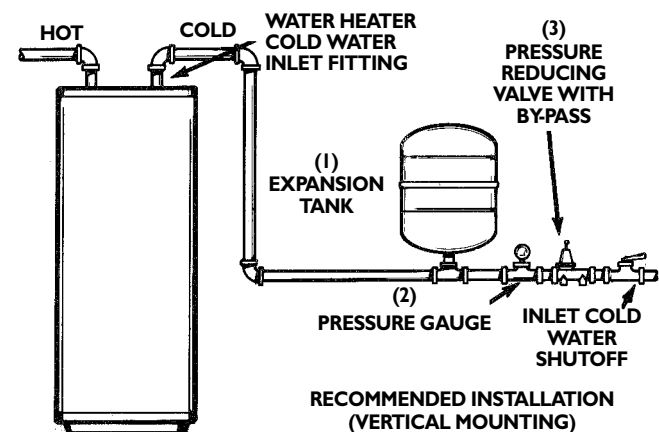

### Thermal Expansion Tank Specifications

Model Number	Tank Capacity In Gallons	Dimensions in Inches		Pipe Fitting On Tank
		Diameter	Length	
153.331020	2	8 inches	12¾ inches	¾" Male
153.331050	5	11 inches	14¾ inches	¾" Male

### Expansion Tank Sizing Chart

Expansion Tank Capacity Needed	Inlet* Water Pressure	Water Heater Capacity (Gallons)				
		30	40	50	66	80
Expansion Tank Capacity Needed	40psi	2	2	2	5	5
	50psi	2	2	2	5	5
	60psi	2	2	5	5	5
	70psi	2	2	5	5	5
	80psi	2	5	5	5	5

\*Highest recorded inlet water pressure in a 24 hour period or regulated water pressure.

**NOTE:** Expansion tanks are pre-charged with a 40 psi air charge. If the inlet water pressure is higher than 40 psi, the expansion tank's air pressure must be adjusted to match that pressure, but must not be higher than 80 psi.

### STRANGE SOUNDS

Possible noises due to expansion and contraction of some metal parts during periods of heat-up and cool-down do not represent harmful or dangerous conditions.

# Troubleshooting Guide

## Operational Conditions

### SMELLY WATER

In each water heater there is installed at least one anode rod (see parts section) for corrosion protection of the tank. Certain water conditions will cause a reaction between this rod and the water. The most common complaint associated with the anode rod is one of a “rotten egg smell”. This odor is derived from hydrogen sulfide gas dissolved in the water. The smell is the result of four factors which must all be present for the odor to develop:

- a concentration of sulfate in the supply water.
- little or no dissolved oxygen in the water.
- a sulfate reducing bacteria within the water heater. (This harmless bacteria is non-toxic to humans.)
- an excess of active hydrogen in the tank. This is caused by the corrosion protective action of the anode.

Smelly water may be eliminated or reduced in some water heater models by replacing the anode(s) with one of less active material, and then chlorinating the water heater tank and all hot water lines. Contact the local Sears Service Center for further information concerning an Anode Replacement Kit #9001453 and this Chlorination Treatment.

If the smelly water persists after the anode replacement and chlorination treatment, we can only suggest that continuous chlorination and filtering conditioning equipment be considered to eliminate the water problem.

**Do not remove the anode leaving the tank unprotected. By doing so, all warranty on the water heater tank is voided.**

### “AIR” IN HOT WATER FAUCETS

#### ▲ WARNING

**HYDROGEN GAS:** Hydrogen gas can be produced in a hot water system that has not been used for a long period of time (generally two weeks or more). Hydrogen gas is extremely flammable and explosive. To prevent the possibility of injury under these conditions, we recommend the hot water faucet be opened for several minutes at the kitchen sink before any electrical appliances which are connected to the hot water system are used (such as a dishwasher or washing machine). If hydrogen gas is present, there will probably be an unusual sound similar to air escaping through the pipe as the hot water faucet is opened. There must be no smoking or open flame near the faucet at the time it is open.

### RUMBLING NOISE

In some water areas, scale or mineral deposits will build up on your heating elements. This buildup will cause a rumbling noise. Follow “Element Cleaning/Replacement” instructions to clean and replace the elements.


### HIGH TEMPERATURE SHUT OFF SYSTEM

The water heater has a high limit shut off system with a reset button located on the thermostat.

Follow the resetting instructions which refer to the high limit behind the access panel.

**NOTE: If your water heater is connected to an “OFF PEAK” clock, and uses the “3 wire lead” wiring diagram in the “Wiring Diagram” section, then the water heater will have a hi-limit on both the upper and lower thermostats. Follow the instructions to reset the hi-limit behind the upper and lower access panels.**

- Before beginning, turn “OFF” electrical power supply to the water heater.

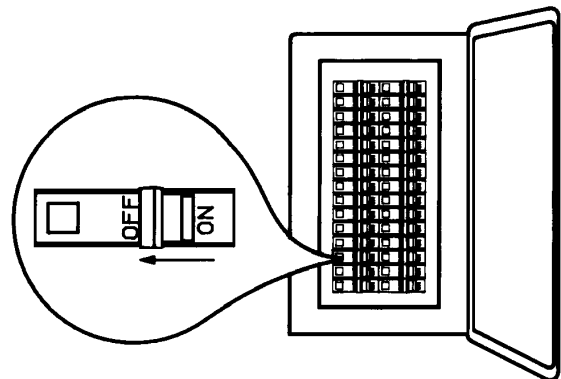


#### ▲ WARNING

**HAZARD OF ELECTRICAL SHOCK!** Before removing any access panels or servicing the water heater, make sure the electrical supply to the water heater is turned “OFF”. Failure to do this could result in DEATH, SERIOUS BODILY INJURY, OR PROPERTY DAMAGE.

# Troubleshooting Guide (cont'd)

## HIGH TEMPERATURE SHUT OFF SYSTEM (cont'd)

- Remove the two screws securing the access panel and remove panel.
- Remove the insulation block and pad.
- Reset the high limit by pushing in the red button marked "RESET".

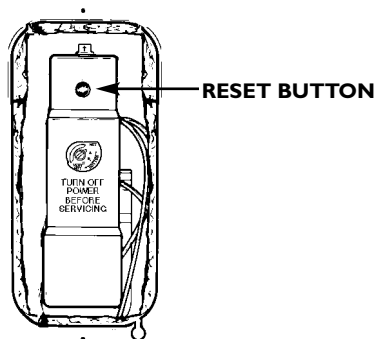

- Replace the insulation block and pad so that it completely covers the thermostat and element.
- Replace the access panel.
- Turn "ON" electric power to the water heater.

### **▲ CAUTION**

**If the high limit must be reset again, call Sears Service Department to find out why the high limit turned "OFF" the electric power.**

## NOT ENOUGH OR NO HOT WATER

- In a new installation, the water heater may not be properly connected. Make sure the cold water supply valve is open. Review and check piping installation. Make sure that the cold water line is connected to the cold water inlet to the water heater and the hot water line to the hot water outlet on the water heater.
- Make sure the electrical supply to your water heater is "ON".
- Check for loose or blown fuses in your water heater circuit. Circuit breakers weaken with age and may not handle their rated load and should be replaced.
- Make certain the disconnect switch, if used, is in the "ON" position.
- Check to see the electric service to your house has not been interrupted. If this is the case, contact the electric company.
- Are the thermostats set to the desired temperature? See "Temperature Regulation" section.
- If you had experienced very hot water and now no hot water, the problem may be due to the high temperature shut off system. See "High Temperature Shut Off System" in the "Troubleshooting" section.
- During very cold weather, the incoming water will also be colder and it will require a longer time to become heated.
- The hot water usage may exceed the capacity of the water heater. If so, wait for water heater to recover after abnormal demand. Also examine pipes and faucets for possible water leaks.
- If you can not determine the problem, then call the Sears Service Department.

## WATER IS TOO HOT

Adjust the thermostat to a lower setting. See the "Temperature Regulation" section.

# Troubleshooting Guide (cont'd)

## Leakage Checkpoints

Use this guide to check a “Leaking” water heater. Many suspected “Leakers” are not leaking tanks. Often the source of the water can be found and corrected.

If you are not thoroughly familiar with electric codes, the water heater, and safety practices, contact your local Sears Service Center to check the water heater.

- (A) \*Condensation may be seen on pipes in humid weather or pipe connections may be leaking.
- (B) Small amounts of water from temperature-pressure relief valve may be due to thermal expansion or high water pressure in your area.
- (C) \*The temperature-pressure relief valve may be leaking at the tank fitting.
- (D) The elements may be leaking at the tank fitting.

### ▲ WARNING

**HAZARD OF ELECTRICAL SHOCK! Before removing any access panels or servicing the water heater, make sure the electrical supply to the water heater is turned “OFF”. Failure to do this could result in DEATH, SERIOUS BODILY INJURY, OR PROPERTY DAMAGE.**

Turn electrical power “OFF”, remove access panels, insulation block and pad. If leaking around elements, follow proper draining instructions and remove element. Reposition or replace gasket on element. Place element into opening and tighten securely. Then follow “Filling the Water Heater” instructions in the “Installation Instructions” section.


- (E) Water from drain valve may be due to the valve being opened slightly.
- (F) \*The drain valve may be leaking at the tank fitting.
- (G) \*Water in the water heater bottom or on the floor may be from condensation, loose connections or the temperature-pressure relief valve. DO NOT replace the water heater until a full inspection of all possible water sources is made and necessary corrective steps taken.

Leakage from other appliances, water lines, or ground seepage should also be checked.

**NOTE: To check where threaded portion enters tank, insert cotton swab between jacket opening and fitting. If cotton is wet, follow “Draining” instructions in the “Service and Adjustment” section and then remove fitting. Put pipe dope or teflon tape on the threads and replace. Then follow “Filling the Water Heater” instructions in the “Installation Instructions” section.**

### ▲ CAUTION

**Read this manual first, then before checking the water heater make sure the electric supply has been turned “OFF”, and never turn the electric supply “ON” before the tank is completely full of water.**

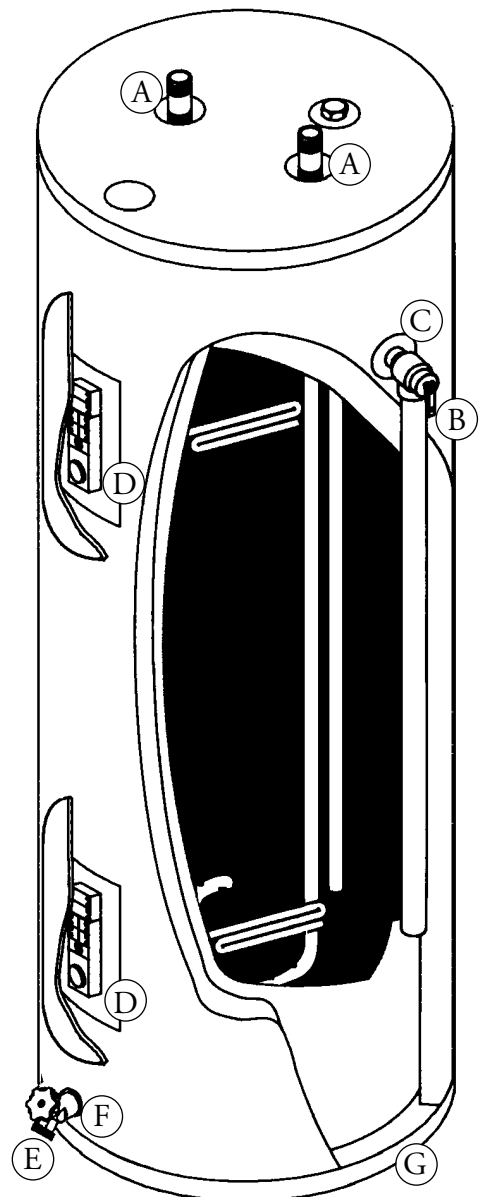



# Notes

# Parts Order List

KENMORE POWER MISER™ 9 ELECTRIC WATER HEATERS  
 MODEL NUMBERS:

153.329260      40 Gal. Short  
 153.329261      40 Gal. Short

**NOTE: A**

**UPPER ELEMENT:** These water heaters are equipped with 3800 watt elements.


**LOWER ELEMENT:** These water heaters are equipped with factory installed convertible elements, which can be operated at 3800 watts or 5500 watts. Convertible elements are not offered as replacement parts.

**ELEMENT ORDERING INFORMATION**

If a replacement 3800 watt, 240 volt element is needed, order item number 42 31906 replacement element. If at the time of installation, the water heater was converted to operate at 5500 watts, order item number 42 31908 replacement element. (See model rating plate "If Converted" box).

**NOTE: B**

These water heaters are equipped with a Roto-Swirl™ dip tube to retard a build-up of dissolved solids.

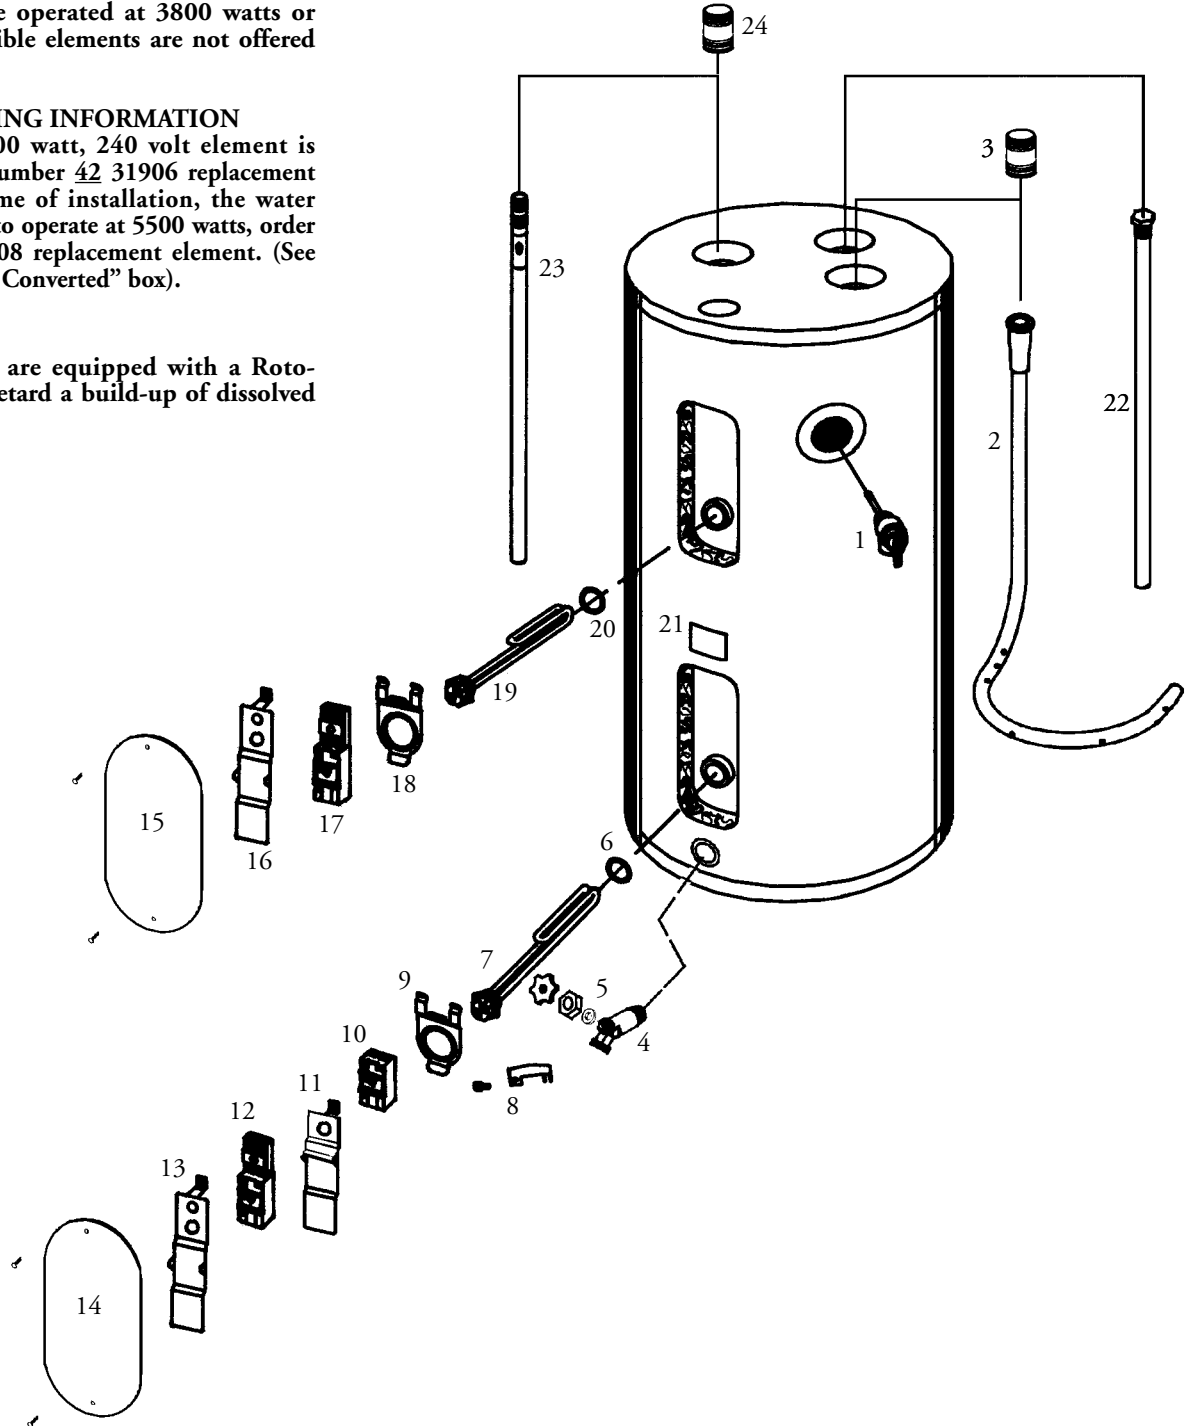

# Parts Order List (cont'd)

**KENMORE POWER MISER™ 9 ELECTRIC WATER HEATERS**  
**MODEL NUMBERS:**

153.329260      40 Gal. Short  
 153.329261      40 Gal. Short

KEY NO.	PART DESCRIPTION	MODEL NUMBERS	
		153.329260	153.329261
		PART NUMBERS	
1.	Temperature-Pressure Relief Valve*	42 33086	42 33086
2.	Roto-Swirl™ Dip Tube (See NOTE "B" page 26)	9001986	9001986
3.	Nipple (Cold Inlet) w/Heat Traps	9003931	9003931
4.	Drain Valve	9003464	9003464
5.	Drain Valve Washer ( $\frac{17}{32}$ " x $\frac{13}{64}$ " x $\frac{1}{8}$ " thick)**	9001584	9001584
6.	Element Gasket	9000308	9000308
7.	Lower Element* (See NOTE "A" on page 26)	3800 Watt	3800 Watt
		42 31906	42 31906
		5500 Watt	5500 Watt
		42 31908	42 31908
8.	Buss Bar Kit	9001591	9001591
9.	Thermostat Bracket	9000309	9000309
10.	2 Pole Thermostat* (Two Wire Lead Models††)	42 31919	—
11.	Terminal Cover & Barrier	9002276	—
12.	Lower Thermostat w/Hi Limit* (Three Wire Lead Models††)	—	42 31918
13.	Terminal Cover	—	9002303
14.	Lower Access Panel	9002671	9002671
15.	Upper Access Panel	9002671	9002671
16.	Terminal Cover	9002303	9002303
17.	Upper Thermostat w/Hi Limit*	42 31917	42 31917
18.	Thermostat Bracket	9000309	9000309
19.	Upper Element* (See NOTE "A" on page 26)	42 31906	42 31906
20.	Element Gasket	9000308	9000308
21.	Model Rating Plate †	0270182	0270182
22.	Primary Anode Rod	9003922	9003922
23.	Secondary Anode w/Nipple (Hot Outlet)w/HT	9003938	9003938
24.	Nipple (Hot Outlet) w/Heat Traps***	9003931	9003931
#	Manual	184726-000	

\*These parts are also available at most Sears retail stores.

\*\*Also available at most hardware stores.

\*\*\*When secondary anode w/nipple not provided.

†Replaced only on return of damaged plate.

#Not Illustrated

Now that you have purchased this water heater, should a need ever exist for repair parts or service, simply contact any SEARS Service Center or call 1-800-4-MY-HOME (1-800-469-4663). Be sure to provide all pertinent facts when you call or visit.

All parts listed may be ordered from any SEARS Service Center, most Sears stores and by calling 1-800-366-PART (1-800-366-7278).

If the parts you need are not stocked locally, your order will be electronically transmitted to a SEARS Repair Parts Distribution Center for handling.

The model number of the water heater will be found on the model rating plate located above the access panel.

**WHEN ORDERING REPAIR PARTS, ALWAYS GIVE THE FOLLOWING INFORMATION:**

**MODEL NUMBER                      PART DESCRIPTION**  
**SERIAL NUMBER                    PART NUMBER**

**THIS IS A REPAIR PARTS LIST, NOT A PACKING LIST.**

# Parts Order List (cont'd)

KENMORE POWER MISER™ 9 ELECTRIC WATER HEATERS  
 MODEL NUMBERS:

153.329360	30 Gal.
153.329361	30 Gal.
153.329460	40 Gal.
153.329461	40 Gal.
153.329560	50 Gal.

NOTE: A

**UPPER ELEMENT:** These water heaters are equipped with 3800 watt elements.


**LOWER ELEMENT:** These water heaters are equipped with factory installed convertible elements, which can be operated at 3800 watts or 5500 watts. Convertible elements are not offered as replacement parts.

### ELEMENT ORDERING INFORMATION

If a replacement 3800 watt, 240 volt element is needed, order item number 42 31906 replacement element. If at the time of installation, the water heater was converted to operate at 5500 watts, order item number 42 31908 replacement element. (See model rating plate "If Converted" box).

NOTE: B

These water heaters are equipped with a Roto-Swirl™ dip tube to retard a build-up of dissolved solids.

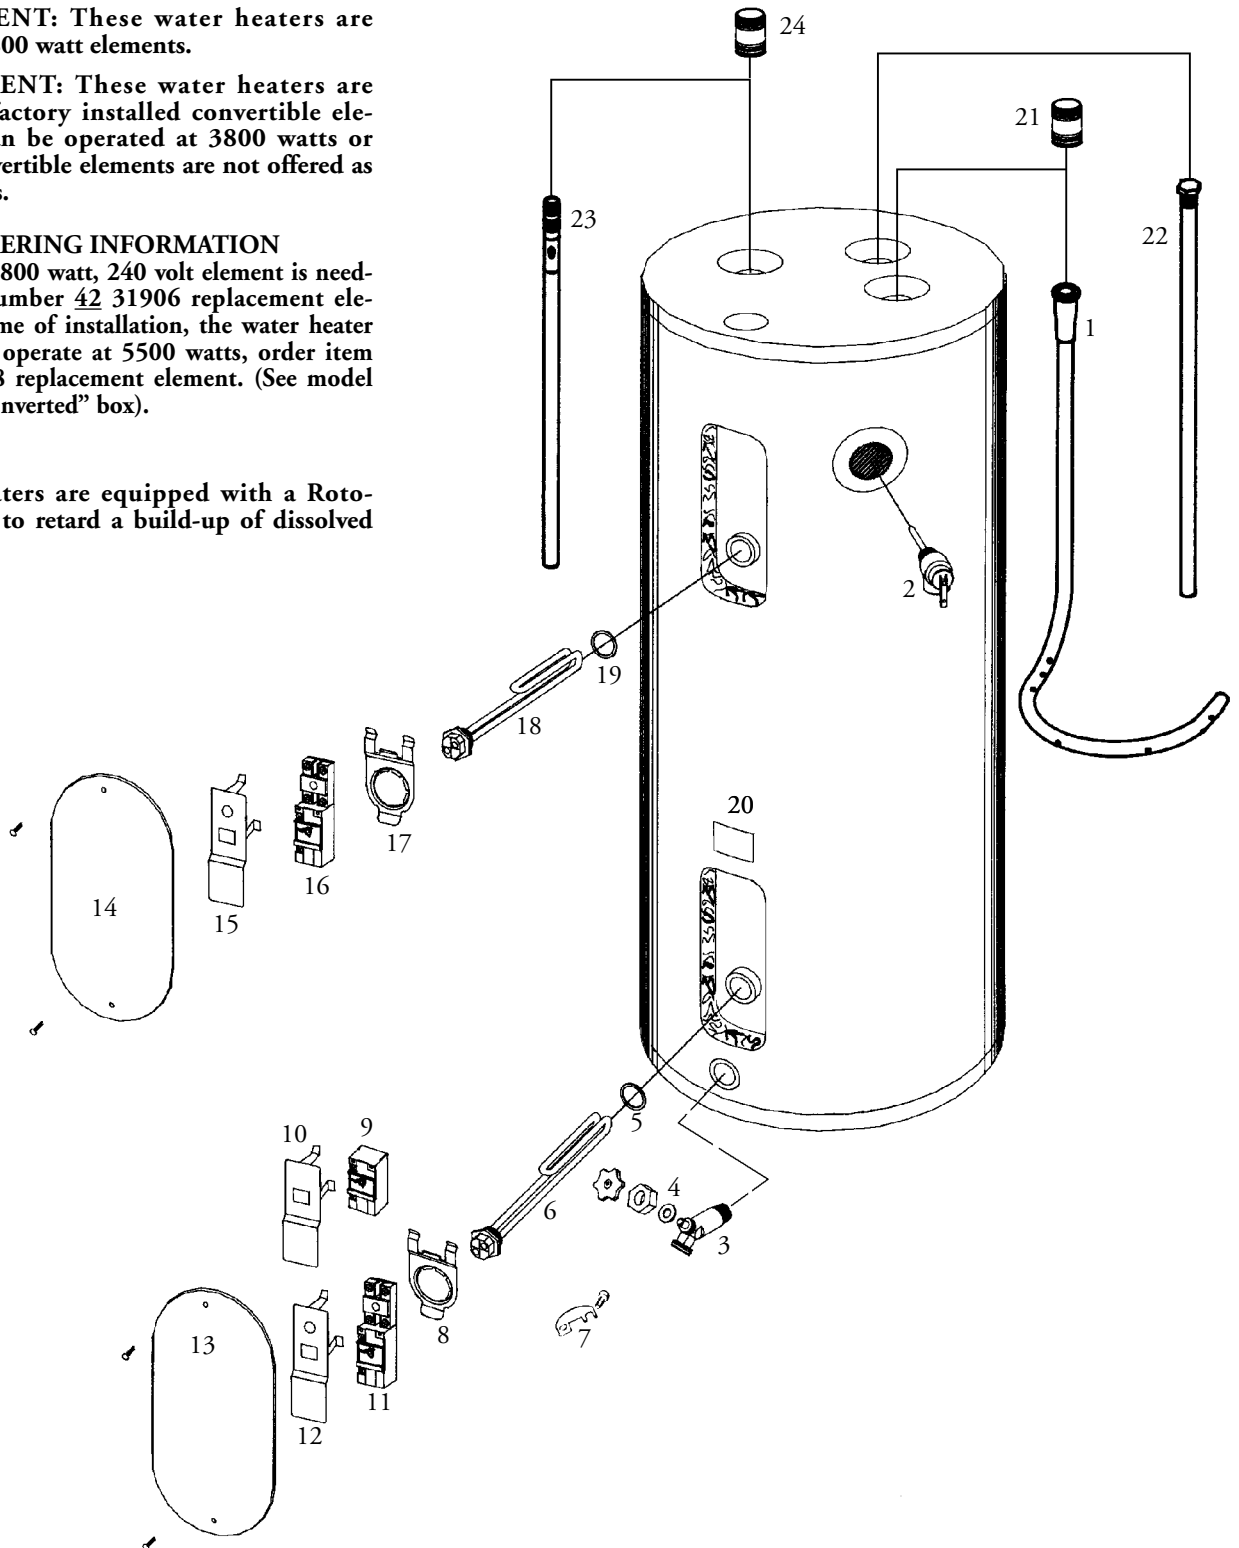

# Parts Order List (cont'd)

KENMORE POWER MISER™ 9 ELECTRIC WATER HEATERS  
MODEL NUMBERS:

153.329360 30 Gal.  
153.329361 30 Gal.  
153.329460 40 Gal.  
153.329461 40 Gal.  
153.329560 50 Gal.

KEY NO.	PART DESCRIPTION	MODEL NUMBERS				
		153.329360	153.329361	153.329460	153.329461	153.329560
1.	Roto-Swirl™ Dip Tube (See NOTE "B" page 28)	9003501	9003501	9003929	9003929	9003919
2.	Temperature-Pressure Relief Valve*	42 33086	42 33086	42 33086	42 33086	42 33086
3.	Drain Valve	9003911	9003911	9003911	9003911	9003911
4.	Drain Valve Washer (17/32" x 13/64" x 1/8" thick)**	9001584	9001584	9001584	9001584	9001584
5.	Element Gasket	9000308	9000308	9000308	9000308	9000308
6.	Lower Element* (See NOTE "A" page 28)	3800 Watt	3800 Watt	3800 Watt	3800 Watt	3800 Watt
		42 31906	42 31906	42 31906	42 31906	42 31906
		5500 Watt	5500 Watt	5500 Watt	5500 Watt	5500 Watt
		42 31908	42 31908	42 31908	42 31908	42 31908
7.	Buss Bar Kit	9001591	9001591	9001591	9001591	9001591
8.	Thermostat Bracket	9000309	9000309	9000309	9000309	9000309
9.	2 Pole Thermostat* (Two Wire Lead Models††)	42 31919	—	42 31919	—	42 31919
10.	Terminal Cover	9002276	—	9002276	—	9002276
11.	Lower Thermostat w/Hi Limit* (Three Wire Lead Models††)	—	42 31918	—	42 31918	—
12.	Terminal Cover & Barrier	—	9002303	—	9002303	—
13.	Lower Access Panel	9002671	9002671	9002671	9002671	9002671
14.	Upper Access Panel	9002671	9002671	9002671	9002671	9002671
15.	Terminal Cover	9002303	9002303	9002303	9002303	9002303
16.	Upper Thermostat w/Hi Limit*	42 31917	42 31917	42 31917	42 31917	42 31917
17.	Thermostat Bracket	9000309	9000309	9000309	9000309	9000309
18.	Upper Element* (See NOTE "A" page 28)	42 31906	42 31906	42 31906	42 31906	42 31906
19.	Element Gasket	9000308	9000308	9000308	9000308	9000308
20.	Model Rating Plate †	0270182	0270182	0270182	0270182	0270182
21.	Nipple (Cold Inlet) w/Heat Traps	9003931	9003931	9003909	9003909	9003931
22.	Primary Anode Rod	9003927	9003927	9003928	9003928	9003729
23.	Secondary Anode w/Nipple (Hot Outlet) w/HT	9003937	9003937	9003930	9003930	9003937
24.	Nipple (Hot Outlet) w/Heat Traps***	9003931	—	9003909	—	9003931
#	Manual	184726-000				

\*These parts are also available at most Sears retail stores.

\*\*Also available at most hardware stores.

\*\*\*When secondary anode w/nipple not provided.

†Replaced only on return of damaged plate.

††Refer to Wiring Diagram Section for verification.

#Not Illustrated

Now that you have purchased this water heater, should a need ever exist for repair parts or service, simply contact any SEARS Service Center or call 1-800-4-MY-HOME (1-800-469-4663). Be sure to provide all pertinent facts when you call or visit.

All parts listed may be ordered from any SEARS Service Center, most Sears stores and by calling 1-800-366-PART (1-800-366-7278).

If the parts you need are not stocked locally, your order will be electronically transmitted to a SEARS Repair Parts Distribution Center for handling.

The model number of the water heater will be found on the model rating plate located above the access panel.

**WHEN ORDERING REPAIR PARTS, ALWAYS GIVE THE FOLLOWING INFORMATION:**

**MODEL NUMBER**                      **PART DESCRIPTION**  
**SERIAL NUMBER**                    **PART NUMBER**

**THIS IS A REPAIR PARTS LIST, NOT A PACKING LIST.**

# Parts Order List (cont'd)

KENMORE POWER MISER™ 9 ELECTRIC WATER HEATERS  
MODEL NUMBERS:

153.329561	50 Gal.
153.329660	66 Gal.
153.329661	66 Gal.
153.329860	80 Gal.
153.329861	80 Gal.

**NOTE: A**

**UPPER ELEMENT:** These water heaters are equipped with 3800 watt elements.


**LOWER ELEMENT:** These water heaters are equipped with factory installed convertible elements, which can be operated at 3800 watts or 5500 watts. Convertible elements are not offered as replacement parts.

**ELEMENT ORDERING INFORMATION**

If a replacement 3800 watt, 240 volt element is needed, order item number 42 31906 replacement element. If at the time of installation, the water heater was converted to operate at 5500 watts, order item number 42 31908 replacement element. (See model rating plate "If Converted" box).

**NOTE: B**

These water heaters are equipped with a Roto-Swirl™ dip tube to retard a build-up of dissolved solids.

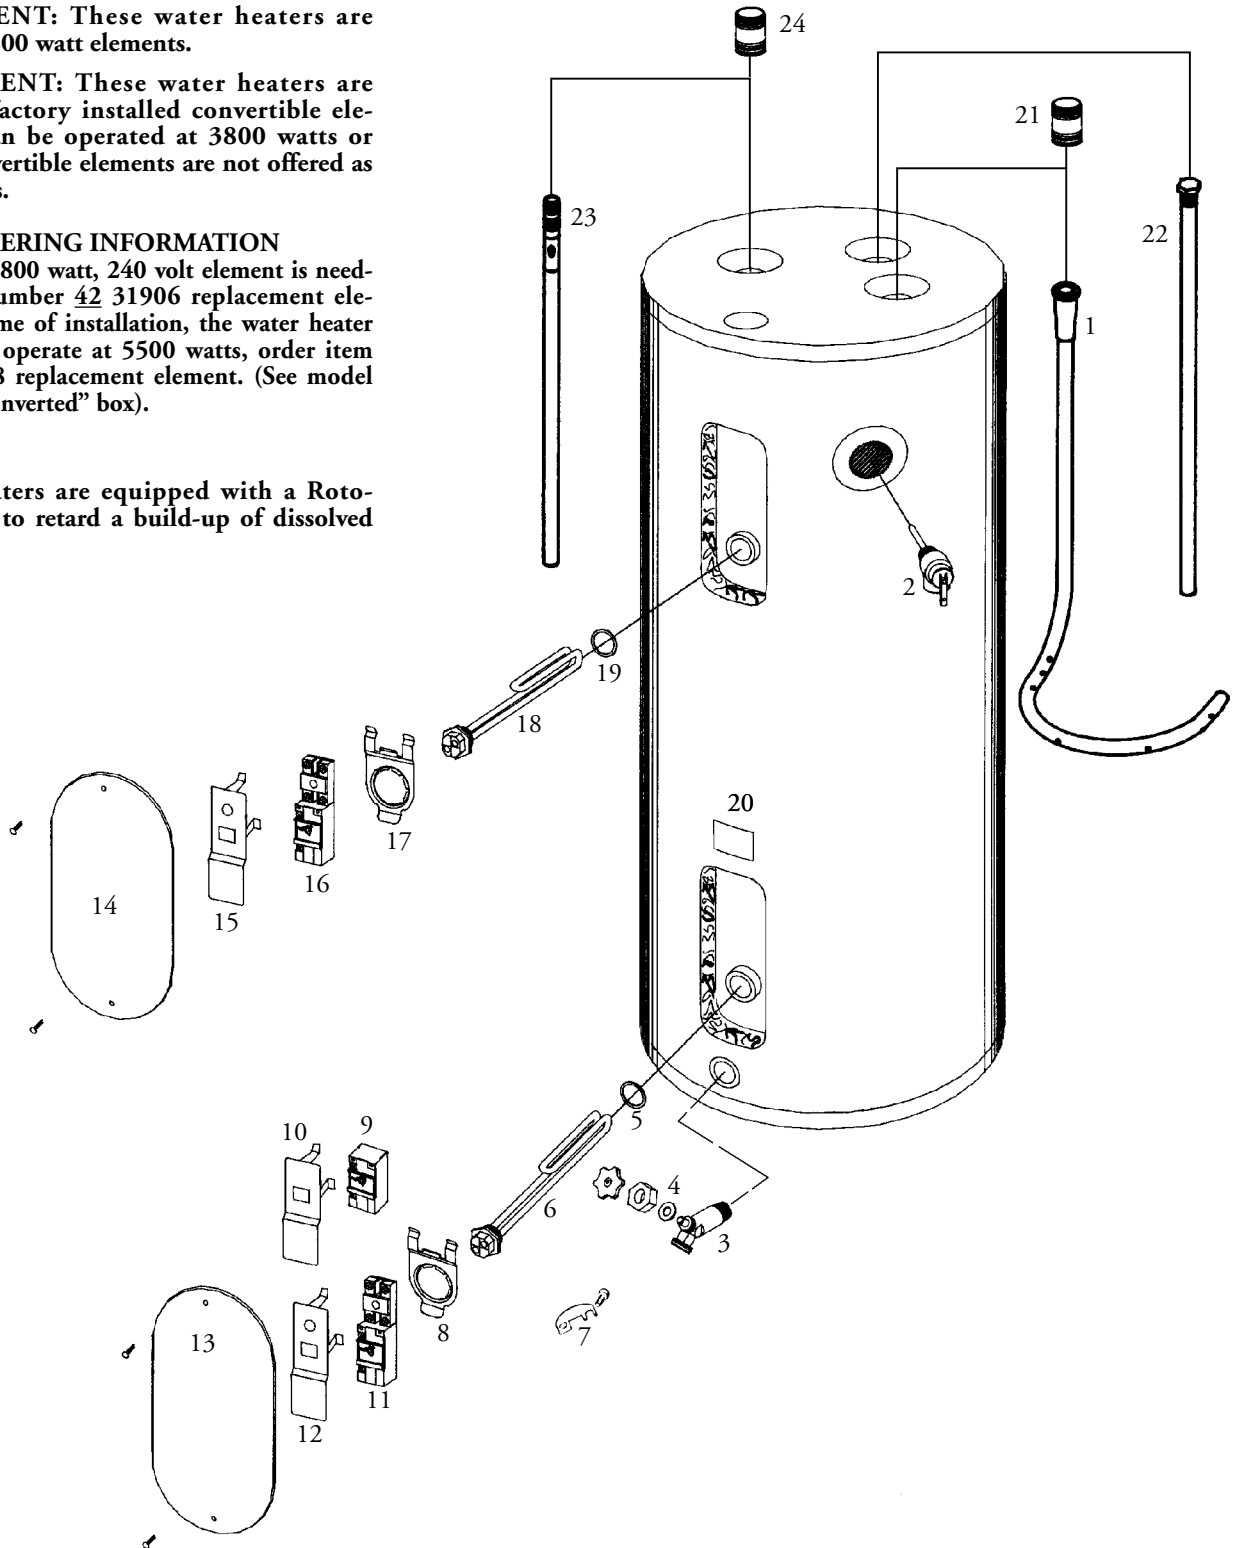

# Parts Order List (cont'd)

## KENMORE POWER MISER™ 9 ELECTRIC WATER HEATERS MODEL NUMBERS:

153.329561 50 Gal.  
 153.329660 66 Gal.  
 153.329661 66 Gal.  
 153.329860 80 Gal.  
 153.329861 80 Gal.

KEY NO.	PART DESCRIPTION	MODEL NUMBERS				
		153.329561	153.329660	153.329661	153.329860	153.329861
1.	Roto-Swirl™ Dip Tube (See NOTE "B" page 30)	9003919	9003933	9003933	9003933	9003933
2.	Temperature-Pressure Relief Valve*	<u>42</u> 33086	<u>42</u> 33086	<u>42</u> 33086	<u>42</u> 33085	<u>42</u> 33085
3.	Drain Valve	9003911	9003911	9003911	9003911	9003911
4.	Drain Valve Washer (1/32" x 13/64" x 1/8" thick)**	9001584	9001584	9001584	9001584	9001584
5.	Element Gasket	9000308	9000308	9000308	9000308	9000308
6.	Lower Element* (See NOTE "A" page 30)	3800 Watt	3800 Watt	3800 Watt	3800 Watt	3800 Watt
		<u>42</u> 31906	<u>42</u> 31906	<u>42</u> 31906	<u>42</u> 31906	<u>42</u> 31906
		5500 Watt	5500 Watt	5500 Watt	5500 Watt	5500 Watt
		<u>42</u> 31908	<u>42</u> 31908	<u>42</u> 31908	<u>42</u> 31908	<u>42</u> 31908
7.	Buss Bar Kit	9001591	9001591	9001591	9001591	9001591
8.	Thermostat Bracket	9000309	9000309	9000309	9000309	9000309
9.	2 Pole Thermostat* (Two Wire Lead Models††)	—	<u>42</u> 31919	—	<u>42</u> 31919	—
10.	Terminal Cover	—	9002276	—	9002276	—
11.	Lower Thermostat w/Hi Limit* (Three Wire Lead Models††)	<u>42</u> 31918	—	<u>42</u> 31918	—	<u>42</u> 31918
12.	Terminal Cover & Barrier	9002303	—	9002303	—	9002303
13.	Lower Access Panel	9002671	9002671	9002671	9002671	9002671
14.	Upper Access Panel	9002671	9002671	9002671	9002671	9002671
15.	Terminal Cover	9002303	9002303	9002303	9002303	9002303
16.	Upper Thermostat w/Hi Limit*	<u>42</u> 31917	<u>42</u> 31917	<u>42</u> 31917	<u>42</u> 31917	<u>42</u> 31917
17.	Thermostat Bracket	9000309	9000309	9000309	9000309	9000309
18.	Upper Element* (See NOTE "A" page 30)	<u>42</u> 31906	<u>42</u> 31906	<u>42</u> 31906	<u>42</u> 31906	<u>42</u> 31906
19.	Element Gasket	9000308	9000308	9000308	9000308	9000308
20.	Model Rating Plate †	0270182	0270182	0270182	0270182	0270182
21.	Nipple (Cold Inlet) w/Heat Traps	9003931	9003915	9003915	9003936	9003936
22.	Primary Anode Rod	9003729	9003729	9003729	9003932	9003932
23.	Secondary Anode w/Nipple (Hot Outlet) w/HT	9003937	9003934	9003934	9003935	9003935
24.	Nipple (Hot Outlet) w/Heat Traps***	—	9003915	—	9003936	—
#	Manual	184726-000				

\*These parts are also available at most Sears retail stores.

\*\*Also available at most hardware stores.

\*\*\*When secondary anode w/nipple not provided.

†Replaced only on return of damaged plate.

††Refer to Wiring Diagram Section for verification.

#Not Illustrated

Now that you have purchased this water heater, should a need ever exist for repair parts or service, simply contact any SEARS Service Center or call 1-800-4-MY-HOME (1-800-469-4663). Be sure to provide all pertinent facts when you call or visit.

All parts listed may be ordered from any SEARS Service Center, most Sears stores and by calling 1-800-366-PART (1-800-366-7278).

If the parts you need are not stocked locally, your order will be electronically transmitted to a SEARS Repair Parts Distribution Center for handling.

The model number of the water heater will be found on the model rating plate located above the access panel.

### WHEN ORDERING REPAIR PARTS, ALWAYS GIVE THE FOLLOWING INFORMATION:

MODEL NUMBER                      PART DESCRIPTION  
 SERIAL NUMBER                     PART NUMBER

**THIS IS A REPAIR PARTS LIST, NOT A PACKING LIST.**

### FULL ONE YEAR WARRANTY ON WATER HEATER

For one year from the date of purchase, when your Sears Kenmore water heater is installed and operated in a single-family residence in accordance with the instructions in this manual, Sears will:

1. Repair defects in material or workmanship in this water heater, free of charge.
2. Furnish and install a new current model water heater of equal capacity and quality, free of charge, if a leak occurs in the tank.

### LIMITED WARRANTY ON TANKS THAT LEAK

After one year and through 9 years from the date of purchase for water heaters used in a single-family residence, if a leak occurs in the tank, Sears will furnish a new current model water heater of equal capacity and quality. You will be charged for any installation.

### LIMITED WARRANTY ON PARTS

After one year and through 9 years from the date of purchase, when your Sears Kenmore water heater is used in a single-family residence and is installed and operated in accordance with the information in this manual, if a part fails due to a materials or workmanship, Sears will furnish a replacement free of charge. You will be charged for labor.

If the water heater is subjected to commercial, institutional, industrial or use in residences of two families or more, the above warranty coverage for tanks that leak is effective for 2 years from the date of purchase and the above parts warranty is effective for 1 year from the date of purchase.

To obtain warranty service, SIMPLY CALL 1-800-4MY-HOME (1-800-469-4663). "This warranty applies only while this product is in use in the United States."

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

SEARS, ROEBUCK AND CO., Dept. 817 WA, HOFFMAN ESTATES, IL 60179

**The price of your water heater does not include a free checkup service call.** On water heater installations arranged by Sears, Sears warrants the installation. A charge will be made on service calls due to poor or incomplete installation. These include:  
a. Adjusting thermostat    b. Leaks in pipes or fittings    c. Condensation

## MASTER PROTECTION AGREEMENTS

Congratulations on making a smart purchase. Your new Kenmore® product is designed and manufactured for years of dependable operation. But like all products, it may require preventive maintenance or repair from time to time. That's when having a Master Protection Agreement can save you money and aggravation.

Purchase a Master Protection Agreement now and protect yourself from unexpected hassle and expense.

The Master Protection Agreement also helps extend the life of your new product. Here's what's included in the Agreement:

- **Expert Service** by our 12,000 professional repair specialists.
- **Unlimited service and no charge** for parts and labor on all covered repairs.
- **"No-lemon" guarantee** - replacement of your covered product if four or more product failures occur within twelve months.
- **Product replacement** if your covered product can't be fixed.
- **Annual Preventive Maintenance Check** at your request - no extra charge.

- **Fast help by phone** - phone support from a Sears technician on products requiring in-home repair, plus convenient repair scheduling.
- **Power surge protection** against electrical damage due to power fluctuations.
- **Rental reimbursement** if repair of your covered product takes longer than promised.

Once you purchase the Agreement, a simple phone call is all that it takes for you to schedule service. You can call anytime day or night, or schedule a service appointment on-line.

Sears has over 12,000 professional repair specialists, who have access to over 4.5 million quality parts and accessories. That's the kind of professionalism you can count on to help prolong the life of your new purchase for years to come. Purchase your Master Protection Agreement today!

**Some limitations and exclusions apply. For prices and additional information call 1-800-827-6655**

## SEARS INSTALLATION SERVICE

For Sears professional installation of home appliances, garage door openers, water heaters and other major home items, in the U.S.A., call **1-800-4-MY-HOME®**.

**For in-home major brand repair service**  
Call 24 hours a day, 7 days a week (U.S.A. and Canada)

**1-800-4-MY-HOME®**

(1-800-469-4663)  
www.sears.com

The model number of your water heater is found on the model rating plate on the front of the water heater.

**Sears, Roebuck and Co., Hoffman Estates, IL 60179 U.S.A.**