



**HOME OWNER / INSTALLER
FOR YOUR SAFETY**
THIS MANUAL MUST BE READ IN ITS
ENTIRETY BEFORE OPERATING HEATER

RCE-329A

SILENT SERVANT

CONVECTOR VENT-FREE SPACE HEATER

Owner's Operation and Installation Manual

THIS IS AN UNVENTED GAS-FIRED HEATER. IT USES AIR (OXYGEN) FROM THE ROOM IN WHICH IT IS INSTALLED. PROVISIONS FOR ADEQUATE COMBUSTION AND VENTILATION AIR MUST BE PROVIDED. REFER TO INSTALLATION INSTRUCTIONS ON PAGE 6.

WARNING: IF THE INFORMATION IN THIS MANUAL IS NOT FOLLOWED EXACTLY, A FIRE OR EXPLOSION MAY RESULT CAUSING PROPERTY DAMAGE, PERSONAL INJURY OR LOSS OF LIFE.

DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE.

WHAT TO DO IF YOU SMELL GAS

- DO NOT TRY TO LIGHT ANY APPLIANCE.
- DO NOT TOUCH ANY ELECTRICAL SWITCH; DO NOT USE ANY PHONE IN YOUR BUILDING.
- IMMEDIATELY CALL YOUR GAS SUPPLIER FROM A NEIGHBOR'S PHONE. FOLLOW THE GAS SUPPLIER'S INSTRUCTIONS.
- IF YOU CANNOT REACH YOUR GAS SUPPLIER, CALL THE FIRE DEPARTMENT.

INSTALLATION AND SERVICE MUST BE PERFORMED BY A QUALIFIED INSTALLER, SERVICE AGENCY OR THE GAS SUPPLIER.

INSTALLER: MUST LEAVE MANUAL WITH UNIT AFTER INSTALLATION.
OWNER: RETAIN THIS MANUAL SAFELY, FOR FUTURE REFERENCE.

Rinnai

Rinnai CORPORATION
NAGOYA, JAPAN

WARNING

IMPROPER INSTALLATION, ADJUSTMENT, ALTERATION, SERVICE OR MAINTENANCE CAN CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR LOSS OF LIFE. REFER TO THE OWNER'S INFORMATION MANUAL PROVIDED WITH THIS APPLIANCE. INSTALLATION AND SERVICE MUST BE PERFORMED BY A QUALIFIED INSTALLER, SERVICE AGENCY OR THE GAS SUPPLIER. FOR ASSISTANCE OR ADDITIONAL INFORMATION CONSULT A QUALIFIED INSTALLER, SERVICE AGENCY OR THE GAS SUPPLIER.

GENERAL INFORMATION



THIS SERIES IS DESIGN CERTIFIED BY THE AMERICAN GAS ASSOCIATION LABORATORIES AS A VENT-FREE CIRCULATOR AND MUST BE INSTALLED ACCORDING TO THESE INSTRUCTIONS.

ANY ALTERATION OF THE ORIGINAL DESIGN INSTALLED OTHER THAN AS SHOWN IN THESE INSTRUCTIONS OR USED WITH A TYPE OF GAS NOT SHOWN ON THE RATING PLATE, IS THE RESPONSIBILITY OF THE PERSON AND COMPANY MAKING THE CHANGE.

TABLE OF CONTENTS

	Page
SPECIFICATIONS	1
SAFETY DEVICES	1
IMPORTANT POINTS	2
SAFETY POINTS	3
USAGE AND INSTALLATION MUSTS	5
INSTALLATION INSTRUCTIONS	6
OPERATING INSTRUCTION PLATE	9
ADDITIONAL CUSTOMER OPERATING INFORMATION	10
MAINTENANCE / SERVICE	15
TROUBLE SHOOTING CHART	16
SCHEMATIC DISASSEMBLY	18
ERROR MESSAGES	25
LIMITED WARRANTY	back cover

SPECIFICATIONS

Model	Input Rating BTU/H HIGH	Input Rating BTU/H LOW	Thermostat	Weight in pounds	Dimension in inches	Fan CFM Output
RCE-329A-N	10,000	3,000	YES	17.6	Height: 17 7/16" Width: 16 9/16" Depth: 8	High:92
RCE-329A-P	10,000	3,400	YES			Low:53

"-N" Models are for Natural Gas. (Inlet Pressure within 5.5"—10.5" W.C.)

"-N" Models manifold pressure: 3.9" W.C.

"-P" Models are for L.P. Gas. (Inlet Pressure within 6.3" —13" W.C.)

"-P" Models manifold pressure: 5.2" W.C.

Gas connection pipe size 1/2" N.P.T. all models.

SAFETY DEVICES

■ Overheat Switch

When the heater gets too hot during operation (for example when the filters or air outlet louvers are blocked) this device turns the gas off automatically. Remove cause of overheat (clean filters) allow heater to cool, then re-ignite.

■ Fuse

The electrical circuits are protected by a fuse. When the fuse blows, the heaters will not operate at all. The fuse must be replaced by an authorized person.

■ Flame Failure Device

This device automatically cuts off the gas supply to the heater in the event of a gas failure. To restore the gas supply to the heater, turn it off, then follow the ignition procedure.

■ Oxygen Depletion Safety Device

If the oxygen level in the room drops below a pre-set limit, this device cuts the gas supply off to the heater. If the oxygen depletion device operates, turn the heater off, ventilate the room, then follow the ignition procedure to re-light. Heater will not re-light until room is fully ventilated.

■ Tilt Switch

If the heater is knocked over, the tilt switch will cut the gas supply off. The fan keeps running. To restore the gas supply, stand the heater upright, turn it off then follow the ignition procedure. The tilt switch may also operate if the heater is jolted or picked up while in operation.

■ Power Failure

In the event of a power failure or power cut, the gas valves will automatically close. After the power is re-instated the appliance must be restarted manually.

IMPORTANT POINTS

UNPACK HEATER:

Check for damage. (DO NOT INSTALL DAMAGED HEATER.) If heater is damaged, contact your supplier for advice. Before installing a heater, check the label for the correct gas type (see label on side of heater). Refer to local gas authority for confirmation of gas type if you are in doubt.

INCLUDED IN CARTON:


Customers Operating Information/Manual Gas Valve

IMPORTANT


1. The appliance must be installed in accordance with state and local codes.
2. For information on gas rate, see data plate on the appliance.
3. When using this appliance, ensure that the room is correctly ventilated. Check the local gas authority for information on ventilation requirements.
4. The heater must not be installed where curtains or other combustible materials could come into contact with it. In some cases, curtains may need restraining. It must also be 2" (50mm) clear of walls.
5. This appliance is not designed to be built in.
6. If you move, check the gas type in the area where you are moving to. The local gas authority will be able to advise on local regulations.
7. This heater discharges a large volume of warm air at low level to provide even heat distribution. If the air in the room contains cooking vapor or cigarette smoke, and the heater is used on a carpet, the surface of the carpet may become discolored.
In addition, some nylon carpets contain dyes which may be affected by the warm air flow. Some soft vinyl surfaces are also subject to distortion, or discoloration by warm air. To prevent discoloration of carpets etc., a mat should be placed under the appliance, extending about 30" (750mm) in front of it.
8. This heater can be installed in a bedroom.
When installed in a bedroom, the heater must be wall mounted with optional wall mounting kit. See page 24 of manual for part No. of wall mounting kit.

SAFETY POINTS


Do not install this heater in areas where spray painting or plating is taking place, or in places such as hair dressers, where there may be a lot of fluff and dust, and where aerosols are used. May create strong odors and irritate eyes and sinuses.

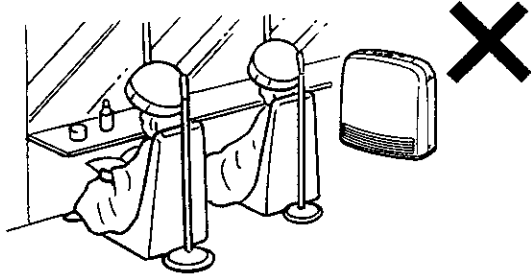


Do not move the heater while it is turned on.

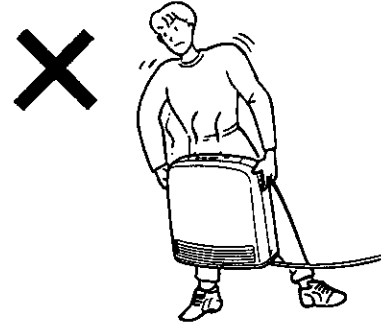


Do not spray aerosols near this heater while it is in use. Many aerosols contain butane gas and can be a fire hazard. Use of aerosols, paint, polishes etc., while this heater is in use will cause unpleasant smells.

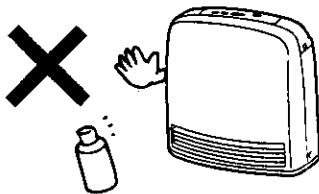


Turn off heater when not in use and when away for long periods of time.

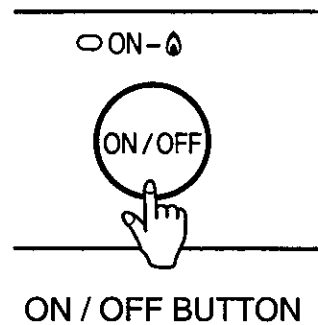

Do not allow children or elderly persons to sleep in the warm air discharge from the heater.

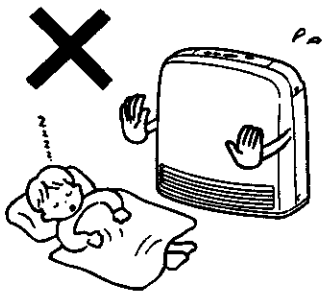


Do not sit on this heater.

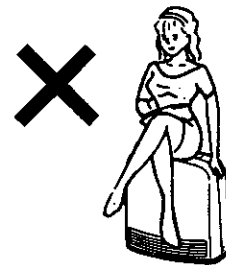


SAFETY POINTS


Do not place wet articles on this heater, the water may drip into the electrical parts.

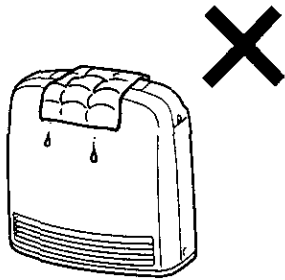


Do not allow children to put articles in the louvers. Supervise children playing near this heater.

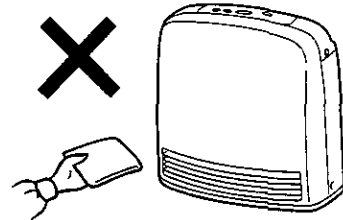


Do not turn the heater off by unplugging it from the wall, or while the fan is cooling the heater off. (This heater is not suitable for use with a plug in type timer.)

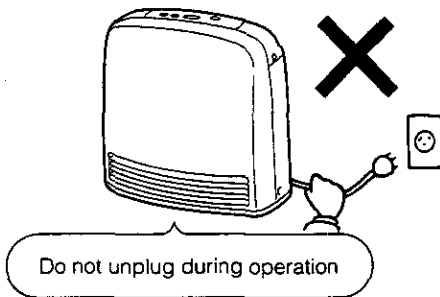


Ventilate the room when this heater is in use. Correct, fixed ventilation is usually sufficient, consult your local gas authority for local regulations.

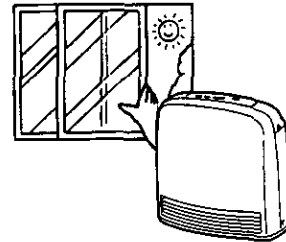

Keep away from flammable materials. Combustible materials must not be placed where the heater could ignite them. Do not place articles in front of the hot air discharge.

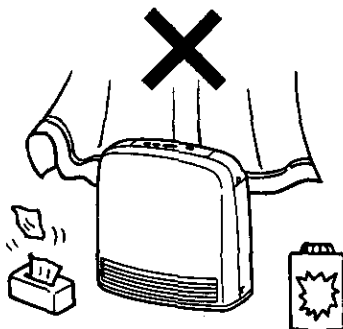

Do not place containers of liquid on top of the heater. Water in the heater can cause extensive damage.

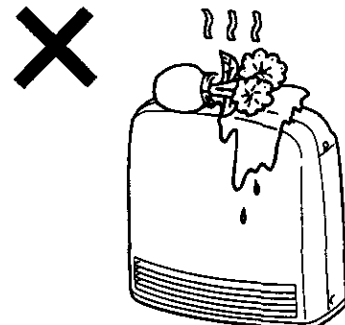

USAGE AND INSTALLATION MUSTS

1. Read these rules and the instructions carefully. Check all local codes. Failure to follow these could cause a malfunction of the heater resulting in death, serious bodily injury and/or property damage.
2. This heater is designed for use only with one type of gas, either L.P.G. or Natural Gas. Make sure that the type of gas to be supplied to this unit matches that shown on the rating plate on the heater. This unit is not convertible.
3. **WARNING:** Any change to this heater or its controls can be dangerous.
4. If a gas leak is suspected, turn heater off, turn gas supply valve off at regulator or appliance connector valve. Open windows to ventilate area immediately and contact your dealer or gas company.
5. Installation and repair should be done by a qualified service person. Heater should be inspected before use and at least annually by a professional service person. More frequent cleaning may be required due to excessive lint from carpeting, bedding material, etc. It is imperative that control compartment, burners and circulating air passageways be kept clean.
6. **An unvented room heater having an input rating of more than 6,000 BTU's per hour shall not be installed in a bathroom.**
7. Keep area near the heater clear and free from combustible materials, gasoline and other flammable vapors and liquids.
8. Due to its high temperature, the heater should be located out of traffic and away from furniture and draperies.
9. Do not place clothing or flammable material on or near the heater.
10. Any safety panel or guard removed for servicing must be replaced prior to operating the heater.
11. An unvented gas heater will increase the amount of humidity in the room.
12. This heater is intended for space heating purposes only. Do not use for other purposes such as drying clothes or baking paints.
13. Do not touch the outlet area while the heater is in use. To avoid burns, do not move the heater during use and avoid touching the heater just after turning off.
14. Children and adults should be alerted to the hazard of high surface temperatures and should stay away to avoid burns or clothing ignition.
15. Young children should be carefully supervised when they are in the same room with the heater.
16. L.P.G containers must not be installed indoors.
17. Do not install in a windy area such as facing a window or a door leading to the outside.
18. Do not use this room heater if any part has been under water. Immediately call a qualified service technician to inspect the room heater and to replace any part of the control system and any gas control which has been under water.
19. Carpet lint or cigarette smoke may pass through the heater, discolor, and be deposited into the room.
20. This unit discharges a large volume of warm air at a low level to provide even heat distribution. If the air in the room contains cooking vapors, cigarette smoke, and if used on carpet, the surface in front of unit is subject to discoloration. Some carpets contain dyes which can be effected by warm air flow and could discolor. To aid in prevention of discoloration, place a mat under the unit to extend to the front 30".

INSTALLATION INSTRUCTIONS

NOTICE BEFORE INSTALLATION

The heater must be installed by a qualified service person according to this installation instructions. When used without adequate combustion and ventilation heater air may give off carbon monoxide.

Check your local building codes for the proper method of installation. In the absence of local codes, this heater installation must conform with American National Standard (National Fuel Gas Code) ANSI Z223.1.

Available from the American National Standards Institute, Inc.,
1430 Broadway, New York, NY 10018, or from the National Fire
Protection Association, Batterymarch Park, Quincy, MA 02269.

All correspondence should refer to Model No., Serial No., and type of gas.

WARNING: Electrical Grounding Instructions

This appliance is equipped with a three-prong (grounding) plug for your protection against shock hazard and should be plugged directly into a properly grounded three-prong receptacle.


This appliance may be installed in an aftermarket manufactured (mobile) home where not prohibited by state or local code.

Aftermarket = completion of sale, not for purpose of resale from manufacturer.

This heater shall not be installed in a confined space or unusually tight construction unless provisions are provided for adequate combustion and ventilation air.

The National Fuel Gas Code ANSI Z223.1 defines a confined space as a space whose volume is less than 50 cubic feet per 1,000 Btu per hour (4.8m³ per kW) of the aggregate input rating of all appliances installed in that space and an unconfined space as a space whose volume is not less than 50 cubic feet per 1,000 Btu per hour (4.8m³ per kW) of the aggregate input rating of all appliances installed in that space.

Rooms communicating directly with the space in which the appliances are installed, through openings not furnished with doors, are considered a part of the unconfined space.

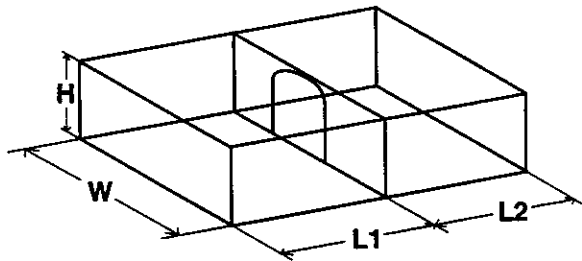

The following formula can be used to determine the maximum heater rating per the definition of unconfined space:

$$\text{BTU/HR} = \frac{(L1+L2)\text{Ft} \times (W)\text{Ft} \times (H)\text{Ft} \times 1000}{50}$$

Consider two connecting rooms with an open area between, with the following dimensions:

$$\text{BTU/HR} = \frac{(15\frac{1}{2} + 12) \times (12) \times (8) \times 1000}{50}$$

$$= 52800 \text{ BTU/HR}$$

If there is a door between the two rooms that can be closed the calculation must be based only on the room with the heater.

$$\text{BTU/HR} = \frac{(15\frac{1}{2}) \times (12) \times (8) \times 1000}{50}$$

$$= 29760 \text{ BTU/HR}$$

WARNING: If the area in which the heater may be operated is smaller than that defined as an unconfined space or if the building is of unusually tight construction; provide adequate combustion and ventilation air by one of the methods described in the National Fuel Gas Code, ANSI Z223.1, Section 5.3 or applicable local codes.


Unusually tight construction is defined as construction where:

- a) Walls and ceilings exposed to the outside atmosphere have a continuous water vapor retarder with a rating of 1 perm (6×10^{-11} kg per pa-sec- m^2) or less with openings gasketed or sealed, and
- b) Weather stripping has been added on openable windows and doors, and
- c) Caulking or sealants are applied to areas such as joints around window and door frames, between sole plates and floors, between wall-ceiling joints, between wall panels, at penetrations for plumbing, electrical, and gas lines, and at other openings.

LOCATION AND CLEARANCES

1. The minimum clearances from the combustible materials are as follows:

- 2 inches from top
- 2 inches from back
- 2 inches from side
- 30 inches from front
- 0 inches from bottom

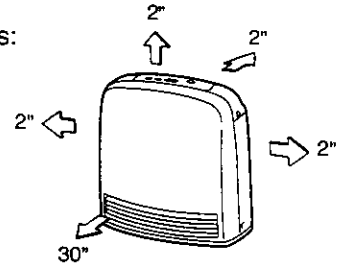

2. This heater may be installed on combustible flooring. When the heater is installed directly on carpeting, tile or other combustible material other than wood flooring, the heater shall be installed on a metal or wood panel extending the full width and depth of the heater.
3. Adequate clearances for accessibility for purposes of servicing and proper operation must be provided.
4. Adequate clearances around air openings must be provided.
5. Do not install this heater in bathrooms.
6. Right and left sides are determined when facing the front.
7. Do not install in areas where curtains, drapes, clothing, or other moving flammables are within 12 inches of this unit.
8. This unit is designed to mount directly to a wall with optional wall mounting kit. See page 24 for part No. of wall mounting kit.
9. Make certain of adequate combustion and ventilation air.
10. Do not oversize the heater to the room.


GAS CONNECTION

1. The gas supply line shall be gas-tight, sized and so installed as to provide a supply of gas sufficient to meet the maximum demand of the heater without loss of pressure.
2. A shut off valve (or appliance connector valve) should be installed in the upstream of the gas line to permit servicing.
3. Flexible pipe and any appliance connector valve used for gas piping shall be types approved by nationally recognized agencies.


4. Any compound used on the threaded joint of gas piping shall be a type which resists the action of liquefied petroleum gas.
5. Supplied gas pressure must be within the limits shown in the specifications.
6. After completion of gas pipe connections, all joints including the heater must be checked for gas-tightness by means of leak detector solution, soap and water, or an equivalent nonflammable solution, as applicable.

CAUTION: Since some leak test solutions, including soap and water, may cause corrosion or stress cracking, the piping shall be rinsed with water after testing, unless it has been determined that the leak test solution is noncorrosive.

7. The appliance and its individual shut off valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of 1/2 psig. The appliance must be isolated from the gas supply piping system by closing its individual manual shut off valve during any pressure testing of the gas supply system at test pressures equal to or less than 1/2 psig.
8. A valve supplied must be installed on back of unit at time of installation. This is for compliance to ANSI standard Z21.11.2. Valve is packaged with unit.

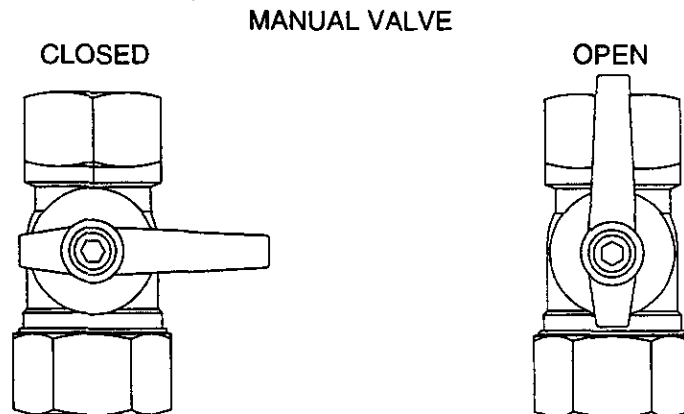

9. After completing pipework, secure the heater to the floor. Use the two screws provided, as shown in the drawing. To prevent deforming base plate, do not over torque screws.

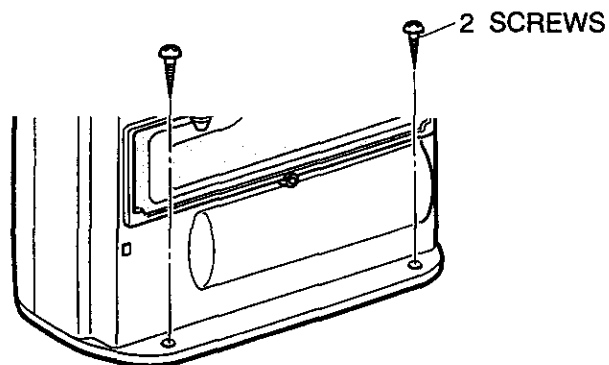


OPERATING INSTRUCTION PLATE CONVECTOR RCE-329A

FOR YOUR SAFETY READ BEFORE OPERATING


WARNING: If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

- A. This appliance does not have a pilot. It is equipped with an ignition device which automatically lights the burner. Do not try to light the burner by hand.
 - B. BEFORE OPERATING smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.
- WHAT TO DO IF YOU SMELL GAS.**
- Do not try to light any appliance.
 - Do not touch any electrical switch; do not use any phone in your building.
 - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.
 - C. Use only your finger to push with. Never use tools. If the button will not reactivate by touch, don't try to repair it, call a qualified service technician. Force or attempted repair may result in a fire or explosion.
 - D. Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.


OPERATING INSTRUCTIONS

- STOP! Read the safety information above on this label. This appliance is equipped with an ignition device which automatically lights the burner. Do not try to light the burner by hand.
1. Turn off all electric power to the appliance via the ON/OFF button on the control panel. Locate manual gas valve to be found on back side of heater.
 2. Turn Manual valve clockwise  to the full OFF position.
 3. Wait five (5) minutes to clear out any gas. Then smell for gas, including near the floor. If you then smell gas, STOP! Follow "B" in the safety information above on


MANUAL VALVE

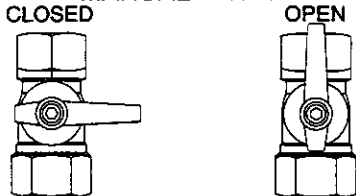

- this label. If you don't smell gas, go to next step.
4. Turn Manual gas valve to the full ON position.
 5. Turn on all electric power to the appliance.
 6. Press ON/OFF button to "ON".
 7. Set the thermostat to desired setting.
 8. Burner is lit when operation lamp glows red.
 9. If operation lamp is flashing red, burner has not been lit.
 10. If the appliance will not operate, follow the instructions "To turn off gas to appliance" and call your service technician or gas supplier.

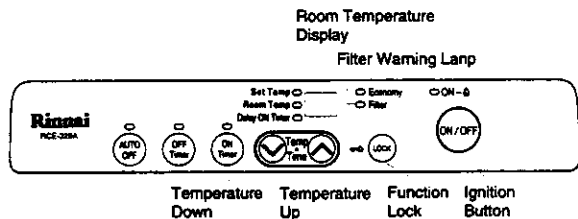

TO TURN OFF GAS TO APPLIANCE

1. Turn off electric power to the appliance using the ON/OFF switch located on the control panel.
2. Turn manual valve clockwise  to the full OFF position.

NOTE: The fan will continue to operate until the appliance is cool, do not turn the appliance off by unplugging it from the wall. Keep burner and control compartment clean. See installation and operating instructions accompanying heater.

WARNING: Improper installation, adjustment, alteration, service or maintenance can cause personal injury or loss of life. Refer to the owner's information manual provided with this appliance. Installation and service must be performed by a qualified installer, service agency or the gas supplier.


ADDITIONAL CUSTOMER OPERATING INFORMATION

INSTALLATION

Check room size and ventilation. Do not oversize. Improper sizing may cause nuisance lock outs.

Make certain the heater is connected into both the gas and the electric power.


CONTROL PANEL LAYOUT

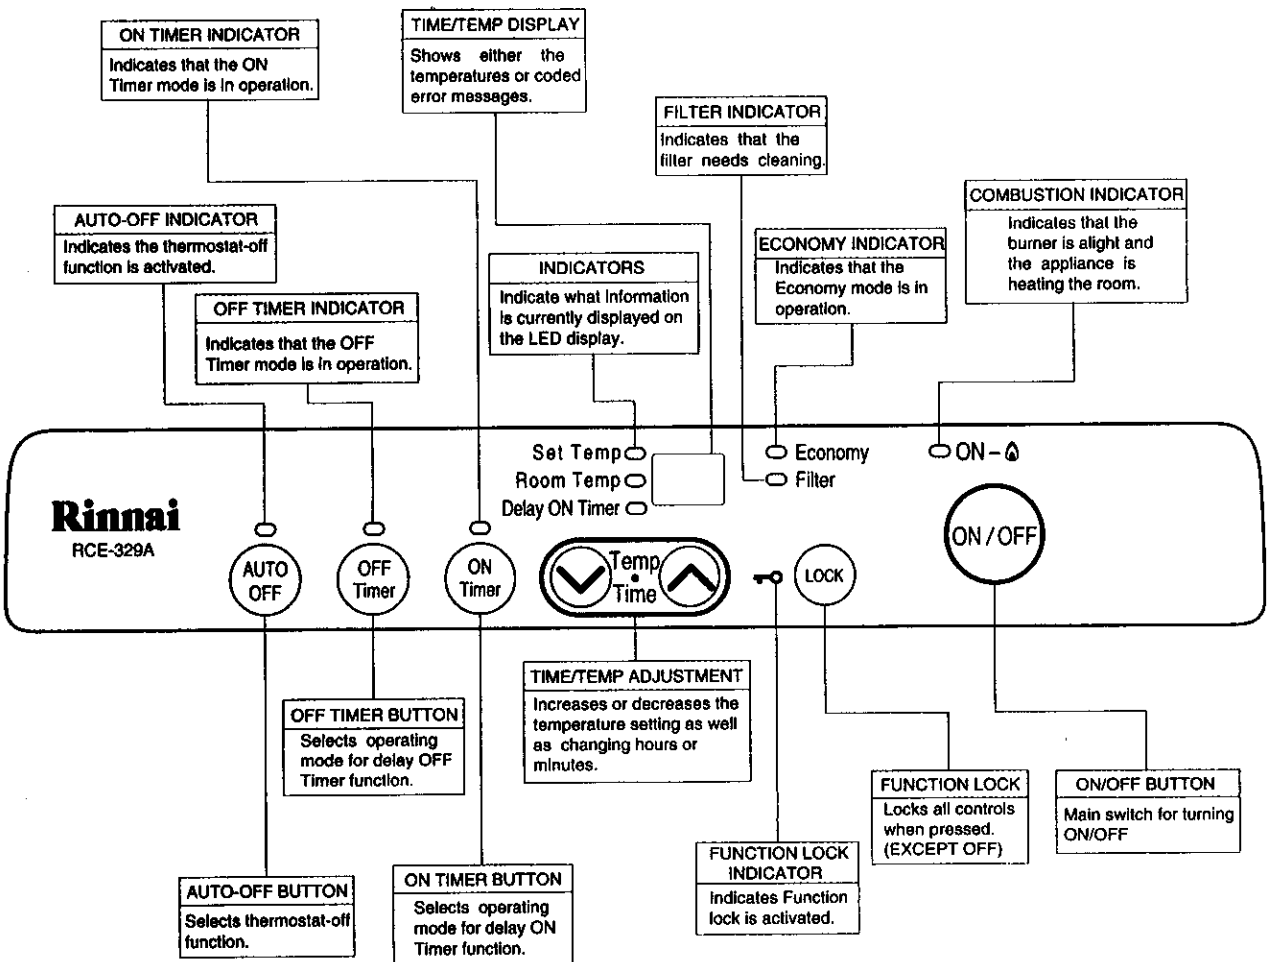

OPERATING YOUR NEW RCE-329A

■ TURNING ON


Press the ON/OFF button to operate the heater. The ON indicator will glow green. After approximately 20 seconds the spark generator will be heard before the burner ignites and the ON indicator glows red, indicating that the burner is alight. Warm air can be felt coming from the louvres 15 seconds later.

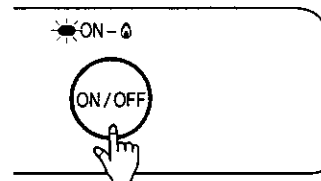

If the heater does not ignite on initial use, this may be due to air remaining in the gas supply line. The spark generator will only continue for 15 seconds. After this it will be necessary to press the ON/OFF button OFF, then ON again.

■ TURNING OFF

Simply press the ON/OFF button to switch off the heater. The ON indicator will go out. The convection fan will continue to operate for several minutes after the burner has gone out in order to cool the appliance. **Do not unplug the appliance while the convection fan is running.**

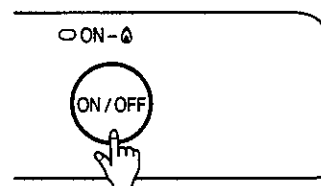

DO NOT turn heater off by unplugging at the power point. The convection fan will continue to run until the appliance cools.


■ ROOM TEMPERATURE ADJUSTMENT

The room temperature and pre-set temperatures can only be displayed and adjusted when the heater is running.

Press the “▲” button to increase the temperature setting or “▼” button to decrease the temperature setting.

The temperatures can be preset to:

- [L] low (about 50°F)
- [60°F] to [80°F] in 2°F increments
- [H] (continuously high)

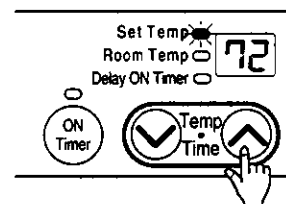


If the heater does not ignite then the pre-set temperature may not be set to a setting which is higher than the actual room temperature.

■ AUTO-OFF FUNCTION

When you select AUTO-OFF, the indicator light will glow. You have selected a Full Thermostat Control Function. The heater will cycle High, Low and OFF to maintain the selected room temperatures.

When the AUTO-OFF indicator is not glowing, you have selected a manual off mode of operation. The unit will continue to produce at least 3000 BTU/h of heat until you cut the unit off manually.

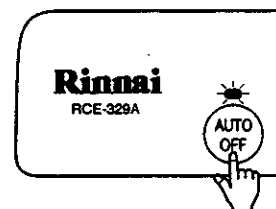



OPERATING YOUR NEW RCE-329A

■ ECONOMY MODE

The Economy mode only operates when the heater is turned on. The Economy mode operates automatically.

The Economy indicator will glow to show that the Economy function is activated.


After the room is heated initially the air temperature may be dropped to a lower level without affecting comfort. 30 minutes after the selected room temperature (set with the thermostat) is reached, the Economy mode, if set, reduces the temperature by 2°F. After another 30 minutes it reduces the temperature by a further 2°F, this is an energy saving feature. The Economy mode does not operate if the heater is under capacity for the room size.

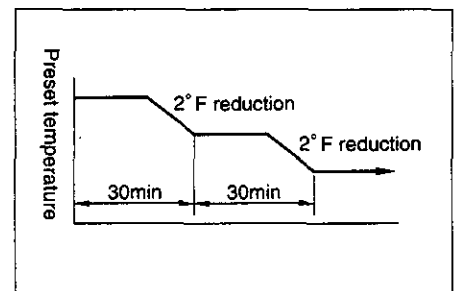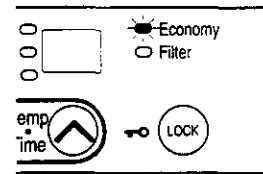


■ FUNCTION LOCK

The Function Lock will help to prevent accidental operation as well as small children from altering the controls.

To operate the Function Lock simply press the Lock button. The function is activated immediately and the Function Lock indicator will glow.

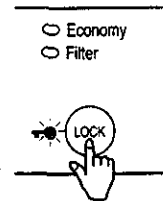

To deactivate the Function Lock simply press the Lock button for 2 seconds and the Function Lock indicator will go out. The lock can be deactivated at any time in this way.

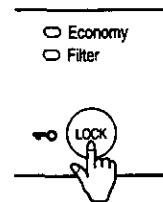

During normal operation the Function Lock may be activated and all controls other than the OFF switch will be locked. Deactivating the lock releases the controls. If the lock is activated while the heater is turned OFF, then all functions will be locked. If the heater is turned OFF while the Function Lock is activated, it cannot be turned ON again until the lock is deactivated.


TIMER OPERATION

■ OFF TIMER OPERATION

This feature is useful on cold nights when the unit continues to operate after you have gone to bed.

The OFF Timer can be selected when the heater is operating manually, in OFF, or in ON Timer mode. When the OFF Timer feature is selected, the heater will automatically switch off after 60 minutes.

- 1 Press the OFF Timer button. The OFF Timer indicator lights up.

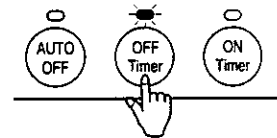

The heater will operate at the preset temperature selected in the system memory.

The temperature will automatically run at 80°F if the set temperature is "H".

If selected while the ON Timer is set, the heater will come on and run for 60 minutes, after which it will remain in ON Timer standby mode.

If the ON Timer is selected after the OFF Timer has been selected, the unit will run for 60 minutes (OFF Timer mode) and then remain in the ON Timer standby mode.

In all cases where the ON and OFF Timers are selected together, the OFF Timer will take precedence and run the heater for 60 minutes after which the heater will remain in the ON Timer standby mode.

OFF TIMER STOPS AFTER 1 HOUR.

Five minutes before the finish of the OFF Timer, the OFF Timer indicator will flash, indicating that the function is nearing completion.

The OFF Timer indicator will then go out at completion of the 60 minute time delay.

In cases where both the ON and OFF Timers are selected, once the OFF Timer has run the heater for 60 minutes, the ON Timer indicator will remain alight and the heater will be in ON Timer standby mode.

To cancel the OFF Timer, press either the ON-OFF button or the OFF Timer button at any time.

■ ON TIMER OPERATION

The ON Timer allows you to program the heater to turn on after a pre-determined time period.

As an example, if the time now is 10:30 pm and you wish the heater to start at 6:00 am tomorrow morning, then the ON Timer must be set to 7.5(hours).

The ON Timer preset times are from 30 minutes to 24 hours.

These times can be selected in 30 minute increments up to 10 hours and then 1 hour increments up to the maximum of 24 hours.

BEFORE SELECTING THE ON TIMER CONFIRM:

That the desired preset room temperature has been set (see page 11)

WARNING


- Ensure there are no obstacles or foreign materials directly in front of the appliance where the warm air will discharge into the room.
- Ensure the appliance is not positioned where warm air discharge will blow directly on someone sleeping.

1 Press the "ON Timer" button

The "ON Timer" and "ON/Combustion" (green) indicators will light up.

A preset time will be displayed on the digital monitor. (The first time the ON Timer is preset, this time will be "8.0")

The ON Timer can be selected while the unit is in operation, or while it is off (if set during operation, pressing the ON Timer button will stop the unit heating and the ON/Combustion indicator will change from red to green). The appliance will remain in standby mode.

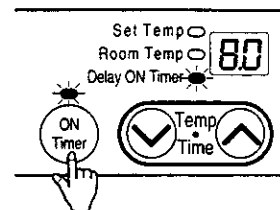

2 Presetting the time


Pressing the "▼" or "▲" buttons alters the preset time.

After 10 seconds the digital monitor will go out.

If the display has gone out:

Pressing the "▼" or "▲" buttons once will show the remaining time on the digital monitor.

Pressing the button more than once will alter the preset time.

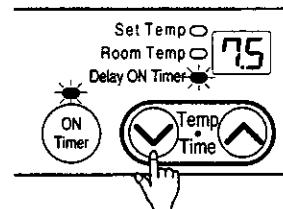

3 The heater will operate after reaching the end of the preset time.

"ON/Combustion" Indicator glows red.

The heater will operate at the preset temperature selected in the system memory.

The heater will automatically operate at 80°F if the preset temperature is set to "H".

4 The heater stops automatically after 1 hour.

The "ON Timer" indicator will flash to indicate that heating is about to stop (at approximately 55 minutes).

After another 5 minutes the heater will automatically stop heating and turn off completely.

The "ON Timer" indicator will continue to flash until the heater is manually operated again. The "ON/Combustion" indicator will go out.

Pressing the ON-OFF button will turn off the ON Timer indicator.

TO CANCEL THE ON TIMER

Press the "ON Timer" button or press the "ON-OFF" button.

The setting will be cancelled and the timer indicators will go out.

The ON Timer will be cancelled if the power plug is removed from the power point, a power failure while the appliance was in standby mode, or if the ON Timer setting is cancelled. "00" will flash on the digital monitor when power is reinstated. Pressing the ON button and starting the unit will delete the "00".


MAINTENANCE / SERVICE

MAINTENANCE SUGGESTIONS

This heater has been designed and constructed for a long performance life when installed and operated properly under normal conditions. Regular inspections, as outlined in this section, are strongly recommended as means of keeping your heater operating efficiently and safely throughout the season. Access to internal parts is from the front of the heater.

1. Cleaning


Clean air filter at least once a week. Do not wait for filter warning lamp to come on before cleaning filter. Do not use the heater with the filter warning lamp on, this may cause it to overheat. Dusty filter reduces the air flow through the heater, as well as, reducing the heater's effectiveness. Clean filter with air pressure or vacuum cleaner.

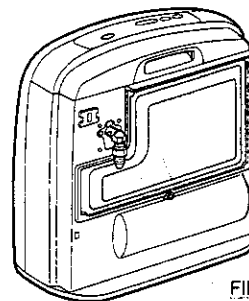

FILTER

Heater must be cleaned annually. Keep heater clear of dust and debris especially in and around the ODS burner. Cleaning procedures of heater are as follows;

- 1) Turn heater off. Unplug electric cord and allow to cool for one hour.
- 2) Remove the two(2) screws that hold the louver and two(2) screws at the bottom of the left and right hand side panel.
- 3) Use pressurized air to remove dust from around burner and electrical components.
Apply air pressure with nozzle to three(3) holes on combustion chamber cover.
(See page 22 of schematics, part #RC-209-31-9, key #117-1)
- 4) All outside parts of the heater can be cleaned using soap and water on a soft damp cloth.

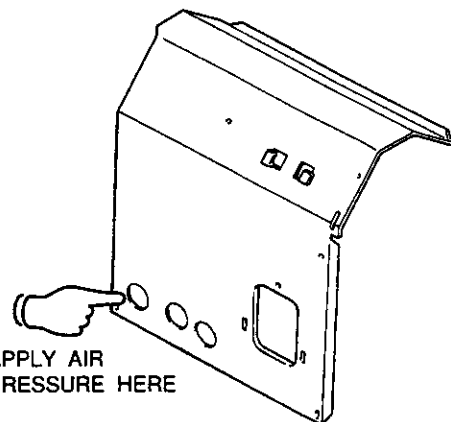

DO NOT DAMAGE OR DISTORT ANY PARTS OF HEATER.

DO NOT USE WET CLOTH OR SPRAY CLEANERS ON BURNER.

UNIT SHOULD BE CHECKED AND CLEANED ANNUALLY BY A PROFESSIONAL.

TROUBLE SHOOTING

STEP 1:

- 1) Be sure the heater is properly installed. See Section 2. INSTALLATION.
- 2) Make sure gas valve on L.P. Gas bottle or gas supply line is ON and gas pressure is available.
- 3) Make a careful visual inspection of all electrical connection and wiring.

STEP 2:

If the trouble persists after checking step 1, please check the cause of trouble in the following trouble shooting chart and correct it by following the procedures shown.

TROUBLE SHOOTING CHART

Please note: General cleaning, maintenance and wear and tear are not necessarily covered under the guarantee. Calls of this nature may be chargeable.

Problem Cause	No ON indicator	Burner doesn't ignite	Filter warning Lamp glows	Combustion stops during operation	Smell of gas	Takes too long to warm the room	Remedy
Not Plugged In	●	●					Plug In
Power Cut	●	●		●			Re-ignite manually after power is restored
(Initial Installation) Air in gas pipe		●					Purge air (installer)
Room too large						●	Check with retailer
Dust on the air filter			●				Clean the air filter (WEEKLY)
Louvre obstructed				●		●	Clean obstruction
Air filter blocked				●		●	Clean filter (weekly)
Gas Escape					●		Service Call
ON Timer is set		●					Cancel ON Timer
Function Lock set		●					Cancel Function Lock
Gas turned off at meter	●	●					Turn gas on


Gas Pressure setting Procedure


All settings/adjustments must be performed by a qualified Service Technician


DO NOT make adjustments in any mode other than the "PL" and/or "PH" mode of operation. Follow the procedure below, if "PL" or "PH" does not appear in the display, **DO NOT** make any adjustments. If you do not understand the following procedures, contact Rinnai America for assistance at 1(800)621-9419. This unit is designed to operate only on the gas type shown on the rating plate attached to the unit.


1. Next start the unit by pressing the "ON/OFF" button. Once the unit has fired, press the "TEST" button on the P.C. board twice. The LED indicator will display "PL", low fire mode. With your manometer connected to the manifold pressure test port record low fire manifold pressure. If the low fire pressure is incorrect, adjust it by the screw on top of the modulation valve. Once the pressure has been set, lock the adjustment screw down with the lock nut and then reconfirm the low fire manifold pressure.
 - Low fire pressure should be 0.5" W.C.,(12mm) on Natural gas.
 - Low fire pressure should be 0.75" W.C.,(19mm) on Propane gas.

2. Next press the "TEST" button again, this will put you into the "PH" high fire mode. If the high fire pressure is incorrect, it can be adjusted by using the "▲" and "▼" buttons. Adjust high fire pressure to correct setting. After you have set unit to the correct manifold pressure, press the "ON TIMER" button to enter your setting into memory. Next press the "ON/OFF" button to exit the programming mode.
 - High fire pressure should be 3.9" W.C.,(100mm) on Natural gas.
 - High fire pressure should be 5.2" W.C.,(132mm) on Propane gas.

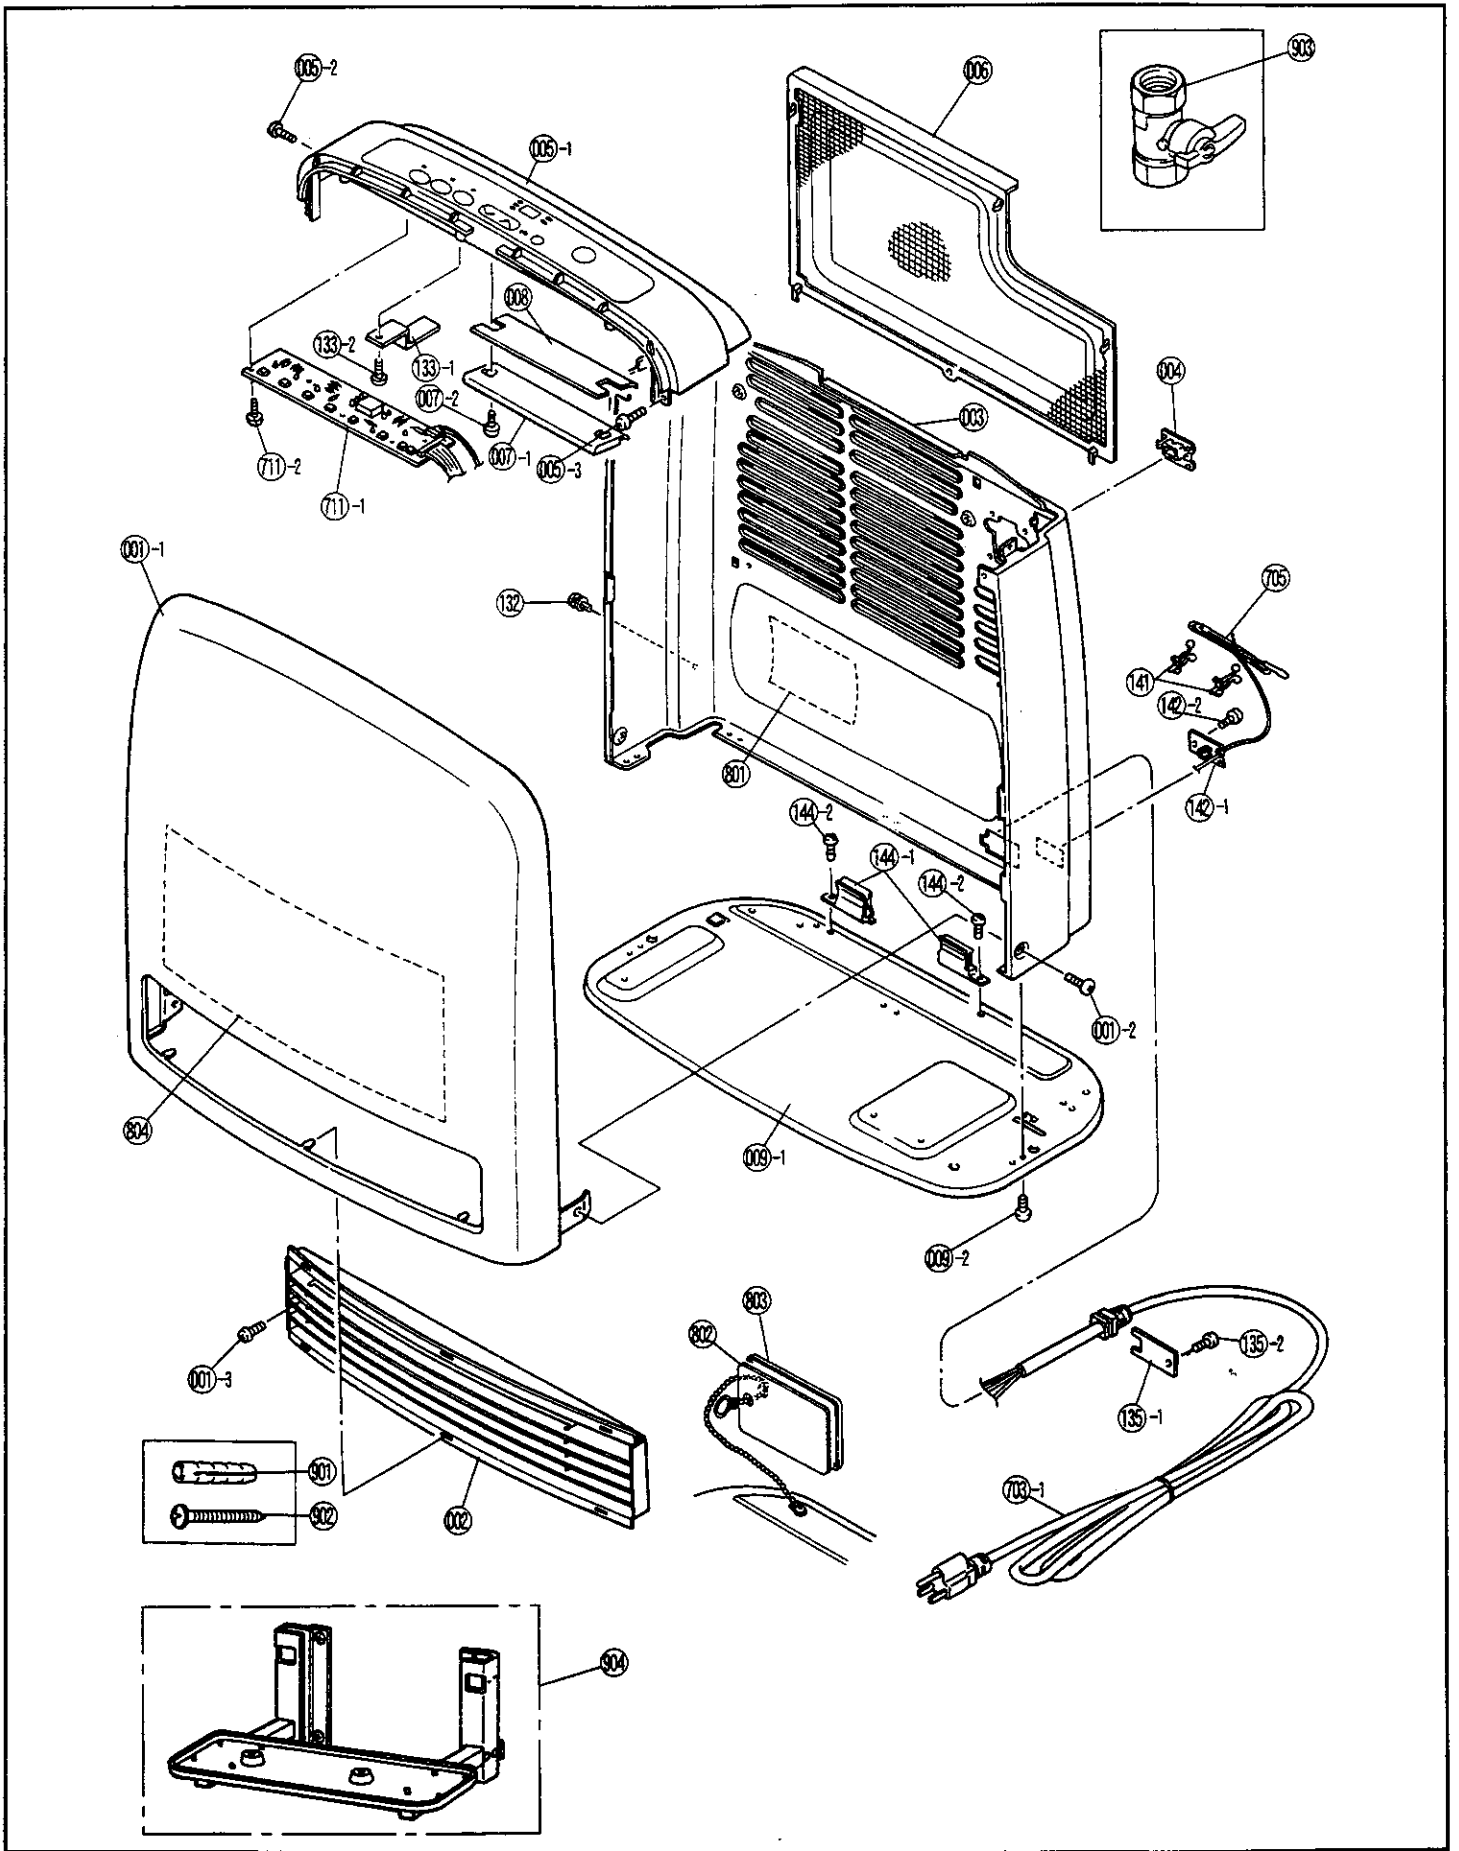

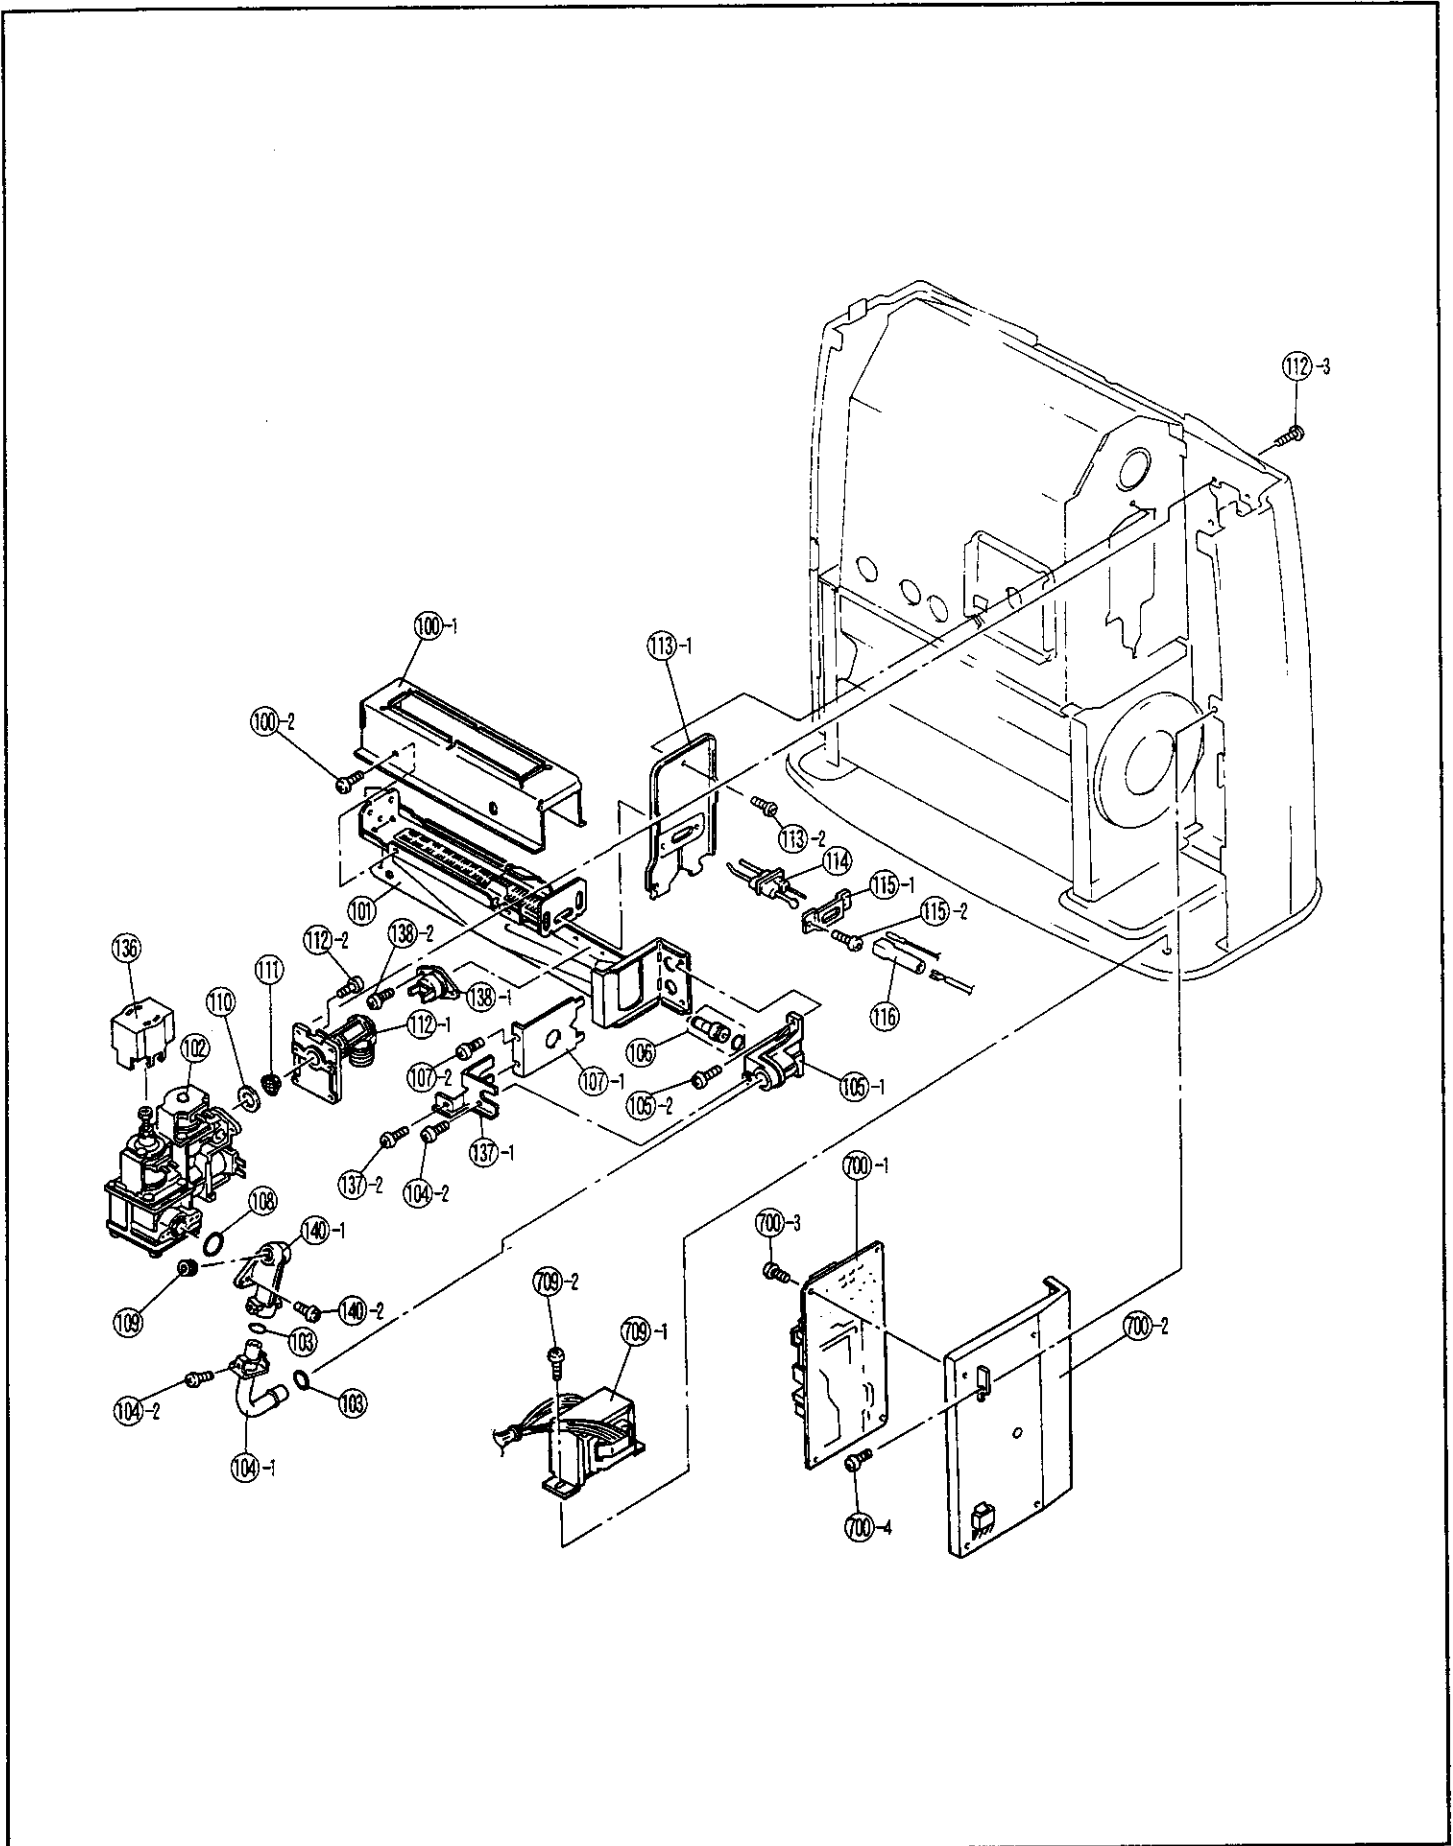

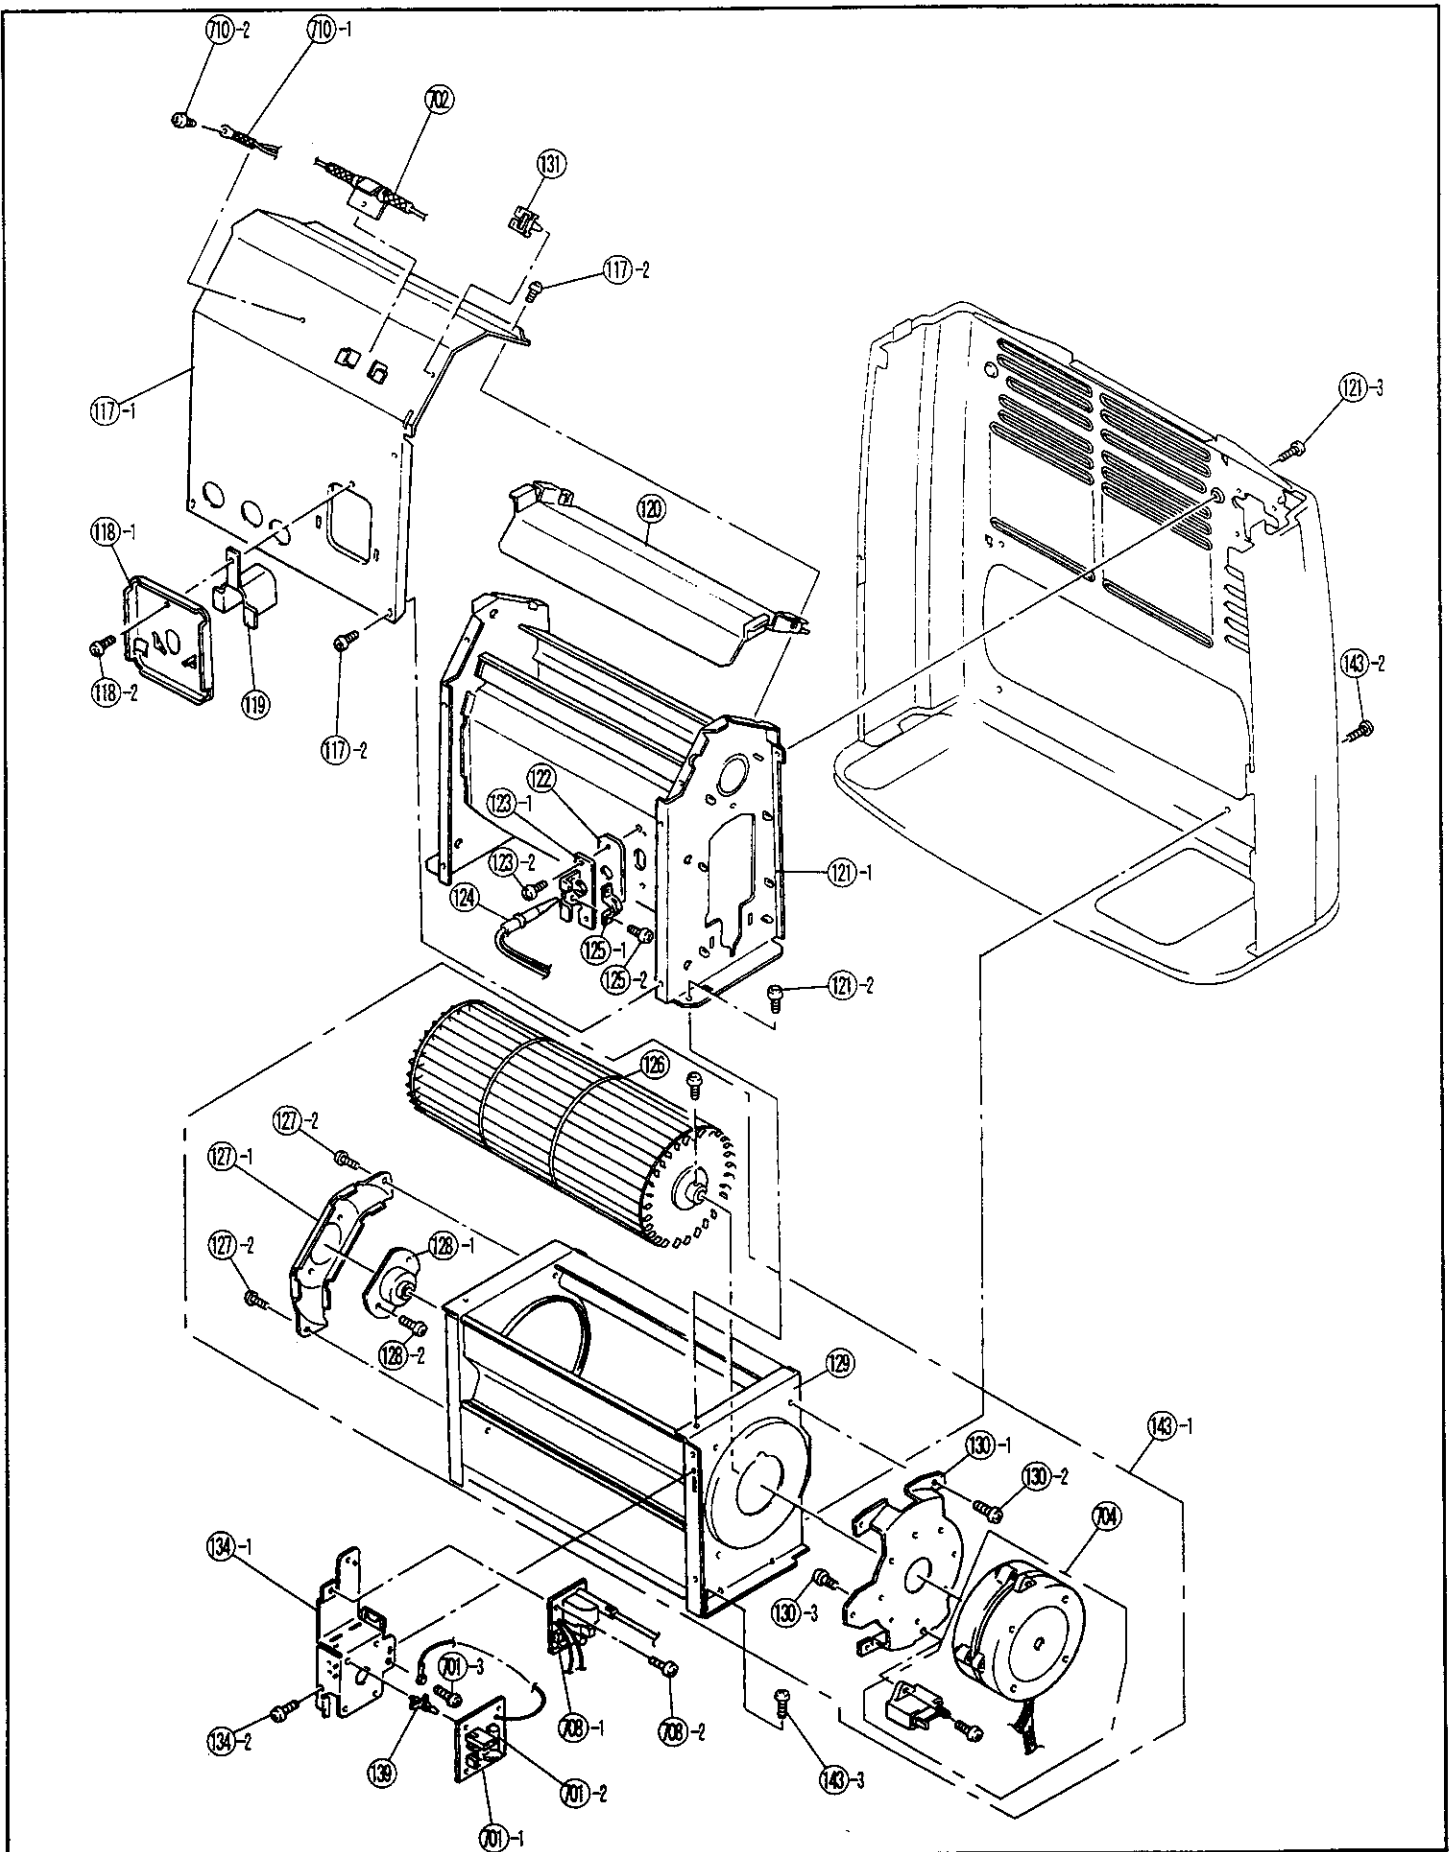

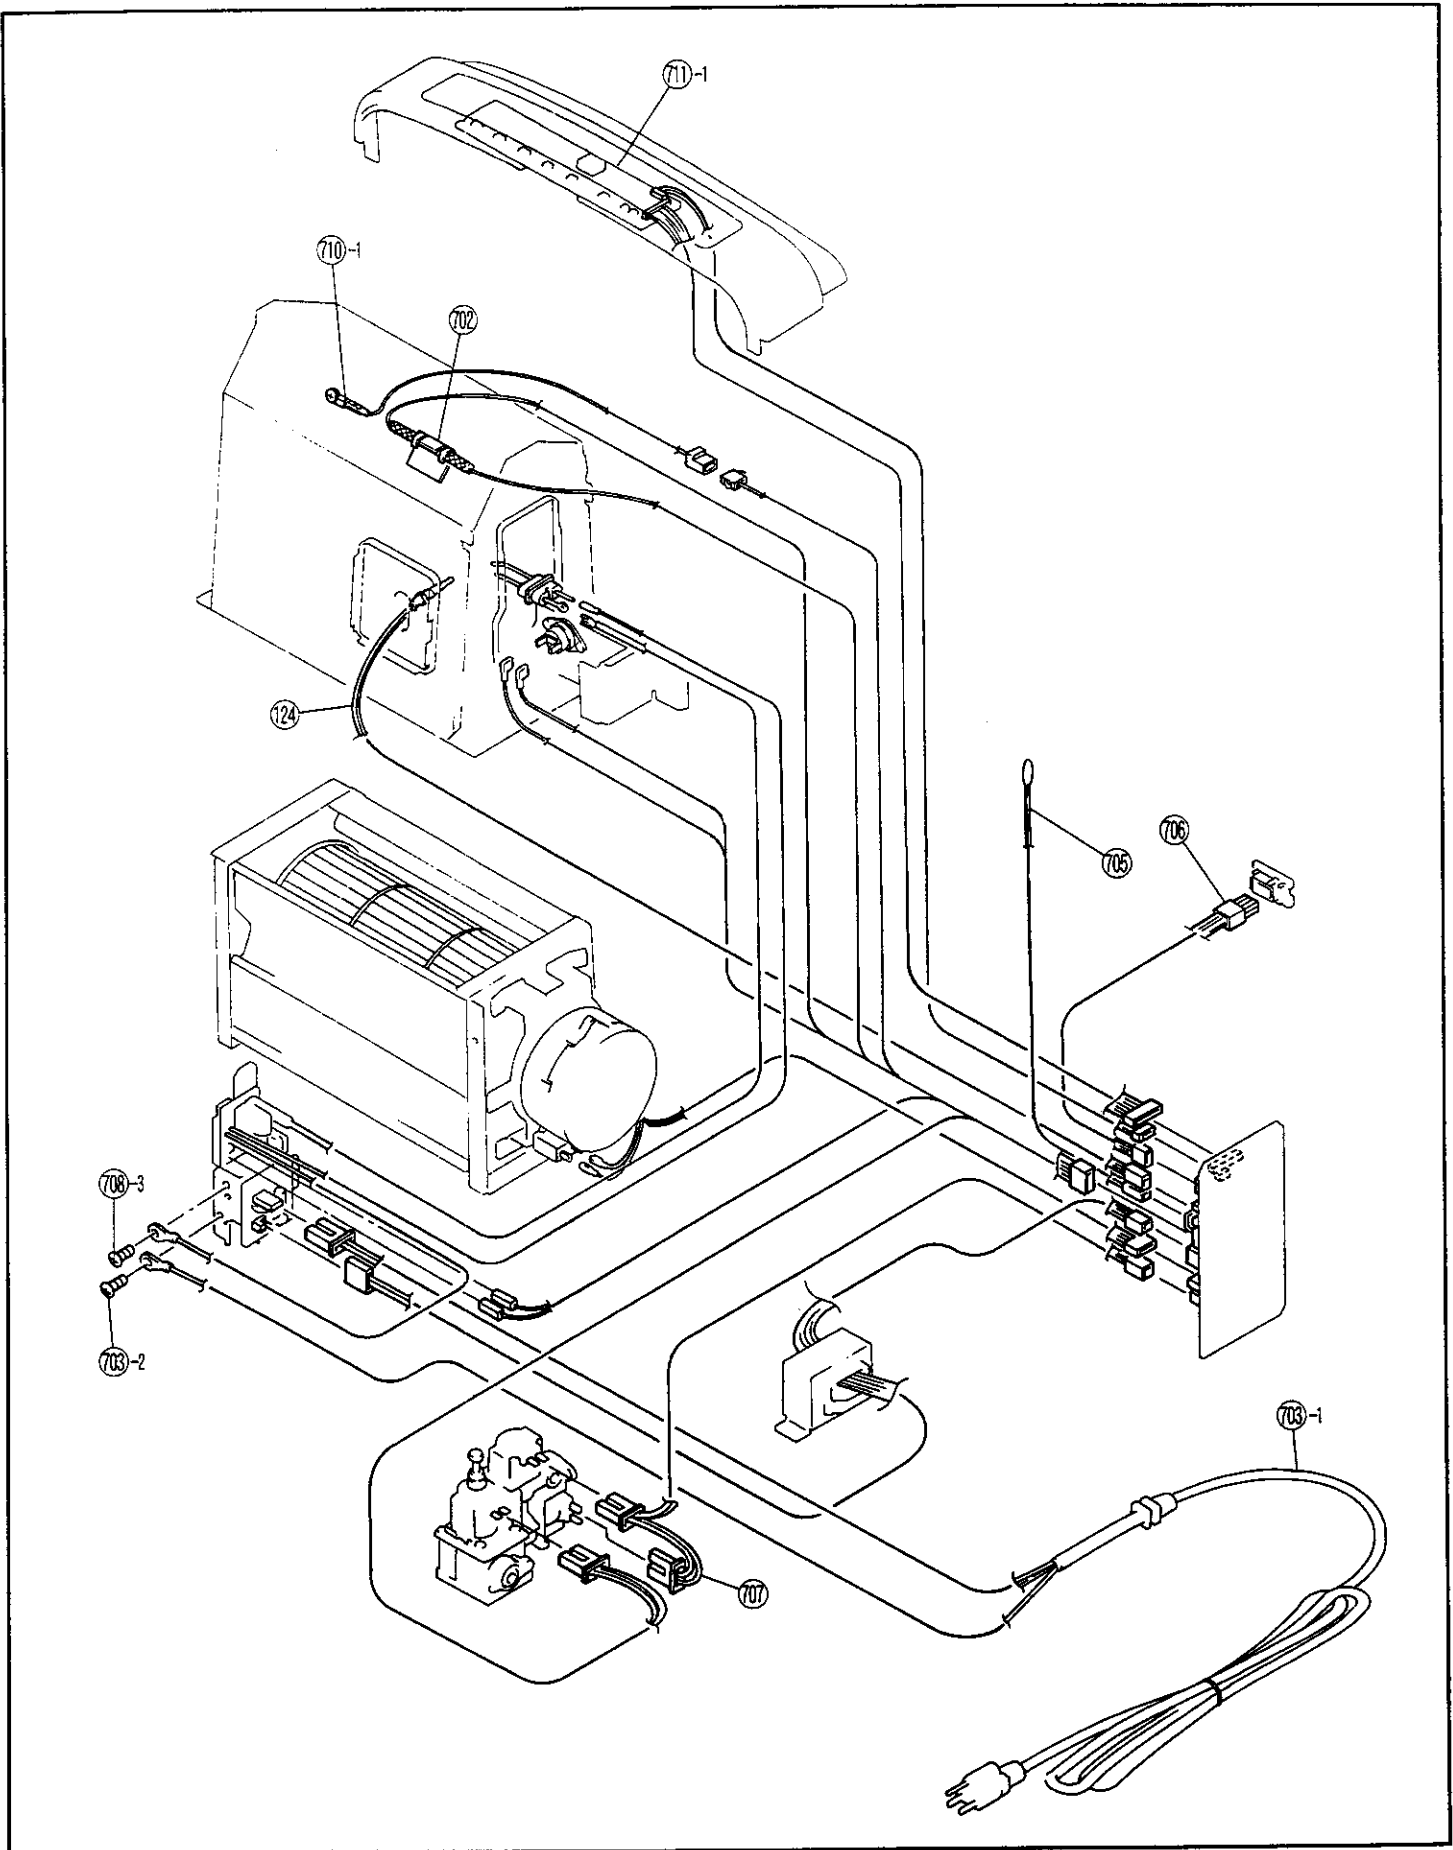

No.		PART NAME	PART No.	QTY.	REMARKS
001	001-1	FRONT PANEL K	RC-328-60-11	1	
	001-2	SCREW	ZFAB0410SC	2	
	001-3	SCREW	ZFAB0408SC	2	
002		LOUVER ASS'Y D	RC-328-36-4	1	
003		REAR PANEL F	RC-328-42-6	1	
004		TC CHECK HOLDER	RC-334-73-1	1	
005	005-1	TOP PLATE	RC-329-516-SP	1	
	005-2	SCREW	ZFAB0410SC	4	
	005-3	SCREW	ZFDB0410SZ	2	
006	006-1	AIR FILTER	RC-328-29	1	
007	007-1	TOP PLATE COVER	RC-241-87	1	
	007-2	SCREW	CP-30486-2	2	
008		TOP PLATE COVER SHEET	RC-241-91	1	
009	009-1	BASE	RC-328-41-6	1	
	009-2	SCREW	ZFAB0410SZ	5	
100	100-1	SECONDARY AIR COVER	RC-328-31	1	
	100-2	SCREW	CP 30518-1	4	
101		BURNER ASS'Y	B6C2-1-4	1	NG
		BURNER ASS'Y	B6C2-1-2	1	LPG
102		GAS CONTROL ASS'Y	C-36D-3-6-S	1	
103		O RING	M10B-1-10	2	
104	104-1	CONNECTION PIPE ASS'Y	RC-229-512	1	
	104-2	SCREW	ZHAA0406SZ	2	
105	105-1	INJECTOR HOLDER	RC-208-22	1	
	105-2	SCREW	ZFAB0410SZ	2	
106		INJECTOR	RC-208-11-2-1.50	1	NG
		INJECTOR	RC-208-11-1-1.10	1	LPG
107	107-1	DAMPER	RC-208-23-15	1	NG
	107-1	DAMPER	RC-208-23-17	1	LPG
	107-2	SCREW	ZFAB0408SZ	1	
108		O RING	M10B-13-14	1	
109		BLIND SCREW	AU39-965	1	
110		PACKING	C311-7	1	
111		FILTER	RCK-6808	1	
112	112-1	GAS INLET FLANGE	431F-1110-2	1	
	112-2	SCREW	ZHAA0414SZ	2	
	112-3	SCREW	ZBA0408SC	3	
113	113-1	BURNER LID	RC-351-35	1	
	113-2	SCREW	ZFAB0408SZ	1	
114		ELECTRODE	RC-328-32-2	1	
115	115-1	ELECTRODE BRACKET	RC-334-136	1	
	115-2	SCREW	ZFAB0408SZ	2	
116		SILICON TUBE	RC-223-84-b	1	
117	117-1	COMBUSTION CHAMBER COVER	RC-209-31-9	1	
	117-2	SCREW	ZFAB0408SZ	6	
118	118-1	COMBUSTION CHAMBER COVER LID	RC-209-18	1	
	118-2	SCREW	ZFAB0408SZ	1	
119		HEAT SHIELD	RC-209-19	1	

No.		PART NAME	PART No.	QTY.	REMARKS
120		SEPARATION BOARD	RC-209-36-3	1	
121	121-1	COMBUSTION CHAMBER ASS'Y	RC-351-11-2	1	
	121-2	SCREW	ZFAB0408SZ	2	
	121-3	SCREW	ZFAB0408SC	3	
122		TC SPACER	RC-209-68-1	1	NG,LPG
		TC SPACER	RC-209-68-2	1	NG,LPG
123	123-1	THERMOCOUPLE BRACKET	RC-152-224	1	
	123-2	SCREW	CP-30523-2	2	
124		THERMOCOUPLE TOTAL ASS'Y	RC-511-66-1	1	
125	125-1	THERMOCOUPLE FIXER	RC-210-89-2	1	
	125-2	SCREW	ZFAB0406SZ	1	
126		CONVECTION FAN	RC-329-18-2	1	
127	127-1	BEARING BRACKET	RC-351-69	1	
	127-2	SCREW	ZFAB0408SZ	2	
128	128-1	BEARING	RC-223-74	1	
	128-2	SCREW	ZFAB0406SZ	2	
129		CASING ASS'Y	RC-328-14-1	1	
130	130-1	MOTOR BRACKET	RC-329-19	1	
	130-2	SCREW	ZFAB0408SZ	4	
	130-3	SCREW	ZHAA0408SZ	4	
131		CLAMP	CP-90312	1	
132		NYLON TACK	RC-215-24-1	1	
133	133-1	TOP PLATE SUPPORTER	RC-328-55	1	
	133-2	SCREW	CP-30486-2	1	
134	134-1	IGNITER BRACKET	RC-329-1022	1	
	134-2	SCREW	ZFAB0408SZ	1	
135	135-1	POWER SUPPLY CABLE BRACKET	RC-329-1033	1	
	135-2	SCREW	ZFDB0408SB	1	
136		VALVE COVER	RC-606-96	1	
137	137-1	CONNECTION PIPE FIXER	RC-208-21	1	
	137-2	SCREW	ZFAB0408SZ	1	
138	138-1	OVER HEAT SWITCH	ES-01183	1	
	138-2	SCREW	CP-30518-1	2	
139		CIRCUIT BOARD SPACER	CP-90436-3	4	
140	140-1	OUTLET	RC-229-511	1	
	140-2	SCREW	ZHAA0412SZ	2	
141		CABLE CLIP	CP-90125-2	2	
142	142-1	THERMISTOR HOLDER	RC-229-540	1	
	142-2	SCREW	ZFAB0408SB	1	
143	143-1	CONVECTION FAN TOTAL ASS'Y	RC-329-523	1	
	143-2	SCREW	ZFAB0408SC	2	
	143-3	SCREW	ZFAB0408SZ	2	
144	144-1	PLATE HOLDER	RC-229-539	2	
	144-2	SCREW	ZFDB0410SB	2	
700		P.C.B.ASS'Y	RC-329-512	1	
	700-1	P.C.B.	ED-248-V1	1	
	700-2	P.C.B.FIXER	RC-329-25	1	
	700-3	SCREW	ZGAA0308SZ	4	

ERROR MESSAGES

This heater has the ability to check its own operation continuously. If a fault occurs, an Error Message will flash on the Digital Display of the control panel. This assists with diagnosing the fault, and may enable you to overcome a problem without a service call. Please quote the code displayed when inquiring about service.

CODE DISPLAYED	FAULT	REMEDY
03	Tilt switch activated	Turn heater ON, after setting heater upright.
11	Miss ignition	Check gas is turned ON. Service call if repeated.
12	Flame failure	Ventilate the room. Service call if repeated.
14	Back fire sensor activated	Turn heater OFF, after a while ON again. Service call if repeated.
	Overheat	Clean filter. Service call if repeated.
15	Room overheat	Service call.
00	Power cut	Turn heater OFF, then ON again.

If you see other codes displayed, contact Rinnai or your nearest service agent and arrange for a service call.

In all cases, you may be able to clear the Error Message simply by turning the heater OFF, then ON again. If the Error Message still remains or returns on the next operation, contact Rinnai or your nearest service agent and arrange for a service call.

 NAME TITLE

 COMPANY

 ADDRESS

 CITY STATE ZIP

 PHONE NUMBER



NO POSTAGE
 NECESSARY
 IF MAILED
 IN THE
 UNITED STATES

BUSINESS REPLY MAIL

FIRST CLASS PERMIT NO.271 LAGRANGE, GA

POSTAGE WILL BE PAID BY ADDRESSEE

Rinnai America Corp.
1662 Lukken Industrial Drive West
LaGrange GA 30240-9867



LIMITED WARRANTY RINNAI SPACE HEATERS

Rinnai America Corporation warrants the products described in this warranty including any parts and components thereof, to be free from any defects in materials and workmanship for the period specified below, subject to the terms specified in this warranty. This warranty gives you specific legal rights and you may also have other rights which vary from state to state. This warranty extends to the original purchaser.

MODEL	PERIOD OF COVERAGE	TYPE OF FAILURE COVERED
SILENT SERVANT RCE-329A	THREE YEARS FROM DATE OF PURCHASE	DEFECTIVE MATERIALS AND WORKMANSHIP

In the event of a malfunction, operational difficulty or failure of the product, or any parts or components, during the warranty term, resulting from defects in materials or workmanship Rinnai will remedy the malfunction, operational difficulty, or failure without charge to the owner. The remedy will consist of repair or replacement of the product (including payment of reasonable shipping costs) at the option of Rinnai. You may obtain the benefits of warranty coverage by returning the product to a qualified Rinnai servicing agent which has been qualified by Rinnai or its authorized distributor. Any such warranty replacement or repair shall be subject to the terms and conditions of this warranty for the remainder of the original period of coverage. In order to obtain the name and location of the qualified Rinnai servicing agent closest to you, please write Rinnai at the address shown on the back side of the warranty card or call Rinnai at 1-800-621-9419.

This warranty does not cover any failure, operational difficulty, or malfunction due to accident, abuse, misuse, alteration, Acts of God, misapplication, improper installation or improper maintenance or service, or from any cause other than defects in materials and workmanship.

Any implied warranties of merchantability and fitness applicable to the equipment are limited in duration to the period of coverage of this express written warranty. Some states do not allow limitations on how long an implied warranty lasts, so this limitation may not apply to you. **Rinnai is not liable for any special, indirect or consequential damages; some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation may not apply to you.**

Rinnai does not authorize any person or company to assume for it any other obligation or liability in connection with the sale, application, engineering, installation, use, removal, return, or replacement of its products; and no such representatives are binding on Rinnai. The Warranty Registration Card provided below should be returned within two weeks of purchase to help Rinnai better serve you. However, the return of the Registration Card is not necessary in order to validate this warranty.

EXTENDED WARRANTIES ARE AVAILABLE, CONTACT RINNAI FOR DETAILS.

Rinnai SPACE HEATER WARRANTY REGISTRATION CARD

Owner's Name _____
 Installation Address _____
 City, State, Zip _____
 Dealer's Name _____
 Address _____
 City, State, Zip _____
 Type of Dealer _____
 Model _____ Type of Gas _____
 Serial No. _____
 Date Purchased _____
 Comments: _____

Rinnai

AMERICA CORPORATION
 1662 Lukken Industrial Drive West,
 La Grange, Georgia 30240
 Phone: 1-800-621-9419

RC-329-521(00)

Printed in Japan 1999.4

PLEASE RETURN THIS CARD TO RINNAI WITHIN TWO WEEKS OF PURCHASE