


OPERATOR'S MANUAL

CRAFTSMAN®

PLUNGE ROUTER DOUBLE INSULATED

Model No.
315.175170

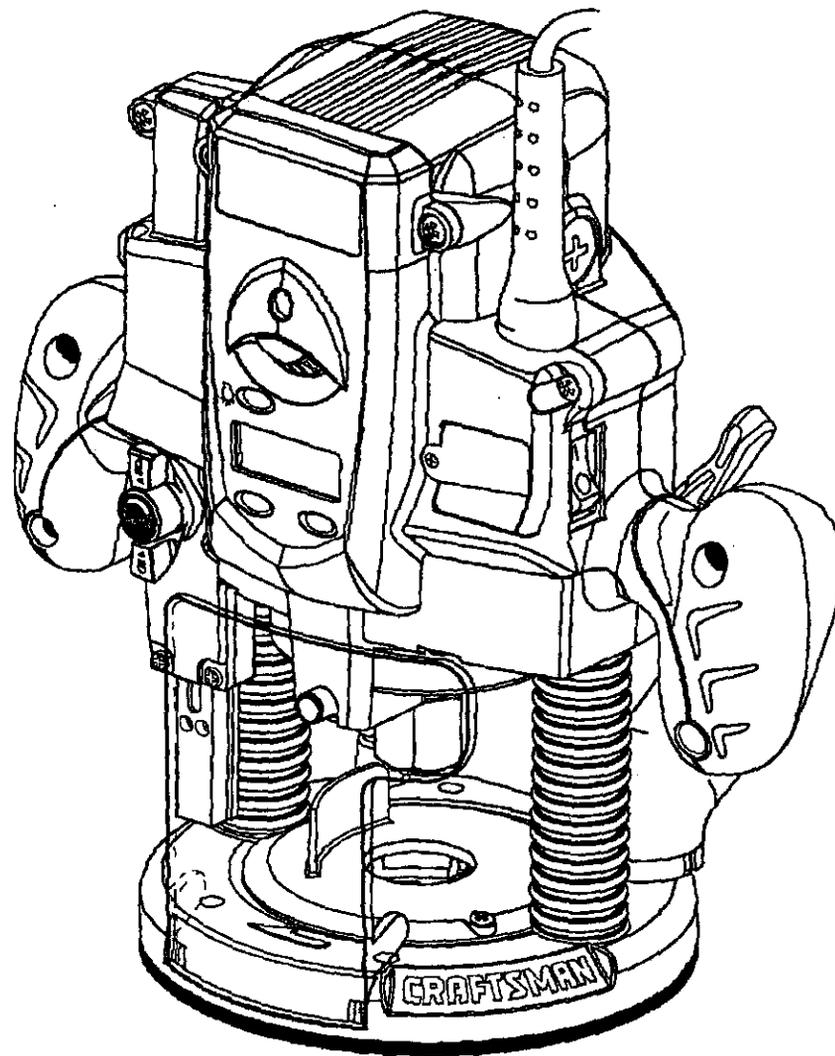

WARNING: To reduce the risk of injury, the user must read and understand the operator's manual before using this product.

Customer Help Line: 1-800-932-3188

Sears, Roebuck and Co., 3333 Beverly Rd., Hoffman Estates, IL 60179 USA
Visit the Craftsman web page: www.sears.com/craftsman

983000-497
6-9-06 (REV:02)

Save this manual for future reference



TABLE OF CONTENTS

■ Warranty	2
■ Introduction	2
■ General Safety Rules	3-4
■ Specific Safety Rules	4
■ Symbols	5-6
■ Electrical	7
■ Features	8-9
■ Assembly	10
■ Operation	11-21
■ Maintenance	22-23
■ Exploded View and Parts List	24-25
■ Parts Ordering/Service	Back Page

WARRANTY

ONE YEAR FULL WARRANTY ON CRAFTSMAN TOOL

If this Craftsman tool fails to give complete satisfaction within one year from date of purchase, **RETURN IT TO THE NEAREST SEARS STORE OR SEARS PARTS & REPAIR CENTER IN THE UNITED STATES**, and Sears will repair it, free of charge.

If this Craftsman tool is used for commercial or rental purposes, this warranty applies for only 90 days from the date of purchase.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Sears, Roebuck and Co., Dept. 817WA, Hoffman Estates, IL 60179

INTRODUCTION

This tool has many features for making its use more pleasant and enjoyable. Safety, performance, and dependability have been given top priority in the design of this product making it easy to maintain and operate.

GENERAL SAFETY RULES

⚠ WARNING: Read and understand all instructions. Failure to follow all instructions listed below, may result in electric shock, fire and/or serious personal injury.

SAVE THESE INSTRUCTIONS

WORK AREA

- **Keep your work area clean and well lit.** Cluttered benches and dark areas invite accidents.
- **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.** Power tools create sparks which may ignite the dust or fumes.
- **Keep bystanders, children, and visitors away while operating a power tool.** Distractions can cause you to lose control.

ELECTRICAL SAFETY

- **Double insulated tools are equipped with a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a polarized outlet. Do not change the plug in any way.** Double insulation  eliminates the need for the three-wire grounded power cord and grounded power supply system.
- **Avoid body contact with grounded surfaces such as pipes, radiators, ranges, and refrigerators.** There is an increased risk of electric shock if your body is grounded.
- **Don't expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- **Do not abuse the cord. Never use the cord to carry the tools or pull the plug from an outlet. Keep cord away from heat, oil, sharp edges, or moving parts. Replace damaged cords immediately.** Damaged cords increase the risk of electric shock.
- **When operating a power tool outside, use an outdoor extension cord marked "W-A" or "W".** These cords are rated for outdoor use and reduce the risk of electric shock.

PERSONAL SAFETY

- **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use tool while tired or under the influence of drugs, alcohol, or medication.** A moment of inattention while operating power tools may result in serious personal injury.
- **Dress properly. Do not wear loose clothing or jewelry. Contain long hair. Keep your hair, clothing, and gloves away from moving parts.** Loose clothes, jewelry, or long hair can be caught in moving parts.

- **Avoid accidental starting. Be sure switch is off before plugging in.** Carrying tools with your finger on the switch or plugging in tools that have the switch on invites accidents.
- **Remove adjusting keys or wrenches before turning the tool on.** A wrench or a key that is left attached to a rotating part of the tool may result in personal injury.
- **Do not overreach. Keep proper footing and balance at all times.** Proper footing and balance enables better control of the tool in unexpected situations.
- **Use safety equipment. Always wear eye protection.** Dust mask, nonskid safety shoes, hard hat, or hearing protection must be used for appropriate conditions.
- **Do not wear loose clothing or jewelry. Contain long hair.** Loose clothes, jewelry, or long hair can be drawn into air vents.
- **Do not use on a ladder or unstable support.** Stable footing on a solid surface enables better control of the tool in unexpected situations.

TOOL USE AND CARE

- **Use clamps or other practical way to secure and support the workpiece to a stable platform.** Holding the work by hand or against your body is unstable and may lead to loss of control.
- **Do not force tool. Use the correct tool for your application.** The correct tool will do the job better and safer at the rate for which it is designed.
- **Do not use tool if switch does not turn it on or off.** Any tool that cannot be controlled with the switch is dangerous and must be repaired.
- **Disconnect the plug from power source before making any adjustments, changing accessories, or storing the tool.** Such preventive safety measures reduce the risk of starting the tool accidentally.
- **Store idle tools out of the reach of children and other untrained persons.** Tools are dangerous in the hands of untrained users.
- **Maintain tools with care. Keep cutting tools sharp and clean.** Properly maintained tools with sharp cutting edges are less likely to bind and are easier to control.
- **Check for misalignment or binding of moving parts, breakage of parts, and any other condition that may affect the tool's operation. If damaged, have the tool serviced before using.** Many accidents are caused by poorly maintained tools.
- **Use only accessories that are recommended by the manufacturer for your model.** Accessories that may be suitable for one tool, may become hazardous when used on another tool.
- **Keep the tool and its handle dry, clean and free from oil and grease.** Always use a clean cloth when cleaning. Never use brake fluids, gasoline, petroleum-based products, or any strong solvents to clean your tool. Following this rule will reduce the risk of loss of control and deterioration of the enclosure plastic.

GENERAL SAFETY RULES

SERVICE

- **Tool service must be performed only by qualified repair personnel.** Service or maintenance performed by unqualified personnel could result in a risk of injury.
- **When servicing a tool, use only identical replacement parts.** Follow instructions in the Maintenance section of this manual. Use of unauthorized parts or failure to follow Maintenance Instructions may create a risk of electric shock or injury.

SPECIFIC SAFETY RULES

- **Bits coast after router has been turned off.**
- **Hold tool by insulated gripping surfaces when performing an operation where the cutting tool may contact hidden wiring or its own cord.** Contact with a "live" wire will make exposed metal parts of the cutting tool "live" and shock the operator.
- **Know your power tool. Read operator's manual carefully. Learn its applications and limitations, as well as the specific potential hazards related to this tool.** Following this rule will reduce the risk of electric shock, fire, or serious injury.
- **Always wear safety glasses. Everyday eyeglasses have only impact-resistant lenses; they are NOT safety glasses.** Following this rule will reduce the risk of serious personal injury.
- **Protect your lungs. Wear a face or dust mask if the operation is dusty.** Following this rule will reduce the risk of serious personal injury.
- **Protect your hearing. Wear hearing protection during extended periods of operation.** Following this rule will reduce the risk of serious personal injury.
- **Inspect tool cords periodically and, if damaged, have repaired at your nearest Sears or other qualified service center. Constantly stay aware of cord location.** Following this rule will reduce the risk of electric shock or fire.
- **Check damaged parts. Before further use of the tool, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function.** Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced by an authorized service center. Following this rule will reduce the risk of shock, fire, or serious injury.
- **Make sure your extension cord is in good condition. When using an extension cord, be sure to use one heavy enough to carry the current your product will draw. A wire gauge size (A.W.G.) of at least 14 is recommended for an extension cord 50 feet or less in length. A cord exceeding 50 feet is not recommended. If in doubt, use the next heavier gauge. The smaller the gauge number, the heavier the cord. An undersized cord will cause a drop in line voltage resulting in loss of power and overheating.**
- **Inspect for and remove all nails from lumber before using this tool.** Following this rule will reduce the risk of serious personal injury.
- **Save these instructions.** Refer to them frequently and use them to instruct others who may use this tool. If you loan someone this tool, loan them these instructions also.

⚠ WARNING: Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- lead from lead-based paints,
- crystalline silica from bricks and cement and other masonry products, and
- arsenic and chromium from chemically-treated lumber.

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

SYMBOLS

Some of the following symbols may be used on this tool. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the tool better and safer.

SYMBOL	NAME	DESIGNATION/EXPLANATION
V	Volts	Voltage
A	Amperes	Current
Hz	Hertz	Frequency (cycles per second)
W	Watt	Power
min	Minutes	Time
~	Alternating Current	Type of current
—	Direct Current	Type or a characteristic of current
n_0	No Load Speed	Rotational speed, at no load
	Class II Construction	Double-insulated construction
.../min	Per Minute	Revolutions, strokes, surface speed, orbits etc., per minute
	Wet Conditions Alert	Do not expose to rain or use in damp locations.
	Read The Operator's Manual	To reduce the risk of injury, user must read and understand operator's manual before using this product.
	Eye Protection	Always wear safety goggles or safety glasses with side shields and, as necessary, a full face shield when operating this product.
	Safety Alert	Precautions that involve your safety.
	No Hands Symbol	Failure to keep your hands away from the blade will result in serious personal injury.
	No Hands Symbol	Failure to keep your hands away from the blade will result in serious personal injury.
	No Hands Symbol	Failure to keep your hands away from the blade will result in serious personal injury.
	No Hands Symbol	Failure to keep your hands away from the blade will result in serious personal injury.
	Hot Surface	To reduce the risk of injury or damage, avoid contact with any hot surface.

SYMBOLS

The following signal words and meanings are intended to explain the levels of risk associated with this product.

SYMBOL	SIGNAL	MEANING
	DANGER:	Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury.
	WARNING:	Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.
	CAUTION:	Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury.
	CAUTION:	(Without Safety Alert Symbol) Indicates a situation that may result in property damage.

SERVICE

Servicing requires extreme care and knowledge and should be performed only by a qualified service technician. For service we suggest you return the product to your nearest **SEARS OR OTHER QUALIFIED SERVICE CENTER** for repair. When servicing, use only identical replacement parts.



WARNING: To avoid serious personal injury, do not attempt to use this product until you read thoroughly and understand completely the operator's manual. If you do not understand the warnings and instructions in the operator's manual, do not use this product. Call Sears customer service for assistance.



WARNING:



The operation of any power tool can result in foreign objects being thrown into your eyes, which can result in severe eye damage. Before beginning power tool operation, always wear safety goggles or safety glasses with side shields and, when needed, a full face shield. We recommend Wide Vision Safety Mask for use over eyeglasses or standard safety glasses with side shields. Always use eye protection which is marked to comply with ANSI Z87.1.

SAVE THESE INSTRUCTIONS

ELECTRICAL

DOUBLE INSULATION

Double insulation is a concept in safety in electric power tools, which eliminates the need for the usual three-wire grounded power cord. All exposed metal parts are isolated from the internal metal motor components with protecting insulation. Double insulated tools do not need to be grounded.

⚠ WARNING: The double insulated system is intended to protect the user from shock resulting from a break in the tool's internal insulation. Observe all normal safety precautions to avoid electrical shock.

NOTE: Servicing of a tool with double insulation requires extreme care and knowledge of the system and should be performed only by a qualified service technician. For service, we suggest you return the tool to your nearest Sears or other qualified service center for repair. Always use original factory replacement parts when servicing.

ELECTRICAL CONNECTION

This tool has a precision-built electric motor. It should be connected to a **power supply that is 120 volts, 60 Hz, AC only (normal household current)**. Do not operate this tool on direct current (DC). A substantial voltage drop will cause a loss of power and the motor will overheat. If your tool does not operate when plugged into an outlet, double-check the power supply.

EXTENSION CORDS

When using a power tool at a considerable distance from a power source, be sure to use an extension cord that has the capacity to handle the current the tool will draw. An undersized cord will cause a drop in line voltage, resulting in overheating and loss of power. Use the chart to determine the minimum wire size required in an extension cord. Only round jacketed cords listed by Underwriter's Laboratories (UL) should be used.

When working outdoors with a tool, use an extension cord that is designed for outside use. This type of cord is designated with "WA" on the cord's jacket.

Before using any extension cord, inspect it for loose or exposed wires and cut or worn insulation.

**Ampere rating (on tool faceplate)						
0-2.0 2.1-3.4 3.5-5.0 5.1-7.0 7.1-12.0 12.1-16.0						
Cord Length	Wire Size (A.W.G.)					
25'	16	16	16	16	14	14
50'	16	16	16	14	14	12
100'	16	16	14	12	10	—

***Used on 12 gauge - 20 amp circuit

NOTE: AWG = American Wire Gauge

⚠ WARNING: Keep the extension cord clear of the working area. Position the cord so that it will not get caught on lumber, tools or other obstructions while you are working with a power tool. Failure to do so can result in serious personal injury.

⚠ WARNING: Check extension cords before each use. If damaged replace immediately. Never use tool with a damaged cord since touching the damaged area could cause electrical shock resulting in serious injury.

FEATURES

PRODUCT SPECIFICATIONS

Plunge Depth.....0-2 in.
 Collet..... 1/4 in. and 1/2 in.
 Adaptor..... 1/4 in.

No Load Speed 15,000-25,000/min.
 Input 120 V, 60 Hz, AC only, 10.0 Amps
 Net Weight.....8.5 lbs.

FRONT VIEW OF ROUTER

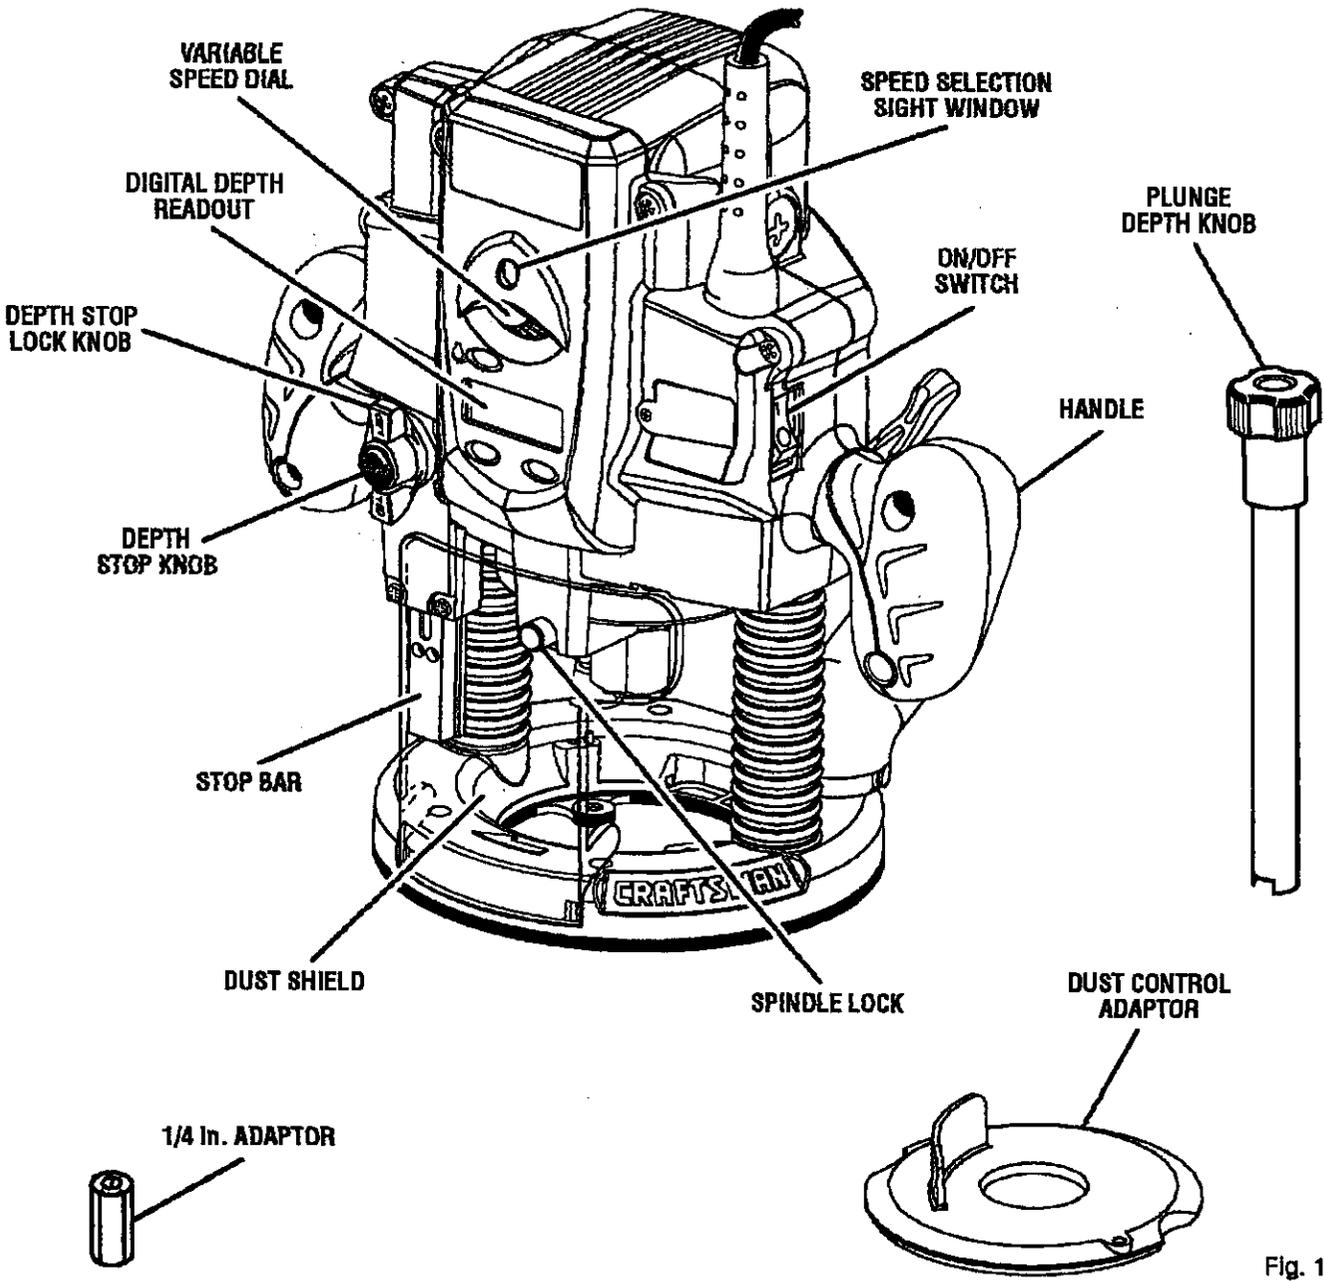


Fig. 1

FEATURES

KNOW YOUR PLUNGE ROUTER

See Figures 1 - 2.

The safe use of this product requires an understanding of the information on the tool and in this operator's manual as well as a knowledge of the project you are attempting. Before use of this product, familiarize yourself with all operating features and safety rules.

DEPTH STOP KNOB

The depth stop knob works with the stop bar for accurate depth of plunge when routing.

DIGITAL DEPTH READOUT

Easily view your depth of cut adjustments using the digital depth readout which shows changes of depth in increments of 1/64 in. and 1/10 mm.

DUST CONTROL ADAPTOR

The dust control adaptor attaches to the router base for dust-free routing.

DUST SHIELD

A clear plastic dust shield is installed on the front of the router for protection against flying dust and chips. The shield is designed to fit the opening of the router base.

ERGONOMIC DESIGN

The design of this tool provides easy handling when operating in different positions and at different angles.

PLUNGE LOCK LEVER

Your router has a plunge lock lever that allows for free plunging. This feature is very useful for table mounted operations on UL listed router tables when used with the plunge depth knob.


SPINDLE LOCK

A spindle lock secures the spindle so that only one wrench is needed to loosen the collet nut and change cutters.

VARIABLE SPEED

The variable speed dial allows the router to develop a no load speed that can be adjusted from 15,000 to 25,000/min.

REAR VIEW OF ROUTER

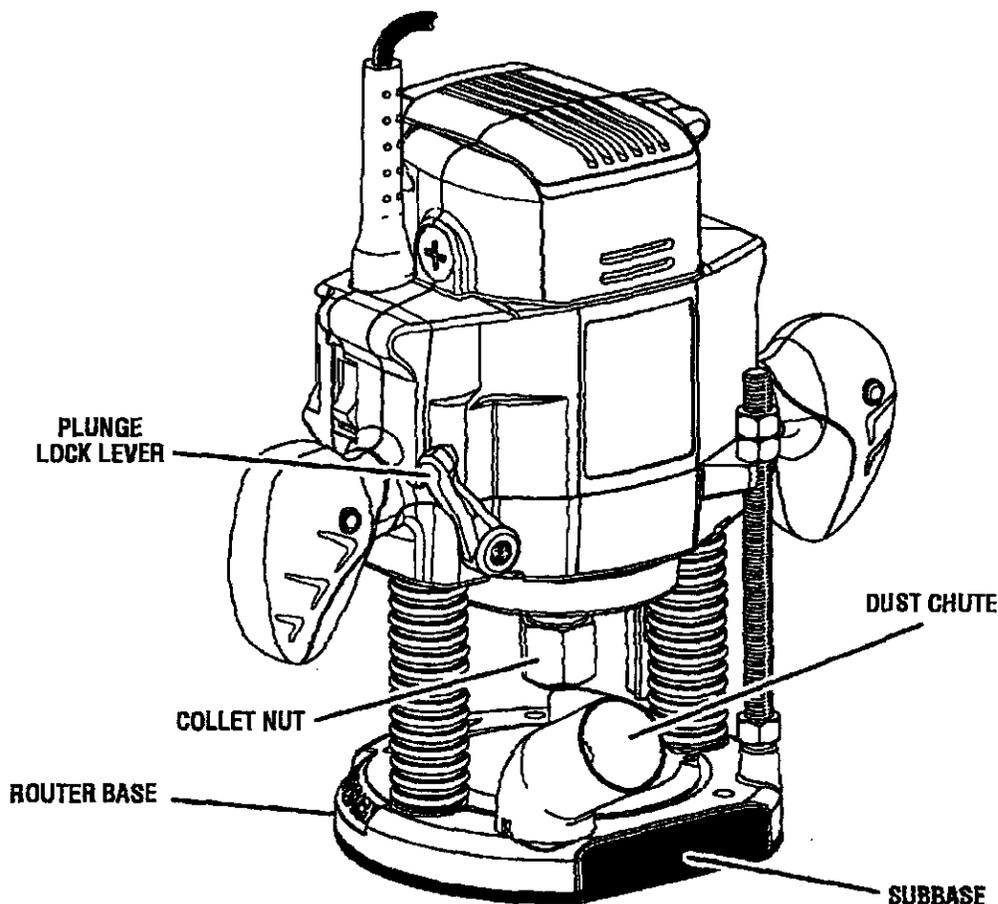

ASSEMBLY

UNPACKING

This product has been shipped completely assembled.

- Carefully remove the tool and any accessories from the box. Make sure that all items listed in the packing list are included.
- Inspect the tool carefully to make sure no breakage or damage occurred during shipping.
- Do not discard the packing material until you have carefully inspected and satisfactorily operated the tool.
- If any parts are damaged or missing, please call 1-800-932-3188 for assistance.

PACKING LIST

Plunge Router
Dust Control Adaptor
Collet
Plunge Depth Knob Assembly
Screws (2)
1/4 in. Adaptor
3V Battery
15/16 in. Wrench
Operator's Manual

⚠ WARNING: If any parts are damaged or missing do not operate this tool until the parts are replaced. Failure to heed this warning could result in serious personal injury.

⚠ WARNING: Do not attempt to modify this tool or create accessories not recommended for use with this tool. Any such alteration or modification is misuse and could result in a hazardous condition leading to possible serious personal injury.

⚠ WARNING: Do not connect to power supply until assembly is complete. Failure to comply could result in accidental starting and possible serious injury.

INSTALLING DIGITAL DEPTH READOUT BATTERY

See Figures 3.

- Unplug the router.
- Remove screw from the battery cover.
- Insert the 3V battery provided with the tool.
- Replace the battery cover and secure with screw.

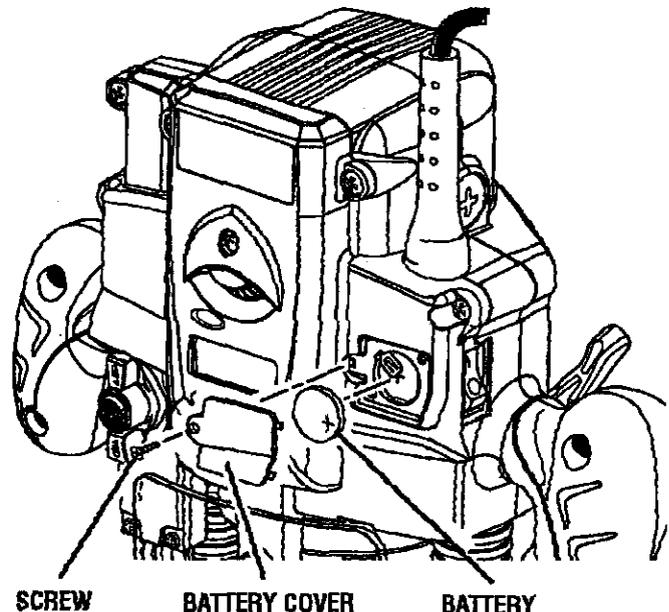


Fig. 3

OPERATION

- ⚠ **WARNING:** Do not allow familiarity with tools to make you careless. Remember that a careless fraction of a second is sufficient to inflict serious injury.
- ⚠ **WARNING:** Always wear safety goggles or safety glasses with side shields when operating power tools. Failure to do so could result in objects being thrown into your eyes resulting in possible serious injury.
- ⚠ **WARNING:** Do not use any attachments or accessories not recommended by the manufacturer of this tool. The use of attachments or accessories not recommended can result in serious personal injury.
- ⚠ **WARNING:** Keep a firm grip on router with both hands at all times. Failure to do so could result in loss of control leading to possible serious personal injury.

APPLICATIONS

You may use this tool for the purposes listed below:

- Routing grooves, shaping edges, freehand designs, etc., in wood
- Chamfering, rabbeting, dadoing, and dovetailing in wood
- Routing edges on laminates

- ⚠ **WARNING:** Before performing any adjustment, make sure the tool is unplugged from the power supply and the switch is in the **OFF** position. Failure to heed this warning could result in serious personal injury.

- ⚠ **WARNING:** Bit continues to rotate after the router has been turned off. To avoid injury, wait until the bit has come to a complete stop before removing router from the workpiece.

CAUTION: To prevent damage to the spindle or spindle lock, always allow motor to come to a complete stop before engaging the spindle lock.

CHANGING CUTTERS

See Figures 4 - 5.

- Unplug the router.
- Remove dust shield from router base.

- Depress spindle lock.

NOTE: When using the spindle lock button for any application, make sure the button goes all the way in. If the button is depressed and does not go all the way in, turn the collet until the spindle lock button locks into place.

- Place the wrench provided through front of router base onto collet nut and turn counterclockwise to loosen.

- ⚠ **WARNING:** If you are changing a cutter immediately after use, be careful not to touch the cutter or collet with your hands or fingers. They will get burned because of heat buildup from cutting. Always use the wrench provided.

- Install cutter once collet nut is loose. If changing cutters, cutter will easily slip from collet after loosening collet nut.

NOTE: The collet is machined to precision tolerances to fit cutters with 1/2 in. diameter shanks. To use cutters with 1/4 in. diameter shanks, insert the 1/4 in. adaptor into the 1/2 in. collet.

- Insert shank (non-cutting end) of cutter until shank bottoms out, then pull it out 1/16 in. to allow for expansion when the cutter gets hot.
- Tighten the collet nut securely by turning clockwise with the wrench.
- Release spindle lock.
- Replace chip shield.

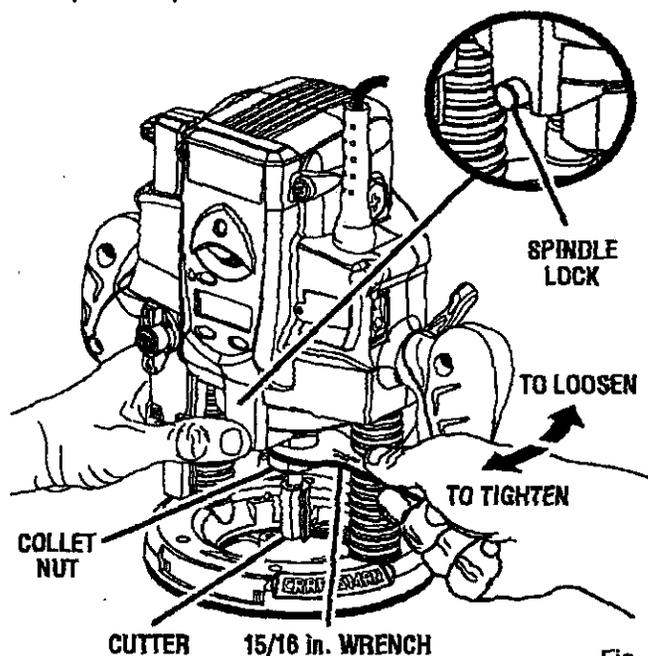


Fig. 4

OPERATION

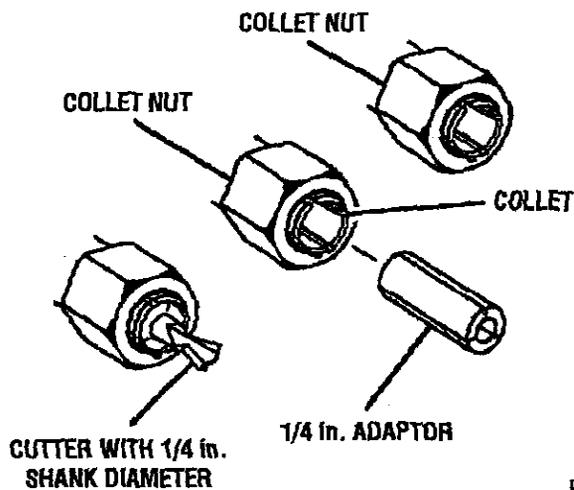


Fig. 5

WARNING: If the collet is not securely tightened, the cutter may detach during use causing serious personal injury.

WARNING: Do not use cutters with undersized shanks. Undersized shanks will not tighten properly and could be thrown from the tool causing serious personal injury.

WARNING: Do not use cutters that are larger in diameter than the opening in router base. Use of such cutters will come in contact with the router base and damage both the cutter and the router base. This situation could also cause possible loss of control or create other hazardous conditions that could cause possible serious personal injury.

SELECTING DEPTH OF CUT

Proper depth of cut depends on several factors: the horsepower of the router motor, the type of cutter, and the type of wood. A lightweight, low horsepower router is designed for making shallow cuts; a router with higher horsepower is designed for deeper cuts. Small cutters, such as veining cutters with 1/16 in. cutting diameters, are designed to remove only small amounts of wood. Large cutters, such as straight-flute cutters, remove larger amounts of wood and make deeper cuts in soft woods, such as white pine.

Choose a depth of cut that will not place excessive strain on the router motor. If you need extra force or the motor speed slows down considerably, turn off the router and reduce the depth of cut. Then make the cut in two or more passes.

When routing a groove that is too deep to safely cut in one pass, make the cut in several passes. We recommend that cuts be made at a depth not exceeding 1/8 in. and that several passes be made to reach deeper cuts.

TO ADJUST DEPTH OF CUT

See Figures 6 - 8.

- Unplug the router.
- Raise cutter by unlocking plunge lock lever.
- Adjust hex nuts on threaded post until cutter is inside router subbase.
- Place router on a flat surface.
- Lower router until tip of cutter barely touches flat surface.
- Lock plunge lock lever to position cutter at zero depth of cut.
- Adjust hex nuts until they come in contact with stop flange. This will provide a position stop at zero depth of cut.
- Make sure the hex nuts are securely tightened against each other.


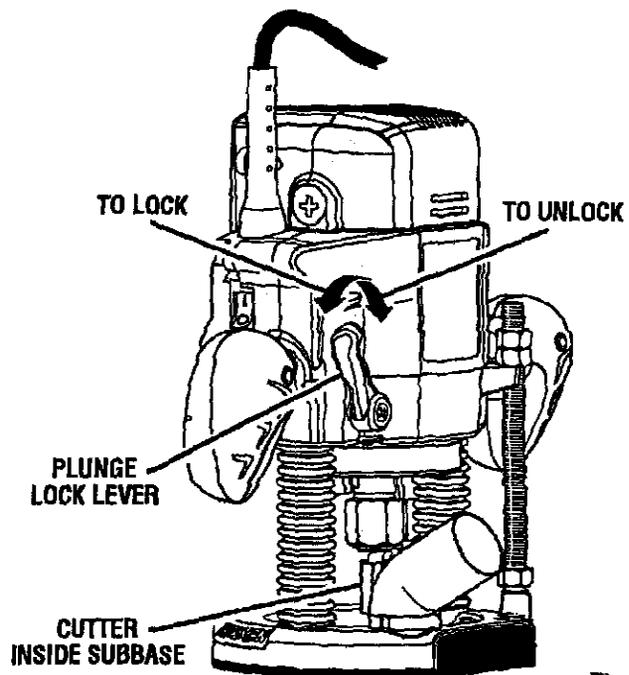


Fig. 6

- Rotate depth stop lock knob counterclockwise to unlock depth stop knob.
- Rotate depth stop knob until stop bar touches router base.
- Turn on digital depth readout by pushing on/off/zero button. Push the mm/in button for desired unit of measure.

NOTE: Push the backlight button to illuminate the digital depth readout.
- Rotate depth stop knob to position stop bar at desired depth of cut.
- Turn depth stop lock knob clockwise to lock stop bar in place.

OPERATION

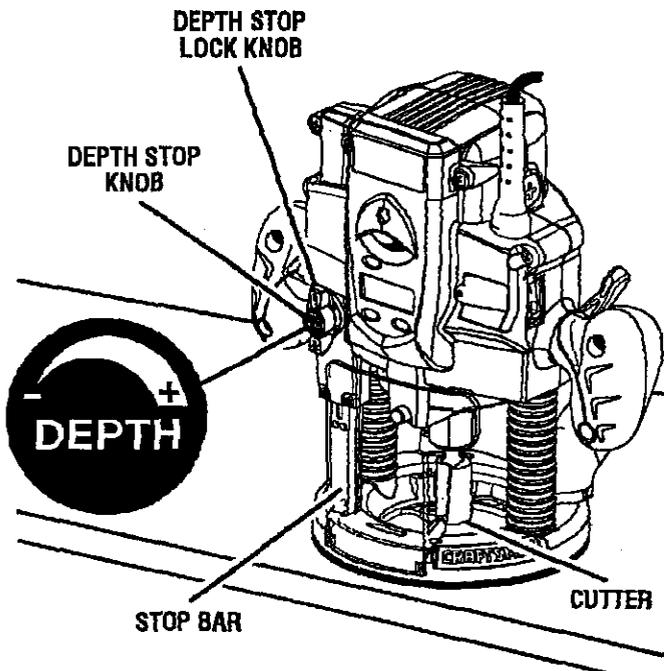

TIP OF CUTTER TOUCHING WORKPIECE = ZERO DEPTH OF CUT

Fig. 7

- Position the router so that the cutter can extend below the subbase for desired depth setting.
 - Unlock plunge lock lever.
 - Grasp handles and lower router until stop bar contacts router base.
- NOTE:** Do not use excessive force to touch stop bar to router base. Excessive force can damage stop bar.
- Lock plunge lock lever to position cutter at desired depth of cut.

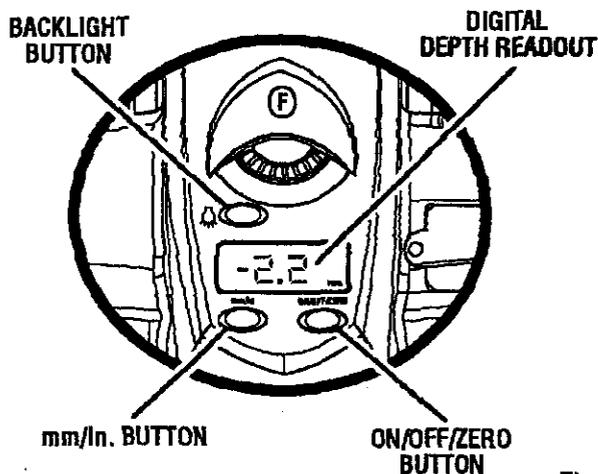


Fig. 8

PLUNGE DEPTH KNOB

See Figures 9 - 10.

The weight of the router plus the awkward position it is in when mounted to a router table make it very difficult to set depth of cut simply by turning the hex nut with a 15/16 in. wrench.

It is recommended using the plunge depth knob when your router is mounted upside down on a UL listed router table.

The plunge depth knob is spring loaded against the hex nut to prevent router motor from accidentally separating from router base. If plunge depth knob is turned too far up plunge depth shaft, the spring will cause the rod to pop off before hex nut. Do not remove hex nut. It should remain on plunge depth shaft at all times. This is especially important when using router upside down on a router table.

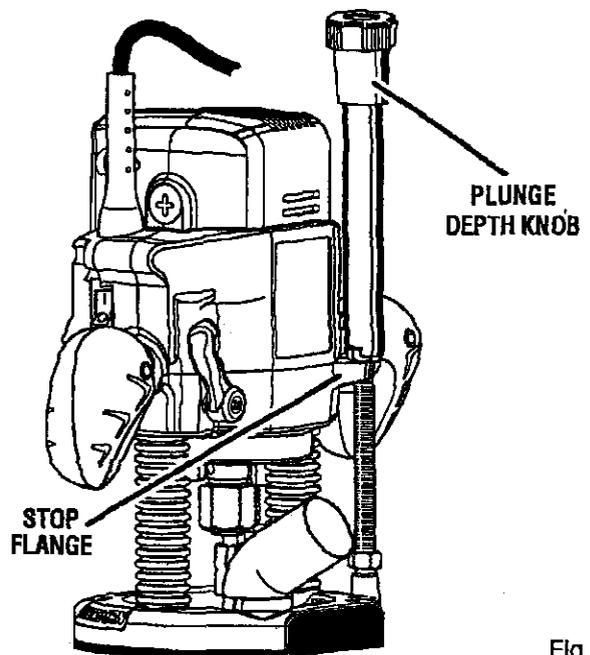


Fig. 9

OPERATION

TO INSTALL PLUNGE DEPTH KNOB

- Unplug the router.
- Remove upper hex nut from plunge depth shaft.
NOTE: This is the only time you should remove the hex nut from the router. Also, if you remove the plunge depth knob for any reason, you must reinstall the hex nut before reusing the router.
- Turn remaining hex nut counterclockwise until 1/4 in. of thread is remaining at the top of the plunge depth shaft.
- Place compression spring on top of hex nut.
- Place plunge depth knob on top of compression spring and align tabs on knob with flats on hex nut.
- Compress spring by carefully pushing down on top of plunge depth knob.
- Thread plunge depth knob clockwise onto plunge depth shaft.

WARNING: Replacing plunge depth knob without compression spring could result in plunge depth knob and hex nut vibrating off plunge depth shaft. This situation could cause motor to separate from router base, resulting in possible serious personal injury.

TO ADJUST DEPTH OF CUT USING PLUNGE DEPTH KNOB

- Unplug the router.
- Rotate depth stop lock knob counterclockwise to unlock depth stop knob.
- Rotate depth stop knob to raise stop bar.
- Unlock plunge lock lever and raise cutter to its uppermost position.
- Plunge router until cutter reaches the approximate desired depth of cut.
- Lock plunge lock lever, temporarily locking cutter at desired depth of cut.
- Turn plunge depth knob clockwise until hex nut sits against stop flange. Do not overtighten.
- Unlock plunge lock lever. Always unlock plunge lock lever before setting depth of cut with plunge depth knob.
- Turn plunge depth knob until cutter reaches desired depth of cut.
- Lock plunge lever. Always lock cutter in place before routing.
- Rotate depth stop lock knob counterclockwise to unlock depth stop knob.
- Rotate depth stop knob until stop bar touches router base.
- Tighten depth stop lock knob securely.

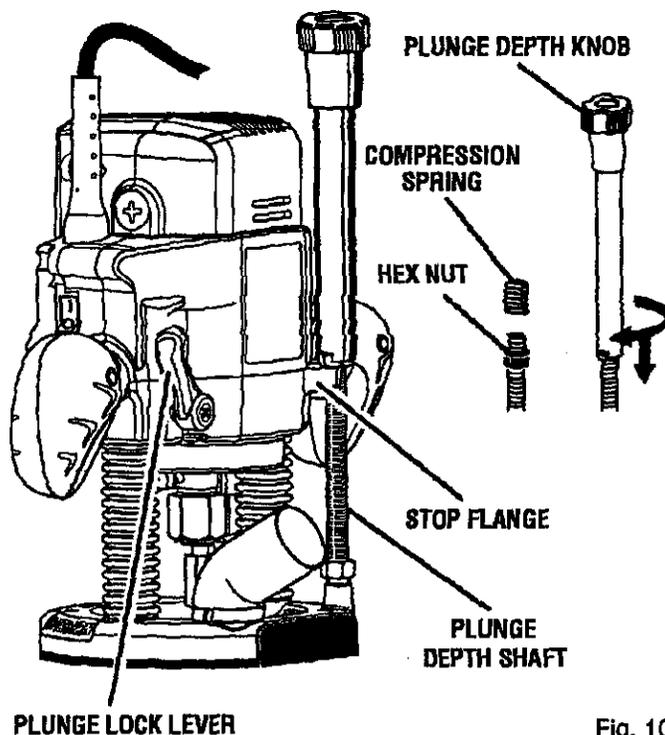


Fig. 10

OPERATION

VARIABLE SPEED DIAL

See Figure 11.

The router has a variable speed dial designed to allow operator control of speed and torque limits. You can make speed selections best suited to the type of cut, the material being cut, and the size of cutter being used. The variable speed dial allows you to adjust router speed from 15,000 to 25,000/min. There is a six-step scale (A to F) on the variable speed dial. To increase the speed and torque of the router, turn the variable speed dial to a higher setting (F). Turn to a lower setting to decrease speed and torque (A).

NOTE: If you do not want to use the variable speed dial, turn it to the highest possible setting, and the feature will not be active.

The speed selection chart shown gives suggested speed settings based on the diameter of the cutter and the type of material being routed.

We suggest that you practice with the variable speed feature of the router before installing a cutter and making cuts in wood.

SPEED SELECTION CHART				
MATERIAL	CUTTER SIZE			
	1/4	3/8	1/2	3/4
SOFT	E-F	D-E	A-B	A
MEDIUM	D-E	C-D	A	A
HARD	C-D	B-C	A	A
VERY HARD	D-E	C-D	C-D	B-C

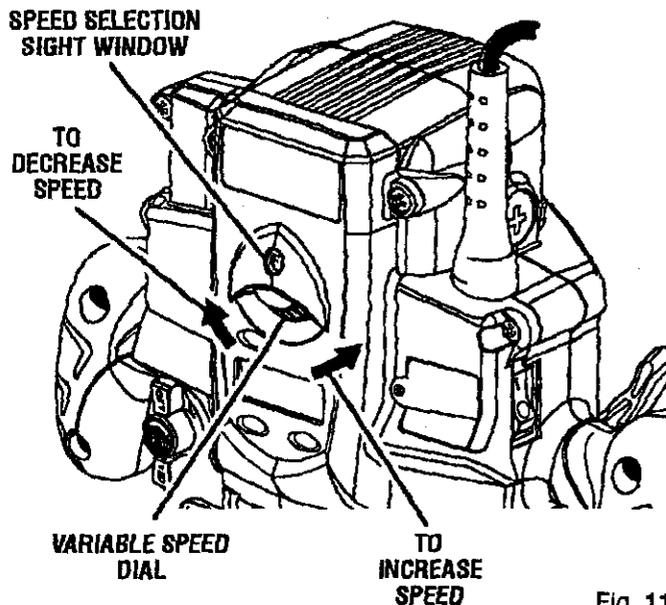


Fig. 11

OPERATION

TURNING THE ROUTER ON/OFF

See Figure 12.

To turn router **ON**, push switch to the **ON (I)** position. To turn router **OFF**, push switch to the **OFF (O)** position.

CAUTION: Practice with the router before installing a cutter and making cuts in wood.

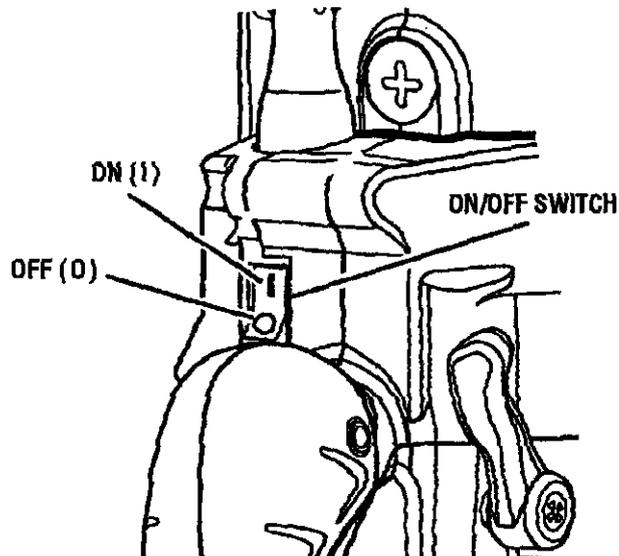


Fig. 12

USING DUST CONTROL ADAPTOR

See Figure 13.

The dust control adaptor is used with the dust chute and a vacuum hose for dust-free routing.

To install the dust control adaptor:

- Remove the dust shield and dust chute.
- Locate the two screw holes in the adaptor. One screw hole will have a pin hole next to it.
- Align the screw hole and pin hole of the adaptor with the screw hole and pin on the router base. Push into place.
- Insert screws provided into each hole and screw into place.
- Replace dust shield and dust chute.

For dust-free routing, attach a vacuum hose to dust chute. Turn vacuum on and begin routing operation.

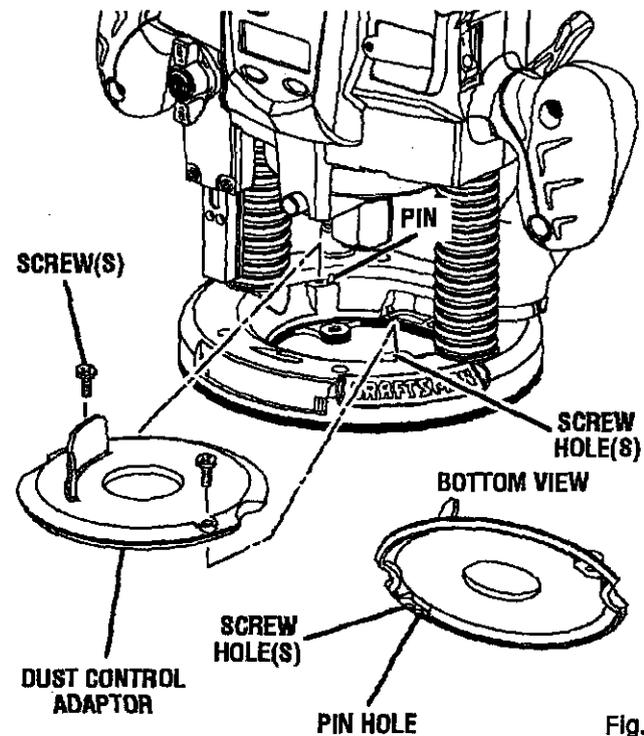


Fig. 13

OPERATION


⚠ WARNING: Cutter continues to rotate after the router has been turned off. To avoid injury, wait until the cutter has come to a complete stop before removing router from the workpiece.

OPERATING THE ROUTER

See Figures 14 - 16.

When routing straight cuts across stock, clamp a straight edge to the workpiece to use as a guide. Position the straight edge parallel to the line of cut and offset the distance between the cutting edge of the cutter and the edge of the router base. Hold the router base against the straight edge and rout the groove.

When routing a groove wider than the diameter of the cutter, clamp a straight edge on both sides of the cut lines. Position both guides parallel to the desired line of cut and spaced equal distances from the desired edges of the groove. Rout along one guide, then reverse direction and rout along the other guide. Clean out any remaining waste in the center of the groove.

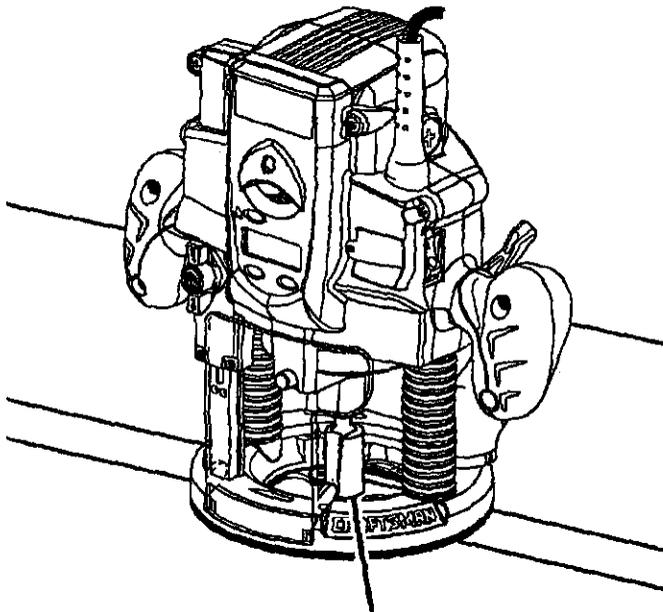

CUTTER EXTENDED BELOW SUBBASE

Fig. 14

EDGE ROUTING

- Place the router on the edge of the workpiece without the cutter contacting the workpiece.
- Turn router on and let the motor build to full speed.
- Gradually feed the cutter into the workpiece.
- Upon completion of the cut, turn the router off and let the cutter come to a complete stop before removing the router from the workpiece.

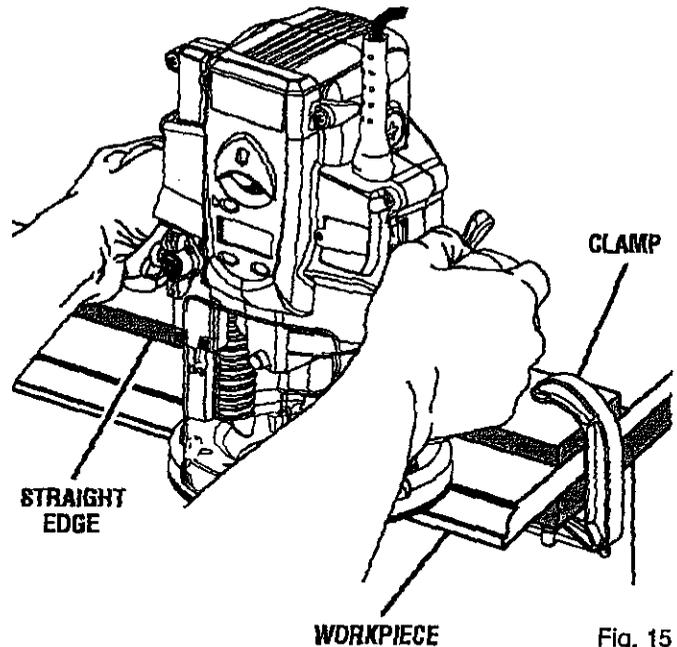


Fig. 15

OPERATION

INTERNAL ROUTING

- Tilt router and place on workpiece without the cutter contacting the workpiece.
- Turn the router on and let the motor build up to full speed.
- Gradually feed cutter into the workpiece until the sub-base is level with the workpiece.
- Upon completion of the cut, turn the router off and let the cutter come to a complete stop before removing the router from the workpiece.

WARNING: Do not use large router cutter for freehand routing. Use of large router cutters when freehand routing could cause loss of control or create other hazardous conditions that could result in personal injury. If using a router table, large cutters should be used for edging only. Do not use cutters that are larger in diameter than the opening in the router subbase.

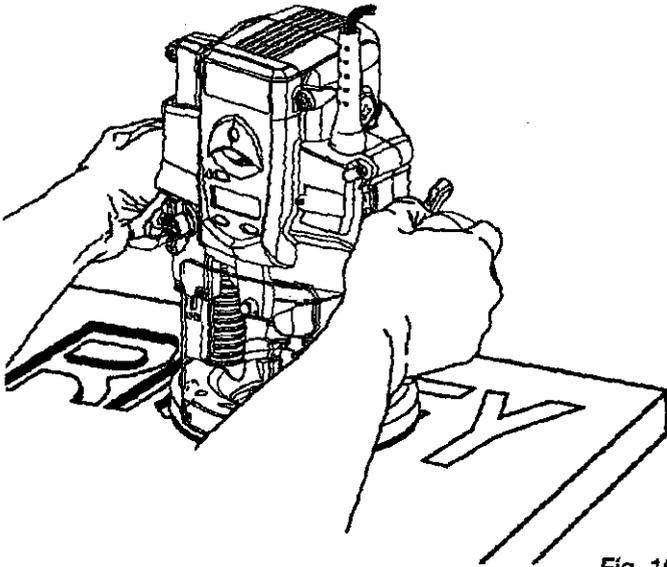


Fig. 16

EDGING WITH PILOT CUTTERS

See Figure 17.

The arbor-type cutters with pilots are excellent for quick, easy, edge shaping of any workpiece edge that is either straight or curved at a curvature as great or greater than the radius of the cutter to be used. The pilot prevents the cutter from making too deep a cut; and holding the pilot firmly in contact with the workpiece edge throughout prevents the cut from becoming too shallow.

Whenever the workpiece thickness together with the desired depth of cut (as adjusted by router depth setting) are such that only the top part of the edge is to be shaped (leaving at least a 1/16 inch thick uncut portion at bottom), the pilot can ride against the uncut portion, which will serve to guide it. However, if the workpiece is too thin or the cutter set too low so that there will be no uncut edge to ride the pilot against, an extra board to act as a guide must be placed under the workpiece. This "guide" board must have exactly the same contour—straight or curved—as the workpiece edge. If it is positioned so that its edge is flush with the workpiece edge, the cutter will make a full cut (in as far as the cutter radius). On the other hand, if the guide is positioned out from the workpiece edge, the cutter will make less than a full cut—which will alter the shape of the finished edge.

NOTE: Any of the piloted cutters can be used without a pilot for edge shaping with guides, as preceding. The size (diameter) of the pilot that is used determines the maximum cut width that can be made with the pilot against the workpiece edge (the small pilot exposes all of the cutter; the large one reduces this amount by 1/16 in.).

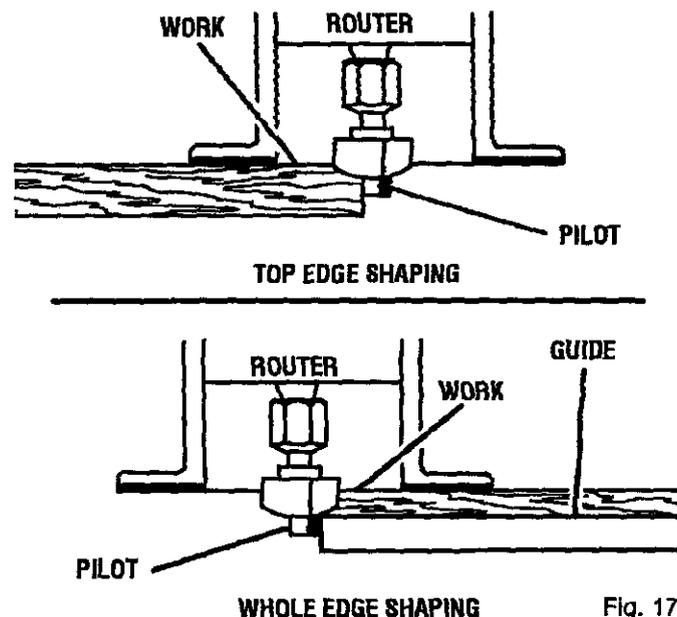


Fig. 17

OPERATION

DIRECTION OF FEED AND THRUST

See Figures 18 - 19.

The router motor and cutter revolve in a clockwise direction. This gives the tool a slight tendency to twist in a counterclockwise direction, especially when the motor revs up.

Feed the router into the workpiece from left to right. When fed from left to right, the rotation of the cutter pulls the router against the workpiece. If fed in the opposite direction, the rotation of the spinning cutter will tend to throw the router away from the workpiece causing kickback. This could cause you to lose control of the router.

Because of the high speed of cutter rotation during a proper feeding operation, there is very little kickback under normal conditions. However, if the cutter strikes a knot, hard grain, or foreign object that affects the normal progress of the cutting action, there will be a slight kickback. The direction of kickback is always in the direction opposite cutter rotation. This will affect the trueness of your cut.

To guard against kickback, plan your setup and direction of feed so that you will always be thrusting the tool in the same direction that the leading edge of the cutter is moving. The thrust should be in a direction that keeps the sharp edges of the cutter continuously biting straight into new (uncut) wood.

NOTE: For best results, make sure to take enough time to set up for cutting. While cutting, make sure to use the proper rate of feed.

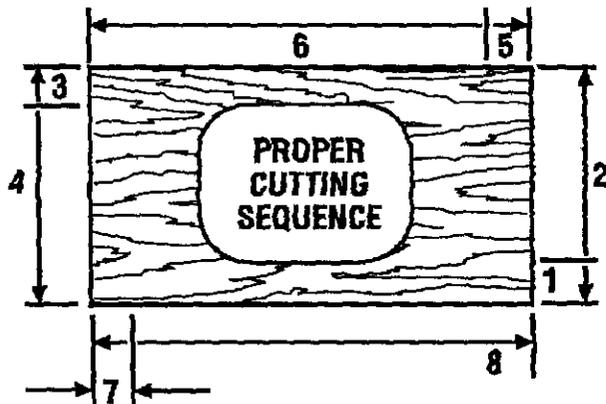


Fig. 18

When routing a groove, your travel should be in a direction that places the guide you are using at the right-hand side. When the guide is positioned as shown in the "guide inside" illustration, tool travel should be from left to right and counterclockwise around curves. When the guide is positioned as shown in the "guide outside" illustration, tool travel should be from right to left and clockwise around curves. If there is a choice, the first setup is generally the easier to use. In either case, the sideways thrust you use is against the guide.

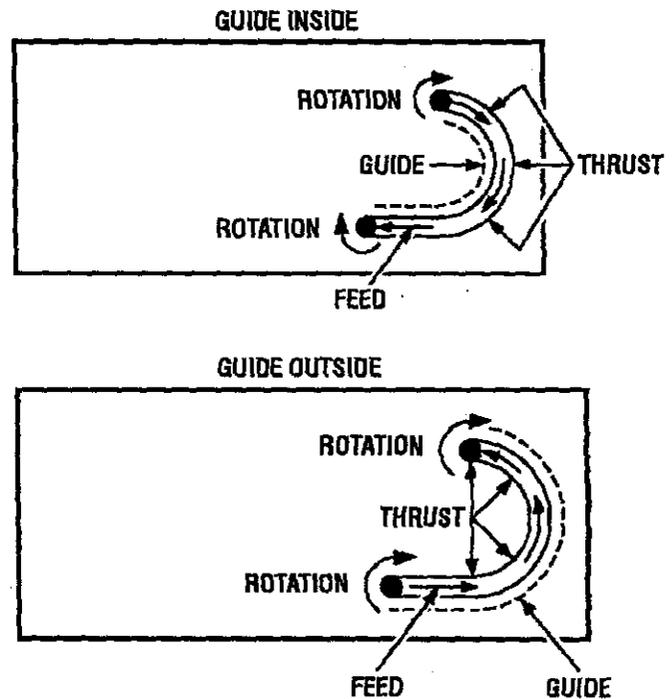


Fig. 19

OPERATION

PROPER RATE OF FEED

Professional routing depends upon careful setup and proper rate of feed which is learned through practice and use. The proper rate of feed is dependent upon:

- hardness and moisture content of the workpiece
- depth of cut
- cutting diameter of the cutter

When cutting shallow grooves in soft woods such as pine, a faster rate of feed can be used. When making cuts in hardwoods such as oak, a slower rate of feed is required.

Several factors will help you select the proper rate of feed.

- Choose the rate that does not slow down the motor.
- Choose the rate at which the cutter advances firmly and surely to produce a continuous spiral of uniform chips or a smooth edge.
- Listen to the sound of the motor. A high-pitched sound means you are feeding too slowly. A strained, lower pitched sound signals force feeding.
- Check the progress of each cut. Too slow feeding can cause the router to take off in a wrong direction from the intended line of cut. Force feeding increases the strain of holding the tool and results in loss of speed.
- Notice the chips being produced as you cut. If the router is fed too slowly, it will scorch or burn the wood. If fed too fast, it will take large chips out of the wood and leave gouge marks.

Test a cut on a scrap piece of the workpiece before you begin. Always grasp and hold the router firmly with both hands.

If you are making a small diameter, shallow groove in soft, dry wood, the proper feed rate may be determined by the speed at which you can travel the router along the guide line. If the cutter is a large one, the cut is deep, or the workpiece is hard to cut, the proper feed may be a very slow one. A cross grain cut may require a slower pace than an identical with grain cut in the same workpiece.


FEEDING TOO FAST

See Figure 20.

Clean, smooth routing and edge shaping can be done only when the cutter is revolving at a relatively high speed and is taking very small bites to produce tiny, cleanly severed chips. If you force the router to move forward too fast, the RPM of the cutter becomes slower than normal in relation to its forward movement. As a result, the cutter must take bigger bites as it revolves. Bigger bites mean bigger chips and a rougher finish. Also, because bigger bites require more power, the router motor may become overloaded.

Under extreme force-feeding conditions, the relative RPM of the cutter can become so slow—and the bites it has to take so large—that chips will be partially knocked off (rather than fully cut off). This causes splintering and gouging of the workpiece.

The router is an extremely high-speed tool, and will make clean, smooth cuts if allowed to run freely without the overload of a forced feed. You can always detect force feeding by the sound of the motor. Its high-pitched whine will sound lower and stronger as it loses speed. Also, the strain of holding the tool will be noticeably increased.

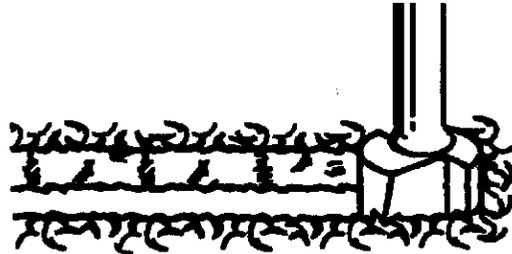

TOO FAST

Fig. 20

OPERATION

FEEDING TOO SLOWLY


See Figure 21.

It is possible to spoil a cut by moving the router forward too slowly. When you advance the router into the work too slowly, the revolving cutter does not dig into new wood fast enough to take a bite; instead, it merely scrapes away sawdust-like particles. Scraping produces heat, which can glaze, burn, or mar the cut and in extreme cases, can overheat the cutter, destroying its hardness.

When the cutter is scraping instead of cutting, controlling the router is more difficult. With practically no load on the motor, the cutter revolves at close to top RPM, and has a much greater than normal tendency to bounce off the sides of the cut (especially if the wood has a pronounced grain with hard and soft areas). As a result, the cut produced may have rippled, instead of straight, sides.

Feeding too slowly can also cause the router to take off in a wrong direction from the intended line of cut. Always grasp and hold the router firmly with both hands when routing.

You can detect when you are feeding the router too slowly by the runaway, high-pitched sound of the motor or by feeling the wiggle of the cutter in the cut.

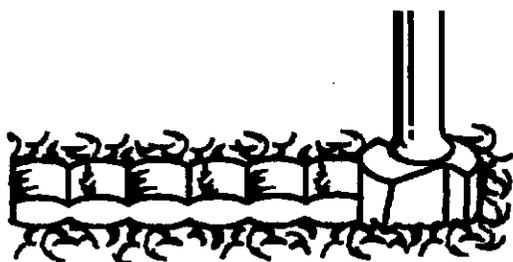

TOO SLOW

Fig. 21

DEPTH OF CUT

See Figures 22 - 23.

Depth of cut is important because it affects the rate of feed that, in turn, affects the quality of the cut and the possibility of damage to the tool's motor and cutter.

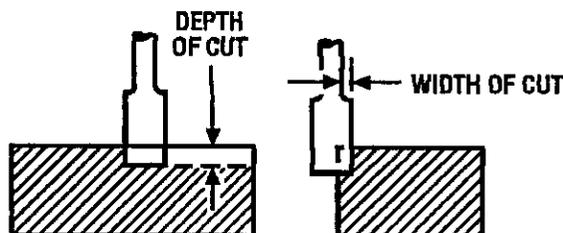


Fig. 22

A deep cut requires a slower feed than a shallow one. A cut that is too deep will slow the feed so that the cutter is scraping rather than cutting. A too deep cut can cause smaller cutters to be broken off. Cutters that are 1/16 in. in diameter are easily broken off when subjected to too much side thrust. A large enough cutter is not likely to break, but attempting a cut that is too deep may result in a rough cut, and it may be difficult to guide and control the cutter as desired. It is recommended that you do not exceed 1/8 in. depth of cut in a single pass, regardless of the cutter size or the softness or condition of the workpiece.

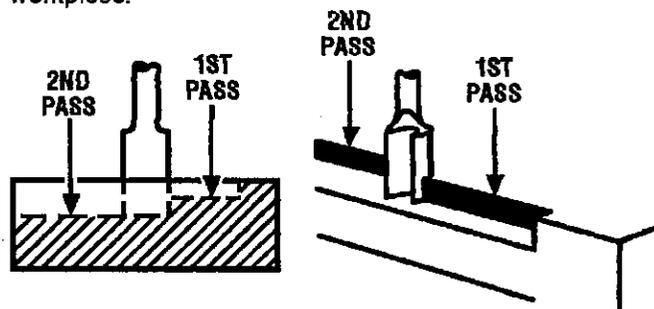


Fig. 23

To make deeper cuts, make as many successive passes as needed, lowering the cutter 1/8 in. for each new pass. To save time, perform all the cutting necessary at one depth setting before lowering the cutter for the next pass. This will insure a uniform depth when you complete the final pass.

NOTE: Do not remove more than 1/8 in. in a single pass. Excessive depth of cut can result in loss of control and the possibility of serious personal injury.

MAINTENANCE

WARNING: When servicing, use only identical Craftsman replacement parts. Use of any other parts may create a hazard or cause product damage.

WARNING: Always wear safety goggles or safety glasses with side shields during power tool operation or when blowing dust. If operation is dusty, also wear a dust mask.

WARNING: Before performing any adjustment, make sure the tool is unplugged from the power supply and the switch is in the **OFF (O)** position. Failure to heed this warning could result in serious personal injury.

GENERAL MAINTENANCE

Avoid using solvents when cleaning plastic parts. Most plastics are susceptible to damage from various types of commercial solvents and may be damaged by their use. Use clean cloths to remove dirt, dust, oil, grease, etc.

WARNING: Do not at any time let brake fluids, gasoline, petroleum-based products, penetrating oils, etc., come in contact with plastic parts. Chemicals can damage, weaken or destroy plastic which may result in serious personal injury.

Electric tools used on fiberglass material, wallboard, spackling compounds, or plaster are subject to accelerated wear and possible premature failure because the fiberglass chips and grindings are highly abrasive to bearings, brushes, commutators, etc. Consequently, we do not recommend using this tool for extended work on these types of materials. However, if you do work with any of these materials, it is extremely important to clean the tool using compressed air.

LUBRICATION

All of the bearings in this tool are lubricated with a sufficient amount of high grade lubricant for the life of the unit under normal operating conditions. Therefore, no further lubrication is required.

Only the parts shown on the parts list are intended to be repaired or replaced by the customer. All other parts should be replaced at a Sears Service Center.

CUTTERS

Get faster and more accurate cutting results by keeping cutters clean and sharp. Remove all accumulated pitch and gum from cutters after each use.

When sharpening cutters, sharpen only the inside of the cutting edge. Never grind the outside diameter. Be sure when sharpening the end of a cutter to grind the clearance angle to the same angle as originally ground.

COLLET

Dust and chips may collect on the collet from time to time, making it necessary to clean the collet. To do so, remove the collet assembly and wipe it with a clean dry rag. Clean the taper in the shaft in the same manner. Never immerse the collet or end of the shaft in a solvent or in water. Before replacing the collet assembly, put a drop of SAE30 motor oil on the inside of the nut, on the threads of the shaft, and on the taper in the shaft. Replace the collet assembly onto the shaft by hand only. Never tighten the collet nut without a cutter in the collet. This action could permanently damage the collet.

BRUSH ASSEMBLIES

See Figure 24.

The router has externally accessible brush assemblies that should periodically be checked for wear.

To replace brush assemblies:

- Unplug the router.
- Remove brush cap with a screwdriver. Brush assembly is spring loaded and will pop out when you remove brush cap.
- Remove brush assembly (brush and spring).
- Check for wear. If worn, always replace in pairs. Do not replace one side without replacing the other.
- Reassemble using new brush assemblies. Make sure curvature of brush matches curvature of motor and that brush moves freely in brush tube.
- Make sure brush cap is oriented correctly (straight) and replace.
- Tighten brush cap securely. Do not over tighten.

MAINTENANCE

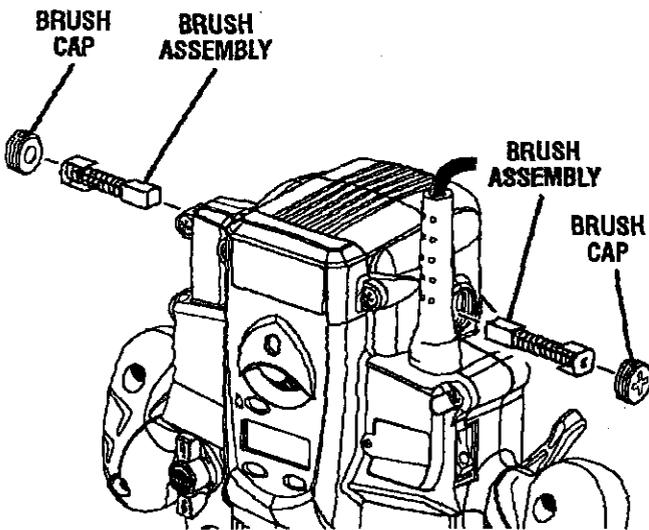


Fig. 24

PLUNGE LOCK LEVER

See Figures 25 - 27.

After extended use, the plunge lock may wear. If this happens, you can easily adjust the lever.

To adjust plunge lock lever:

- Unplug the router.
- Make sure lever is in locked position.
- Remove the screw supporting the plunge lock lever.
- Remove the lever.
- Place the lever back in the original locked position.
- Replace the screw.
- Check for free plunge with lever rotated to unlocked position. If router does not plunge freely, reposition lever.

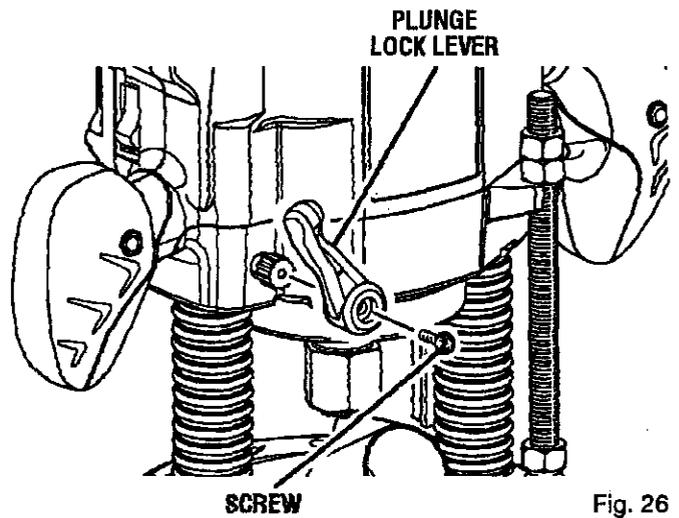


Fig. 26


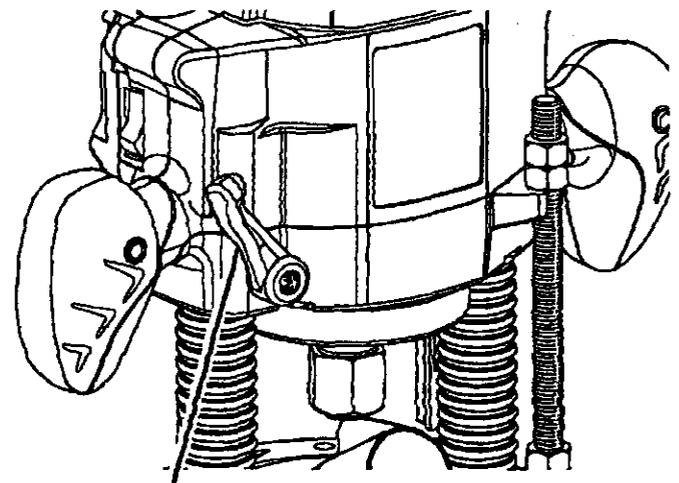



Fig. 27

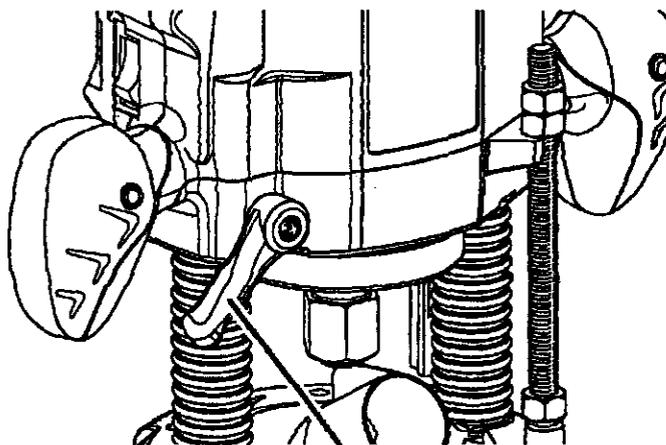

PLUNGE LOCK LEVER SHOWN AFTER EXTENDED WEAR

Fig. 25

CRAFTSMAN PLUNGE ROUTER MODEL NO. 315.175170

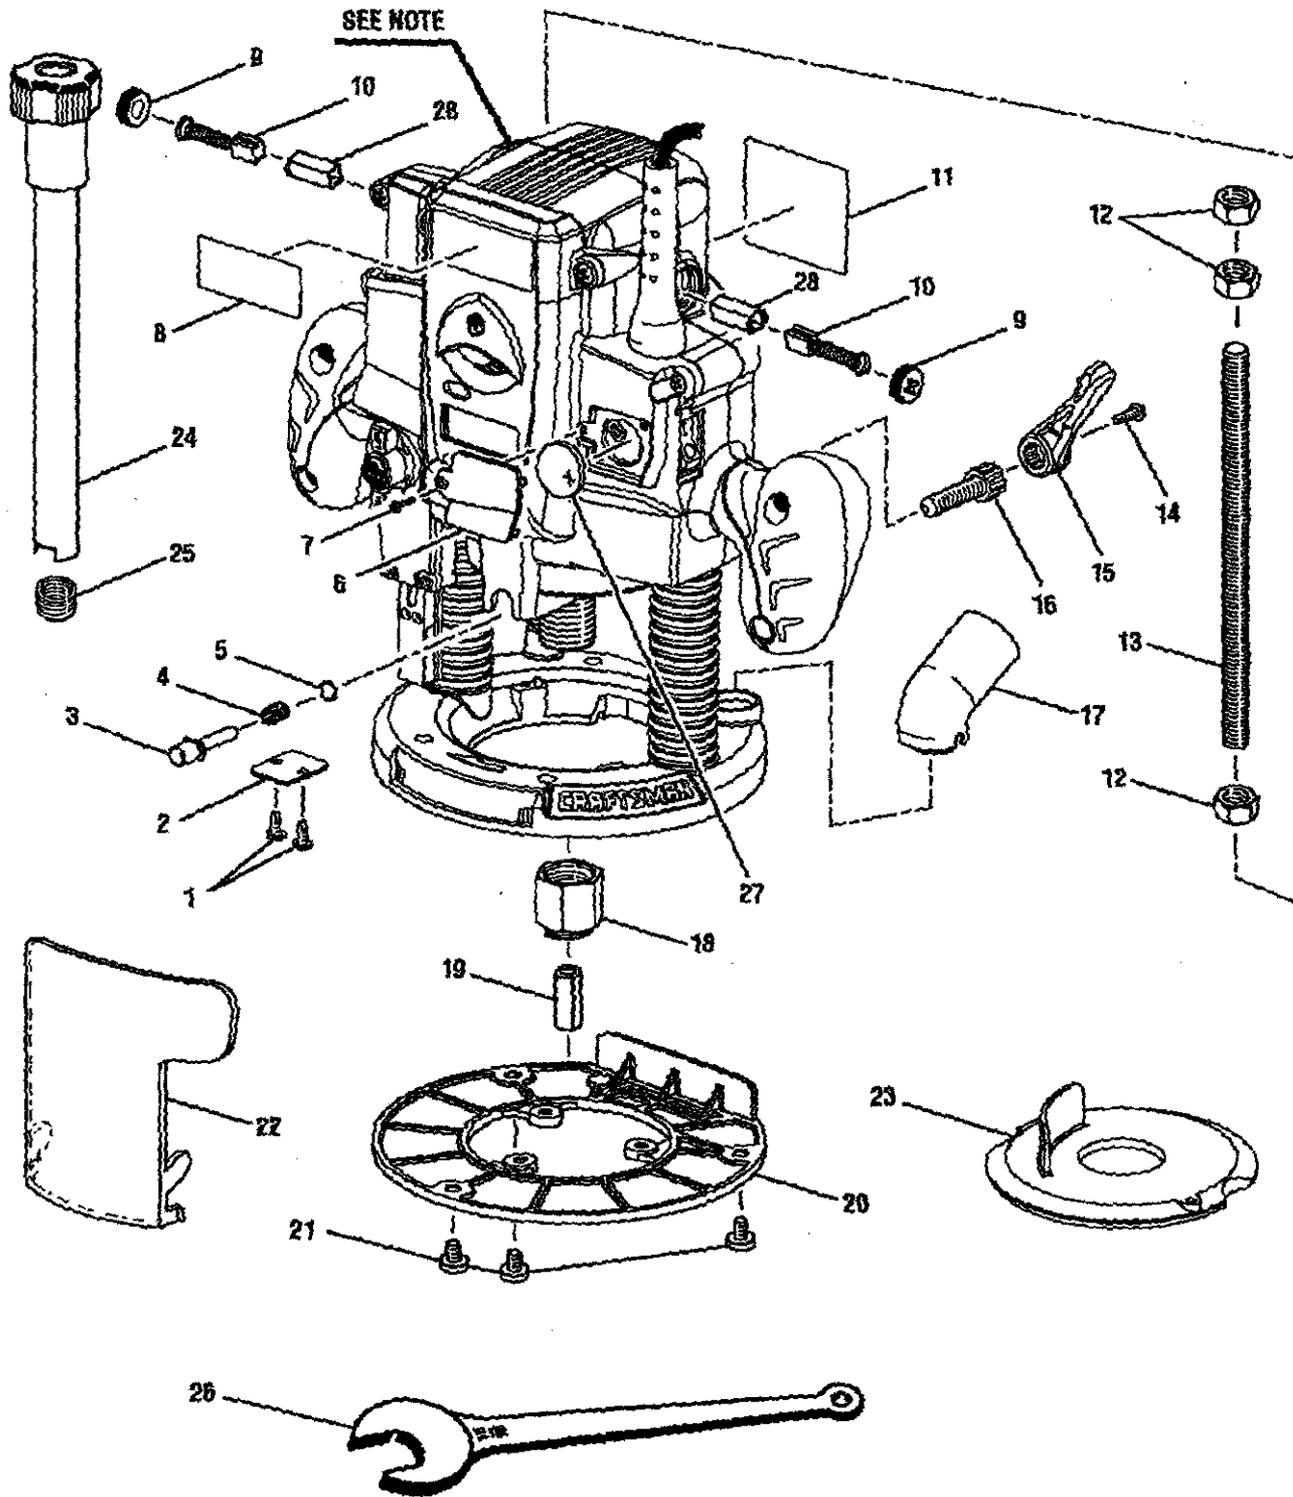

NOTE: The assembly shown represents an important part of the double insulated system. To avoid the possibility of alteration or damage to the system, service should be performed by your nearest Sears repair center. Contact your nearest Sears retail store for service center information.

CRAFTSMAN PLUNGE ROUTER MODEL NO. 315.175170

The model number will be found on a plate attached to the motor housing. Always mention the model number in all correspondence regarding your ROUTER or when ordering repair parts.

SEE BACK PAGE FOR PARTS ORDERING INSTRUCTIONS

PARTS LIST

Key No.	Part Number	Description	Qty.
1	660325001	* Screw (#8-24 x 7/16 in.)	2
2	630005001	Cover Plate	1
3	670342001	Shaft Lock Pin	1
4	690141001	Spring	1
5	690002002	Washer	1
6	513640001	Battery Cover	1
7	660221005	* Screw	1
8	940114137	Logo Label	1
9	550853001	Brush Cap	2
10	200233002	Brush Set Assembly	1
11	940115119	Data Label	1
12	660163002	Hex Nut	3
13	670341001	Plunge Depth Shaft	1
14	660284003	* Screw (#6-32 x 1/4 in.)	1
15	550849002	Plunge Lock Lever	1
16	660427001	Screw (M8 x 1.25)	1
17	512817001	Dust Chute	1
18	670345001	1/2 in. Collet	1
19	670344002	1/4 in. Collet Adaptor	1
20	512816001	Subbase	1
21	660136001	* Screw (#10-32 x 1/4 in.)	3
22	551014001	Dust Shield	1
23	514017001	Dust Control Adaptor	1
24	300617010	Plunge Depth Knob Assembly	1
25	971137001	Spring	1
26	670346001	15/16 in. Wrench	1
27	750288001	3V Battery	1
28	671295001	Brush Tube	2
	983000497	Operator's Manual (Not Shown)	

* Standard Hardware Item - May Be Purchased Locally

Get it fixed at your home or ours!

Your Home

For repair—in your home—of all major brand appliances,
lawn and garden equipment, or heating and cooling systems,
no matter who made it, no matter who sold it!

For the replacement parts, accessories and
owner's manuals that you need to do-it-yourself.

For Sears professional installation of home appliances
and items like garage door openers and water heaters.

1-800-4-MY-HOME® (1-800-469-4663)

Call anytime, day or night (U.S.A. and Canada)

www.sears.com www.sears.ca

Our Home

For repair of carry-in items like vacuums, lawn equipment,
and electronics, call or go on-line for the location of your nearest
Sears Parts & Repair Center.

1-800-488-1222

Call anytime, day or night (U.S.A. only)

www.sears.com

To purchase a protection agreement (U.S.A.)
or maintenance agreement (Canada) on a product serviced by Sears:

1-800-827-6655 (U.S.A.)

1-800-361-6665 (Canada)

Para pedir servicio de reparación
a domicilio, y para ordenar piezas:

1-888-SU-HOGARSM

(1-888-784-6427)

Au Canada pour service en français:

1-800-LE-FOYER^{MC}

(1-800-533-6937)

www.sears.ca

Sears