

Installation instructions

DishDrawer®

DD24D models



US CA

Important! SAVE THESE INSTRUCTIONS

The models shown in this document may not be available in all markets and are subject to change at any time. For current details about model and specification availability in your country, please go to our website www.fisherpaykel.com or contact your local Fisher & Paykel dealer.

① SAFETY AND WARNINGS

⚠ WARNING!

Electrical hazard

Before installing the DishDrawer®, remove the house fuse or open the circuit breaker.

If permanently connecting the DishDrawer®, be sure the power is isolated and the DishDrawer® unplugged.

GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is installed and grounded in accordance with all local codes and ordinances. **WARNING** - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service representative if you are in doubt as to whether the appliance is properly grounded.

If the DishDrawer is installed as a permanently connected appliance: **GROUNDING INSTRUCTIONS** - This appliance must be connected to a grounded metal, permanent wiring system, or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment-grounding terminal or lead on the appliance.

Do not modify the power supply plug provided with the appliance - if it will not fit the outlet, have a proper outlet installed by a qualified electrician. Do not use an extension cord, adapter plug or multiple outlet box.

Failure to follow this advice may result in electrical shock or death.



⚠ WARNING!

Cut hazard

Take care - panel edges are sharp.


Failure to use caution could result in injury or cuts.



Important safety instructions!

- Installation of this DishDrawer® requires basic mechanical and electrical skills.
- Be sure to leave these Instructions with the Customer.
- Installation must comply with your local building and electricity regulations.
- At the completion of the DishDrawer® installation, the Installer must perform Final Check List.
- Remove all packaging materials supplied with the DishDrawer®.
- This DishDrawer® is manufactured for indoor use only.
- Ensure all water connections are turned OFF. It is the responsibility of the plumber and electrician to ensure that each installation complies with all Codes and Regulations.
- The DishDrawer® MUST be installed to allow for future removal from the enclosure if service is required.
- The switched power outlet must be outside the DishDrawer® cavity so that it is accessible after installation.
- Care should be taken when the appliance is installed or removed to reduce the likelihood of damage to the power supply cord.
- If the DishDrawer® is to be relocated from one installation to another it must be kept upright to avoid damage from water spillage.
- Make sure only new hoses are used for connection (supplied with DishDrawer®). Old hoses should not be reused.
- Failure to install the DishDrawer® correctly could invalidate any warranty or liability claims.
- If the product is installed in a motor vehicle, boat or similar mobile facility, you must bring the vehicle, boat or mobile facility containing the product to the service shop at your expense or pay the service technician's travel to the location of the product.

② PRODUCT DIMENSIONS

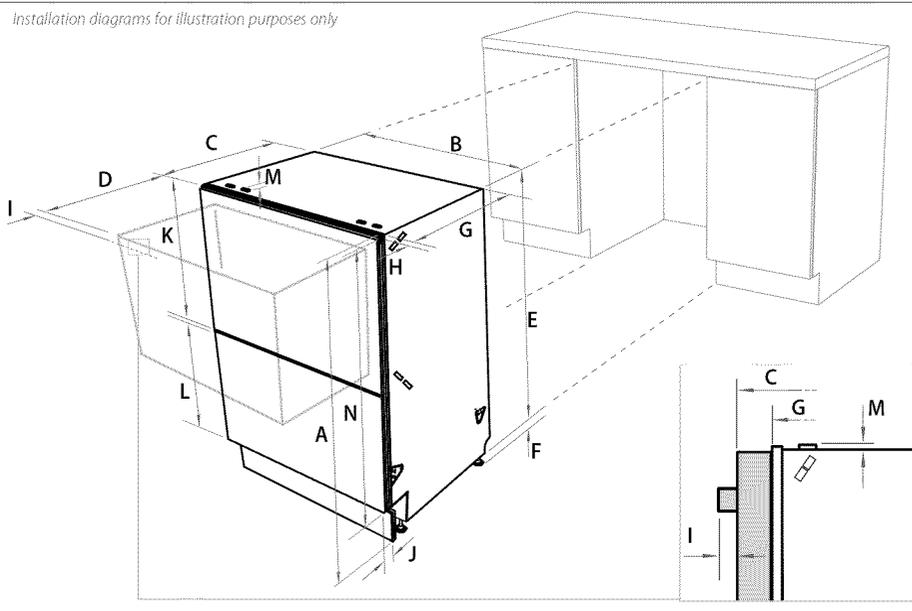

Product dimensions (inches (mm))


	Prefinished LCD DD24D	Prefinished Flat door DD24D	Integrated DD24D
A overall height* of product	32 1/4 - 34 5/8" (819.5- 879.5)	32 1/4 - 34 5/8" (819.5- 879.5)	32 1/4 - 34 5/8" (819.5- 879.5)
B overall width of product	23 5/16" (599)	23 5/16" (599)	23 5/16" (599)
C overall depth of product (excl. curvature/handle)	22 7/16" (570)	22 7/16" (570)	22 7/16" (570)
D depth of drawer (open) (excl. curvature/handle)	21 3/16" (538)	21 3/16" (538)	21 3/16" (538)
E height* of chassis	31 7/8" (809)	31 7/8" (809)	31 7/8" (809)
F height range of levelling feet	2 3/8" (60)	2 3/8" (60)	2 3/8" (60)
G depth of chassis (incl. trimseal)	21 3/4" (552)	21 3/4" (552)	21 3/4" (552)
H depth of drawer front panel (excl. curvature/handle)	1/16" (18)	1/16" (18)	1/16" (18)
I depth of curvature or handle	7/16" (11)	1 5/8" (41)	n/a
J depth of toe kick	2 - 4 5/16" (50 - 110)	2 - 4 5/16" (50 - 110)	2 5/8" - 5" (67 - 127)**
K height of upper drawer front	15 1/2" (394)	15 1/16" (398)	15 1/16" (398) min
L height of lower drawer front	14" (356)	14" (356)	12 1/4" (311.5) min
M height of installation bracket slots (on top of chassis)	1/16" (2)	1/16" (2)	1/16" (2)
N height of drawer fronts	29 3/16" (751)	30 1/16" (764)	28 1/4" (717.5) min

* Chassis heights include bracket slots

** less the Toe Kick Panel thickness (Minimum Panel thickness using the supplied screws is 3/8" (9 mm)).

Note: for Prefinished Flat door models, height from top of handle to top of drawer - 2 1/2" (64 mm).


③ CABINETS DIMENSIONS

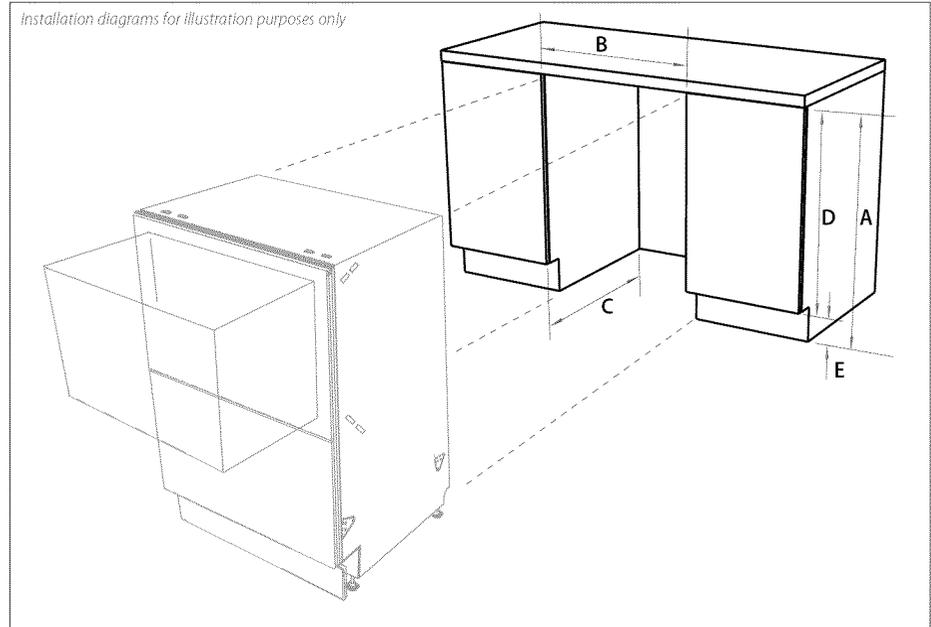

Cabinetry dimensions (inches (mm))

	Prefinished LCD DD24D	Prefinished Flat door DD24D	Integrated DD24D
A inside height of cavity	32 5/16 - 34 3/4" (820- 882.5)	32 5/16 - 34 3/4" (820- 882.5)	32 5/16 - 34 3/4" (820- 882.5)
B inside width of cavity	23 5/8" (600)	23 5/8" (600)	23 5/8" (600)
C inside depth of cavity (inside)	22 7/8" (580)	22 7/8" (580)	22 7/8" (580)
D height of adjacent cabinetry	30" (762)	30" (762)	min. 28 3/8" (720)
E height of toe kick space	3 15/16 - 6 5/16" (100-160)	3 15/16 - 6 5/16" (100-160)	3 15/16 - 6 5/16" (100-160)

Minimum clearances (inches (mm))

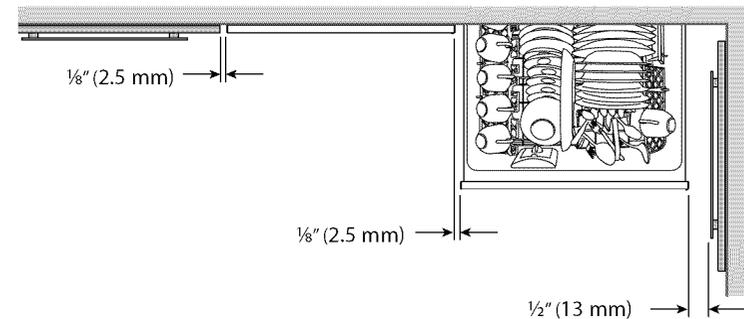

4 PARTS SUPPLIED

										
Drain hose support (1)	Drain hose joiner (1)	Wire clip (2)	Clamp (1)	Top mounting brackets (2)	Phillips 16 mm screws (9)	Washer (1)	Moisture protection tape (1) (to prevent moisture damage)	Edge protector (1) (if services hole partition is metal)	Hexagonal socket (2) (long & short)	Prefinished toe kick (1) white or black

If the Drain hose(s) supplied are not long enough to reach your services, you **must** use a Drain Hose Extension Kit P/N 525798 which will extend the drain hose(s) by 11' 10" (3.6 m). The kit is available from the nearest Fisher & Paykel Authorized Service Agent, or Toll free 1.888.936.7872 or www.fisherpaykel.com.

5 CAVITY PREPARATION

Important!

Be sure the edges of the services hole are smooth or covered. If the services hole is through a metal partition the hole must be protected with the Edge protector supplied to prevent damage to the power cord or hoses.

- ⊕ These marks indicate mounting bracket screw locations
- * Preferred position. If adequate clearance, services hole can be higher to clear toe kick space. If hole is higher, ensure drain hose(s) are routed straight into the waste connection.

Water Connection


Recommended **HOT** (Maximum 140°F/60°C).
Supplied hose to suit 3/8" (9 mm) male compression fitting.

Water Pressure



	Max	Min
Water softener models	1 MPa (145 psi)	0.1 MPa (14.5 psi)
Other models	1 MPa (145 psi)	0.03 MPa (4.3 psi)

- Drains will need to be separated to satisfy kosher requirements. We suggest you confirm acceptability with your local rabbi in respect to kosher installations.


Max. distance of hoses and cord from chassis edge	Left hand side	Right hand side
Drain hose	78 1/2" (2000 mm)	70 1/2" (1800 mm)
Inlet hose	64 3/4" (1650 mm)	49" (1250 mm)
Power cord (excl. plug)	29 1/2" (750 mm)	27 1/2" (700 mm)

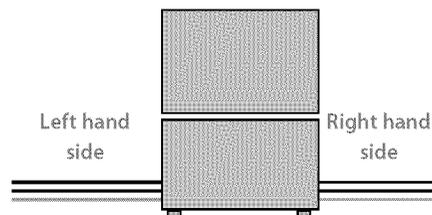

If no side partition, use a brace for securing.

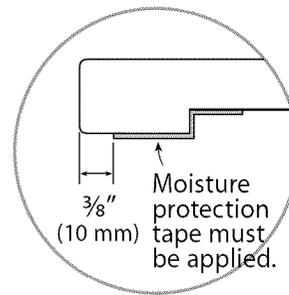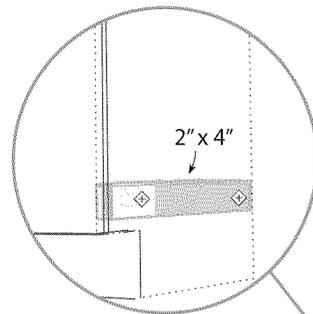


Note: Services can be located either side of DishDrawer®.

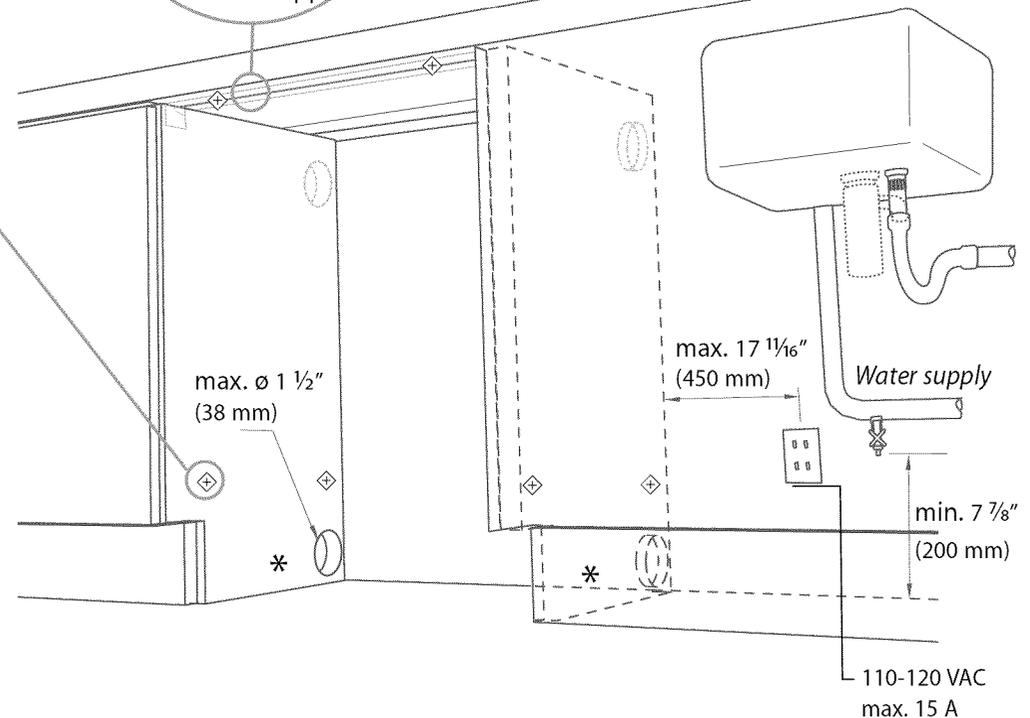

⑥ OPTIONALLY HARD WIRING THE PRODUCT

A

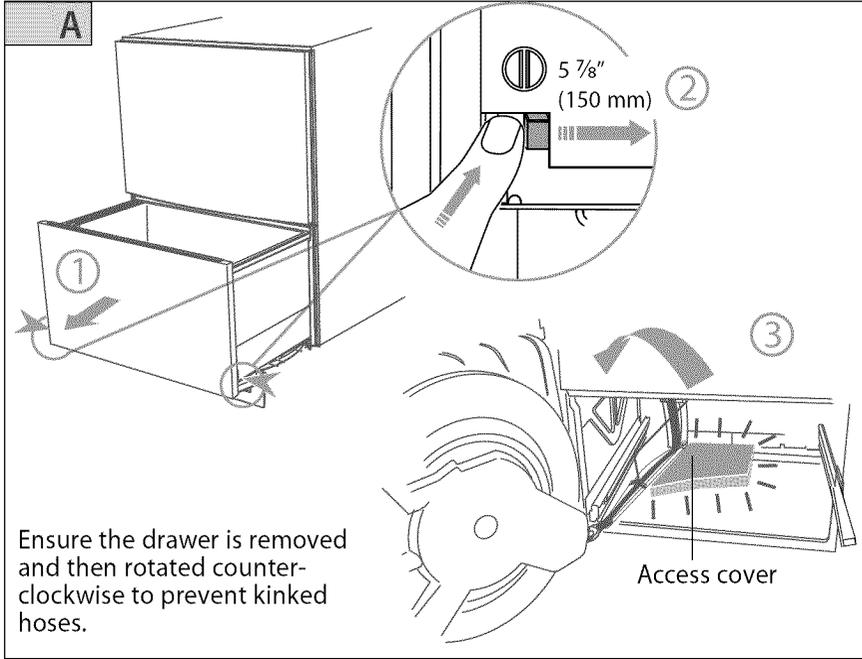

5 7/8" (150 mm) ②


①

③

Access cover

Ensure the drawer is removed and then rotated counter-clockwise to prevent kinked hoses.

B

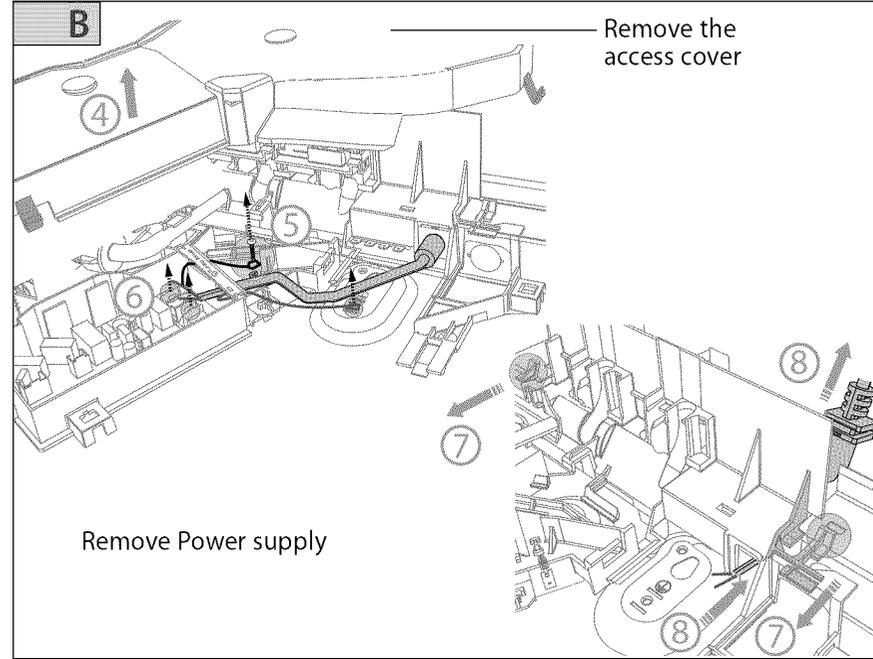

Remove the access cover

④

⑤


⑥

⑦

⑧

Remove Power supply

C

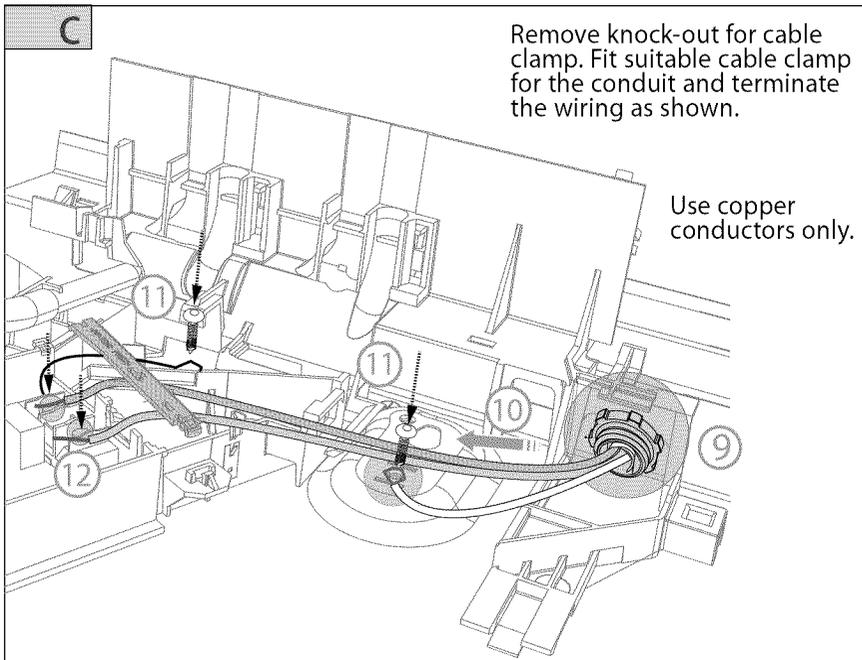

Remove knock-out for cable clamp. Fit suitable cable clamp for the conduit and terminate the wiring as shown.

Use copper conductors only.


⑩

⑪

⑫

⑨

D

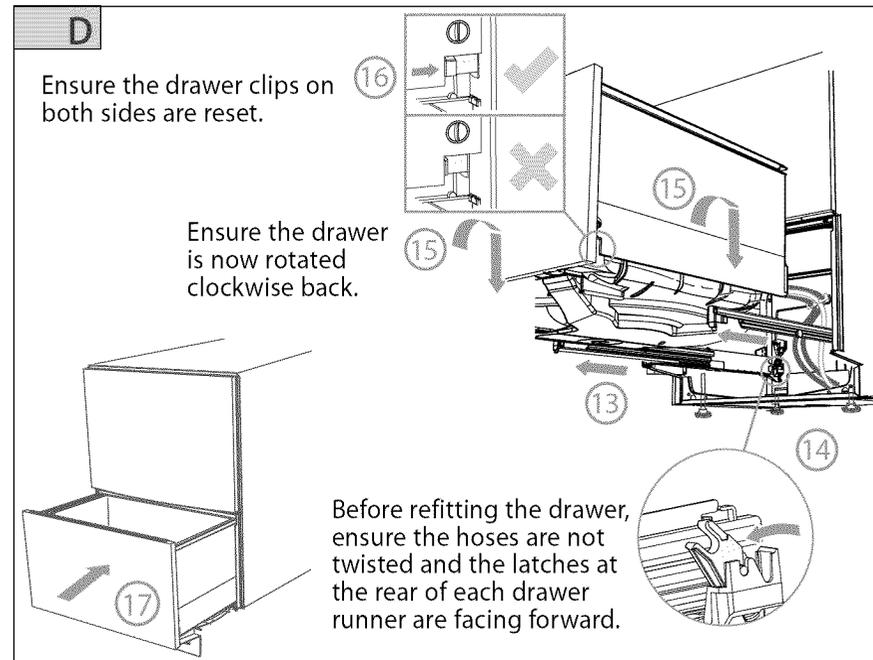

Ensure the drawer clips on both sides are reset.

Ensure the drawer is now rotated clockwise back.

Before refitting the drawer, ensure the hoses are not twisted and the latches at the rear of each drawer runner are facing forward.

⑬



⑭

⑮



⑯

⑰



⑦ ROUTE THE HOSES AND MOVE INTO THE CAVITY

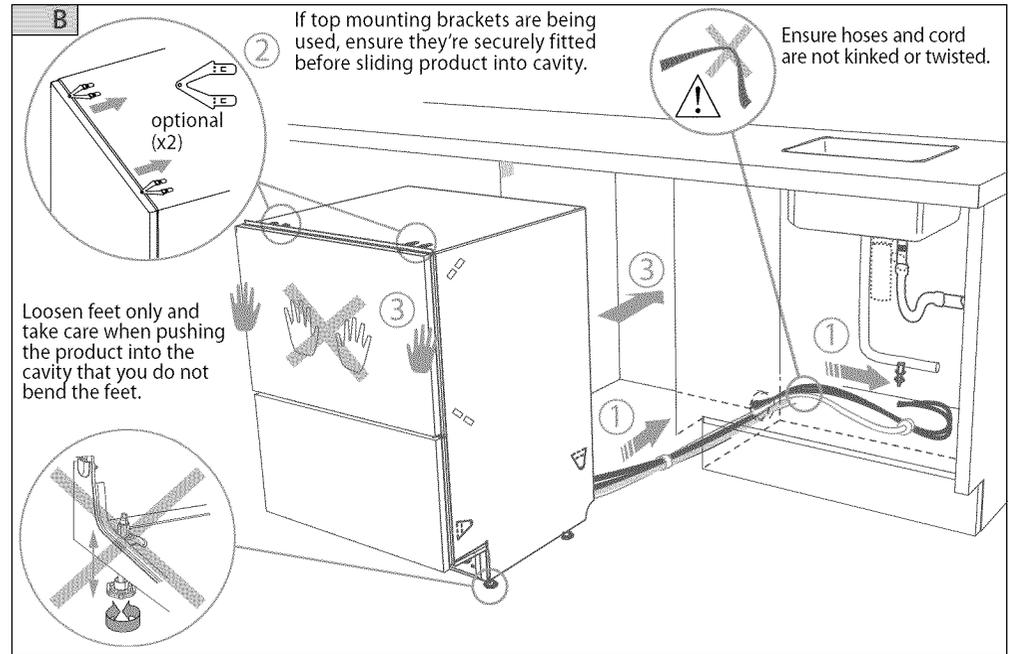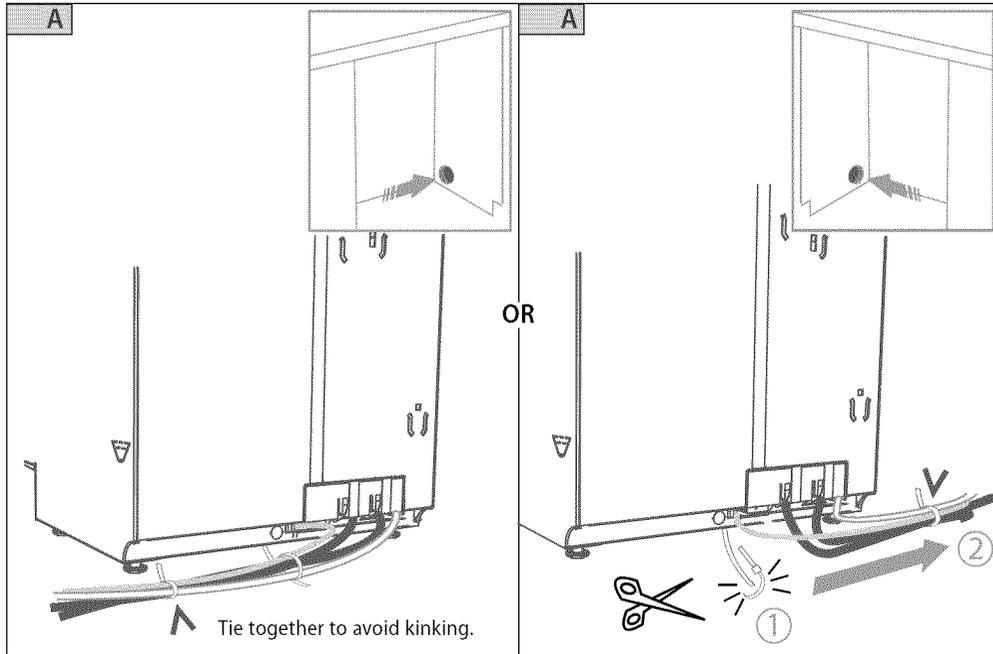



⑧ REMOVE THE DRAWER AND LEVEL THE PRODUCT

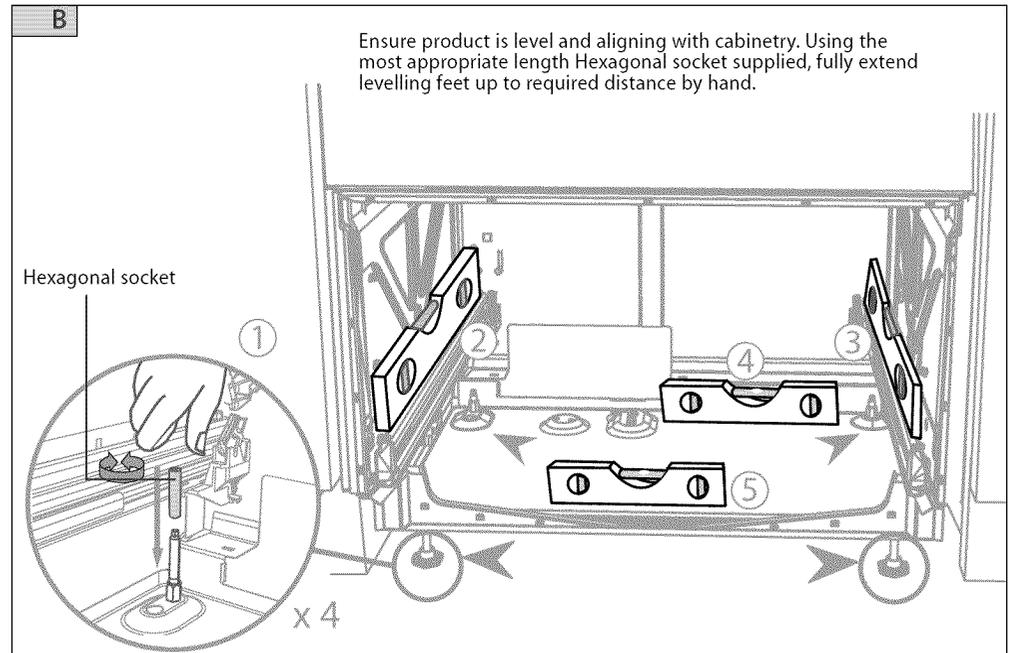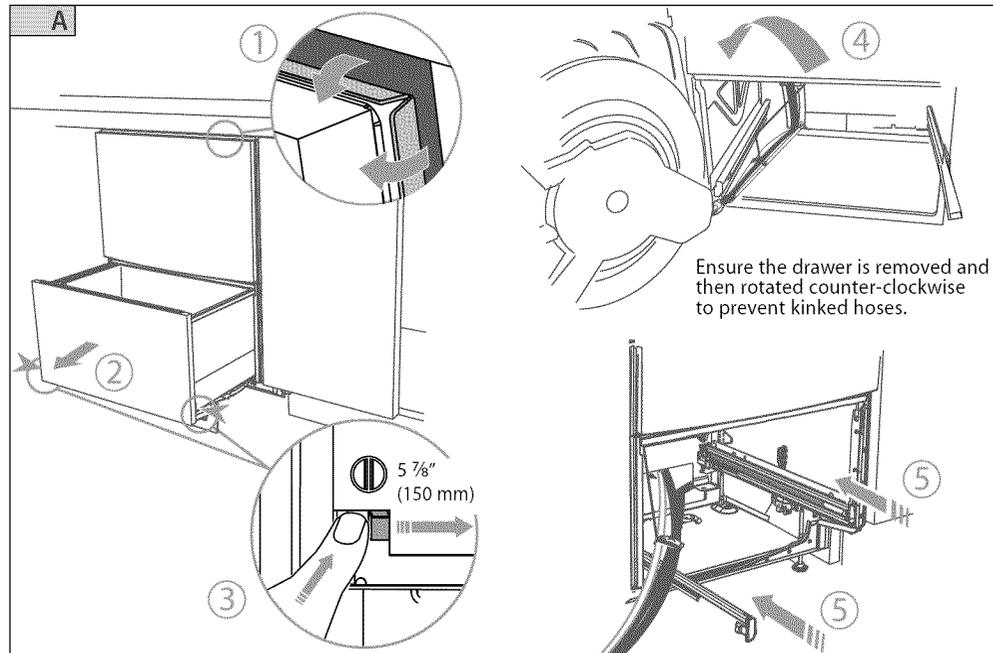







9 SECURE THE PRODUCT AND REFIT THE DRAWER

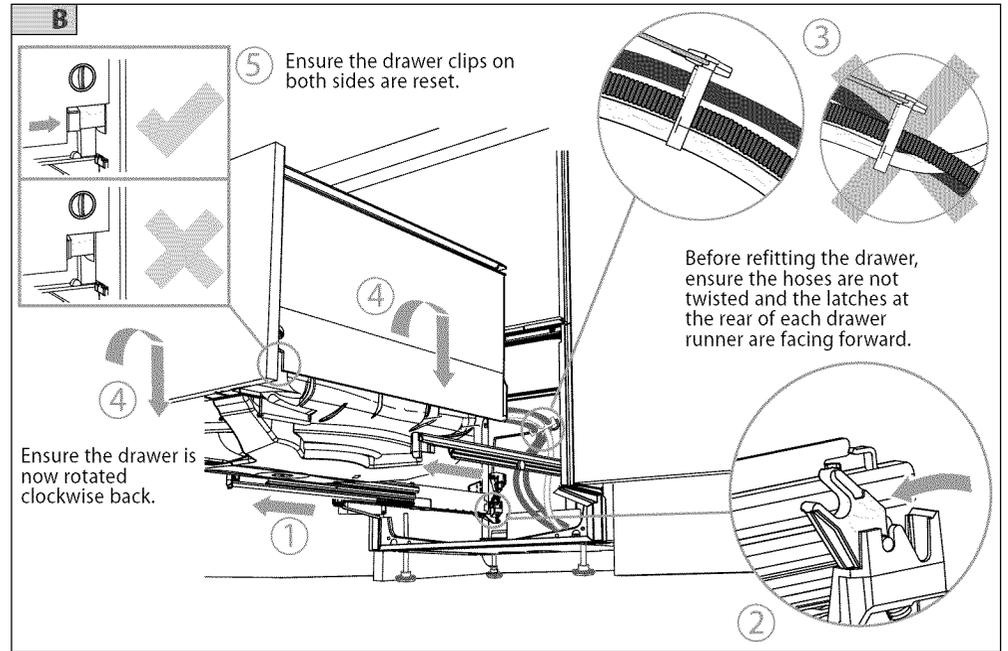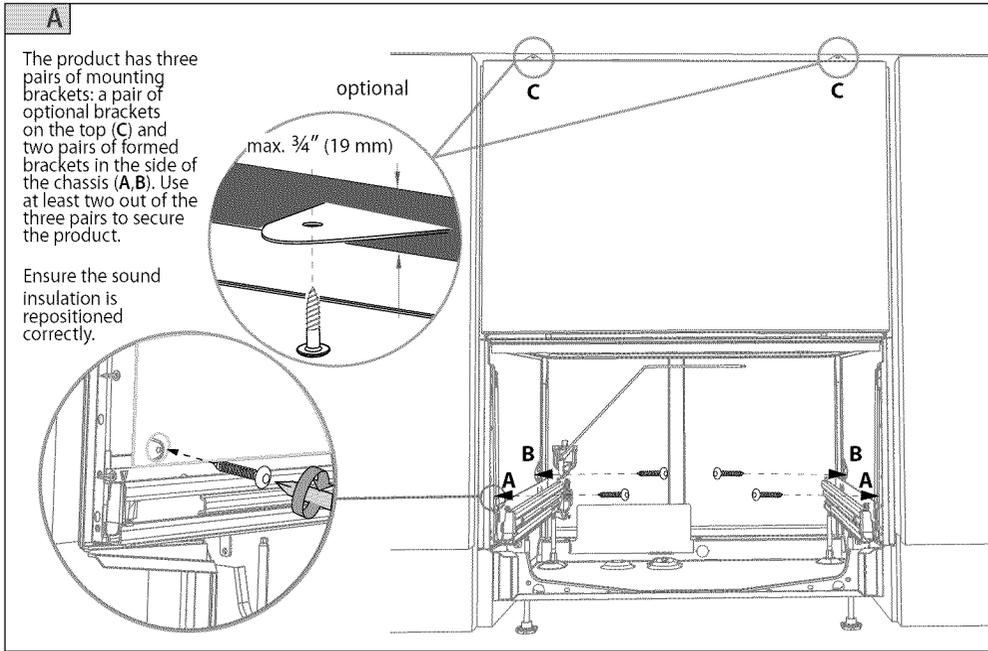

10 FIT THE TOEKICK

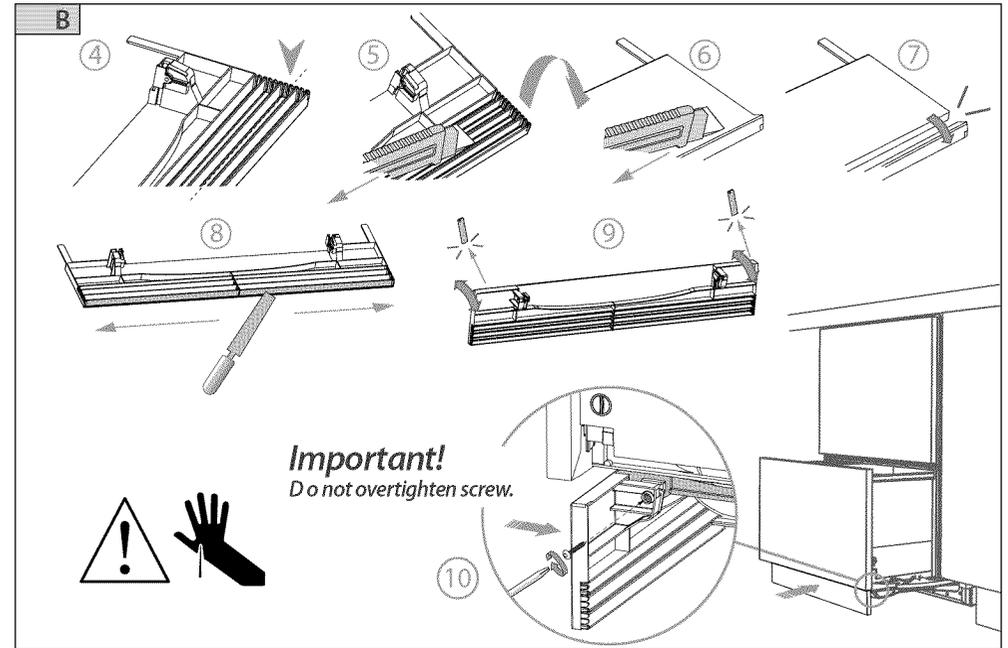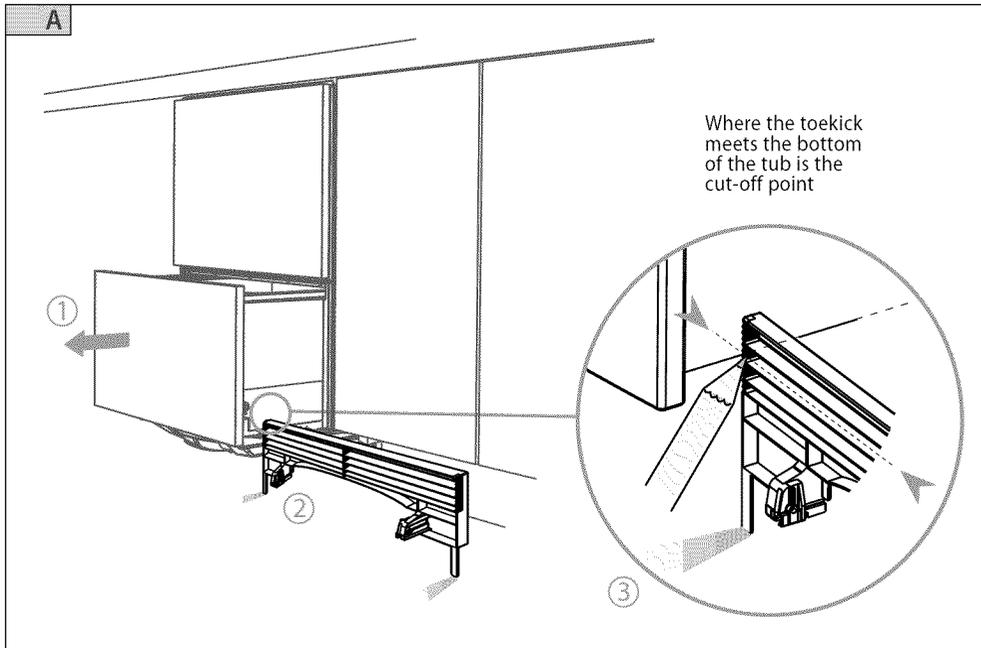


11 PLUMBING AND DRAINAGE OPTIONS

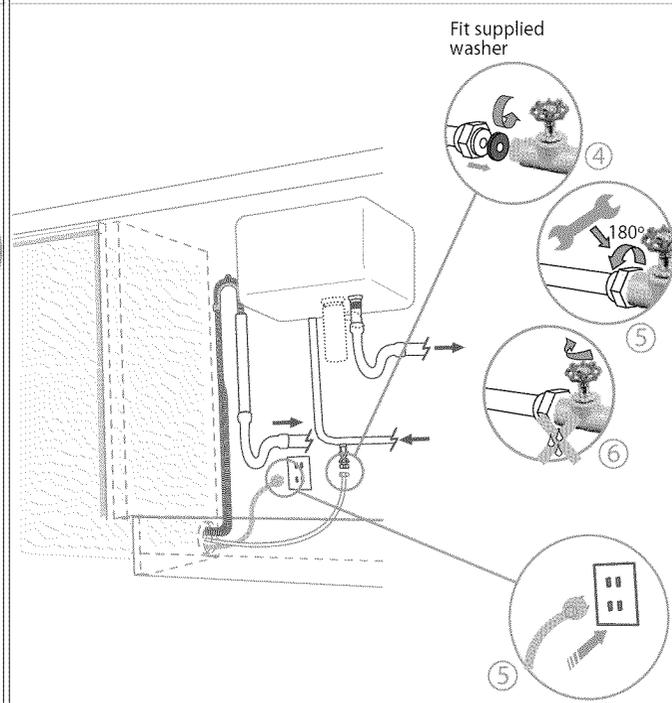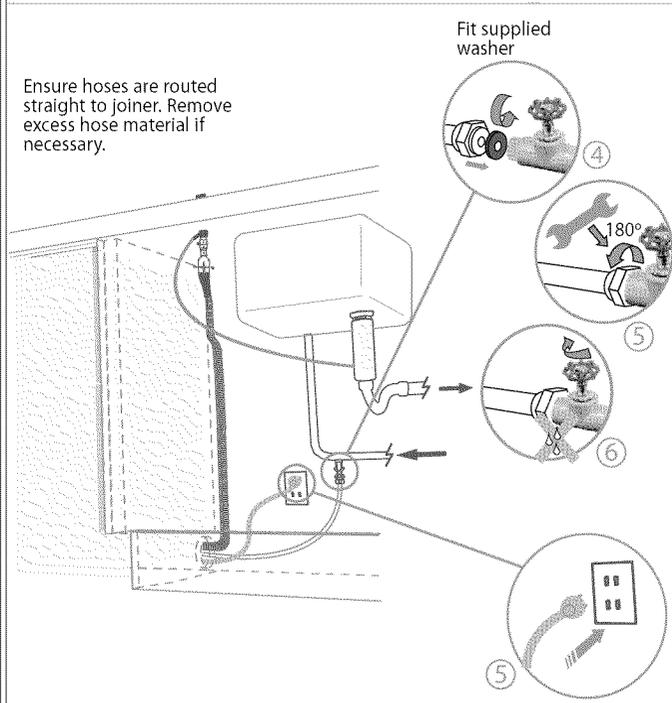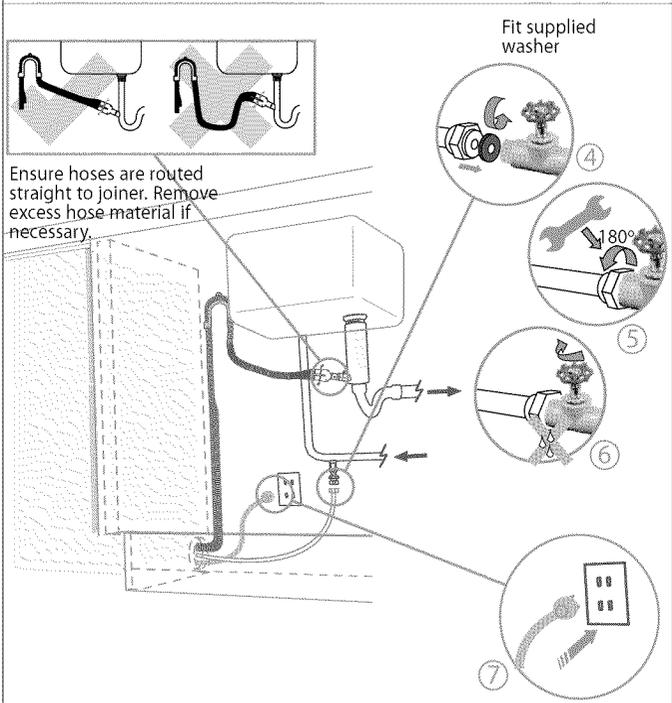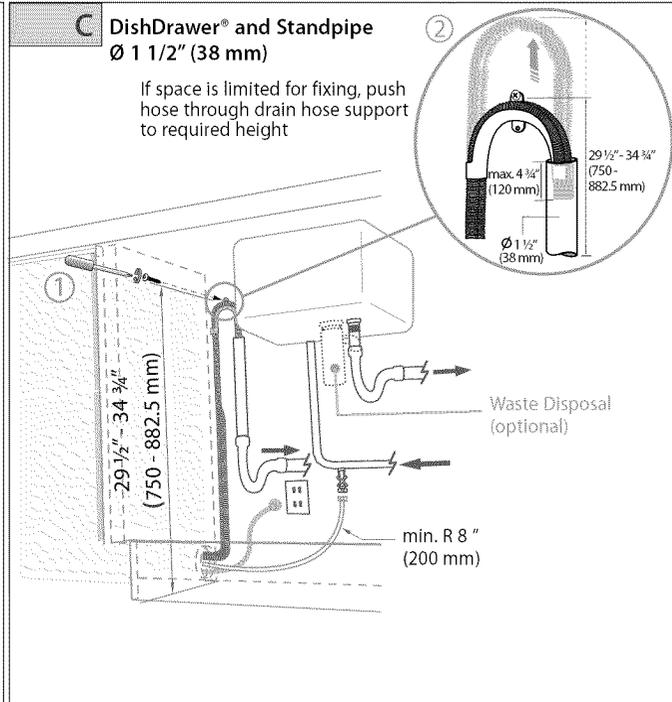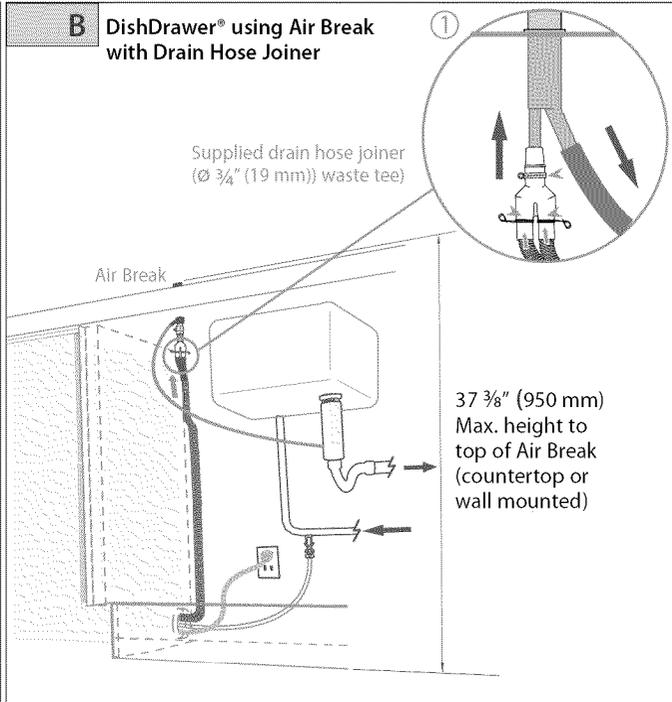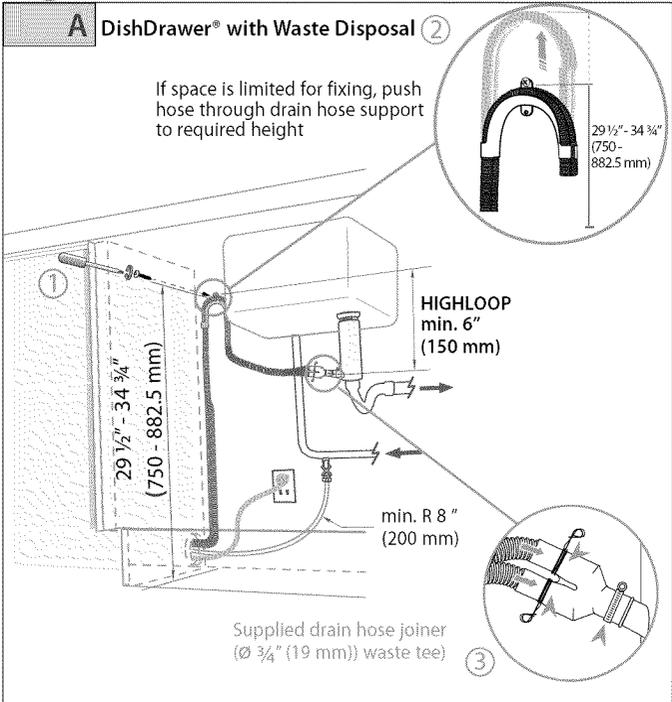

12 FINAL CHECKLIST



- Check all parts are installed.
- Ensure product is level, securely fastened to the cabinetry and opens and closes freely. The DishDrawer® must be free to fully close with no resistance from the cabinetry.
- Ensure inlet hose to water supply has rubber washer fitted and is tightened a further half turn after seal contact.
- Ensure any knockouts or plugs in drain connection have been drilled out and drain connection has been made.
- The drain hose joiner must not support the weight of excess hoses. Keep hoses as fully extended as possible to prevent sagging. Any excess length of hose should be kept on the dishwasher side of the high loop.
- If using Plumbing and Drainage OPTION A, ensure the Highloop is a minimum 6" (150 mm) higher than the drain hose joiner.
- Turn on the power and water supply. Then press the Power (⏻) button to turn the DishDrawer® on. The DishDrawer® should beep and Wash Programme lights light up.
- Check the spray arm is in place and free to rotate.

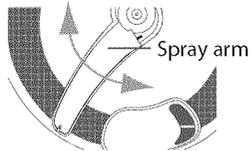

- Add three cups of water into the DishDrawer®. On the Wash Programme Selector Panel press Rinse and close the drawer(s). Start the programme by pressing the Start/Pause (▶||) button.
- After the Rinse programme has finished, ensure machine has run and drained correctly.
- Check water supply and drainage connection for leakage.

Repeat for each drawer.

13 TROUBLESHOOTING

- **Excessive water remaining above the filter plate, after the rinse cycle**
Check for kinked drain hoses or blocked waste connection, high loop not properly installed or drain hoses not routed correctly.
- **No water supply (⊗ shows on display-models with LCD only)**
Check water is connected, turned on and the spray arm(s) are correctly fitted and free to rotate.
- **No lights come on when the drawer is opened**
Ensure power is connected and is switched on. Check if Auto Power option is on.
- **Water around water supply and drainage connections**
Check connections, existing plumbing and hoses for leaks. Check washer and hose clamps are correctly fitted.
- **If product is tipping**
Ensure the product is secured to the cabinetry.
- **If front panels are misaligned**
Check and relevel product. Check the cabinetry is square.
- **Drawer(s) don't close properly**
Ensure nothing is obstructing the drawer(s) from closing properly eg sound insulation, hoses or drawer latches.
- If a problem occurs, consult the Troubleshooting section of the User Guide.
- If after checking these points you still need assistance, please refer to the Service & Warranty book for warranty details and your nearest Authorized Service Centre, or contact us through our website, www.fisherpaykel.com.