

WR72X10313 KIT

Install Instructions


Kit Contents

2 Large BM FZ Slides
2 Small BM FZ Slides & Supports
1 Upper FZ Basket
Slide Spacers
Screws
Install Instruction
Install Guide
5/32 Drill Bit
Door Alignment Kit WR49X10112


- Step 1 Remove all items from the Freezer Baskets.
Step 2 Remove Freezer Door



- Step 3 Remove current Slides and Backer Plates.

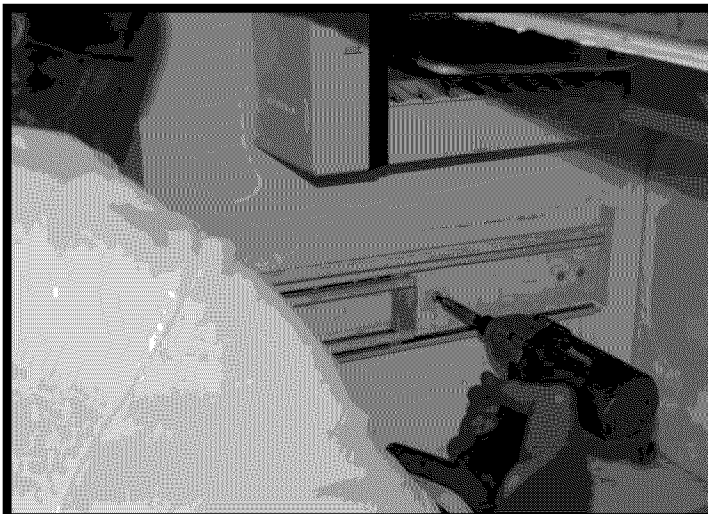


Step 4 Use supplied Backer Plate to mark new drill holes for the new Upper Slide Support see picture A.

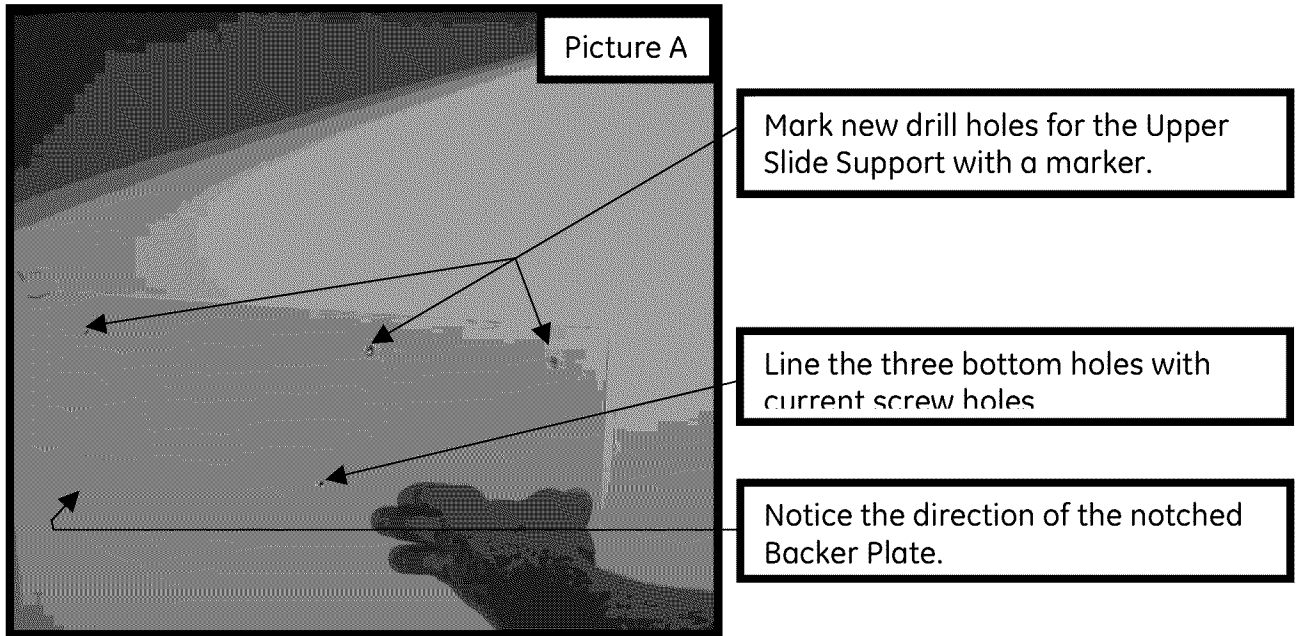


Step 5 Follow Step 4 for opposite side.

Step 6 Drill holes for new Upper Slide Supports with supplied drill bit. (It is very important to use the supplied drill bit)


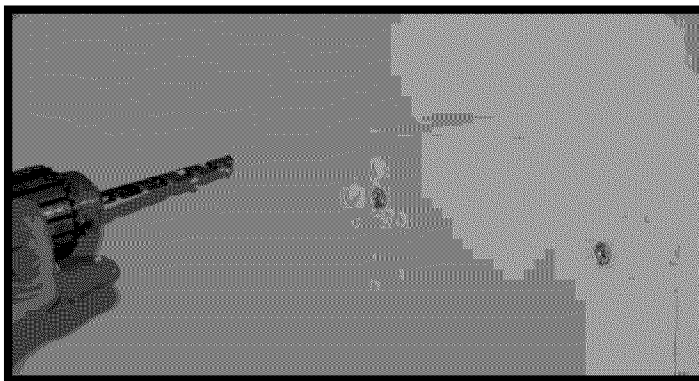


Step 7 After holes have been drilled reinstall above mentioned Backer Plate (repeat for opposite side).

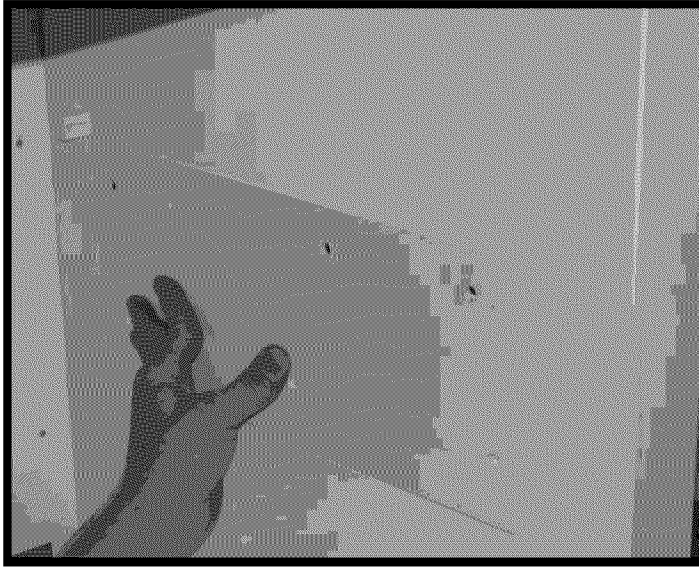


Use the supplied double-sided tape to hold the Backer Plate in place. Do not use the supplied screws. These screws will be used for installing the new slides.

Step 8 Install new Lower (large) Freezer Slide, see picture B (repeat for opposite side).

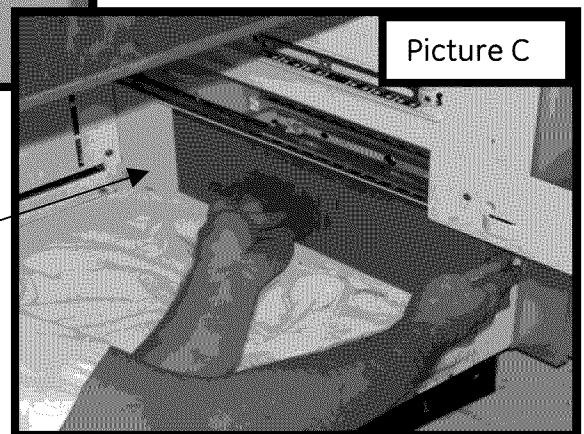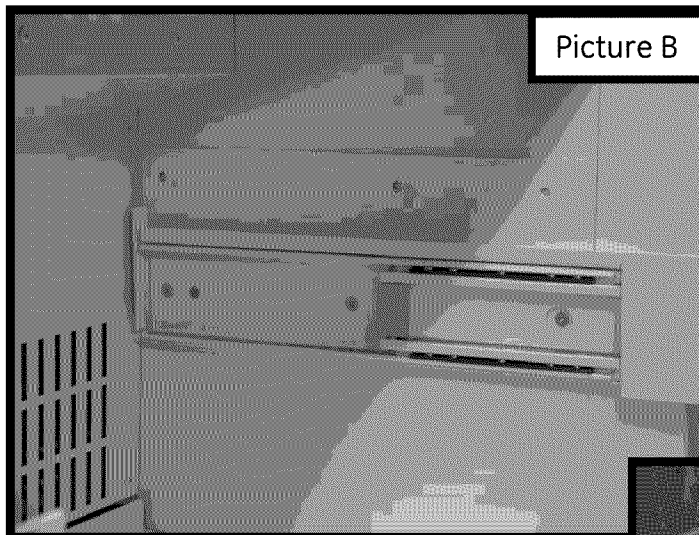


Remember to use the provided guide to align the new slide, see picture C.

Step 9 Install new upper Freezer Slide, see picture D (repeat for opposite side).

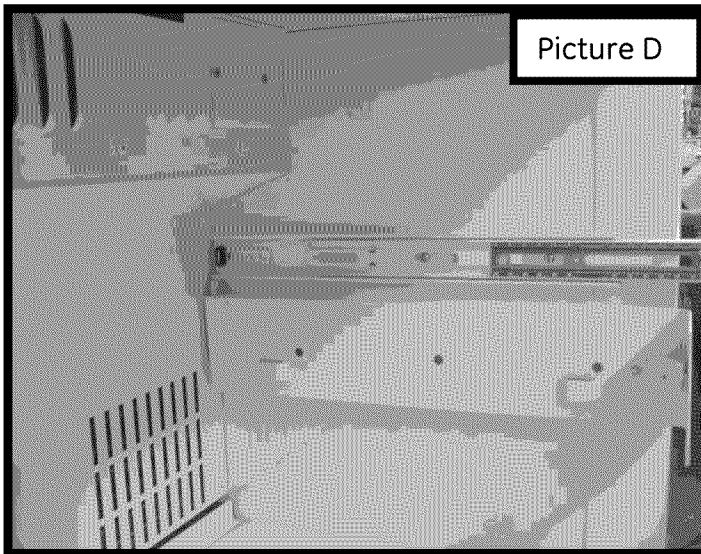


Step 10 Install Upper Freezer Slide Inserts (repeat for opposite side).

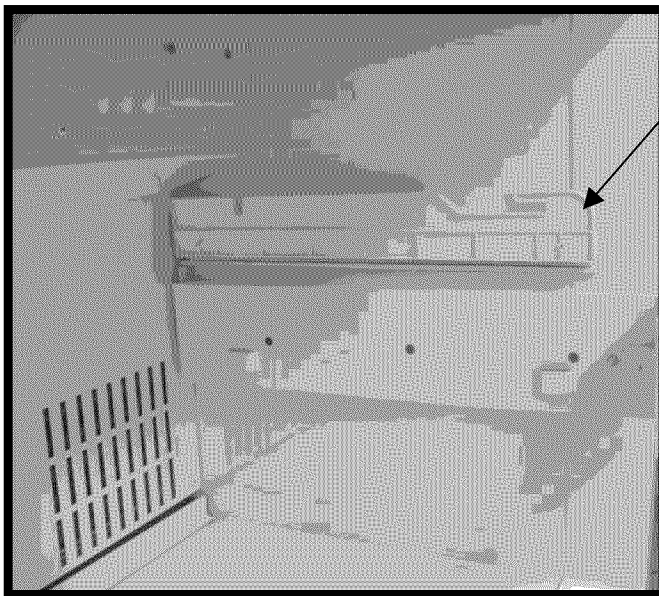

Step 11 Install the Customer's door. For proper door alignment use the provided Door Alignment Kit. (WR49X10112)

Step 12 Extend large Freezer Slide and install customer's large Freezer Basket onto the new Freezer Slide.

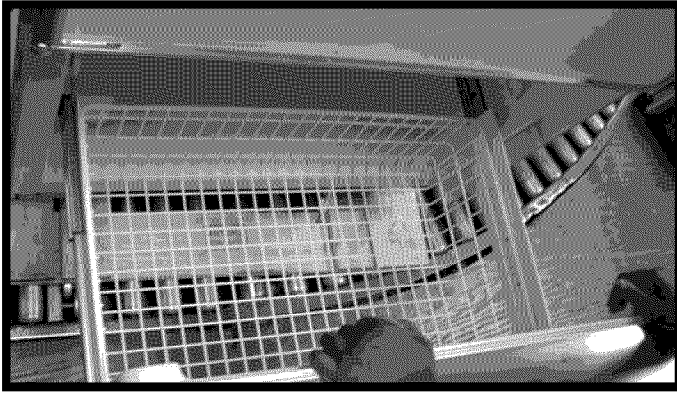

Step 13 Install new Upper Freezer Basket.



Step 14 Clean work areas carefully, ensure all metal shavings are cleaned in both the cabinet and from the customer's home.