



BE500 Scooter Set up Instructions

Removal from Crate

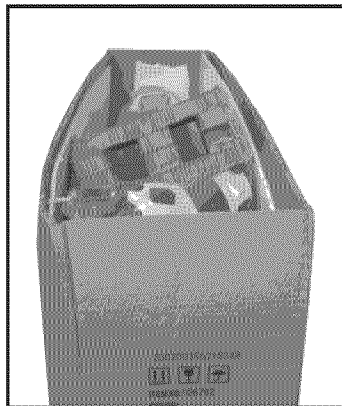


1. Remove cardboard carton.

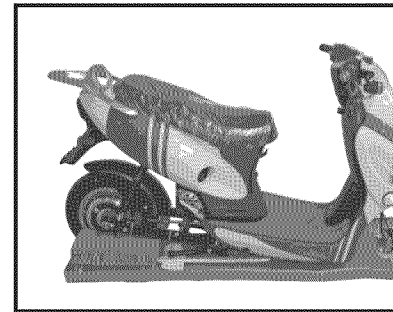






2. Remove all parts needed for assembly and set aside.

Center stand




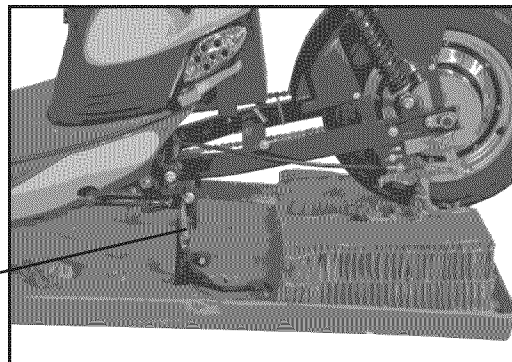


3. Place unit on center stand for easy assembly.



Parts

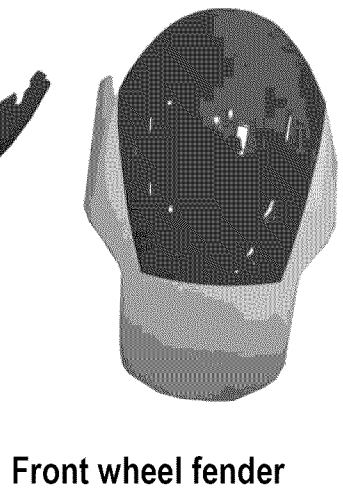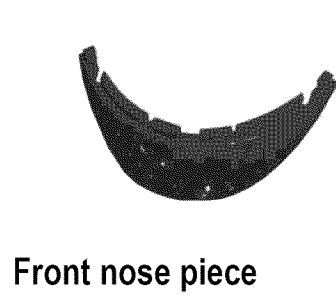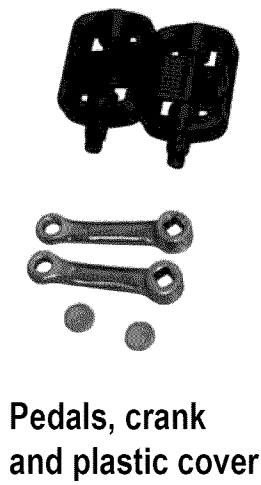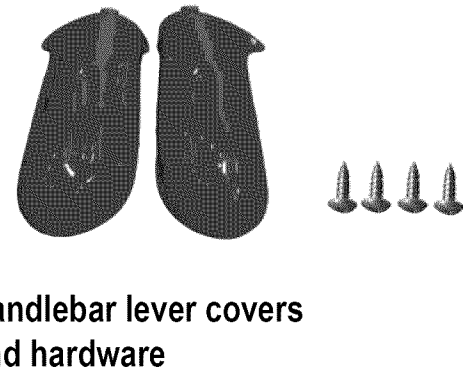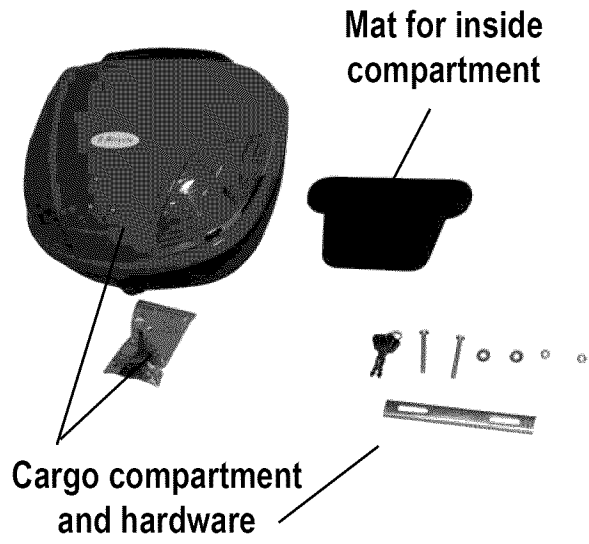

Parts

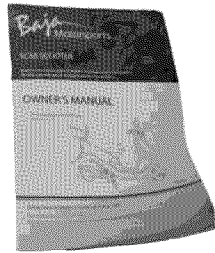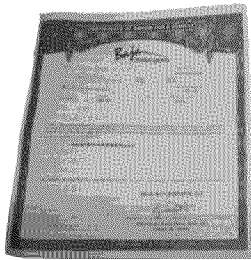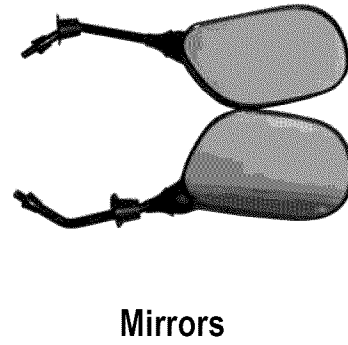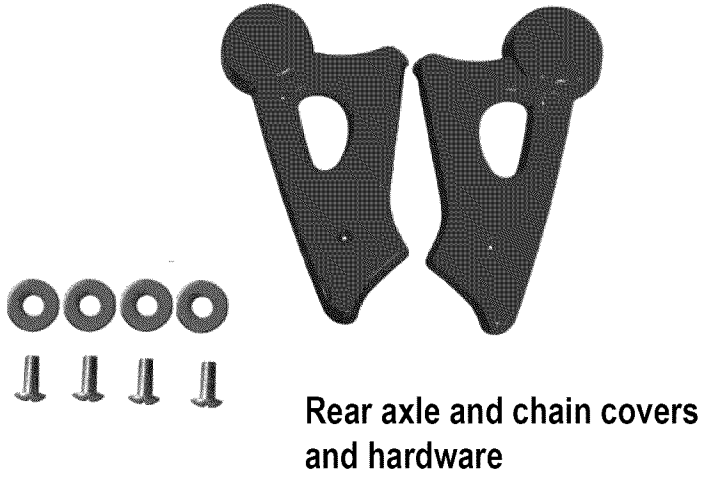


Mirrors

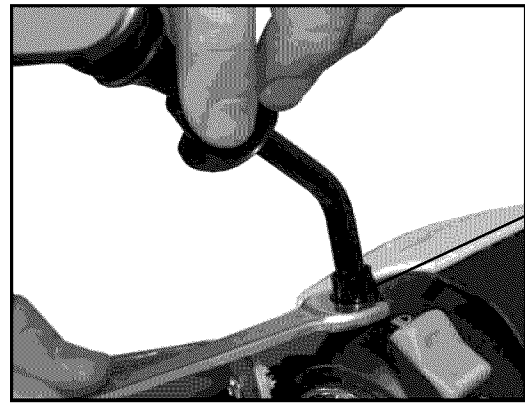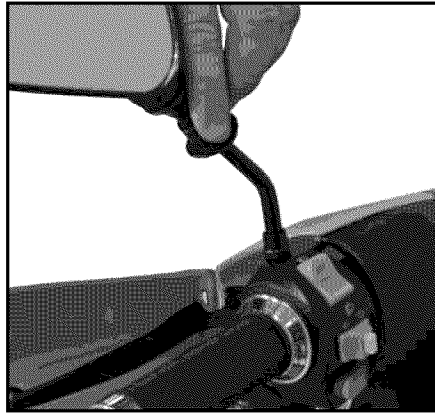

Nut


4. Insert left and right mirror into hole on handlebar and turn clockwise, secure by tightening nut .

Cargo Compartment

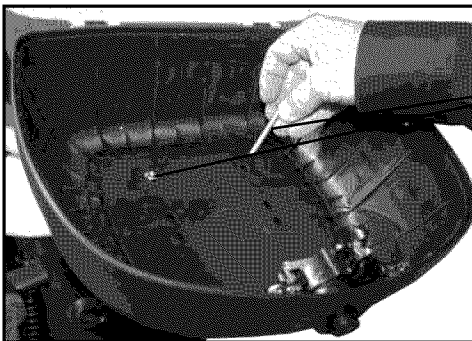

Phillips head bolts

5. Place cargo compartment on rear rack of unit. Attach using two phillips head bolts.

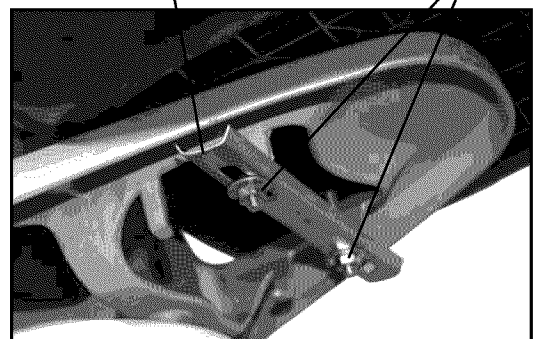


Bracket


Washers and nuts

6. Secure cargo compartment with bracket, washers and nuts provided in hardware bag.



Wheel Fender and Nose piece

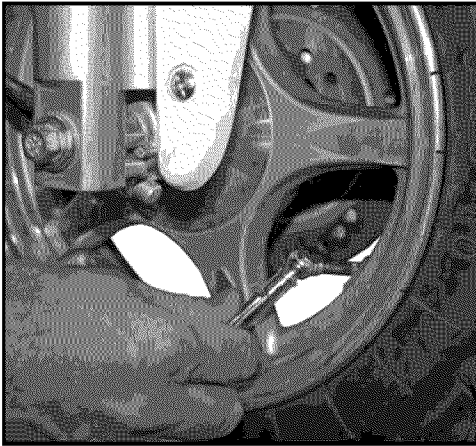

7. Fill both front and rear tires with air. Tire pressure should be set to 36psi (250kpa).


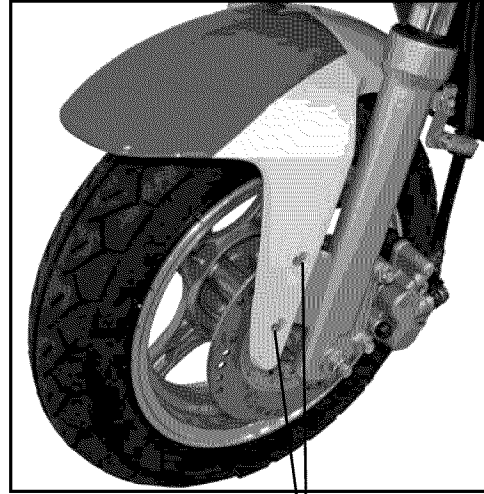


8. Attach front wheel fender to front forks with four phillips head screws, two for each side.

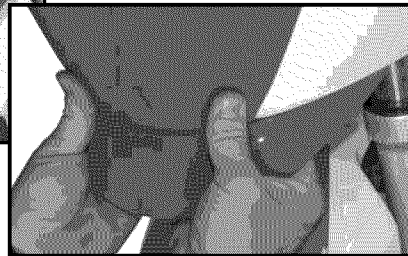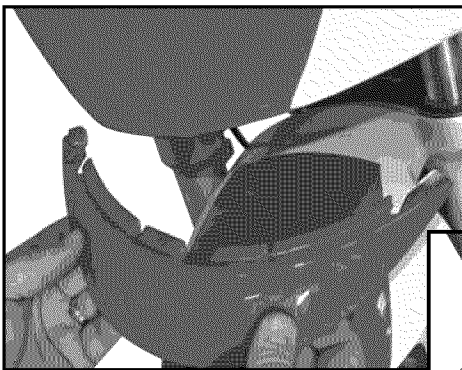


9. Align front nose piece under front panel and snap into place. Secure with two phillips head screws.


Rear axle and Chain Covers

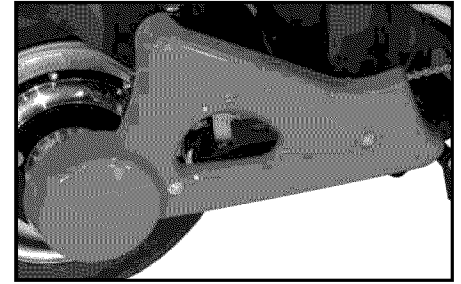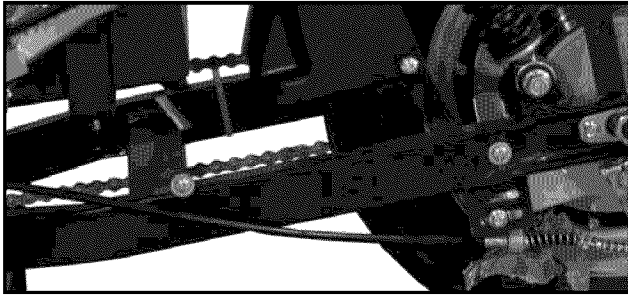



10. Attach each cover to frame using two washers and two phillips head screws.

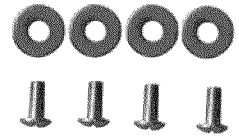

Pedals



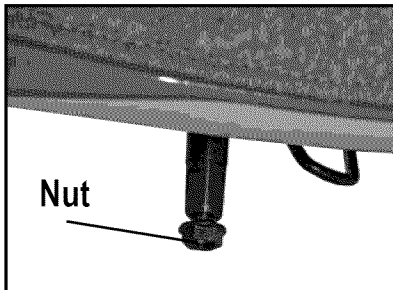


11. Remove and save nut from pedal crank shaft.

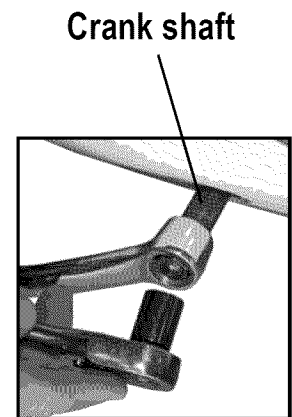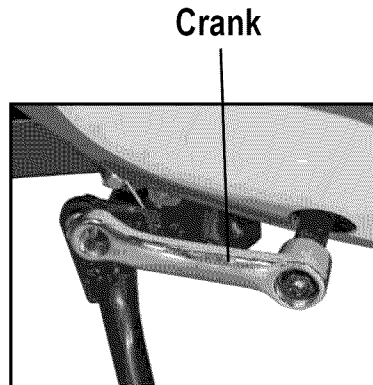

12. Attach left and right cranks to crank shaft.
NOTE: Each crank will be labeled L or R for left or right.
Secure crank to shaft with nut previously removed.




Pedals

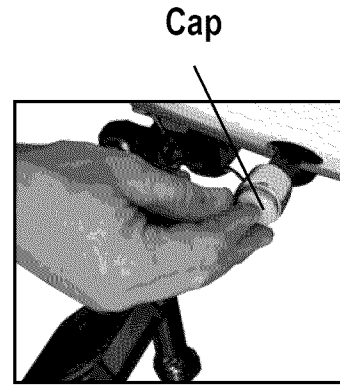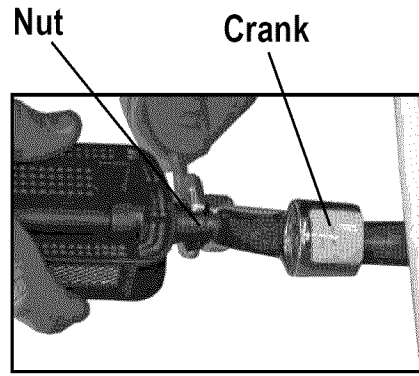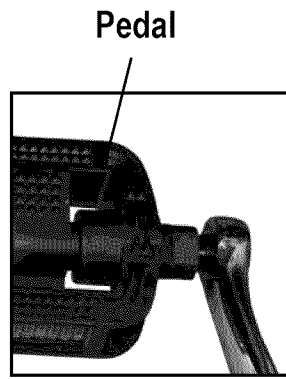

13. Attach left and right pedals to cranks.
NOTE: Each pedal will be labeled L or R for left or right.
Secure pedal to crank by tightening nut on pedal.


14. Place cap cover over nut on crank.

Mud Flap

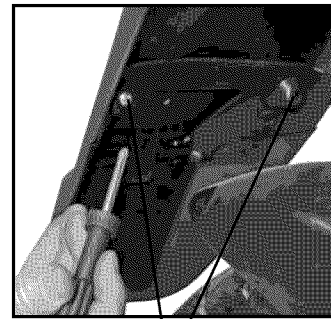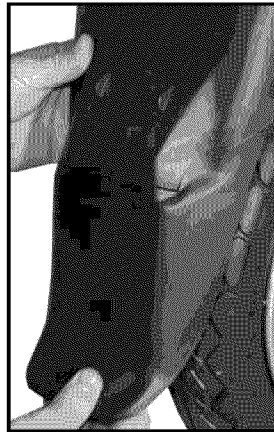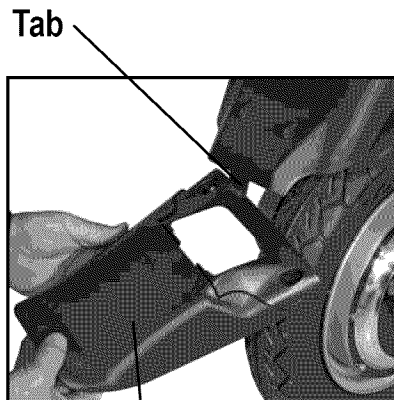

15. Place opening of mud flap over tab of mud flap attachment. Secure from behind with two phillips head screws.

Handlebar Lever Covers

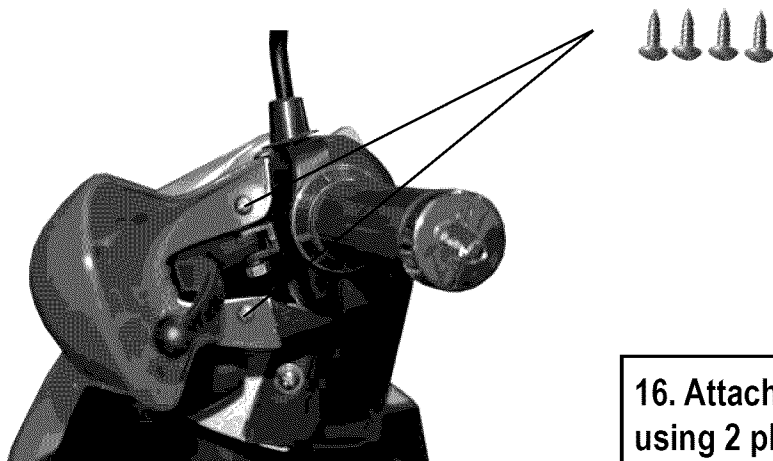

16. Attach each handlebar lever cover using 2 phillips head screws provided.

Charging the Battery



17. Charge battery before use. Turn master switch "ON". Plug charger into outlet below seat cushion. Refer to owners manual for charging times.