

Utförare :
PIBL

Artikelnummer:
700 756

Datum :
2009-06-10

Dokumentnamn :
MB_04

Utgåva :
07

AssemblyInstructions-Monteringsanvisning-Aufbauanleitung-Instrucciones de ensamble Drawers and Cupboard kit 0042-




Underskåp 0042-

Bausatz 0042-


Kit 0042 de los cajones y del armario

Verktyg för montering. Ingår inte.
Tools needed for assembling. Not included.
Werkzeug für die Montage ist nicht Teil


des Lieferumfanges.
Las herramientas requeridas para montar.
No incluidas.







1

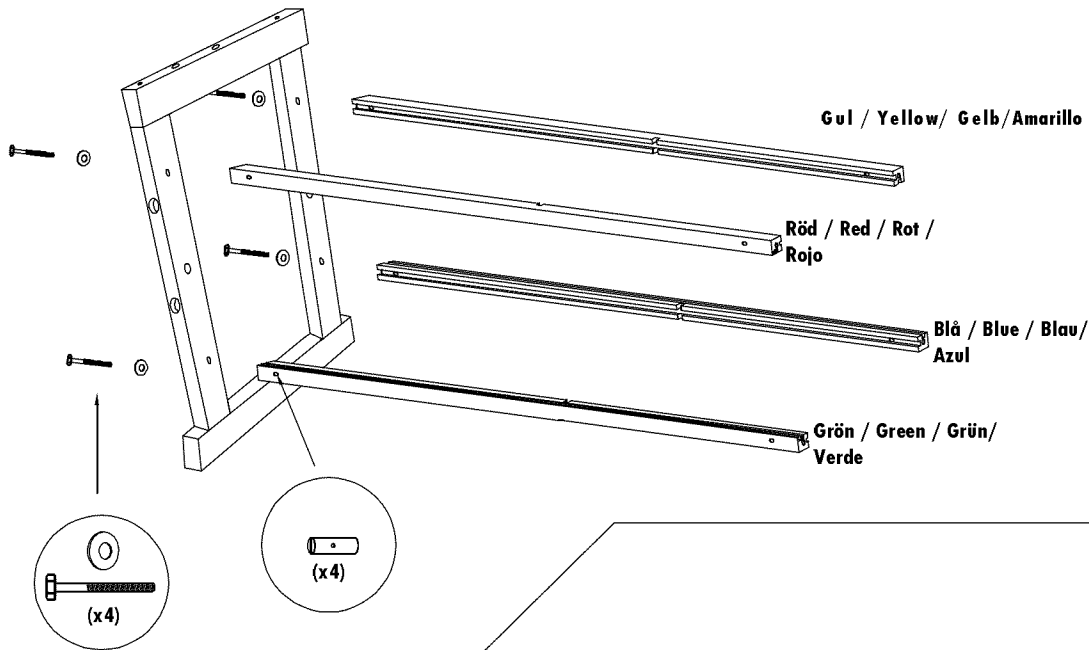

2

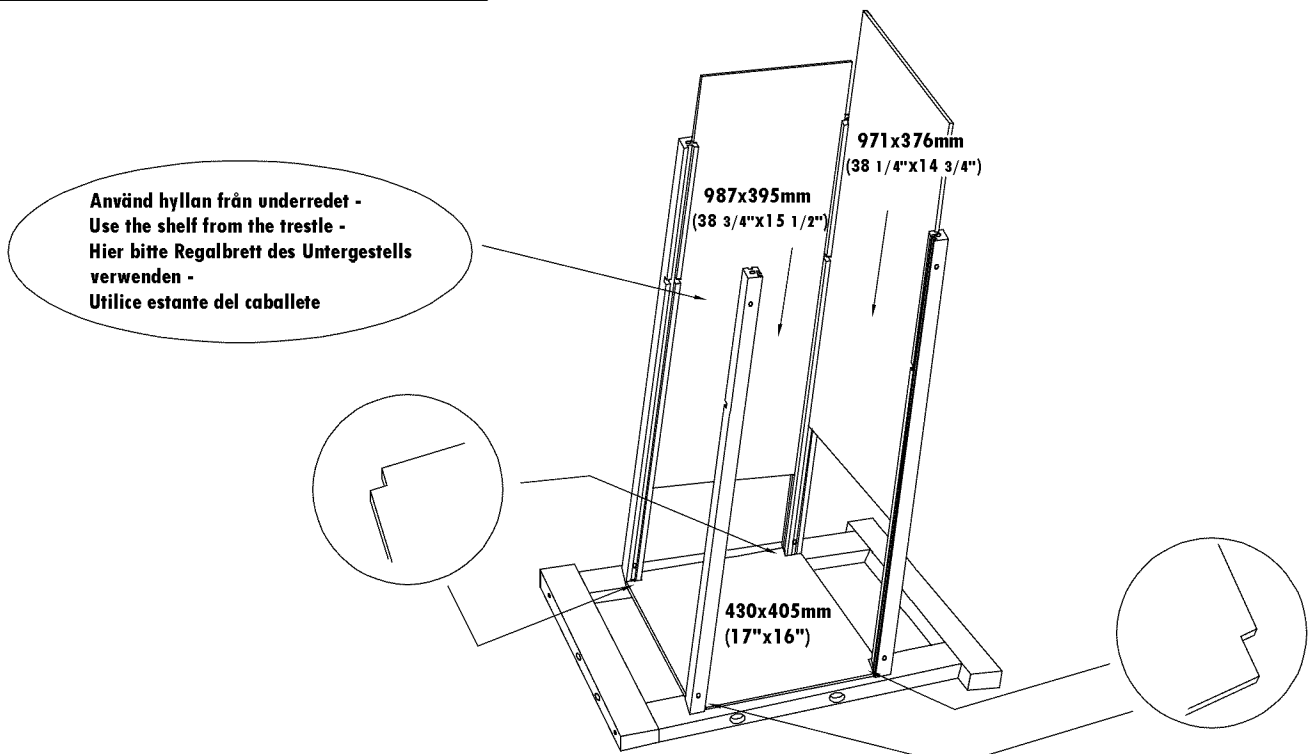

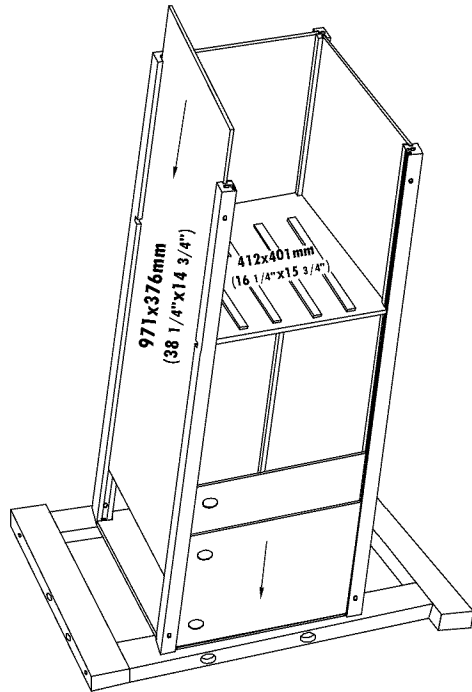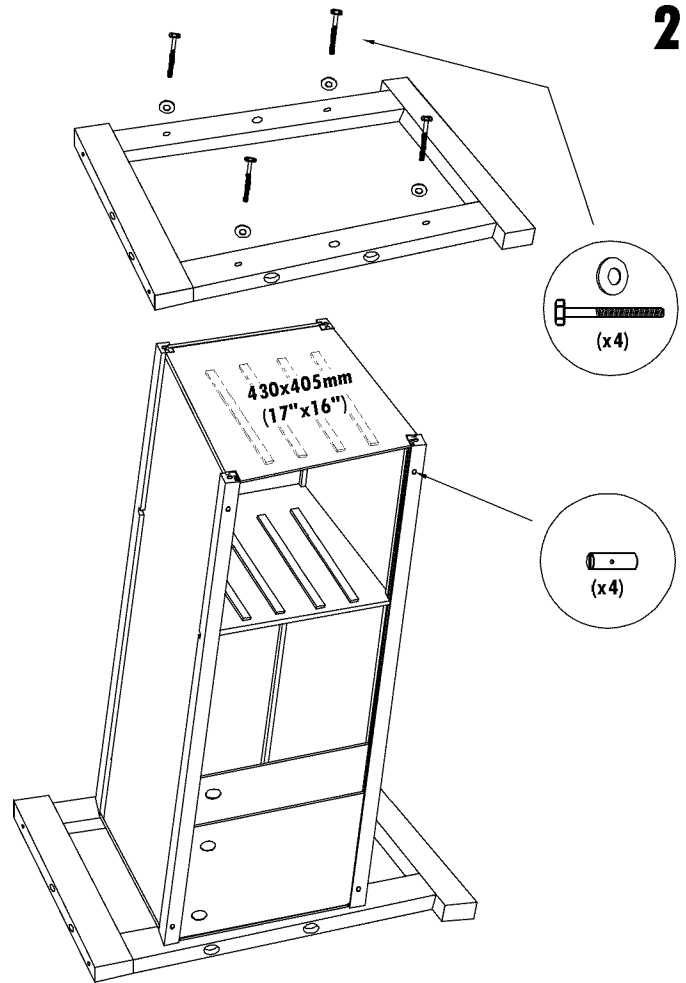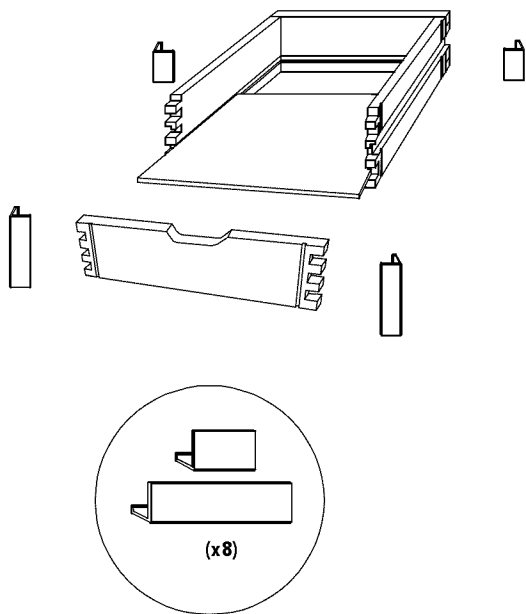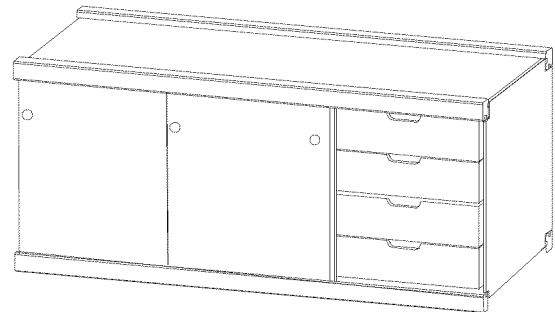
3**4****2****5****6**

OBS. De två reglarna som medföljer bänkkunderredet behövs ej längre.

N.B. The two original rails supplied with the bench trestle will no longer be required.

Die zwei dem Untergestell mitfolgenden Riegel sind zum Aufbau nicht mehr erforderlich.

Nota: Los dos carriles originales suministrados del banco no serán requeridos.



www.sjobergs.se

SJÖBERGS
OF SWEDEN