


Installation Instructions

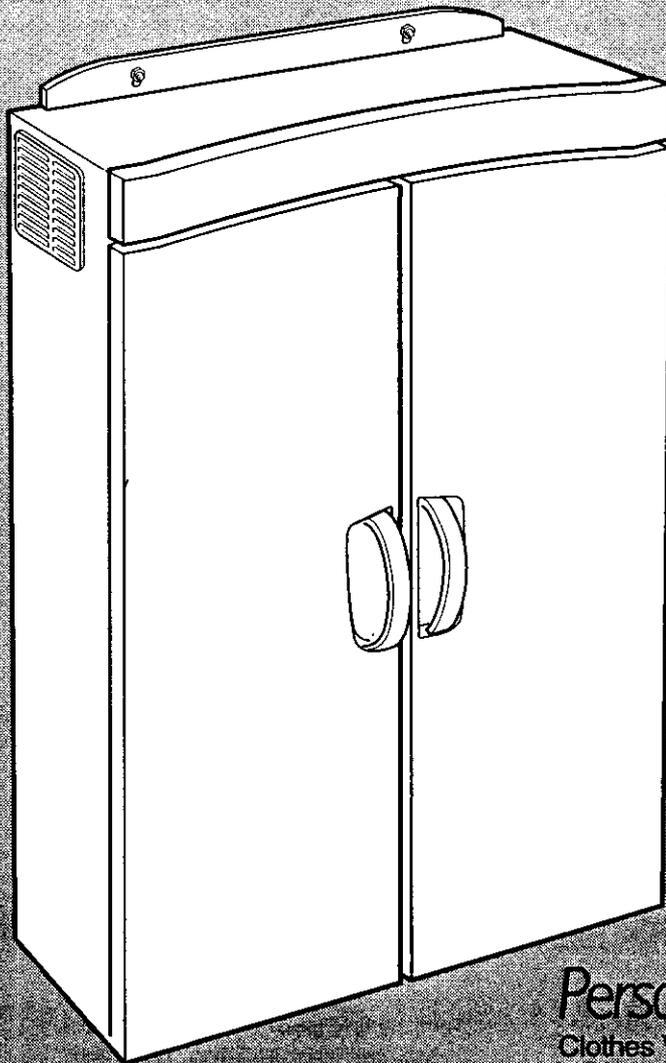

For model series:

PVWC600

PVWN600

PVWM600

PVWS600

PVBN600

PVBC600

PVBM600

PVBS600

Model shown:
PVWN600

Personal Valet™
Clothes Vitalizing System

Part No. 8527279

⚠ WARNING



Tip Over Hazard

Do not use clothes vitalizer until completely installed.

Install lag bolts securely into wall studs.

Use two or more people to move and install clothes vitalizer.

Failure to follow these instructions can result in death or serious injury.

IMPORTANT: Read and save these instructions.

IMPORTANT:

Installer: Leave Installation Instructions with the owner.

Owner: Keep Installation Instructions for future reference.

Save: Installation Instructions for local electrical inspector's use.

Before you start...

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING". These words mean:

⚠ DANGER

You can be killed or seriously injured if you don't immediately follow instructions.

⚠ WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

It is your responsibility to:

Observe all governing codes and ordinances.

Check code requirements: Some codes limit or do not permit installation of this product in garages, closets, mobile homes or sleeping quarters. Contact your local building inspector.

Comply with the installation specifications and dimensions.

Consider spacing requirements for companion appliances.

Make sure you have everything necessary for proper installation.

Properly install appliance.

Contact a qualified installer to insure that the electrical installation meets all national and local codes and ordinances.

Electrical requirements

⚠ WARNING



Electrical Shock Hazard
Plug into a grounded 3-prong outlet.
Do not remove ground prong.
Do not use an adapter.
Do not use an extension cord.
Failure to follow these instructions can result in death, fire, or electrical shock.

Important: Observe all governing codes and ordinances.

A 120-volt, 60-Hz, AC-only, 15- or 20-ampere fused electrical supply is required. A Time-delay fuse or circuit breaker is recommended.

It is recommended that a separate circuit serving only this appliance be provided.

If codes permit and a separate ground wire is used, it is recommended that a qualified electrician determine that the ground path is adequate.

3-prong ground-type outlet must be located within 5 feet of lower right corner of appliance.


Recommended ground method

The clothes vitalizer, when installed, must be electrically grounded in accordance with local codes, or in the absence of local codes, with National Electrical Code, ANSI/NFPA 70*.

GROUNDING INSTRUCTIONS: This clothes vitalizer must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current.

The power supply cord plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

WARNING – Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the appliance is properly grounded. Do not modify the plug provided with the appliance – if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

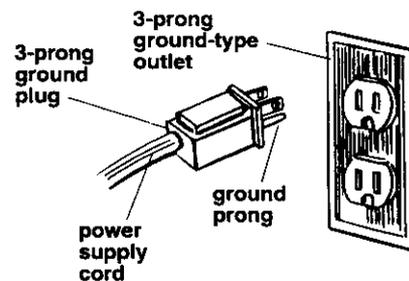

Tools needed for installation:

- stud finder (optional)
- drill (electric recommended)
- 5/32" drill bit (pilot hole for lag bolt)
- tape measure
- pencil
- carpenter's level
- 7/16" wrench (ratchet recommended) for lag bolts

if installing on a concrete or concrete block wall

- concrete drill bit for wall anchors (refer to wall anchor for drill bit size)
- hammer

Parts supplied for installation:

(inside accessory box)

- 2, 1/4" x 2" lag bolts (for wood studs)
- 2, 1/4-20" nuts
- 1 mounting bracket cover (can be painted or covered with wallpaper)
- separate metal mounting bracket assembly
- 6, 1/8" thick adhesive backed cabinet spacers

Copies of the standards listed above may be obtained from:

* National Fire Protection Association
One Batterymarch Park
Quincy, Massachusetts 02269

Parts not supplied for installation:

2, 1/4"x1-1/4" lag bolts with wall anchors for concrete or concrete block wall installations.

Note: Lag bolt length is based on mounting bracket thickness only. Add thickness of any wall coverings to length of lag bolts/wall anchors used. These can be obtained from local hardware store.

Now start...

⚠ WARNING



Tip Over Hazard


Do not use clothes vitalizer until completely installed.

Install lag bolts securely into wall studs.

Use two or more people to move and install clothes vitalizer.

Failure to follow these instructions can result in death or serious injury.

Product Dimensions

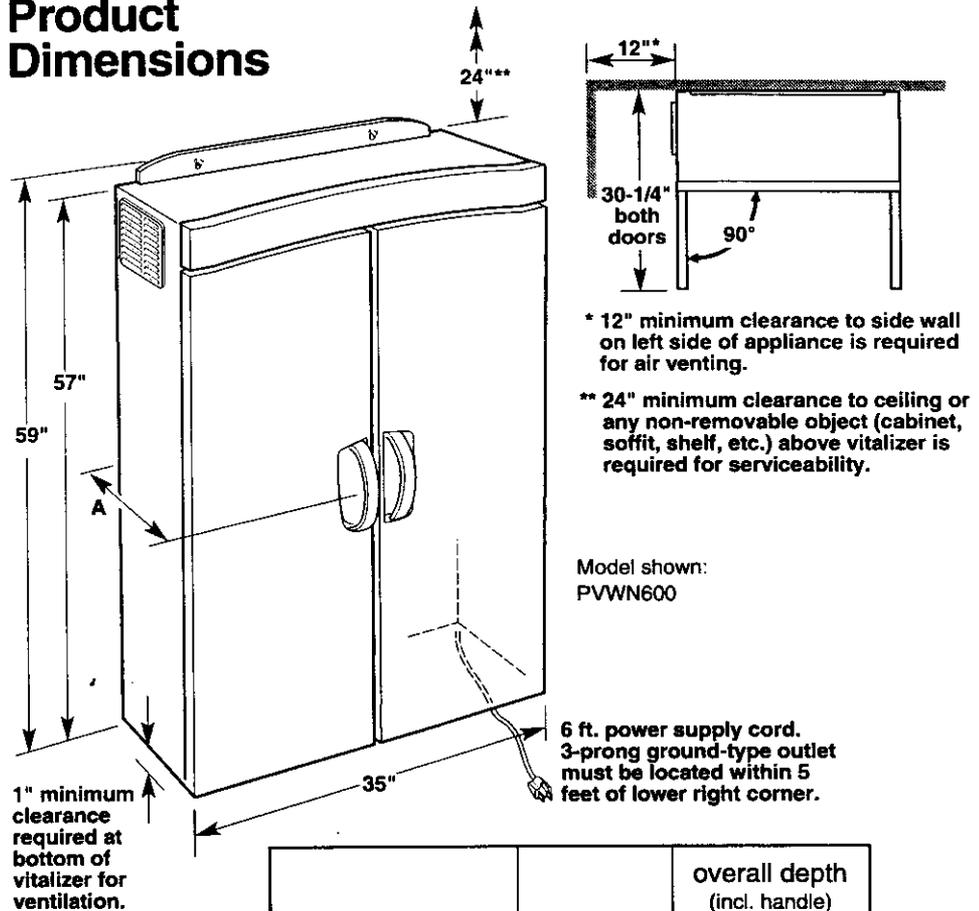


Model shown:
PVWN600

6 ft. power supply cord.
3-prong ground-type outlet
must be located within 5
feet of lower right corner.

1" minimum
clearance
required at
bottom of
vitalizer for
ventilation.

models	weight	overall depth (incl. handle) A
white doors	117 lbs.	15-1/4"
biscuit doors	117 lbs.	15-1/4"
wood panel doors	129 lbs.	15-1/8"
mirrored doors	143 lbs.	15-1/8"


1. With clothes vitalizer in carton, lay carton on back. Open doors and remove contents. Important: Before the clothes vitalizer is installed on wall, do not open doors more than 90° to avoid damaging the door hinges. Shut doors and reapply tape or strap. Leave clothes vitalizer in box.

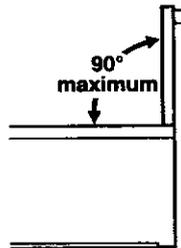

2. Remove the mounting bracket assembly, nuts and lag bolts (if installing in wall studs) from the accessory box.

With washer sides of nuts facing mounting bracket, start nuts onto the bracket's threaded studs.

3. Mark a horizontal line at least 24 inches long, 70-3/4" minimum from the floor. Important: The line MUST be level.

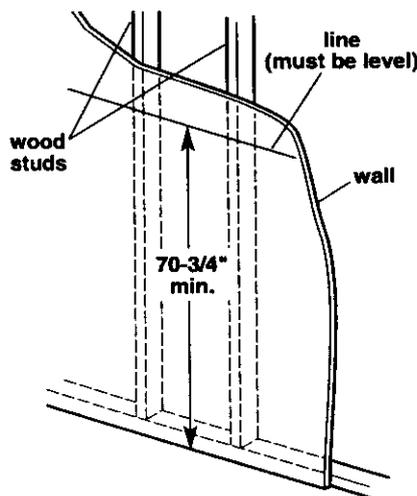


Critical step:

For wood stud installations, each lag bolt MUST be installed in a wood stud as shown. If there are not 2 studs in mounting area, DO NOT install vitalizer. **DO NOT use toggle bolts through dry wall to support the clothes vitalizer.**

Wood stud installation

4a. Locate and mark the centers of each wall stud. Make these marks about 72" from the floor.

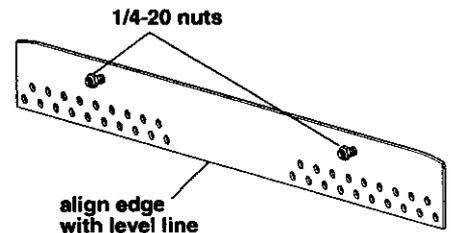

4b. Align the lower edge of the mounting bracket assembly with the level line. Select and mark a hole location on each side of the bracket that is closest to the center of each stud.


4c. Set bracket aside and drill 5/32" pilot holes.

Concrete or concrete block installation


4d. Align the lower edge of the mounting bracket assembly with the level line. Select and mark a hole location on each side of the bracket.

4e. Set bracket aside and drill holes. Drive the wall anchors into the holes with hammer.

5. Fasten the mounting bracket to wall. Check that the bracket is level then securely tighten the lag bolts.

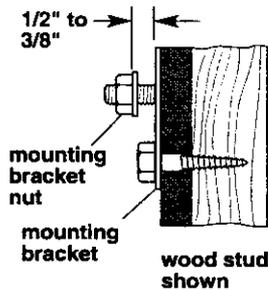


6. Space the mounting bracket nuts 1/2" to 3/8" away from mounting bracket.

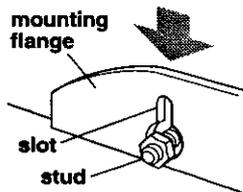

7. Lift clothes vitalizer up and slide keyhole slots over nuts. Lower vitalizer down onto mounting bracket studs and tighten nuts.

Model shown:
PVWN600

spacers as needed

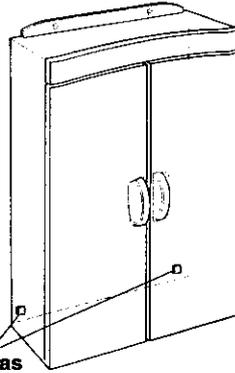

8. Check tops of doors for uniform vertical alignment. Wall irregularities may require shimming the back bottom corners of the cabinet away from wall to align the door tops.

If door tops are not aligned:

- Carefully pull a bottom cabinet corner away from the wall and observe the alignment shift.
- Separate adhesive backed spacers (in accessory box) but do not remove from the adhesive backing.
- Insert spacers at either or both bottom corners to obtain door alignment. The spacers may be stacked for additional thickness if needed.
- When alignment is obtained, remove the spacers from the adhesive backing and attach to back of cabinet.

9. Remove mounting bracket cover from accessory box.

10. Peel off adhesive protective strips. Align cover with bracket and press cover down against top of appliance.

Note: Mounting bracket cover can be painted or covered with wallpaper.

11. Plug power supply cord into grounded outlet.

12. If your clothes vitalizer came with a storage drawer, follow the instructions packed with the drawer and install it now.

If clothes vitalizer does not operate:

- Check that circuit breaker is not tripped or house fuse blown.
- Check that power supply cord is plugged into wall outlet.
- See Owner's Manual for troubleshooting list.

If you need assistance:

- Refer to Owner's Manual.
- Call the Consumer Interaction Center. Check your Owner's Manual for a toll-free number to call or call the dealer from whom you purchased the clothes vitalizer. The dealer is listed in the Yellow Pages of your phone directory under "Appliances – Household – Major – Service and Repair."

If you need service:

Maintain the quality built into your clothes vitalizer by calling an authorized service company.

To obtain the name and number of an authorized service company:

- Contact the dealer from whom you purchased your clothes vitalizer, or
- Look in the Yellow Pages of your phone directory under "Appliances – Household – Major – Service and Repair," or
- Call the Consumer Interaction Center. The toll-free number is listed in your Owner's Manual.

When you call, you will need:

- The clothes vitalizer model number.
- The clothes vitalizer serial number.

Both numbers are listed on the model/serial number plate located on the lower cabinet frame next to the door magnet.

Accessories:

The following storage drawer kits are available from your dealer:

Kit No. 8527309 White

Kit No. 8527310 Biscuit

Kit No. 8527308 Signet Grey