


Installation Instructions

WR17X10424 - Bucket & Cover Assembly Display

When a recent change was made to Bucket & Cover Assembly Display WR17X10424 to use Cover 162D1305P002 instead of specified Cover 187D1768P001, interference with the Freezer Door closure was inadvertently introduced. To eliminate that interference, the Cover provided with the new Bucket Assembly must be removed, discarded and replaced by the Cover on the assembly being replaced.

The Cover is easily removed from the assembly by removing four mounting screws. Those screw locations are the same on both Covers and shown in the photos below.

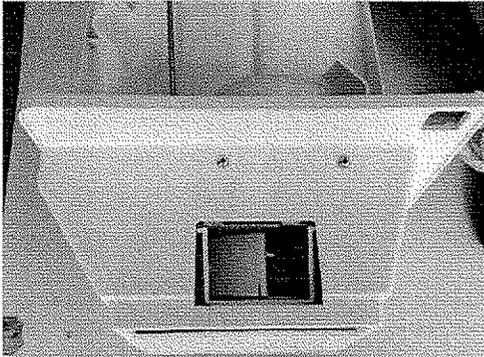


Two screws are located on the bottom of the Cover.




Two screws are located inside the Bucket, behind the Cover.

When the Cover removal and replacement has been completed, the Bucket and Cover Assembly Display can be installed in the Freezer compartment.

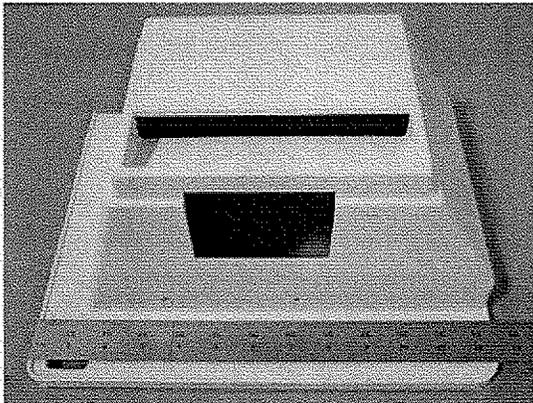

Cover to be removed and discarded
162D1305P002

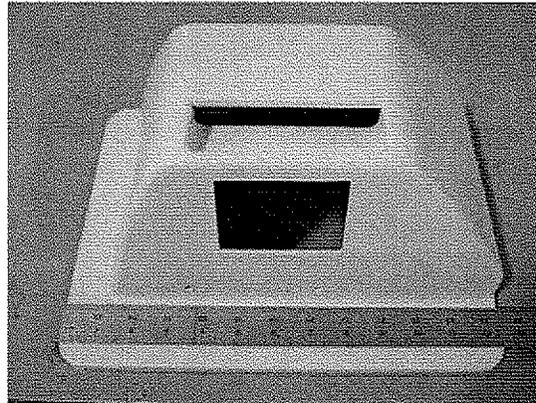

Original Cover 187D1768P001