INSTALLATION INSTRUCTIONS

(WB50T10046, WB50T10048, WB50T10050, AND WB50T10052 Service Kits)

Remove Old
Timer And Discard

Power Resistor
(No Wires Will Be Reconnected To The Resistor)

Neutral

Disconnect Old Timer
From Power Resistor

Disconnect Wire Harness At this Terminal
(Harness To Be Used With New Timer Kit)
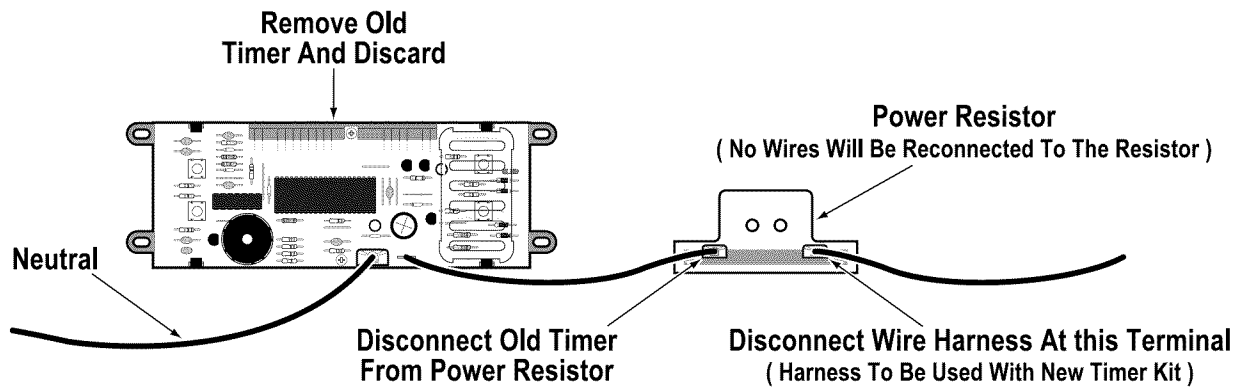
To Remove the old Time-of-Day (TOD) Clock

1. De-energize power circuit and unplug the range.
2. Lift up cooktop panel and lock into position with prop rod.
3. Locate the screws that secure the controls access cover to the range body.
4. Remove screws and access cover and set aside.
5. Remove wires to TOD clock and power resistor (wired to TOD clock).
6. Remove TOD clock and save the screws.

New Timer

Line

Jumper Wire

Neutral

Reconnect Wire Harness
To Jumper Wire Provided
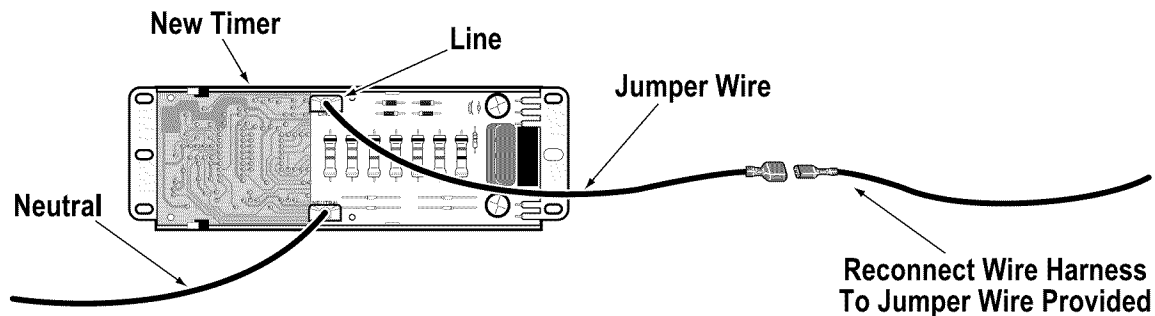
To Install the New TOD CLOCK

1. Center and attach the new overlay onto the new TOD clock, if not already attached (do not use overlay from old TOD).
2. Install new TOD clock into position using the 4 screws.
3. Connect the kit jumper wire to the harness wire that was attached to the power resistor. Cover any exposed metal areas on the terminals with a high-temperature insulation tape.
4. Attach the other end of the jumper wire to the "line" tab on the TOD.
5. Attach the neutral wire to the "neutral" tab on the TOD.
6. Replace access cover after verifying no wires are pinched.
7. Plug in range and power up circuit.
8. Verify proper operation of the TOD clock.