
Over the Range Microwave Oven

BEFORE YOU BEGIN

Read these instructions carefully and completely.

- **IMPORTANT** Save these instructions for local inspector's use.
- **IMPORTANT** Observe all governing codes and ordinances.
- Note to Installer Be sure to leave these instructions with Consumer.
- Note to Consumer Keep these instructions for future reference.
- **Skill level** Installation of this appliance requires basic mechanical and electrical skills.
- Proper installation is the responsibility of the installer.
- Product failure due to improper installation is not covered under Warranty.

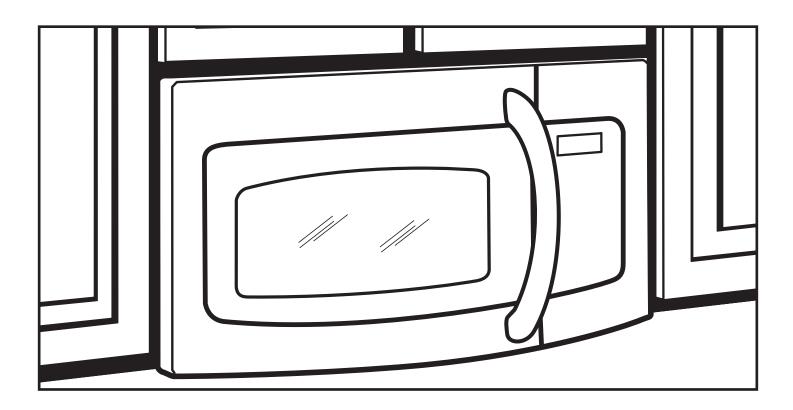

LA SECCIÛN EN ESPAÒOL EMPIEZA EN LA P·GINA 25.


READ CAREFULLY. KEEP THESE INSTRUCTIONS.

CONTENTS
General information
Important Safety Instructions 3
Electrical Requirements 3
Hood Exhaust
Damage - Shipment/Installation 6
Parts Included 6
Tools You Will Need7
Mounting Space7
Step-by-step Installation Guide
Placement of Mounting Plate 8–10
Removing the Mounting Plate 8
Finding the Wall Studs 8
Determining Wall Plate Location 9
Aligning the Wall Plate 10
Installation Types 11–23
A Outside Top Exhaust 12–15
Attach Mounting Plate to Wall12
Preparation of Top Cabinet13
Check Blower Motor Orientation13
Adapting Blower for Outside Ventilation13, 14
Check for Proper Damper Operation14
Mount the Microwave Oven14, 15
Adjust the Exhaust Adaptor15
Connecting Ductwork15

B Outside Back Exhaust16-19
Preparing Rear Wall for Outside Back Exhaust16
Attach Mounting Plate to Wall16 17
Preparation of Top Cabinet17
Adapting Microwave Blower for Outside Back Exhaust 17, 18
Mount the Microwave Oven19
C Recirculating 20-23
Attach Mounting Plate to Wall 20
Preparation of Top Cabinet 20
Check Blower Motor Orientation 21
Adapting Microwave Blower for Recirculation21, 22
Mount the Microwave Oven 22, 23
Installing the Charcoal Filter23
Before You Use Your Microwave 24


IMPORTANT SAFETY INSTRUCTIONS

A qualified electrician must perform a ground continuity check on the wall receptacle before beginning the installation to ensure that the outlet box is properly grounded. If not properly grounded, or if the wall receptacle does not meet electrical requirements noted (under ELECTRICAL REQUIREMENTS), a qualified electrician should be employed to correct any deficiencies.

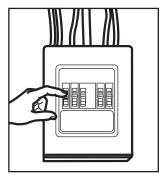

▲WARNING

Risk of Electric Shock. Can cause injury or death: Remove house fuse or open circuit breaker before beginning installation to avoid severe or fatal shock injury.

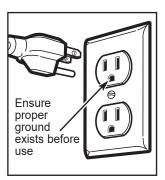

AWARNING

Risk of Electric Shock, Can cause injury or death: THIS APPLIANCE MUST **BE PROPERLY GROUNDED** to avoid severe or fatal shock.

The power cord of this appliance is equipped with a three-prong (grounding) plug which mates with a standard three-prong (grounding) wall receptacle to minimize the possibility of electric shock hazard from this appliance.

Where a standard two-prong wall receptacle is encountered, it must be replaced with a properly grounded three-prong wall receptacle, installed by a qualified electrician.

RISK OF ELECTRIC SHOCK

AWARNING Can cause injury or death: DO NOT, under any circumstances,

cut, deform or remove any of the prongs from the power cord. Do not use with an extension cord. Failure to comply may cause fire.

ELECTRICAL REQUIREMENTS

Product rating is 120 volts AC, 60 Hertz, 15 amps and 1.75 kilowatts. This product must be connected to a supply circuit of the proper voltage and frequency. Wire size must conform to the requirements of the National Electrical Code or the prevailing local code for this kilowatt rating. The power supply cord and plug should be brought to a separate 15- to 20-ampere branch circuit single grounded outlet. The outlet box should be located in the cabinet above the microwave oven. The outlet box and supply circuit should be installed by a qualified electrician and conform to the National Electrical Code or the prevailing local code.

FOR YOUR SAFETY:

ACAUTION

For personal safety,

the mounting surface must be capable of supporting the cabinet load, in addition to the added weight of this 63-85 pound product, plus additional oven loads of up to 50 pounds or a total weight of 113-135 pounds.

ACAUTION

For personal safety, this product cannot be installed in cabinet

arrangements such as an island or a peninsula. It must be mounted to BOTH a top cabinet AND a wall.

ACAUTION

To avoid the risk of personal injury (back injury or other injuries

due to excessive weight of the microwave oven) or property damage, you will need two people to install this microwave oven.

HOOD EXHAUST

NOTE: Read these next two pages only if you plan to vent your exhaust to the outside. If you plan to recirculate the air back into the room, proceed to page 11.

OUTSIDE TOP EXHAUST (EXAMPLE ONLY)

The following chart describes an example of one possible ductwork installation.




DUCT PIECES		EQUIVALENT LENGTH	х	NUMBER USED	=	LENGTH
	Roof Cap	24 Ft.	Х	(1)	II	24 Ft.
	12 Ft. Straight Duct (6" Round)	12 Ft.	х	(1)	=	12 Ft.
	Rectangular-to-Round Transition Adaptor*	5 Ft.	х	(1)	=	5 Ft.
Equivalent lengths of duct pieces are based on actual tests and reflect requirements for good venting performance with any vent hood. Total Length =					41 Ft.	

^{*} **IMPORTANT:** If a rectangular-to-round transition adaptor is used, the bottom corners of the damper will have to be cut to fit, using the tin snips, in order to allow free movement of the damper.

FOLIVALENT

OUTSIDE BACK EXHAUST (EXAMPLE ONLY)

The following chart describes an example of one possible ductwork installation.

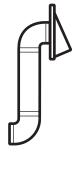

	DUCT PIECES		LENGTH*	Х	USED	=	LENGTH
7		Wall Cap	40 Ft.	x	(1)	=	40 Ft.
		3 Ft. Straight Duct (3¼″ x 10″ Rectangular)	3 Ft.	х	(1)	=	3 Ft.
		90° Elbow	10 Ft.	x	(2)	=	20 Ft.
	Equivalent lengths of duct pieces are based on actual tests and reflect requirements for good venting performance with any vent hood. Total Length =					63 Ft.	

NIIMBER

NOTE: For back exhaust, care should be taken to align exhaust with space between studs, or wall should be prepared at the time it is constructed by leaving enough space between the wall studs to accommodate exhaust.

NOTE: If you need to install ducts, note that the total duct length of $3\frac{1}{4}$ " x 10" rectangular or 6" diameter round duct **should not exceed 140 equivalent feet.**

Outside ventilation requires a HOOD EXHAUST DUCT. Read the following carefully.

NOTE: It is important that venting be installed using the most direct route and with as few elbows as possible. This ensures clear venting of exhaust and helps prevent blockages. **Also, make sure dampers swing freely and nothing is blocking the ducts.**

Exhaust connection:

The hood exhaust has been designed to mate with a standard $3\frac{1}{4}$ " x 10" rectangular duct.

If a round duct is required, a rectangular-to-round transition adaptor must be used. **Do not use less than a 6" diameter duct.**

Maximum duct length:

For satisfactory air movement, the total duct length of $3\frac{1}{4}$ " x 10" rectangular or 6" diameter round duct **should not exceed 140 equivalent feet.**

Elbows, transitions, wall and roof caps,

etc., present additional resistance to airflow and are equivalent to a section of straight duct which is longer than their actual physical size. When calculating the total duct length, add the equivalent lengths of all transitions and adaptors plus the length of all straight duct sections. The chart below shows you how to calculate total equivalent ductwork length using the approximate feet of equivalent length of some typical ducts.

DUCT PIECES		EQUIVALENT LENGTH	X	NUMBER USED	=	LENGTH
	Rectangular-to-Round Transition Adaptor*	5 Ft.	х	()	=	Ft.
	Wall Cap	40 Ft.	x	()	=	Ft.
	90° Elbow	10 Ft.	x	()	=	Ft.
	45° Elbow	5 Ft.	х	()	=	Ft.
	90° Elbow	25 Ft.	х	()	=	Ft.
	45° Elbow	5 Ft.	х	()	=	Ft.
	Roof Cap	24 Ft.	х	()	=	Ft.
	Straight Duct 6" Round or 31/4" x 10" Rectangular	1 Ft.	х	()	=	Ft.
	Total Ductwork					= Ft.



^{*} IMPORTANT: If a rectangular-to-round transition adaptor is used, the bottom corners of the damper will have to be cut to fit, using the tin snips, in order to allow free movement of the damper.

Equivalent lengths of duct pieces are based on actual tests and reflect requirements for good venting performance with any vent hood.

DAMAGE - SHIPMENT INSTALLATION

- If the unit is damaged in shipment, return the unit to the store in which it was bought for repair or replacement.
- If the unit is damaged by the customer, repair or replacement is the responsibility of the customer.
- If the unit is damaged by the installer (if other than the customer), repair or replacement must be made by arrangement between customer and installer.

PARTS INCLUDED

HARDWARE PACKET


PART	QUANTITY	
#Junilluming	Wood Screws (¼" x 2")	2
	Toggle Bolts (and wing nuts) (3/16" x 3")	2
	Self-Aligning Machine Screws (¼"-28 x 3¼")	3
	Nylon Grommet (for metal cabinets)	1

You will find the installation hardware contained in a packet with the unit. Check to make sure you have all these parts.

NOTE: Some extra parts are included.

ADDITIONAL PARTS

PART	QUANTITY	
TOP CABINET TEMPLATE	Top Cabinet Template	1
REAR WALL TEMPLATE	Rear Wall Template	1
INSTALLATION INSTRUCTIONS	Installation Instructions	1
	Separately Packed Grease Filter	2

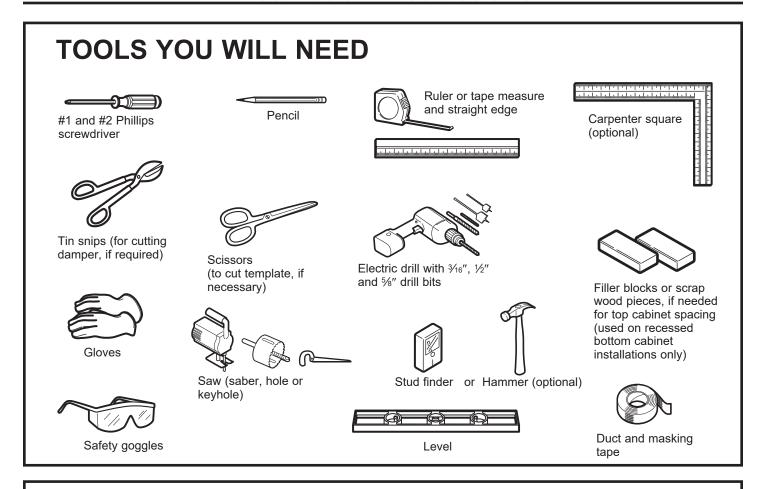

MOUNTING SPACE 13" max.* Bottom Edge of Cabinet Needs to be 30" or More from 161/2" the Cooking 30" 30" Surface min. 2" Backsplash 66" or More from the Floor to the 00 Top of the Microwave Minimum distance from door hinge side to adjacent wall should equal 3/4"

NOTES:


- The space between the cabinets must be 30" wide and free of obstructions.
- If the space between the cabinets is greater than 30", a Filler Panel Kit may be used to fill in the gap between the microwave oven and the cabinets. Your Owner's Manual contains the kit number for your model.
- This microwave oven is for installation over ranges up to 36" wide.
- If you are going to vent your microwave oven to the outside, see Hood Exhaust Section for exhaust duct preparation.
- When installing the microwave oven beneath smooth, flat cabinets, be careful to follow the instructions on the top cabinet template for power cord clearance.
- Models with top venting grilles: Do not allow cabinetry or other objects to block the airflow of the vent.
- * 13" max: for standard installation, 15" cabinet depth requires additional steps using an additional installation kit JX15BUMPWW/BB.

1


PLACEMENT OF THE MOUNTING PLATE

A. REMOVING THE MICROWAVE OVEN FROM THE CARTON/REMOVING THE MOUNTING PLATE


- Remove the installation instructions, filters, glass tray and the small hardware bag. Do not remove the foam protecting the front of the oven.
- Fold back all 4 carton flaps fully against carton sides. Then carefully roll the oven and carton over onto the top side. The oven should be resting in the foam.

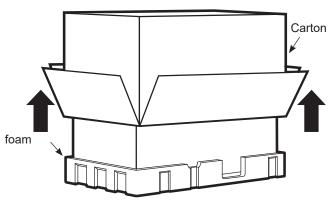

- 3 Pull the carton up and off the oven.
- 4 Remove and properly discard plastic bags.

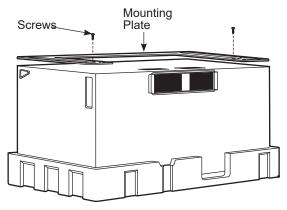

5 Remove the 2 screws from the mounting plate.
This plate will be used as the rear wall template and for mounting. You may discard these screws.

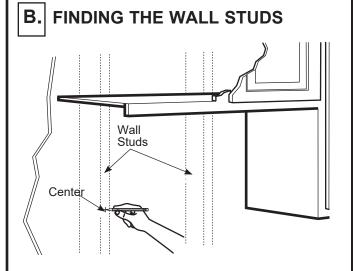

- 1 Find the studs, using one of the following methods:
 - **A.** Stud finder a magnetic device which locates nails.

OR


- **B**. Use a hammer to tap lightly across the mounting surface to find a solid sound. This will indicate a stud location.
- After locating the stud(s), find the center by probing the wall with a small nail to find the edges of the stud. Then place a mark halfway between the edges. The center of any adjacent studs should be 16" or 24" from this mark.
- 3 Draw a line down the center of the studs.

NOTE: THE MICROWAVE MUST BE CONNECTED TO AT LEAST ONE WALL STUD.

C. DETERMINING WALL PLATE LOCATION UNDER YOUR CABINET

At least 30", up to 36"

Plate position – beneath flat bottom cabinet

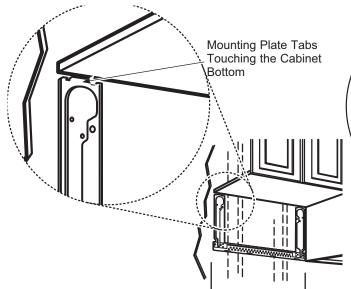




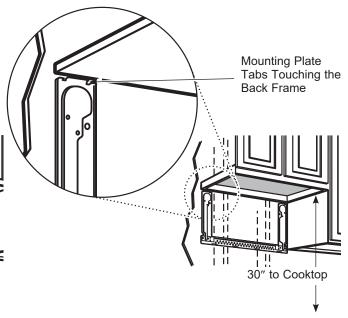


Plate position – beneath recessed bottom cabinet with front overhang

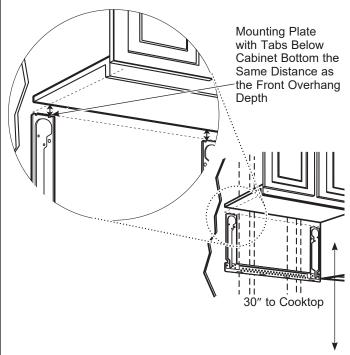


Your cabinets may have decorative trim that interferes with the microwave installation. Remove the decorative trim to install the microwave properly and to make it level.

NOTE: THE MICROWAVE MUST BE LEVEL.

Use a level to make sure the cabinet bottom is level.

If the cabinets have a front overhang only, with no back or side frame, install the mounting plate down the same distance as the front overhang depth. This will keep the microwave level.

- 1 Measure the inside depth of the front overhang.
- 2 Draw a horizontal line on the back wall an equal distance below the cabinet bottom as the inside depth of the front overhang.
- **3** For this type of installation with front overhang only, align the mounting tabs with this horizontal line, not touching the cabinet bottom as described in Step D.

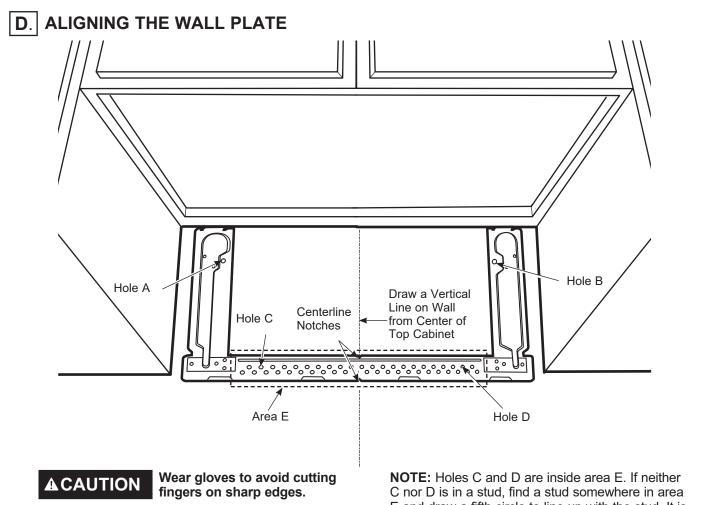

- 1 Draw a vertical line on the wall at the center of the 30" wide space.
- 2 Use the mounting plate as the template for the rear wall. Place the mounting plate on the wall, making sure that the tabs are touching the bottom of the cabinet or the level line drawn in Step C for cabinets with front overhang. Line up the notch and centerline on the bottom of the mounting plate to the centerline on the wall.
- While holding the mounting plate with one hand, draw circles on the wall at holes A, B, C and D (see illustration above/actual plate marked with arrows). Four holes must be used for mounting.

NOTE: Holes C and D are inside area E. If neither C nor D is in a stud, find a stud somewhere in area E and draw a fifth circle to line up with the stud. It is important to use **at least one wood screw** mounted **firmly in a stud** to support the weight of the microwave.

Set the mounting plate aside.

Risk of electric shock. Can cause injury or death. Take care to not drill into electrical wiring inside walls or cabinets.

Drill holes on the circles. If there is a stud, drill a ¾16" hole for wood screws. For holes that don't line up with a stud, drill a ¾" hole for toggle bolts. Drill two ¾" holes for toggle screws.

NOTE: DO NOT MOUNT THE PLATE AT THIS TIME.


2


INSTALLATION TYPES (Choose A, B or C)

This microwave oven is designed for adaptation to the following three types of ventilation:

- A. Outside Top Exhaust (Vertical Duct)
- **B. Outside Back Exhaust (Horizontal Duct)**
- C. Recirculating (Non-Vented Ductless)

NOTE: This microwave is shipped assembled for Outside Top Exhaust (except for non-vented models). Select the type of ventilation required for your installation and proceed to that section.

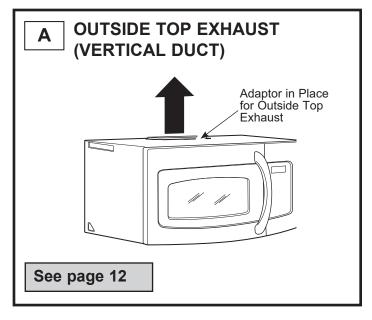


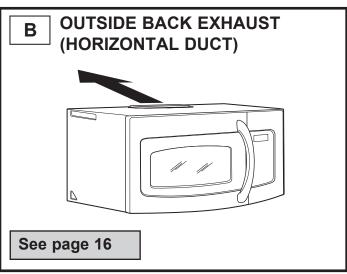






OUTSIDE TOP EXHAUST (Vertical Duct)

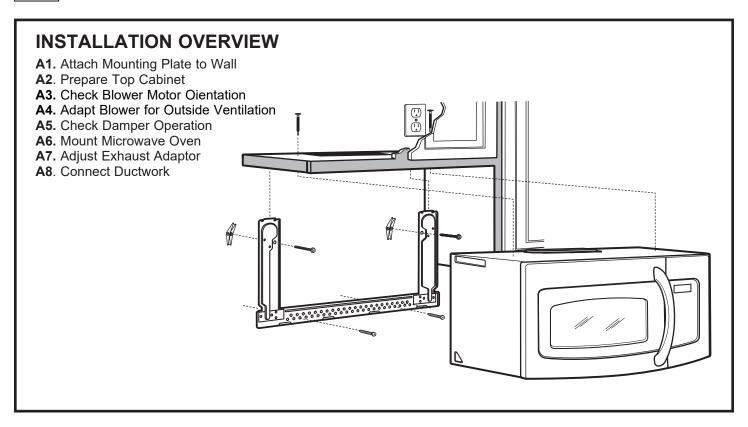

A1 ATTACH THE MOUNTING PLATE TO THE WALL

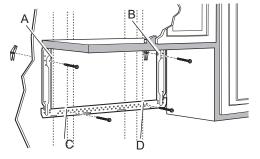


Attach the plate to the wall using toggle bolts. At least one wood screw must be used to attach the plate to

a wall stud. Recommended locations on the mounting plate are indicated by A, B, C and D.

- 1 Remove the toggle wings from the bolts.
- 2 Insert the bolts into the mounting plate through the holes designated to go into drywall and reattach the toggle wings to 3/4" onto each bolt.

To use toggle bolts:

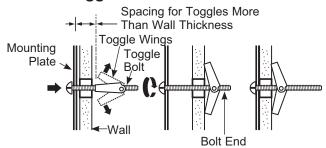

3 Place the mounting plate against the wall and insert the toggle wings into the holes in the wall to mount the plate.

NOTE: Before tightening toggle bolts and wood screw, make sure the tabs on the mounting plate touch the bottom of the cabinet when pushed flush against the wall and that the plate is properly centered under the cabinet.

ACAUTION


mounting plate and the wall.

Be careful to avoid pinching fingers between the back of the

4 Tighten all bolts. Pull the plate away from the wall to help tighten the bolts.

A2. USE TOP CABINET TEMPLATE FOR PREPARATION OF TOP CABINET

You need to drill holes for the top support screws, a hole large enough for the power cord to fit through, and a cutout large enough for the exhaust adaptor.

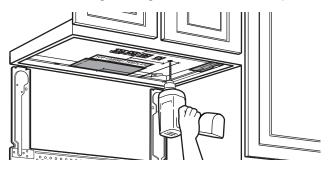

- Read the instructions on the TOP CABINET TEMPLATE.
- · Tape it underneath the top cabinet.
- Drill the holes, following the instructions on the TOP CABINET TEMPLATE.


NOTE: Wear safety goggles when drilling holes in the cabinet bottom.

A3. CHECK BLOWER MOTOR ORIENTATION

The blower fan blade opening should be facing the top of the microwave. If the fan opening is already facing the top of the microwave, skip to Step A5. Otherwise, continue to Step A4 to adjust the motor orientation.


A4. ADAPTING BLOWER FOR OUTSIDE VENTILATION

Remove and save the screws that hold the blower motor to the microwave oven.

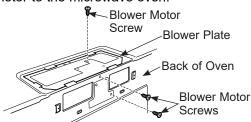


Remove and save the metal blower shield on the top of the microwave by sliding it right.

A4. ADAPTING BLOWER FOR OUTSIDE VENTILATION (Cont.)

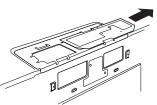


Attached the metal blower shield to the backside of the microwave oven by sliding it down.

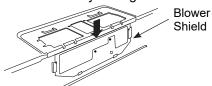


4 Open the blower door by lifting it up at the back of the microwave oven.



5 Carefully pull out the blower unit. The wires will extend far enough to allow you to adjust the blower unit.

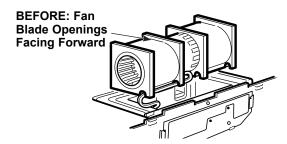

Roll the blower unit 90° so that the fan blade openings are facing the top.

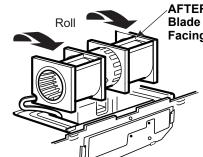

AFTER: Fan Blade Openings Facing Up


> NOTE: Make sure wires remain routed in the grooves of the motor frame.

A4. ADAPTING BLOWER FOR OUTSIDE VENTILATION (Cont.)


7 Place the blower unit back into the opening.

ACAUTION Do not pull or stretch the blower unit wiring. Make


sure the wires are not pinched.

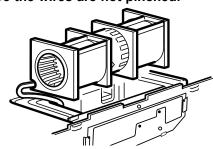

8 Close the blower door. Secure the blower to the microwave using the screws from Step 1.

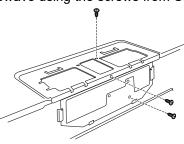

A5. CHECK FOR PROPER DAMPER OPERATION

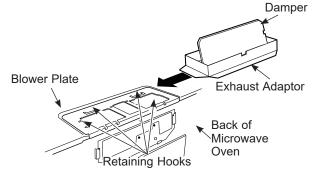

- Place the microwave in its upright position, with the top of the unit facing up.
- Make sure tape securing damper is removed and damper pivots easily before mounting microwave.
- Slide the damper into place. Make sure it catches in the retaining hooks to secure.
- You will need to make adjustments to assure proper alignment with your house exhaust duct after the microwave is installed.

A6. MOUNT THE MICROWAVE OVEN



ACAUTION

FOR EASIER INSTALLATION AND PERSONAL SAFETY,

WE RECOMMEND THAT TWO PEOPLE INSTALL THIS MICROWAVE OVEN.

IMPORTANT: Do not grip or use handle during installation.


NOTE: If your cabinet is metal, use the nylon grommet around the power cord hole to prevent cutting of the cord.

NOTE: We recommend using filler blocks if the cabinet front hangs below the cabinet bottom shelf.

IMPORTANT: If filler blocks are not used, case damage may occur from overtightening screws.


NOTE: When mounting the microwave oven, thread power cord through hole in bottom of top cabinet. Keep it tight throughout Steps 1–3. Do not pinch cord or lift oven by pulling cord.

Lift microwave, tilt it forward, and hook slots at back bottom edge onto four lower tabs of mounting plate.

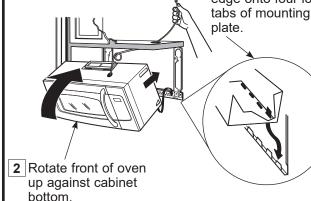


3 Insert a self-aligning screw through top center cabinet hole. Temporarily secure the oven by turning the screw at least **two full turns** after the threads have engaged. (It will be completely tightened later.) Be sure to keep power cord tight. Be careful not to pinch the cord, especially when mounting flush to bottom of cabinet.

A6. MOUNT THE MICROWAVE OVEN (cont.)

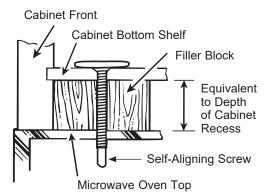

- 4 Attach the microwave oven to the top cabinet.
- 5 Insert 3 self-aligning screws through outer top cabinet holes. Turn two full turns on each screw.

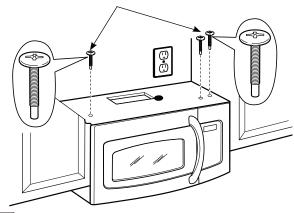


- Tighten the outer three screws to the top of the microwave oven. (While tightening screws, hold the microwave oven in place against the wall and the top cabinet.)
- 7 Install grease filter. See the Owner's Manual on the website (GEAppliances.com).




A7. ADJUST THE EXHAUST ADAPTOR

Open the top cabinet and adjust the exhaust adaptor to connect to the house duct.

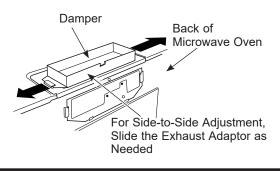


A8. CONNECTING DUCTWORK

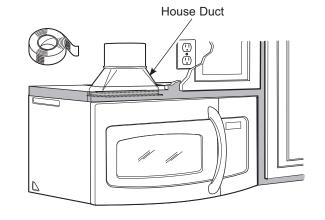

- 1 Extend the house duct down to connect to the exhaust adaptor.
- 2 Seal exhaust duct joints using duct tape.


В

OUTSIDE BACK EXHAUST (Horizontal Duct)

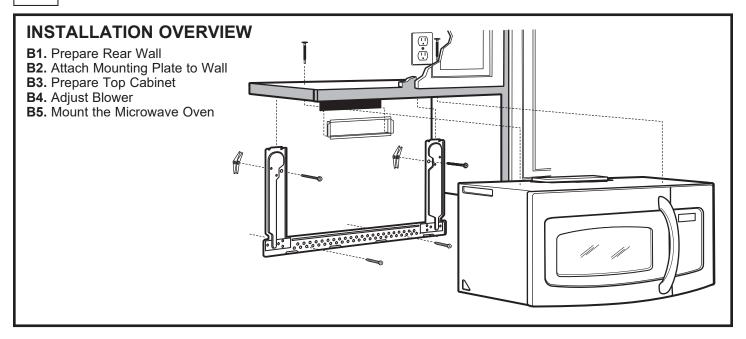


B1. PREPARING THE REAR WALL FOR OUTSIDE BACK EXHAUST

You need to cut an opening in the rear wall for outside exhaust.

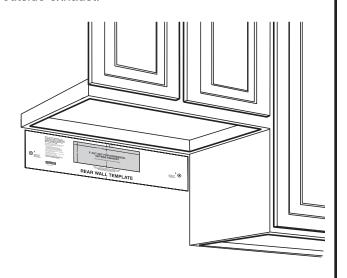

- Read the instructions on the REAR WALL TEMPLATE.
- Tape it to the rear wall, lining up with the holes previously drilled for holes A and B in the wall plate.
- Cut the opening, following the instructions of the REAR WALL TEMPLATE.


B2. ATTACH THE MOUNTING PLATE TO THE WALL

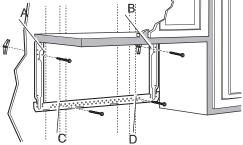

Attach the plate to the wall using toggle bolts. At least one wood screw must be used to attach the plate to a wall stud. Recommended locations on the mounting plate are indicated by A, B, C and D.

- 1 Remove the toggle wings from the bolts.
- 2 Insert the bolts into the mounting plate through the holes designated to go into drywall and reattach the toggle wings to 3/4" onto each bolt.

To use toggle bolts:

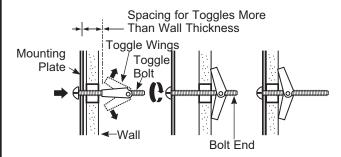

Place the mounting plate against the wall and insert the toggle wings into the holes in the wall to mount the plate.

NOTE: Before tightening toggle bolts and wood screw, make sure the tabs on the mounting plate touch the bottom of the cabinet when pushed flush against the wall and that the plate is properly centered under the cabinet.

ACAUTION

Be careful to avoid pinching fingers between the back of the mounting plate and the wall.

Tighten all bolts. Pull the plate away from the wall to help tighten the bolts.

B3. USE TOP CABINET TEMPLATE FOR PREPARATION OF TOP CABINET

You need to drill holes for the top support screws and a hole large enough for the power cord to fit through.




- Read the instructions on the TOP CABINET TEMPLATE.
- Tape it underneath the top cabinet.
- Drill the holes, following the instructions on the TOP CABINET TEMPLATE.

ACAUTION

Wear safety goggles when drilling holes in the cabinet bottom.


B4. ADAPTING MICROWAVE BLOWER FOR OUTSIDE BACK EXHAUST

1 Remove and save screws that holds blower motor to microwave oven.

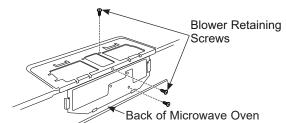


Open the blower door by lifting it up at the back of the microwave. Remove and save the blower shield on the back of the microwave by sliding it up.


Remove and save the metal vent fan cover on the back of the microwave by sliding it up.

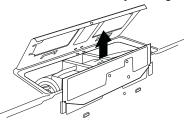

3 Carefully pull out the blower unit. The wires will extend far enough to allow you to adjust the blower unit.

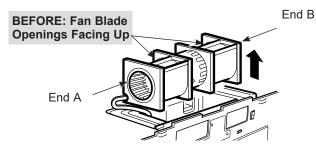

4 Rotate blower unit counterclockwise 180°.

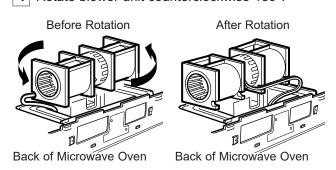



B4. ADAPTING MICROWAVE **BLOWER FOR OUTSIDE BACK EXHAUST** (cont.)

5 Gently remove the wires from the grooves. Reroute the wires through grooves on other side of the blower unit.

Before Rerouting

After Rerouting

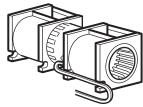


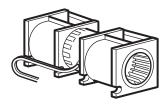

Wires Routed Through Right Side

Wires Routed Through Left

6 Roll the blower unit 90° so that fan blade openings are facing out the back of the microwave.

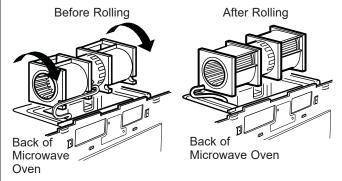

Locate the two "knockout" plates, on the rear oven panel, near the top of the oven. Using tin snips, carefully cut the web area from the two holes side-by-side (that secure the knockouts to the oven). Cut all four webs on both rear knockouts; this will allow the ventilation fan airflow to exhaust out the rear of the oven.


Be sure to trim the sharp **ACAUTION** edges from the openings after removing the knockout plates.

8 Place the blower unit back into the opening. The blower unit exhaust openings should match exhaust openings on rear of microwave.


▲ CAUTION

are not pinched.


Do not pull or stretch the blower unit wiring. Make sure the wires

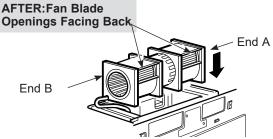

Close the blower door. Slide blower shield onto the top of the blower door opening. Secure the blower to the microwave oven using the blower retaining screws from Step 1 except the upper blower motor retaining screw

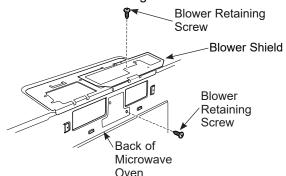

10 Slide the exhaust adaptor onto the back of the microwave oven, securing it into the lower locking tabs. Take care to ensure that the damper hinge is installed so that it is at the top and that the damper swings freely. Reinstall the upper blower motor screw through the adaptor and the blower door and into the back of the microwave oven.

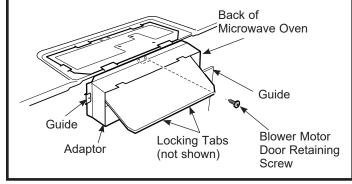

B5. MOUNT THE MICROWAVE OVEN



ACAUTION

FOR EASIER INSTALLATION AND PERSONAL SAFETY.

WE RECOMMEND THAT TWO PEOPLE INSTALL THIS MICROWAVE OVEN.

IMPORTANT: Do not grip or use handle during installation.


NOTE: If your cabinet is metal, use the nylon grommet around the power cord hole to prevent cutting of the cord.

NOTE: We recommend using filler blocks if the cabinet front hangs below the cabinet bottom shelf.


IMPORTANT: If filler blocks are not used, case damage may occur from overtightening screws.

Lift microwave, tilt it forward, and hook slots at back bottom edge onto four lower tabs of mounting plate.

NOTE: When mounting the microwave oven, thread power cord through hole in bottom of top cabinet. Keep it tight throughout Steps 1–3. Do not pinch cord or lift oven by pulling cord.

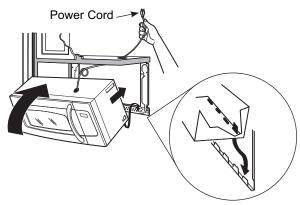


- 2 Rotate front of oven up against cabinet bottom.
- Insert a self-aligning screw through top center cabinet hole. Temporarily secure the oven by turning the screw at least two full turns after the threads have engaged. (It will be completely tightened later.) Be sure to keep power cord tight. Be careful not to pinch the cord, especially when mounting flush to bottom of cabinet.

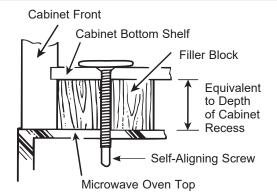


- **4** Attach the microwave oven to the top cabinet.
- Insert 3 self-aligning screws through outer top cabinet holes. Turn two full turns on each screw.

Self-Aligning Screws

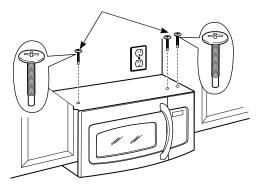

- G Tighten the outer three screws to the top of the microwave oven. (While tightening screws, hold the microwave oven in place against the wall and the top cabinet.)
- 7 Install grease filter. See the Owner's Manual packed with the microwave.

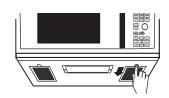


C


RECIRCULATING (Non-Vented Ductless)

INSTALLATION OVERVIEW

- C1. Attach Mounting Plate to Wall
- C2. Prepare Top Cabinet
- C3. Check Blower Motor Orientation
- C4. Adapt Blower for Recirculation
- C5. Mount the Microwave Oven
- C6. Install Charcoal Filter

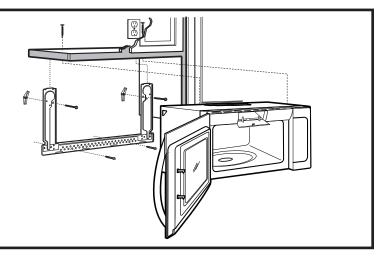


C1 ATTACH THE MOUNTING PLATE TO THE WALL

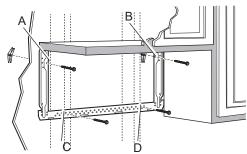

Attach the plate to the wall using toggle bolts. At least one wood screw must be used to attach the plate to

- a wall stud. Recommended locations on the mounting plate are indicated by A, B, C and D.
- 1 Remove the toggle wings from the bolts.
- 2 Insert the bolts into the mounting plate through the holes designated to go into drywall and reattach the toggle wings to 3/4" onto each bolt.

To use toggle bolts:

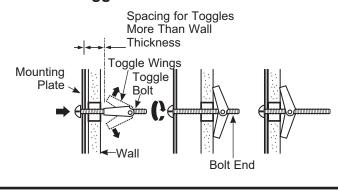

Place the mounting plate against the wall and insert the toggle wings into the holes in the wall to mount the plate.

NOTE: Before tightening toggle bolts and wood screw, make sure the tabs on the mounting plate touch the bottom of the cabinet when pushed flush against the wall and that the plate is properly centered under the cabinet.

ACAUTION

Be careful to avoid pinching

fingers between the back of the mounting plate and the wall.

Tighten all bolts. Pull the plate away from the wall to help tighten the bolts.

C2. USE TOP CABINET TEMPLATE FOR PREPARATION OF TOP CABINET

You need to drill holes for top support screws and a hole large enough for the power cord to fit through.



- Read the instructions on the TOP CABINET TEMPLATE.
- Tape it underneath the top cabinet.
- Drill the holes, following the instructions on the TOP CABINET TEMPLATE.

ACAUTION

Wear safety goggles when


drilling holes in the cabinet bottom.

C3. CHECK BLOWER MOTOR ORIENTATION


The blower fan blade opening should be facing the front of the microwave. If the fan opening is already facing the front of the microwave, skip to Step C5. Otherwise, continue to Step C4 to adjust the blower orientation.

C4. ADAPTING MICROWAVE BLOWER FOR RECIRCULATION


Remove and save screws that holds blower motor to microwave oven.

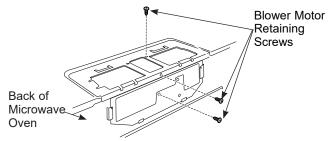


2 Open the blower door by lifting it up at the back of the microwave oven.

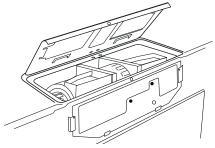

3 Carefully pull out the blower unit. The wires will extend far enough to allow you to adjust the blower unit.

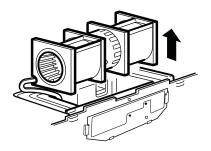

4 Roll the blower unit 90° so that fan blade openings are facing toward the front of the microwave. **BEFORE: Fan Blade Openings Facing Up AFTER: Fan Blade Openings Facing** Forward NOTE: Make sure wires remain routed in the grooves of the motor frame. 5 Place the blower unit back into the opening. **ACAUTION** Do not pull or stretch the blower unit wiring. Make sure the wires are not pinched.

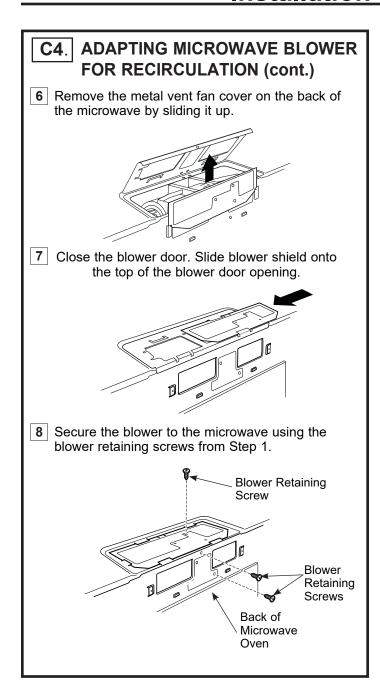





C5. MOUNT THE MICROWAVE OVEN (cont.)

all Insert a self-aligning screw through top center cabinet hole. Temporarily secure the oven by turning the screw at least **two full turns** after the threads have engaged. (It will be completely tightened later.) Be sure to keep power cord tight. Be careful not to pinch the cord, especially when mounting flush to bottom of cabinet.

Cabinet Front

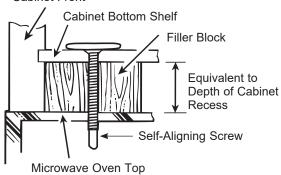

- 4 Attach the microwave oven to the top cabinet.
- **5** Insert 3 self-aligning screws through outer top cabinet holes. Turn two full turns on each screw.

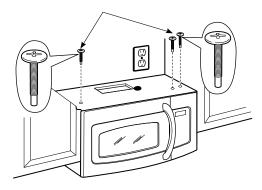


- **6** Tighten the outer three screws to the top of the microwave oven. (While tightening screws, hold the microwave oven in place against the wall and the top cabinet.)
- 7 Install grease filter. See the Owner's Manual packed with the microwave.




C6. CHARCOAL FILTER

A charcoal filter is installed in all units. Follow the steps below to check the filter.

- 1 Open the filter door by pushing down 2 buttons on the top of the microwave just above the filter door.
- Push the filter at the bottom until it comes free of the locking tabs. Slide the filter down and out.

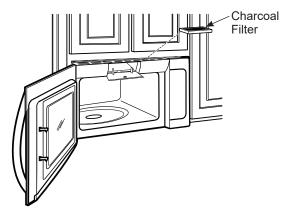


Install the charcoal filter. When properly installed, the wire mesh of the filter should be visible from the front.

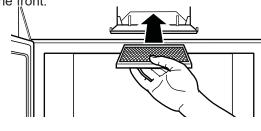


Insert mesh-side up

4 Close the door.

BEFORE YOU USE YOUR MICROWAVE

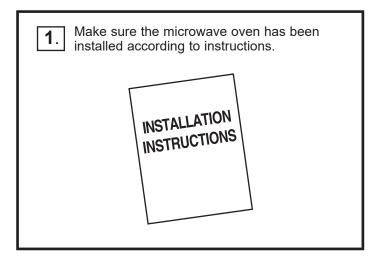

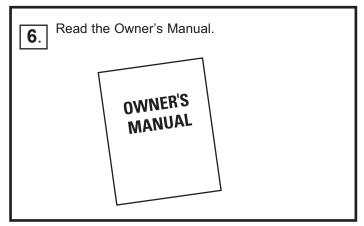

- **2.** Remove all packing material from the microwave oven.
- **3.** Install turntable and ring in cavity.

