



## Installation Instructions

### Epicure® Wall Mount Range Hood with Remote Blower

For use with models:

EHR30, EHR36, EHR42, EHR48, EHR54

**APPROVED FOR USE WITH ALL DACOR® RANGES AND COOKTOPS.**

**TESTED IN ACCORDANCE WITH THE LATEST EDITION OF ANSI/UL 507  
STANDARD FOR ELECTRIC FANS AND CAN/CSA-C22.2 NO. 113 STANDARD  
FOR FANS AND VENTILATORS.**

# Table of Contents

<b>Important Safety Instructions</b> .....	<b>1</b>	<b>Preparing for Installation</b> .....	<b>8</b>
Important Information About Safety Instructions .....	1	Verify the Package Contents.....	8
General Safety Precautions .....	2	Mounting Location Preparation .....	8
<b>Product Specifications</b> .....	<b>3</b>	Electrical Service Installation .....	9
General Specifications .....	3	Duct Cutout .....	9
Dimensions .....	4	<b>Installation Instructions</b> .....	<b>10</b>
<b>Product Specifications</b> .....	<b>5</b>	AHT10 Transition Kit Installation .....	10
Parts List .....	5	Mounting Bracket Installation.....	11
<b>Planning the Installation</b> .....	<b>6</b>	Hanging the Range Hood .....	12
Cabinet Layout .....	6	Duct Work Installation .....	12
Power Supply .....	6	Final Electrical Installation .....	12
		Verifying Proper Operation.....	15
		Installation Checklist .....	15
		<b>Wiring Diagrams</b> .....	<b>16</b>

## Before You Begin...

### Important:

- **Installer:** In the interest of safety and to minimize problems, read these installation instructions completely and carefully before you begin the installation process. Leave these installation instructions with the customer.
- **Customer:** Keep these installation instructions for future reference and the local electrical inspector's use.

### If You Need Help...

If you have questions or problems with installation, contact your Dacor dealer or the Dacor Customer Service Team. For repairs to Dacor appliances under warranty call the Dacor Distinctive Service line. Whenever you call, have the model and serial number of the appliance ready. The model and serial number are printed on the appliance data plate.

#### Dacor Customer Service Team

Phone: (800) 793-0093 (U.S.A. and Canada)  
Monday — Friday 6:00 A.M. to 5:00 P.M. Pacific Time  
Web site: [www.Dacor.com](http://www.Dacor.com)

#### Dacor Distinctive Service (for repairs under warranty only)

Phone: (877) 337-3226  
Monday — Friday 6:00 a.m. to 4:00 p.m. Pacific Time

### Appliance Data Plate

- The appliance data plate contains the model and serial number information and the electrical requirements.
- It is located inside the hood behind the filters on the back side of the chassis. Remove the filters to view it.

All specifications subject to change without notice. Dacor assumes no liability for changes to specifications.

# Important Safety Instructions

## Important Information About Safety Instructions

- The **Important Safety Instructions** and warnings in these instructions are not meant to cover all possible problems and conditions that can occur. Use common sense and caution when installing, maintaining or operating this or any other appliance.
- Always contact the Dacor Customer Service Team about problems and conditions that you don't understand.

## Safety Symbols and Labels

### **DANGER**

Immediate hazards that **WILL** result in severe personal injury or death.

### **WARNING**

Hazards or unsafe practices that **COULD** result in severe personal injury or death.

### **CAUTION**

Hazards or unsafe practices that **COULD** result in minor personal injury or property damage.

### **DANGER**

To avoid the possibility of explosion or fire, do not store or use combustible, flammable or explosive vapors and liquids (such as gasoline) inside or in the vicinity of this or any other appliance. Also keep items that could explode, such as aerosol cans away from cooktop burners, ovens and range hoods. Do not store flammable or explosive materials in adjacent cabinets or areas.

### **WARNING**

If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or death.

### **WARNING**

**WARNING - TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:**

- a) Use this unit only in the manner intended by the manufacturer. If you have questions, contact the manufacturer.
- b) Before servicing or cleaning unit, switch power off at service panel and lock the service disconnecting means to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel.

### **WARNING**

**WARNING – TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:**

- a) Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
- b) Sufficient air is needed for proper combustion and exhausting of gases through the flue(chimney) of fuel burning equipment to prevent back drafting. Follow the heating equipment manufacturer's guideline and safety standards such as those published by the National Fire Protection Association (NFPA), and the American Society for Heating, Refrigeration and Air Conditioning Engineers (ASHRAE), and the local code authorities.
- c) When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.
- d) Ducted fans must always be vented to the outdoors.

**READ AND SAVE THESE INSTRUCTIONS**

# Important Safety Instructions

## CAUTION

For general ventilating use only. Do not use to exhaust hazardous or explosive materials and vapors.

## General Safety Precautions

To reduce the risk of fire, electric shock, serious injury or death when using your appliance, follow basic safety precautions, including the following:

## WARNING

- Do not install or operate this hood if it has been damaged, dropped, has damaged electrical wires or is not working properly. If the product is damaged when received, immediately contact the dealer or builder.
- This range hood must be installed and grounded by a qualified installer according to these installation instructions.
- Install or locate this appliance only in accordance with these installation instructions and the requirements specified by the manufacturer of the cooktop or range. Improper installation, adjustment, alteration, service or maintenance can cause serious personal injury or property damage.
- **TO REDUCE THE RISK OF FIRE, USE ONLY METAL DUCTWORK.**
- The customer should not install, repair or replace any part of the range hood unless specifically recommended in the literature accompanying it. A qualified service technician should perform all other service. Contact the nearest Dacor authorized service representative at (800) 793-0093, or at [www.Dacor.com](http://www.Dacor.com) for examination, repair or adjustment.
- Keep all packaging materials away from children. Plastic bags can cause suffocation.
- Do not use an extension cord or adapter plug with this appliance.
- The installer must show the customer the location of the fuse box or circuit breaker panel box so that the customer knows where and how to turn the power off.
- Before installing or servicing the range hood, switch power off at the fuse box circuit breaker and lock the electrical panel door to prevent power from being switched on accidentally. When the electrical panel cannot be locked, securely fasten a prominent warning device, such as a tag, to the electrical panel.
- Read the use and care manual completely before using the appliance. Clean the appliance only as instructed in the use and care manual. Use only the cleaners specified.
- Do not tamper with the controls.
- Never allow the filter(s) to become blocked or clogged. Do not allow foreign objects, such as cigarettes or napkins, to be sucked into the hood.
- Clean the filter(s) and all grease-laden surfaces often to prevent grease fires and maintain performance.
- If the cooktop and range hood are near a window, use an appropriate window treatment. Avoid long drapes or other window coverings that could blow over the cooktop and hood, resulting in a fire hazard.
- Always run the fan(s) whenever the cooktop is operating.
- Never leave the range or cooktop unattended when a burner (or element) is in use. Boil-overs and greasy spills may smoke and/or ignite.
- Do not leave children alone or unattended in the area where the cooktop and range hood are in use. Never allow children to sit or stand on an appliance. Do not let children play with a range, cooktop or range hood. Do not store items of interest to children above or around the cooktop, range or range hood.
- The minimum vertical distance between the cooktop surface and the exterior part of the hood must be no less than 30" (76.2 cm). The vertical distance may be longer for the range or cooktop being used. Consult the range or cooktop installation instructions for the minimum and maximum vertical distance from the appliance being used.

# Product Specifications

## General Specifications

### All Models

Fan Speeds	4
Filters	Mesh type, dishwasher safe
Exhaust(s)	8-inch
Total Connect Load	120 Vac, 60 Hz, 6.5 Amp. Max.
Lights	120 Vac, 75 W halogen

### Model Specific

Model Number			
	EHR48 EHR54	EHR42	EHR30 EHR36
Lights	3	2	2
Filters	4	3	2
Exhaust Outputs	2	1	1

### Weight Specifications


Model	Weight
EHR3012	39 lbs. (18 kg)
EHR3018, EHR3612	44 lbs. (20 kg)
EHR3618	48 lbs. (22 kg)
EHR4212	46 lbs. (21 kg)
EHR4218	51 lbs. (23 kg)
EHR4812	52 lbs. (24 kg)
EHR4818	59 lbs. (27 kg)
EHR5418	66 lbs. (30 kg)

# Product Specifications


## Dimensions

Tolerances: +1/16", -0 (1.6 mm, -0), unless otherwise stated.

**NOTE:** The exhaust duct(s) and electrical wiring can be connected from either the top or the back of the hood.

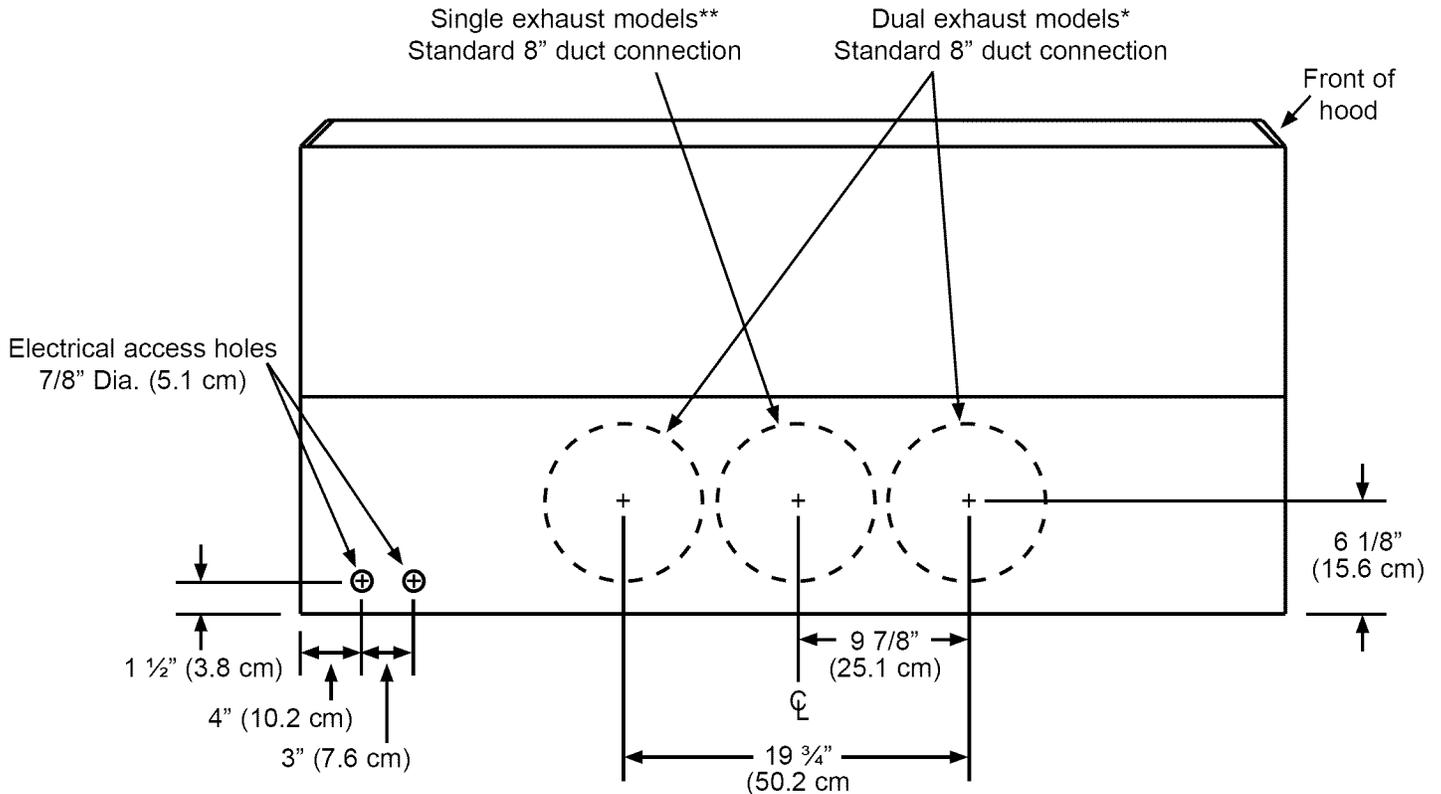

**Top Dimensions**

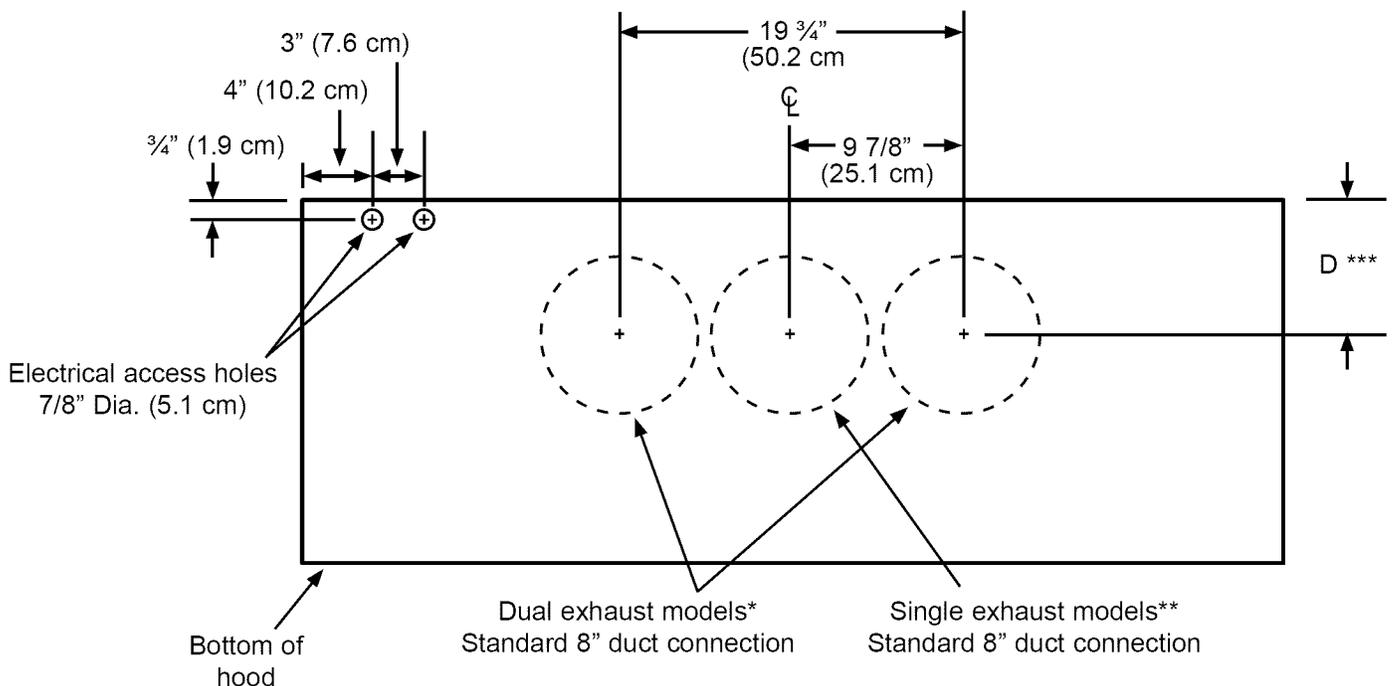


**Back Dimensions**

\* Models EHR48, EHR54

\*\* All other models

\*\*\* See facing page


# Product Specifications

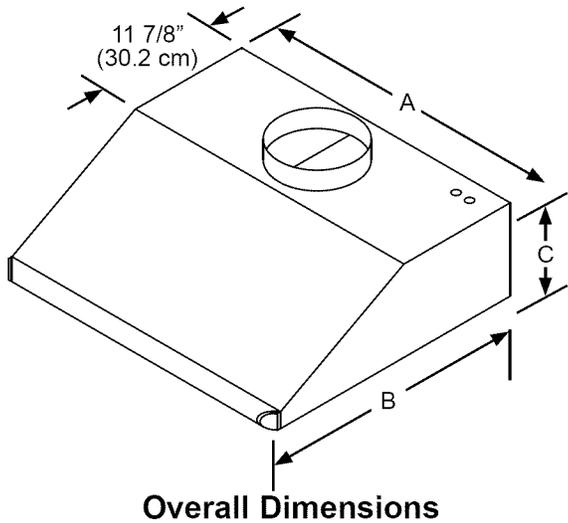

OVERALL DIMENSIONS				
Model	A	B	C	D***
EHR3012	29 7/8" (75.9 cm)	26 7/8" (68.3 cm)	12 3/8" (31.4 cm)	4 1/2" (11.4 cm)
EHR3612	35 7/8" (91.1 cm)			
EHR4212	41 7/8" (106.4 cm)			
EHR4812	47 7/8" (121.6 cm)			
EHR4218	41 7/8" (106.4 cm)	26 7/8" (68.3 cm)	18" (45.7 cm)	6 1/8" (15.6 cm)
EHR3018	29 7/8" (75.9 cm)			
EHR3618	35 7/8" (91.1 cm)			
EHR4818	47 7/8" (121.6 cm)			
EHR5418	53 7/8" (136.8 cm)			

\*\*\* See diagram on facing page.


Overall Dimensions

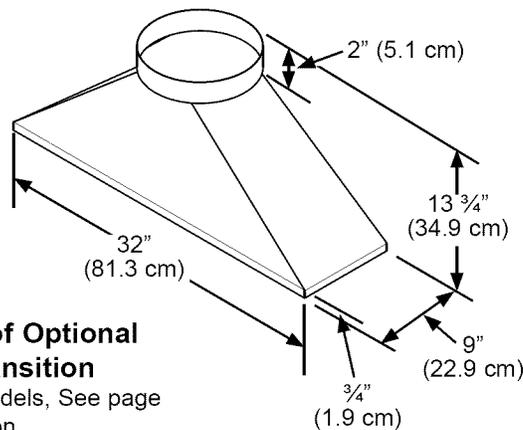

**Dimensions of Optional AHT10 Transition**  
For dual exhaust models, See page 7 for more information

## Parts List

- A** Hood assembly with filters (size and style varies with model)
- B** 2 temporary mounting brackets
- C** Temporary mounting hardware
- D** Light replacement tool
- E** Literature
- F** Light bulbs (quantity varies with model)
- G** Dacor Stainless Steel Cleaner

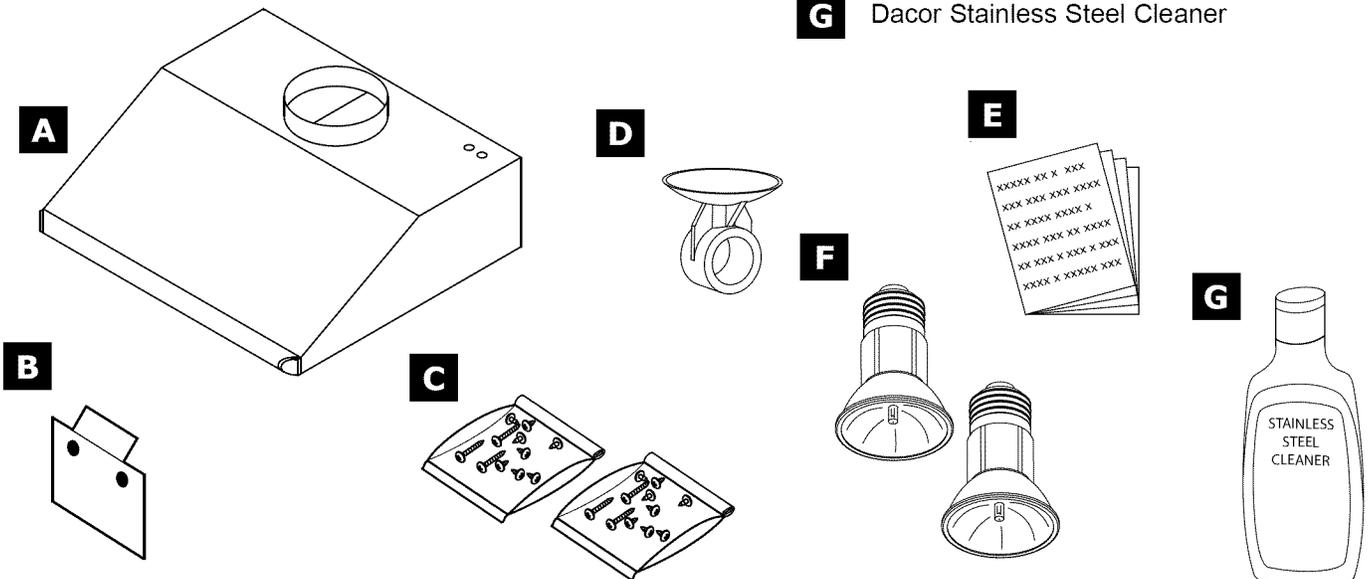

# Planning the Installation


## WARNING

Observe all governing codes and ordinances during planning and installation. Contact your local building department for further information.

## Cabinet Layout

### WARNING

To reduce the risk of personal injury caused by reaching over a hot appliance, cabinet storage space located directly above the range should be avoided.

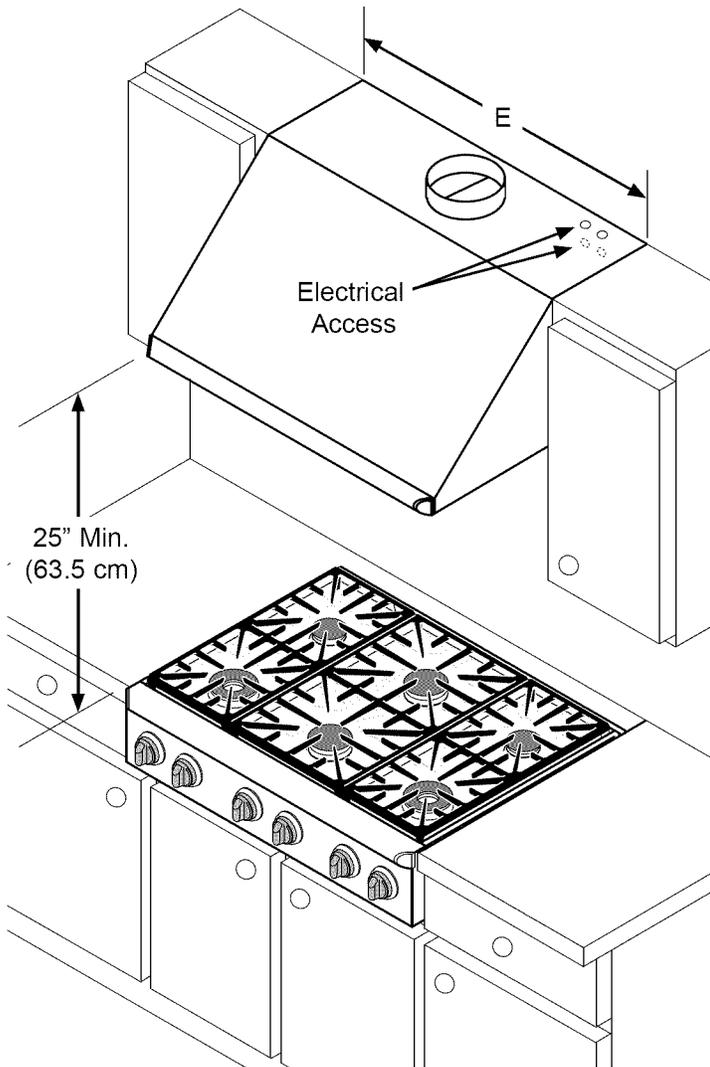

### IMPORTANT

See the diagram for minimum installed distance from the hood to the cooktop surface. The minimum specified distance may be higher for the particular range or cooktop in use. Check the manufacturers specifications for the cooktop or range.

- Carefully check the location where the hood is to be installed. The hood should be placed for convenient access. Make certain that electric power can be provided in the selected location. The hood must be centered horizontally over the cooktop/range.
- The hood model selected must be as wide as the cooktop surface or wider.
- Plan the installation so that all minimum dimensions are met or exceeded. Dimensions shown provide minimum clearances, unless otherwise noted.
- All contact surfaces between the hood and any cabinets or walls must be solid and at right angles.
- Install the range hood and cooking appliance(s) so that they can be removed if service is required.

## Power Supply

### WARNING

The electric service to the range hood should be installed only by a licensed electrician.

It is the owner's responsibility to ensure that the electrical connection of this appliance is performed by a qualified electrician. The electrical installation, including minimum supply wire size and grounding, must be in accordance with the National Electric code ANSI/NFPA\* (or latest revision) and local codes and ordinances.

\*A copy of this standard may be obtained from:

National Fire Protection Association  
1 Batterymarch Park  
Quincy, Massachusetts 02269-9101

- The ground terminal on the hood must be connected to a grounded, metallic, permanent wiring system or grounding conductor installed by a licensed electrician.
- Do not ground the appliance or appliance wiring to a gas pipeline or to the neutral (white) power supply wire.
- Do not install a fuse in the neutral or ground circuit.
- Connect the hood directly to an electrical junction box. Hard-wire the hood according to local code directly to a dedicated three wire grounded, single phase circuit rated at 120 Vac 60 Hz, 15 Amp.

### MINIMUM CABINET WIDTH

Models	E
EHR3012, EHR3018	30" (76.2 cm)
EHR3612, EHR3618	36" (91.5 cm)
EHR4212, EHR4218	42" (106.7 cm)
EHR4812, EHR4818	48" (121.9 cm)
EHR5418	54" (137.2 cm)

All tolerances: +1/16", -0, unless otherwise stated

# Planning the Installation

## WARNING

- To prevent combustion by-products, smoke or odors from entering the home and to improve efficiency, tape all duct joints securely.
- Use only duct work deemed acceptable by state, municipal and local codes.
- Range hoods may interrupt the proper flow of smoke and combustion gases from furnaces, gas water heaters and fireplaces. To avoid drawing lethal gases into the home, follow the manufacturer's recommendation for these devices and consult NFPA and ASHRAE recommendations.
- Failure to install a remote blower or proper duct work may result in a back draft and/or the insufficient venting of smoke and fumes.
- DO NOT** install more than one in-line or external blower to increase the length of the duct run. Even small differences between blower air flow rates can greatly reduce the air draw by the hood.

## CAUTION

To reduce the risk of fire and to properly exhaust air, be sure to duct air outside the house or building. Do not vent exhaust air into spaces within walls or ceilings or into attics, crawl spaces or garages.

- The ventilation system consists of hood and a single remote or single in-line blower.
- A Dacor remote or in-line blower must be installed for the hood to operate properly. Only one blower shall be installed.
- The EHR series hoods cannot be installed with any other blower type than the models indicated below. For directions on installing the blower, see the REMP3/16, ILHSF8/10 installation instructions.


### APPROVED DACOR BLOWERS FOR USE WITH EHR SERIES HOODS

Model	REMP3* (remote) 600 CFM	ILHSF8* (in-line) 600 CFM	REMP16* (remote) 1000 CFM	ILHSF10* (in-line) 1200 CFM
EHR30/36/42	X	X	X	X
EHR48/54			X	X

\* At 0 inches static pressure

- Wire the remote blower to turn on. The vent is turned on by running a piece of conduit parallel to the duct work and connecting it to the hood on one end and the remote blower on the other. There are 7/8" access holes in the top and back of the hood for connecting the conduit.

- The customer must supply conduit with minimum current carrying capacity of 8 Amps to supply power to the remote blower from the hood.
- All duct work materials (including screws and duct tape) must be purchased separately by the customer.
- The hood exhaust connects to an 8-inch round duct. You can increase the duct size over the duct run if desired. To prevent a back draft, never decrease the duct size over the run. If existing duct work is smaller than 8 inches in diameter, remove it and replace it with 8-inch duct work.
- Do not rely on tape alone to seal duct joints. Fasten all connections with sheet metal screws and tape all joints with certified silver tape or duct tape. Use sheet metal screws as require to support the duct weight.
- To prevent back-drafts, a damper at the duct outlet may also be required.
- Make sure duct work does not interfere with floor joists or wall studs.
- On dual exhaust models, the two 8" exhausts may be merged into one 10" duct using Dacor transition kit AHT10. See page 10 for details.
- When planning new duct work, always look for the shortest, most direct route to the outside. The duct collar can be moved to accommodate venting (and wiring) through the top **A** or the back **B**.

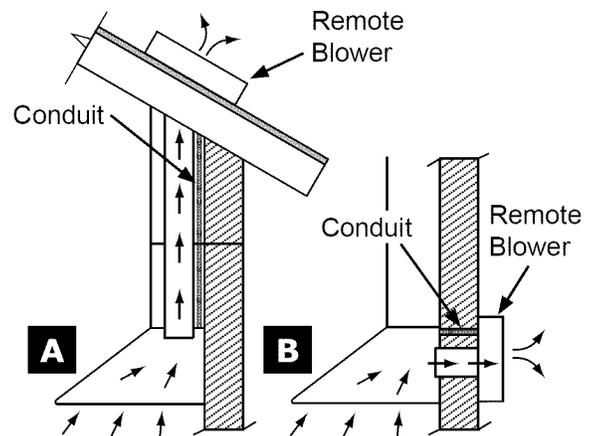

## Calculating the Maximum Duct Run Length

The maximum straight duct length for the hood is determined by the type of duct used. See the chart below.

DUCT SIZE	MAXIMUM DUCT RUN
8" round	60 feet
10" round	50 feet

For each elbow and transition added to the duct work, a certain number of feet must be subtracted from the maximum duct run to compensate for wind resistance. To determine the length the duct work cannot exceed, subtract all of the equivalent lengths of the elbows and transitions listed below from the maximum duct run above. Continued...

# Planning the Installation

## Duct Work Equivalent Lengths

EQUIVALENT LENGTHS			
Piece	Subtract	Piece	Subtract
8" 90° elbow	7 feet	10" 90° elbow	5 feet
8" 45° elbow	3 feet	10" 45° elbow	2 feet
3¼" X 10" to round 90° transition	25 feet	3¼" X 10" to 8"/10" round transition	4 feet
Roof cap	*	Wall cap with damper	*

\* The equivalent lengths of roof and wall caps vary with model and configuration. For equivalent length, contact the manufacturer or a qualified HVAC specialist.

## Duct Work Design Tips

- Wherever possible, reduce the number of transitions and turns to as few sharp angles as possible. Two staggered 45° angles are better than one 90°.

- Keep turns as far away from the hood exhaust as possible, and as much space between bends as possible.
- For best performance, use round duct instead of rectangular, especially when elbows are required.
- If multiple elbows are used, try to keep a minimum of 24" straight duct between them.
- Avoid "S" or "back to back" use of adjacent elbows.
- In regions where the weather gets extremely cold, use thermal breaks, such as a short section of non-metallic duct, to avoid indoor heat loss. Locate the break as close as possible to the outside pass through point.
- Do not use flexible metal duct.
- Do not use duct work that is smaller in cross-sectional area than the recommended types above.

# Preparing for Installation

## Verify the Package Contents

Unpack the parts box and verify that all parts have been included according to the parts list on page 5. If any item is missing or damaged, please contact the dealer immediately. Do not install a damaged or incomplete appliance.



Make sure you have everything necessary for proper installation before proceeding.

## Mounting Location Preparation

### WARNING

- The electrical service to the range hood should be installed only by a licensed electrician.
- Observe all governing codes and ordinances during site preparation and installation. Contact your local building department for further information.
- Failure to properly anchor the hood to the wall may result in personal injury due to the unit falling off the wall.
- To avoid an electric shock hazard and property damage, locate electric wires and water pipes and avoid drilling or cutting in the vicinity.
- Use the temporary mounting brackets only to hold the hood in place until permanent anchoring is installed.

- Temporary mounting brackets, and the screws and anchors to hold them in place during installation are provided with the hood. Two anchors and screws are used per bracket.
- Determine the number, size and type of anchors required to attach the hood permanently to the wall and/or the cabinets based on the type of installation and the weight chart on page 3.
- Make sure the mounting surface is properly reinforced to handle the full weight of the hood. If mounting the unit to a drywall or plastered surface, install a reinforced mounting block between the studs behind all hood mounting locations. You may attach screws directly to the studs and cabinets if they line up with the mounting holes in the back and top of the hood. If mounting the hood to brick or masonry, select anchors capable of holding the full weight of the hood.

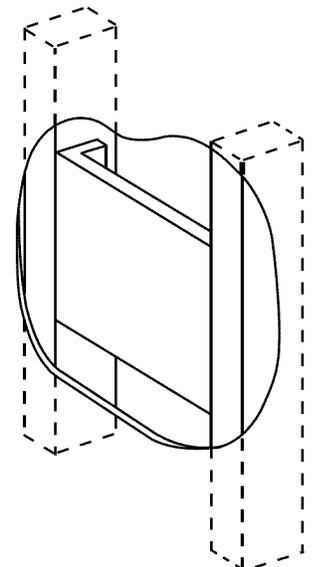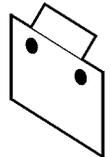

# Preparing for Installation



## Electrical Service Installation

### **WARNING**

The electric service to the range hood should be installed only by a licensed electrician.


Install a junction box in the vicinity of the hood electrical access holes according to local codes. Install it either behind or above the hood. The diagram below shows suggested locations.

Drill 7/8" holes in the wall or cabinet as necessary to allow the wiring to pass through into the hood. See page 4 for hole locations.

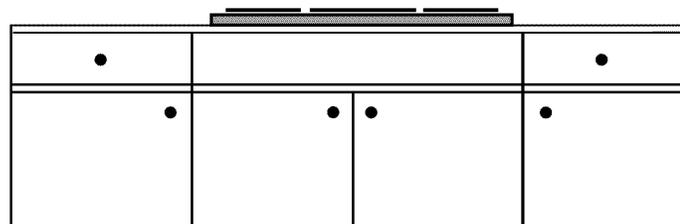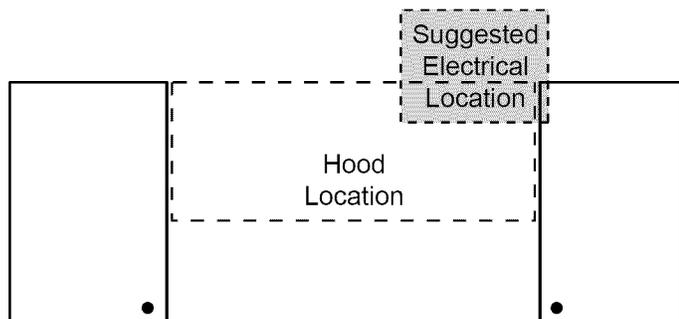


## Duct Cutout

1. Using a pencil, draw the vertical center line for the range hood on the wall. Extend the line down 10" (25.4 cm) from where the top of the hood will be located. The center line for the hood is usually halfway between the cabinets at the installation location or the same as the center line of the cooktop or range. The line will be used to line up the mounting brackets during installation.
2. Locate the center lines for the duct cutout(s) according to the dimensions on page 4. For installations venting through the top of the hood, use the top dimensions to locate the center lines on the ceiling or cabinet bottom. For installations venting through the back of the hood, use the back dimensions to locate the center lines on the back wall. See the diagrams on the right.
3. Cut a hole for the duct to pass through 11" (28 cm) in diameter. Center it on the center lines. Dual exhaust models require two (2) holes.

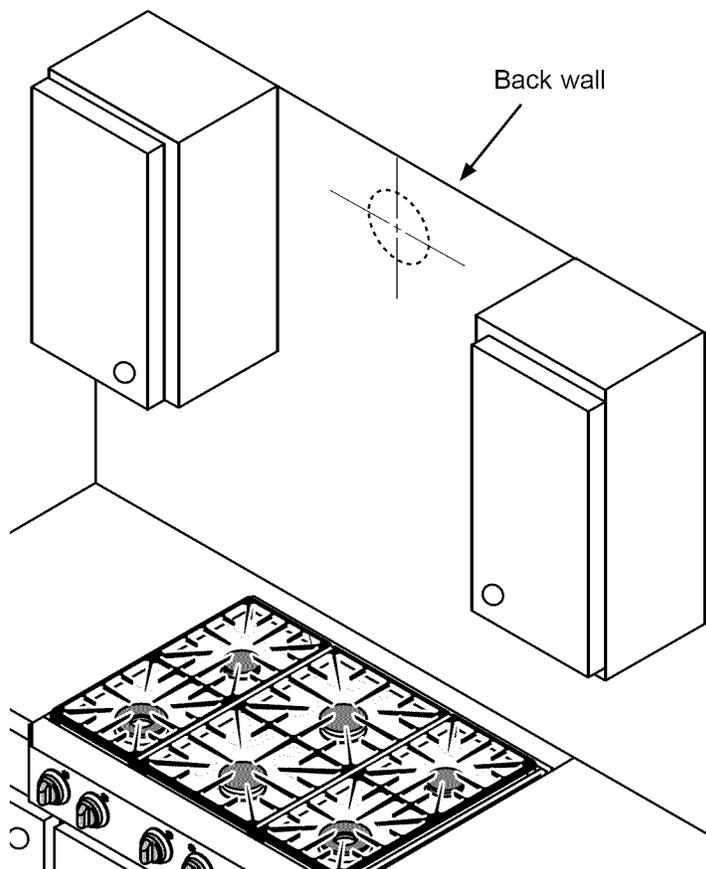

Duct Cut-Out for Rear Venting

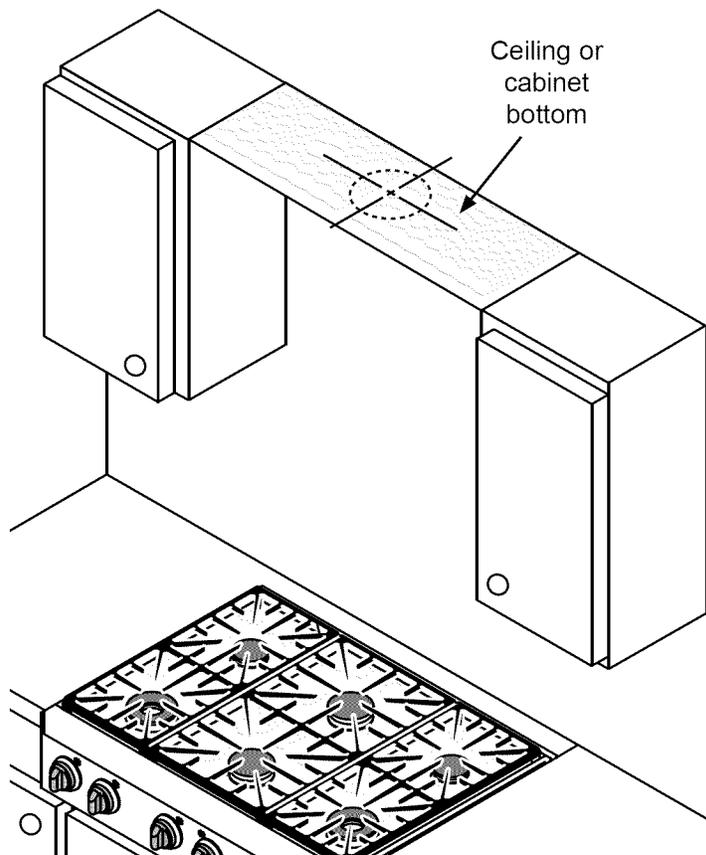

Duct Cut-Out for Top Venting

# Installation Instructions


## WARNING

- Do not install the range hood unless the electrical service provided meets the range hood specifications.
- Observe all governing codes and ordinances during installation. Contact your local building department for further information.
- A qualified technician must complete the installation of this built-in appliance. More than one person is required to raise the hood into place. The owner is responsible to make sure the hood is properly installed.


1. Start by removing the filters from the bottom of the hood. Put them in a safe location so that they will not be damaged.

If the hood will be installed in a top exhaust configuration, skip to **AHT10 Transition Kit Installation**. If the hood will be installed so that air will exhaust out of the back, the duct collar(s) must be moved to the rear before hanging the hood.

2. Place the hood assembly on a large flat surface.
3. Remove and save the duct collar screws from the top of the unit. See below. If the unit has two duct collars, remove both sets of screws.
4. Remove the duct collar(s).
5. Remove and save the cover plate screws and the cover plate(s) on the back of the hood.

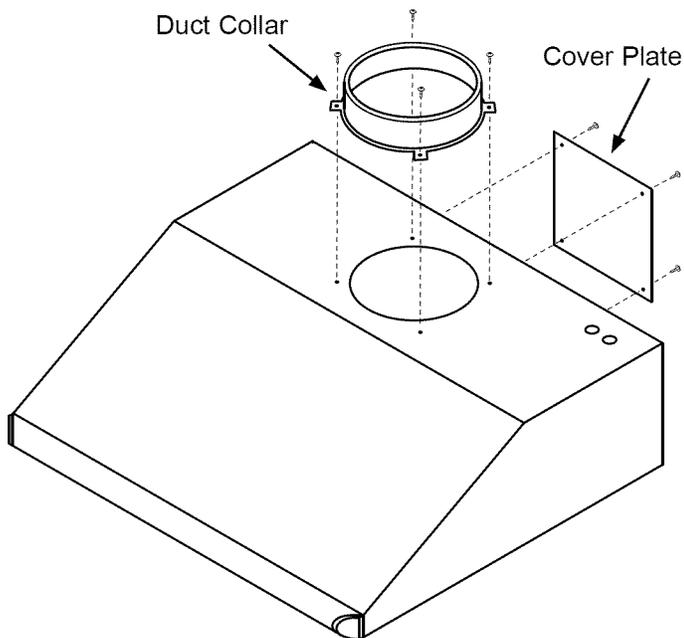

6. Using the existing screws, attach the cover plate removed in step 5 to the top of the hood to cover the hole.
7. Attach the duct collar(s) removed in step 2 to the back of the unit using the existing screws.

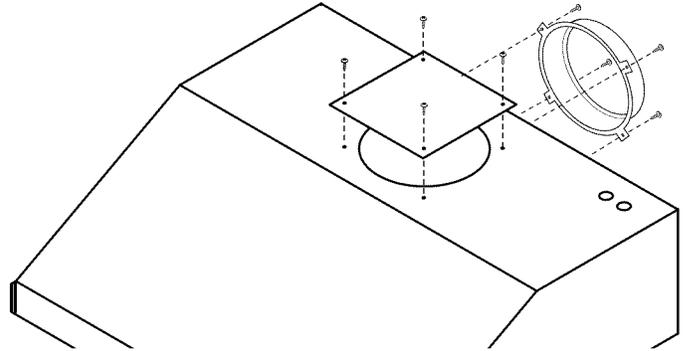


## AHT10 Transition Kit Installation

On dual exhaust models, the two 8" exhausts may be merged into one 10" duct using Dacor transition kit AHT10. Install the transition before installing the hood on the wall. It connects to the hood on the top or rear, depending on the type of installation.

### Preparing the AHT10 for Installation

Prepare the transition for installation by bending the bottom edges at right angles to create a  $\frac{3}{4}$ " flange around the base. **IMPORTANT:** On 12" high hoods modified to exhaust out the rear, leave one of the long edges unbent.

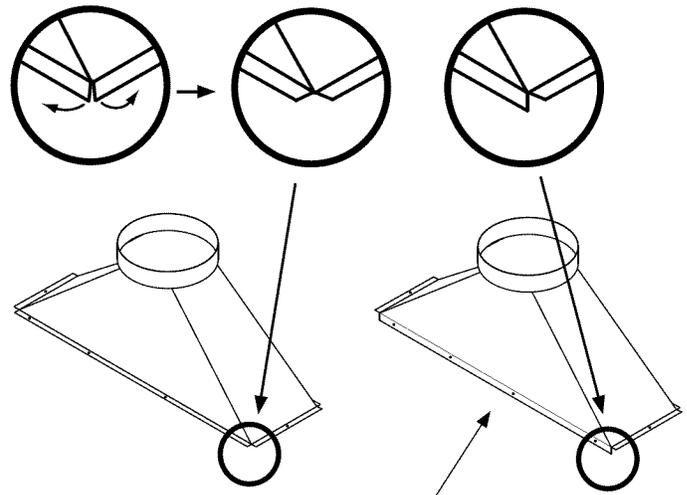

Leave this edge unmodified, bend up other three.

**Transition Flange Prep:**  
All models using top exhaust and 18" high models with rear exhaust

**Transition Flange Prep:**  
12" high models with rear exhaust


Drill pilot holes around the edges of the mounting flange including the unmodified edge, if the transition will be mounted to the back of a 12" high hood (see above).

# Installation Instructions

Installing the AHT10 Transition:


## Top exhaust models and 18" high models with rear exhaust:

Center the transition over the duct collars and fasten it in place using sheet metal screws (not included). Seal the base of the transition with duct tape.

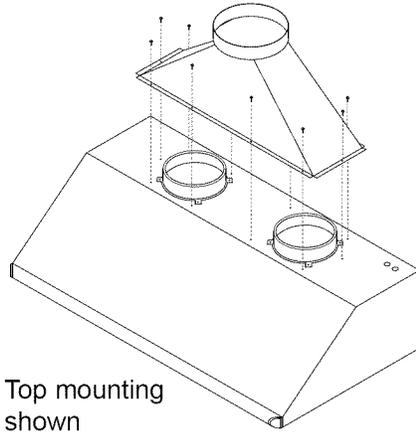

## 12" high models with rear exhaust:

Center the transition over the duct collars while resting the unmodified edge on the top of the hood. Fasten in place using sheet metal screws (not included). Seal the base of the transition with duct tape.

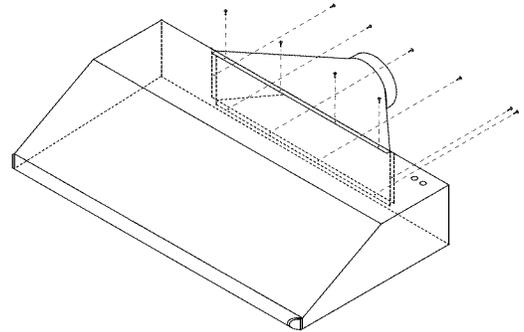

## Mounting Bracket Installation

1. Draw the horizontal center line for the temporary mounting brackets on the wall. The center line for the brackets is 2 1/8" (54 cm) below where the top of the hood will be located. The horizontal line marks the center line of the mounting screws that hold the temporary mounting brackets in place.




### IMPORTANT

Installing the brackets lower or higher than 2 1/8" below the top of the final hood location will cause alignment problems during final installation.


2. Draw the two (2) vertical center lines for the brackets on the wall. They are located on both sides of the hood center line drawn on the wall before making the duct cut-out. The distance from the center line depends on the model. See the chart below.

### TEMPORARY BRACKET CENTER LINE DISTANCE

Models	F
EHR3012, EHR3018	12 3/8" (31.4 cm)
EHR3612, EHR3618	15 3/8" (39.1 cm)
EHR4212, EHR4218	18 3/8" (46.7 cm)
EHR4812, EHR4818	21 3/8" (54.3 cm)
EHR5418	24 3/8" (61.9 cm)

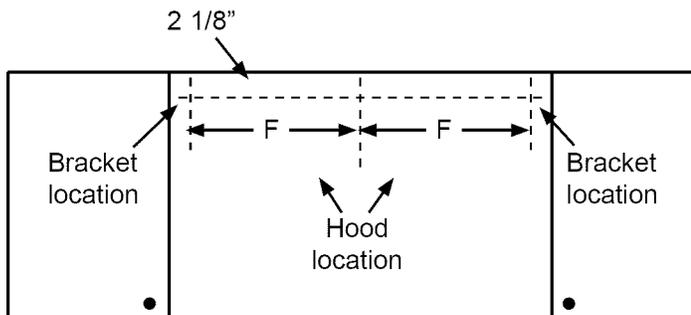

3. Find the temporary mounting bracket in the shipping box. Put the bracket against the wall and line up the center hole with the intersection of the bracket center lines on the wall. Make sure the anchors and/or screws used are strong enough to support the hood. Make sure drywall installations are properly reinforced.
4. Mark the two mounting hole positions through the holes in the bracket. Drill the pilot holes for the screws or anchors and attach the brackets securely to the wall.

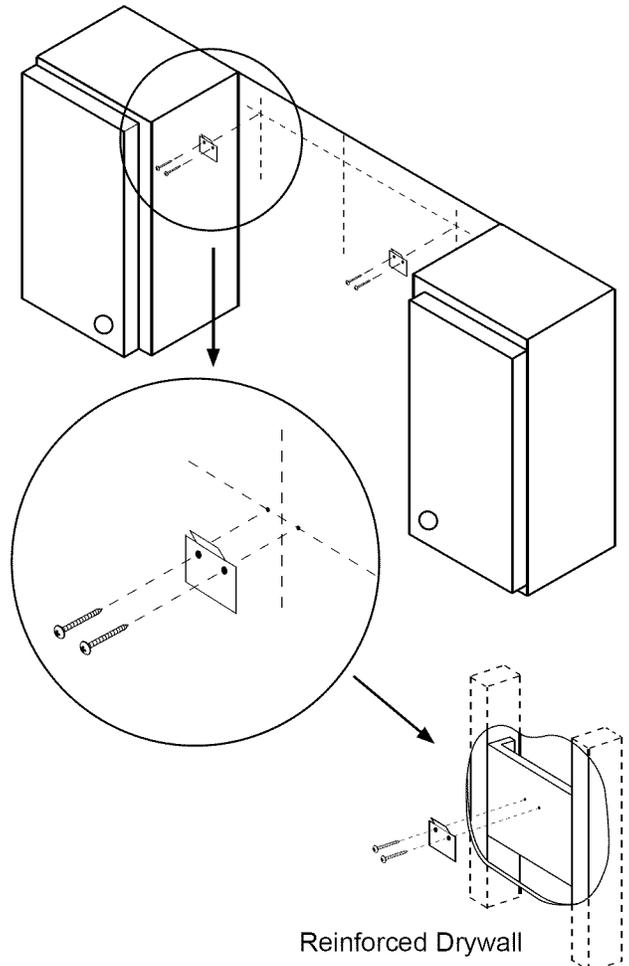


# Installation Instructions

## Hanging the Range Hood


### WARNING

Hanging the range hood requires two people. Do not attempt to lift the hood without assistance.

1. Remove the plastic coating from the outside of the hood.
2. Remove the filter(s) to reduce weight and avoid damage.
3. Lift the hood up on both sides and slip the mounting slots over the tabs on the mounting brackets.

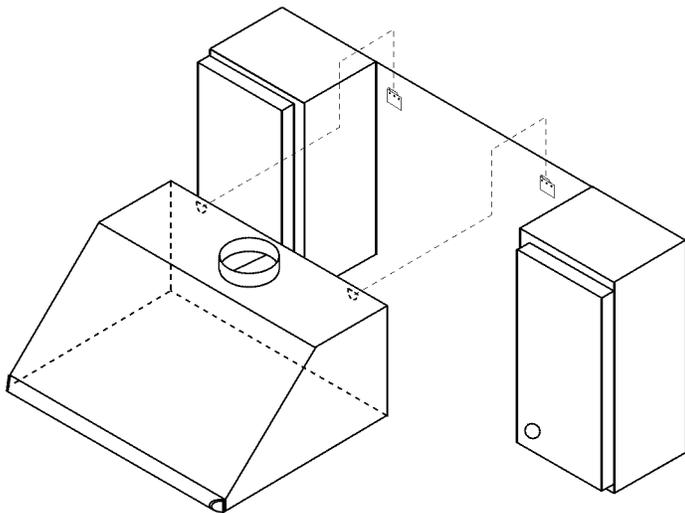

4. Lift the hood into its final position and mark the desired locations for the anchors or wood screws through the mounting slots on the back and top of the hood.
5. Remove the hood from the wall.
6. Drill the pilot or mounting anchor holes. If using mounting anchors insert them into the mounting holes.

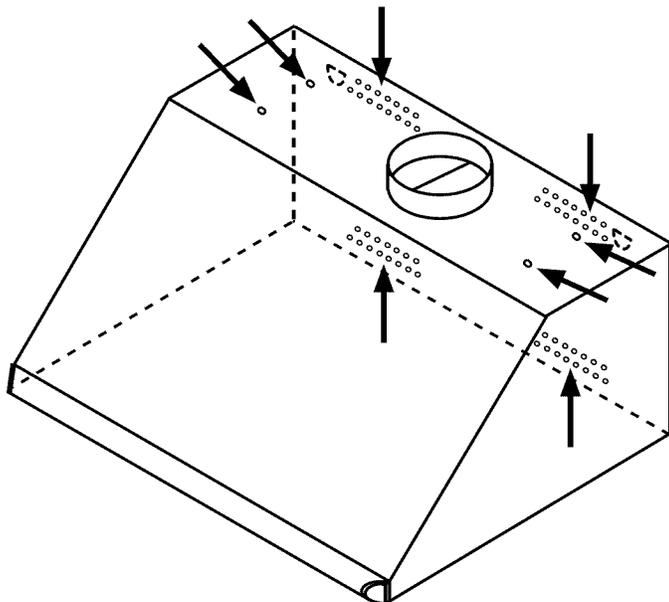

Mounting Hole Locations

7. Reattach the hood to the temporary mounting brackets.
8. Lift the hood into its final position and fasten it in place. Insert the fasteners through the mounting slots in the back and top of the hood into the studs, mounting blocks or anchors.

## Duct Work Installation

### WARNING

During duct installation, make sure there are no obstructions that keep the damper flaps on the top of the hood from opening.

1. Install the remote blower according to the remote blower installation instructions.
2. Install the duct work starting from the hood and working toward the remote blower. Observe the specifications on page 7 and 8.
3. Fasten all joints with sheet metal screws and seal with duct tape or certified silver tape.

## Final Electrical Installation


### WARNING

- To avoid electric shock or fire hazard, prior to connecting the electrical wiring to the hood, make sure that power to the hood power supply line is turned off at the fuse box or circuit breaker panel.
- Improper connection of the hood electrical wiring may create an electric shock or fire hazard and may result in damage to the hood's electrical system. See page 6 for specifications.
- Do not ground the hood to the neutral (white) power supply wire. Connect the hood ground wire to a separate, properly grounded wire installed by a licensed electrician.
- Make sure all wire used is capable of handling the total connected load. See page 3.


1. Turn off power to the hood electrical circuit at the circuit breaker or fuse box.
2. Run the conduit line used to supply power from the hood to the remote blower parallel to the duct work.
3. Wire the remote blower according to the remote blower or in-line installation instructions.
4. Connect the conduit to the hood and route the wires to the terminal block inside the hood.
5. Route the power supply wiring from the junction box to the hood. Feed the wiring through the wiring access holes in the hood and route them to the terminal block inside the hood.

# Installation Instructions

6. Connect the wiring to the remote/in-line blower and the power supply line from the junction box as shown.

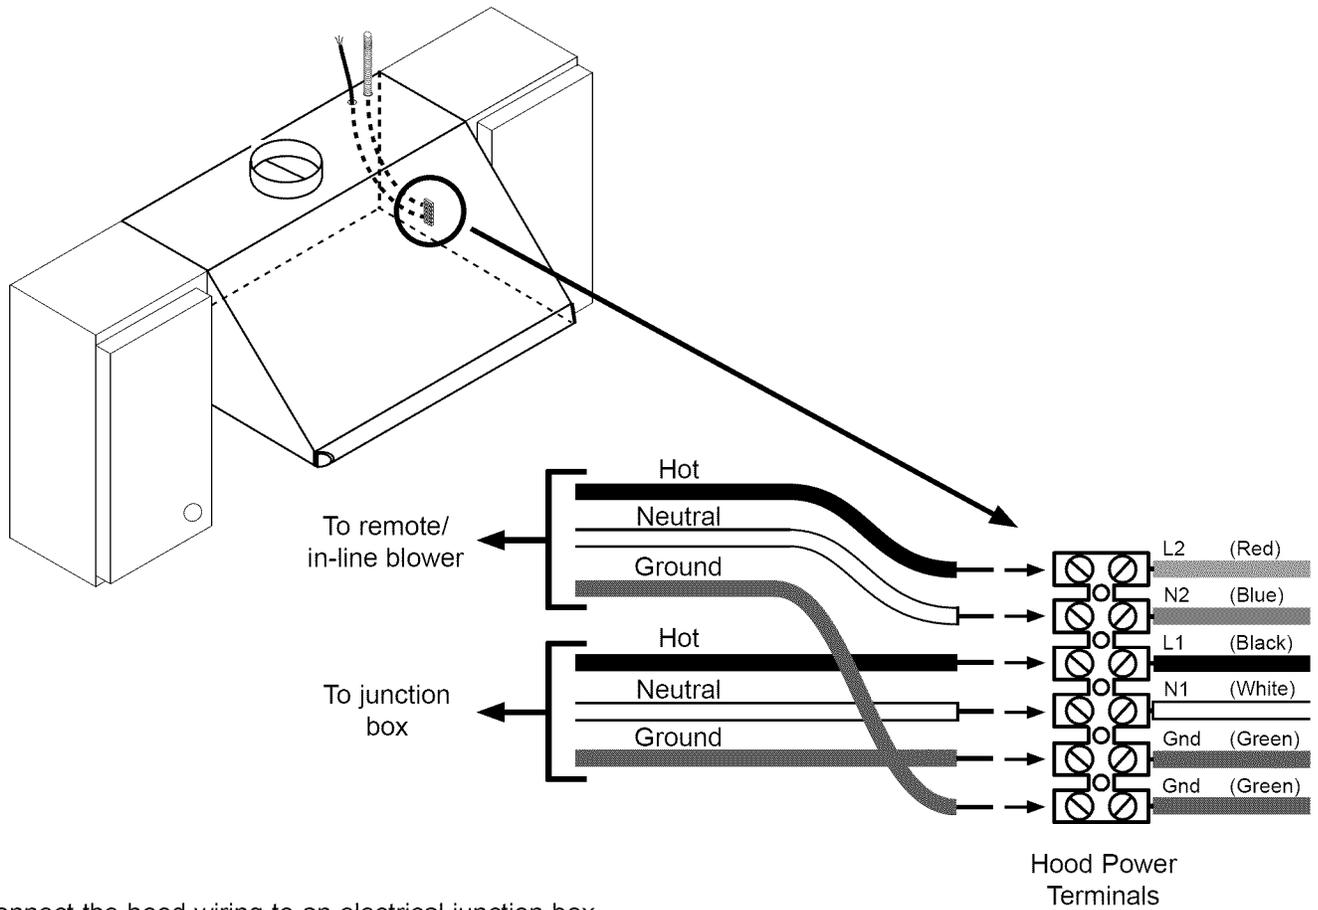


7. Connect the hood wiring to an electrical junction box on a dedicated circuit. See page 6 for specifications. Connect it according to the **3-Wire Connection to Junction Box** method shown or **External Ground Method** shown on the following page.

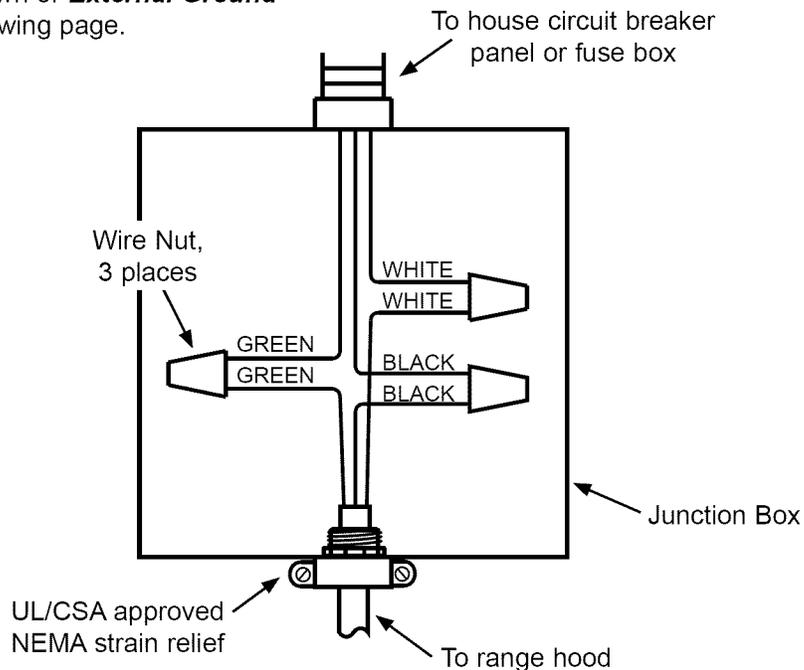

**3 Wire Connection to Junction Box**

# Installation Instructions

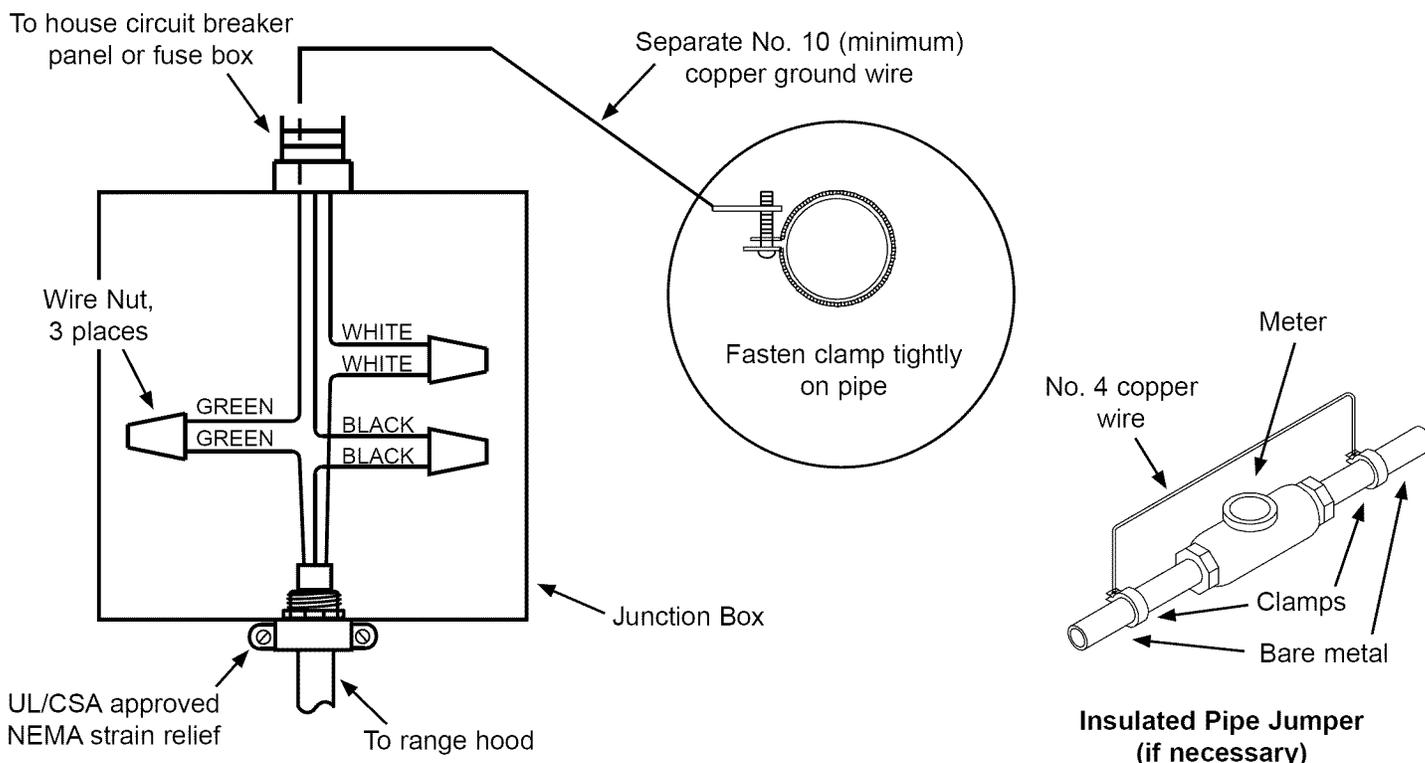


## WARNING

- Do not ground the circuit to a gas line.
- Do not ground the circuit to a hot water pipe.
- Water lines that are insulated must be jumped to assure continuity to ground. See above.

## Grounding the Hood Wiring Using an External Cold Water Pipe


### Light Bulb Installation

1. Attach the included suction cup to one of the provided light bulbs.
2. Insert it into one of the light fixtures.
3. Screw it into place and remove the suction cup.
4. Repeat for the remaining light fixtures.

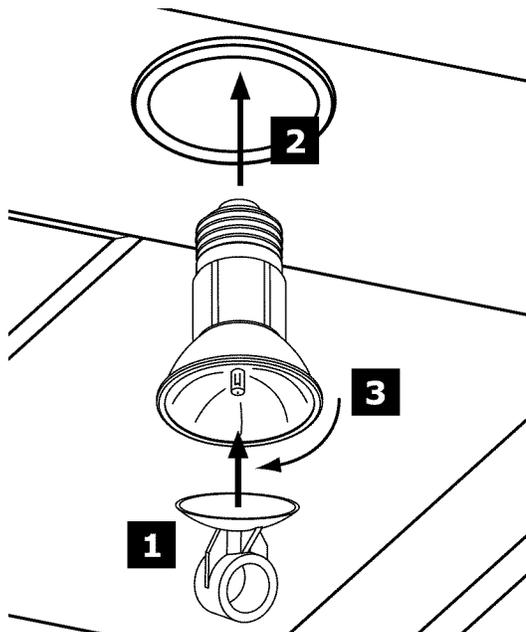


# Installation Instructions

## Verifying Proper Operation

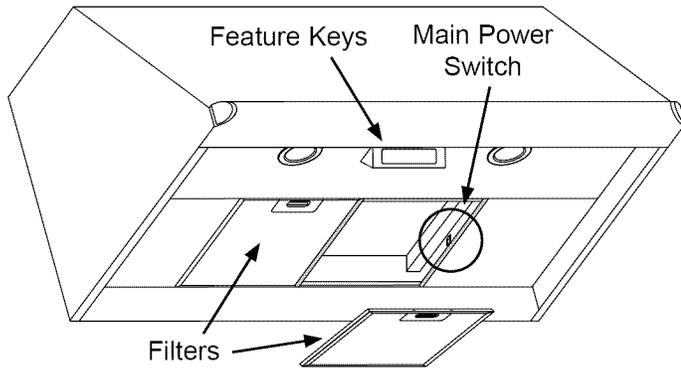

1. Make sure the main power switch is off.
2. Turn on power at the circuit breaker panel or fuse box.
3. Turn on the main power switch.
4. Install the filter(s).

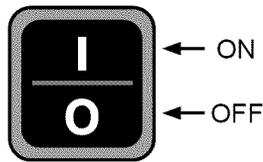

5. Touch the **LIGHTS** feature key. Verify that all the lights come on.
6. Touch the **LIGHTS** key again to turn the lights to the low setting.
7. Touch the **LIGHTS** key again to turn the lights off.
8. Touch the **FAN** feature key once and release. Verify that one light is showing on the fan speed indicator and that the fan is on at low speed. Touch and release the **FAN** key repeatedly, three times. Verify that with each touch of the key, the number of lights on the fan speed indicator increases and that the fan speed increases.
9. Touch the **FAN** key again to turn the fan off.

### If the hood fails to operate properly:

- Verify that power is supplied to the hood.
- Check the electrical connections to ensure that the installation has been completed correctly.
- Repeat the above test.
- If the hood still does not work, contact Dacor Distinctive Service at (877) 337-3226. Do not attempt to repair the appliance yourself. If you need service, be sure to have the model and serial numbers available when you call. See the inside cover for location.

Do not attempt to repair the appliance yourself. Dacor is not responsible for service required to correct a faulty installation.


## Installation Checklist

### **WARNING**

- To ensure a safe and proper installation, the following checklist should be completed by the installer to ensure that no part of the installation has been overlooked.
- Proper installation is the responsibility of the homeowner. The importance of proper installation of your Dacor range hood cannot be overemphasized.


- Is the hood properly attached to the wall according to the instructions on page 12?
- Is the duct work completely installed? Are all joints attached with sheet metal screws and wrapped with duct tape? See page 12.
- Is the range hood wired and grounded according to these instructions and in accordance with all applicable electrical codes? See Page 12.
- Are the filters properly installed according to the use and care manual?
- Has proper operation been verified?
- Has the warranty been activated on-line or the warranty card been filled out completely and mailed?

# Wiring Diagrams

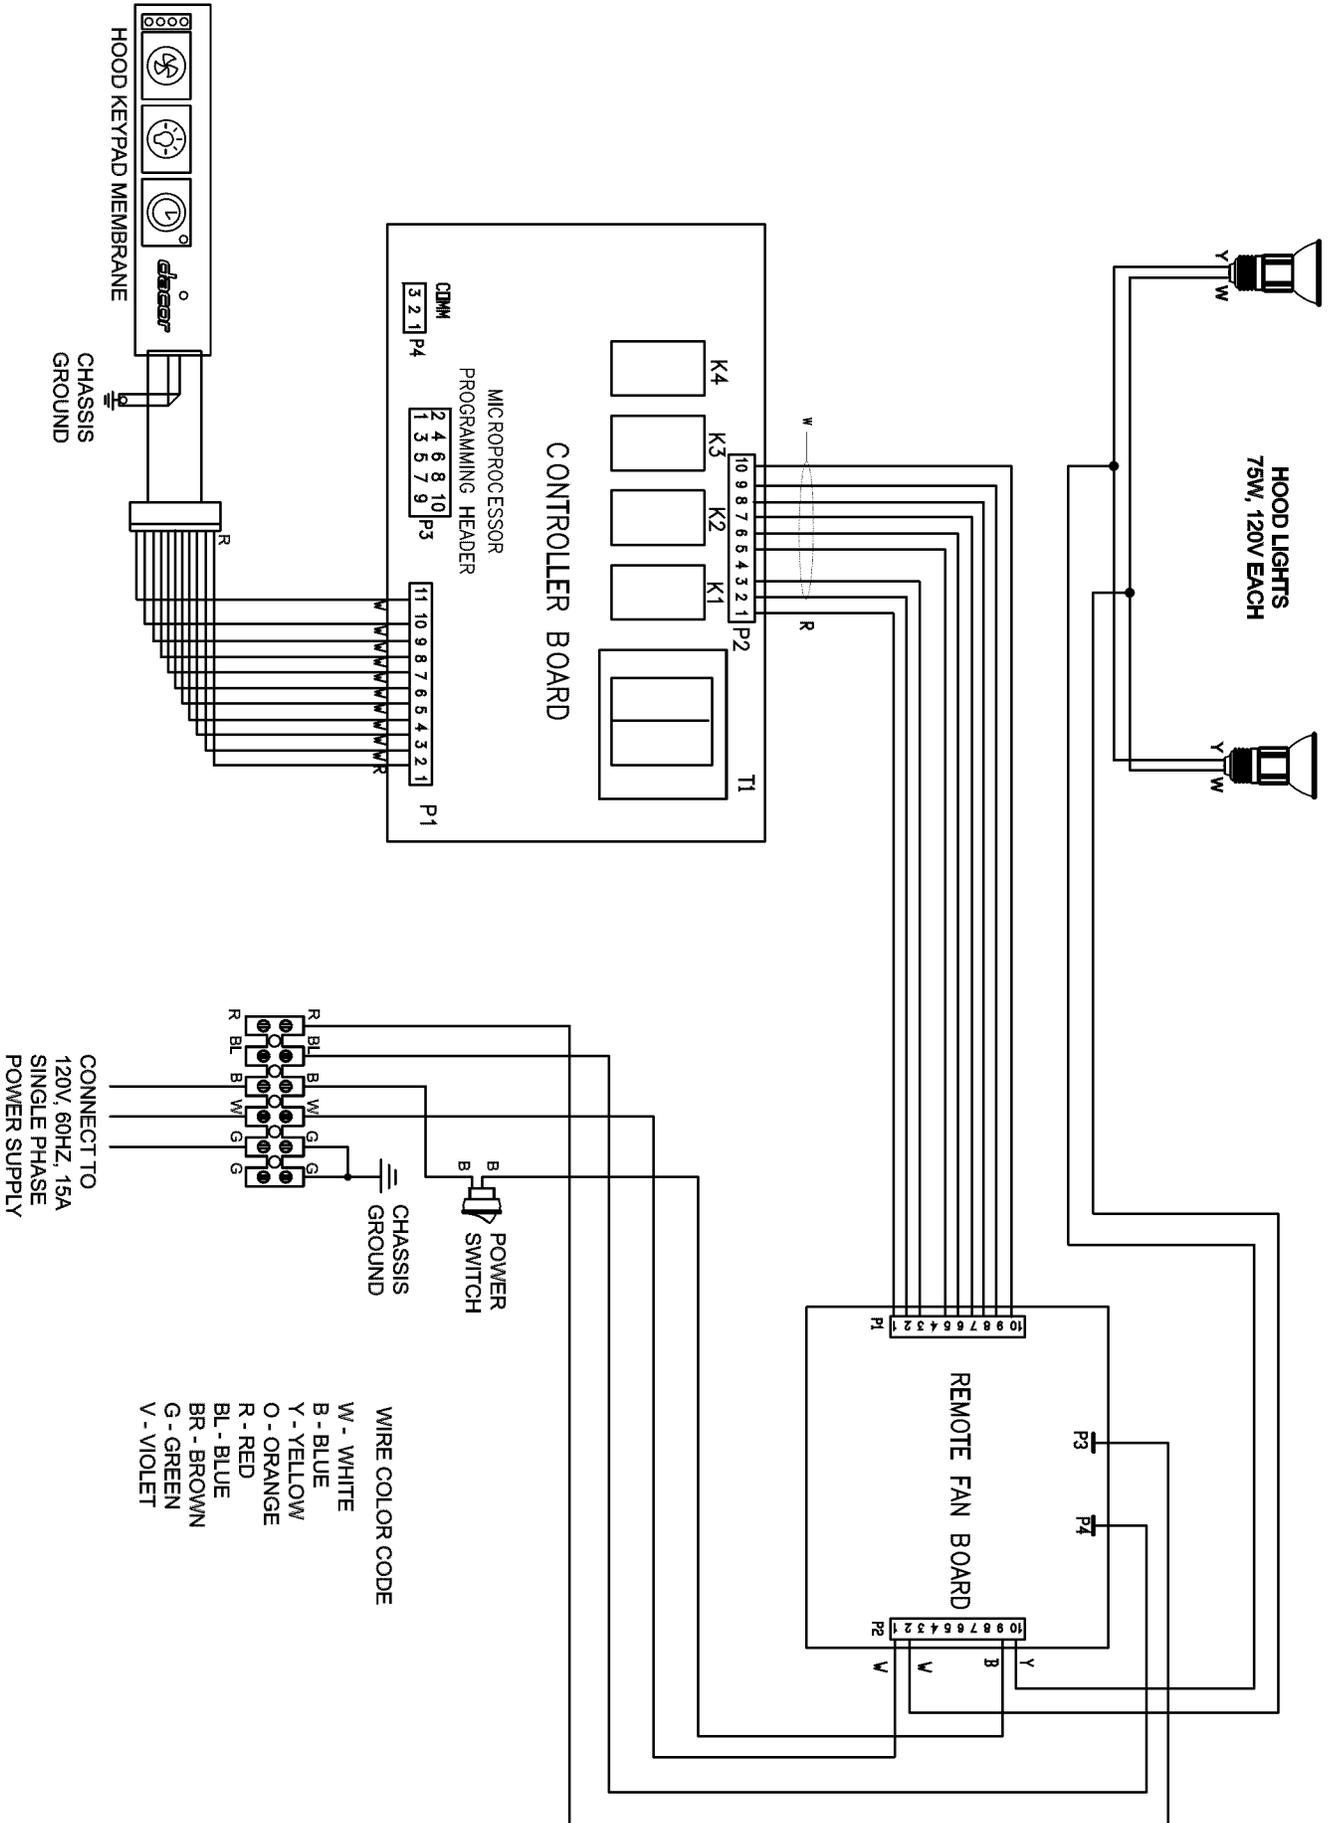

Wiring Diagram: Models EHR30 - EHR36 - EHR42

# Wiring Diagrams

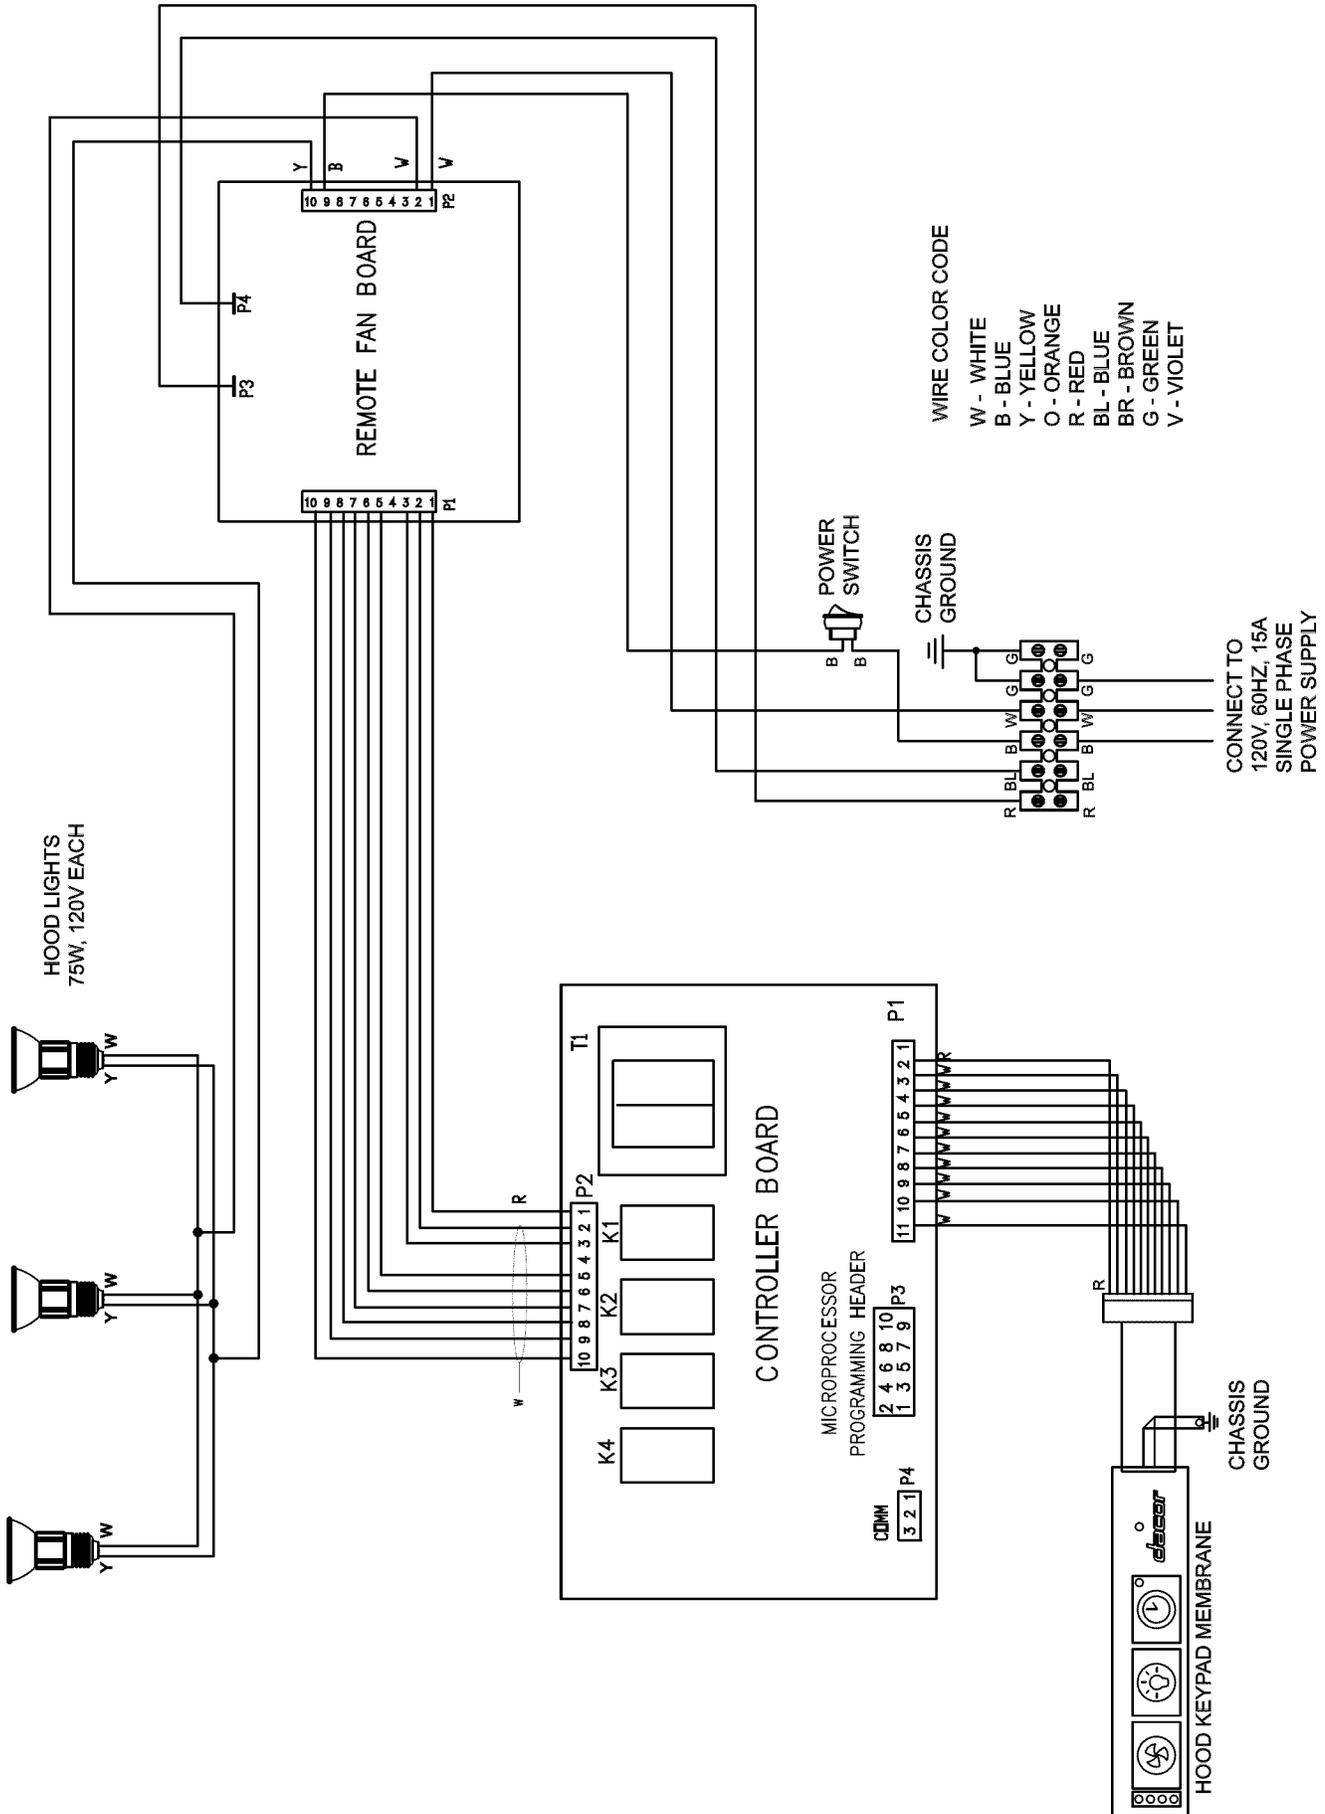

Wiring Diagram: Models EHR48 - EHR52

