

Save This Manual  
for Future Reference

**SEARS**

**owner's  
manual**

MODEL NO.  
**113.177060**


---

Serial  
Number \_\_\_\_\_  
Model and serial  
numbers may be found  
on the side of the  
powerhead. You  
should record both  
model and serial  
numbers in a safe  
place for future use.

---

**FOR YOUR  
SAFETY**

**READ ALL  
INSTRUCTIONS  
CAREFULLY**

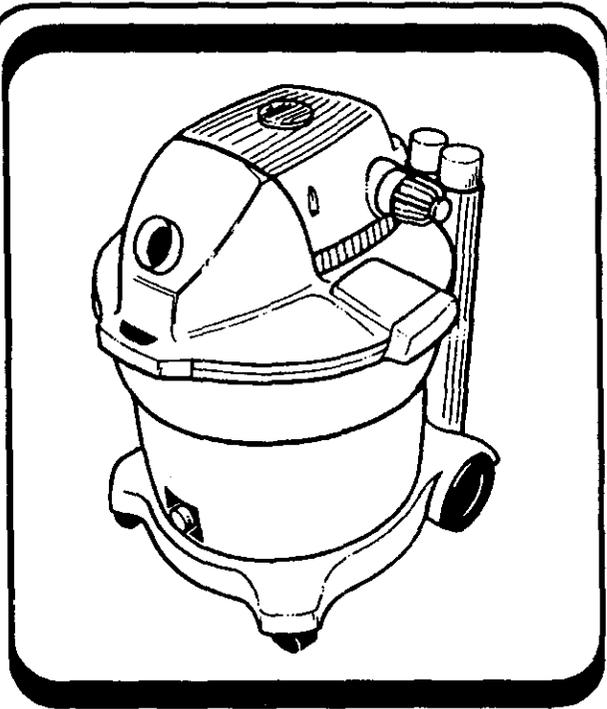

**CRAFTSMAN®**

**16 GALLON  
WET/DRY VAC  
WITH DETACHABLE  
BLOWER**

- assembly
- operating
- repair parts

## FULL ONE YEAR WARRANTY ON CRAFTSMAN WET/DRY VACS

If within one year from the date of purchase, this Craftsman Wet/Dry Vac fails due to a defect in material or workmanship, Sears will repair it, free of charge.

If this Craftsman Wet/Dry Vac is used for commercial or rental purposes, this warranty coverage applies for only 90 days from date of purchase.

Warranty Service is Available By Simply Contacting The Nearest Sears Service Center/department Throughout The United States.

This warranty applies only while this product is in the United States.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Sears, Roebuck and Co., D/817 WA, Hoffman Estates, IL 60179

## IMPORTANT SAFETY INSTRUCTIONS

Safety is a combination of common sense, staying alert and knowing how your vac works. Read this manual to understand the vac.

### Safety Signal Words

**DANGER:** means if the safety information is not followed someone **will** be seriously injured or killed.

**WARNING:** means if the safety information is not followed someone **could** be seriously injured or killed.

**CAUTION:** means if the safety information is not followed someone **might** be injured.

When using your Wet/Dry Vac, follow basic safety precautions including the following.

**WARNING** - To reduce the risk of fire, electric shock, or injury:

Read and understand this owner's manual and all labels on the Wet/Dry Vac before operating. Use only as described in this manual. To avoid personal injury or damage to Wet/Dry Vac, use only Sears Craftsman recommended accessories. Sparks inside the motor can ignite flammable vapors or dust. To avoid fire or explosion:

- Do not vacuum, or use this Wet/Dry Vac near, flammable or combustible liquids, gases, or explosive dusts like gasoline or other fuels, lighter fluid, cleaners, oil-based paints, natural gas, hydrogen, coal dust, magnesium dust, grain dust, or gun powder.
- Do not use Wet/Dry Vac as a sprayer for any flammable or combustible liquid.

Do not vacuum anything that is burning or smoking, such as cigarettes, matches, or hot ashes.

Do not vacuum fireplace soot or ash. This is a very fine dust which will not be captured by the filter and may cause damage.

To avoid health hazards from vapors or dusts, do not vacuum toxic materials.

Do not use or store near hazardous materials.

To avoid electric shock, do not expose to rain. Store indoors.

Do not allow to be used as a toy. Close attention is necessary when used by or near children.

Do not use this Wet/Dry Vac with a torn filter or without the filter installed except for vacuuming liquids as described in the operation section of this manual.

Do not leave Wet/Dry Vac when plugged in. Unplug from outlet when not in use and before servicing. Turn off Wet/Dry Vac before unplugging.

To avoid injury from accidental starting, unplug power cord before changing or cleaning filter.

Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.

Do not use with damaged cord, plug or other parts. If your Wet/Dry Vac is not working as it should, has missing parts, has been dropped, damaged, left outdoors, or dropped into water, return it to a Sears Service Center.

Do not pull or carry by cord, use cord as handle, close a door on cord, or pull cord around sharp edges or corners. Do not run Wet/Dry Vac over cord. Keep cord away from heated surfaces.

Do not handle plug or the Wet/Dry Vac with wet hands.

Do not put any object into ventilation openings. Do not vacuum with any ventilation openings blocked; keep free of dust, lint, hair or anything that may reduce air flow.

Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.

To avoid falls, use extra care when cleaning on stairs.

This Wet/Dry Vac is double-insulated, eliminating the need for a separate grounding system. Use only identical replacement parts. Read the instructions for Servicing Double-Insulated Wet/Dry

Vacs before servicing.

Use this Wet/dry Detachable Blower Vac as described in this manual.

When using as detached blower:

- Turn unit off before setting on ground or releasing grasp from handle.
- Do not use on wet surfaces, electric shock could occur.
- Direct air discharge only at work area.
- Do not direct air at bystanders.
- Keep children away when blowing.
- Do not use blower for any job except blowing dirt and debris.

Observe the following warnings that appear on the motor housing of your Wet/Dry Vac.

DOUBLE INSULATED  
GROUNDING NOT REQUIRED  
WHEN SERVICING USE ONLY  
IDENTICAL REPLACEMENT PARTS

**WARNING: To avoid electric shock-  
do not expose to rain-store indoors.**

**WARNING: For your own safety,  
read and understand owner's manual.  
Do not pick up hot ashes, coals,  
toxic, flammable or other hazardous  
materials. Do not use around explosive  
liquids or vapors.**

## SAVE THESE INSTRUCTIONS

The operation of any utility vac or blower can result in foreign objects being blown into the eyes, which can result in severe eye damage. Always wear safety goggles complying with ANSI Z87.1 (shown on package) before commencing operation. Safety Goggles are available at Sears retail stores.



To avoid hearing damage, wear ear protectors when using the vac for extended hours or when, using it in a noisy area.

For dust operations, wear dust mask. Use only extension cords that are rated for outdoor use. Extension cords in poor condition or that are too small in wire size can pose fire and shock hazards. When using an extension cord, be sure it is in good condition. Using any extension cord will cause some loss of power. To keep the loss to a minimum, use the following table to choose the minimum wire size extension cord.

Extension Cord Length	A.W.G.
0-50 Ft.	14
50-100 Ft.	12

## Introduction

This Wet/Dry Vac is intended for household use only.

### IMPORTANT NOTE Please Read Carefully

**Static Shocks Are Common** - In dry areas or when the relative humidity of the air is low. To reduce the frequency of static shocks in your home the best remedy is to add moisture to the air with a console humidifier.

### Table of Contents



Item	Page
Warranty Information.....	2
Safety Instructions.....	2
Introduction.....	4
Unpacking and Checking	
Carton Contents.....	4
Assembly.....	5
Operation.....	10
Maintenance.....	12
Repair Parts.....	16

## Unpacking and Checking Carton Contents —

Remove entire contents of carton. Check each item against the Carton Contents List. Notify your Sears Store immediately if any parts are damaged or missing.

### Carton Contents List

Key	Description	Qty.
A	16 Gallon Wet/Dry Vac	1
B	Extension Wands	2
C	Hose	1
D	Male-Male Adapter	1
E	Male-Female Adapter	1
F	Utility Nozzle	1
G	Blower Nozzle	1
H	Car Nozzle	1
J	Wet Nozzle	1
K	Diffuser	1
L	Accessory Caddy	1
M	Float	1
N	Filter Cage	1
O	Filter (Red Stripe)	1
P	Filter Plate	1
Q	Filter Nut	1
R	Twin Wheel Caster	2
S	Wheel Assembly	2
T	Owners Manual	1

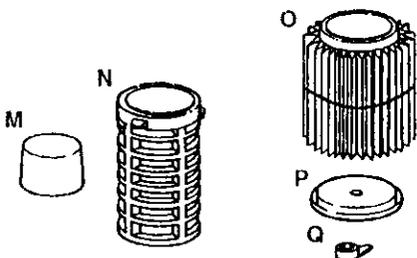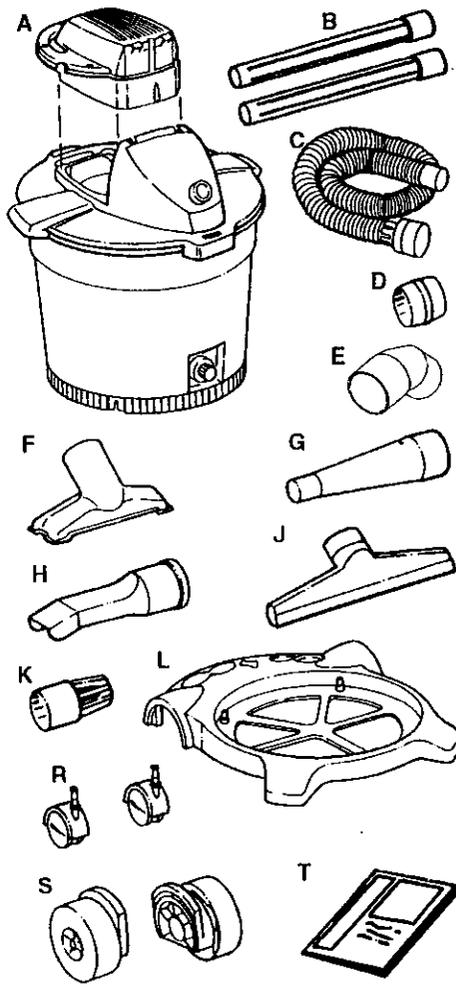



## Float/Cage Assembly

**WARNING:** For your own safety, never connect plug to power source outlet until all assembly steps are complete and you have read and understood the safety and operation instructions. Do not operate vac with any parts damaged or missing.

1. Remove the detachable blower from the power head assembly by unlatching the power head latch under the carry handle of the detachable blower. Set the detachable blower off to the side.
2. Unlatch the drum latch holding the lid to the drum. Lift the lid off the drum. Place the lid assembly of the vac upside down into the drum or place upside down on a clean smooth surface.
3. Locate the float. Place the float over the opening in the center of the lid with the words "This Side Towards Lid" laying face down over the hole.

4. Line up filter cage tabs with the slots in the center ring of the lid assembly. Push on the filter cage until the tabs snap into the slots for a secure fit.

**NOTE:** If filter cage needs to be removed, because the float is placed in the wrong way, use a slotted screwdriver and insert the blade near one of the tabs between the filter cage and the center ring of the lid. Pry the tab out of the slot. Tilt the cage and lift away from the lid. To replace, follow float/cage assembly instructions.

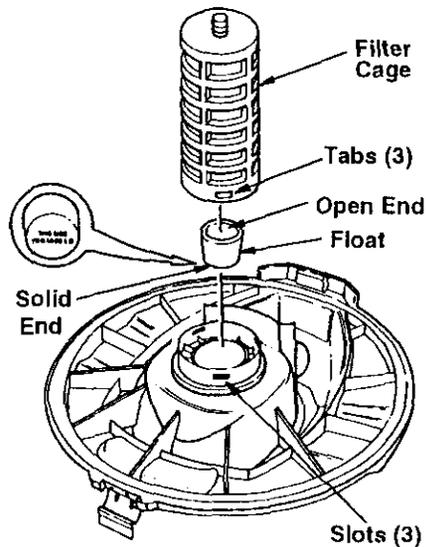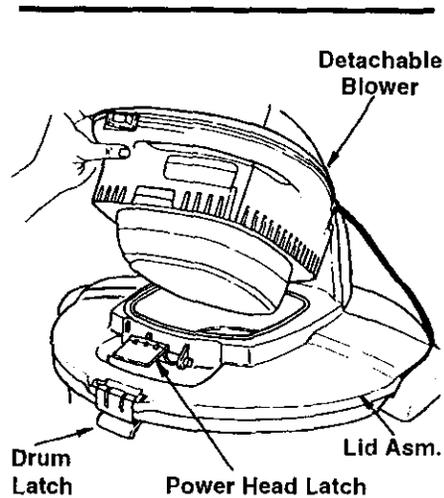


## Filter Assembly

1. Carefully slide the filter over the filter cage, sliding it over the center ring covering the 3 slots until the filter stops against the lid.
2. Place the hole in the filter plate over threaded screw of the filter cage.
3. Gently push on the filter plate to seat the rubber ring of the filter inside the circular channel of the filter plate.
4. Place filter nut onto threaded screw and tighten it down. Finger tighten only.

**NOTE:** Lever of filter nut should be away from plate as shown.

**IMPORTANT:** Do not overtighten as this may deform or crack the filter plate, filter cage or the filter.

**NOTE:** Your filter has a red stripe that matches an in-store displayer. When you visit your local Sears store, just remember the color of your stripe for the correct size filter.

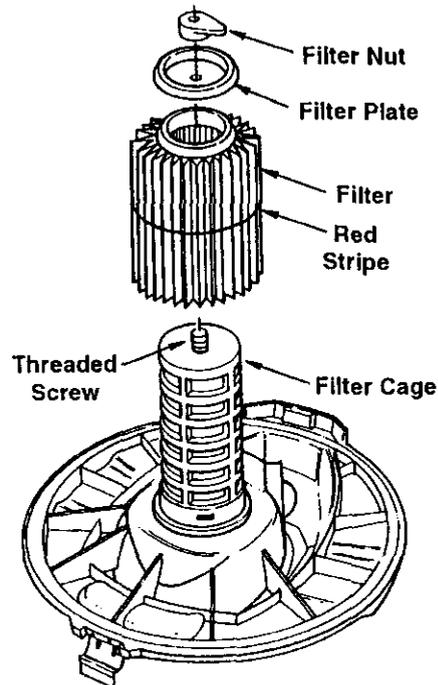


## Accessory Caddy Assembly

Locate the two 5-1/4" wheel assemblies and the two dual wheel casters in the carton. The casters are designed to fit in the front of your new accessory caddy and the larger wheels fit the rear of the caddy.

### To Install the Wheels/Casters

1. Place the accessory caddy upside down on a flat surface as illustrated.
2. Insert the dual wheel casters into the bottom of the accessory caddy as shown (2 places).
3. Push on the caster until the flange on the caster stem is inserted all the way into the socket. You will be able to hear the flange snap into the socket. The caster will swivel easily when positioning is correct.

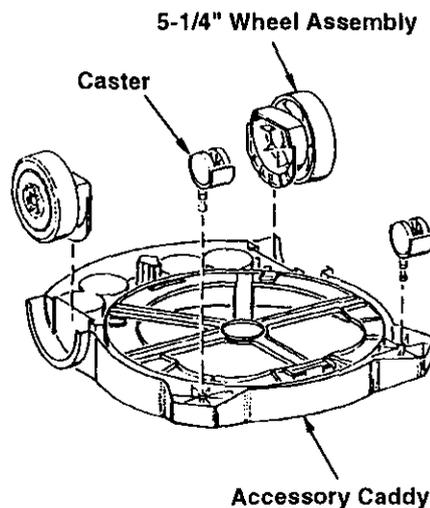


4. Position the dovetail portion of one of the wheel assemblies into the accessory caddy as illustrated. Tap the wheel support into the accessory caddy with a soft mallet. Repeat for the second wheel assembly.

5. Turn the accessory caddy upright. This completes the assembly of your 16 gallon wet/dry vac accessory caddy. The caddy is now ready to install the sixteen gallon drum of your Craftsman wet/dry vac.

### To Install Your Vac Drum Onto the Caddy


1. Place the caddy (now fully assembled) in the upright position (all four wheels positioned on the floor).
2. Locate the drain on your wet/dry vac drum. When the drum is positioned into the vac caddy, the drain must be centered between the two front dual wheel casters. There are two mounting posts in the caddy that must press into the mounting holes of the drum (see illustration). When properly oriented, the drum may be pressed down and a small tab located in the caddy will snap into the drum below the drain. A distinct snap will be heard indicating you have completed the caddy assembly.

**NOTE:** Since your wet/dry vac caddy is designed for permanent attachment to the drum, it is not necessary to remove the vac from the accessory caddy when disposing of debris.

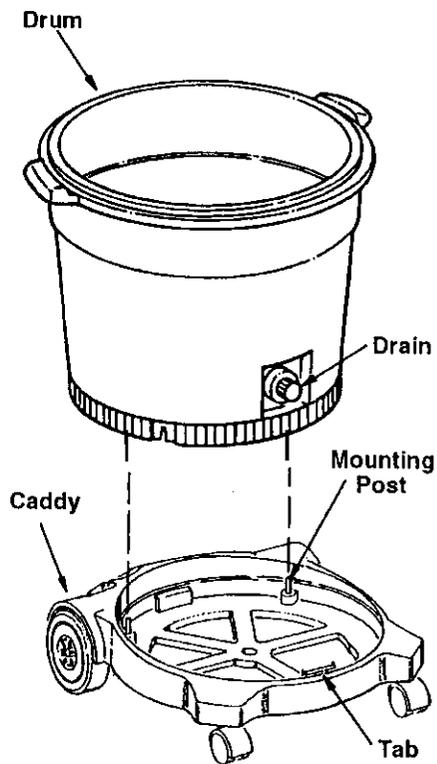



## To Store Your Accessories

1. Your Sears Craftsman wet/dry vac is designed to provide better stability, mobility and accessory storage with the addition of the caddy. Located at the rear of the caddy are five storage pockets. Wet/dry vac accessories may be conveniently stored here while not in use. The center storage pocket is specifically designed for the wet nozzle.

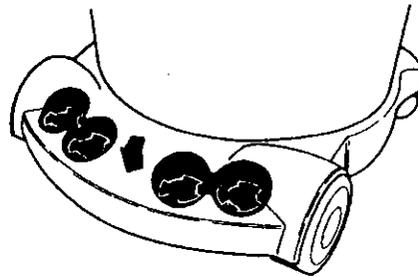

## Vac Assembly


1. Locate the lid/float/cage and the drum/caddy assemblies (assembled earlier).
2. Position the lid assembly with the inlet of the unit located in line with the drain plug on the dust drum.
3. To assemble the lid assembly to the drum/caddy, position the lid retention hinge to clasp the lip of the dust drum. To ensure proper lid assembly onto the drum/caddy assembly, angle the lid assembly, with the drum latch up, at 45°.
4. Pivot the lid assembly down until it rests on the drum/caddy assembly.
5. Rotate the drum latch down until you hear the latch snap over the lip of the drum.
6. To check that the lid assembly is properly assembled to the drum/caddy, try to lift up on the area of the lid above the lid retention hinge. If the lid assembly and drum/caddy assembly do not separate with the drum latch latched, the assembly is correct. If the assemblies do separate, unlatch the drum latch and try to assemble it again making sure the lid retention hinge is located under the lip of the dust drum.

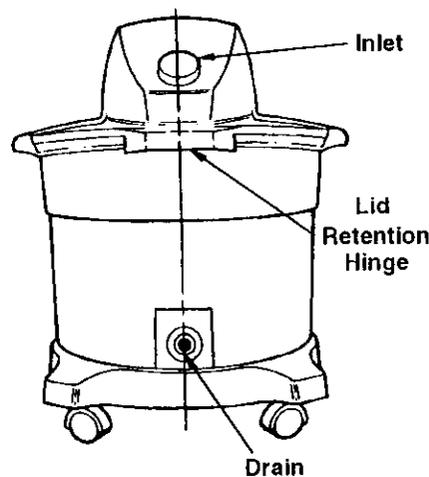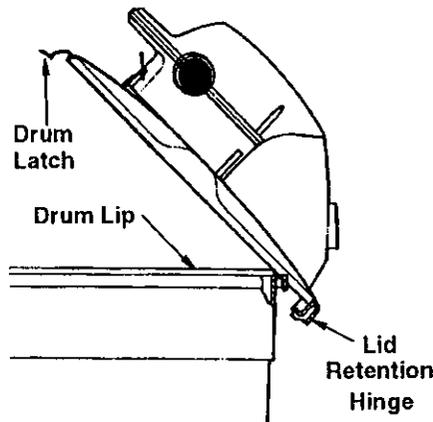


**NOTE:** For best appearance of the unit, the inlet of the vac should be located above the drain plug.

## Positioning Detachable Blower (Power Head Assembly)

1. Locate the Detachable blower of your Sears Craftsman vac. The top of the detachable blower has two hinges. To assemble the detachable blower to the lid assembly, the two hinges need to rest in the two hinge recesses in the lid assembly above the inlet port of the vac.
2. Tilt the detachable blower up 45° and nest the hinges into the hinge recesses in the lid assembly.
3. Rotate the detachable blower down until the downward travel stops.

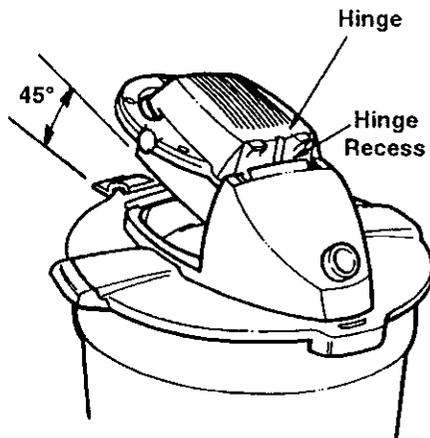


4. With your right hand, place your thumb on top of the detachable blower handle.
5. Applying pressure downward on the handle of the blower, with your thumb; use your fingers to lift the power head latch.
6. Lift until the power head latch snaps into place. This will latch your detachable blower to the lid assembly.

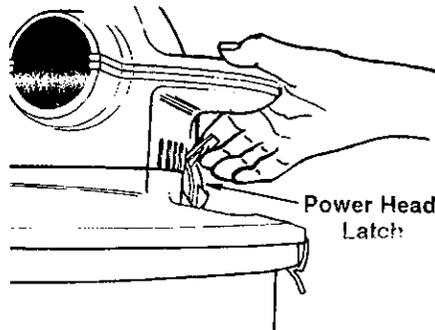

Your new wet/dry vac is ready for use.

With the wet/dry vac completely assembled and ready for use, insert the soft end of the 2-1/2" x 7' hose into the inlet of the vac and connect the extension wands and preferred nozzle.

**NOTE:** A 45° male-female adapter is included with your wet/dry vac and may be used to help prevent the hose from deforming. Insert the male end of the adapter into the inlet and connect soft end of the hose into the female end of the adapter and complete the assembly as instructed above.

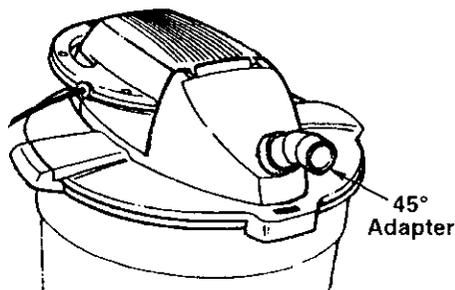

## Operation

### WARNING

To avoid fire or explosion, do not operate this vac in areas with flammable gases or flammable vapors such as lighter fluid, cleaners, oil-base paints, gasoline, alcohol or explosive dust such as coal, magnesium, grain or gun powder in the air. Do not vacuum explosive dust, flammable or combustible liquids or hot ashes. Do not use this vac as a sprayer for any flammable or combustible liquid. To avoid health hazards from vapors or dusts, do not vacuum toxic materials. To avoid electrical shock do not expose to rain. Store vac indoors. Unplug power cord before changing or cleaning filter or emptying the dust drum.

**CAUTION:** To reduce the risk of hearing damage wear ear protectors when using the vac or blower for extended hours or when using it in a noisy area. The operation of any utility vac or blower can result in foreign objects being blown into the eyes, which can result in severe eye damage. Always wear safety goggles complying with ANSI Z87.1 (shown on Package) before commencing operation. Safety Goggles are available at Sears retail stores.

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

**NOTE:** When using the unit in the vacuuming mode, always insert the air diffuser in the exhaust port on the detachable blower. This breaks up the direct flow of air and diffuses it.

### Vacuuming Dry Materials

1. The filter must be in correct position at all times to avoid leaks and possible damage to vac.
2. When using your vac to pick up very fine dust, it will be necessary for you to empty the drum and clean the filter at more frequent intervals to maintain peak vac performance.

**NOTE:** A dry filter is necessary to pick up dry material. If you use your vac to pick up

dust when the filter is wet, the filter will clog quickly and be very difficult to clean.

3. If your filter is wet but you need to use the vac to pick up dry material, you can quickly dry the filter by running the vac without hose attached for about 10 minutes. The clean air rushing through the vac will help dry the filter.

### Vacuuming Liquids

1. When picking up small amounts of liquid the filter may be left in place.
2. When picking up large amounts of liquid we recommend that the filter be removed. If the filter is not removed, it will become saturated and misting may appear in the exhaust.

**CAUTION:** Do not remove the filter cage or float. It is there to shut off airflow when the drum is full of liquids.


3. After using the vac to pick up liquids, the filter must be dried to avoid possible mildew and damage to the filter.
4. When the liquid in the drum reaches a predetermined level, the float mechanism will rise automatically to cut off airflow. When this happens, turn off the vac, unplug the power cord, and empty the drum. You will know that the float has risen because vac airflow ceases and the motor noise will become higher in pitch, due to increased motor speed.

**IMPORTANT:** To avoid damage to the vac do not run motor with float in raised position.

## Emptying Dust Drum

**WARNING: To avoid injury from accidental starting, unplug power cord before emptying the drum.**

1. To remove the lid to empty contents of the dust drum, simply lift the drum latch holding the lid to the drum/caddy assembly and lift the lid assembly up and off the drum. **NOTE:** Do not pick up the lid assembly by lifting on the handle to the detachable blower. Lift the lid assembly by the lid. This will ensure that the detachable blower and the lid will not separate during removal of the lid assembly.
2. Lay the lid assembly upside down on a clean dry area while emptying the drum or changing the filter.
3. Dump the drum contents into the proper waste disposal container.

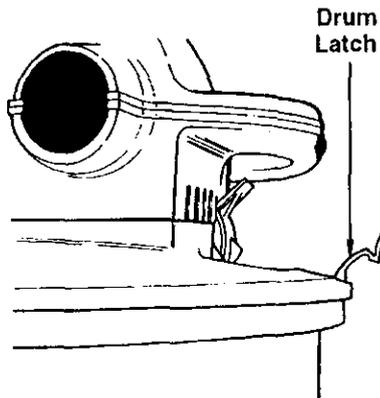


4. If the contents is liquid, you may dispose by using the drain provided in the drum for easy emptying. Simply unscrew the drain cap and tilt the drum in a manner so the liquid flows out the drain hole.

**WARNING: To avoid back injury or falls, do not lift a vac heavy with liquid or debris. Scoop or drain enough contents out to make the vac light enough to lift comfortably.**


## Cord Wrap

When vacuuming is complete, unplug the cord and wrap it around the detachable blower and upper lid assembly.

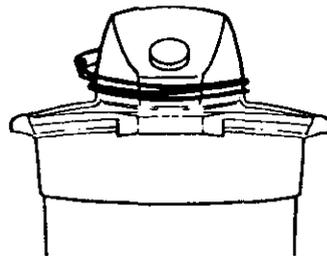

## Moving the Vac

Should it become necessary to pick the vac up to move it, the handles may be used on the sides of the dust drum. Do not use the handle located on the detachable blower to pick up the entire wet/dry vac or the lid assembly.

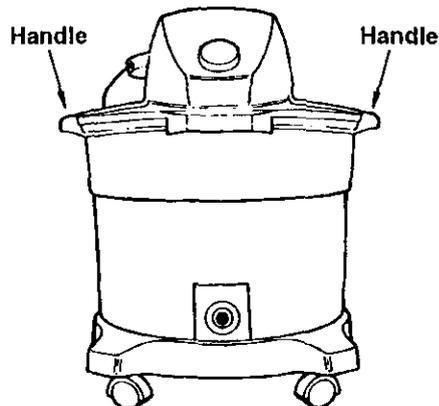

## Operation (continued)

### Blowing Feature

Your wet/dry vac features a "detachable blower". It has the capability to be used as a dedicated blower for yard work, patio cleanup and workshop applications to blow sawdust and other debris.

**CAUTION:** To reduce the risk of hearing damage wear ear protectors when using the vac/blower for extended hours or when using it in a noisy area.

**WARNING:** To avoid injury to bystanders, keep them clear of blowing debris.


1. Familiarize yourself with the detachable blower portion of your wet/dry vac.
2. Remove the detachable blower of your vac by pressing down on the latch under the handle of the detachable blower. This latch holds the detachable blower to the lid assembly.
3. Lift the detachable blower up by raising the handle upward and pulling the unit away from the nested position of the hinges.

### Assemble the Detachable Blower for "Blowing".

This may be assembled two ways.

1. Insert the small end of one of the extension wands into the blowing port of the detachable blower. Insert the male-male adapter into the extension wand and install the blower nozzle onto the male-male adapter.

**WARNING:** Always wear safety goggles complying with ANSI Z87.1 when using as a blower.

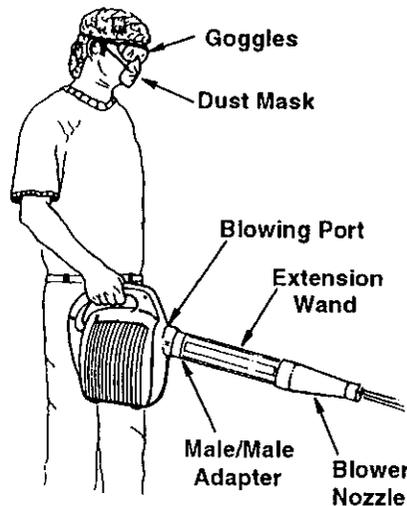

**WARNING:** Wear a dust mask if blowing creates dust which might be inhaled.

-OR-


2. Insert the male-male adapter into the blowing port of the detachable blower. Connect the large end of the extension wand to the male-male adapter. Connect the blower nozzle to the extension wand.
3. Turn the blower "ON" by toggling the switch in the handle of the blower to the "ON" position.

## Maintenance

### Blower Intake

**WARNING:** To avoid injury from accidental starting, unplug power cord before changing or cleaning filter.

After using the detachable blower of your wet/dry vac, examine the bottom of the blower for dust and debris. Check to see if the intake to the blower has debris stuck to the plastic vents and foam pad.

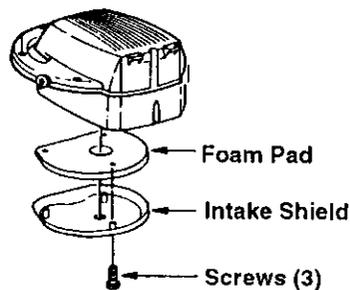

To clean the foam pad under the intake shield of the detachable blower:

1. Remove the three screws holding the intake shield.
2. Lift the intake shield off and set aside.
3. Lift the foam pad off and clean in warm soapy water or brush debris away. Allow foam pad to dry before replacing.
4. Examine foam pad for reuse. If you need to replace it, check the service part section of this manual.
5. Re-install foam pad into the blower.
6. Reinstall intake shield and 3 screws.

The unit is ready for use.

### Cleaning Vac Filter

Your filter should be cleaned often to maintain peak vac performance.

Be sure to dry the filter before storing or picking up dry debris.

**IMPORTANT:** After cleaning, check the filter for tears or small holes. Do not use a filter with holes or tears in it. Even a small hole can cause a lot of dust to come out of your vac. Replace it immediately.

**NOTE:** This filter is made of high quality paper designed to stop very small particles of dust. The filter can be used for wet or dry pick up. Handle the filter carefully when removing to clean or installing it. Creases in the filter pleats may occur from installation but creases will not affect the performance of the filter.

### Removal

To remove the filter for cleaning or replacement, remove filter nut from the screw on the filter cage, remove filter plate and lift off filter.

### Wet/Dry Vac

To keep your Wet/Dry Vac looking its best, clean the outside with a cloth dampened with warm water and mild soap.

To clean the drum:

1. Dump debris out.
2. Wash drum thoroughly.
3. Wipe out with dry cloth.

**IMPORTANT:** To avoid damage to the blower wheel and motor, always reinstall the filter before using the vac for dry material pickup.

**CAUTION:** Do not remove the filter cage or float. It is there to shut off airflow when the drum is full of liquids.

### Dry Filter

1. Some removal of dry debris can be accomplished without removing the filter from the vac by slapping your hand on top of the lid while the vac is turned off.
2. For best results of cleaning due to accumulated dust, clean the filter in an open area. Cleaning SHOULD be done outdoors and not in the living quarters.
3. After filter removal from vac, remove the dry debris by gently tapping the filter against the inside wall of your dust drum and the debris will loosen and fall.
4. For thorough cleaning of dry filter with fine dust (no debris) you may run water through it as described under "Wet Filter".

### Wet Filter

After filter is removed, run water through the filter from a hose or spigot. Take care that water pressure from the hose is not strong enough to damage filter. Remember: To dry a filter quickly, reinstall the filter on the vac and allow the unit to run for approximately 10 minutes. The clean air rushing through the filter will dry it.

### Installation

Refer to "Filter Assembly". Allow the filter to dry before reinstalling and storing the vac.

**WARNING:** To assure product SAFETY and RELIABILITY, repairs and adjustment should be performed by Sears Service Centers, always using Sears replacement parts.

## Wet Nozzle


To pick up liquids off a smooth surface, use the 2-1/2" wet nozzle accessory supplied with your wet/dry vac. To use this nozzle, simply attach the nozzle to the end of an extension wand.

Connect a second extension wand to the first, and connect the 2-1/2" x 7' hose to the extension wand.

Liquids may be picked up by dragging the nozzle across the surface. The squeegee will dry the surface as you vacuum.

Replacement rubber for the squeegee nozzle may be obtained through Sears Parts. If the rubber becomes worn, it may be flipped over for use on the opposite side or replaced. (Replacement service part #822256). To reverse or replace the squeegee:

1. Lay the wet nozzle on a flat surface with the round inlet opening facing up and the two latches close to you as shown.

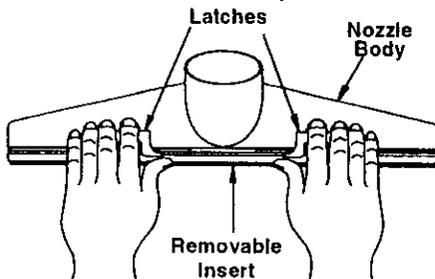


2. Using both hands, position each thumb on the removable insert, (below the latches) and two fingers of each hand on each latch, lift and disengage the two latches from the tabs on the nozzle body.
3. Gently pull the latches toward yourself to remove the insert.


To reinstall the removable insert correctly, follow these steps:

1. Place the removable insert on a flat surface with the pins positioned upward and the latches close to you as shown. Place the rubber squeegee on the insert, with the pins fitting through the matching holes in the squeegee. (Make sure the new working edge is located


farthest from you.)



2. Using both hands, lower the nozzle body onto the insert and squeegee with the round opening of the nozzle closest to you. With fingers on the far side and thumbs holding the latches of the removable insert, flip the nozzle over so the latches are on the top and the round inlet opening is facing away from you. Make sure the squeegee stays on the insert pins.

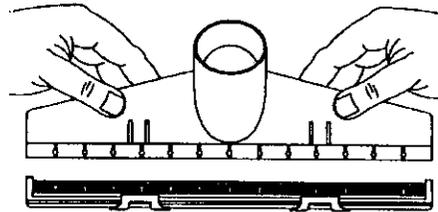


3. Press down with each thumb below the latching tabs until you see and hear the removable insert snap into the nozzle body. Snap the latches over the locking tabs into their original position.

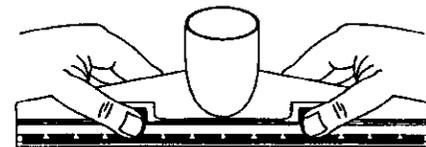

4. Inspect the pins of the insert to make sure they fit through the holes of the squeegee and fit into the matching slots in the nozzle body.

**NOTE:** If the pins are out position, hold the nozzle assembly with both hands and gently twist in opposite directions. The insert pins should snap into proper position.

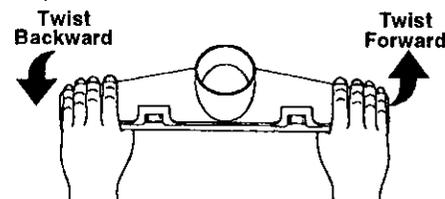

The wet nozzle assembly is ready for wet pickup use.

**Notes**

---

## Repair Parts

### 16 Gallon Wet/Dry Vac With Detachable Blower Model Number 113.177060

Always order by Part Number - Not by Key Number

#### WARNING

#### SERVICING OF DOUBLE-INSULATED WET/DRY VAC


In a double-insulated Wet/Dry Vac, two systems of insulation are provided instead of grounding. No grounding means is provided on a double-insulated appliance, nor should a means for grounding be added. Servicing a double-insulated Wet/Dry Vac requires extreme care and knowledge of the system, and should be done only by qualified service personnel. Replacement parts for a double-insulated Wet/Dry Vac must be identical to the parts they replace. Your double-insulated Wet/Dry Vac is marked with the words "DOUBLE INSULATED" and the symbol  (square within a square) may also be marked on the appliance.

Key No.	Part No.	Description	Key No.	Part No.	Description
1	9-17816	†Filter (red stripe)	18	823871	Switch
2	9-16937	†Filter Plate	19	73352	Nut-Hex Flange 1/4-20
3	9-16938	†Filter Nut	20	15534-1	Washer
4	509182	Drum	21	818413	Blower Wheel
5	73185	Drain Cap	22	818961	Spacer
6	822479	Wheel Assembly	23	822459	Collector Gasket
7	822478	Accessory Caddy	24	822460	Motor/Collector (Includes Key Nos. 19, thru 22)
8	822481	Twin Wheel Caster	25	822480	Blowing Diffuser
9	509238	Filter Cage/Float	26	822482	Male-Male Adapter
10	822473	Lid	27	822471	Motor Cover
11	822475	Drum Latch	28	820563-7	Screw-Pan Ser. Hd. Ty AB #10 x 3/4
12	822476	Power Head Latch	29	STD610805	*Screw-Pan Hd. Ty "B" #8 x 1/2
13	822442	Lid Gasket	30	9-17820	†Hose 2 1/2" x 7'
14	STD611007	*Screw Pan Hd. Ty AB #10 x 3/4	31	824406	Adapter Male/Female
15	822458	Intake Shield/Lid (Includes Key Nos. 14 & 16)	—	SP6059	Owners Manual (Not illustrated)
16	822457	Foam Pad			
17	822467-1	Cord w/Plug			

† Stock Item - May be secured through the hardware department of most Sears retail stores.

\* Standard Hardware Item - May be purchased locally

# Repair Parts

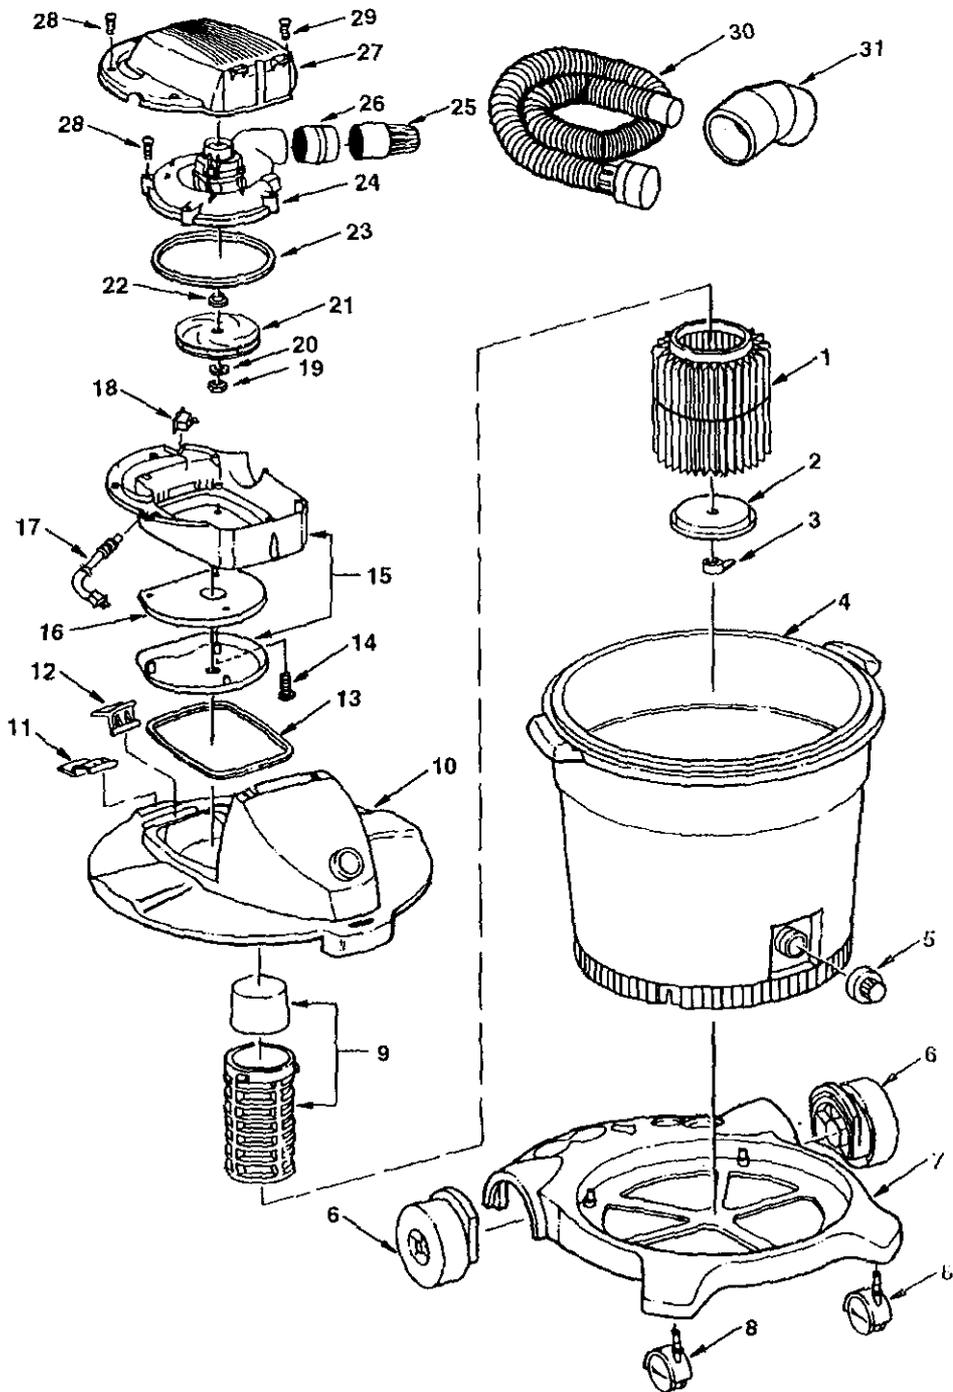

# CRAFTSMAN®

## Accessories and Attachments

Get more versatility from your Craftsman wet/dry vacuum by adding these accessories.

Additional wet/dry vac accessories may be purchased at your local Sears retail store or Sears/Craftsman Power and Hand Tool Catalog.




17820 2-1/2"x7' Hose




16964 Extension Wands



16931/16990 Caster Feet for Storage

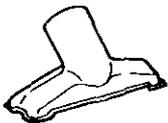

16922 Utility Nozzle

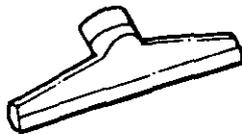

17817 Wet Nozzle



16925 Dry Nozzle



16978 Car Nozzle




16933 Blower Nozzle



16902 Crevice Tool



16915 Multipurpose Floor Tool

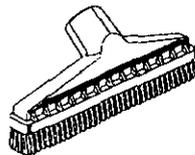

16926 14" Floor Brush



16901 Dusting Brush



16947, 16948 Inflator Nozzle



17816 Paper Pleated Filter



16939 & 16940 Drum Liners

NOTE: Most Accessories Are Available In 2-1/2 Inch And 1-1/4 Inch Sizes



16934 Hose Grip



16917 Hose Joiner




16930 Hose Lock




16935 Gutter Nozzle

## Sawdust Collection Series

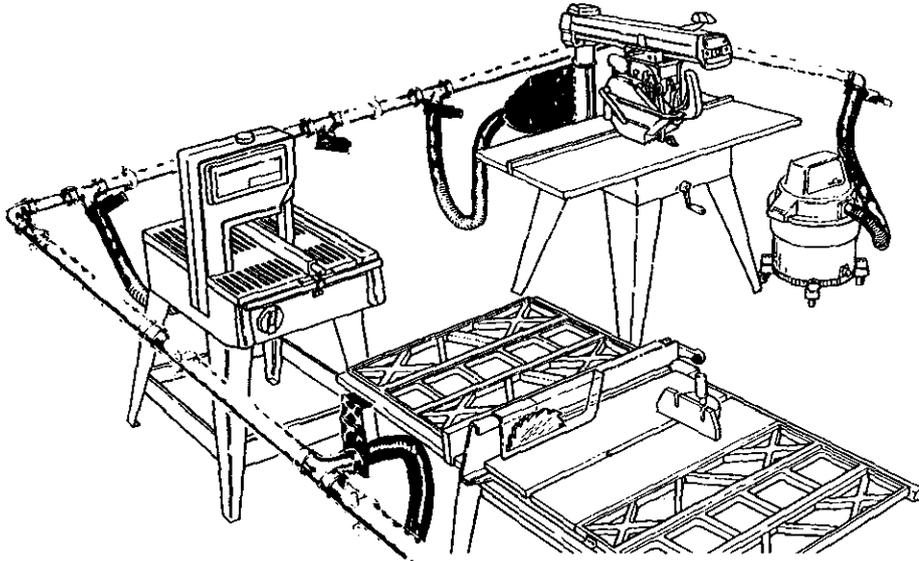

Whole-shop Sawdust Manifold-Type Collection System  
29964

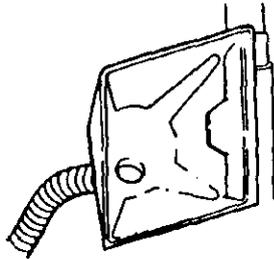

Radial Arm Saw  
Dust Collection Kit  
29963

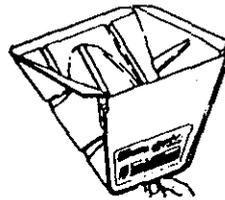



Table Saw Dust  
Collection Kit  
29962

**For the repair or replacement parts you need**

Call 7 am - 7 pm, 7 days a week

**1-800-366-PART**

(1-800-366-7278)

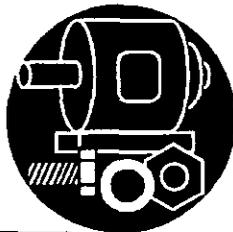

**For in-home major brand repair service**

Call 24 hours a day, 7 days a week

**1-800-4-REPAIR**

(1-800-473-7247)



**For the location of a  
Sears Repair Service Center in your area**

Call 24 hours a day, 7 days a week

**1-800-488-1222**



**For information on purchasing a Sears  
Maintenance Agreement or to inquire  
about an existing Agreement**

Call 9 am - 5 pm, Monday-Saturday

**1-800-827-6655**



**SEARS**  
**REPAIR SERVICES**

*America's Repair Specialists*

The model number will be found on the side of the power head.

When requesting service or ordering parts, always provide the following information:

- Product Type
- Model Number
- Part Number
- Part Description

Sears, Roebuck and Co., Hoffman Estates, IL. 60179 U.S.A.

Part No. SP6059

Form No. SP6059

Printed in U.S.A. 6/97