


TOSHIBA

FILE NO. 140-200403

SERVICE MANUAL

COLOR TELEVISION/ DVD VIDEO PLAYER

MD13P3

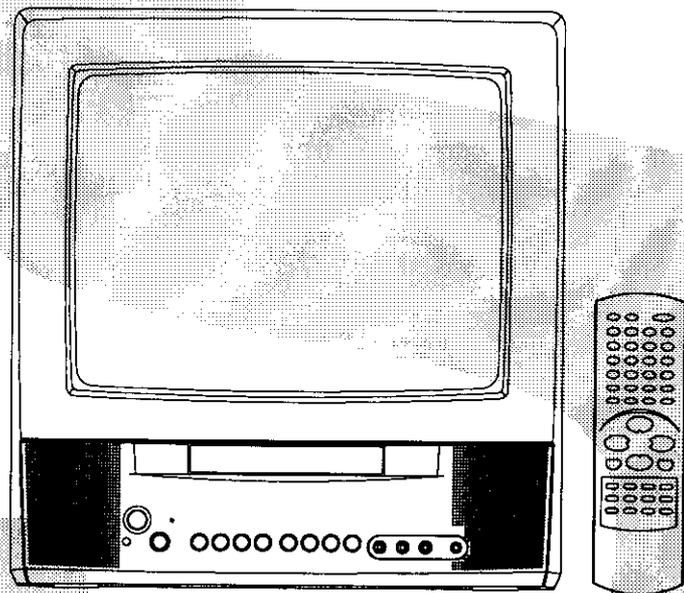

DOCUMENT CREATED IN JAPAN, Jan., 2004

CAUTION

THIS DIGITAL VIDEO PLAYER EMPLOYS A LASER SYSTEM.


TO ENSURE PROPER USE OF THIS PRODUCT, PLEASE READ THIS SERVICE MANUAL CAREFULLY AND RETAIN FOR FUTURE REFERENCE. SHOULD THE UNIT REQUIRE MAINTENANCE, CONTACT AN AUTHORIZED SERVICE LOCATION-SEE SERVICE PROCEDURE.

USE OF CONTROLS, ADJUSTMENTS OR THE PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

TO PREVENT DIRECT EXPOSURE TO LASER BEAM, DO NOT TRY TO OPEN THE ENCLOSURE. VISIBLE LASER RADIATION MAY BE PRESENT WHEN THE ENCLOSURE IS OPENED. DO NOT STARE INTO BEAM.

Location of the required Marking

The rating sheet and the safety caution are on the rear of the unit.

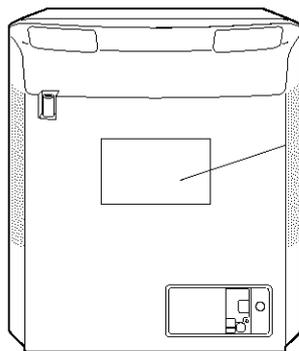

CERTIFICATION: COMPLIES WITH FDA
RADIATION PERFORMANCE STANDARDS,
21 CFR SUBCHAPTER J.

PREPARATION OF SERVICING

The laser diode used for a pickup head may be destroyed with external static electricity.

Moreover, even if it is operating normally after repair, when static electricity discharge is received at the time of repair, a life of product may become short.

Please perform the following measure against static electricity, be careful of destruction of a laser diode enough at the time of repair, and work.

- It works on the desk which performed measures against static electricity, such as conductive mat.
- Soldering iron with ground wire or ceramic type is used.
- A worker needs to use a ground conductive wrist strap for body.

SERVICING NOTICES ON CHECKING

1. KEEP THE NOTICES

As for the places which need special attentions, they are indicated with the labels or seals on the cabinet, chassis and parts. Make sure to keep the indications and notices in the operation manual.

2. AVOID AN ELECTRIC SHOCK

There is a high voltage part inside. Avoid an electric shock while the electric current is flowing.

3. USE THE DESIGNATED PARTS

The parts in this equipment have the specific characters of incombustibility and withstand voltage for safety. Therefore, the part which is replaced should be used the part which has the same character.

Especially as to the important parts for safety which is indicated in the circuit diagram or the table of parts as a \triangle mark, the designated parts must be used.

4. PUT PARTS AND WIRES IN THE ORIGINAL POSITION AFTER ASSEMBLING OR WIRING

There are parts which use the insulation material such as a tube or tape for safety, or which are assembled in the condition that these do not contact with the printed board. The inside wiring is designed not to get closer to the pyrogenic parts and high voltage parts. Therefore, put these parts in the original positions.

5. TAKE CARE TO DEAL WITH THE CATHODE-RAY TUBE

In the condition that an explosion-proof cathode-ray tube is set in this equipment, safety is secured against implosion. However, when removing it or serving from backward, it is dangerous to give a shock. Take enough care to deal with it.

6. AVOID AN X-RAY

Safety is secured against an X-ray by considering about the cathode-ray tube and the high voltage peripheral circuit, etc.

Therefore, when repairing the high voltage peripheral circuit, use the designated parts and make sure not modify the circuit.

Repairing except indicates causes rising of high voltage, and it emits an X-ray from the cathode-ray tube.

7. PERFORM A SAFETY CHECK AFTER SERVICING

Confirm that the screws, parts and wiring which were removed in order to service are put in the original positions, or whether there are the portions which are deteriorated around the serviced places serviced or not. Check the insulation between the antenna terminal or external metal and the AC cord plug blades. And be sure the safety of that.

(INSULATION CHECK PROCEDURE)

1. Unplug the plug from the AC outlet.
2. Remove the antenna terminal on TV and turn on the TV.
3. Insulation resistance between the cord plug terminals and the external exposure metal **[Note 2]** should be more than 1M ohm by using the 500V insulation resistance meter **[Note 1]**.
4. If the insulation resistance is less than 1M ohm, the inspection repair should be required.

[Note 1]

If you have not the 500V insulation resistance meter, use a Tester.

[Note 2]

External exposure metal: Antenna terminal

HOW TO ORDER PARTS

Please include the following informations when you order parts. (Particularly the VERSION LETTER.)

1. MODEL NUMBER and VERSION LETTER

The MODEL NUMBER can be found on the back of each product and the VERSION LETTER can be found at the end of the SERIAL NUMBER.

2. PART NO. and DESCRIPTION

You can find it in your SERVICE MANUAL.

IMPORTANT SAFEGUARDS

1. READ INSTRUCTIONS

All the safety and operating instructions should be read before the unit is operated.

2. RETAIN INSTRUCTIONS

The safety and operating instructions should be retained for future reference.

3. HEED WARNINGS

All warnings on the unit and in the operating instructions should be adhered to.

4. FOLLOW INSTRUCTIONS

All operating and use instructions should be followed.

5. CLEANING

Unplug this unit from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

6. ATTACHMENTS

Do not use attachments not recommended by the unit's manufacturer as they may cause hazards.

7. WATER AND MOISTURE

Do not use this unit near water. For example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.

8. ACCESSORIES

Do not place this unit on an unstable cart, stand, tripod, bracket, or table. The unit may fall, causing serious injury, and serious damage to the unit. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer.

- 8A. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.

9. VENTILATION

Slots and openings in the cabinet and in the back or bottom are provided for ventilation, to ensure reliable operation of the unit, and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the unit on a bed, sofa, rug, or other similar surface. This unit should never be placed near or over a radiator or heat source. This unit should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

10. POWER SOURCES

This unit should be operated only from the type of power source indicated on the rating plate. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For units intended to operate from battery power, or other sources, refer to the operating instructions.

11. GROUNDING OR POLARIZATION

This unit is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug. If your unit is equipped with a 3-wire grounding-type plug, a plug having a third (grounding) pin, this plug will only fit into a grounding-type power outlet. This too, is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.

12. POWER-CORD PROTECTION

Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

13. LIGHTNING

To protect your unit from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the unit due to lightning and power line surges.

14. POWER LINES

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits, as contact with them might be fatal.

15. OVERLOADING

Do not overload wall outlets and extension cords, as this can result in a risk of fire or electric shock.

16. OBJECT AND LIQUID ENTRY

Do not push objects through any openings in this unit, as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid into the unit.

PORTABLE CART WARNING
(symbol provided by RETAC)



S3125A

17. OUTDOOR ANTENNA GROUNDING

If an outside antenna or cable system is connected to the unit, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NFPA 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

18. SERVICING

Do not attempt to service this unit yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

19. DAMAGE REQUIRING SERVICE

Unplug this unit from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- a. When the power-supply cord or plug is damaged.
- b. If liquid has been spilled, or objects have fallen into the unit.
- c. If the unit has been exposed to rain or water.
- d. If the unit does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the unit to its normal operation.
- e. If the unit has been dropped or the cabinet has been damaged.
- f. When the unit exhibits a distinct change in performance, this indicates a need for service.

20. REPLACEMENT PARTS

When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original parts.

Unauthorized substitutions may result in fire, electric shock or other hazards.

21. SAFETY CHECK

Upon completion of any service or repairs to this unit, ask the service technician to perform safety checks to determine that the unit is in proper operating condition.

22. WALL OR CEILING MOUNTING

The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

23. HEAT

The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

24. DISC TRAY

Keep your fingers well clear of the disc tray as it is closing. It may cause serious personal injury.

25. CONNECTING

When you connect the product to other equipment, turn off the power and unplug all of the equipment from the wall outlet. Failure to do so may cause an electric shock and serious personal injury. Read the owner's manual of the other equipment carefully and follow the instructions when making any connections.

26. SOUND VOLUME

Reduce the volume to the minimum level before you turn on the product. Otherwise, sudden high volume sound may cause hearing or speaker damage.

27. SOUND DISTORTION

Do not allow the product output distorted sound for a longtime. It may cause speaker overheating and fire.

28. HEADPHONES

When you use the headphones, keep the volume at a moderate level. If you use the headphones continuously with high volume sound, it may cause hearing damage.

29. LASER BEAM

Do not look into the opening of the disc tray or ventilation opening of the product to see the source of the laser beam. It may cause sight damage.

30. DISC

Do not use a cracked, deformed, or repaired disc. These discs are easily broken and may cause serious personal injury and product malfunction.


31. NOTE TO CATV SYSTEM INSTALLER

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

IMPORTANT SAFEGUARDS

(CONTINUED)

EXAMPLE OF ANTENNA GROUNDING AS PER THE NATIONAL ELECTRICAL CODE

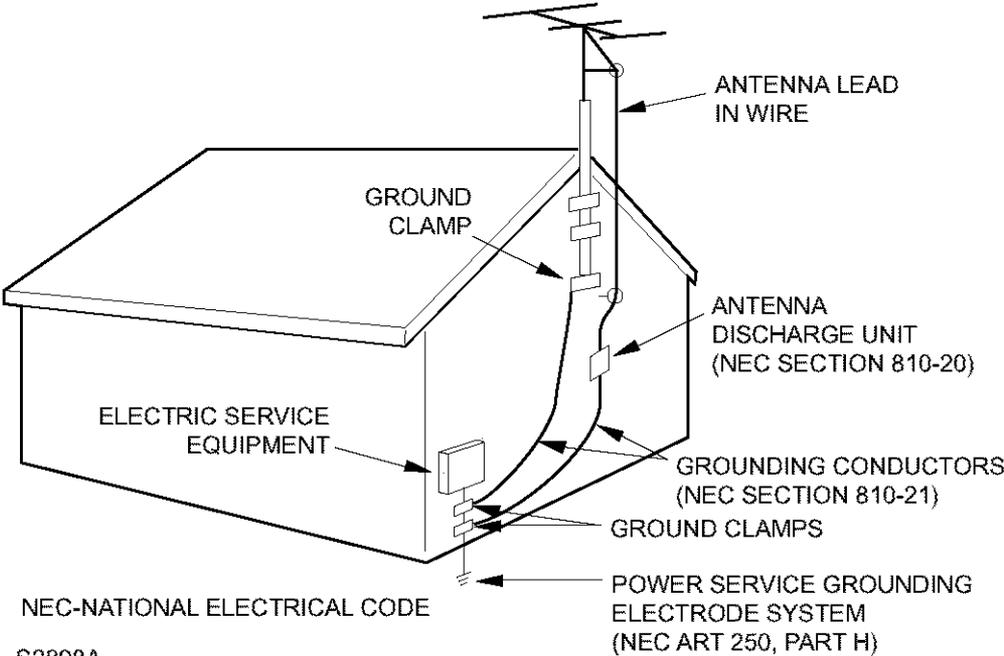

DISC REMOVAL METHOD AT NO POWER SUPPLY

1. Remove the Back Cabinet and AV PCB/DVD Block. (Refer to item 1 of the DISASSEMBLY INSTRUCTIONS.)
2. Slide the Rack Loading (White) toward the arrow direction by using a minus driver to release the lock. (Refer to Fig. 1)
3. Draw the Tray.

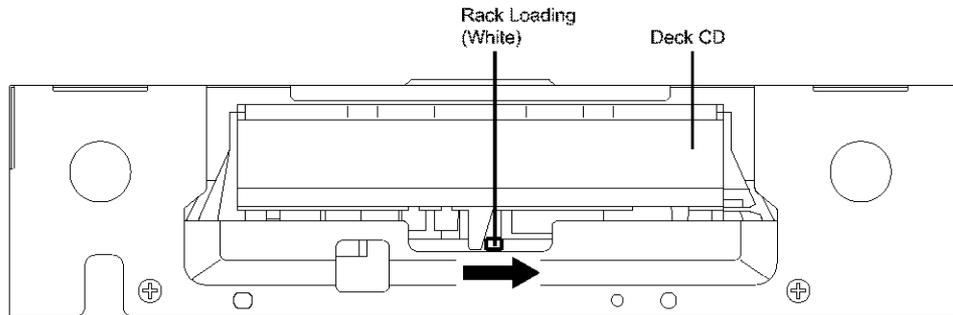


Fig. 1

PARENTAL CONTROL - RATING LEVEL 4 DIGIT PASSWORD CANCELLATION

If the stored 4 digit password in the Rating Level menu needs to be cancelled, please follow the steps below.

1. Turn Unit ON.
2. Press and hold the 'STOP' key on the front panel.
3. Simultaneously press and hold the '7' key on the remote control unit.
4. Hold both keys for more than 3 seconds.
5. The On Screen Display message 'PASSWORD CLEAR' will appear.
6. The 4 digit password has now been cleared.

TRAY LOCK

Tray cannot be opened by setting the Tray Lock, please follow the steps below.

1. Turn Unit ON.
2. Set the DVD to the Stop Mode.
3. Press and hold the '9' key on the remote control unit.
4. Simultaneously press and hold the 'STOP' key on the front panel.
5. Hold both keys for more than 3 seconds.
6. Press the OPEN/CLOSE key on the front panel to check the Tray Lock setting.

NB: No indications on the screen when the Tray Lock is setting.

To unlock the Tray Lock, please follow the steps below.

1. Turn Unit ON.
2. Set the DVD to the Stop Mode.
3. Set the VOLUME to minimum.
4. Press and hold the 'VOL. DOWN' button on the front panel.
5. Simultaneously press and hold the '4' key on the remote control unit.
6. Hold both keys for more than 1 second.
7. The On Screen Display message 'INITIALIZE5 COMPLETE' will appear.
8. The Tray Lock has now been cleared.

NB: The above procedure will reset ALL of the player's settings to the default factory state.

TABLE OF CONTENTS

CAUTION	A1-1
SERVICING NOTICES ON CHECKING	A1-2
HOW TO ORDER PARTS	A1-2
IMPORTANT SAFEGUARDS	A1-3~A1-5
DISC REMOVAL METHOD AT NO POWER SUPPLY	A1-6
PARENTAL CONTROL-RATING LEVEL	A1-6
TRAY LOCK	A1-6
TABLE OF CONTENTS	A2-1
GENERAL SPECIFICATIONS	A3-1~A3-6
DISASSEMBLY INSTRUCTIONS	
1. REMOVAL OF MECHANICAL PARTS AND P. C. BOARDS	B1-1, B1-2
2. REMOVAL OF DVD DECK PARTS	B2-1~B2-4
3. REMOVAL OF ANODE CAP	B3-1
4. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC	B4-1, B4-2
SERVICE MODE LIST	C-1
CONFIRMATION OF HOURS USED	C-1
WHEN REPLACING EEPROM (MEMORY) IC	C-2
ELECTRICAL ADJUSTMENTS	D-1~D-6
BLOCK DIAGRAMS	
DVD	E-1, E-2
TV	E-3, E-4
POWER	E-5, E-6
PRINTED CIRCUIT BOARDS	
DVD	F-1, F-2
AV/CRT	F-3~F-6
RELAY/SW	F-7, F-8
SCHEMATIC DIAGRAMS	
MPEG/MICON	G-1, G-2
MEMORY	G-3, G-4
RF AMP/DSP	G-5, G-6
AUDIO/VIDEO	G-7, G-8
REGULATOR	G-9, G-10
MICON/TUNER	G-11, G-12
VIF/SIF/CHROMA	G-13, G-14
SOUND AMP	G-15, G-16
IN/OUT	G-17, G-18
STEREO	G-19, G-20
DEFLECTION	G-21, G-22
CRT	G-23, G-24
POWER	G-25, G-26
RELAY/SW/FG	G-27, G-28
INTERCONNECTION DIAGRAM	G-29, G-30
WAVEFORMS	H-1~H-3
MECHANICAL EXPLODED VIEWS	I1-1~I1-3
DVD DECK EXPLODED VIEW	I2-1
MECHANICAL REPLACEMENT PARTS LIST	J1-1
DVD DECK PLACEMENT PARTS LIST	J2-1
ELECTRICAL REPLACEMENT PARTS LIST	J3-1~J3-5

GENERAL SPECIFICATIONS

G-1	TV System	CRT	CRT Size / Visual Size	13 inch / 335.4 mmV	
			CRT Type	Normal	
			Deflection	90 degree	
			Magnetic Field	+0.45G / 0.18G	
			BV/BH		
		Color System		NTSC	
		Speaker	Position	2 Speaker	
			Size	Front	
			Impedance	1.5 x 2.7 inch	
				8 ohm	
		Sound Output	Max	1.5W + 1.5W	
			10%(Typical)	1.0W + 1.0W	
G-2	DVD System	Color System		NTSC	
		Disc		DVD, CD-DA, CD-R/RW, Video CD	
		Disc Diameter		120 mm , 80 mm	
		Deck	Disc Loading System	Front Loading	
			Motor	2 Motors	
		Pick up		1-Lens 2-Beams System	
		Playback time(Max)	DVD 1-Layer	135min (4.7GB)	
			DVD 2-Layer	245min (8.5GB)	
			CD	74min	
			Video CD	74min	
		Search speed	Fwd	2-20 times / 4 step	
			Actual	2-45 times (DVD, VIDEO CD)	
				4-40 times (CD)	
	Rev	2-20 times / 4 step			
	Actual	2-45 times (DVD, VIDEO CD)			
		4-40 times (CD)			
	Slow speed	Fwd 1/7 - 1/2 times			
		Actual	--		
		Rev 1/7 - 1/2 times			
		Actual	--		
G-3	Tuning System	Broadcasting System		US System M	
		Tuner and Receive CH	System	1Tuner	
			Destination	US(w/CATV)	
			Tuning System	F-Synth	
			Input Impedance	VHF/UHF 75 Ohm	
			CH Coverage	2~69, 4A, A-5~A-1, A~I, J~W, W+1~W+84	
		Intermediate Frequency	Picture(FP)	45.75MHz	
			Sound(FS)	41.25MHz	
			FP-FS	4.50MHz	
			Preset CH	No	
	Stereo/Dual TV Sound		US-Stereo		
	Tuner Sound Muting		Yes		
G-4	Signal	Video Signal	Input Level	1 V p-p/75 ohm	
			Output Level	--	
			S/N Ratio (Weighted)	--	
			Horizontal Resolution at DVD Mode	--	
				--	
		RGB Signal	Output Level	--	
		Audio Signal	Input Level	-8.0dBm/50k ohm	
			Output Level	--	
			Digital Output Level	0.5 V p-p/75 ohm	
			S/N Ratio at DVD (Weighted)	--	
			Harmonic Distortion	--	
			Frequency Response :	at DVD	--
				at Video CD	--
				at SVCD	--
		at CD	--		
G-5	Power	Power Source	AC	120V, 60Hz	
			DC	--	
		Power Consumption		at AC	75W at 120V 60Hz
				at DC	--
			Stand by (at AC)		5W at 120V 60Hz
	Per Year		-- kWh/Year		
	Protector	Power Fuse		Yes	
G-6	Regulation	Safety		UL	
		Radiation		FCC	
		X-Radiation		DHHS	
		Laser		DHHS	
G-7	Temperature	Operation		+5oC ~ +40oC	
		Storage		-20oC ~ +60oC	
G-8	Operating Humidity			Less than 80% RH	

GENERAL SPECIFICATIONS

G-8	On Screen Display	Menu(TV)		Yes
		Menu Type		Icon
		TV Setup		Yes
		Picture		Yes
		Audio		No
		Picture Preference		Yes
		Channel Setup		Yes
		TV/CATV		Yes
		Auto CH Memory		Yes
		Add/ Delete		Yes
		V-chip Setup		Yes
		Language		Yes
		Sleep Timer		Yes
		CH / AV(LINE) / DVD		Yes
		Stereo/Audio Output		Yes
		Bilingual		No
		SAP		Yes
		Control		Volume
		Level		Bright / Contrast / Sharpness / Color
		Tint		Yes
		Bass/Treble/Balance		No
		Caption / Text		Yes
		Auto Search/Position		No
		Game		Yes
		Mute		Yes

GENERAL SPECIFICATIONS

G-10	On Screen Display	Menu (DVD)		Yes
		Menu Type		Character
		Language		Yes
		Menu		Yes
		Subtitle		Yes
		Audio		Yes
		Picture		Yes
		TV Screen Size		Yes
		OSD Display On/Off		Yes
		JPEG Interval		No
		Select Files		No
		Sound		Yes
		DRC (Dynamic Range Control)		Yes
		dts Decode		No
		Output(5.1ch/ 2ch)		No
		Surround On/Off		No
		Center On/Off		No
		Sub Woofer On/Off		No
		Parental		Yes
		Password Lock/ Un Lock		Yes
		Rating Level		Yes
		Other		Yes
		OSD Language(Set up Language)		Yes
		Output(RGB/Composite)		No
		Open		Yes
		Close		Yes
		No disc		Yes
		Reading		Yes
		Play		Yes
		Still/Pause		Yes
		Stop		Yes
		Prohibit Mark		Yes
		Step		Yes
		Skip(>>)		Yes
		Skip(<<)		Yes
		Random		Yes (CD, VIDEO CD)
		Repeat		Yes
		Slow+ ##		Yes
		Slow- ##		Yes
		Search+ ##		Yes
		Search- ##		Yes
		Jump		Yes
Resume		Yes		
Title No.		Yes		
Chapter No.		Yes		
Track No.		Yes		
Time		Yes		
Sub Title No.		Yes		
Angle No.		Yes		
Vocal On/Off		Yes		
Audio No.		Yes		
Audio Stereo L/R		Yes (Video CD)		
Zoom		Yes		
Marker No.		No		
Program Play Back		Yes (CD, VIDEO CD)		
Surround On/Off		No		
Screen Saver		No		
JPEG		Folder Name		
		File Name		
		File No		
		Time		
		Track No		
G-11	OSD Language	(TV)	English, French, Spanish	
		(DVD)	English, French, Spanish	
G-12	Clock and Timer	Sleep Timer	Max Time	120 Min
			Step	10 Min
			Program(On Timer / Off Timer)	No
		Wake Up Timer		No
	Timer Back-up (at Power Off Mode)	more than	-- Min Sec	

GENERAL SPECIFICATIONS

G-13	Remote Control	Unit	RC-GD	
		Glow in Dark Remocon	Yes	
		Format	NEC	
		Custom Code	71-8E h	
		Power Source	Voltage(D.C) UM size x pcs	3V UM-4 x 2 pcs
		Total Keys		45 Key
		Keys	Power	Yes
			1	Yes
			2	Yes
			3	Yes
			4	Yes
			5	Yes
			6	Yes
			7	Yes
			8	Yes
			9	Yes
			0	Yes
			Play	Yes
			Stop	Yes
			Search+	Yes
			Search-	Yes
			Skip+	Yes
			Skip-	Yes
			Slow+	Yes
			Slow-	Yes
			Pause	Yes
			Call	Yes
			TV/DVD	Yes
			Cancel	Yes
			Audio Select	Yes
			Angle	Yes
			Subtitle	Yes
			Top Menu	Yes
			Set up/ Menu	Yes
			DVD Menu	Yes
			Return	Yes
			Up/ Set+/ CH Up	Yes
			Down/ Set-/ CH Down	Yes
			Left/Select-/Vol Down	Yes
			Right/Select+/Vol Up	Yes
			Select/ Enter	Yes
			Play Mode	Yes
			Closed Caption	Yes
			Input Select	Yes
			Repeat A-B	Yes
	Zoom/ Quick View	Yes		
	Mute	Yes		
	Open/Close	Yes		
	Sleep	Yes		
	Jump	Yes		
	Game	Yes		

GENERAL SPECIFICATIONS

G-14	Features	CATV	Yes	
		Auto Shut Off	Yes	
		Auto CH Memory	Yes	
		V-Chip	USA V-chip CANADA V-chip	Yes No
		Auto Search		No
		SAP		Yes
		Game Position		Yes
		FM Transmitter		No
		Energy Star		No
		Closed Caption		Yes
		Comb Filter		No
		Protect of FBT Leak Circuit		Yes
		Choke Coil		No
		Power On Memory		No
		Tray Lock		Yes
		Parental Lock (DVD Only)		Yes
		Video CD Playback		Yes
		SVCD Playback		No
			Overlay Graphics And Text	No
			Command List	No
			Entry Point Jump	No
		MP3 Playback		No
		WMA Playback		No
		JPEG Playback		No
		Digital Out	(Dolby Digital)	Yes
			(MPEG)	Yes
			(PCM)	Yes
			(DTS)	Yes
		Down Mix Out	(Dolby Digital)	Yes
			(DTS)	No
		Surround (Tru Surround)		No
		Screen Saver		No
		Picture Preference		Yes
Auto Setup		Yes		
Audio DAC		192kHz / 24bit		
G-15	Accessories	Owner's Manual	Language w/Guarantee Card	English Yes
		Remote Control Unit		Yes
		Battery		Yes
			UM size x pcs OEM Brand	UM-4 x 2 pcs No
		Rod Antenna		No
			Poles Terminal	No --
		Loop Antenna		No
			Terminal	--
		U/V Mixer		No
		300 ohm to 75 ohm Antenna Adapter		Yes
		Antenna Change Plug		No
		Guarantee Card		No
		Registration Card		Yes
		Warranty Card		No
		ESP Card		No
		Service Station List		No
		DC Car Cord (Center+)		No
		Columbia Offer Sheet		No
		Sheet Information (Return)		Yes

GENERAL SPECIFICATIONS

G-16	Interface	Switch	Front	Power (Tact)	Yes	
				Channel Up	Yes	
				Channel Down	Yes	
				Volume Up	Yes	
				Volume Down	Yes	
				Play	Yes	
				Open/Close	Yes	
				Skip(>>)	Yes	
				Skip(<<)	Yes	
				Still/Pause	No	
		Stop	Yes			
		Indicator	Rear	Main Power SW	No	
				Main Power SW	No	
		Indicator		Power	Yes (Red)	
				Stand-by On Timer	No No	
		Terminals	Front	Video Input	RCA x 1	
				Audio Input	RCA x 2(Stereo)	
				Other Terminal	Head Phone	
			Rear	Video Input	No	
				Audio Input	No	
Video Output	No					
Audio Output	No					
Digital Audio Output	Coaxial (DVD Only)					
Diversity	No					
DC Jack 12V(Center +)	No					
VHF/UHF Antenna Input	F Type					
G-17	Set Size	Approx. W x D x H (mm)		362x365x382		
G-18	Weight	Net (Approx.)		11.0kg (24.3lbs)		
		Gross (Approx.)		12.5kg (27.6lbs)		
G-19	Carton	Master Carton	No			
			Content	— Sets		
			Material	— / —		
			Dimensions W x D x H(mm)	—		
		Gift Box	Description of Origin		—	
					Yes	
			Material	Double/Full Color		
			W/Color Photo Label	No		
			Dimensions W x D x H(mm)	423x447x443		
			Design	As Per Buyer 's		
		Drop Test	Natural Dropping At	Description of Origin		Yes
				Height (cm)		1 Corner / 3 Edges / 6 Surfaces 62
Container Stuffing (40' container)			700 Sets			
G-20	Material	Cabinet	Front	PS 94V0 DECABROM		
			Rear	PS 94V0 DECABROM		
			Jack Panel	-		
		PCB	Non-Halogen Demand	No		
			Eyelet Demand	Yes		
G-21	Environment	Pb Free	Lead-free Solder	No		
			Other	No		
		Cd Free	No			

DISASSEMBLY INSTRUCTIONS

1. REMOVAL OF MECHANICAL PARTS AND P.C. BOARDS

1-1: BACK CABINET (Refer to Fig. 1-1)

1. Remove the 4 screws ①.
2. Remove the screw ② which are used for holding the Back Cabinet.
3. Remove the AC cord from the AC cord hook ③.
4. Remove the Back Cabinet in the direction of arrow.

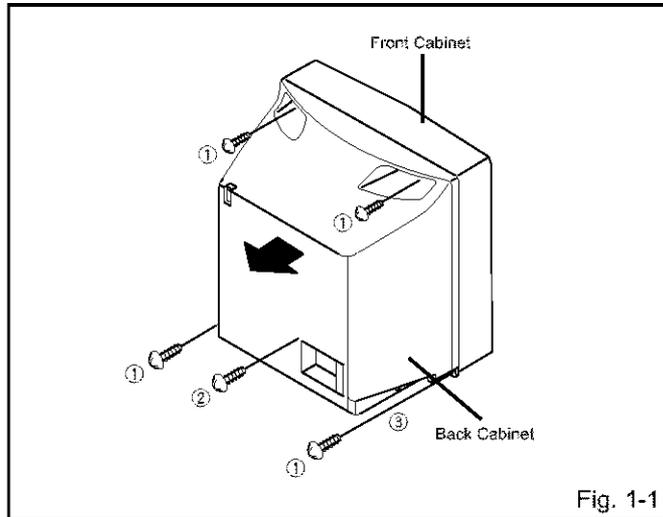


Fig. 1-1

1-2: CRT PCB (Refer to Fig. 1-2)

CAUTION: BEFORE REMOVING THE ANODE CAP, DISCHARGE ELECTRICITY BECAUSE IT CONTAINS HIGH VOLTAGE. BEFORE ATTEMPTING TO REMOVE OR REPAIR ANY PCB, UNPLUG THE POWER CORD FROM THE AC SOURCE.

1. Remove the Anode Cap.
(Refer to REMOVAL OF ANODE CAP)
2. Disconnect the following connector:
(CP801).
3. Remove the CRT PCB in the direction of arrow.

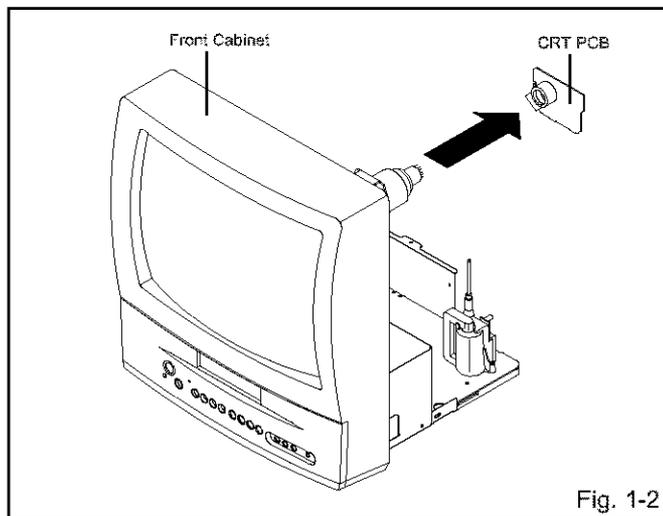


Fig. 1-2

1-3: AV PCB/DVD BLOCK (Refer to Fig. 1-3)

1. Remove the 2 screws ①.
2. Disconnect the following connectors:
(CP301, CP302, CP401 and CP3800).
3. Remove the AV PCB/DVD Block in the direction of arrow.

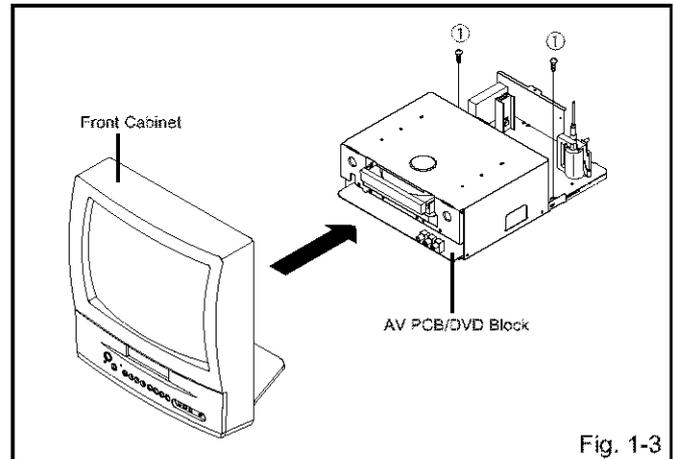


Fig. 1-3

1-4: DVD BLOCK (Refer to Fig. 1-4)

1. Remove the 11 screws ①.
2. Remove the Top Shield in the direction of arrow (A).
3. Disconnect the following connectors:
(CP8001 and CP8002).
4. Remove the 4 screws ②.
5. Remove the DVD Block in the direction of arrow (B).
6. Remove the screw ③.
7. Remove the Jack Shield.
8. Remove the AV PCB in the direction of arrow (C).

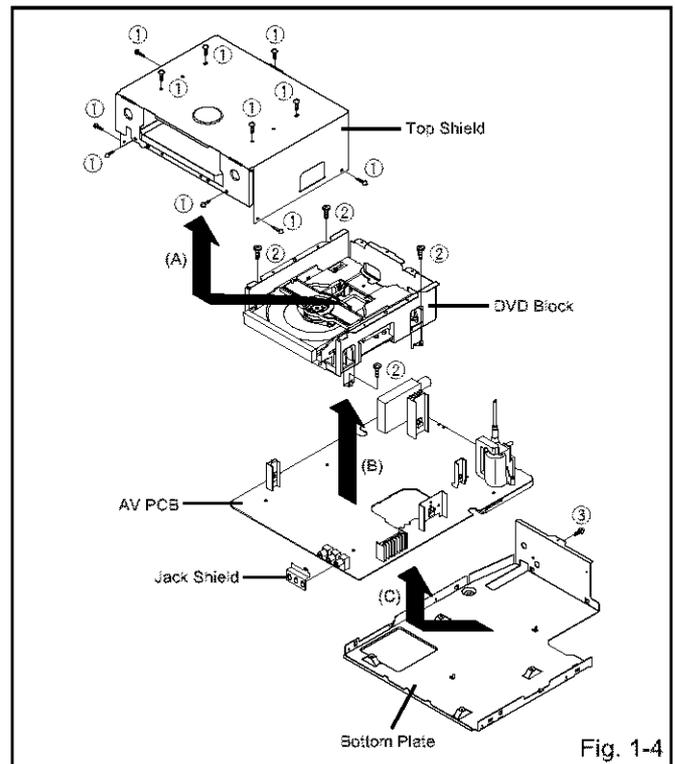


Fig. 1-4

DISASSEMBLY INSTRUCTIONS

1-5: DVD PCB/DVD DECK (Refer to Fig. 1-5)

1. Make the short circuit on the position as shown Fig. 1-5 using a soldering. If you remove the DVD Deck with no soldering, the Laser may be damaged.
2. Unlock the 2 supports ①.
3. Remove the Front Tray Plate in the direction of arrow (A).
4. Disconnect the following connectors:
(CP2601, CP2602 and CP2603).
5. Remove the 4 screws ②.
6. Remove the DVD Deck in the direction of arrow (B).
7. Remove the 4 screws ③.
8. Remove the DVD PCB in the direction of arrow (C).

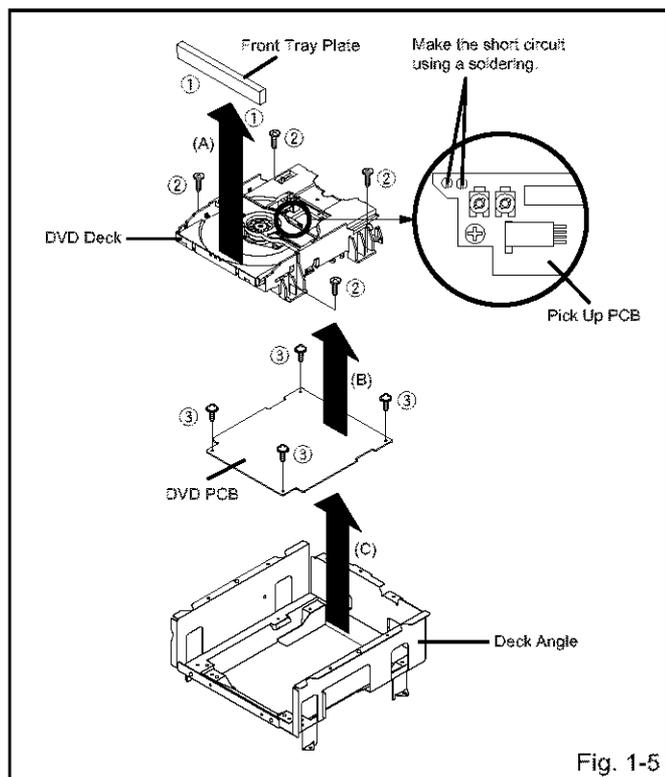


Fig. 1-5

NOTE

When the installation of the DVD Deck, remove all the soldering on the short circuit position after the connection of Pick Up PCB and DVD PCB connector.

DISASSEMBLY INSTRUCTIONS


2. REMOVAL OF DVD DECK PARTS

NOTE

1. Do not disassemble the DVD DECK PARTS except listed parts here. Minute adjustments are needed if the disassemble is done. If the repair is needed except listed parts, replace the DVD MECHA ASS'Y.


2-1: TRAY (Refer to Fig. 2-1-A)

1. Set the Tray opened. (Refer to the DISC REMOVAL METHOD AT NO POWER SUPPLY)
2. Unlock the support ① and remove the Tray.

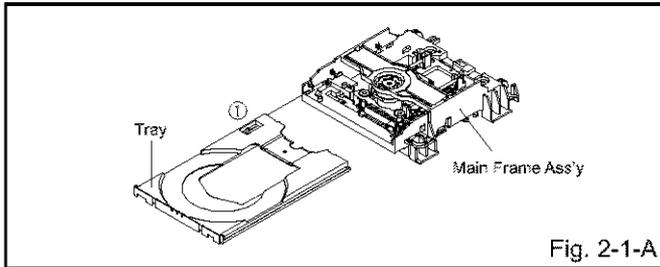


NOTE

1. In case of the Tray installation, install them as the circled section of Fig. 2-1-B so that the each markers are met.

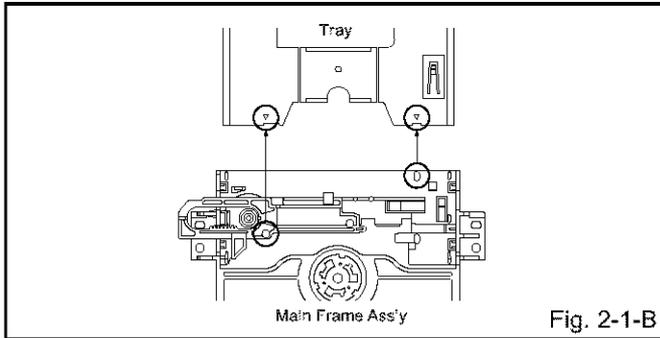


2-2: MAIN CHASSIS ASS'Y (Refer to Fig. 2-2-A)

1. Remove the Main Chassis Ass'y from the Insulator (R).
2. Unlock the support ①.
3. Remove the Main Chassis Ass'y.

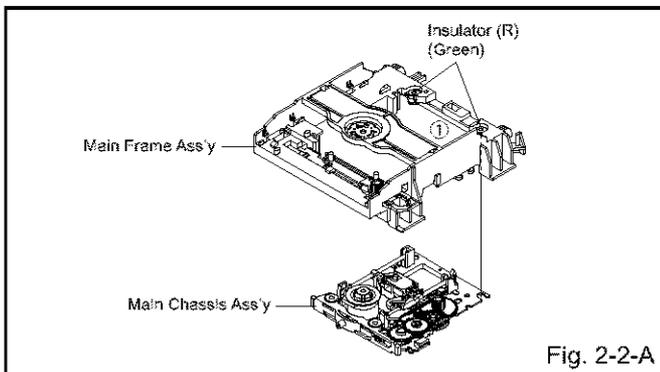


NOTE

1. In case of the Main Chassis Ass'y, install it from (1) to (6) in order. (Refer to Fig. 2-2-B)

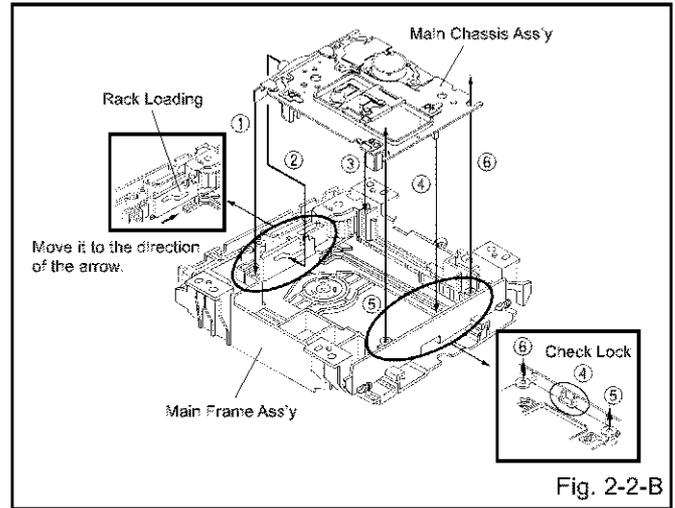


2-3: RACK LOADING/MAIN GEAR/ RACK LOADING SPRING/ RACK L SPRING (Refer to Fig. 2-3)

1. Remove the Rack L Spring.
2. Press down the catcher ① and slide the Rack Loading.
3. Remove the Rack Loading, Rack Loading Spring and Main Gear.

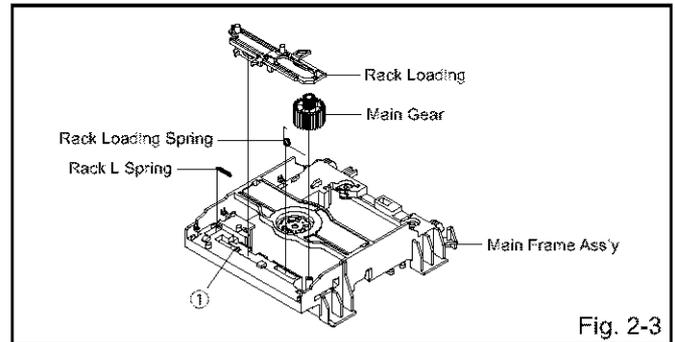

2-4: CLAMPER ASS'Y/INSULATOR(R)/LEVER SWITCH (Refer to Fig. 2-4-A)




1. Remove the screw ①.
2. Remove the Lever Switch.
3. Remove the 2 Insulator (R).
4. Press the Clamper and rotate the Clamper Plate clockwise, then unlock the 3 supports ②.
5. Remove the Clamper Plate, Clamper Magnet and Clamper.

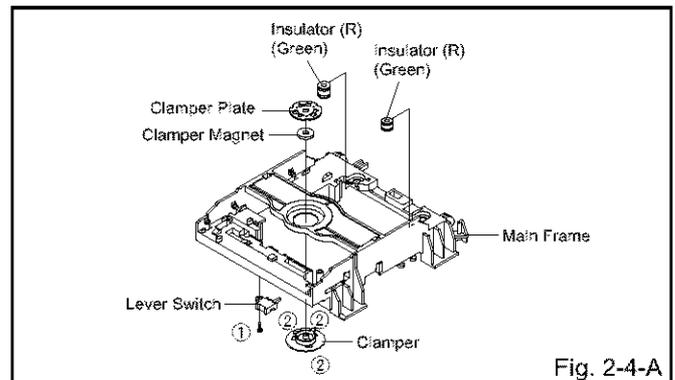

DISASSEMBLY INSTRUCTIONS


NOTE

1. When installing the Clamper Magnet, install it with the green face up.
2. When installing the wire of the Lever Switch, install it correctly as Fig. 2-4-B.
3. When installing the Lever Switch, install it correctly as Fig. 2-4-C.
4. In case of the Lever Switch installation, hook the wire on the Main Frame as shown Fig. 2-4-D.

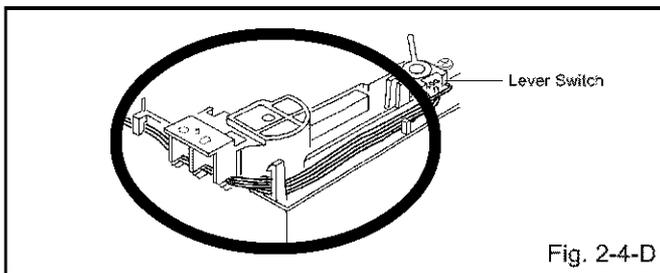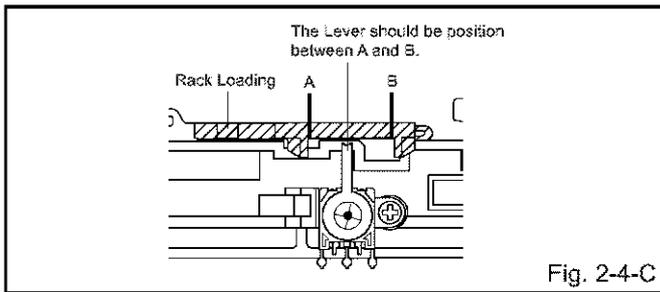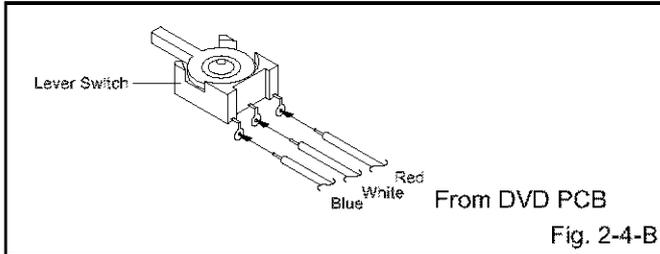


2-5: TRAVERSE HOLDER/INSULATOR (F) (Refer to Fig. 2-5-A)

1. Remove the Traverse Holder.
2. Remove the 2 Insulator (F).

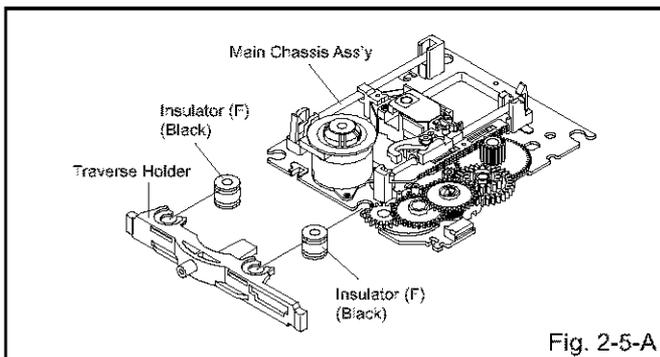


NOTE

1. After the installing of the Traverse Holder, check if the wire is like Fig. 2-5-B.

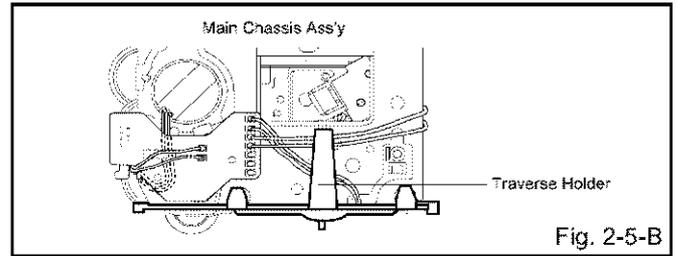


2-6: SWITCH PCB ASS'Y (Refer to Fig. 2-6-A)

1. Remove the screw ①.
2. Remove the Switch PCB Ass'y.

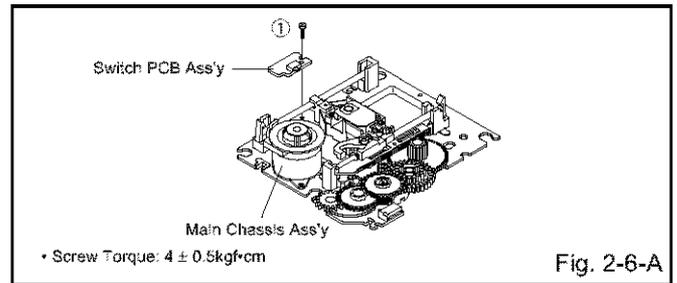


NOTE

1. When installing the wire of the Switch PCB, install it correctly as Fig. 2-6-B.

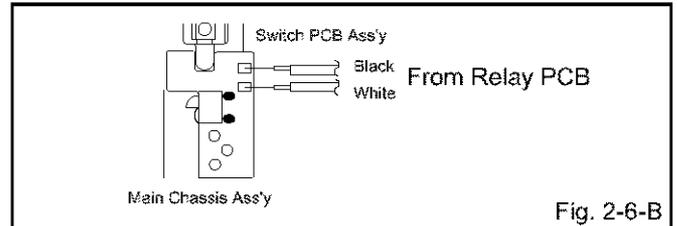

2-7: RACK FEED ASS'Y (Refer to Fig. 2-7-A)



1. Remove the screw ①.
2. Remove the Rack Feed 1 Spring, Rack Feed 1/2 and Rack Feed Lever.

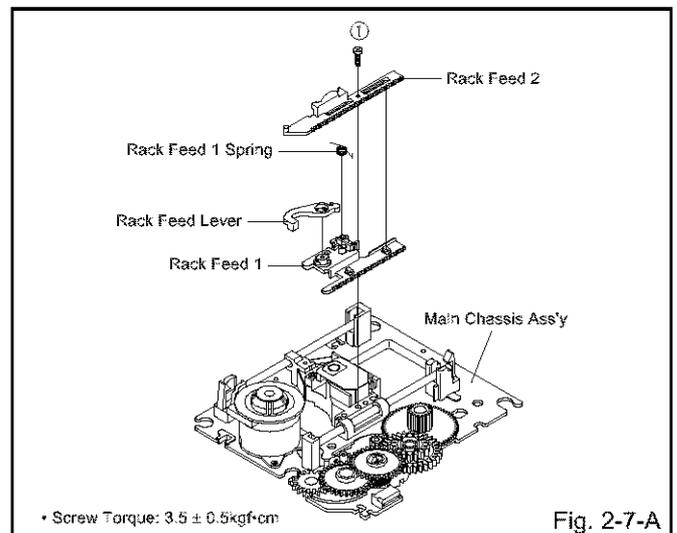

DISASSEMBLY INSTRUCTIONS


NOTE

1. After the assembly of the Rack Feed, check if the Rack Feed 1/2 is moving smoothly. (Refer to Fig. 2-7-B)
2. In case of the Rack Feed Ass'y installation, install correctly as Fig. 2-7-C.

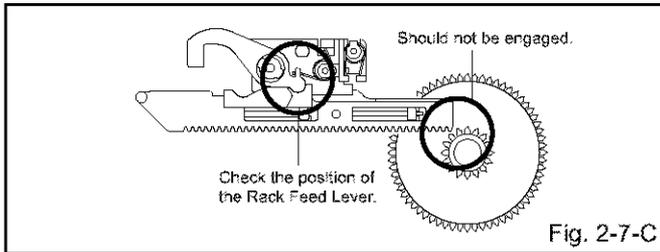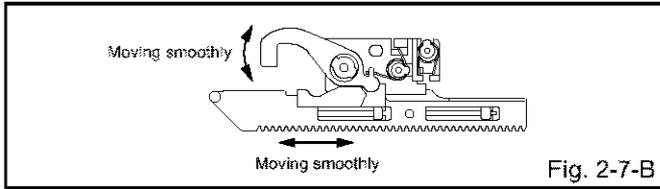


2-8: RELAY PCB ASS'Y (Refer to Fig. 2-8-A)

1. Remove the screw ①.
2. Remove the Relay PCB Ass'y.

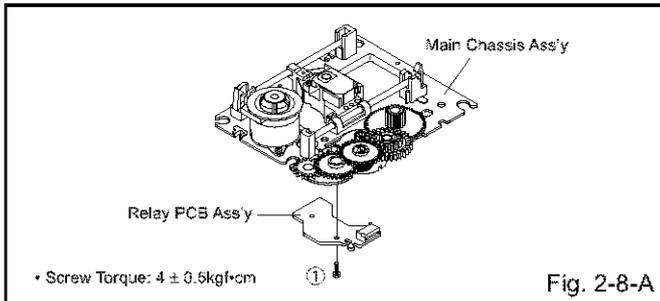


NOTE

1. When installing the wire of the Relay PCB, install it correctly as Fig. 2-8-B.

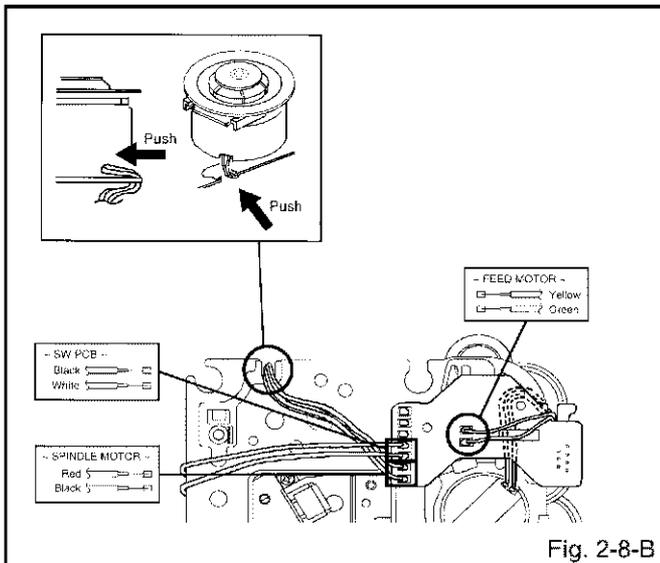



2-9: GEAR (Refer to Fig. 2-9-A)

1. Unlock the support ①.
2. Remove the Middle Gear 1/2/3, Idler Gear and Feed Gear.

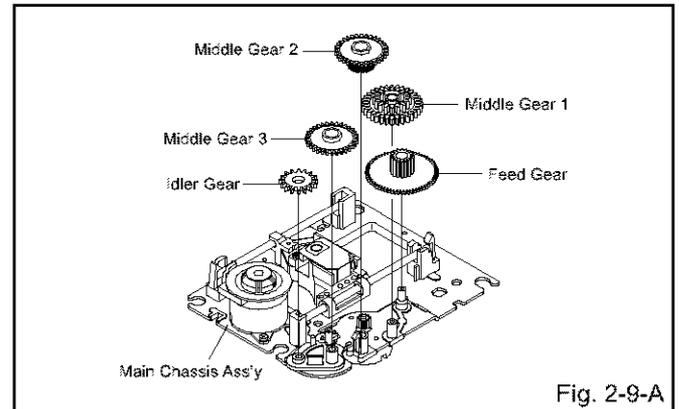


NOTE

1. In case of the Idler Gear installation, install correctly as Fig. 2-9-B.
2. When installing the Middle Gear 2, check if the Middle Gear 2 is locked correctly as Fig. 2-9-C.

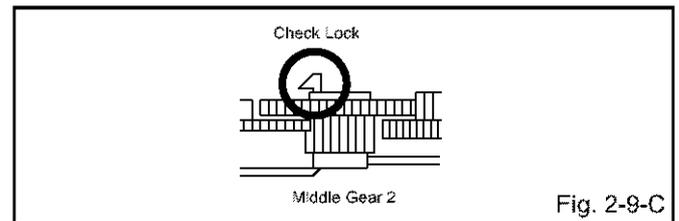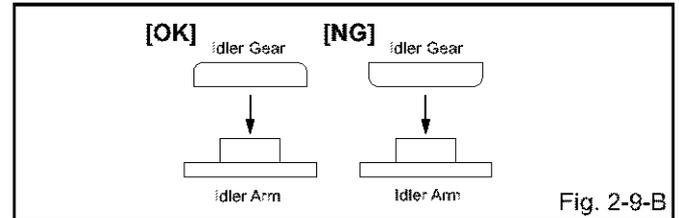

2-10: IDLER ARM (Refer to Fig. 2-10)


1. Remove the Idler Arm.

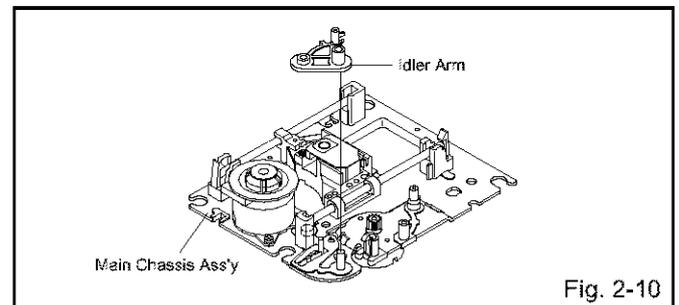

DISASSEMBLY INSTRUCTIONS



2-11: FEED MOTOR (Refer to Fig. 2-11-A)

1. Remove the 2 screws ①.
2. Remove the Feed Motor.
3. Remove the Motor Gear.

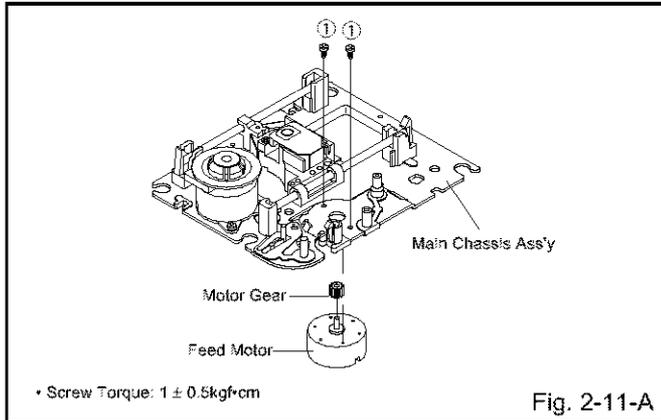

NOTE

1. In case of the Motor Gear installation, check if the value of the Fig. 2-11-B is correct.
2. When installing the Feed Motor, check if the cable is positioned as Fig. 2-11-C.

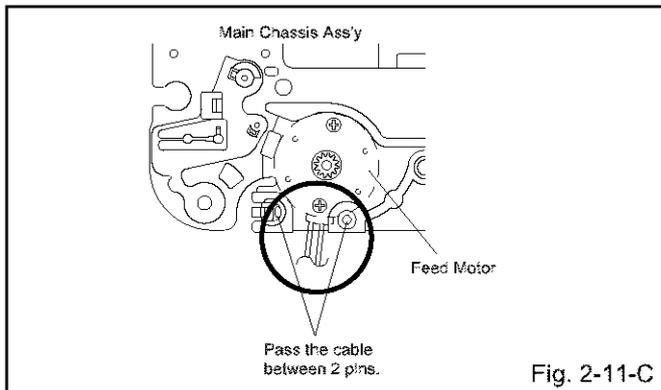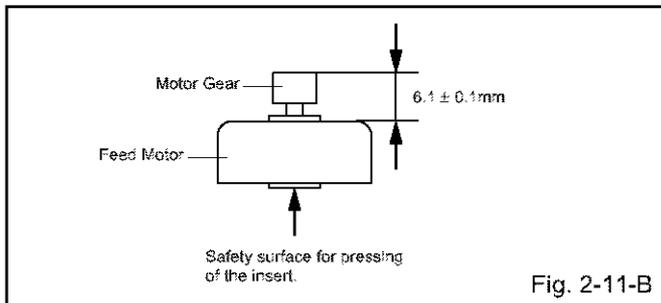

DISASSEMBLY INSTRUCTIONS


3. REMOVAL OF ANODE CAP

Read the following **NOTED** items before starting work.


- * After turning the power off there might still be a potential voltage that is very dangerous. When removing the Anode Cap, make sure to discharge the Anode Cap's potential voltage.
- * Do not use pliers to loosen or tighten the Anode Cap terminal, this may cause the spring to be damaged.

REMOVAL

1. Follow the steps as follows to discharge the Anode Cap. (Refer to Fig. 3-1.)
 Connect one end of an Alligator Clip to the metal part of a flat-blade screwdriver and the other end to ground. While holding the plastic part of the insulated Screwdriver, touch the support of the Anode with the tip of the Screwdriver. A cracking noise will be heard as the voltage is discharged.

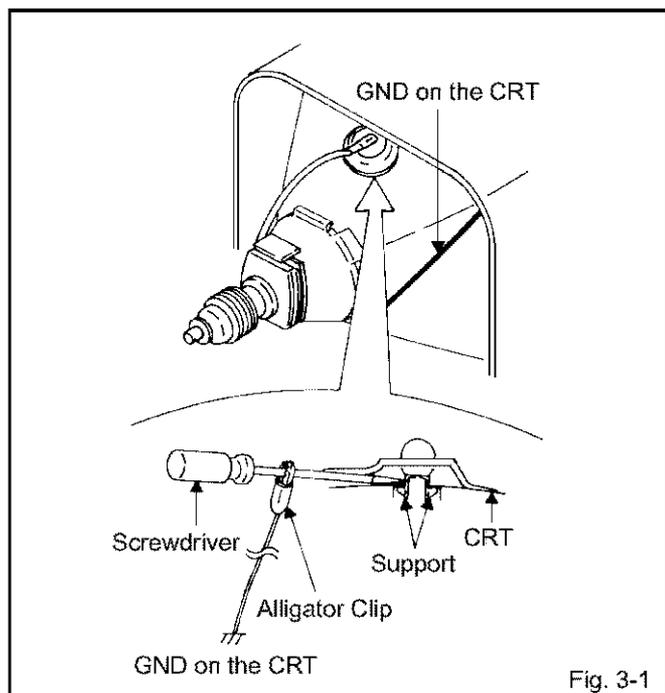

2. Flip up the sides of the Rubber Cap in the direction of the arrow and remove one side of the support. (Refer to Fig. 3-2.)

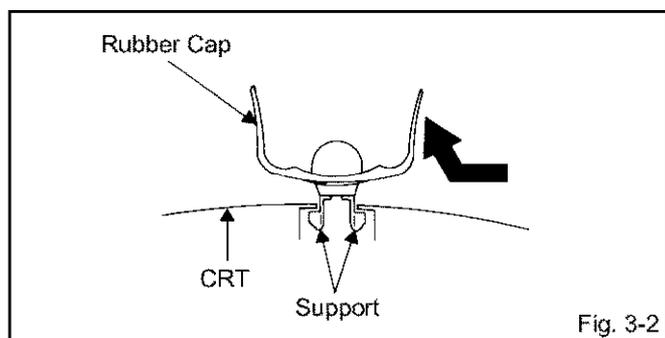

3. After one side is removed, pull in the opposite direction to remove the other.

NOTE


Take care not to damage the Rubber Cap.

INSTALLATION


1. Clean the spot where the cap was located with a small amount of alcohol. (Refer to Fig. 3-3.)

NOTE


Confirm that there is no dirt, dust, etc. at the spot where the cap was located.

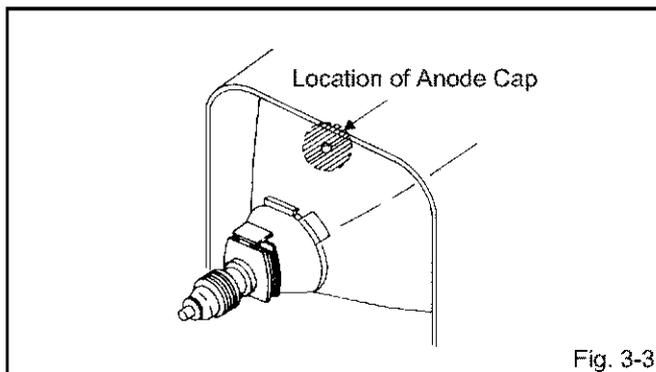

2. Arrange the wire of the Anode Cap and make sure the wire is not twisted.
3. Turn over the Rubber Cap. (Refer to Fig. 3-4.)

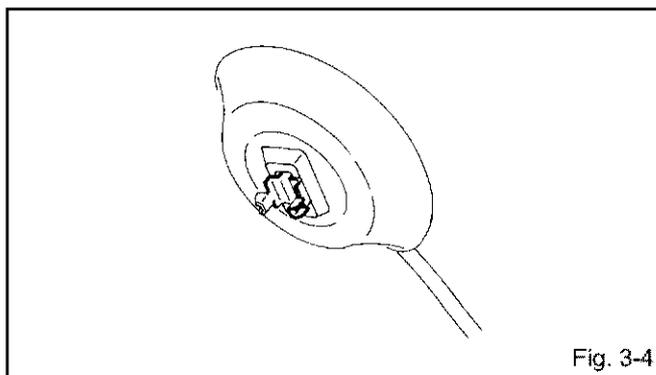

4. Insert one end of the Anode Support into the anode button, then the other as shown in Fig. 3-5.

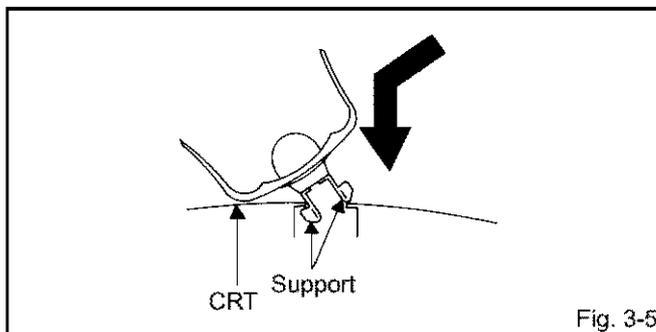

5. Confirm that the Support is securely connected.
6. Put on the Rubber Cap without moving any parts.

DISASSEMBLY INSTRUCTIONS


4. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC

REMOVAL

1. Put the Masking Tape (cotton tape) around the Flat Package IC to protect other parts from any damage. (Refer to Fig. 4-1.)

NOTE


Masking is carried out on all the parts located within 10 mm distance from IC leads.

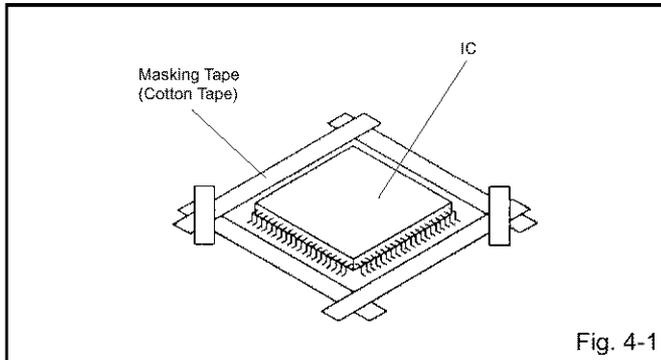

2. Heat the IC leads using a blower type IC desoldering machine. (Refer to Fig. 4-2.)

NOTE


Do not add the rotating and the back and forth directions force on the IC, until IC can move back and forth easily after desoldering the IC leads completely.

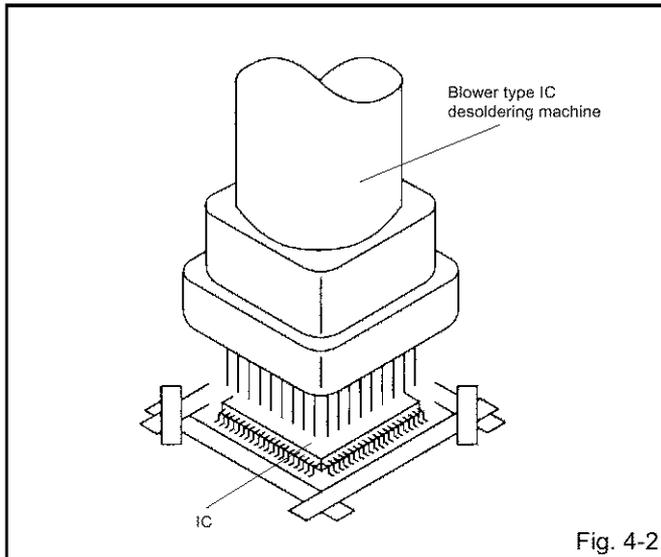

3. When IC starts moving back and forth easily after desoldering completely, pickup the corner of the IC using a tweezers and remove the IC by moving with the IC desoldering machine. (Refer to Fig. 4-3.)

NOTE


Some ICs on the PCB are affixed with glue, so be careful not to break or damage the foil of each IC leads or solder lands under the IC when removing it.

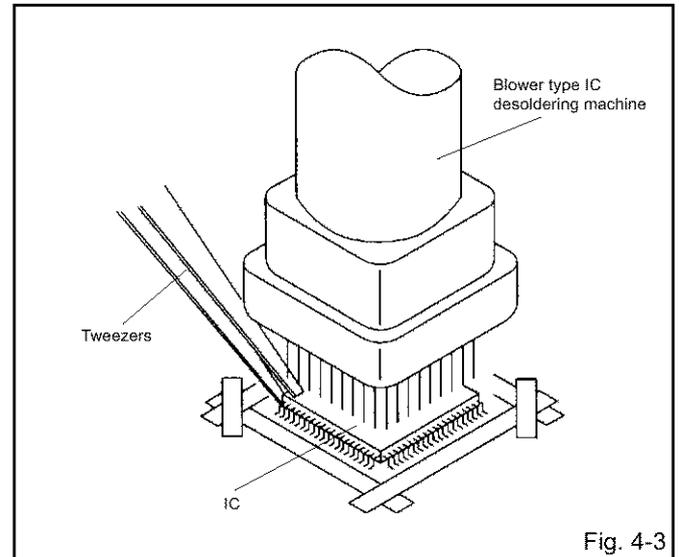

4. Peel off the Masking Tape.
5. Absorb the solder left on the pattern using the Braided Shield Wire. (Refer to Fig. 4-4.)

NOTE


Do not move the Braided Shield Wire in the vertical direction towards the IC pattern.

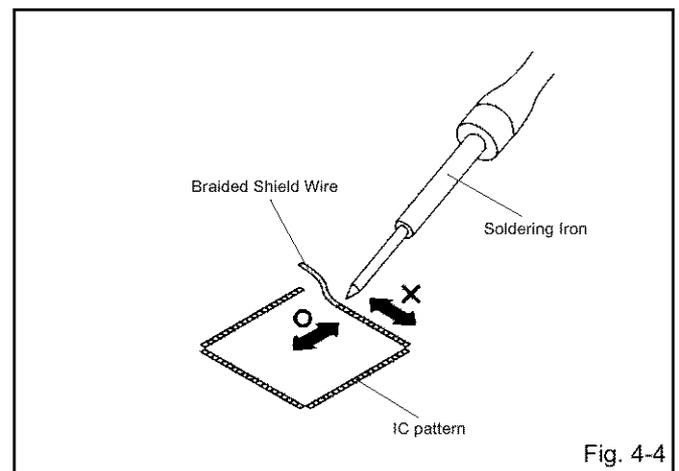


DISASSEMBLY INSTRUCTIONS

INSTALLATION

1. Take care of the polarity of new IC and then install the new IC fitting on the printed circuit pattern. Then solder each lead on the diagonal positions of IC temporarily. (Refer to Fig. 4-5.)

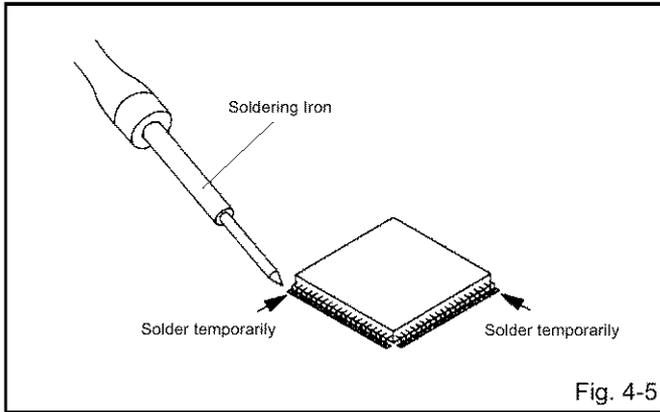


2. Supply the solder from the upper position of IC leads sliding to the lower position of the IC leads. (Refer to Fig. 4-6.)

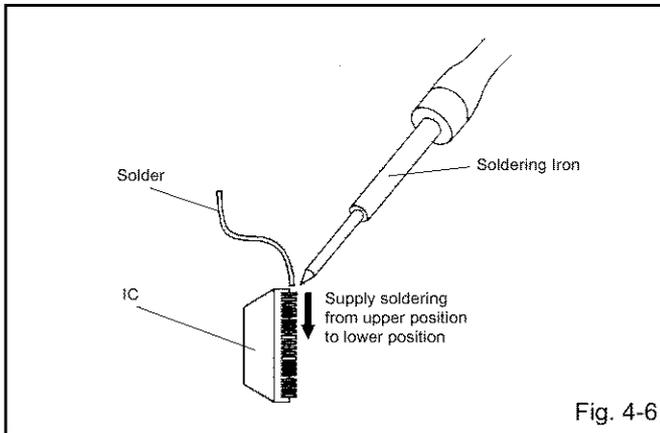


3. Absorb the solder left on the lead using the Braided Shield Wire. (Refer to Fig. 4-7.)

NOTE

Do not absorb the solder to excess.

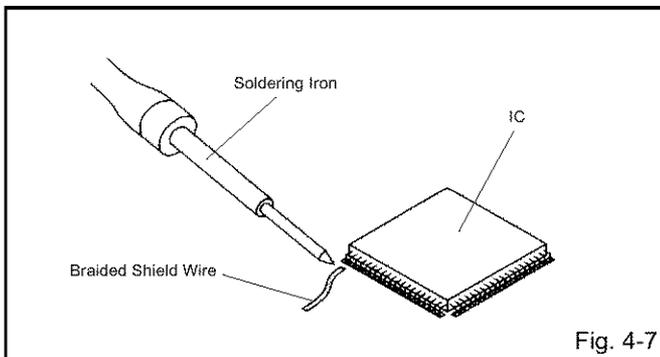

4. When bridge-soldering between terminals and/or the soldering amount are not enough, resolder using a Thin-tip Soldering Iron. (Refer to Fig. 4-8.)

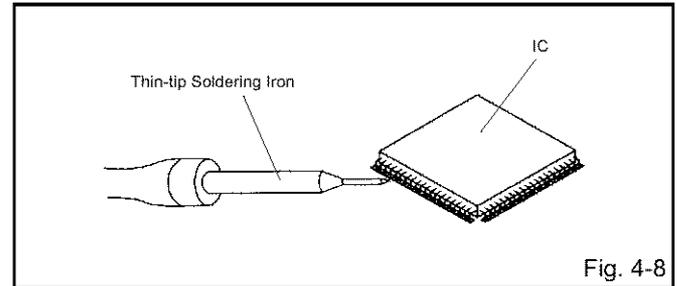

5. Finally, confirm the soldering status on four sides of the IC using a magnifying glass. Confirm that no abnormality is found on the soldering position and installation position of the parts around the IC. If some abnormality is found, correct by resoldering.

NOTE

When the IC leads are bent during soldering and/or repairing, do not repair the bending of leads. If the bending of leads are repaired, the pattern may be damaged. So, always be sure to replace the IC in this case.

SERVICE MODE LIST

This unit provided with the following SERVICE MODES so you can repair, examine and adjust easily.

To enter to the SERVICE MODE function, press and hold both buttons simultaneously on the main unit and on the remote control for more than a standard time (second).


Set Key	Remocon Key	Standard Time (seconds)	Operations
VOL. (-) MIN	0	1	Releasing of V-CHIP PASSWORD.
VOL. (-) MIN	1	1	Initialization of the factory on TV. NOTE: Do not use this for the normal servicing. If you set a factory initialization, the memories are reset such as the channel setting, and the POWER ON total hours.
VOL. (-) MIN	4	1	Initialization of the factory on DVD. NOTE: Do not use this for the normal servicing. The function will only work at the DVD stop mode.
VOL. (-) MIN	6	1	POWER ON total hours are displayed on the screen. Refer to the "PREVENTIVE CHECKS AND SERVICE INTERVALS" (CONFIRMATION OF HOURS USED). Can be checked of the INITIAL DATA of MEMORY IC. Refer to the "WHEN REPLACING EEPROM (MEMORY) IC".
VOL. (-) MIN	9	1	Display of the Adjustment MENU on the screen. Refer to the "ELECTRICAL ADJUSTMENT" (On-Screen Display Adjustment).
STOP	7	3	Releasing of PARENTAL LOCK. Refer to the "PARENTAL CONTROL - RATING LEVEL". NOTE: The function will only work without the setting of DVD disc at DVD mode.
STOP	9	3	Tray cannot be opened. Refer to the "TRAY LOCK". NOTE: No indications on the screen when the Tray Lock is setting.

CONFIRMATION OF HOURS USED

POWER ON total hours can be checked on the screen. Total hours are displayed in 16 system of notation.

NOTE: If you set a factory initialization, the total hours is reset to "0".

1. Set the VOLUME to minimum.
2. Press both VOL. DOWN button on the set and Channel button (6) on the remote control for more than 1 second.
3. After the confirmation of using hours, turn off the power.

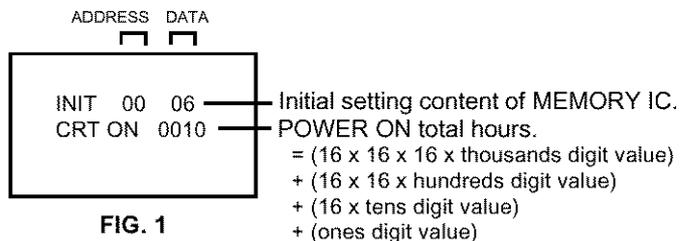

WHEN REPLACING EEPROM (MEMORY) IC

If a service repair is undertaken where it has been required to change the MEMORY IC, the following steps should be taken to ensure correct data settings while making reference to TABLE 1.

NOTE: No need setting for after INI 27.

INI	+0	+1	+2	+3	+4	+5	+6	+7	+8	+9	+A	+B	+C	+D	+E	+F
00	06	0F	44	20	D0	35	30	25	15	54	03	00	C8	55	0F	47
10	30	50	50	04	15	77	23	50	20	77	52	00	02	11	00	00
20	80	88	83	88	89	88	FF	FF	---	---	---	---	---	---	---	---

Table 1

1. Enter DATA SET mode by setting VOLUME to minimum.
2. Press both VOL. DOWN button on the set and Channel button (**6**) on the remote control for more than 1 second. ADDRESS and DATA should appear as FIG 1.

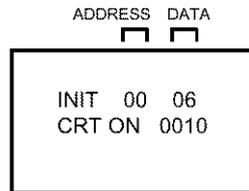


FIG. 1

3. ADDRESS is now selected and should "blink". Using the VOL. UP/DOWN button on the remote, step through the ADDRESS until required ADDRESS to be changed is reached.
4. Press ENTER to select DATA. When DATA is selected, it will "blink".
5. Again, step through the DATA using VOL. UP/DOWN button until required DATA value has been selected.
6. Pressing ENTER will take you back to ADDRESS for further selection if necessary.
7. Repeat steps 3 to 6 until all data has been checked.
8. When satisfied correct DATA has been entered, turn POWER off (return to STANDBY MODE) to finish DATA input.

After the data input, set to the initializing of shipping.

9. Turn POWER on.
10. Press both VOL. DOWN button on the set and Channel button (**1**) on the remote control for more than 1 second.
11. After the finishing of the initializing of shipping, the unit will turn off automatically.

The unit will now have the correct DATA for the new MEMORY IC.

ELECTRICAL ADJUSTMENTS

1. BEFORE MAKING ELECTRICAL ADJUSTMENTS

Read and perform these adjustments when repairing the circuits or replacing electrical parts or PCB assemblies.

CAUTION


- Use an isolation transformer when performing any service on this chassis.
- Before removing the anode cap, discharge electricity because it contains high voltage.
- When removing a PCB or related component, after unfastening or changing a wire, be sure to put the wire back in its original position.
- When you exchange IC and Transistor for a heat sink, apply the silicon grease on the contact section of the heat sink. Before applying new silicon grease, remove all the old silicon grease. (Old grease may cause damages to the IC and Transistor).

Prepare the following measurement tools for electrical adjustments.

1. Oscilloscope
2. Digital Voltmeter
3. AC Voltmeter
4. Pattern Generator
5. Multi-Sound Signal Generator

On-Screen Display Adjustment

1. Set the VOLUME to minimum.
2. Press the VOL. DOWN button on the set and the Channel button (9) on the remote control for more than 1 second to appear the adjustment mode on the screen as shown in Fig. 1-1.

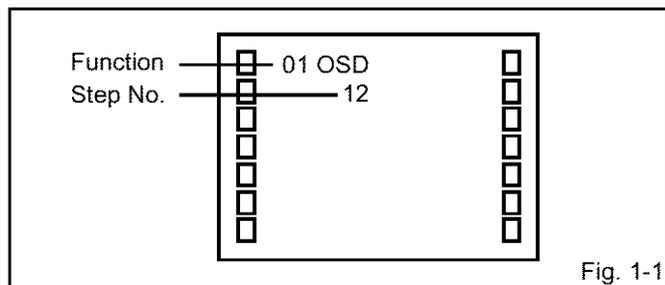

3. Use the Channel UP/DOWN button or Channel button (1-0) on the remote control to select the options shown in Fig. 1-2.
4. Press the MENU button on the remote control to end the adjustments.

NO.	FUNCTION	NO.	FUNCTION
01	OSD H	39	TINT AV
02	OSD CONTRAST	40	SHARPNESS AV
03	CUT OFF	41	SUB BIAS
04	H POSITION	42	BRI. DVD(CENT.)
05	H BLK L	43	BRI. DVD(MAX)
06	H BLK R	44	BRI. DVD(MIN)
07	V SIZE	45	CONT. DVD(CENT.)
08	V POSITION	46	CONT. DVD(MAX)
09	V LINEARITY	47	CONT. DVD(MIN)
10	V S CORRECTION	48	COL. DVD(CENT.)
11	V COMP	49	COL. DVD(MAX)
12	R CUT OFF	50	COL. DVD(MIN)
13	G CUT OFF	51	TINT DVD
14	B CUT OFF	52	SHARPNESS DVD
15	R DRIVE	53	SUB BIAS
16	G DRIVE	54	BRI. GAME(CENT.)
17	B DRIVE	55	BRI. GAME(MAX)
18	BRIGHTNESS(CENT.)	56	BRI. GAME(MIN)
19	BRIGHTNESS(MAX)	57	CONT. GAME(CENT.)
20	BRIGHTNESS(MIN)	58	CONT. GAME(MAX)
21	CONTRAST(CENT.)	59	CONT. GAME(MIN)
22	CONTRAST(MAX)	60	SUB BIAS
23	CONTRAST(MIN)	61	TUNING V MUTE
24	COLOR(CENT.)	62	POWER ON V MUTE
25	COLOR(MAX)	63	INPUT LEVEL
26	COLOR(MIN)	64	SEPARATION L
27	TINT	65	SEPARATION H
28	SHARPNESS	66	X-RAY TEST
29	SUB BIAS	67	H STOP
30	BRI. AV(CENT.)	68	H FREQ
31	BRI. AV(MAX)	69	BAST/WEST DC
32	BRI. AV(MIN)	70	BAST/WEST AMP
33	CONT. AV(CENT.)	71	BAST/WEST TILT
34	CONT. AV(MAX)	72	BAST/WEST COR, TOP
35	CONT. AV(MIN)	73	BAST/WEST COR, BOT
36	COL. AV(CENT.)	74	H SIZE COMP
37	COL. AV(MAX)	75	H BLK L AV
38	COL. AV(MIN)	76	H BLK R AV

Fig. 1-2

2. BASIC ADJUSTMENTS

2-1: CONSTANT VOLTAGE

1. Set condition is AV MODE without signal.
2. Using the remote control, set the brightness and contrast to normal position.
3. Connect the digital voltmeter to TP401.
4. Adjust the VR3800 until the digital voltmeter is $135 \pm 0.5V$.

2-2: FOCUS

1. Receive the monoscope pattern.
2. Turn the Focus Volume fully counterclockwise once.
3. Adjust the Focus Volume until picture is distinct.

2-3: CUT OFF

1. Adjust the unit to the following settings.
R CUT OFF=7F, G CUT OFF=7F, B CUT OFF=7F,
R DRIVE=3F, G DRIVE=07, B DRIVE=3F
2. Place the set with Aging Test for more than 15 minutes.
3. Set condition is AV MODE without signal.
4. Using the remote control, set the brightness and contrast to normal position.
5. Activate the adjustment mode display of Fig. 1-1 and press the channel button (03) on the remote control to select "CUT OFF".
6. Adjust the Screen Volume until a dim raster is obtained.

ELECTRICAL ADJUSTMENTS

2-4: WHITE BALANCE

NOTE: Adjust after performing CUT OFF adjustment.

1. Place the set with Aging Test for more than 15 minutes.
2. Receive the gray scale pattern from the Pattern Generator.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**16**) on the remote control to select "G DRIVE".
5. Press the CH. UP/DOWN button on the remote control to select the "R CUT OFF", "G CUT OFF", "B CUT OFF", "R DRIVE" or "B DRIVE".
6. Adjust the VOL. UP/DOWN button on the remote control to whiten the R CUT OFF, G CUT OFF, B CUT OFF, R DRIVE, and B DRIVE at each step tone sections equally.
7. Perform the above adjustments 5 and 6 until the white color is looked like a white.

2-5: HORIZONTAL POSITION

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**04**) on the remote control to select "HPOSI".
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on right and left becomes minimum.

2-6: VERTICAL POSITION

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**08**) on the remote control to select "VPOSI".
4. Check if the step No. V POSI is "02".
5. Adjust the **VR401** until the horizontal line becomes fit to notch of the shadow mask.

2-7: VERTICAL SIZE

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**07**) on the remote control to select "VSIZE".
4. Press the VOL. UP/DOWN button on the remote control until the Up/Down OVER SCAN Quantity becomes equal to the Right/Left OVER SCAN Quantity.
5. Receive a broadcast and check if the picture is normal.

2-8: VERTICAL LINEARITY

NOTE: Adjust after performing adjustments in section 2-7. After the adjustment of Vertical Linearity, reconfirm the Vertical Position and Vertical Size adjustments.

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**09**) on the remote control to select "VLIN".
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on upside and downside becomes minimum.

2-9: SEPARATION

Please do the method (1) or method (2) adjustment.

Method (1)

1. Set the multi-sound signal generator for each different L-ch and R-ch frequency (Ex. L-ch=2KHz, R-ch=400Hz) and receive the RF signal.
2. Connect the oscilloscope to the **Audio Out Jack**.
3. Press the AUDIO button on the remote control to set to the stereo mode.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**64**) on the remote control to select "SEPAL".
5. Press the VOL. UP/DOWN button on the remote control to adjust it until the audio output wave becomes a fine sine wave.
6. Press the CH UP button 1 time to set to "SEPAH" mode.
7. Press the VOL. UP/DOWN button on the remote control to adjust it until the audio output wave becomes a fine sine wave.

Method (2)

1. Set the multi-sound signal generator L-ch=1KHz, R-ch=Non input and receive the RF signal.
2. Connect the oscilloscope to the **Audio Out Jack (R-ch)**.
3. Press the AUDIO button on the remote control to set to the stereo mode.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**64**) on the remote control to select "SEPAL".
5. Press the VOL. UP/DOWN button on the remote control to adjust it until the R-ch output becomes minimum.
6. Press the CH UP button 1 time to set to "SEPAH" mode.
7. Press the VOL. UP/DOWN button on the remote control to adjust it until the R-ch output becomes minimum.
8. Set the multi-sound signal generator L-ch=Non input, R-ch=1KHz and receive the RF signal.
9. Connect the oscilloscope to the **Audio Out Jack (L-ch)**. Then perform the above adjustments 3~7.

ELECTRICAL ADJUSTMENTS

2-10: OSD HORIZONTAL

1. Activate the adjustment mode display of **Fig. 1-1**.
2. Press the VOL. UP/DOWN button on the remote control until the difference of A and B becomes minimum.
(Refer to **Fig. 2-1**)

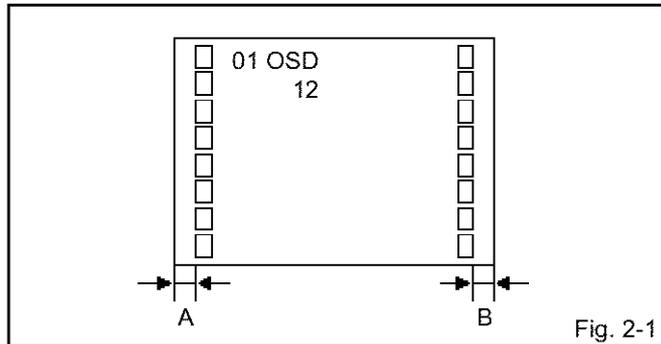


Fig. 2-1

2-11: LEVEL

1. Receive the VHF HIGH (70dB).
2. Connect the AC voltmeter to **pin 6 of CP101**.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**63**) on the remote control to select "LVL".
4. Press the VOL. UP/DOWN button on the remote control until the AC voltmeter is $75 \pm 2\text{mV}$.

2-12: BRIGHT CENTER

1. Receive the monoscope pattern. (RF Input)
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**18**) on the remote control to select "BRTC".
4. Press the VOL. UP/DOWN button on the remote control until the white 15% is starting to be visible
5. Receive the monoscope pattern. (Audio Video Input)
6. Press the INPUT SELECT button on the remote control to set to the AV mode.
7. Using the remote control, set the brightness and contrast to normal position.
8. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**30**) on the remote control to select "BRTCA".
9. Press the VOL. UP/DOWN button on the remote control until the white 15% is starting to be visible
10. Press the TV/DVD button on the remote control to set to the DVD mode.
11. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**42**) on the remote control to select "BRTCD".
12. Press the VOL. UP/DOWN button on the remote control to set the same step numbers as the AV.
13. Press the GAME button on the remote control to set to the GAME mode.
14. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**54**) on the remote control to select "BRTCG".
15. Press the VOL. UP/DOWN button on the remote control to set the same step numbers as the AV.

2-13: TINT CENTER

1. Receive the color bar pattern. (RF Input)
2. Using the remote control, set the brightness, contrast, color and tint to normal position.
3. Connect the oscilloscope to **TP024**.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**27**) on the remote control to select "TNTC".
5. Press the VOL. UP/DOWN button on the remote control until the section "A" becomes a straight line.
(Refer to **Fig. 2-2**)
6. Receive the color bar pattern. (Audio Video Input)
7. Press the INPUT SELECT button on the remote control to set to the AV mode.
8. Using the remote control, set the brightness, contrast, color and tint to normal position.
9. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**39**) on the remote control to select "TNTCA".
10. Press the VOL. UP/DOWN button on the remote control until the section "A" becomes a straight line.
(Refer to **Fig. 2-2**)
11. Press the TV/DVD button on the remote control to set to the DVD mode.
12. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**51**) on the remote control to select "TNTCD".
13. Press the VOL. UP/DOWN button on the remote control to set the same step numbers as the AV.

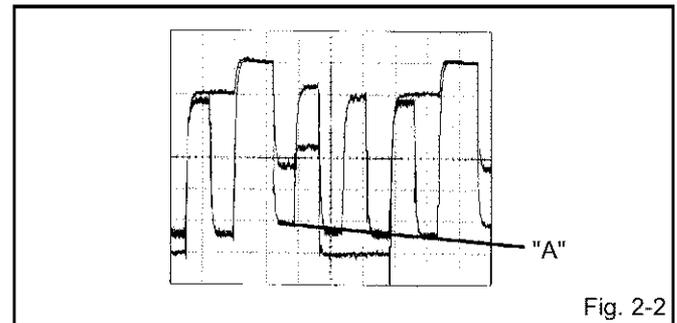


Fig. 2-2

ELECTRICAL ADJUSTMENTS

2-14: COLOR CENTER

1. Receive the color bar pattern. (RF Input)
2. Using the remote control, set the brightness, contrast, color and tint to normal position.
3. Connect the oscilloscope to **TP022**.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(24)** on the remote control to select "COLC".
5. Adjust the VOLTS RANGE VARIABLE knob of the oscilloscope until the range between white 100% and 0% is set to 4 scales on the screen of the oscilloscope.
6. Press the VOL. UP/DOWN button on the remote control until the red color level is adjusted to $110 \pm 5\%$ of the white level. **(Refer to Fig. 2-3)**
7. Receive the color bar pattern. (Audio Video Input)
8. Press the INPUT SELECT button on the remote control to set to the AV mode.
9. Using the remote control, set the brightness, contrast, color and tint to normal position.
10. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(36)** on the remote control to select "COLCA".
11. Adjust the VOLTS RANGE VARIABLE knob of the oscilloscope until the range between white 100% and 0% is set to 4 scales on the screen of the oscilloscope.
12. Press the VOL. UP/DOWN button on the remote control until the red color level is adjusted to $110 \pm 5\%$ of the white level. **(Refer to Fig. 2-3)**
13. Press the TV/DVD button on the remote control to set to the DVD mode.
14. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(48)** on the remote control to select "COLCD".
15. Press the VOL. UP/DOWN button on the remote control to decrease the step numbers by 8 steps to the AV.

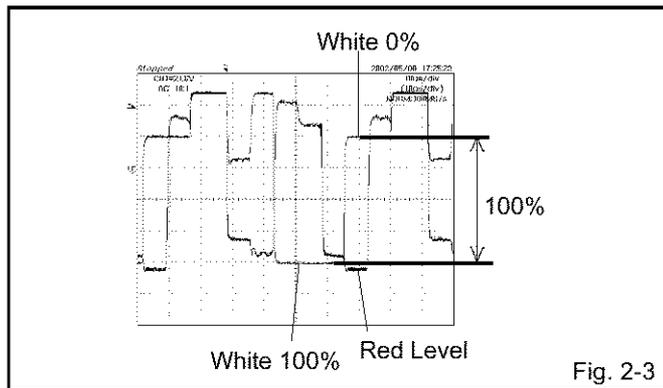


Fig. 2-3

2-15: CONTRAST MAX

1. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(22)** on the remote control to select "CNTX".
2. Press the VOL. UP/DOWN button on the remote control until the contrast step No. becomes "5A"
3. Receive a broadcast and check if the picture is normal.
4. Press the INPUT SELECT button on the remote control to set to the AV mode.
5. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(34)** on the remote control to select "CNTXA".
6. Press the VOL. UP/DOWN button on the remote control until the contrast step No. becomes "5A"
7. Receive a broadcast and check if the picture is normal.
8. Press the TV/DVD button on the remote control to set to the DVD mode.
9. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(46)** on the remote control to select "CNTXD".
10. Press the VOL. UP/DOWN button on the remote control to set the same step numbers as the AV.
11. Press the GAME button on the remote control to set to the GAME mode.
12. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(58)** on the remote control to select "CNTXG".
13. Press the VOL. UP/DOWN button on the remote control to set the same step numbers as the AV.

2-16: Confirmation of Fixed Value (Step No.)

Please check if the fixed values of the each adjustment items are set correctly referring below.

NO.	FUNCTION	STEP NO.	NO.	FUNCTION	STEP NO.
02	OSD CONTRAST	04	44	BRI. DVD(MIN)	2A
05	H BLK L	04	45	CONT. DVD(CENT.)	40
06	H BLK R	00	47	CONT. DVD(MIN)	10
08	V POSITION	02	49	COL. DVD(MAX)	70
10	V S CORRECTION	08	50	COL. DVD(MIN)	10
11	V COMP	03	52	SHARPNESS DVD	10
16	G DRIVE	07	53	SUB BIAS	00
19	BRIGHTNESS(MAX)	70	55	BRI. GAME(MAX)	70
20	BRIGHTNESS(MIN)	2A	56	BRI. GAME(MIN)	2A
21	CONTRAST(CENT.)	40	57	CONT. GAME(CENT.)	40
23	CONTRAST(MIN)	10	59	CONT. GAME(MIN)	10
25	COLOR(MAX)	70	60	SUB BIAS	00
26	COLOR(MIN)	10	61	TUNING V MUTE	00
28	SHARPNESS	18	62	POWER ON V MUTE	40
29	SUB BIAS	00	68	H FREQ	3F
31	BRI. AV(MAX)	70	69	BAST/WEST DC	00
32	BRI. AV(MIN)	2A	70	BAST/WEST AMP	00
33	CONT. AV(CENT.)	40	71	BAST/WEST TILT	00
35	CONT. AV(MIN)	10	72	BAST/WEST COR. TOP	00
37	COL. AV(MAX)	70	73	BAST/WEST COR. BOT	00
38	COL. AV(MIN)	10	74	H SIZE COMP	00
40	SHARPNESS AV	10	75	H BLK L AV	07
41	SUB BIAS	00	76	H BLK R AV	05
43	BRI. DVD(MAX)	70			

ELECTRICAL ADJUSTMENTS

3. PURITY AND CONVERGENCE ADJUSTMENTS

NOTE

1. Turn the unit on and let it warm up for at least 30 minutes before performing the following adjustments.
2. Place the CRT surface facing east or west to reduce the terrestrial magnetism.
3. Turn ON the unit and demagnetize with a Degauss Coil.

3-1: STATIC CONVERGENCE (ROUGH ADJUSTMENT)

1. Tighten the screw for the magnet. Refer to the adjusted CRT for the position. **(Refer to Fig. 3-1)**
If the deflection yoke and magnet are in one body, untighten the screw for the body.
2. Receive the green raster pattern from the color bar generator.
3. Slide the deflection yoke until it touches the funnel side of the CRT.
4. Adjust center of screen to green, with red and blue on the sides, using the pair of purity magnets.
5. Switch the color bar generator from the green raster pattern to the crosshatch pattern.
6. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
7. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.
8. Adjust the crosshatch pattern to change to white by repeating steps 6 and 7.

3-2: PURITY

NOTE

Adjust after performing adjustments in section 3-1.

1. Receive the green raster pattern from color bar generator.
2. Adjust the pair of purity magnets to center the color on the screen.
Adjust the pair of purity magnets so the color at the ends are equally wide.
3. Move the deflection yoke backward (to neck side) slowly, and stop it at the position when the whole screen is green.
4. Confirm red and blue colors.
5. Adjust the slant of the deflection yoke while watching the screen, then tighten the fixing screw.

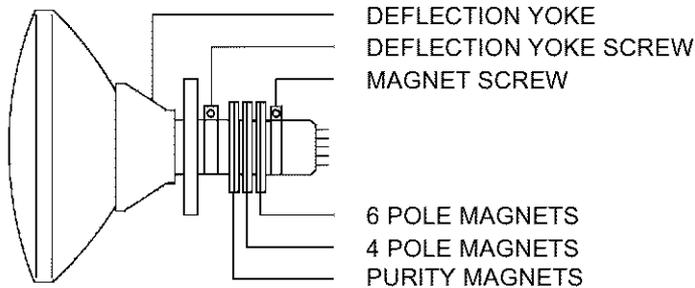


Fig. 3-1

3-3: STATIC CONVERGENCE

NOTE

Adjust after performing adjustments in section 3-2.

1. Receive the crosshatch pattern from the color bar generator.
2. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
3. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.

3-4: DYNAMIC CONVERGENCE

NOTE

Adjust after performing adjustments in section 3-3.

1. Adjust the differences around the screen by moving the deflection yoke upward/downward and right/left. **(Refer to Fig. 3-2-a)**
2. Insert three wedges between the deflection yoke and CRT funnel to fix the deflection yoke. **(Refer to Fig. 3-2-b)**

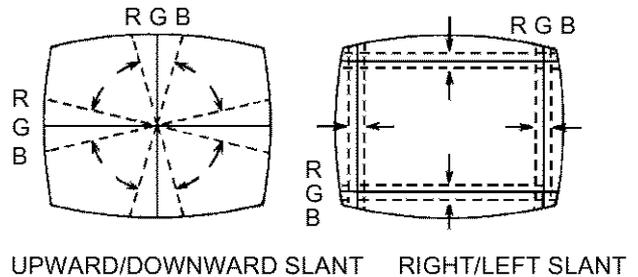


Fig. 3-2-a


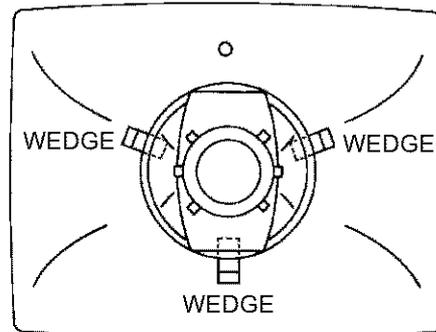



Fig. 3-2-b

ELECTRICAL ADJUSTMENTS


4. ELECTRICAL ADJUSTMENT PARTS LOCATION GUIDE (WIRING CONNECTION)

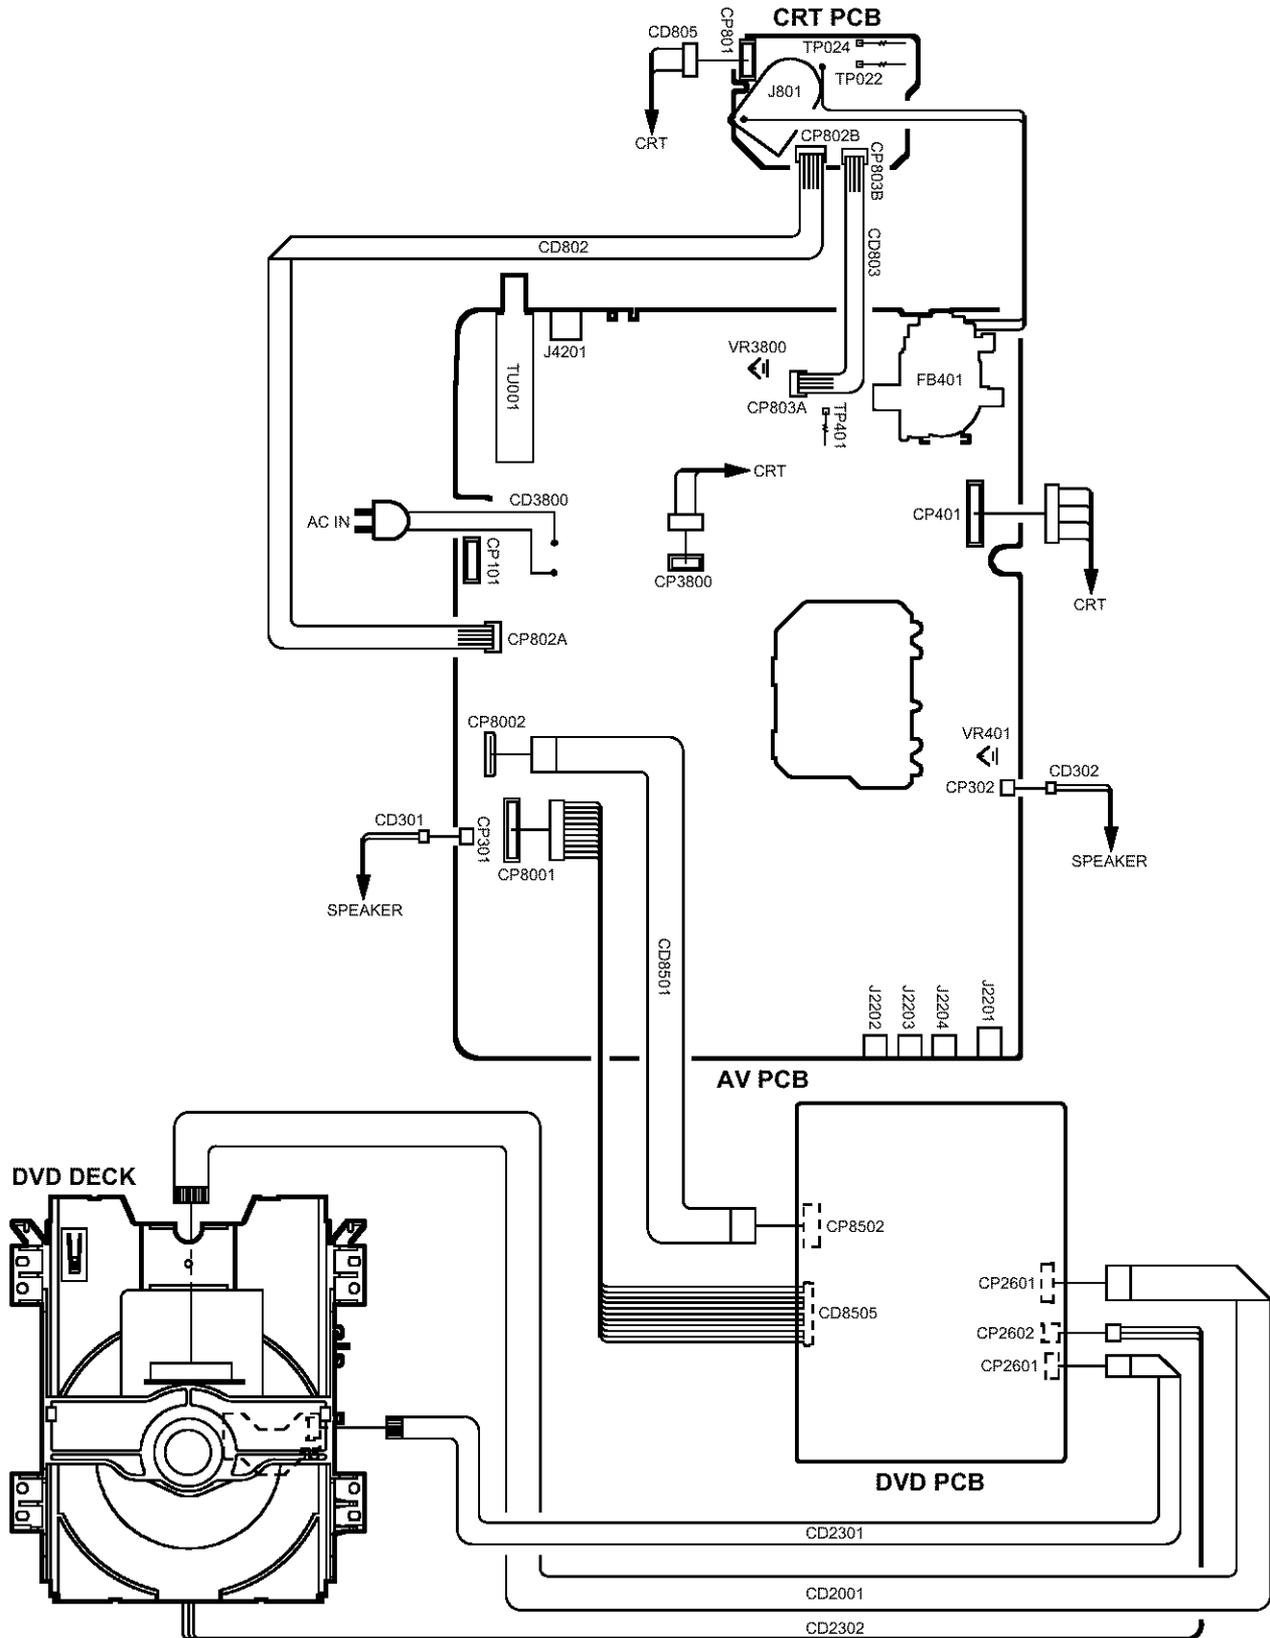

DVD BLOCK DIAGRAM

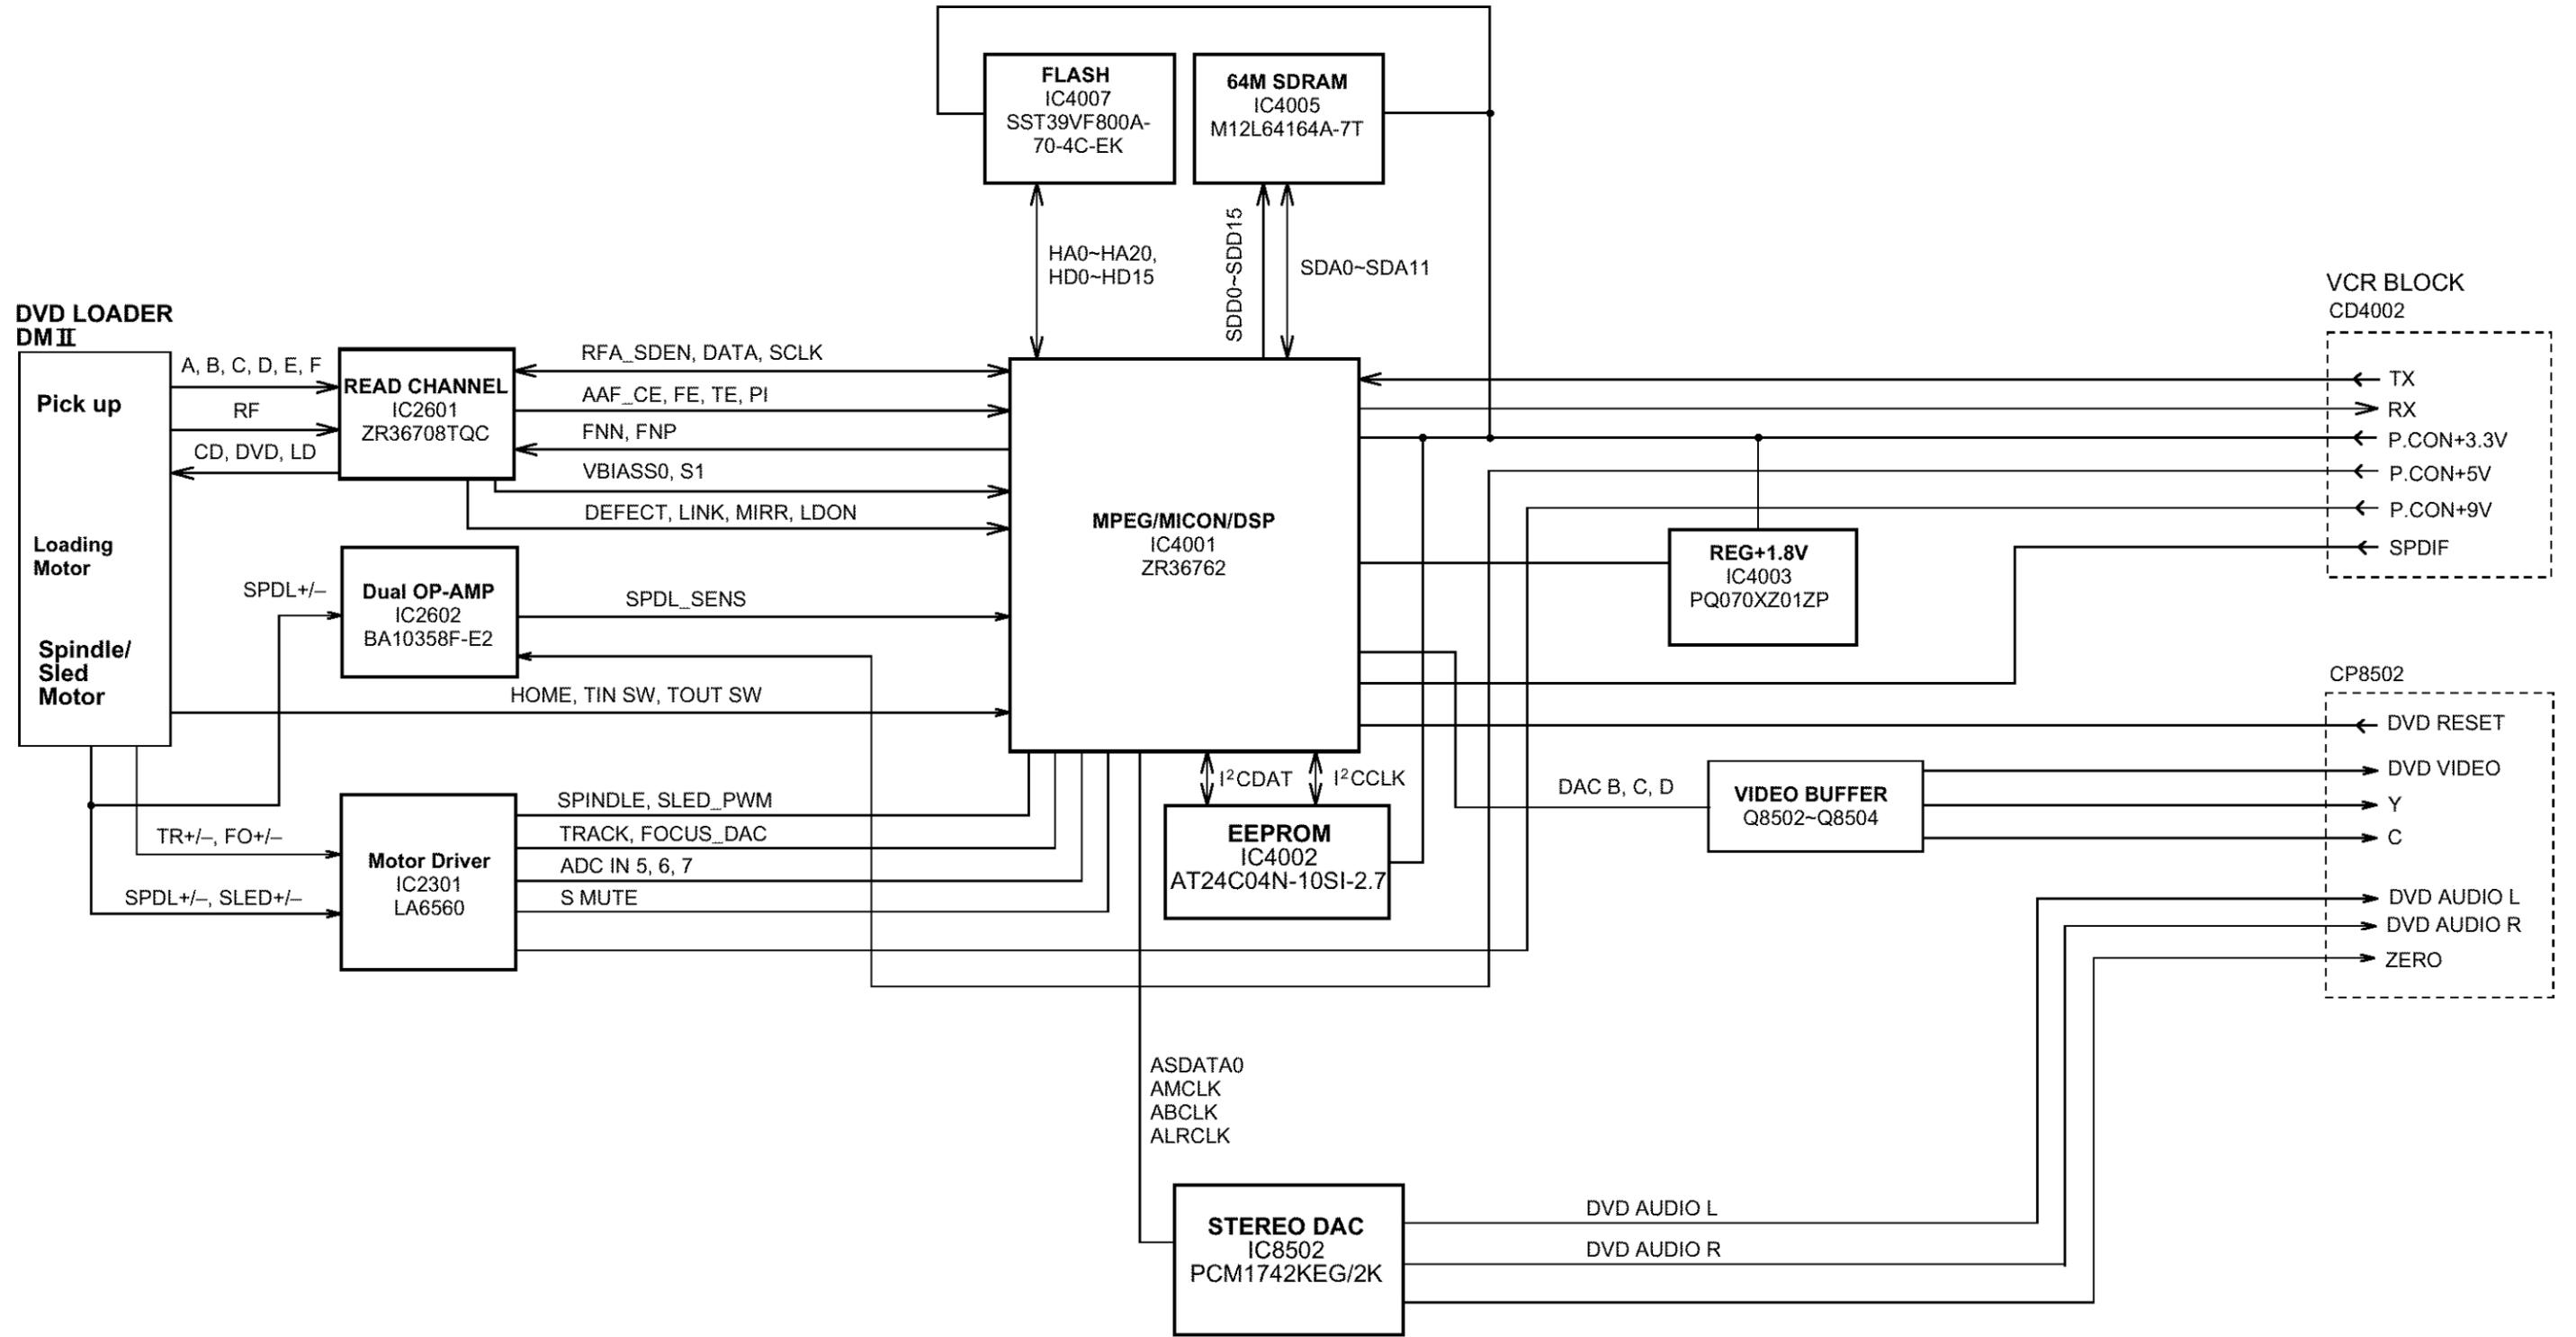


TV BLOCK DIAGRAM

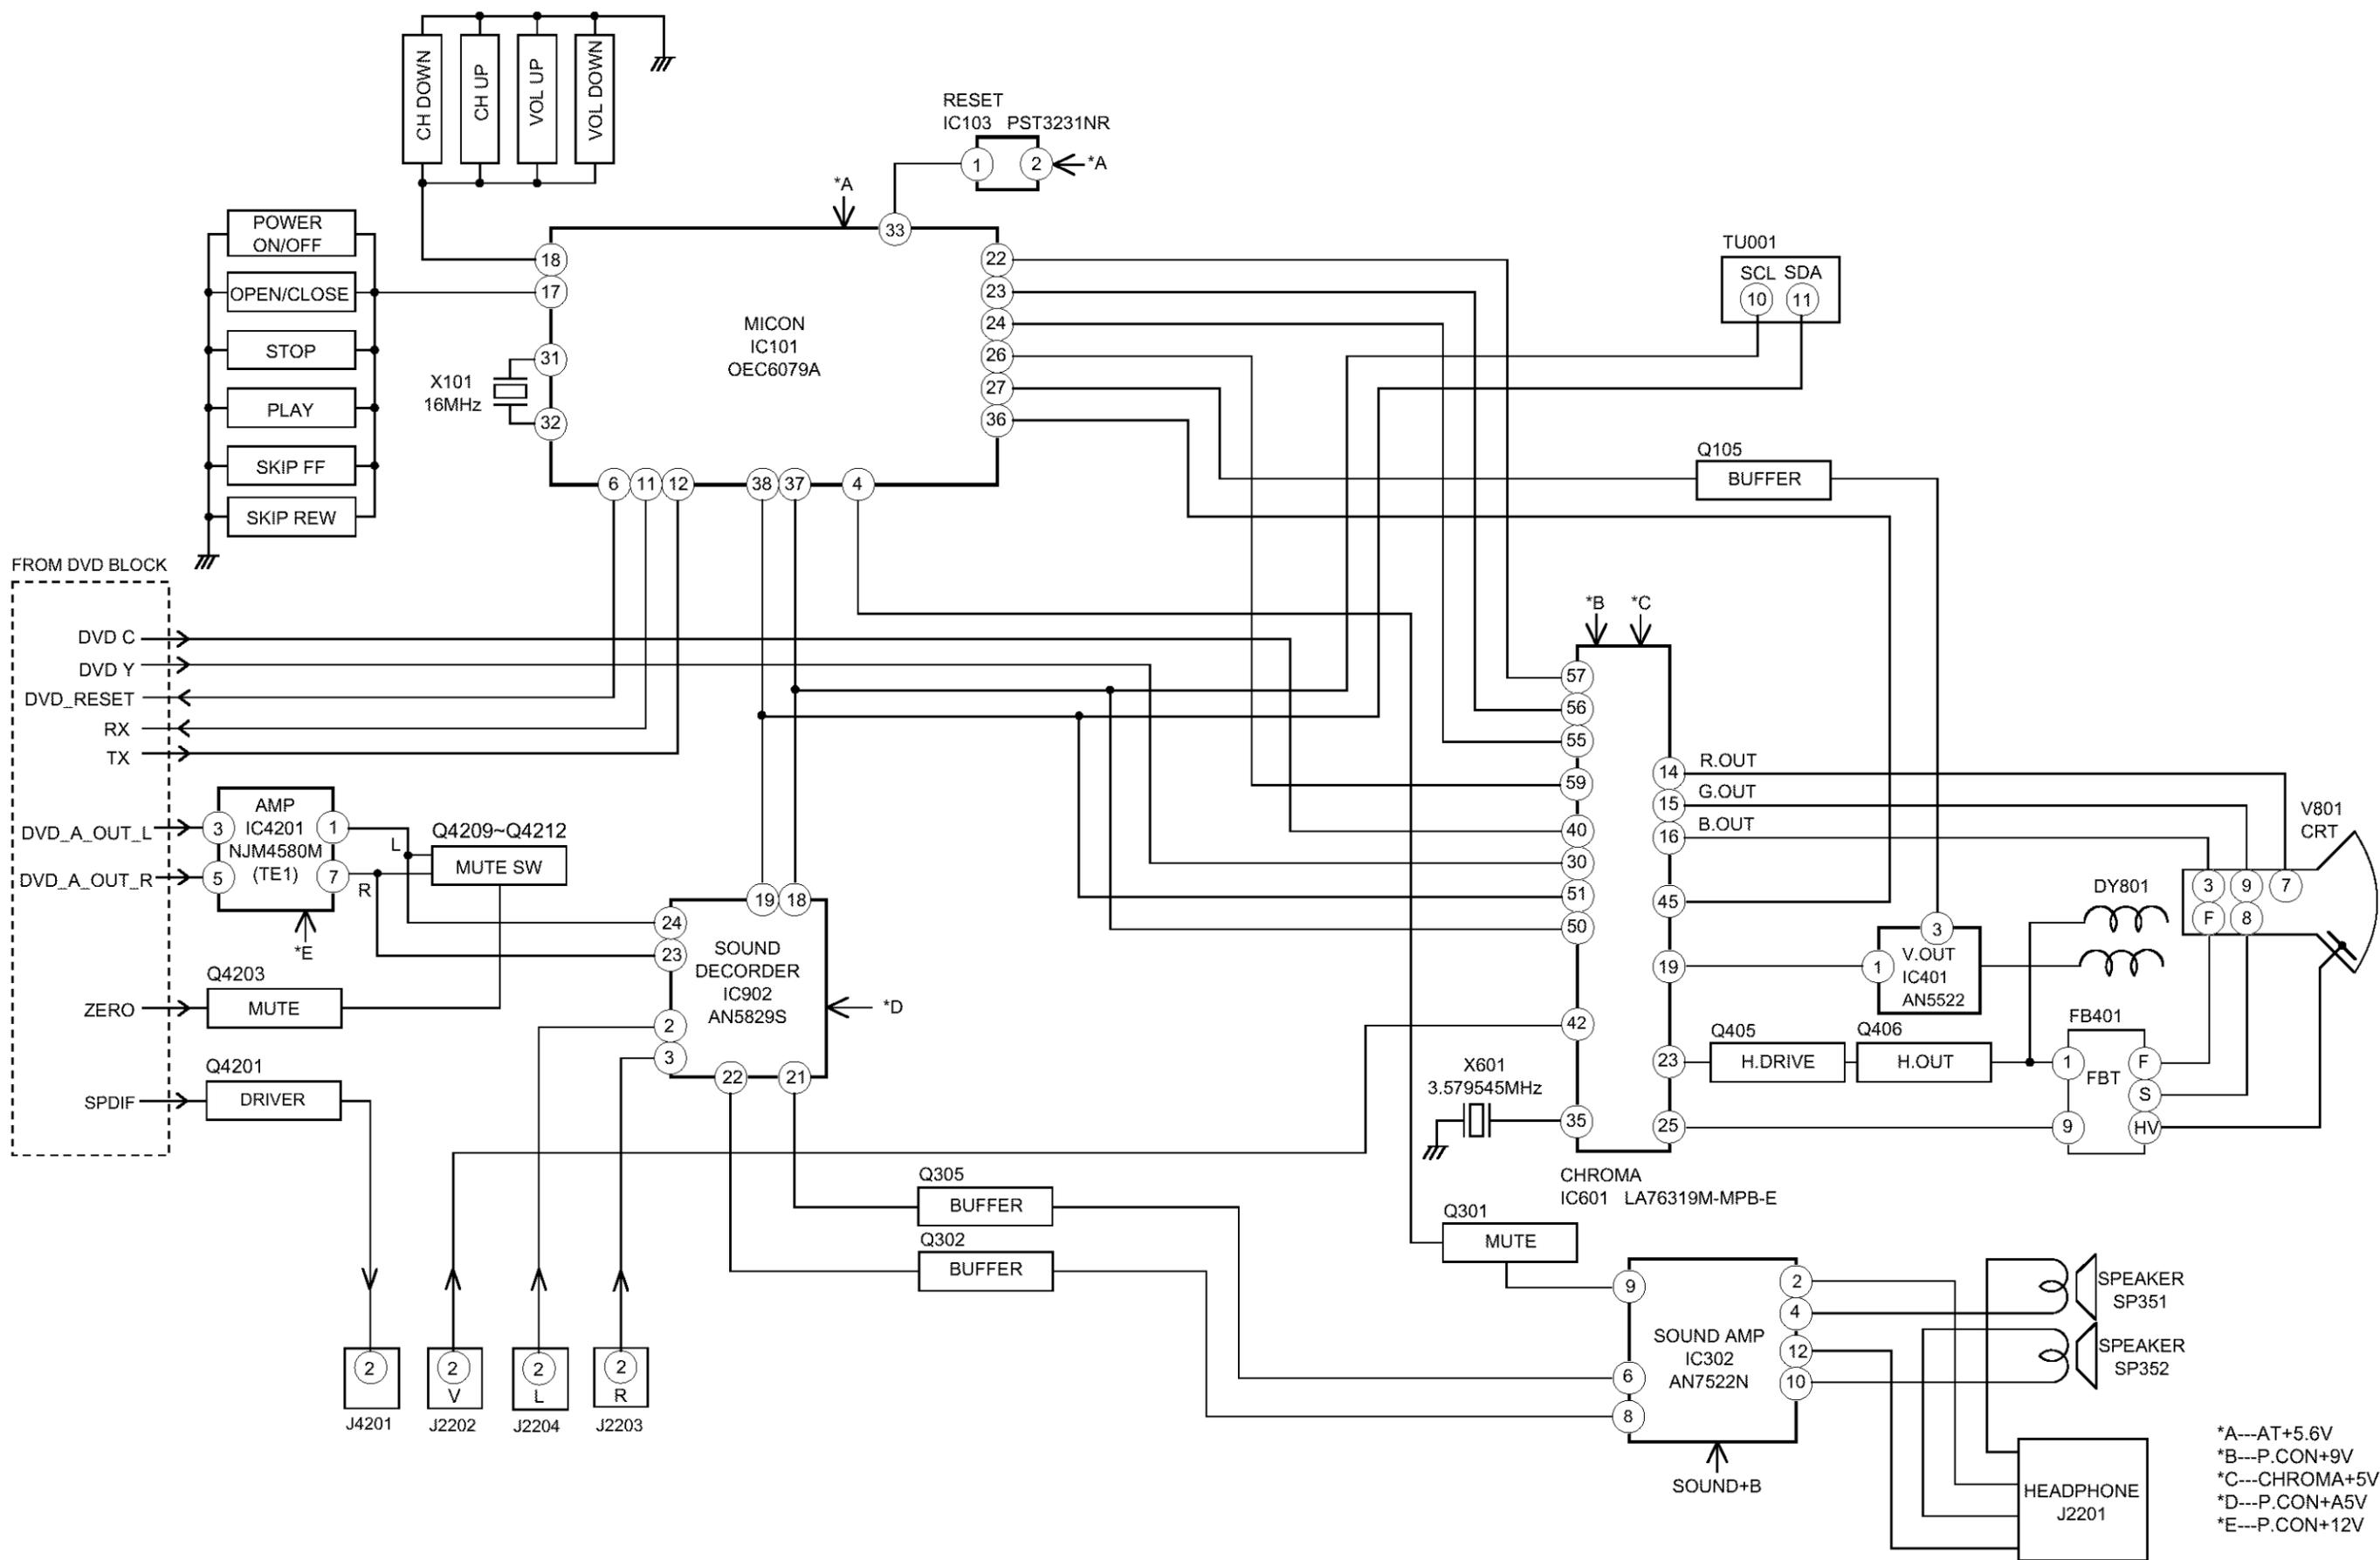


- *A---AT+5.6V
- *B---P.CON+9V
- *C---CHROMA+5V
- *D---P.CON+A5V
- *E---P.CON+12V

POWER BLOCK DIAGRAM

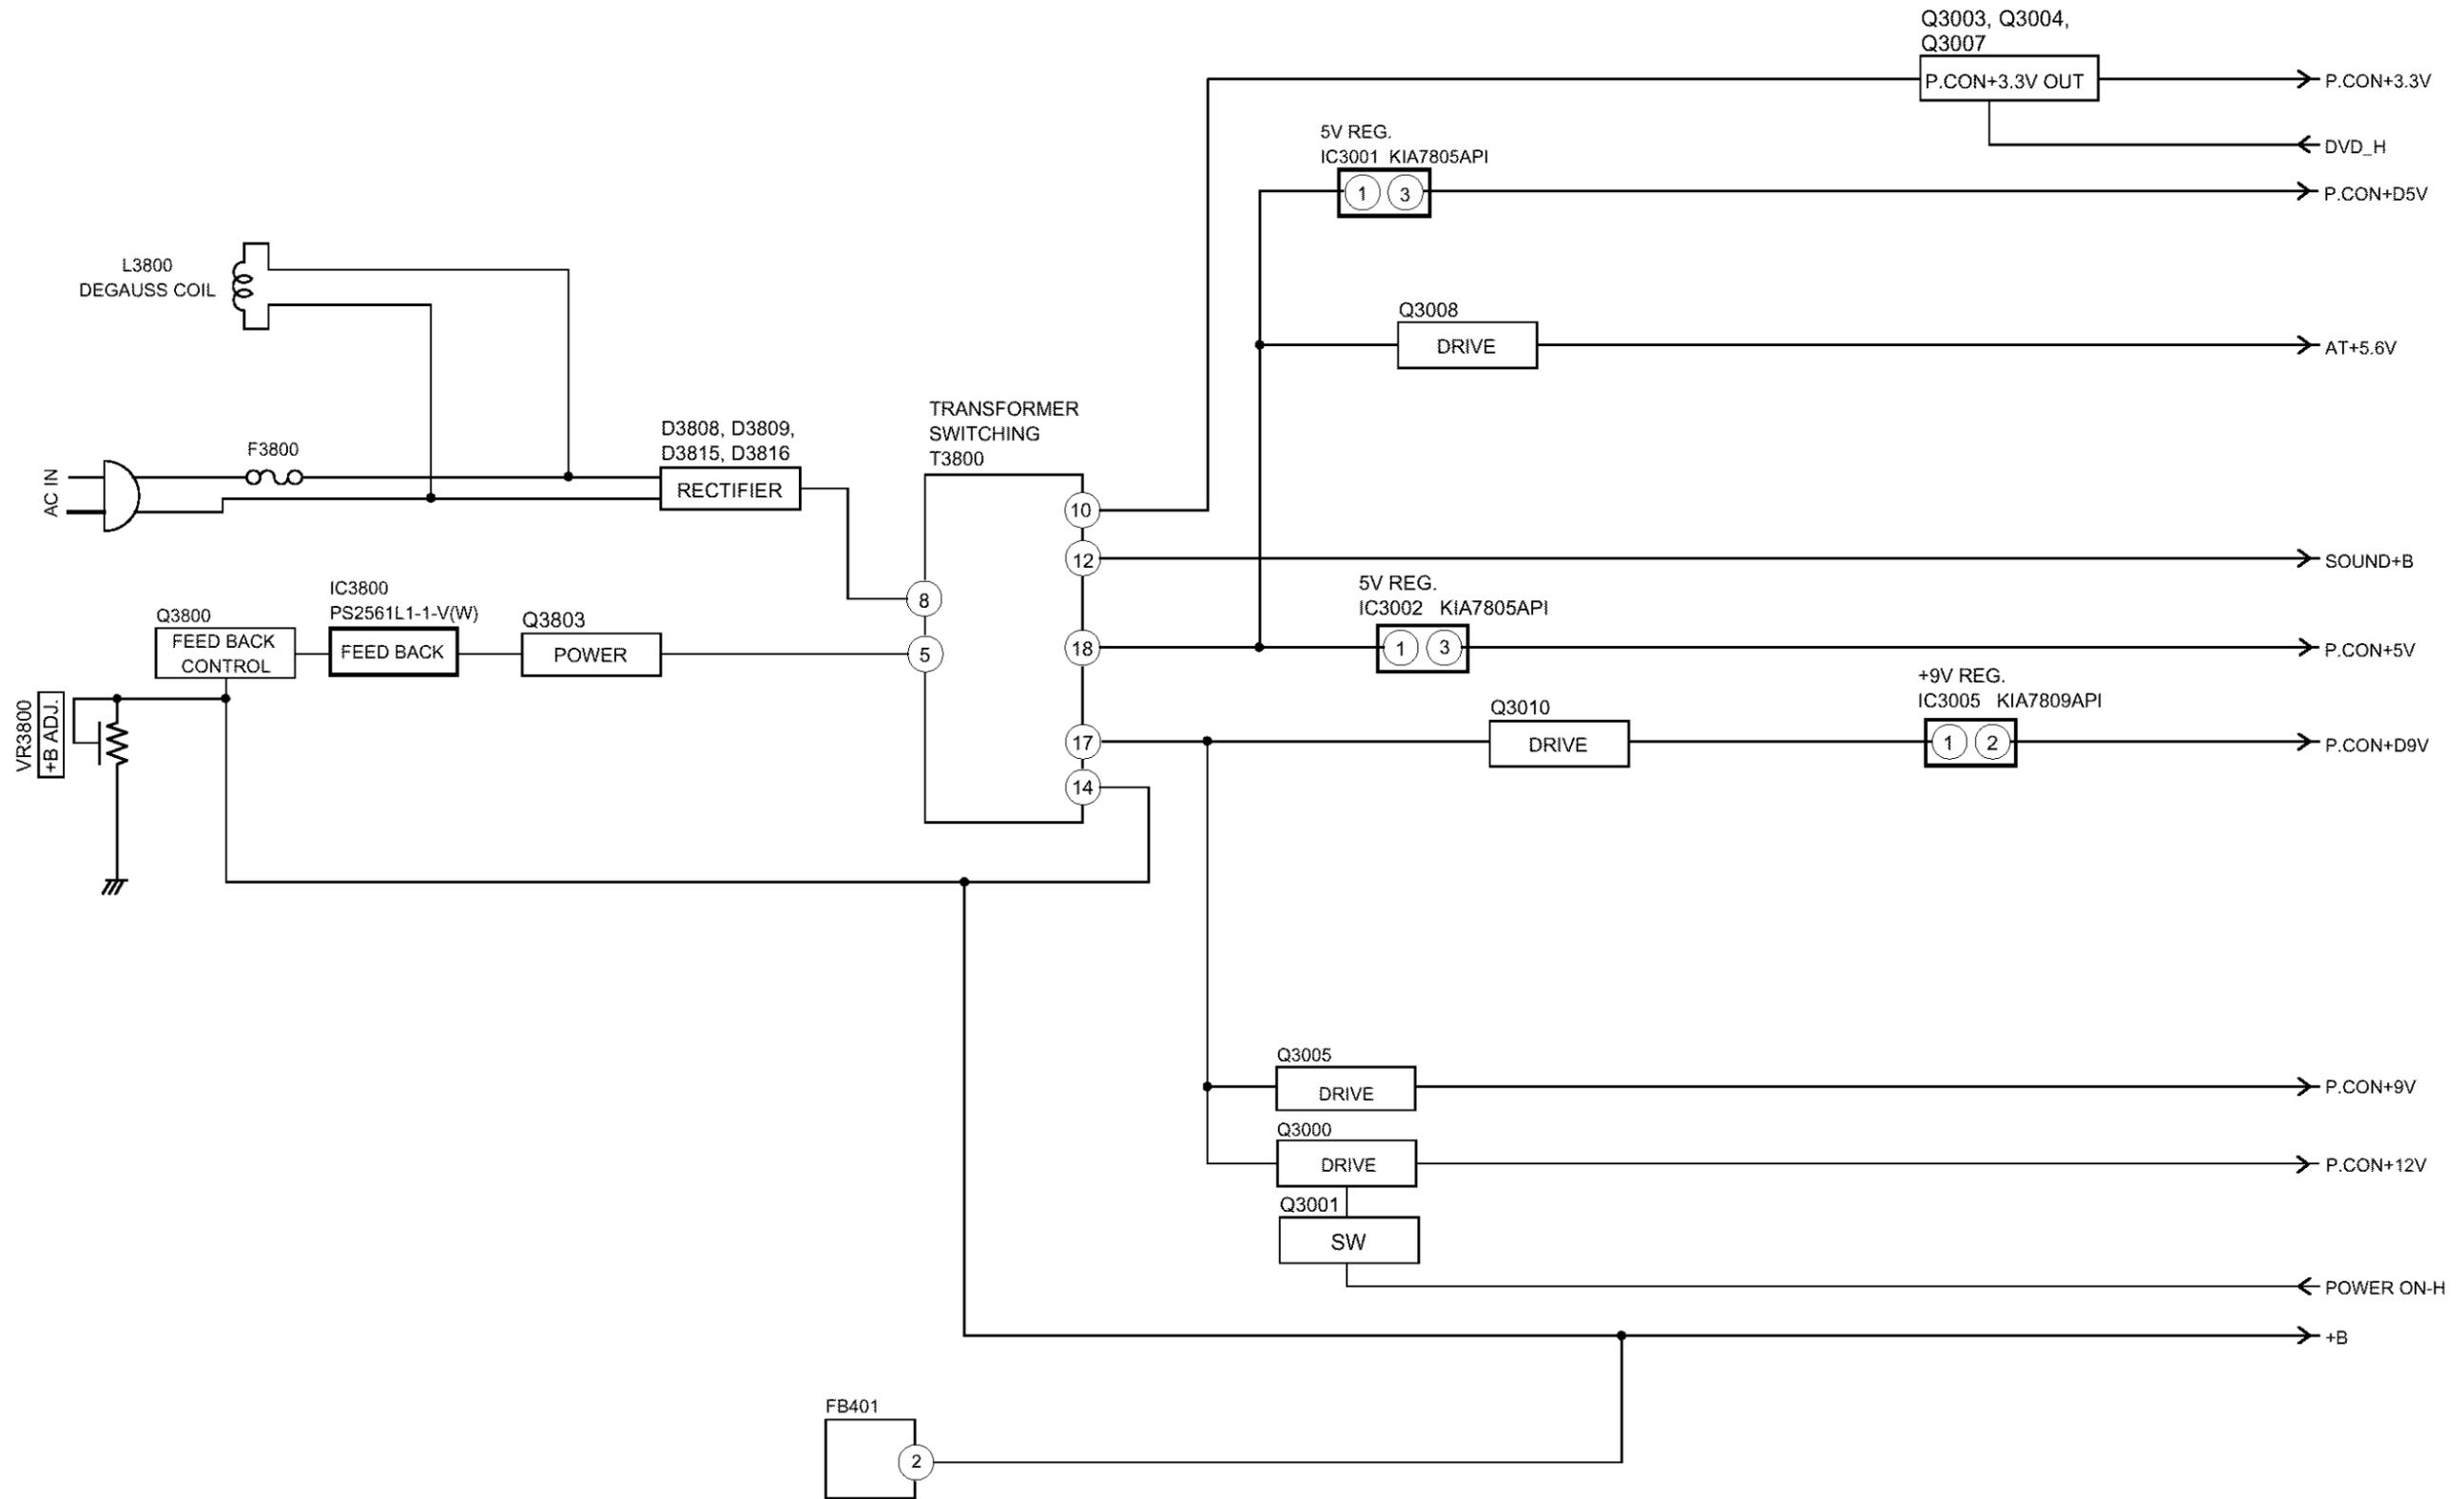


PRINTED CIRCUIT BOARDS
AV/CRT (CHIP MOUNTED PARTS)
SOLDER SIDE

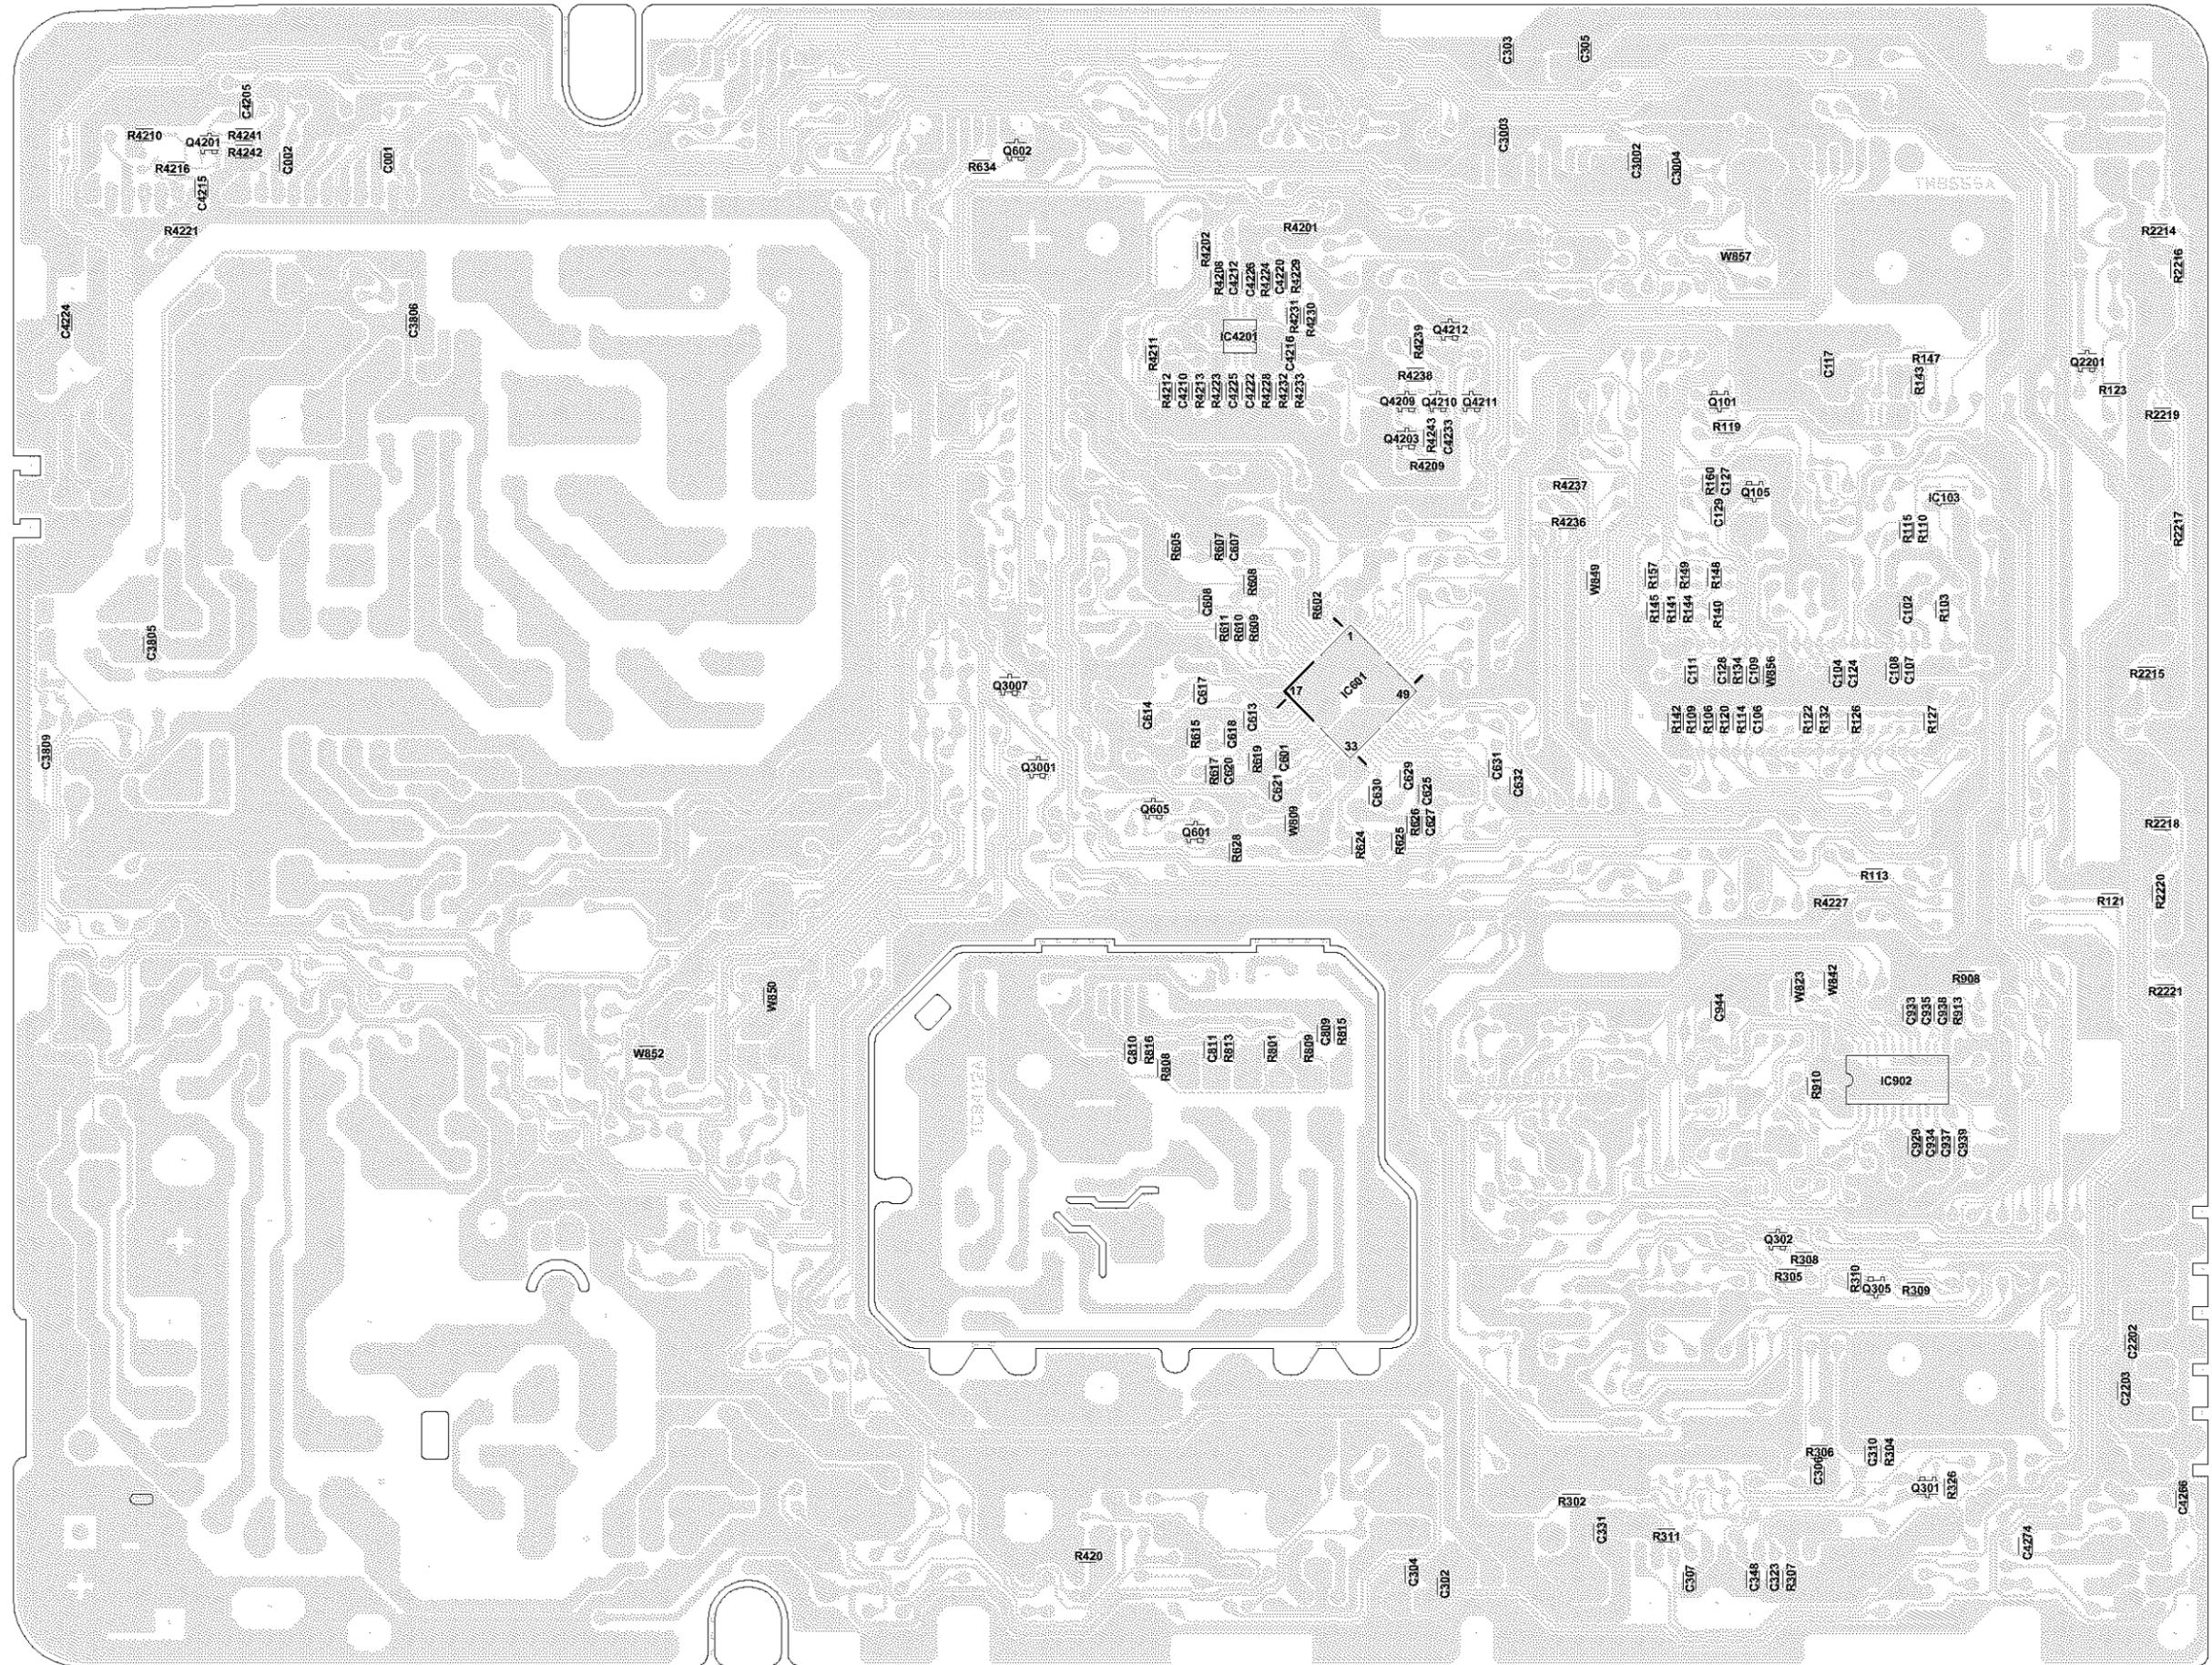


PRINTED CIRCUIT BOARDS


RELAY (INSERTED PARS) SOLDER SIDE

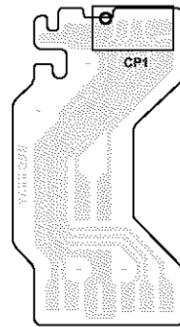


RELAY (CHIP MOUNTED PARS) SOLDER SIDE

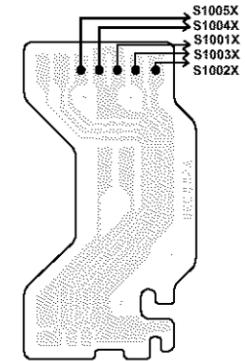

SW SOLDER SIDE

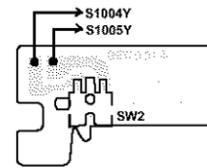

MEMORY SCHEMATIC DIAGRAM (DVD PCB)

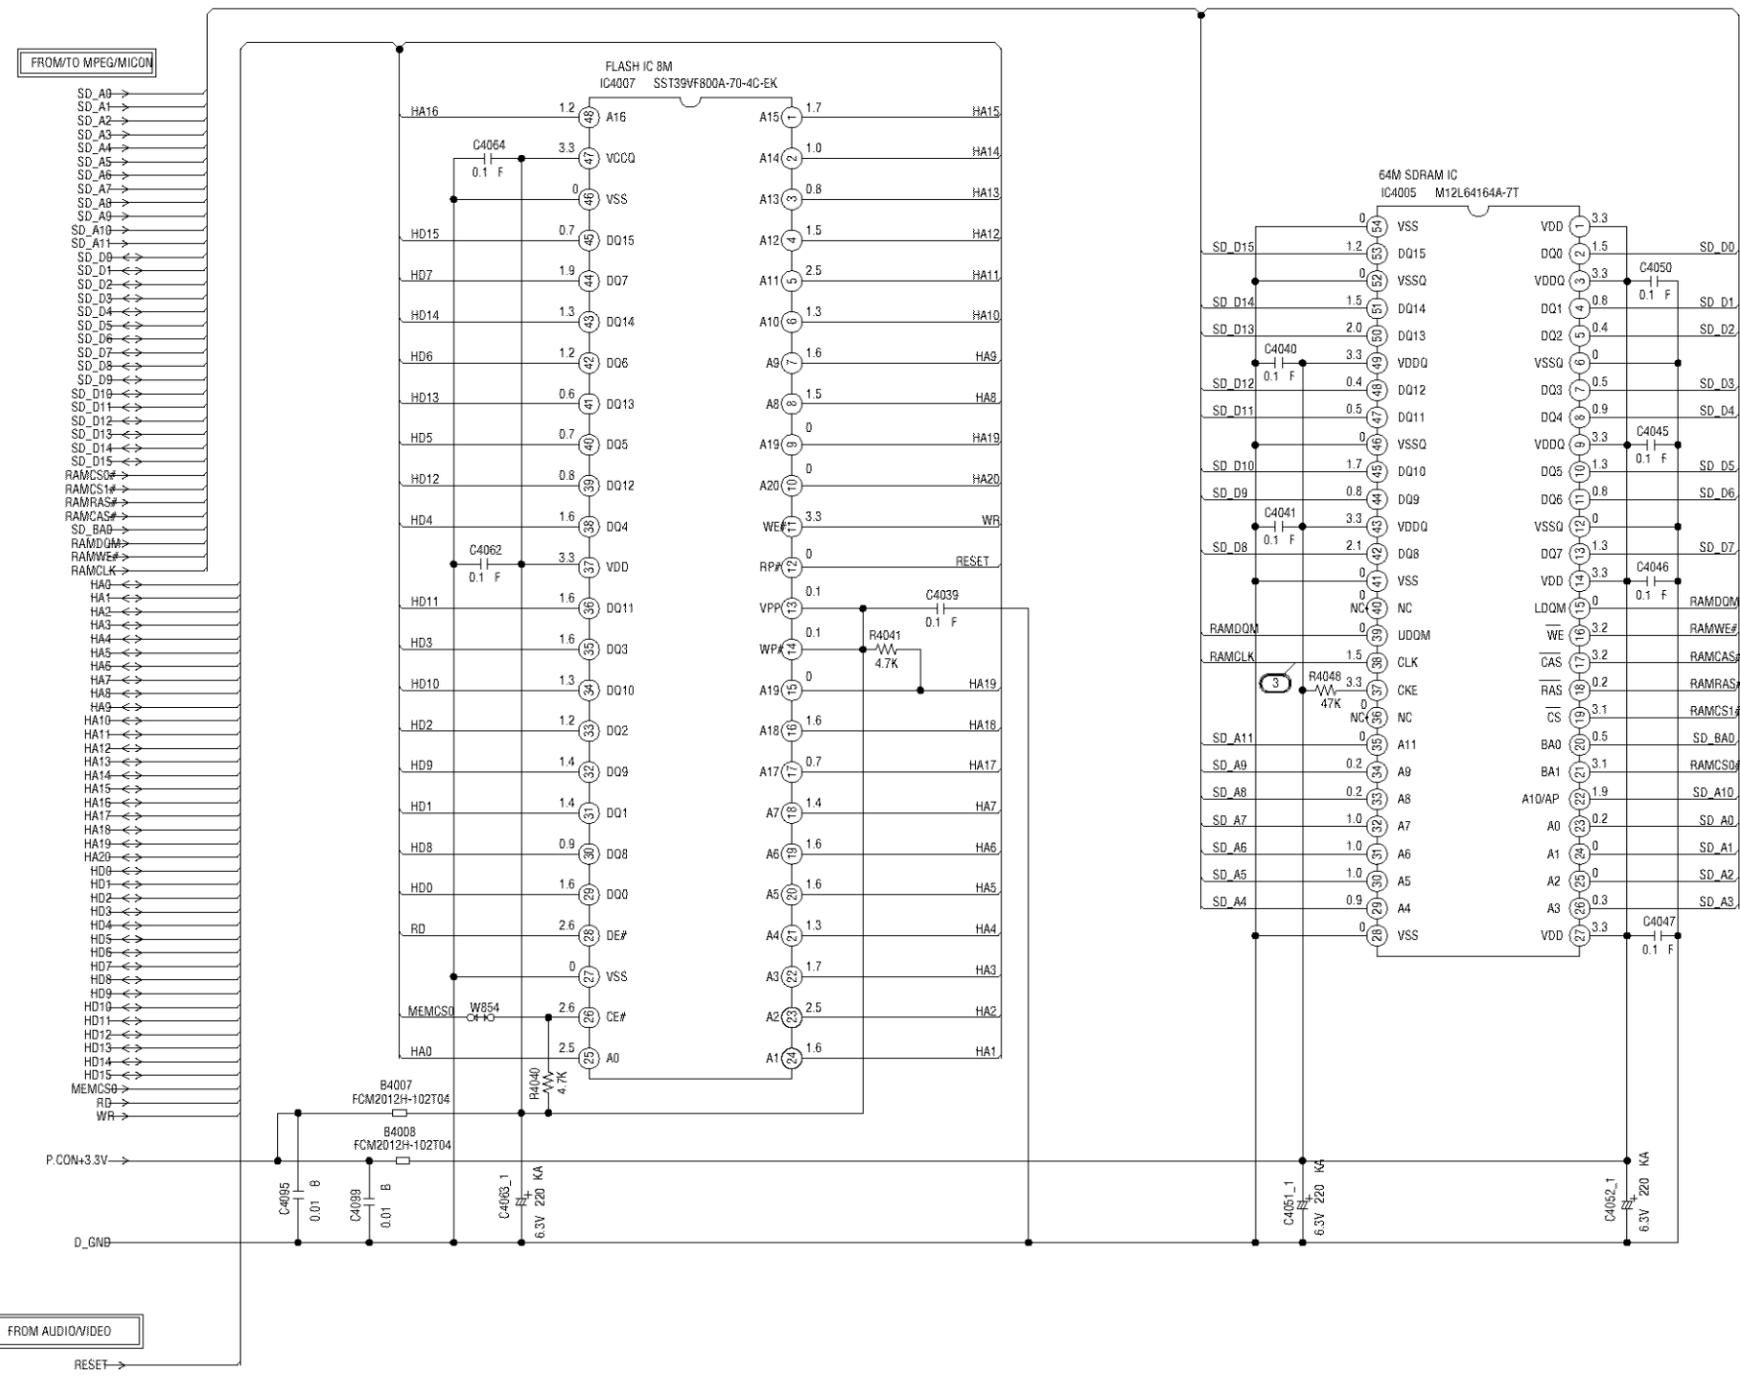

FROM TO MPEG/MICON


FROM AUDIO/VIDEO

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

PC8130
VMC319

RF AMP/DSP SCHEMATIC DIAGRAM (DVD PCB)

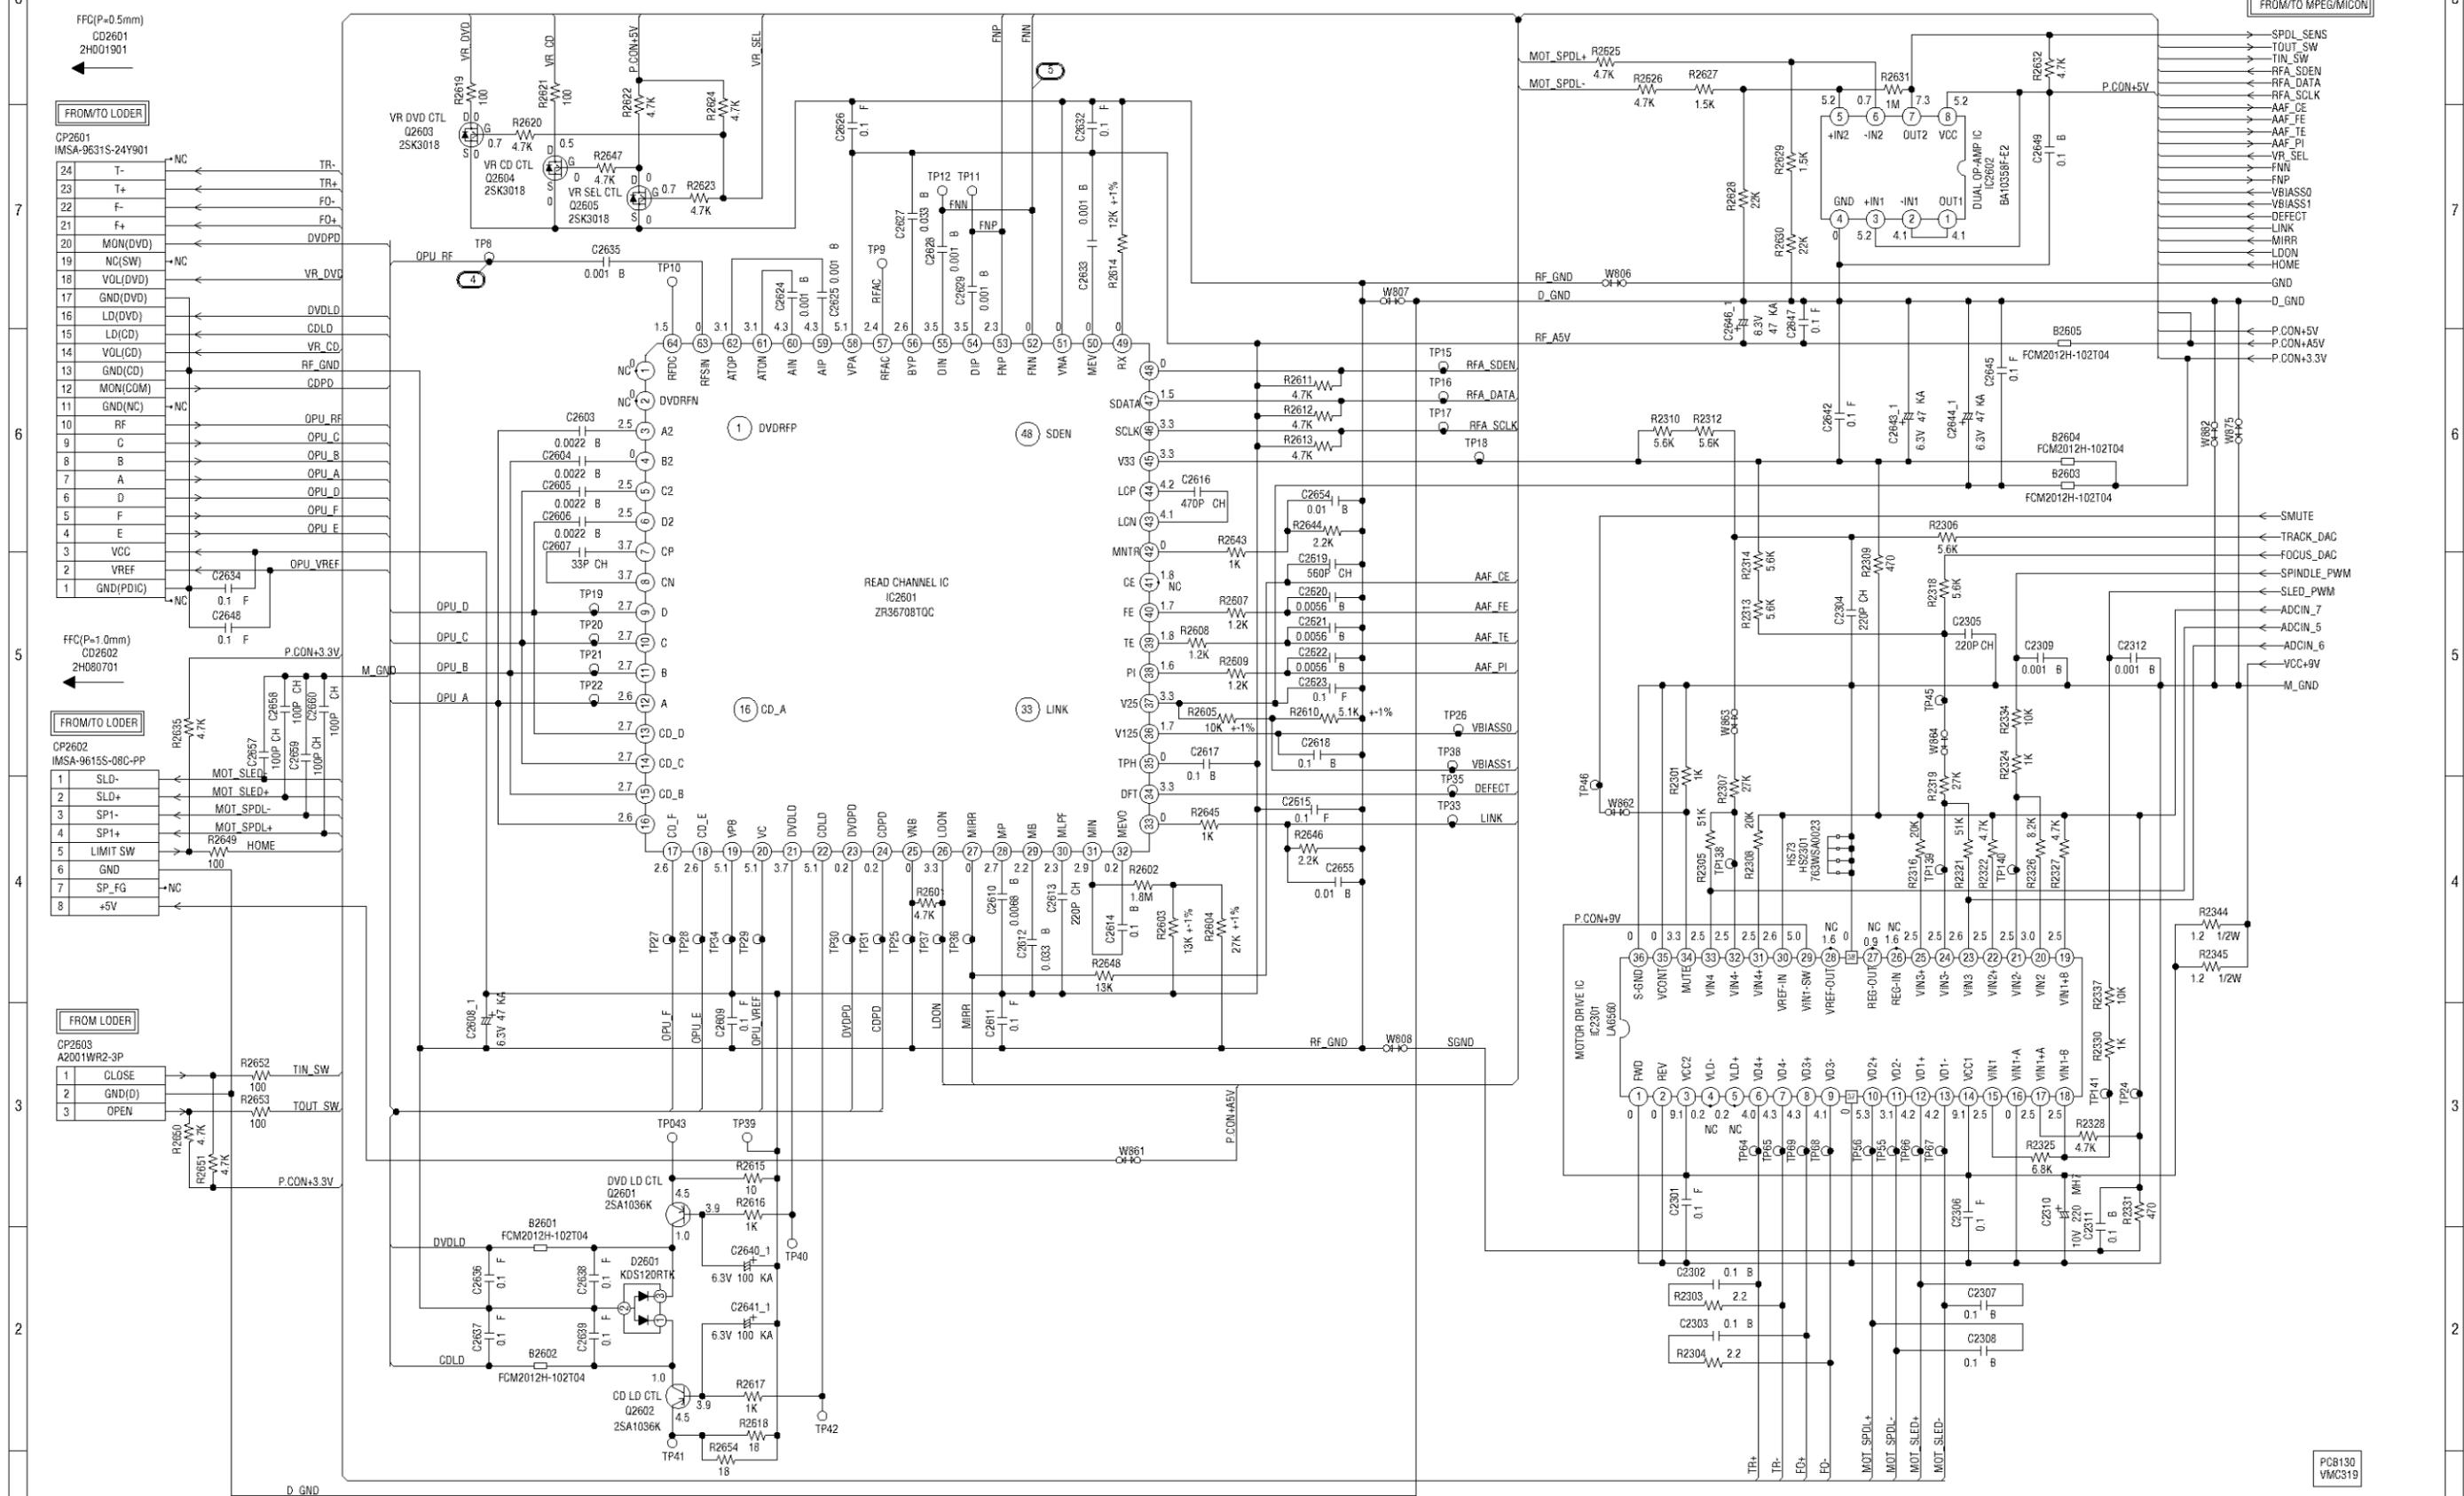


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

AUDIO/VIDEO SCHEMATIC DIAGRAM (DVD PCB)

	1	2	3	4
A	Y	G	CVBS	Y
B	V	R	Y	V
C	U	B	C	U
D	C	CVBS	CVBS	CVBS

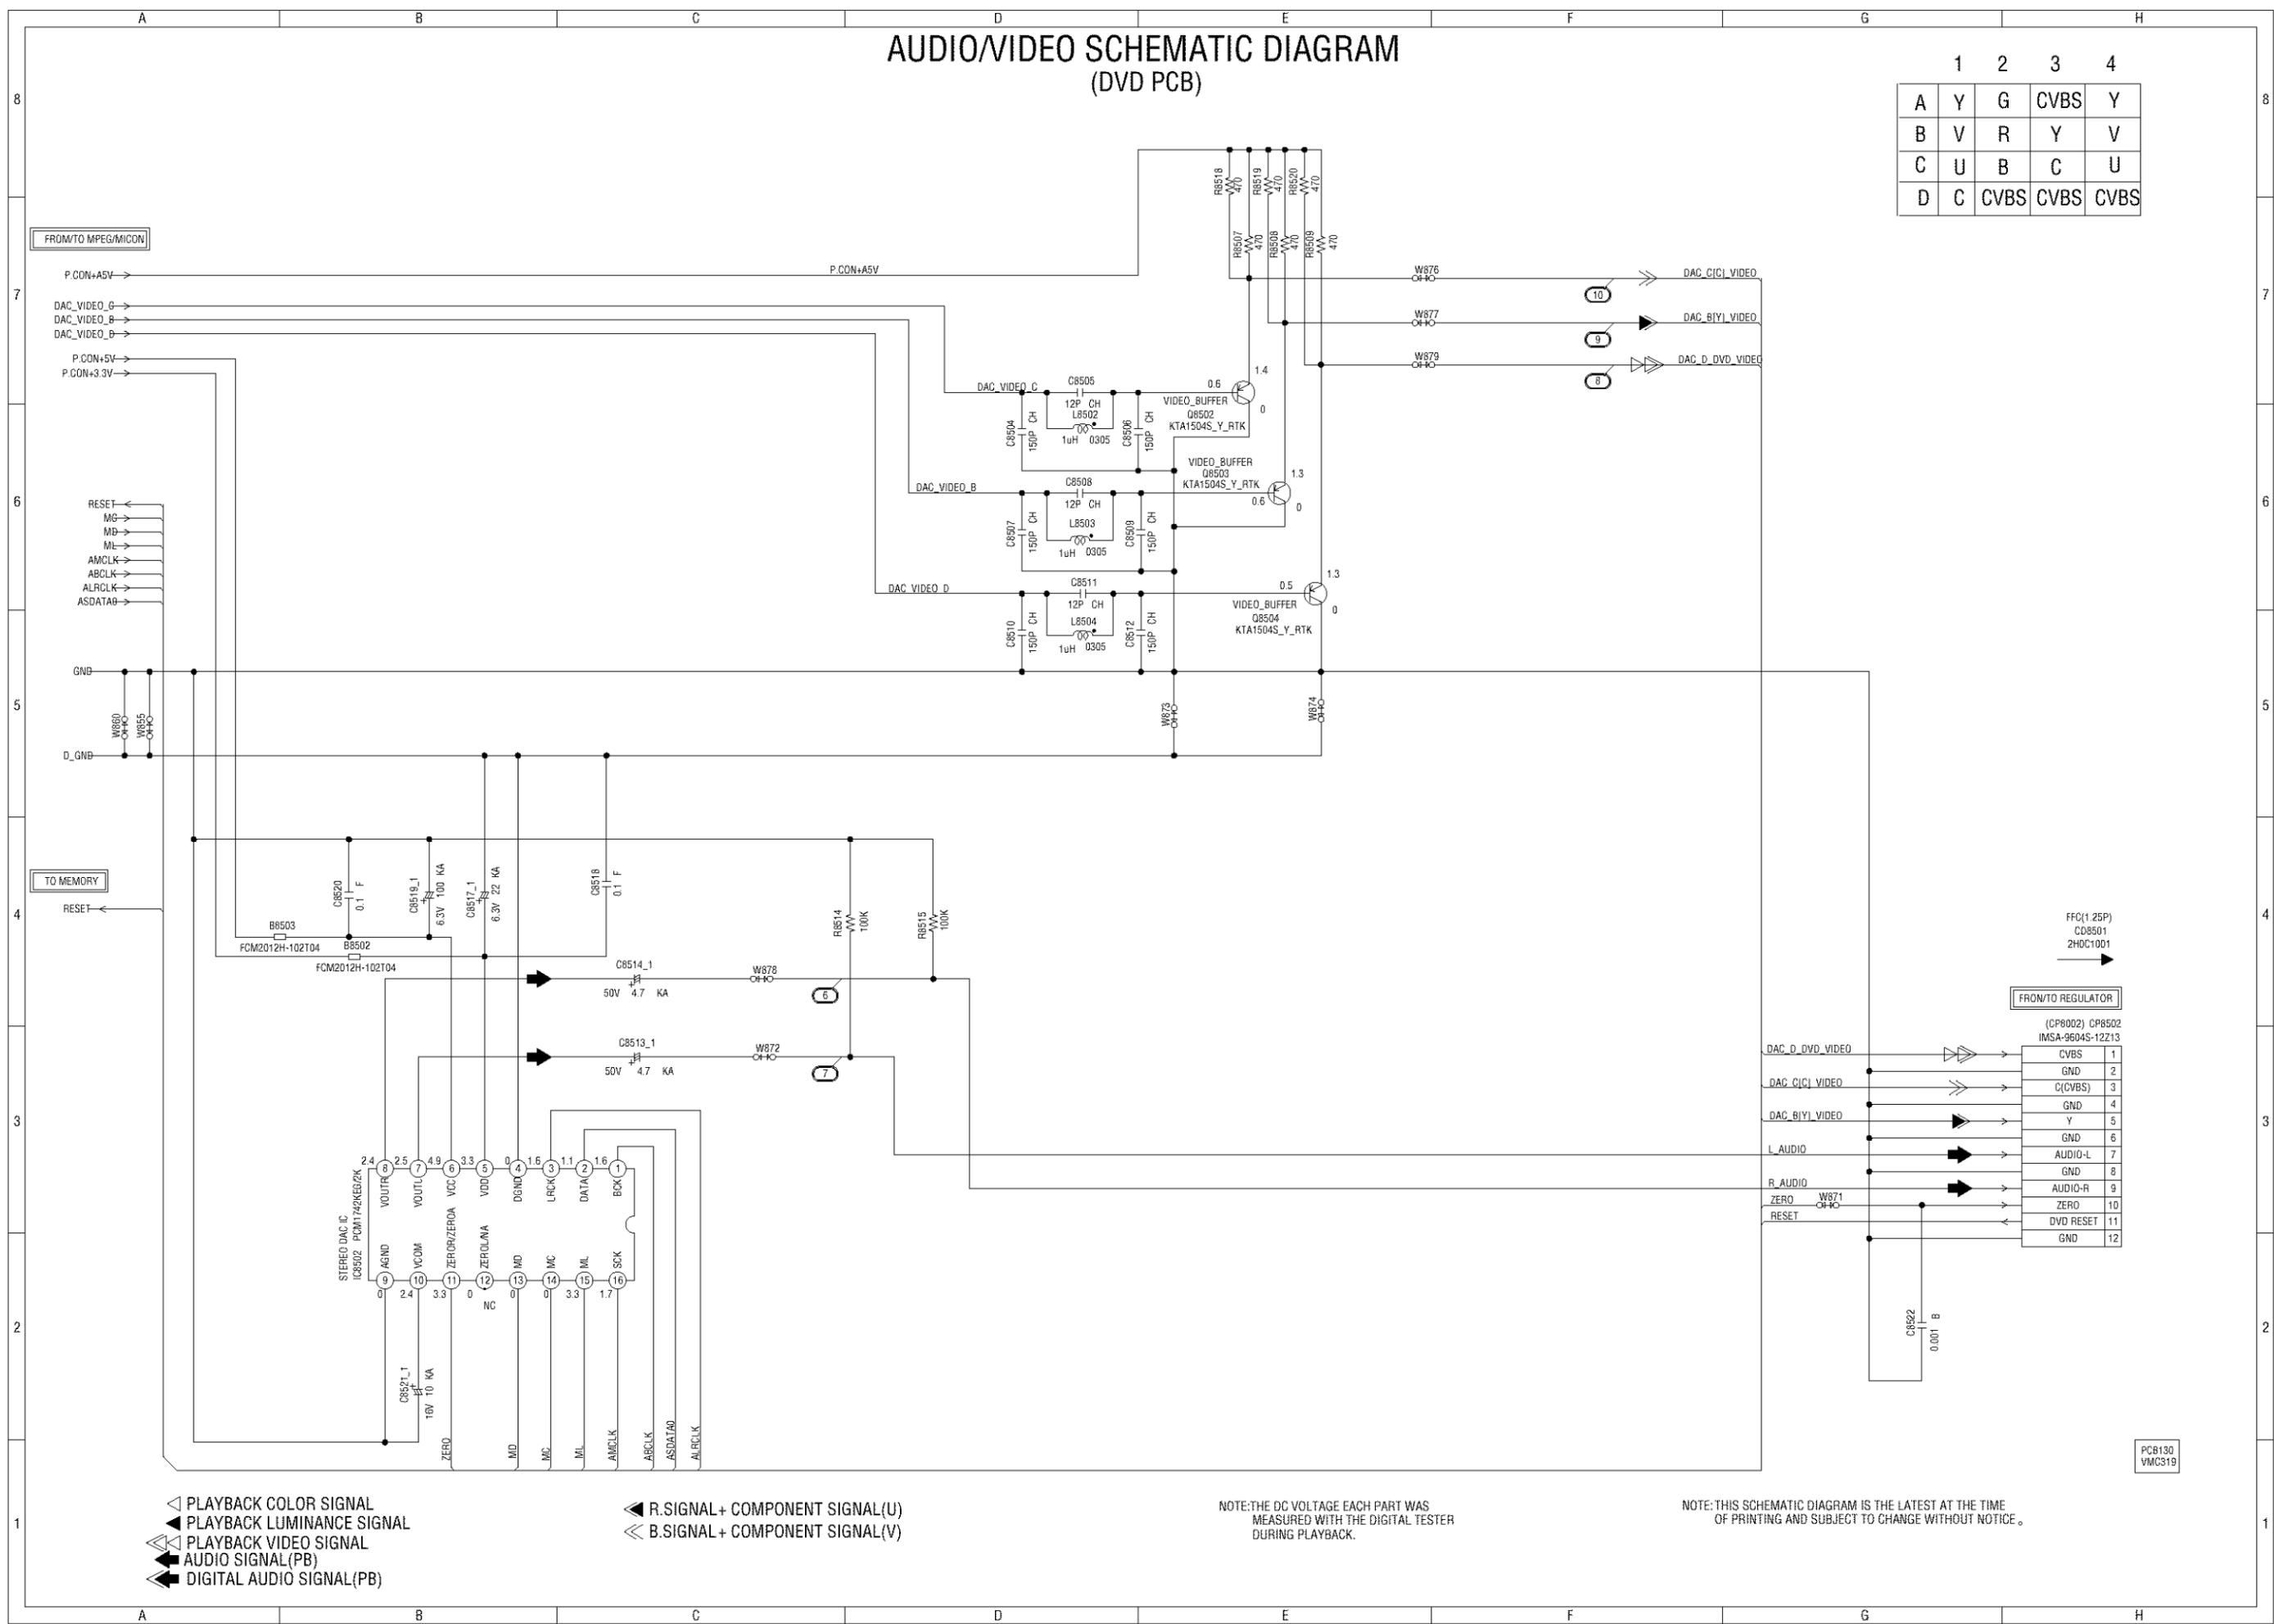

NOTE: THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

FROM/TO REGULATOR

(CP8002) CP8502	
IMSA-9604S-12Z13	
DAC_D_DVD_VIDEO	CVBS 1
DAC_C(C) VIDEO	GND 2
DAC_B(Y) VIDEO	C(CVBS) 3
	GND 4
	Y 5
	GND 6
L AUDIO	AUDIO-L 7
	GND 8
R AUDIO	AUDIO-R 9
ZERO	ZERO 10
DVD RESET	DVD RESET 11
	GND 12

PCB130
VMC819

REGULATOR SCHEMATIC DIAGRAM (AV PCB)

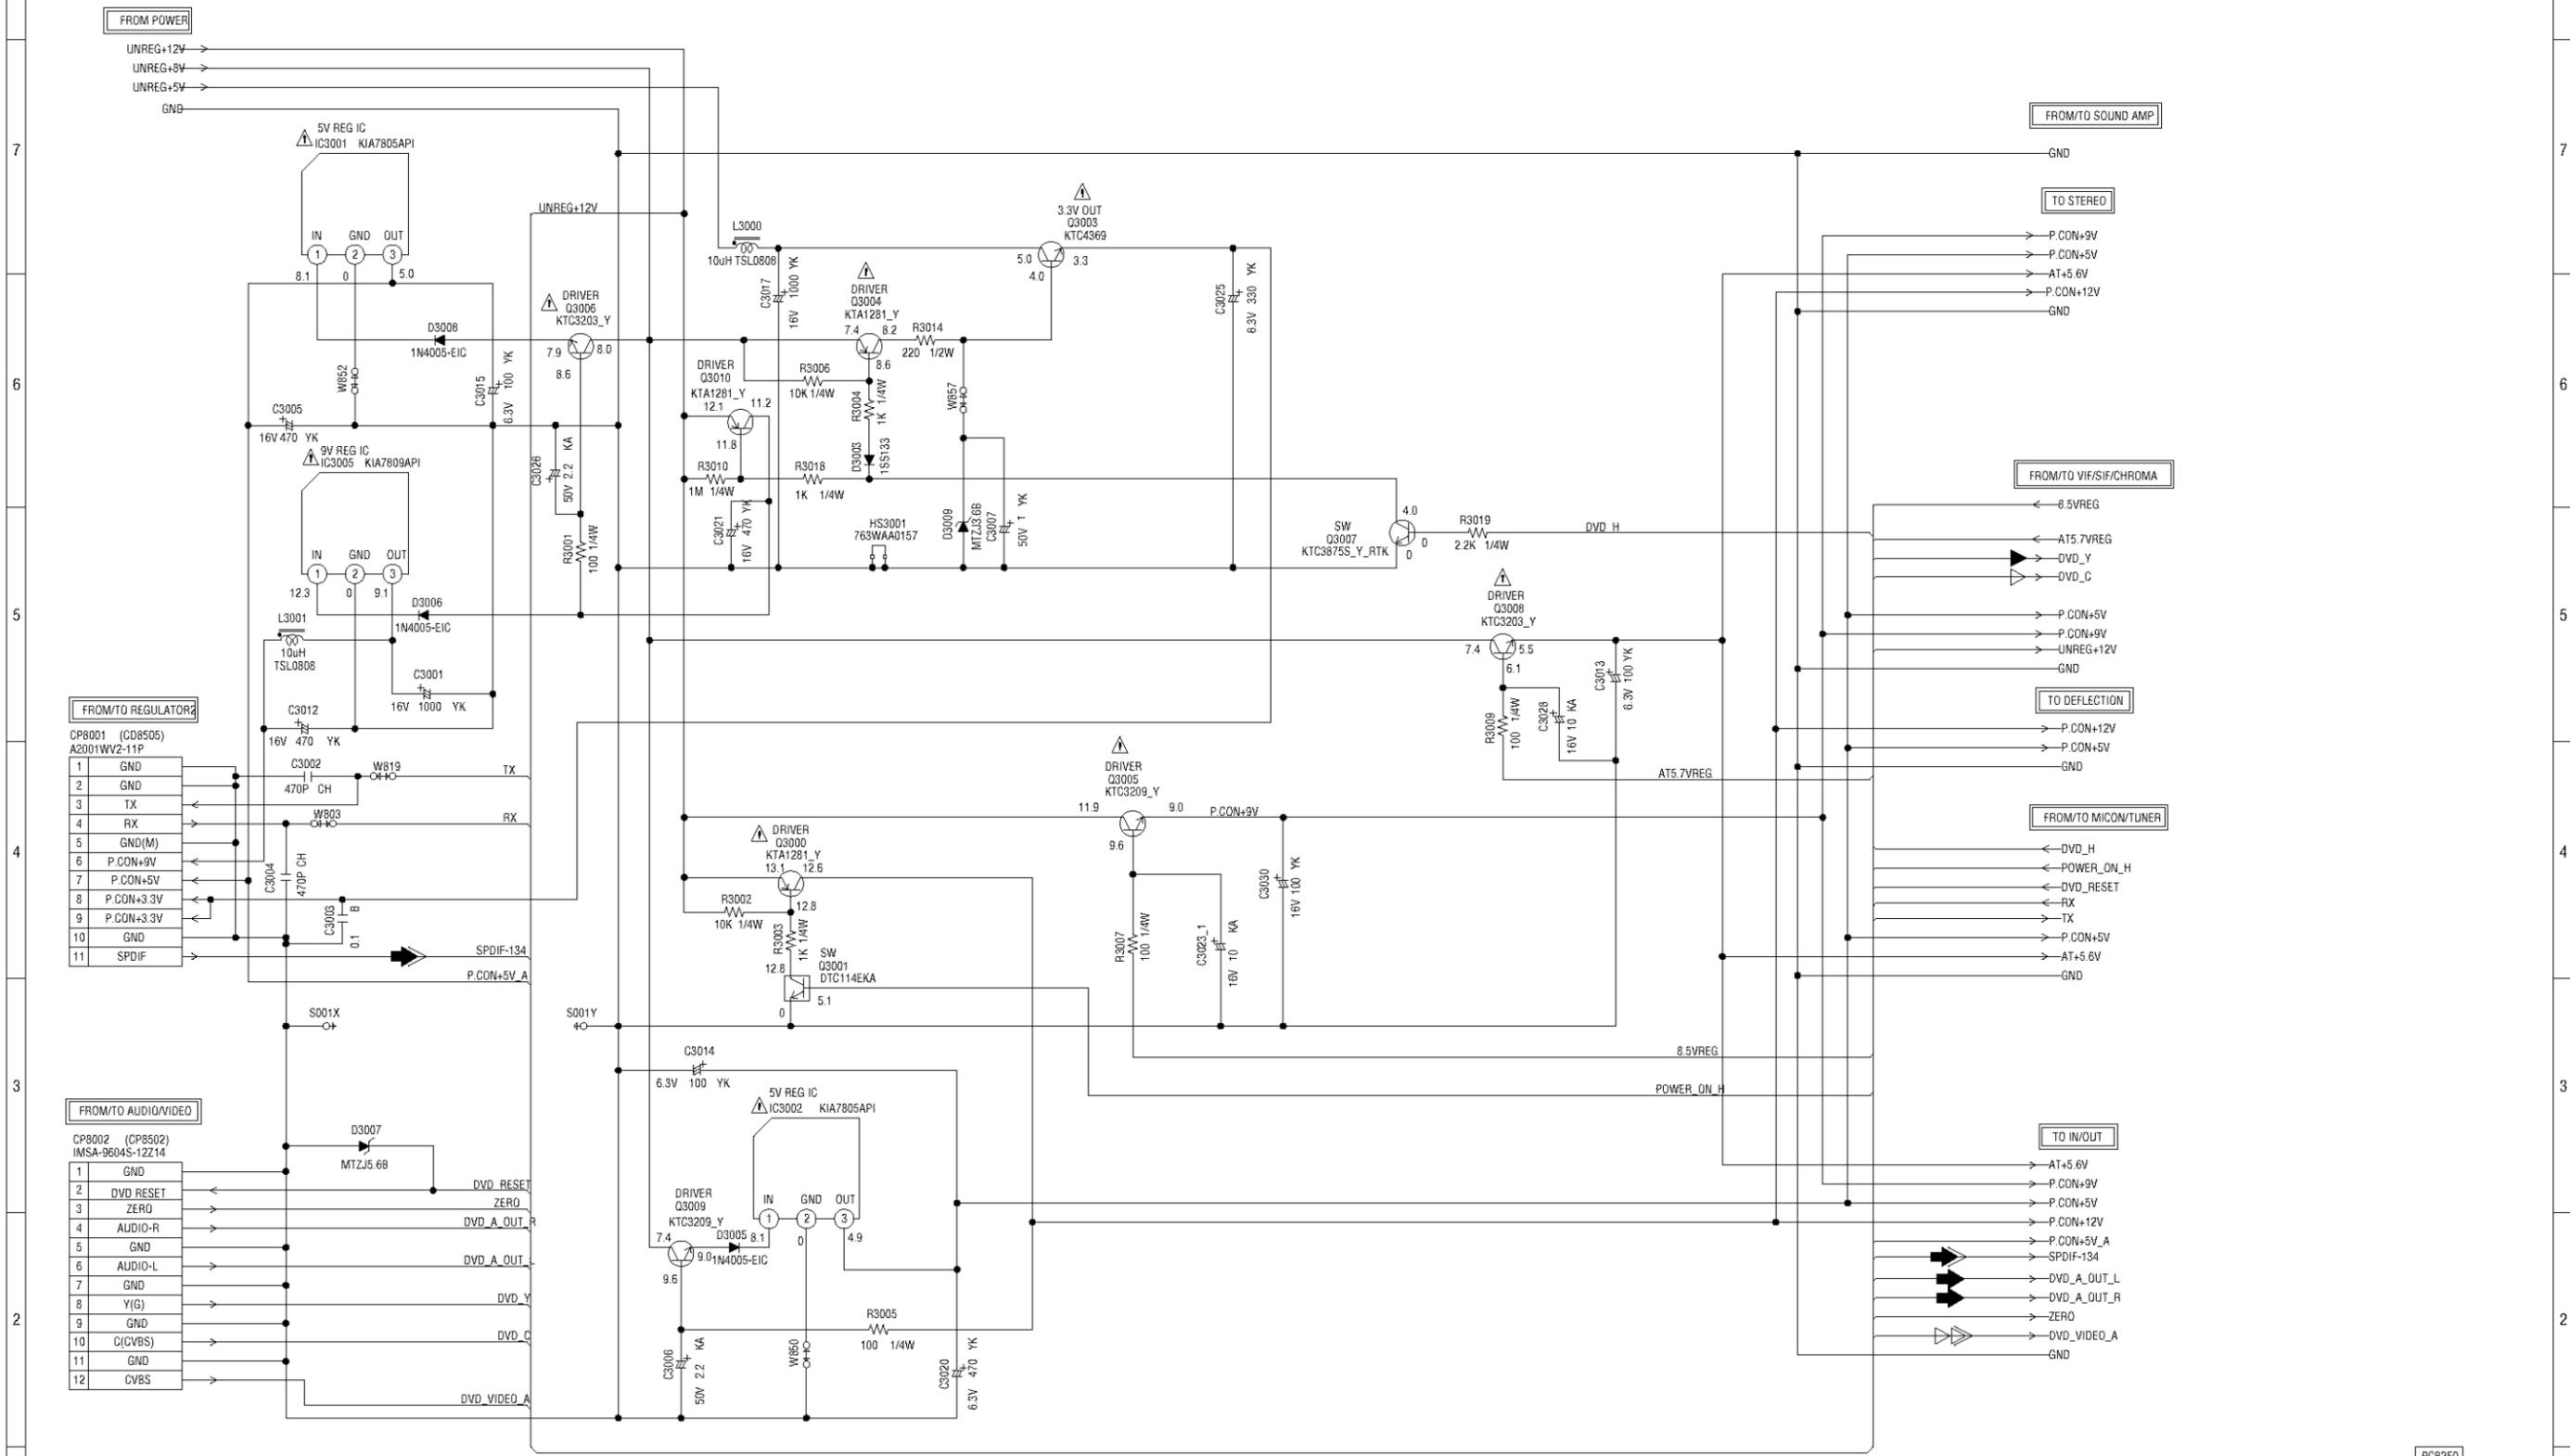

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

CAUTION SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

ATTENTION LES PIECES REPARÉES PAR UN ÉTANT DANGEREUSES AU POINT DE VUE SÉCURITÉ N'UTILISER QUE CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.


CAUTION: DIGITAL TRANSISTOR



- DIGITAL AUDIO SIGNAL (PB)
- PLAYBACK LUMINANCE SIGNAL
- PLAYBACK COLOR SIGNAL
- PLAYBACK VIDEO SIGNAL
- AUDIO SIGNAL (PB)

PCB250
TM8555

MICON /TUNER SCHEMATIC DIAGRAM (AV PCB)

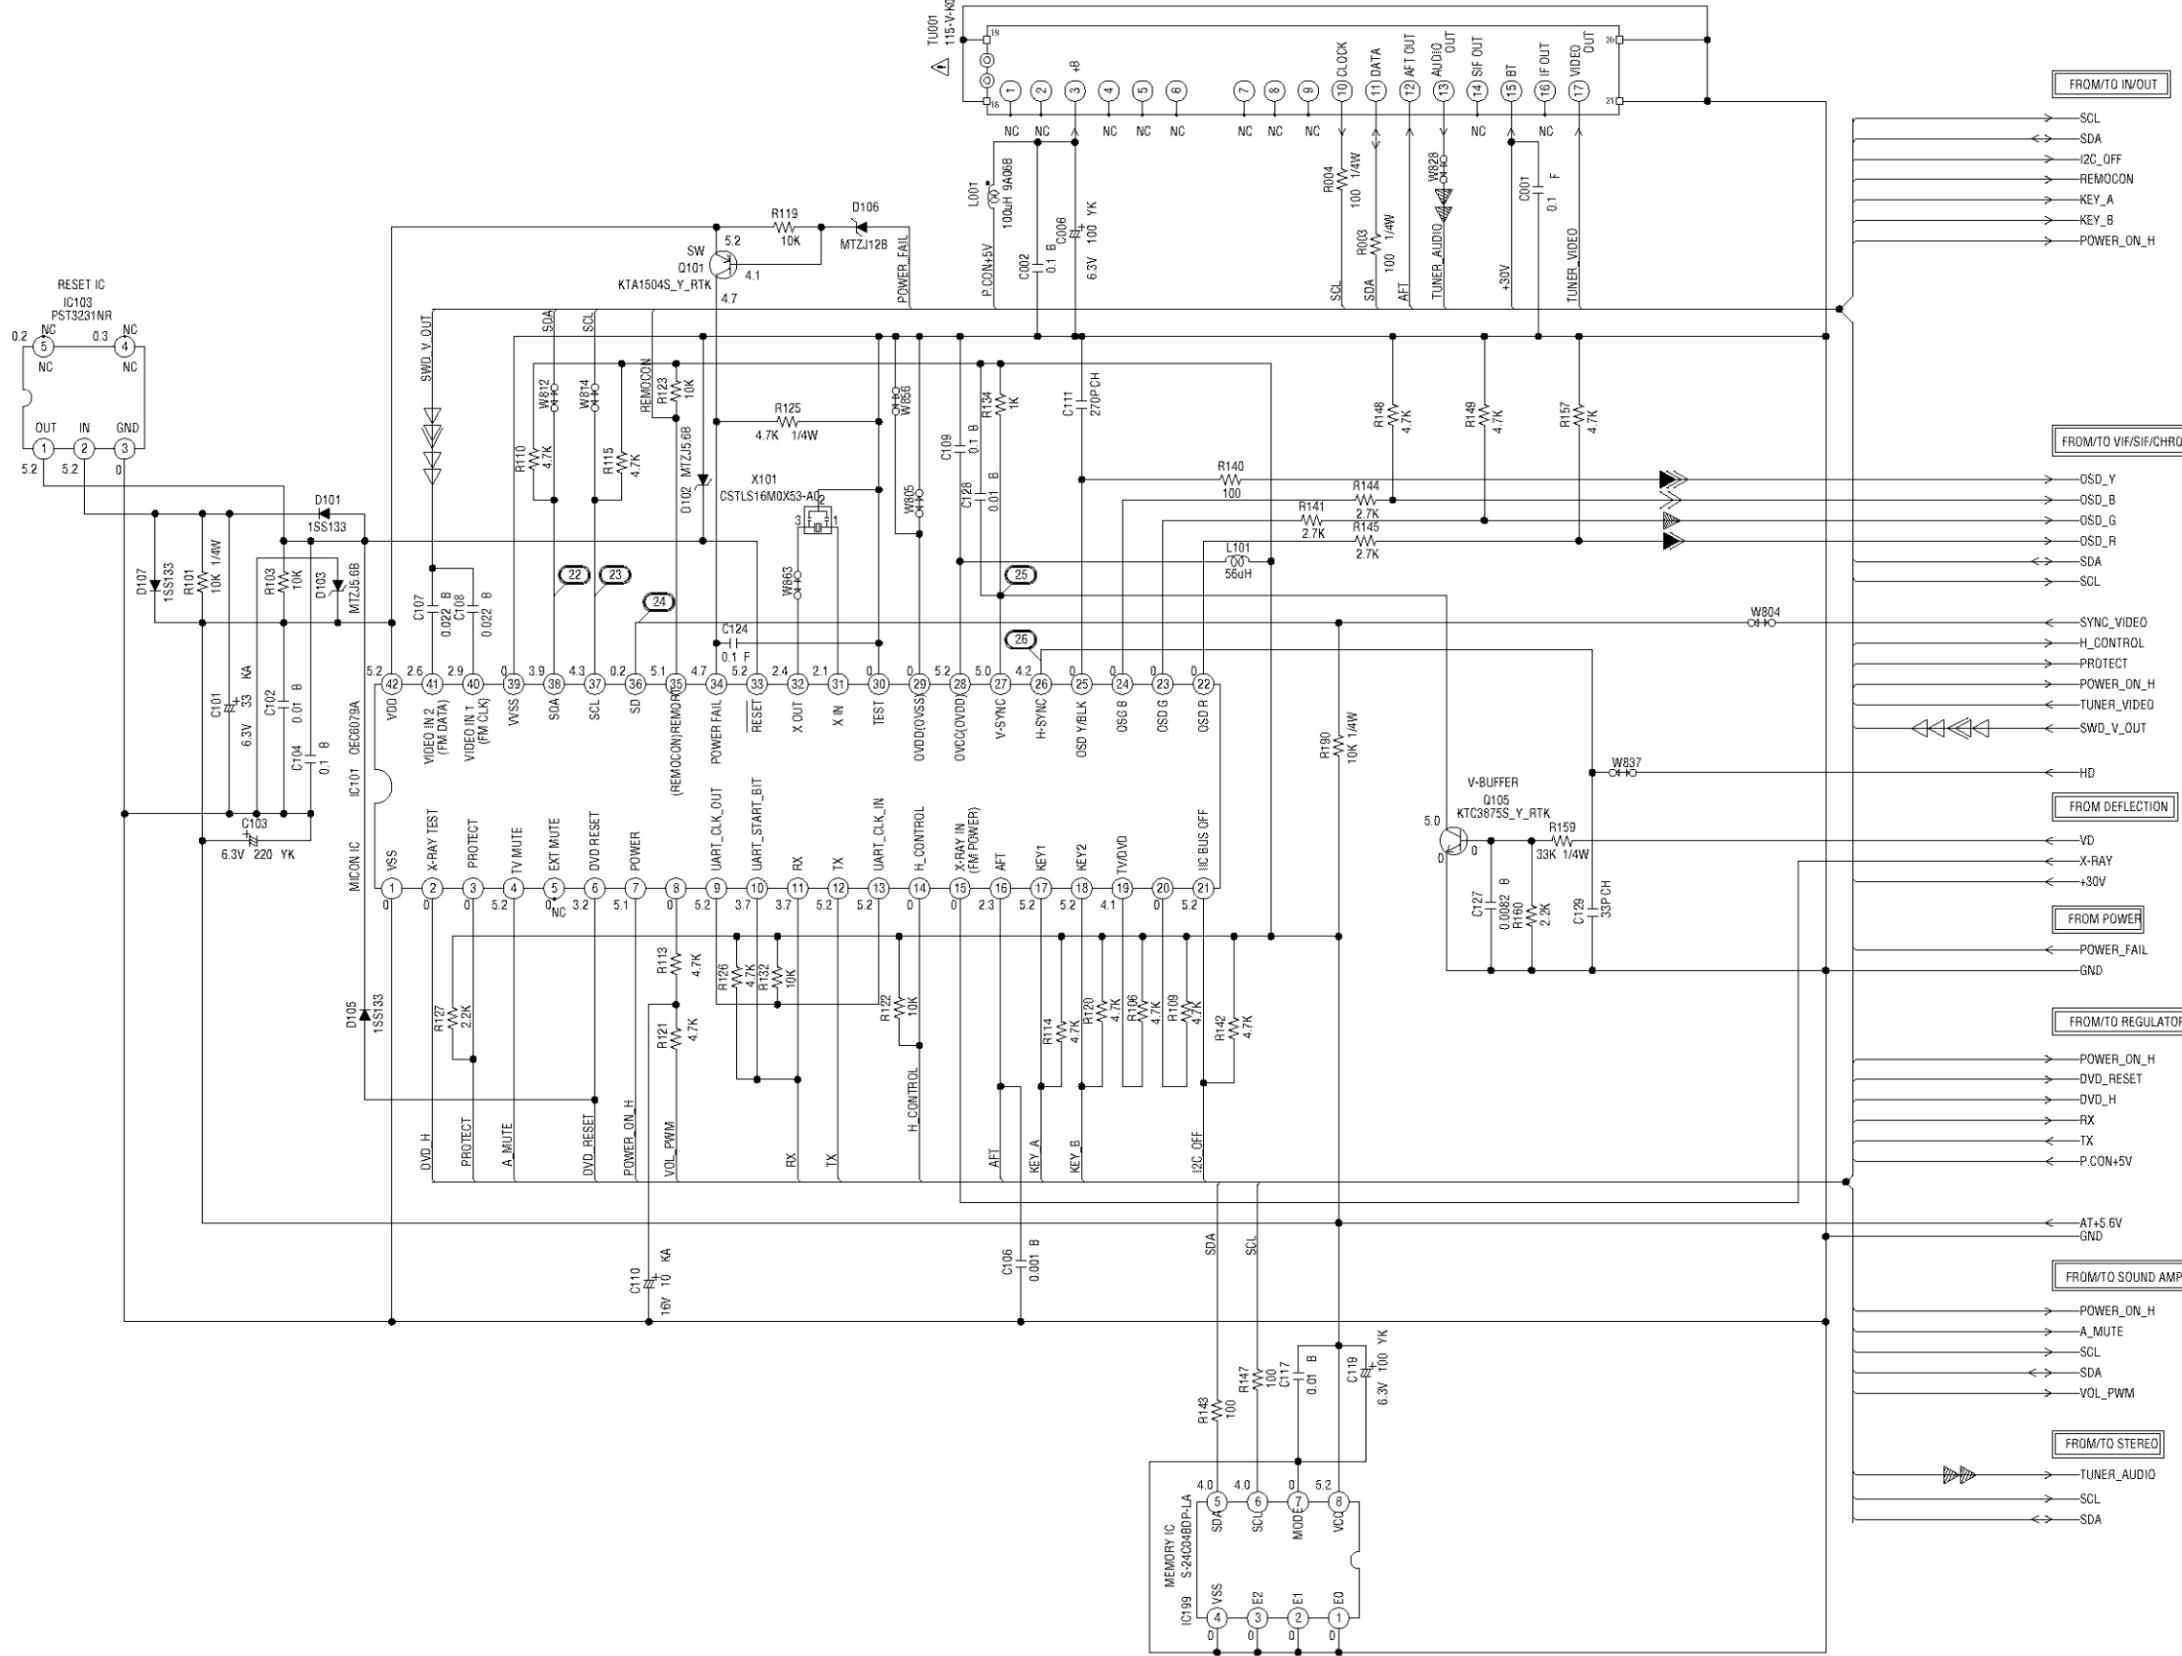

FROM/TO IN/OUT

FROM/TO VIF/SIF/CHROMA

FROM DEFLECTION

FROM POWER

FROM/TO REGULATOR

FROM/TO SOUND AMP

FROM/TO STEREO

- SCL
- SDA
- I2C_OFF
- REMOCON
- KEY_A
- KEY_B
- POWER_ON_H
- OSD_Y
- OSD_B
- OSD_G
- OSD_R
- SDA
- SCL
- SYNC_VIDEO
- H_CONTROL
- PROTECT
- POWER_ON_H
- TUNER_VIDEO
- SWD_V_OUT
- HD
- VD
- X-RAY
- +30V
- POWER_FAIL
- GND
- POWER_ON_H
- DVD_RESET
- DVD_H
- RX
- TX
- P.CON+5V
- AT+5.6V
- GND
- POWER_ON_H
- A_MUTE
- SCL
- SDA
- VOL_PWM
- TUNER_AUDIO
- SCL
- SDA

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

ATTENTION: LES PIÈCES RÉPARÉES PAR UN ÉTANT DANGEREUSES AU POINT DE VUE SÉCURITÉ N'UTILISER QUE CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.


CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

- LUMINANCE SIGNAL
- B SIGNAL
- G SIGNAL
- R SIGNAL

- TUNER AUDIO SIGNAL
- TUNER VIDEO SIGNAL
- PLAYBACK VIDEO SIGNAL

PCB250
TM8555

VIF/SIF/CHROMA SCHEMATIC DIAGRAM (AV PCB)

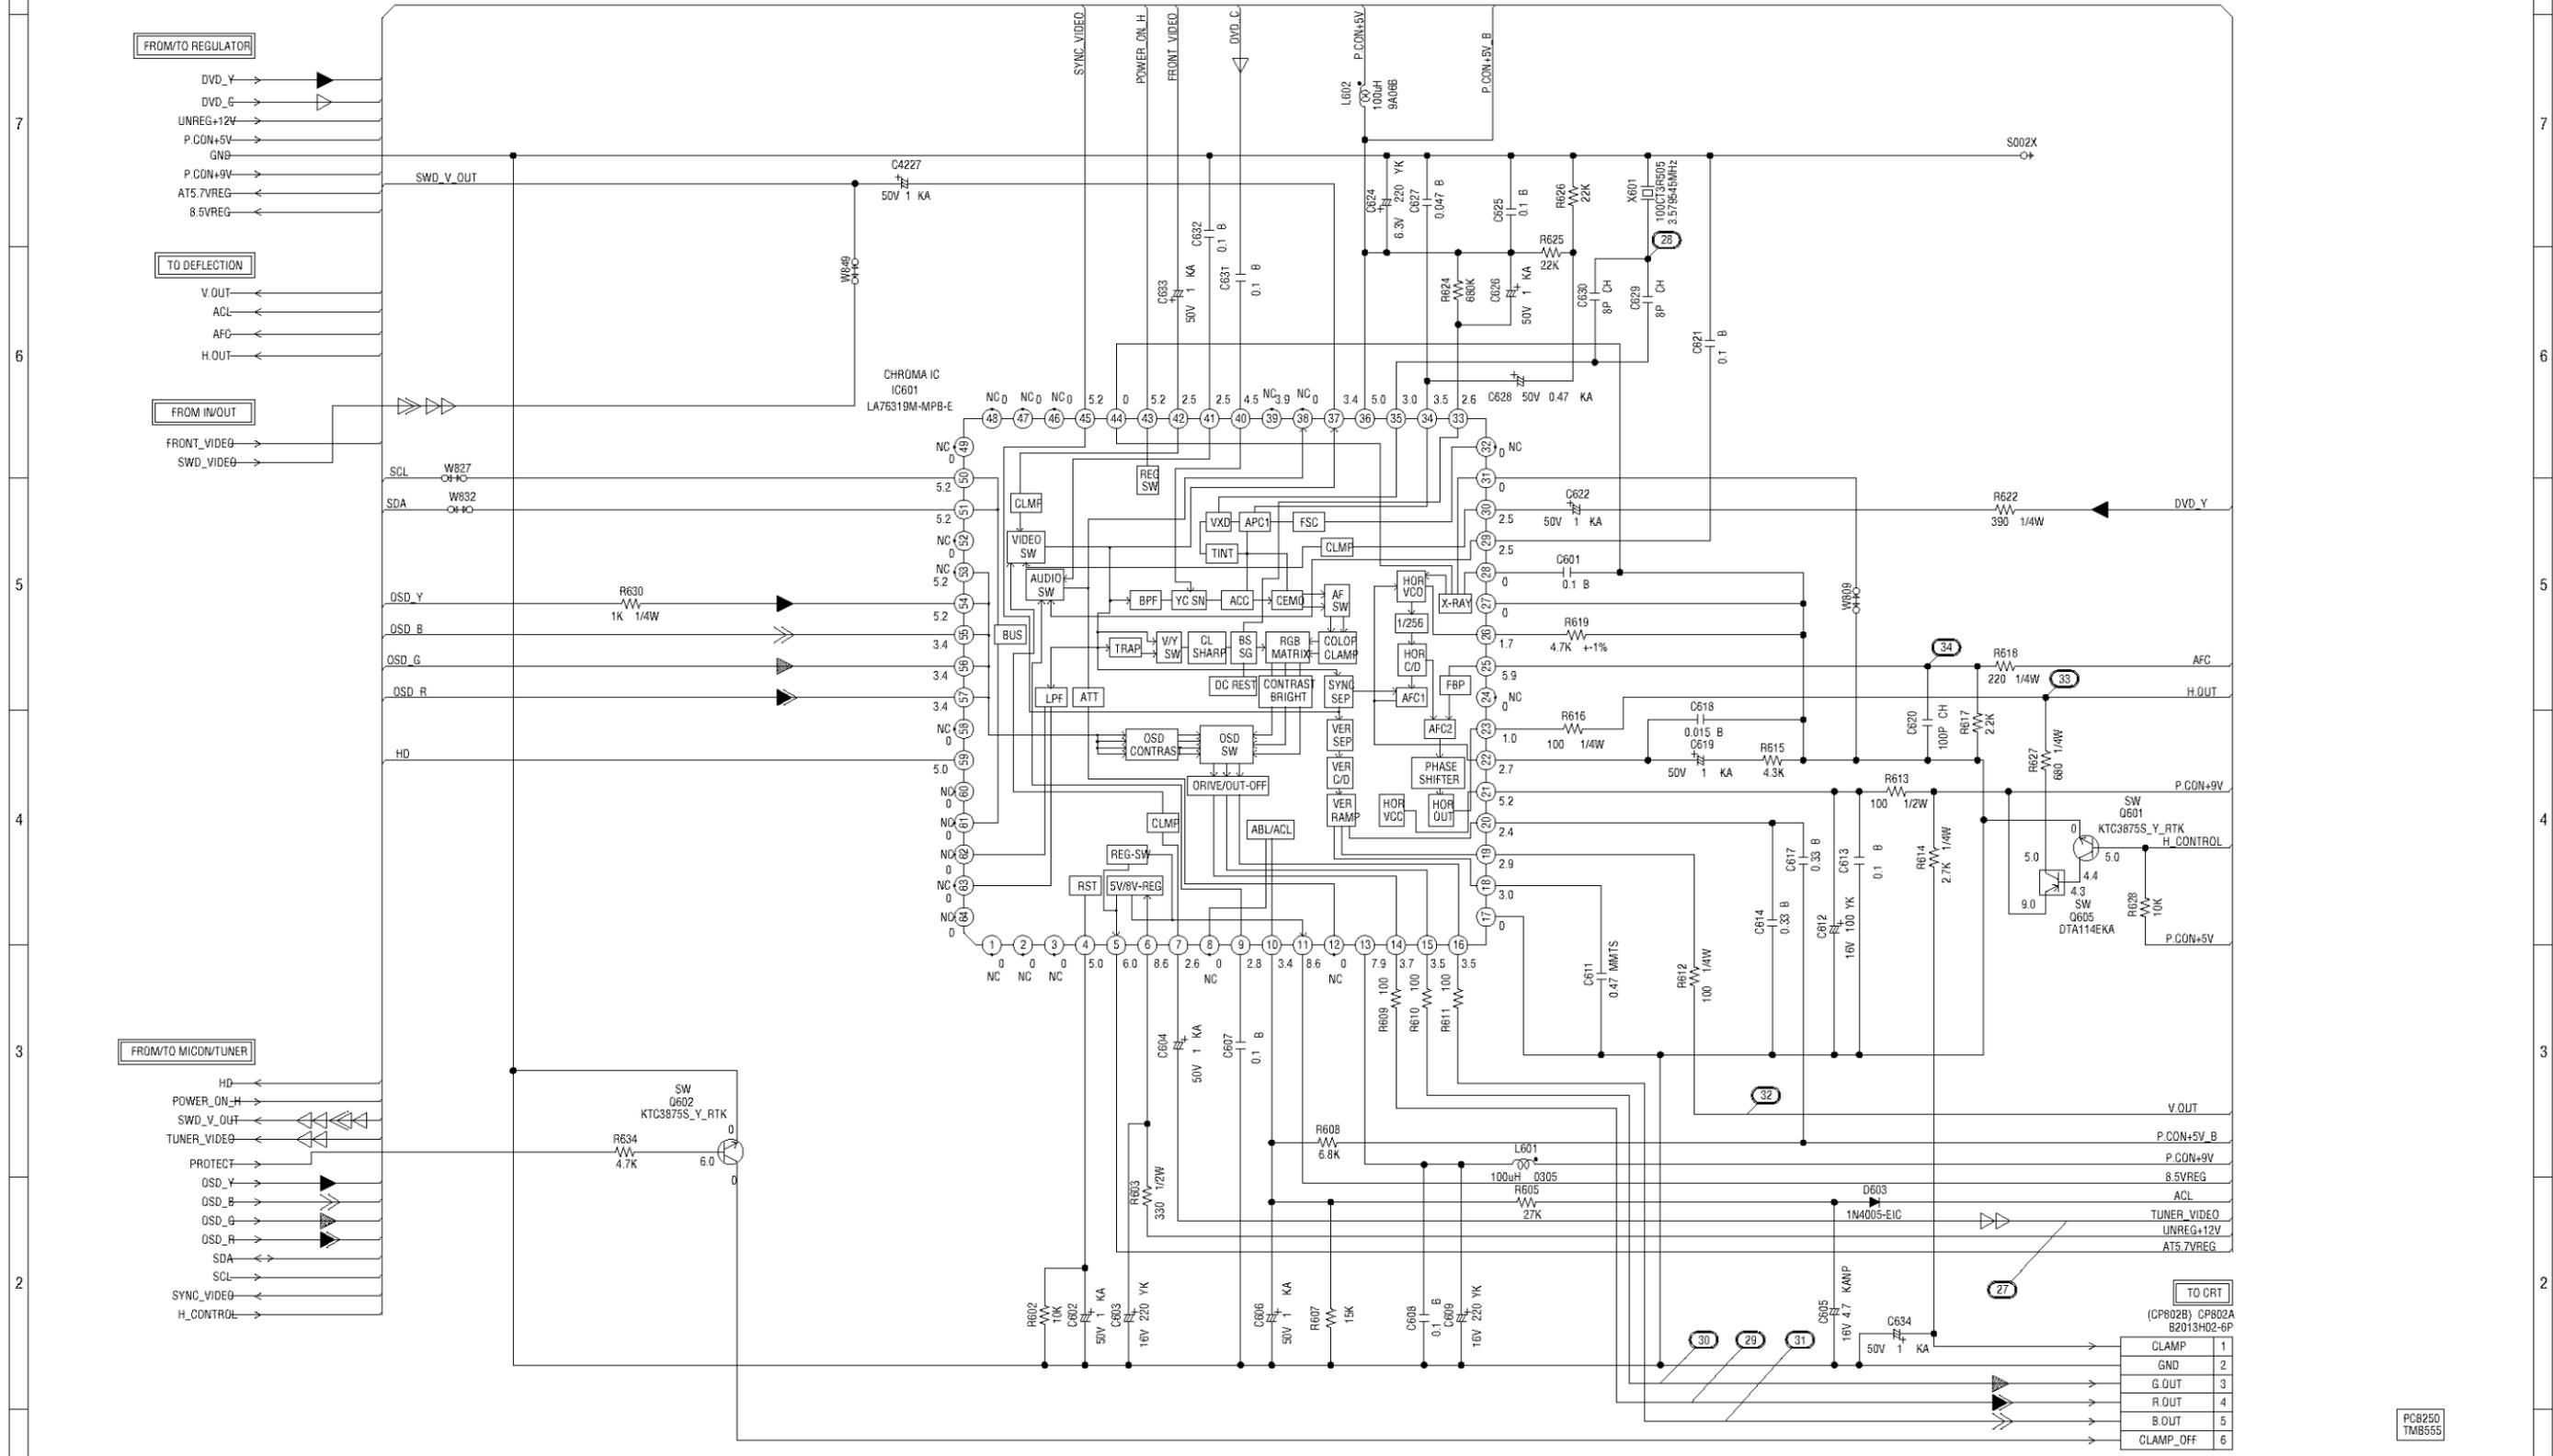

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.


CAUTION: DIGITAL TRANSISTOR



- ▶ PLAYBACK LUMINANCE SIGNAL
- ◄◄ PLAYBACK COLOR SIGNAL
- ▲ B SIGNAL
- △ G SIGNAL
- ▼ R SIGNAL

- ◄◄ TUNER VIDEO SIGNAL
- ◄◄◄ PLAYBACK VIDEO SIGNAL

SOUND AMP SCHEMATIC DIAGRAM (AV PCB)

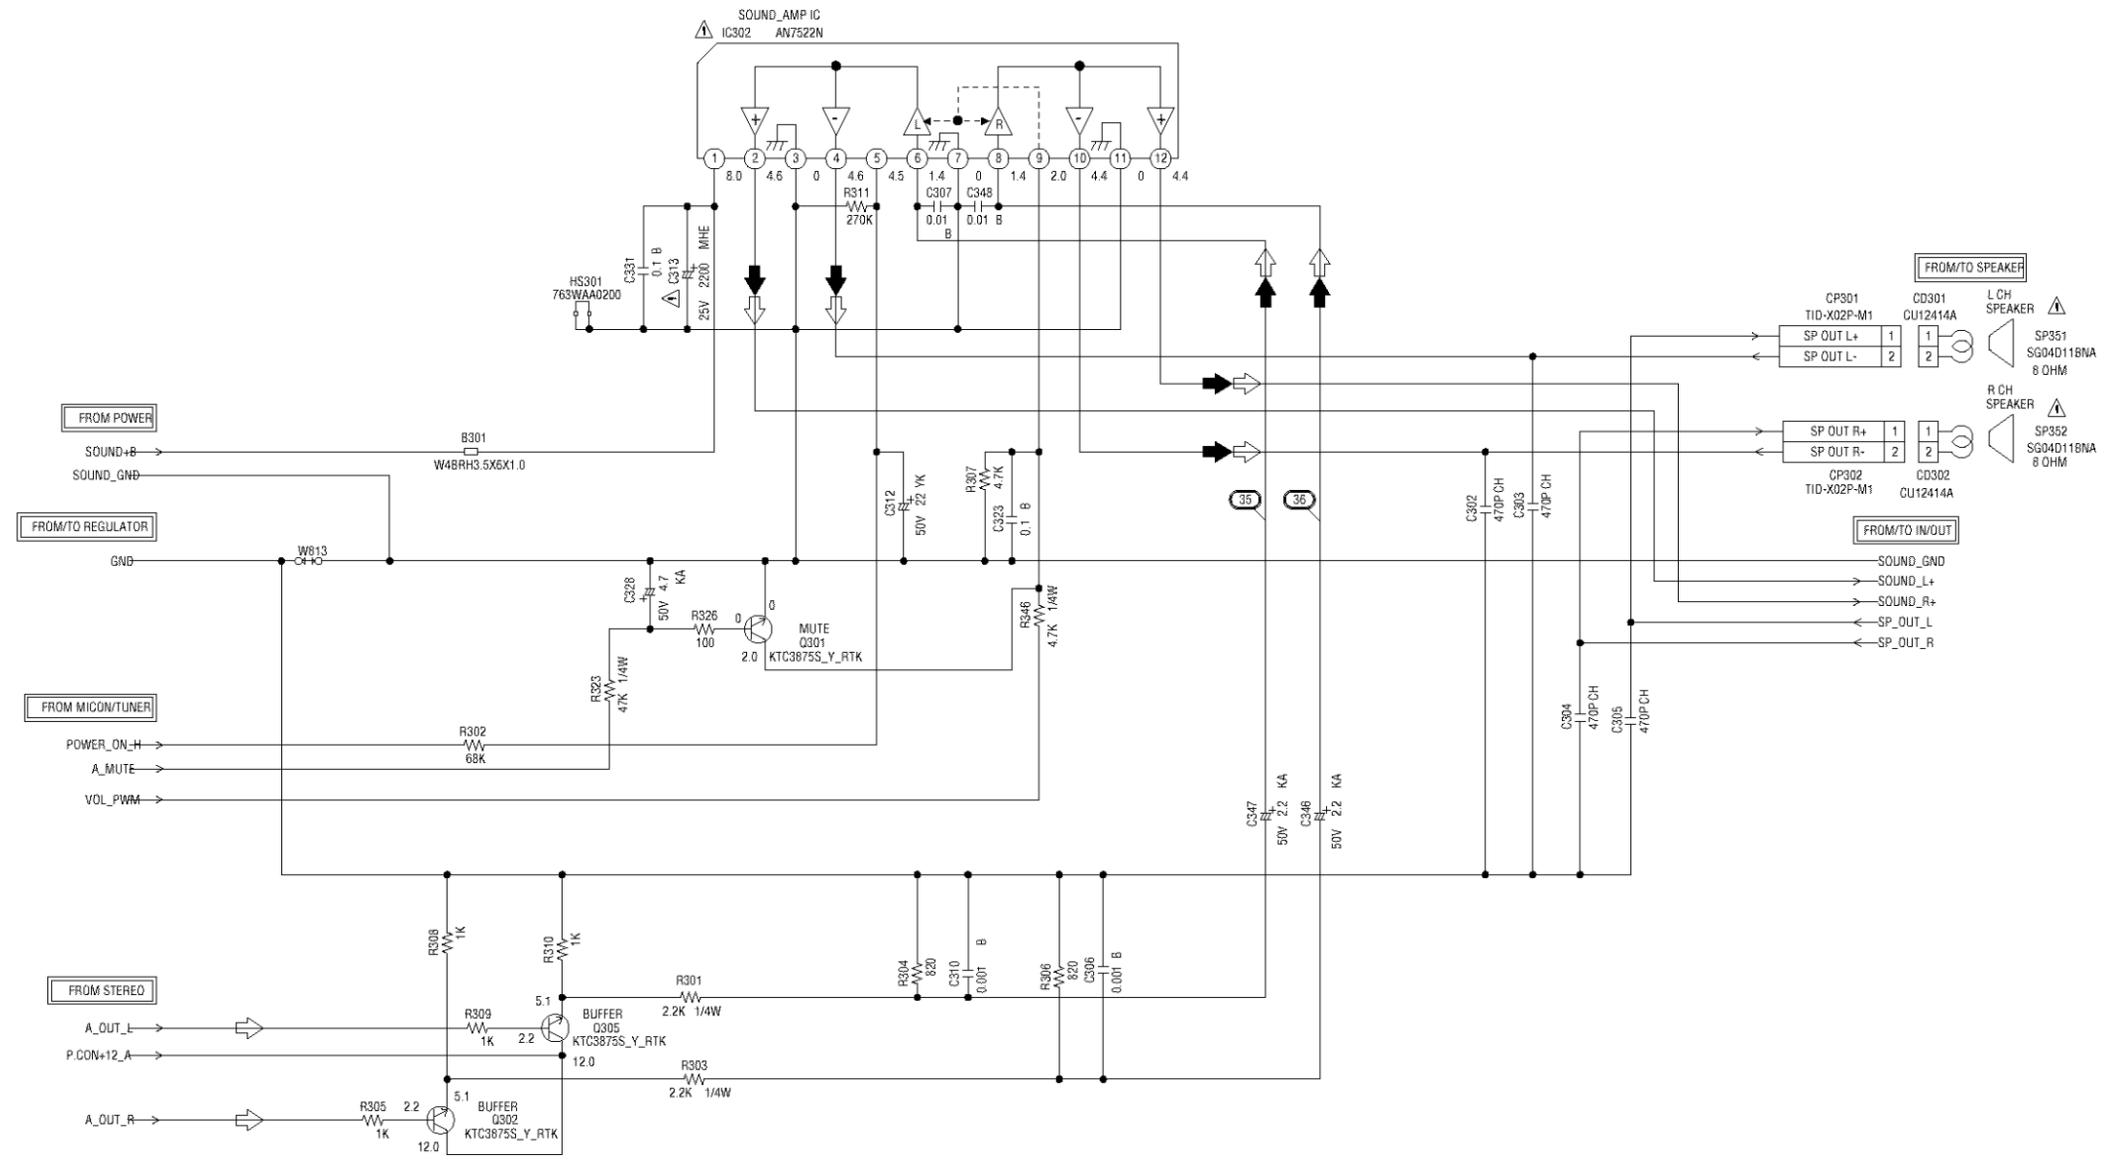

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.


ATTENTION: LES PIÈCES RÉPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.

CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

AUDIO SIGNAL
 AUDIO SIGNAL (PB)


PCB250
TM8555

IN/OUT SCHEMATIC DIAGRAM (AV PCB)

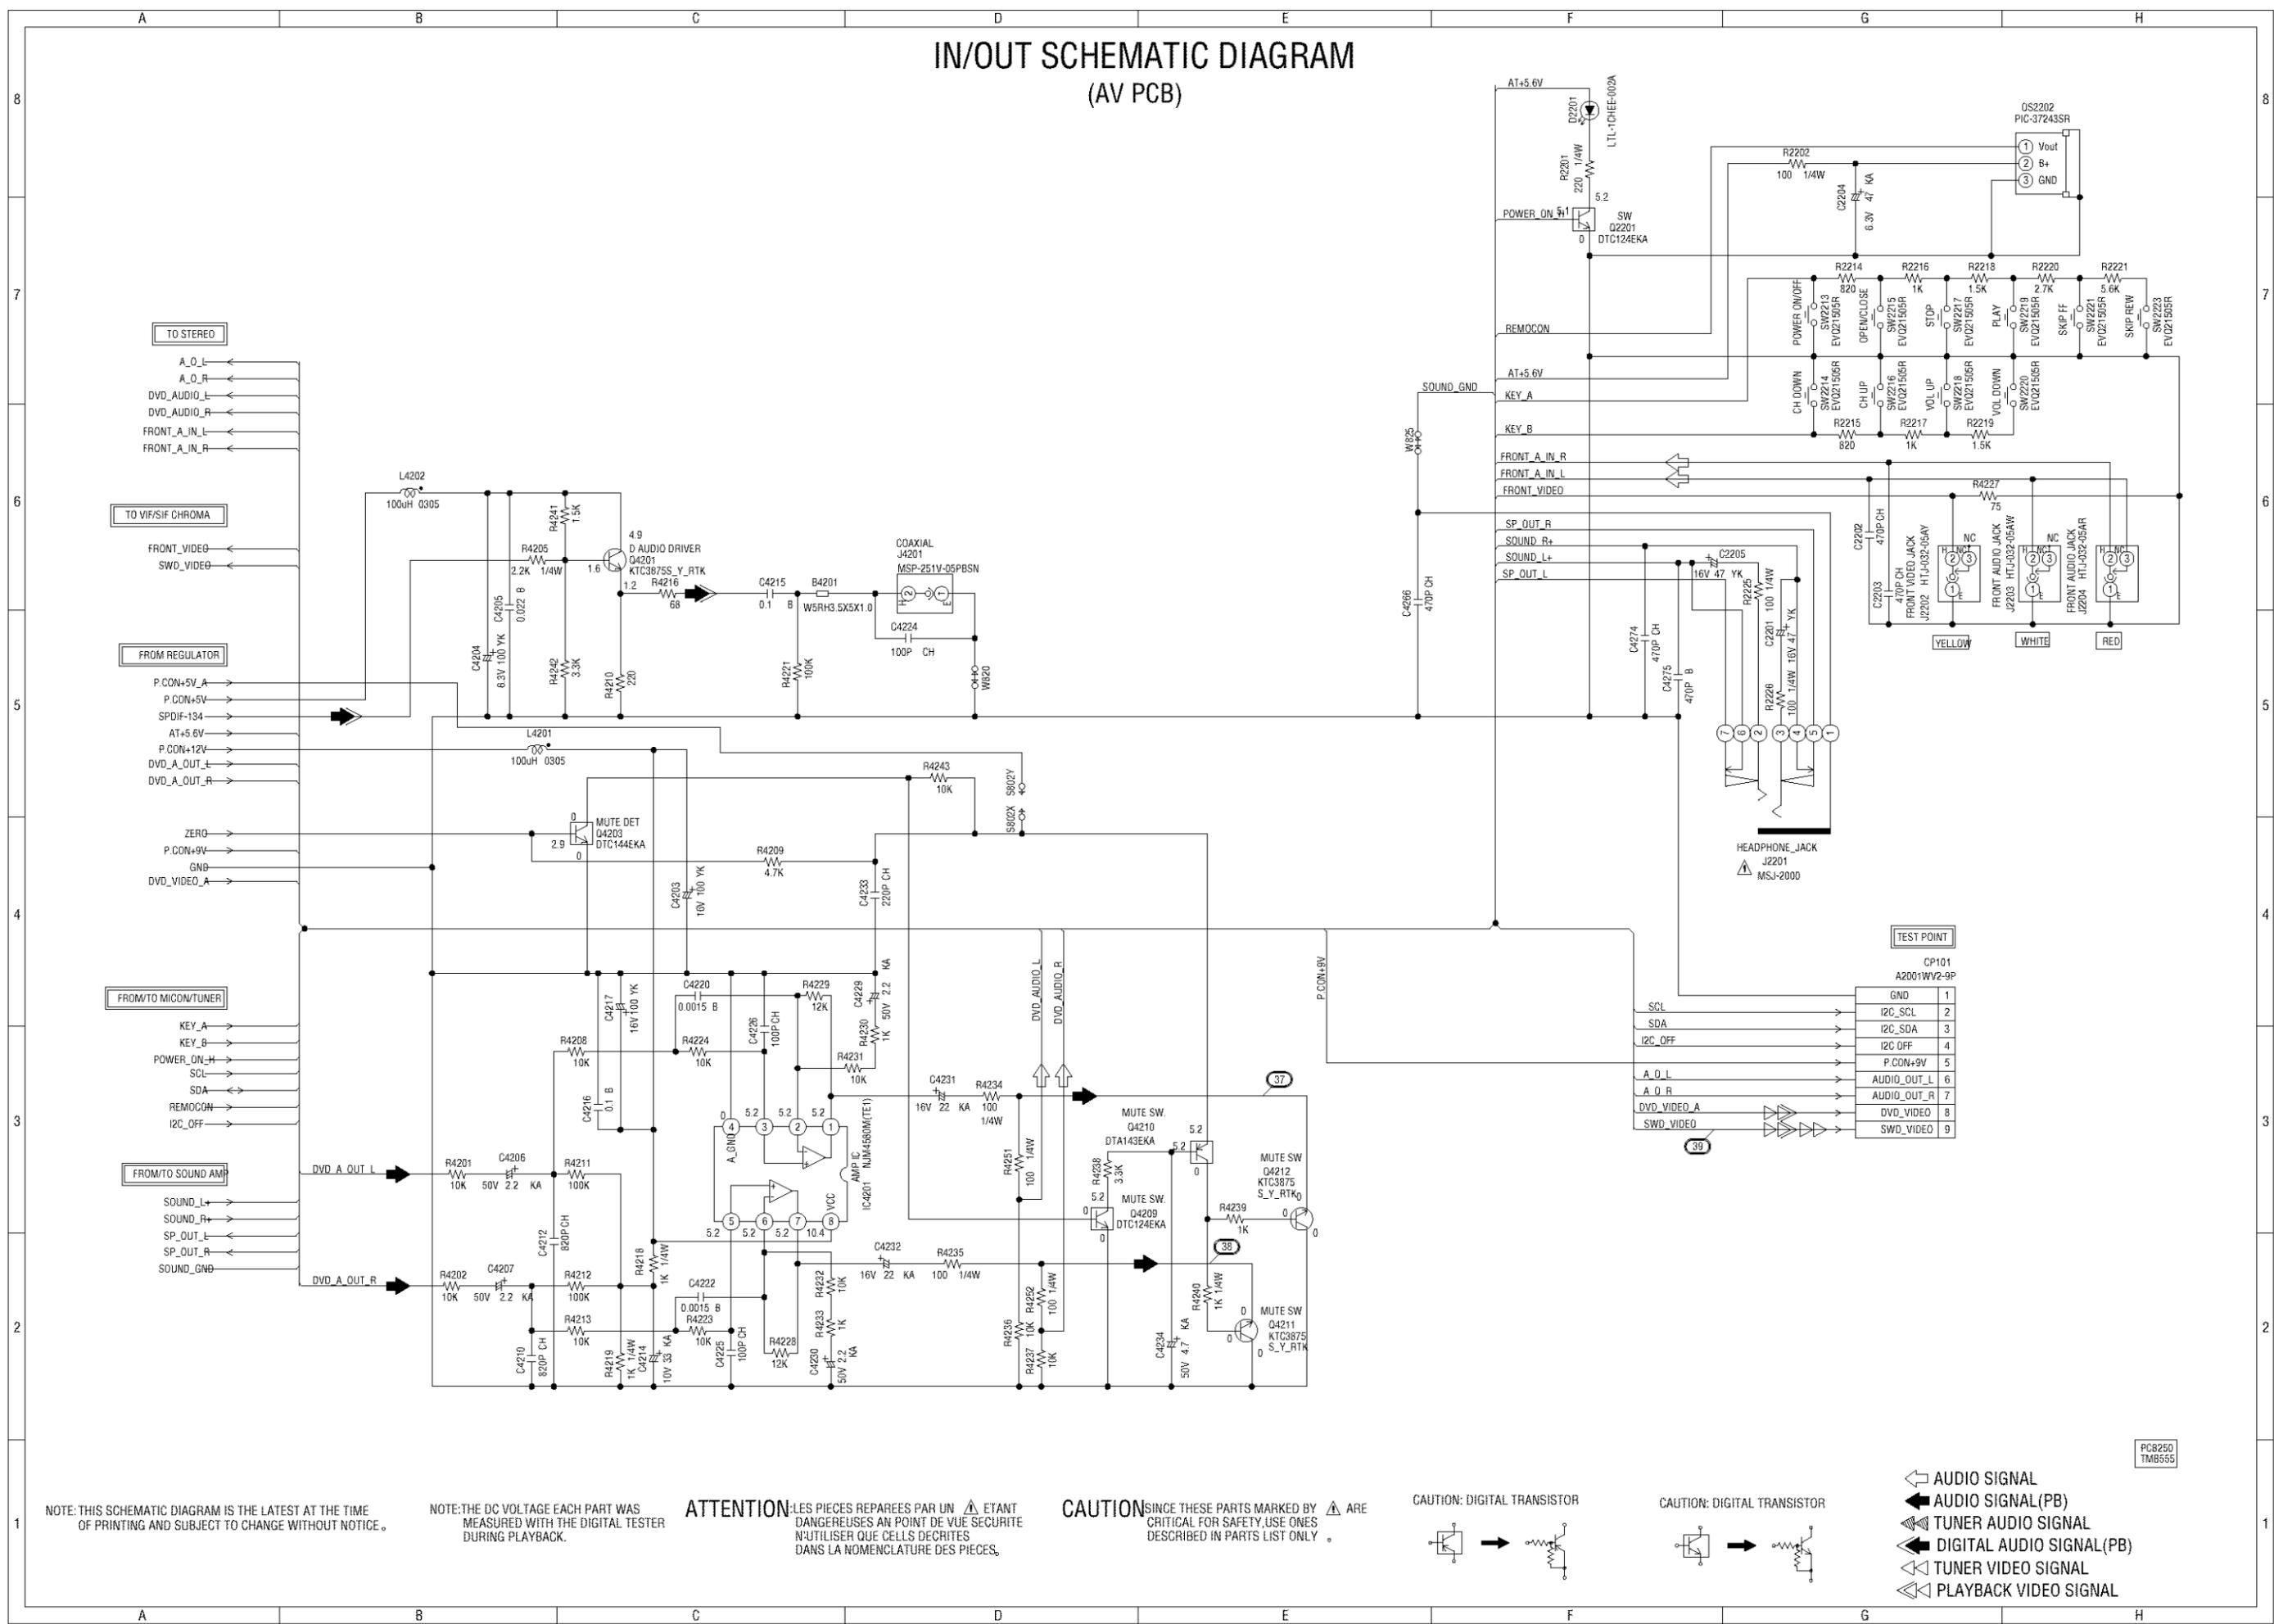

STEREO SCHEMATIC DIAGRAM

(AV PCB)

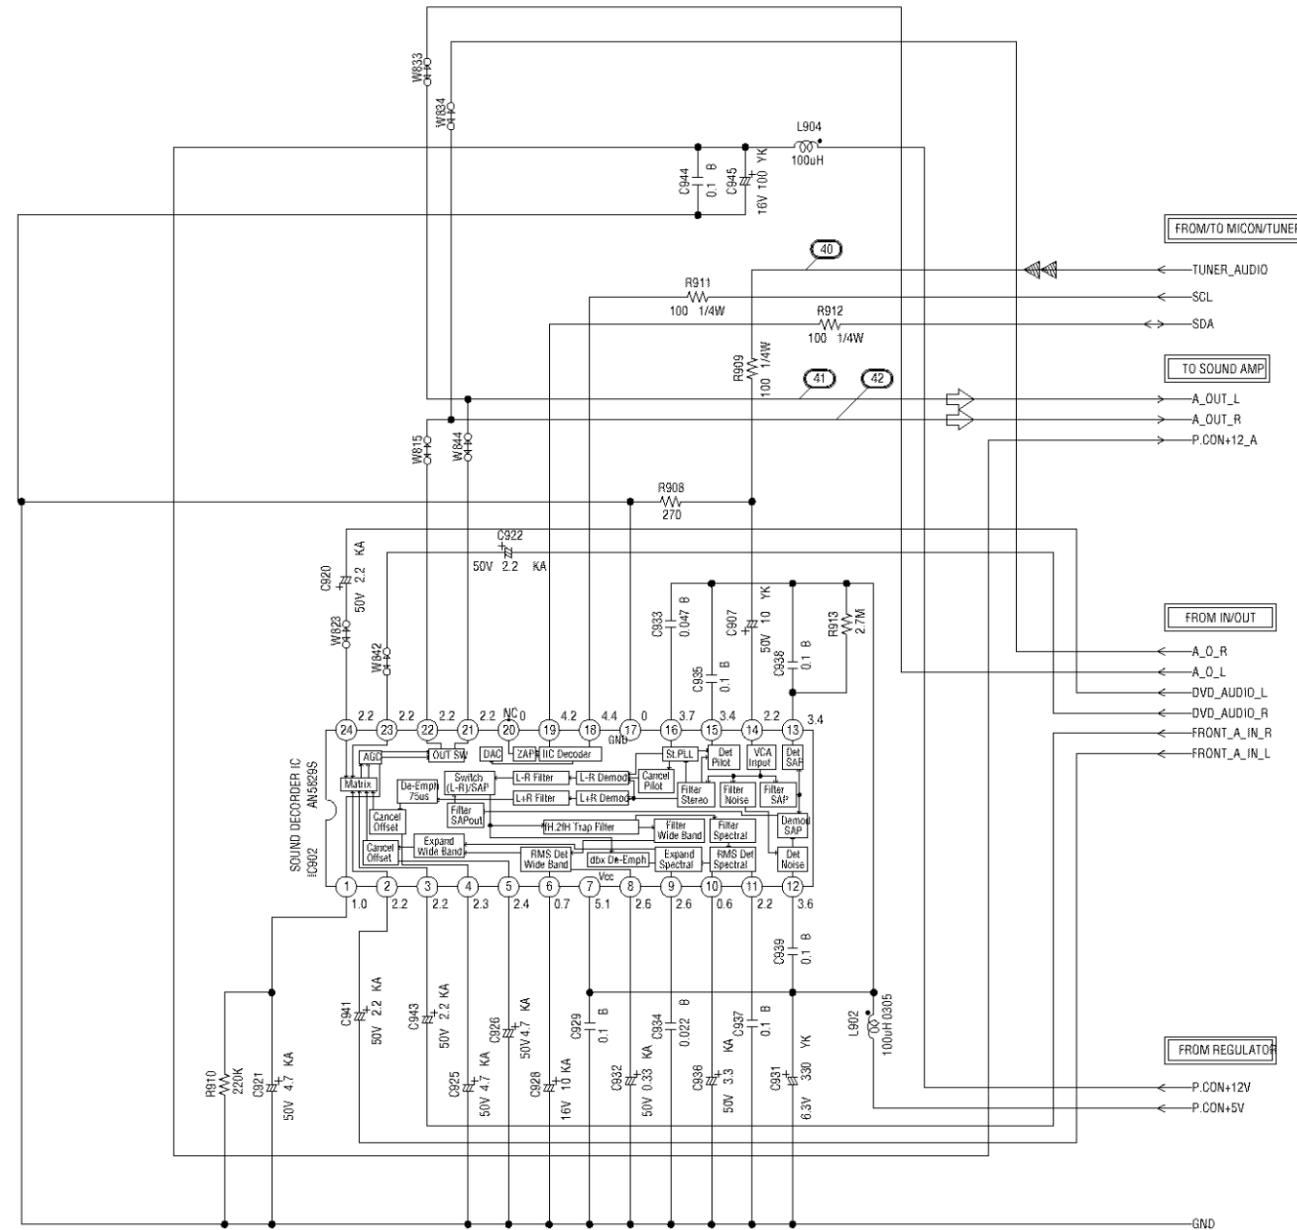


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

 TUNER AUDIO SIGNAL
 AUDIO SIGNAL

PCB250
TM8555

DEFLECTION SCHEMATIC DIAGRAM (AV PCB)

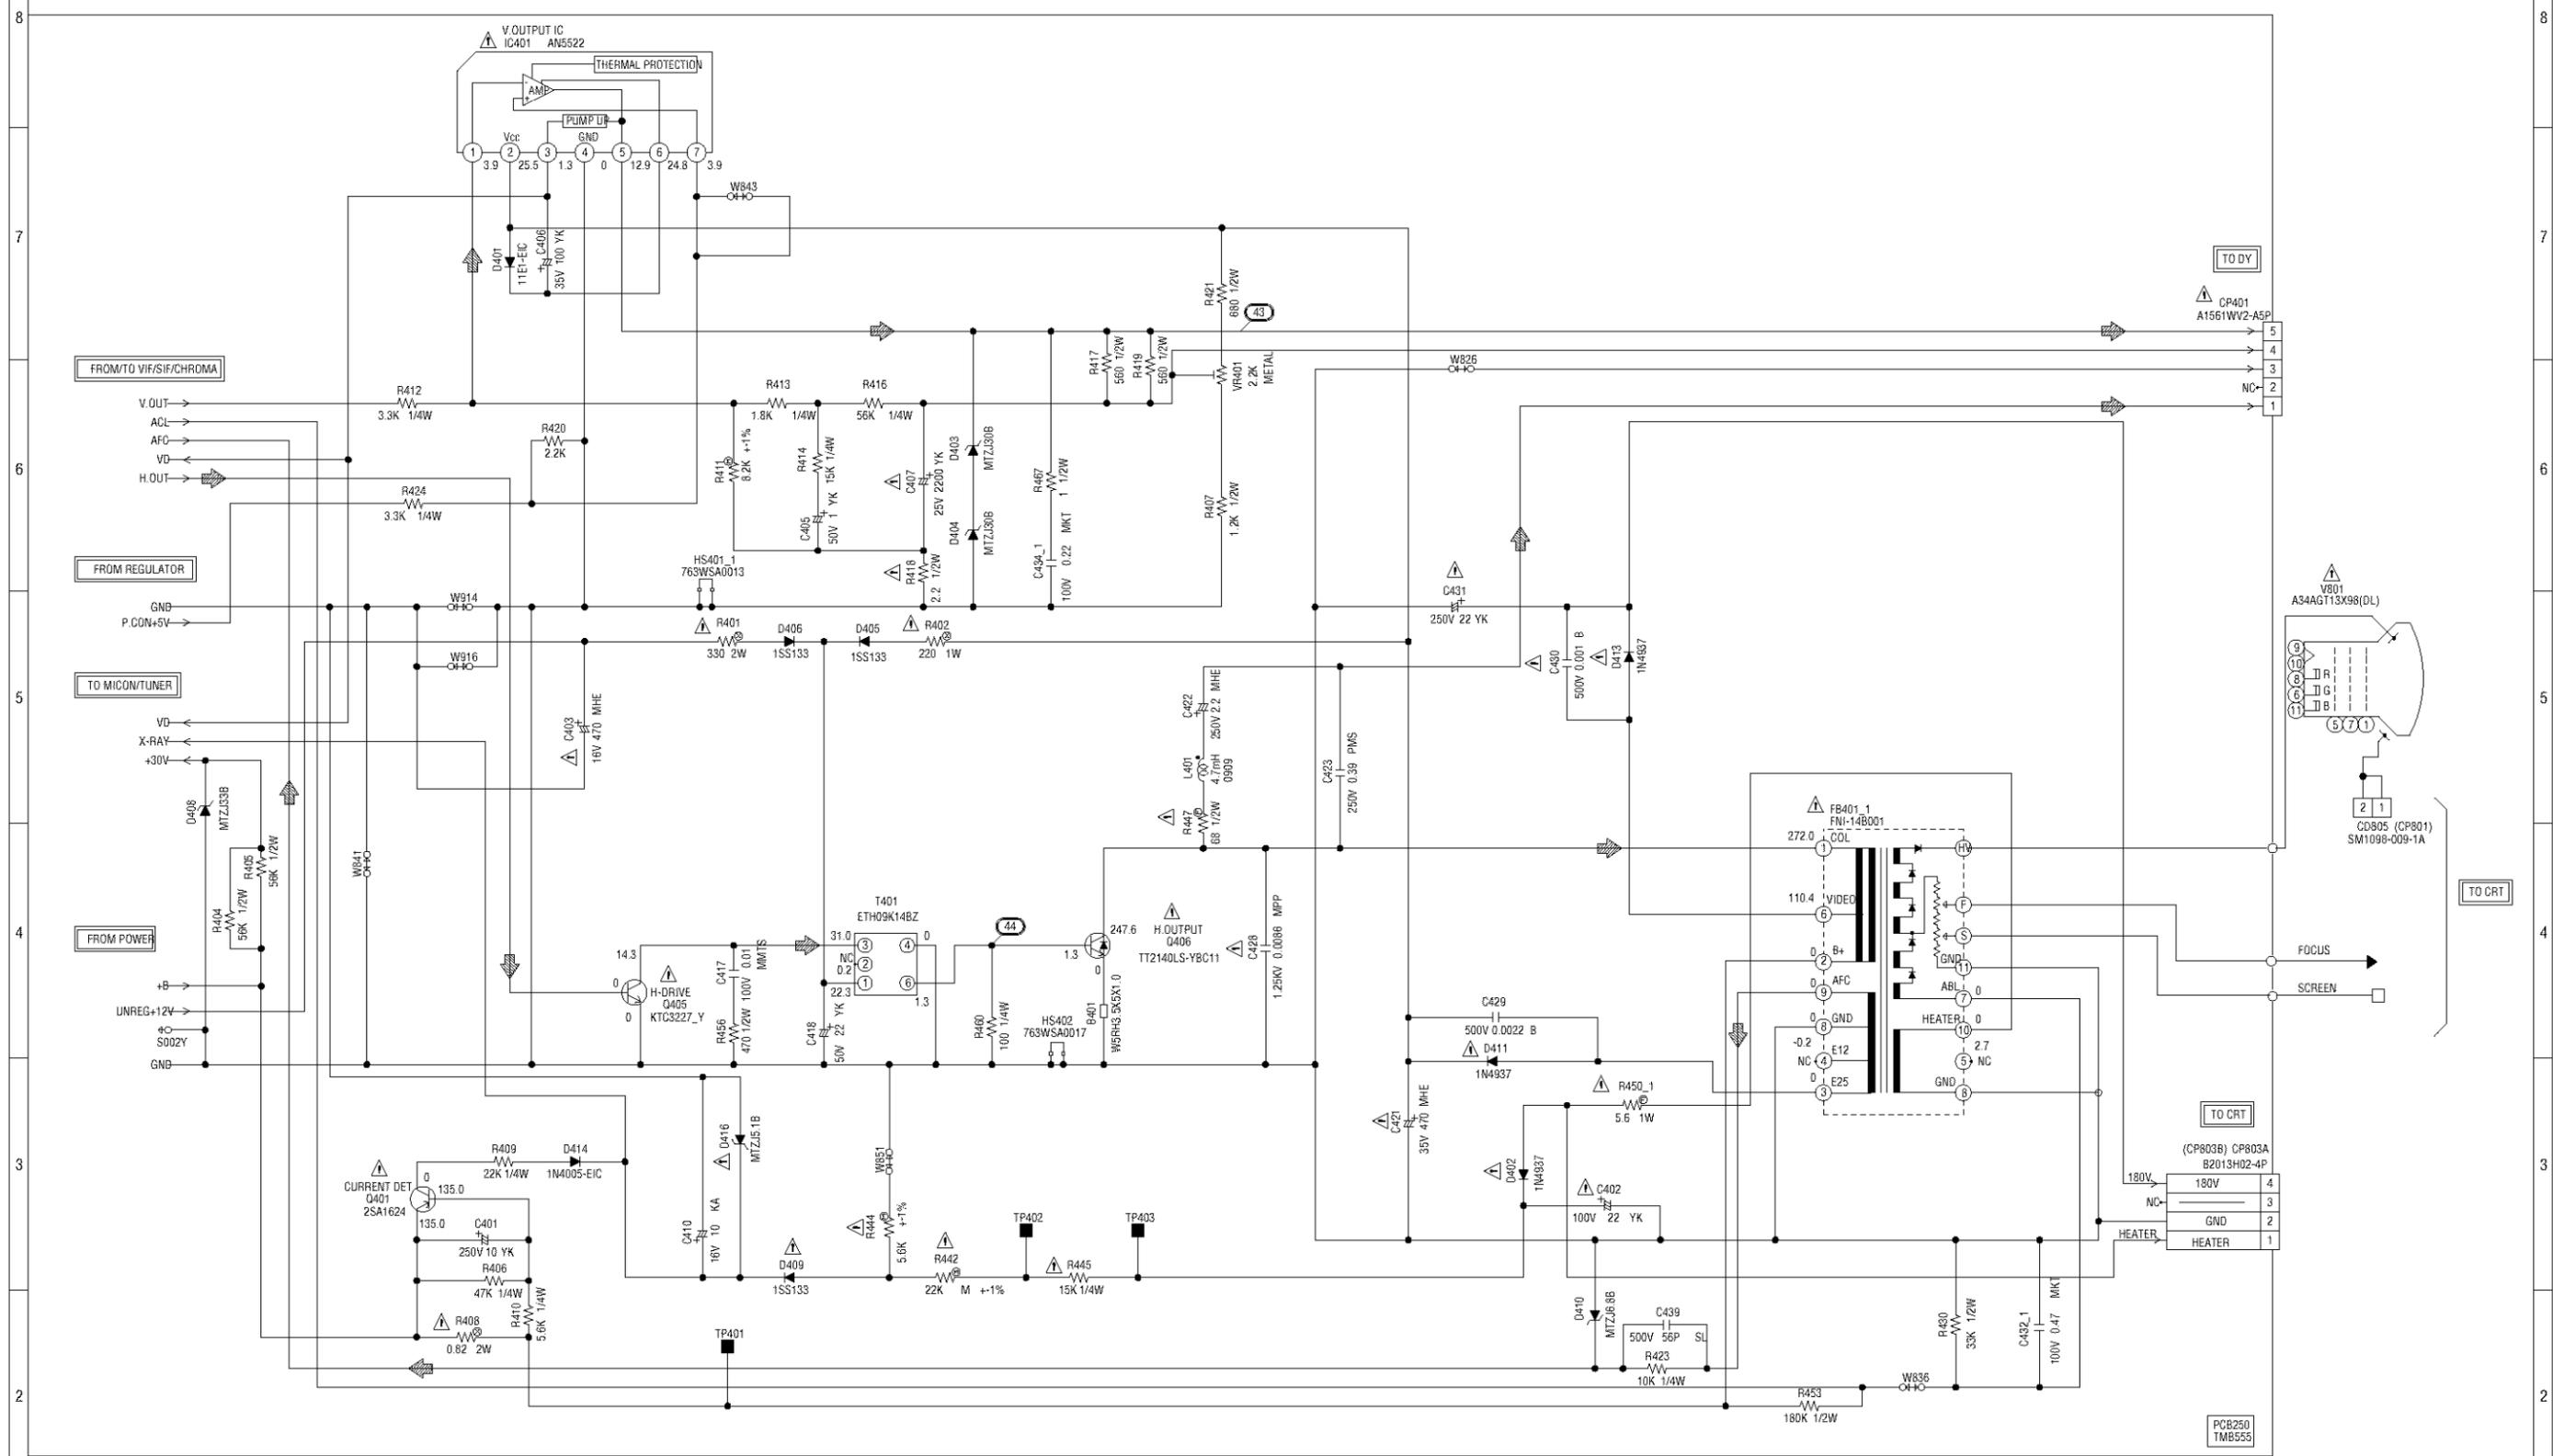

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.



NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR. THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP IS NON POLAR ONE.

ATTENTION: LES PIÈCES RÉPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.

CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

DEFLECTION SIGNAL

CRT SCHEMATIC DIAGRAM (CRT PCB)

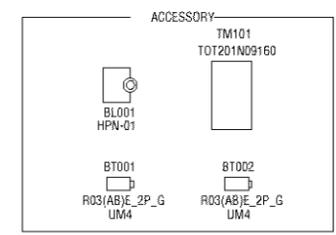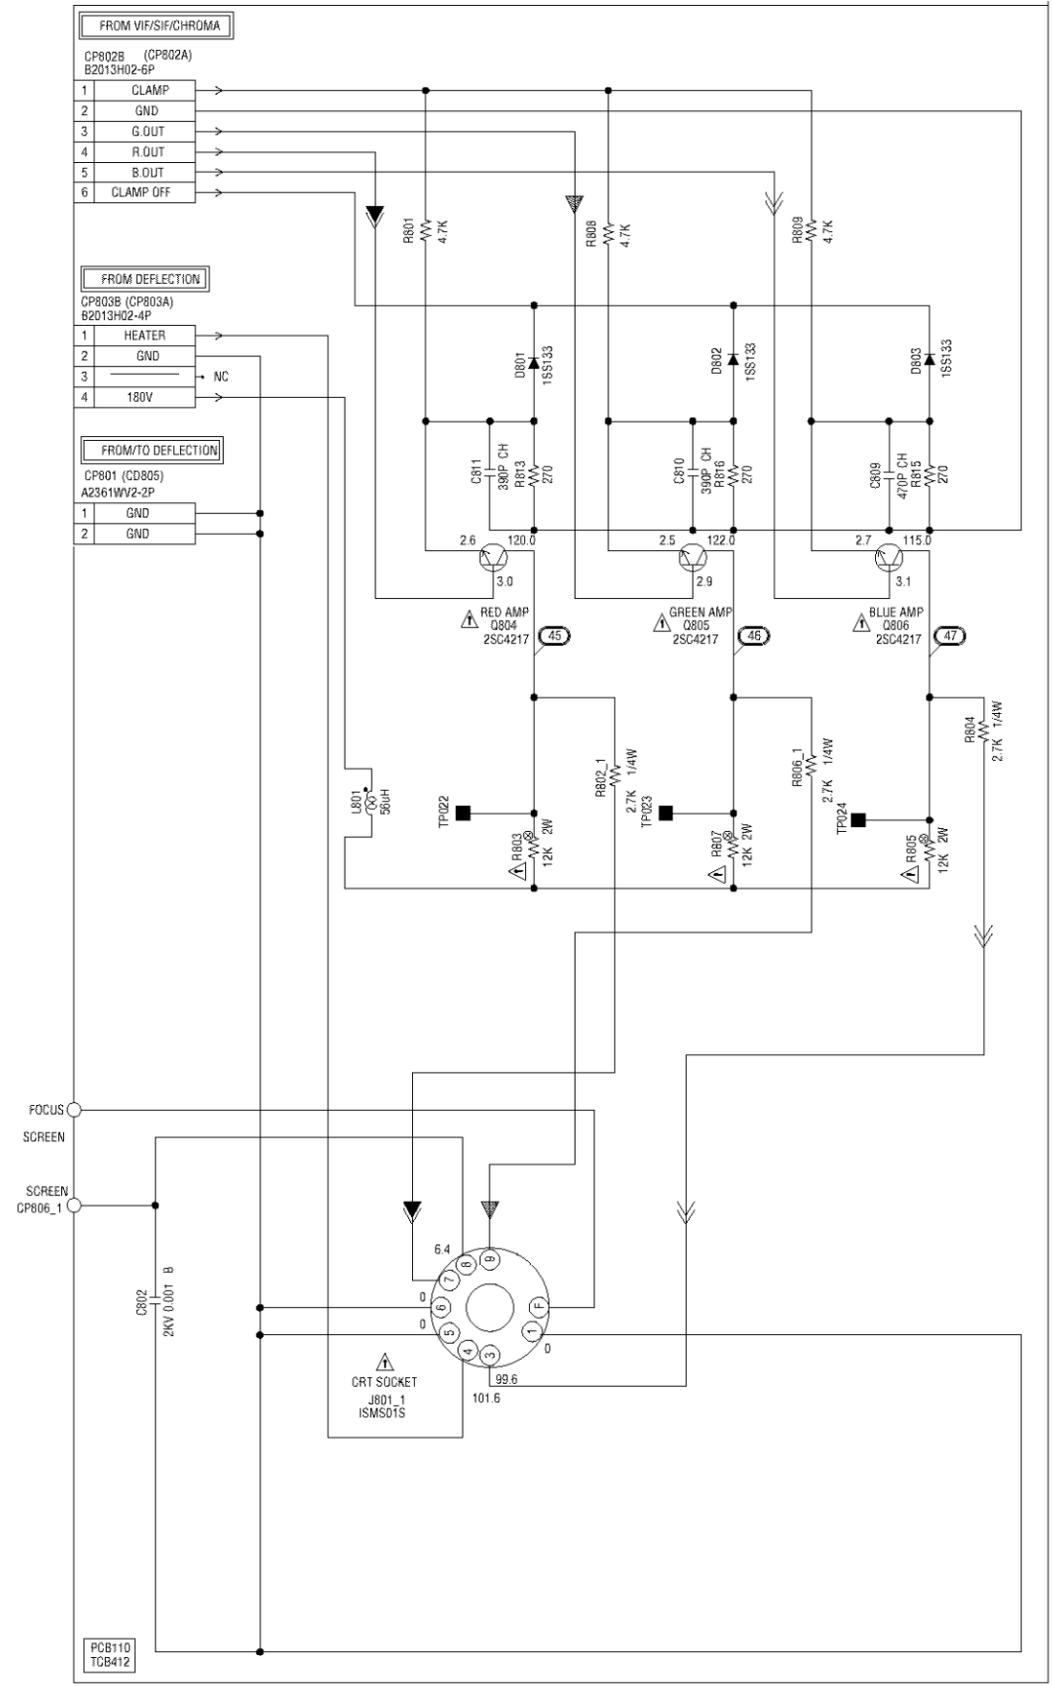

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.


ATTENTION LES PIÈCES RÉPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIÈCES.

CAUTION SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

R.SIGNAL
 G.SIGNAL
 B.SIGNAL

POWER SCHEMATIC DIAGRAM

(AV PCB)

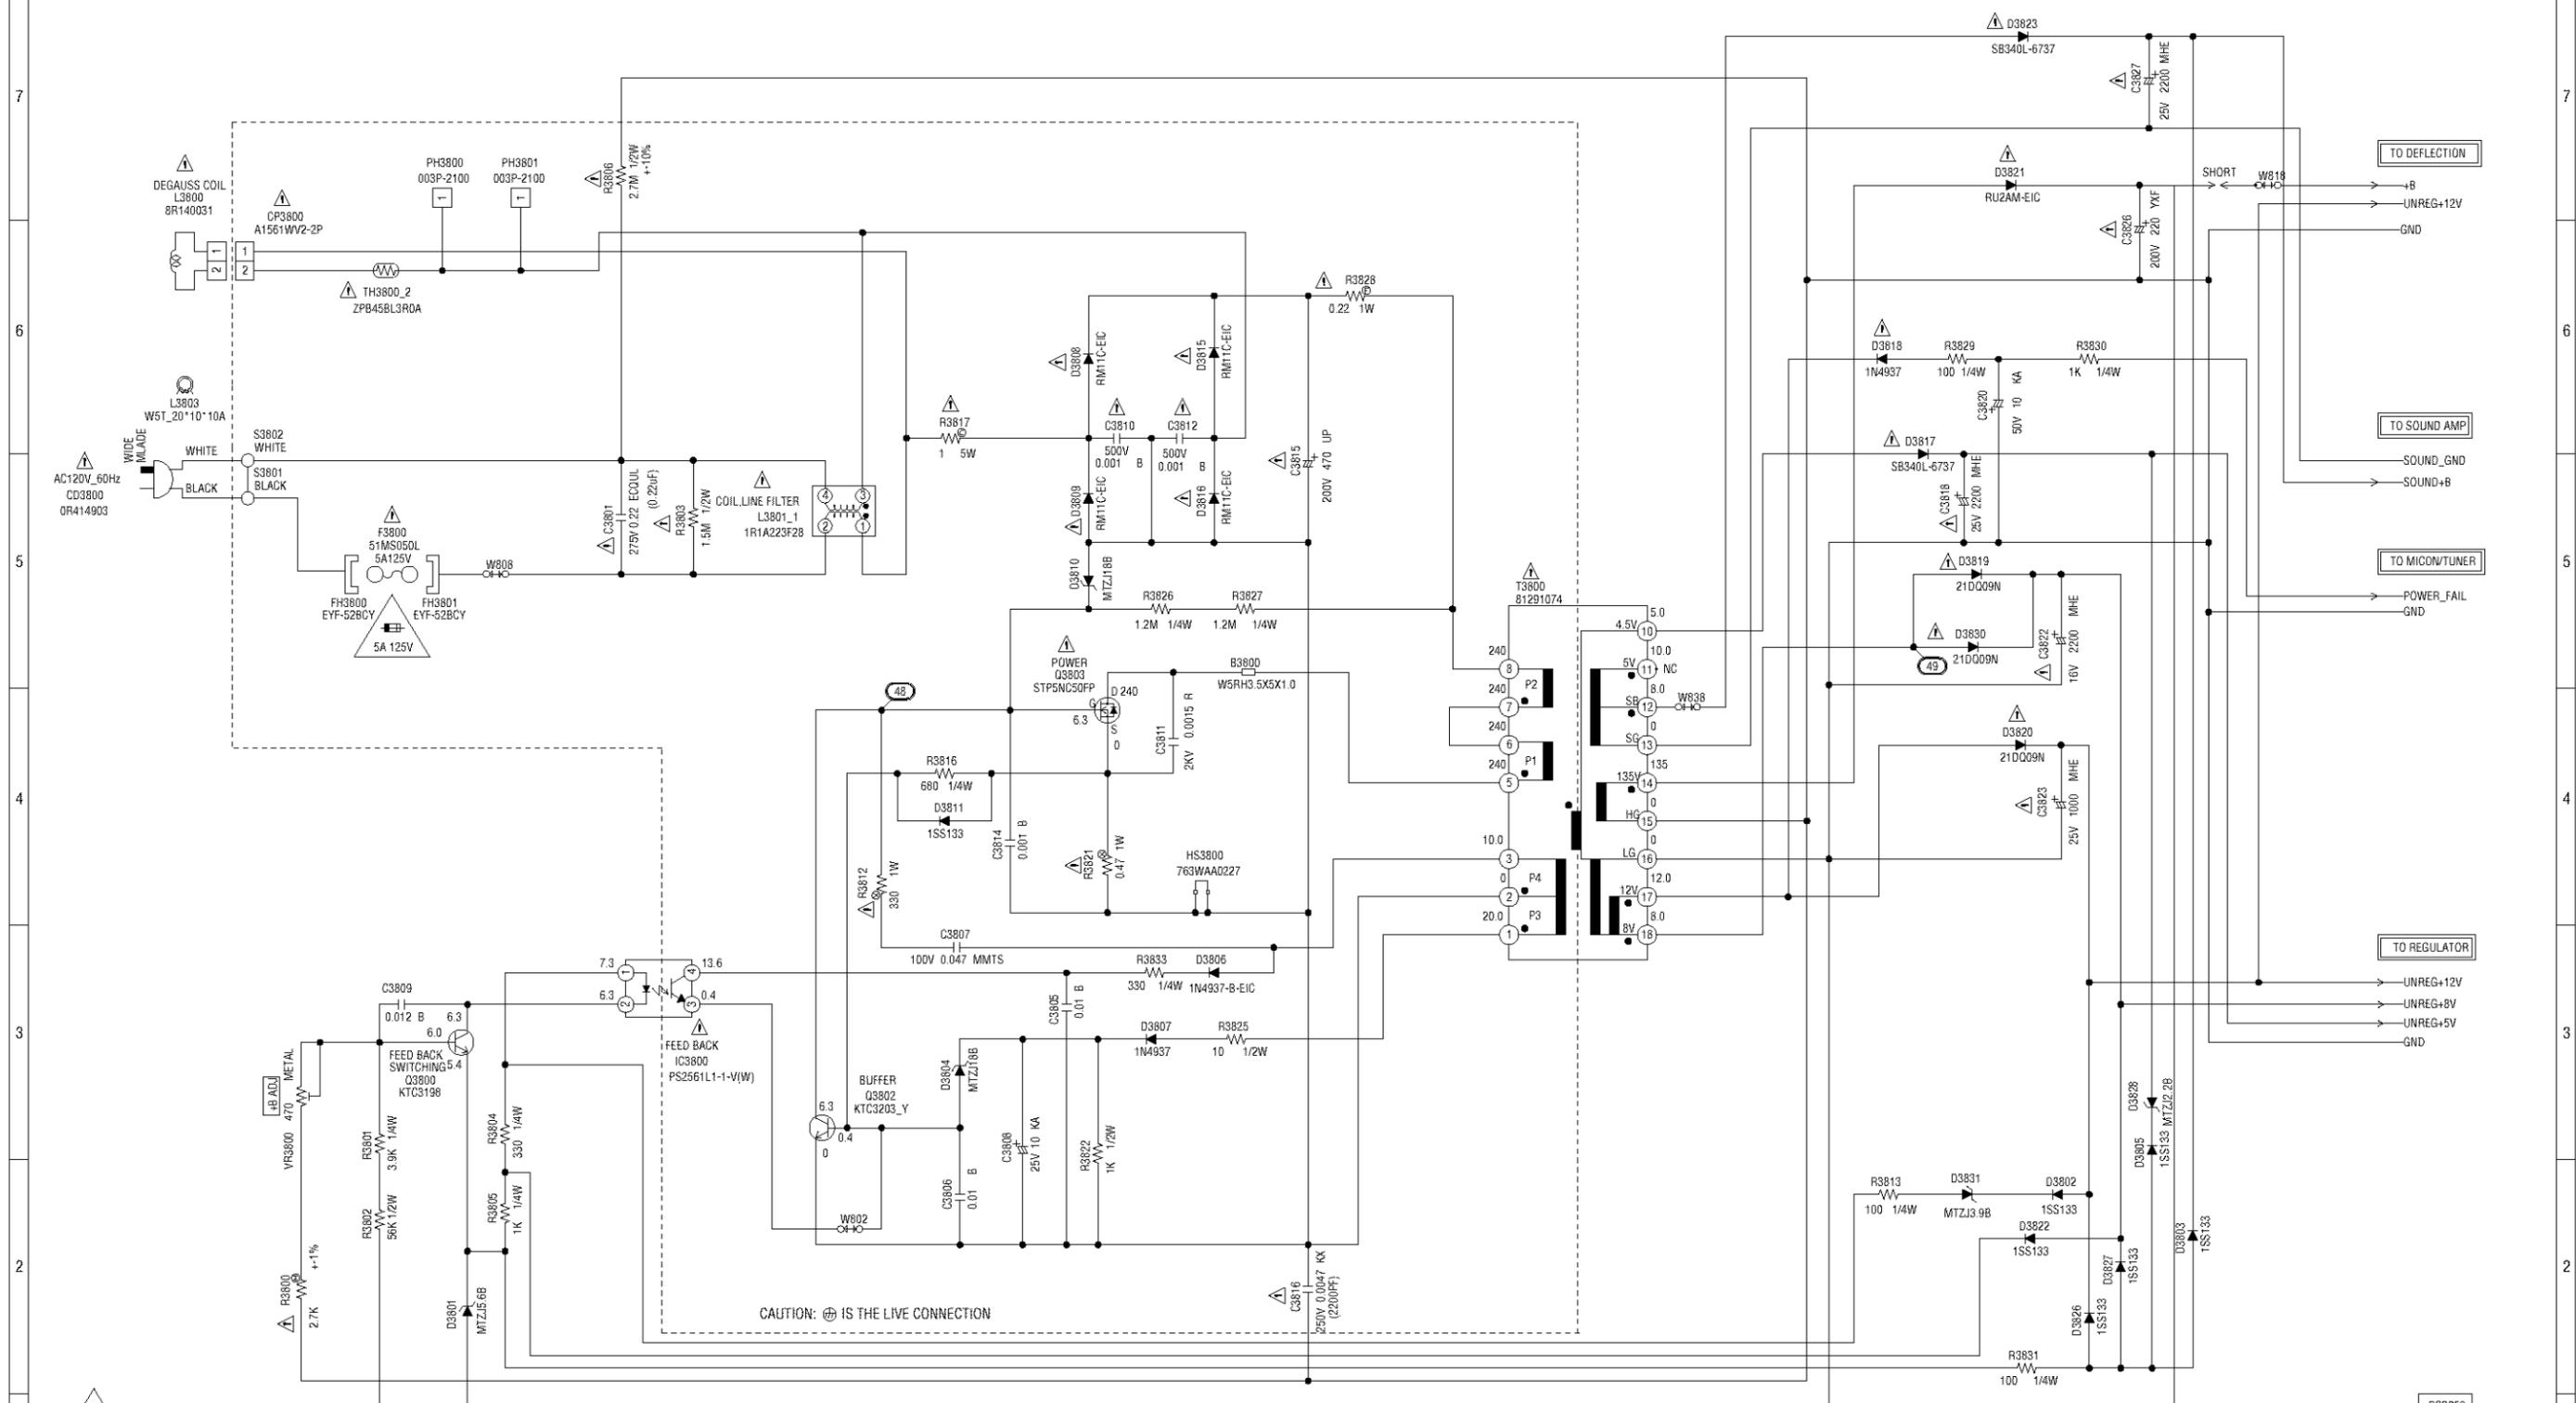

ATTENTION :POUR UNE PROTECTION CONTINUE LES RISQUES D'INCEIE
N'UTILISER QUE DES FUSIBLE DE MEME TYPE 5A125V(F3800).

CAUTION :FOR CONTINUED PROTECTION AGAINST FIRE HAZARD,
REPLACE ONLY WITH THE SAME TYPE FUSE 5A125V(F3800).


NOTE:THE DC VOLTAGE AT EACH PART WAS MEASURED
WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST
WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE:THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME
OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

CAUTIONSINCE THESE PARTS MARKED BY ARE
CRITICAL FOR SAFETY,USE ONES
DESCRIBED IN PARTS LIST ONLY .

ATTENTION:LES PIECES REPARÉES PAR UN ÉTANT
DANGEREUSES AN POINT DE VUE SECURITE
N'UTILISER QUE CELLS DECRITES
DANS LA NOMENCLATURE DES PIECES.


RELAY/SW/FG SCHEMATIC DIAGRAM

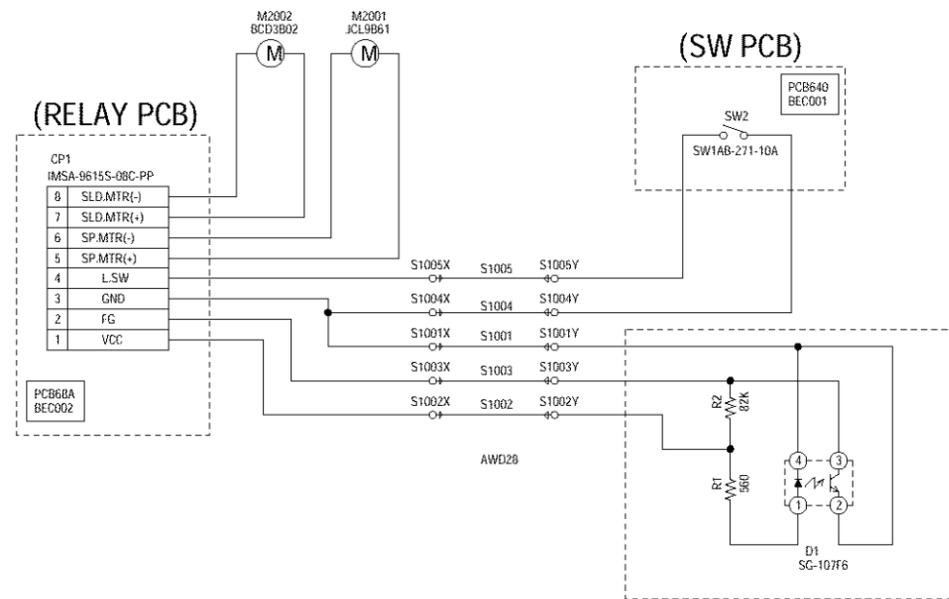

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

INTERCONNECTION DIAGRAM

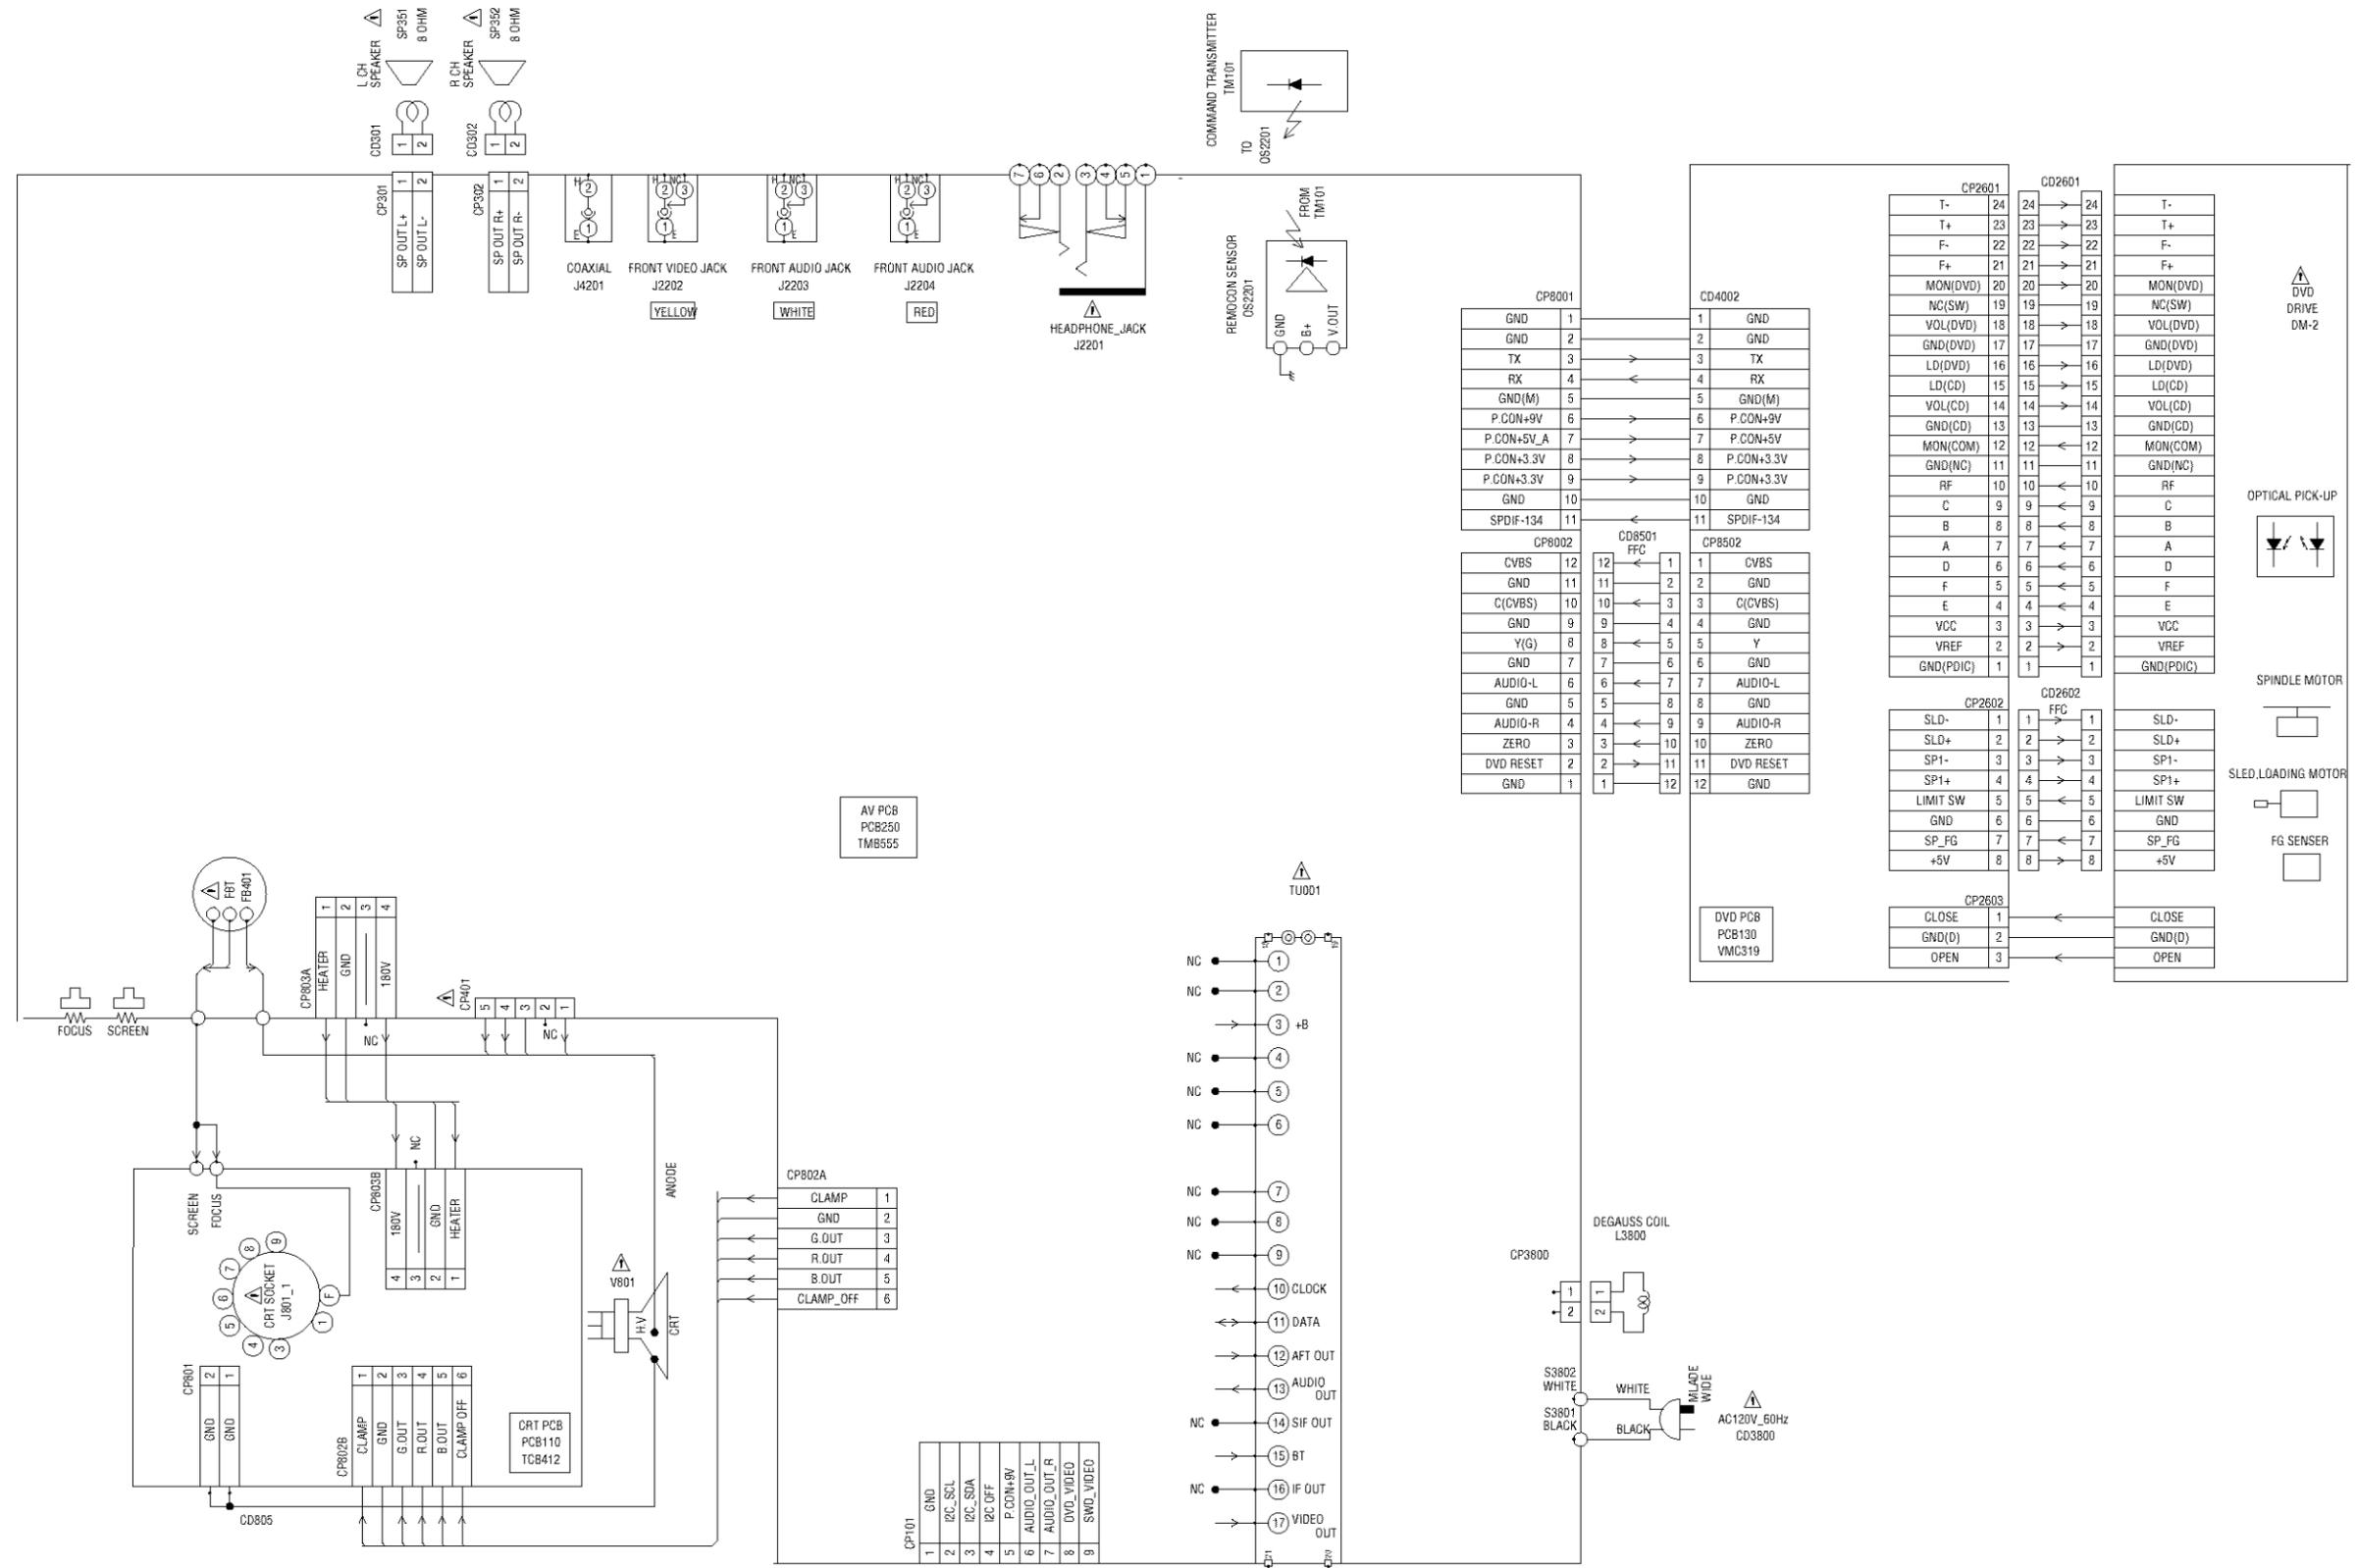



NOTE: THIS INTERCONNECTION DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

CAUTION SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.


ATTENTION LES PIÈCES RÉPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIÈCES.

WAVEFORMS



MPEG/MICON

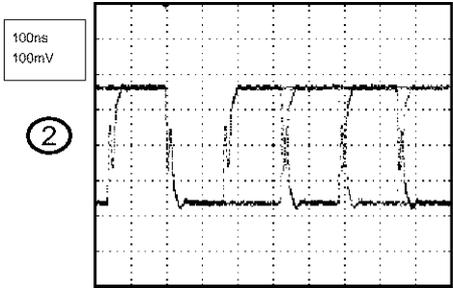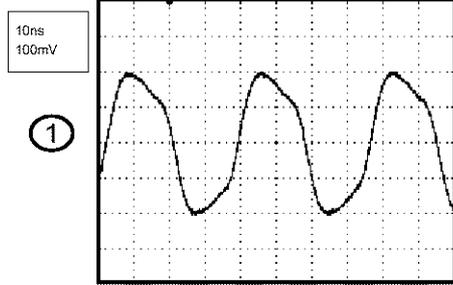






MEMORY

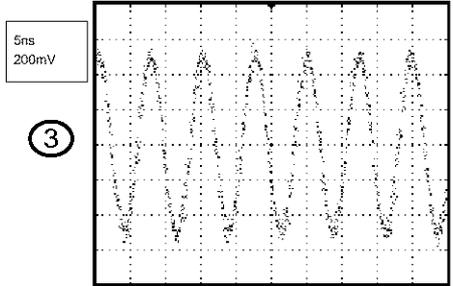






RF AMP/DSP

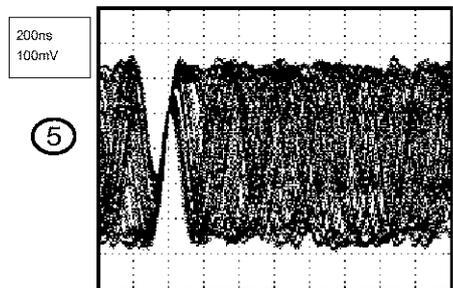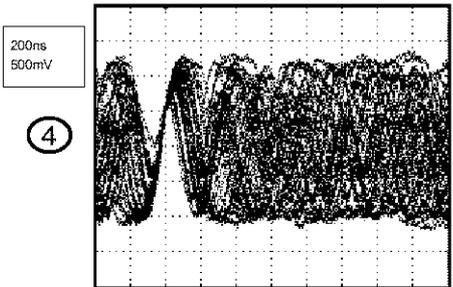

AUDIO/VIDEO

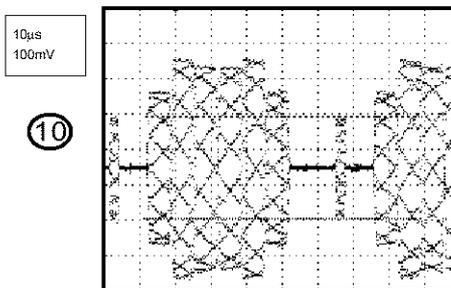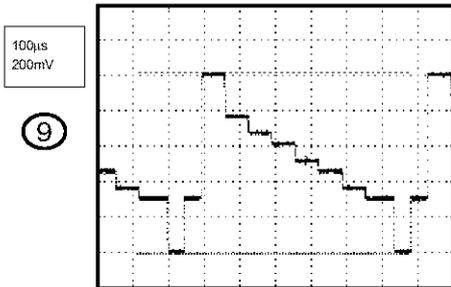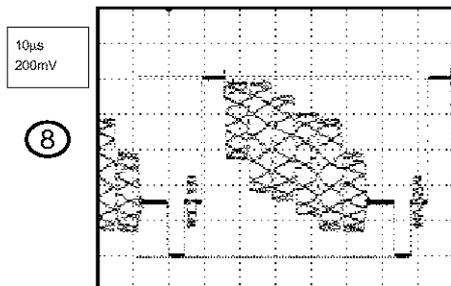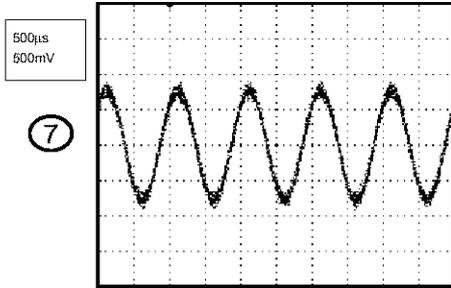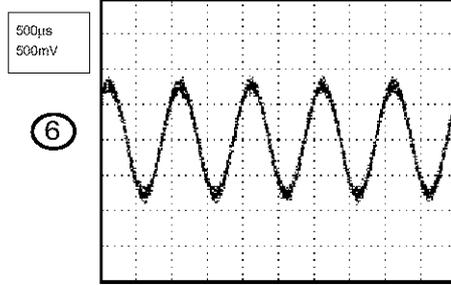









MICON/TUNER

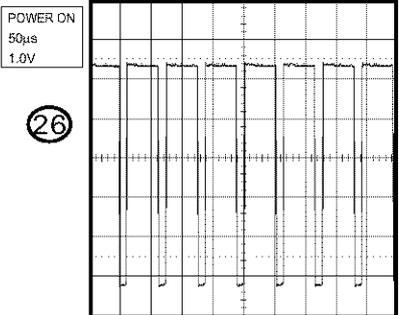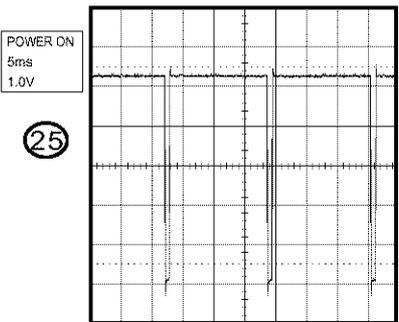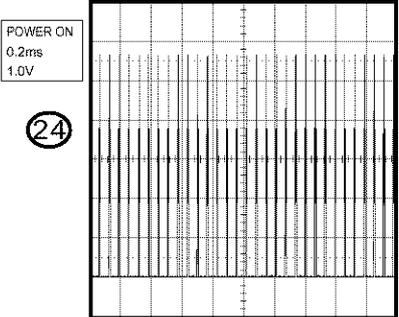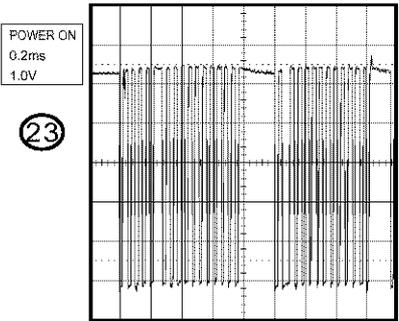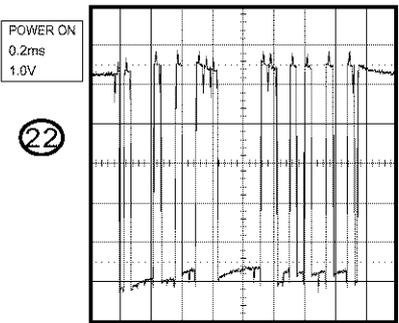



NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

WAVEFORMS




VIF/SIF/CHROMA

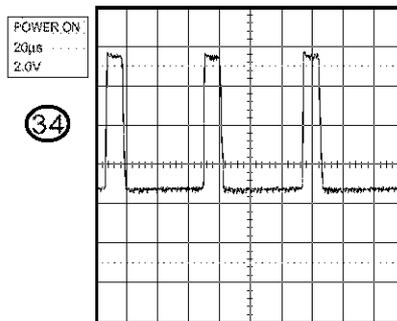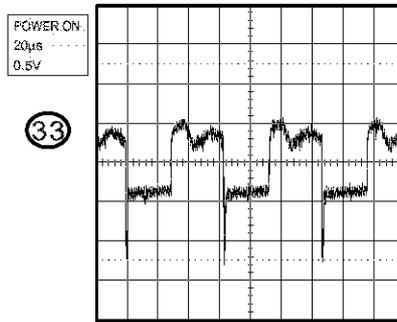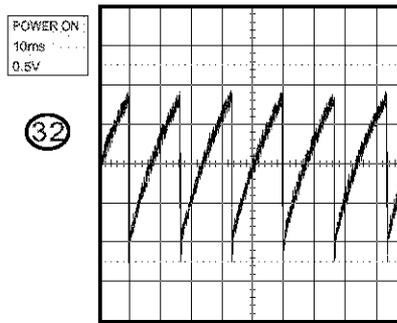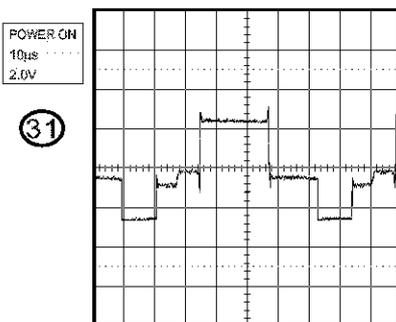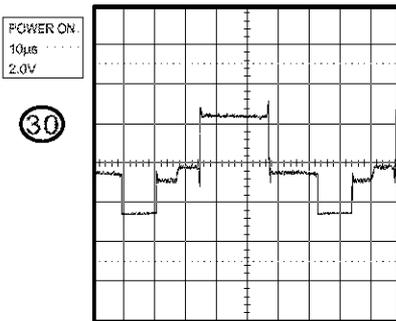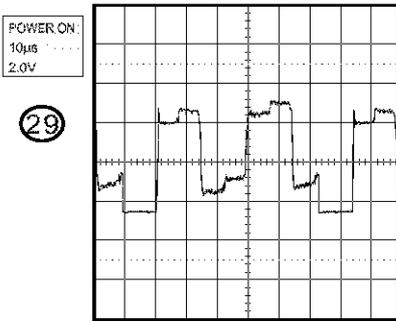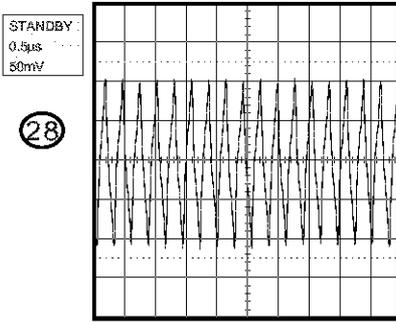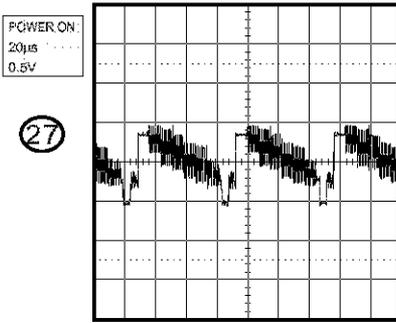



SOUND AMP

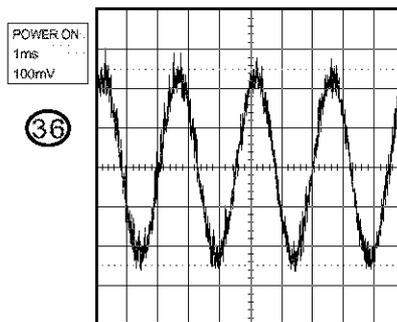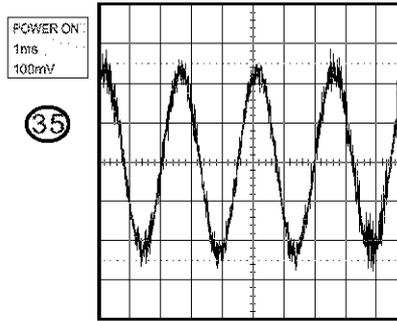

IN/OUT

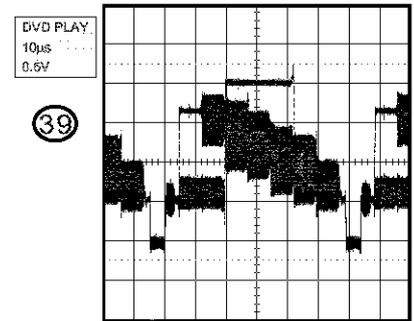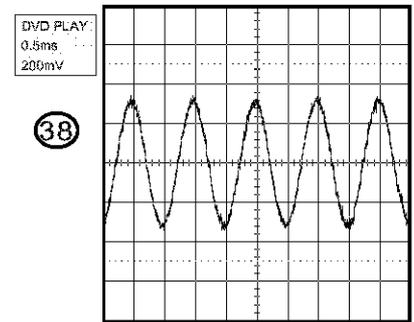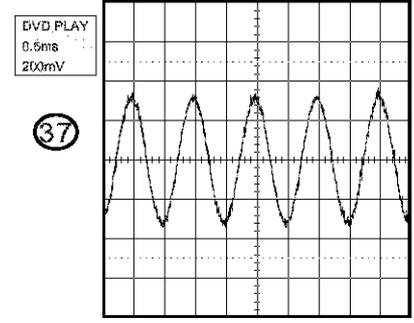

STEREO

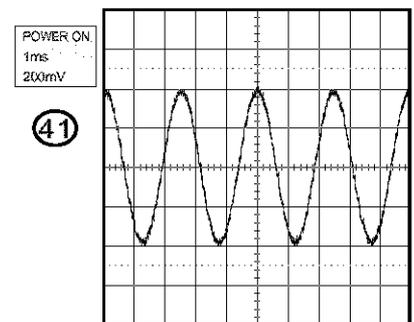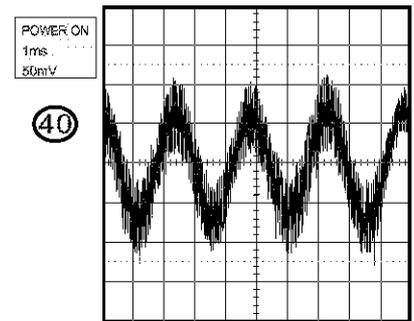


NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

WAVEFORMS


POWER ON
1ms
200mV

42

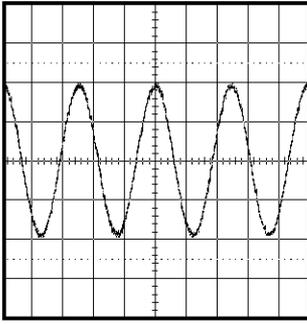

POWER ON
20µs
50V


47

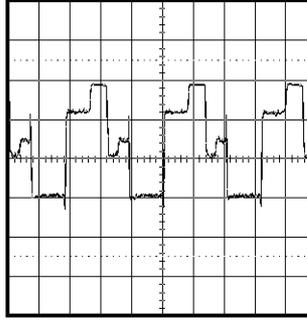

DEFLECTION


POWER ON
5ms
10.0V

43

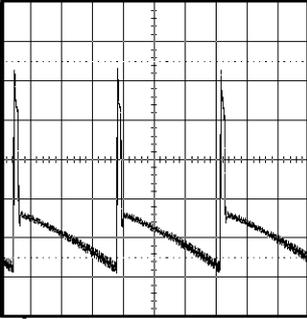

POWER ON
20µs
5.0V


44

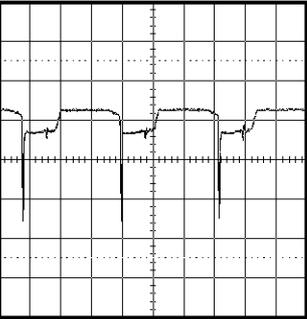

POWER


STANDBY
5µs
5.0V

48

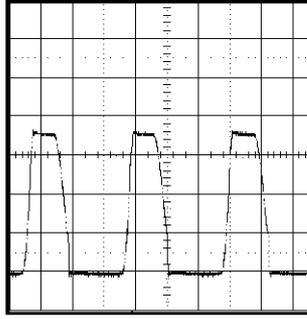

STANDBY
5µs
5.0V


49

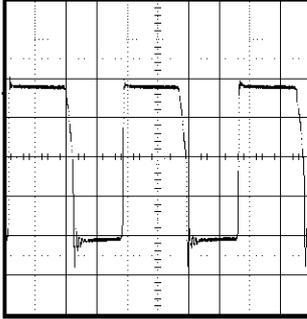

CRT


POWER ON
20µs
50V

45

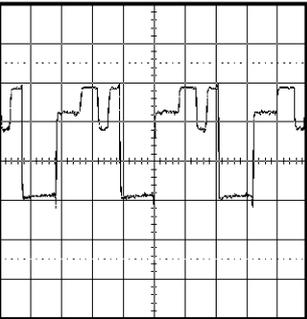


POWER ON
20µs
50V

46

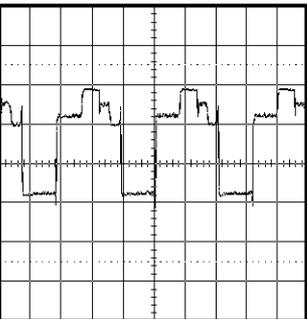


NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.


MECHANICAL EXPLODED VIEW

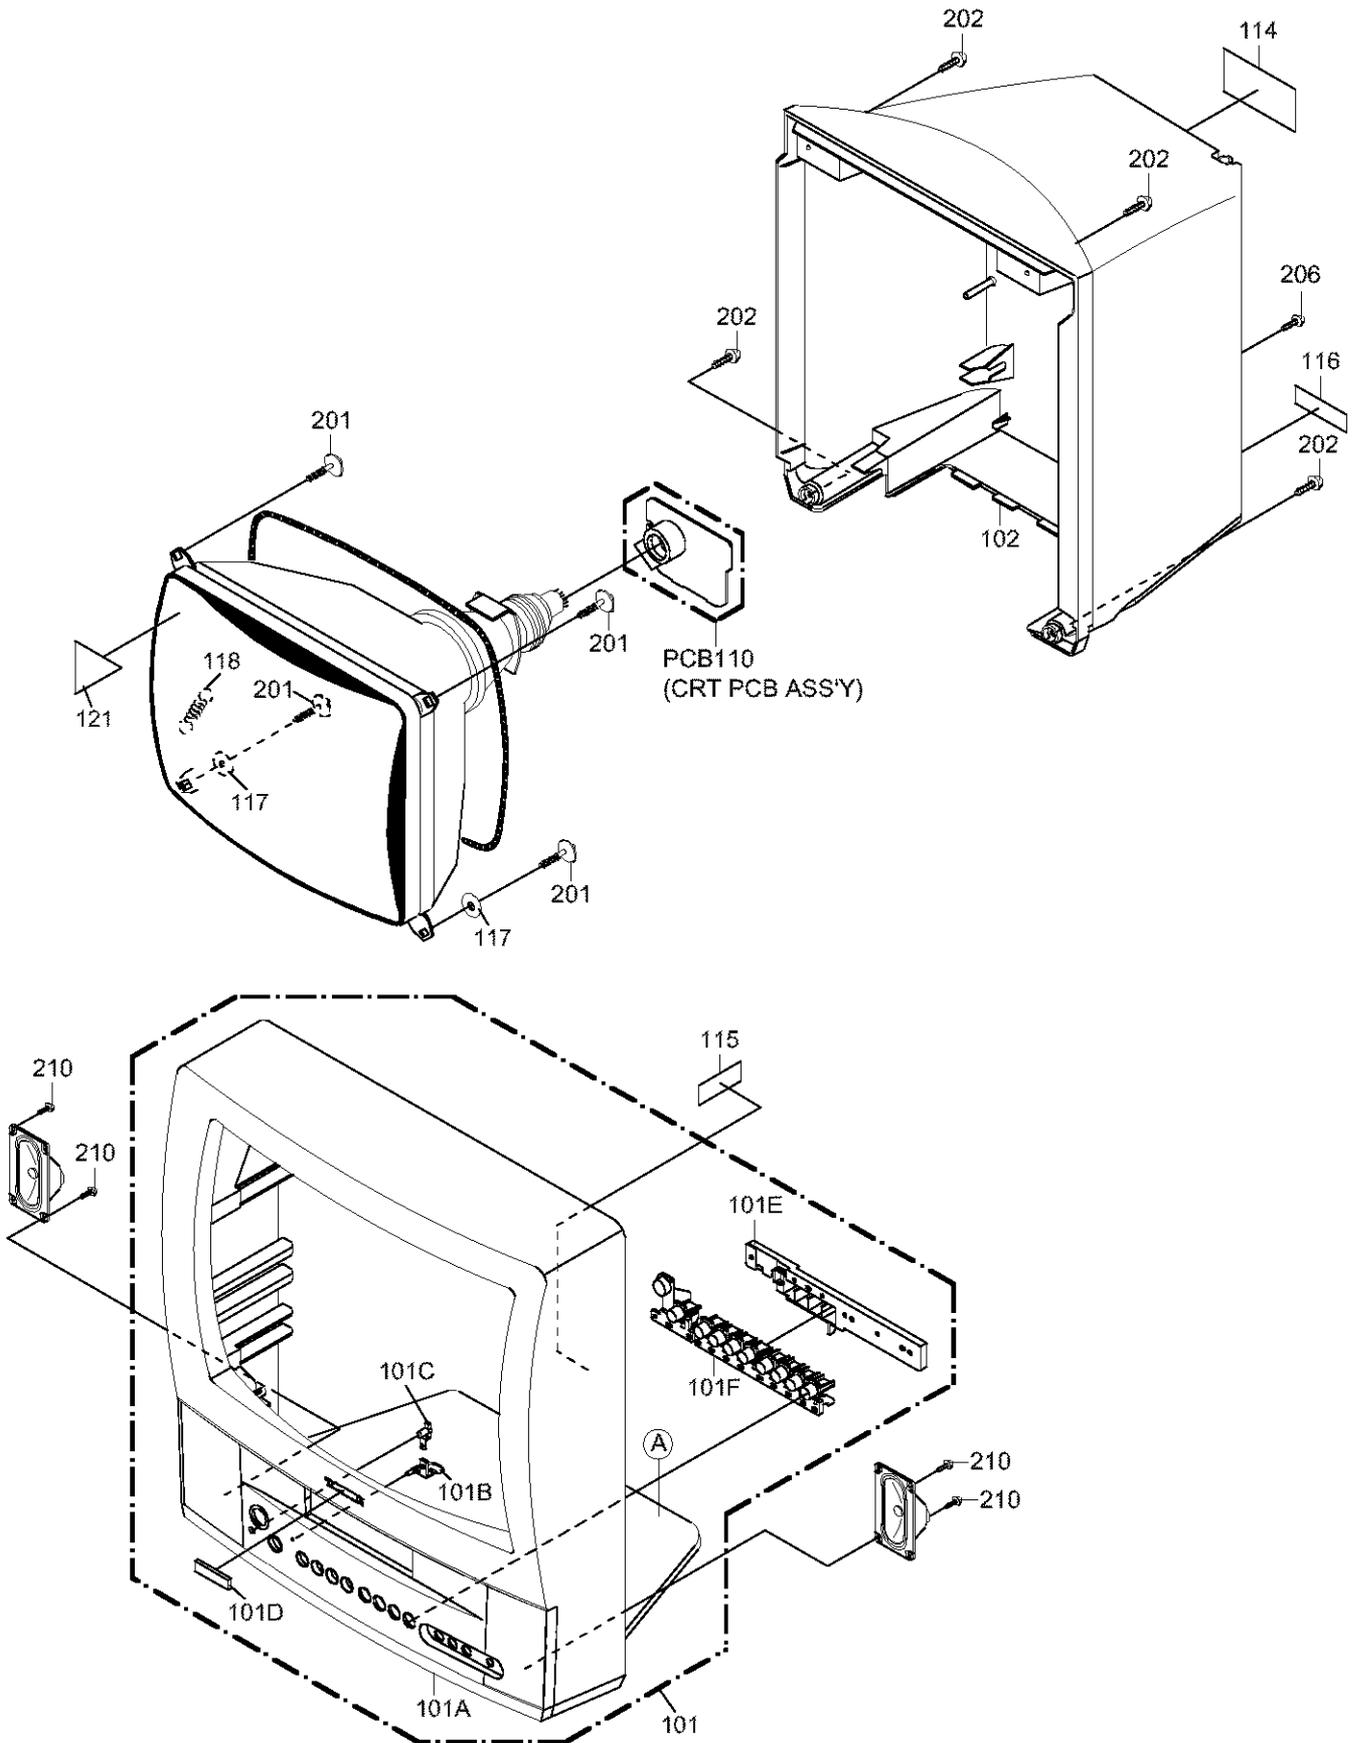


MECHANICAL EXPLODED VIEW

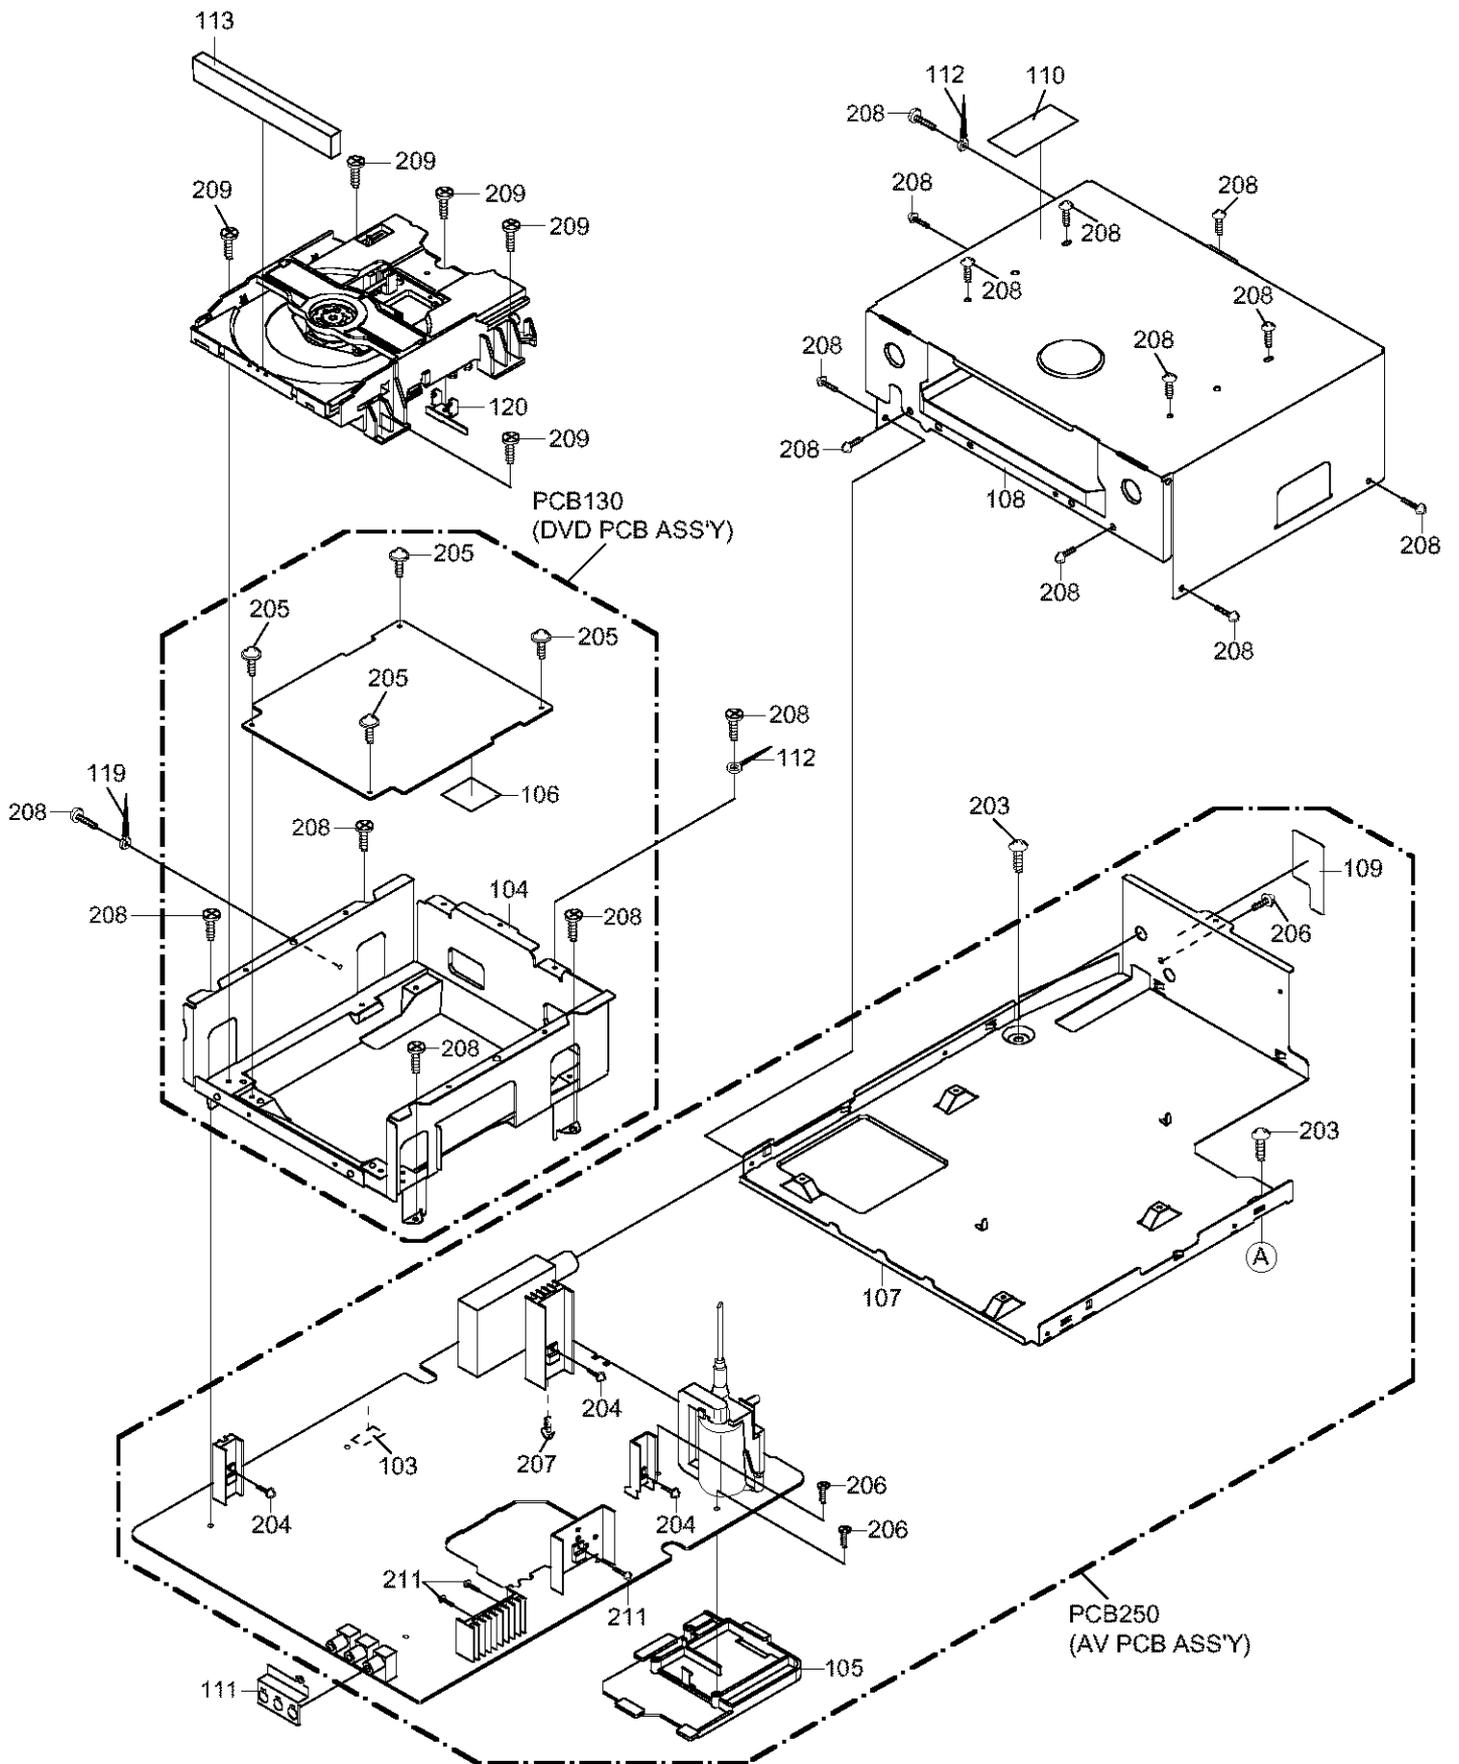

MECHANICAL EXPLODED VIEW (PACKING DIAGRAM)

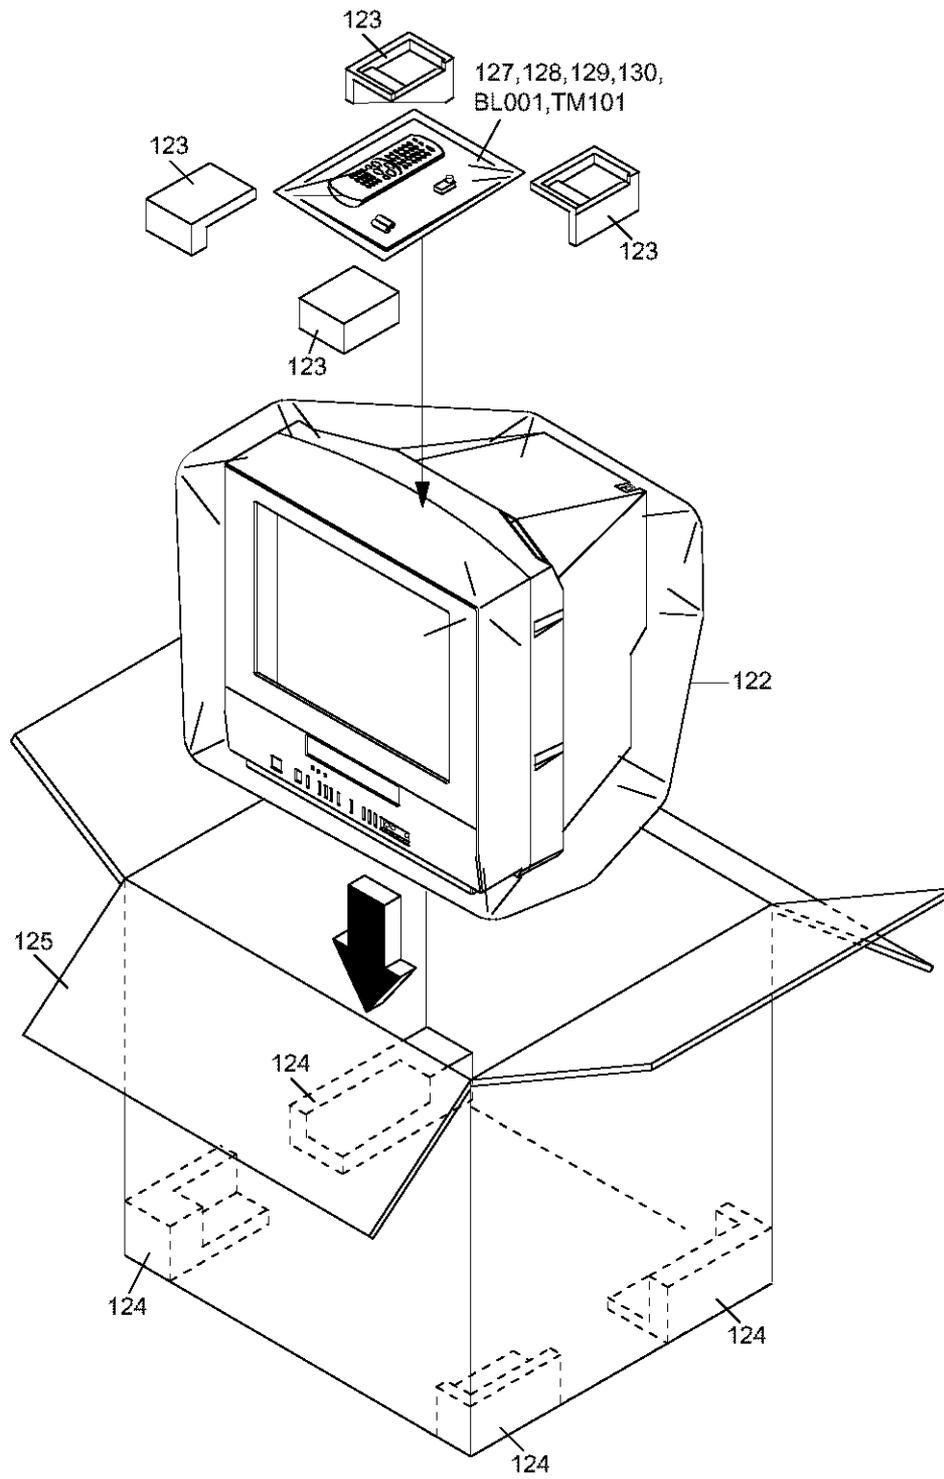

DVD DECK EXPLODED VIEW

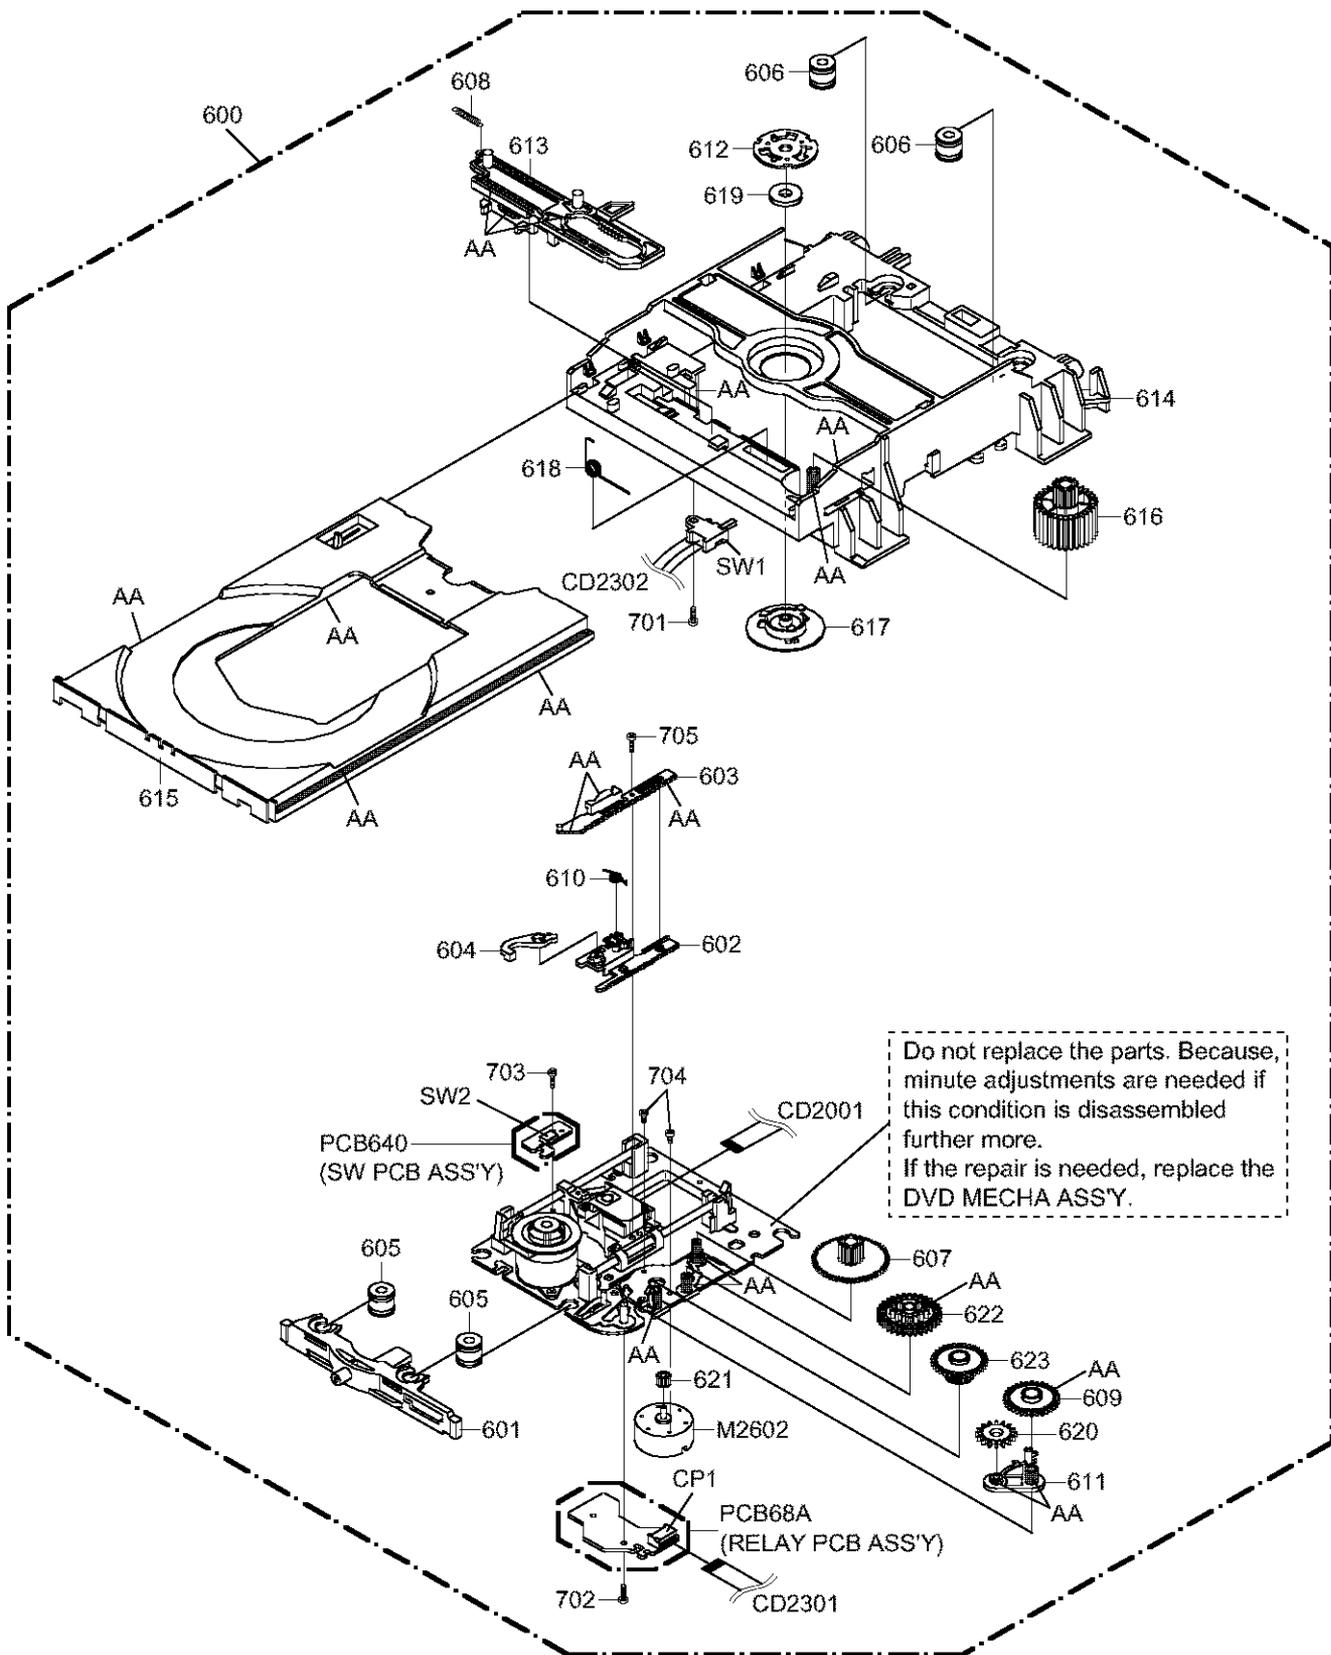

Do not replace the parts. Because, minute adjustments are needed if this condition is disassembled further more. If the repair is needed, replace the DVD MECHA ASS'Y.

CLASS	MARK
GREASE	AA

NOTE: Applying positions AA for the grease are displayed for this section. Check if the correct grease is applied for each position.

MECHANICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description	
101	AE002893	7A701A006A	FRONT CABI ASS'Y	
101A	AE002894	701WPJC495	CABINET,FRONT	
101B	AD301664	713WPA0248	GLASS,LED	
101C	AD301663	713WPA0249	GUIDE,REMOCON	
101D	AD301657	723549A011	BADGE,BRAND	
101E	AD301661	735WPAA493	STOPPER,BUTTON	
101F	AE002895	735WPBA946	BUTTON,FRAME	
102	AE002995	A5K305V740	CABINET,BACK ASSY	
103	AD302081	724WNA0001	SHEET,PVC	5x10xT.3
104	AE002897	761WSA0136	ANGLE,DECK	
105	BZ710699	761WPA0249	HOLDER,FBT	
106	AE000754	7232020748	SHEET,IC	
107	AD301810	702WSA0165	PLATE,BOTTOM	
108	AE001041	702WSA0191	SHIELD,TOP	
109	AD301812	7230007593	SHEET,JACK	
110	AD301688	7260000341	SHEET,CAUTION	
111	AD302077	752WSA0333	SHIELD,JACK	
112	BZ710038	8995034000	CORD CLIP UL CO.	
113	AE002898	712WPJB961	PLATE,TRAY-FRONT	
114	AE002996	722549A310	SHEET,RATING	
115	AD300007	7230006755	SHEET,CAUTION	
116	AD301816	7260000343	SHEET,CRT NO.	
117	AD302158	800WR0A002	SHEET,CRT SUPPORT	
118	AD300759	741WUA0021	SPRING,EARTH	
119	AD300758	899EFBA001	WIRING CLIP	
120	AE002846	752WSA0384	ANGLE,DVD 2	
121	AE002997	723000C482	POP LABEL	
122	AE002901	791WHDA001	LAMIFILM,BAG	
123	AD301669	792WHA0412	PACKAGE,TOP	
124	AE001366	792WHA0478	PACKAGE,BOTTOM	
125	AE002998	793WCDC086	GIFT BOX	
126	AE002999	A5K305V975	INSTRUCTION BOOK KIT	
127	AE000060	JB5UD300	POLYBAG,INSTRUCTION(REDCAUTION)	
128	AE001184	J5F10129A	INFORMATION SHEET	
129	AE003000	J5K30501A	INSTRUCTION BOOK	
130	AD302404	J5500817	REGISTRATION CARD	
201	BZ710321	8121F50B84	SCREW,TAP TITE(P) FAI20 FLAT	5x28
202	BZ710035	8117540A64	SCREW,TAPPING(B0) TRUSS	4x16
203	BZ710320	8117540804	SCREW,TAPPING(B0) TRUSS	4x8
204	BZ710239	8109130A04	SCREW,TAP TITE(B) WH7	3x10
205	BZ710562	8109130804	SCREW,TAP TITE(B) WH7	3x8
206	BZ710678	8109230804	SCREW,TAP TITE(B) BIND	3x8
207	BZ710019	8109630802	SCREW,TAP TITE(B) BRAZIER	3x8
208	AE001652	8109230604	SCREW,TAP TITE(B) BIND	3x6
209	AE002618	810F130804	SEMS(F)	3x8
210	BZ710030	8110630804	SCREW,TAP TITE(P) BRAZIER	3x8
211	BZ710018	8107630804	SCREW,TAP TITE(S) BRAZIER	3x8

DVD DECK REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description	
600	AE002905	A5J501C650	DVD MECHA ASS'Y	A5J501C650
601	AD301822	92P100022A	TRAVERSE HOLDER	
602	AE002480	92P100080A	RACK, FEED 1A	
603	AE002481	92P100081A	RACK, FEED 2A	
604	AD301825	92P100035A	LEVER, RACK FEED	
605	AD301826	92P200006A	INSULATOR(F)	
606	AD301827	92P200007A	INSULATOR(R)	
607	AD301846	92P100029A	GEAR, FEED	
608	AE001179	92P300009A	SPRING, RACK L	
609	AD301845	92P100028A	GEAR, MIDDLE 3	
610	AE002482	92P300019A	SPRING, RACK FEED 1A	
611	AE002179	92P100040A	ARM, IDLER 2	
612	AD301833	92P000001A	CLAMPER PLATE	
613	AD301834	92P100019A	RACK, LOADING	
614	AD301835	92P100020A	MAIN FRAME M	
615	AD301836	92P100021A	TRAY	
616	AD301837	92P100023A	GEAR, MAIN	
617	AE002647	92P100082A	CLAMPER 2	
618	AD301839	92P300002A	SPRING, RACK LOADING	
619	AD301840	92P400002A	MAGNET, CLAMPER	
620	AD301847	92P100030A	GEAR, IDLER	
621	AD301842	92P100025A	GEAR, MOTOR	
622	AE002180	92P100083A	GEAR, MIDDLE 1	
623	AD301844	92P100027A	GEAR, MIDDLE 2	
701	BZ710187	8110226804	SCREW, TAP TITE(P) BIND	2.6x8
702	AD301851	8110120604	SCREW, TAP TITE(P) PAN	2x6
703	AD301852	8107220504	SCREW, TAP TITE(S) BIND	2x5
704	AD301853	8140117254	SCREW, PAN	M1.7x2.5 P3
705	AD301913	8110220804	SCREW, TAP TITE(P) BIND	2x8
CD2001	AD301855	122H001901	CORD JUMPER	2H001901
CD2301	AD301856	122H080701	CORD JUMPER	2H080701
CD2302	AE000148	06CH232101	CORD CONNECTOR	CH232101
CP1	AD301858	069JV80180	CONNECTOR PCB SIDE	IMSA-9615S-08C-PP-A
M2602	AD301861	1515S98001	FEED MOTOR	BCD3B81
PCB640	AD301862	A5E601V640	PCB ASS'Y	BEC001A
PCB68A	AD301863	A5E601V680	PCB ASS'Y	BEC002A
SW1	AD301866	0515S32001	SWITCH	SSS-23-6
SW2	AE001158	0500101036	PUSH SWITCH	ESE22MH22

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
RESISTORS			
▲R401	AD301016	R3X28A331J	R,METAL OXIDE 330 OHM 2W
▲R402	AD300783	R3X181221J	R,METAL OXIDE 220 OHM 1W
▲R408	BZ210008	R3X28AR82J	R,METAL OXIDE 0.82 OHM 2W
▲R418	BZ210053	R002T22R2J	RC 2.2 OHM 1/2W
▲R442	AD300419	R4X5T6223F	R,METAL 22K OHM 1/6W
▲R444	AD300036	R4X5T6562F	R,METAL 5.6K OHM 1/6W
▲R445	AD302182	R002T4153J	RC 15K OHM 1/4W
▲R447	BZ210021	R65582680J	R,FUSE 68 OHM 1/2W
R450	AD301761	R635815R6J	R,FUSE 5.6 OHM 1W
▲R803	BZ210050	R3X18A123J	R,METAL OXIDE 12K OHM 2W
▲R805	BZ210050	R3X18A123J	R,METAL OXIDE 12K OHM 2W
▲R807	BZ210050	R3X18A123J	R,METAL OXIDE 12K OHM 2W
R2344	AE002014	R002021R2J	RC 1.2 OHM 1/2W
R2345	AE002014	R002021R2J	RC 1.2 OHM 1/2W
▲R3803	BZ210206	R002T2155J	RC 1.5M OHM 1/2W
▲R3806	BZ210080	R0G3K2275K	RC 2.7M OHM 1/2W
▲R3812	BZ210217	R3X181331J	R,METAL OXIDE 330 OHM 1W
▲R3817	BZ210188	R5Y2CD010J	R,CEMENT 1 OHM 5W
▲R3821	AD300659	R3X181R47J	R,METAL OXIDE 0.47 OHM 1W
▲R3828	BZ210190	R63581R22J	R,FUSE 0.22 OHM 1W
CAPACITORS			
C313	BZ110101	E5EZF3222M	CE 2200 UF 25V
▲C402	BZ110195	E02LU8220M	CE 22 UF 100V
▲C403	BZ110016	E5EZT2471M	CE 470 UF 16V
▲C407	BZ210176	E02LF3222M	CE 2200 UF 25V
C423	BZ110136	P4J7F3394J	CMPP 0.39 UF 250V PMS
▲C428	BZ110258	P4N8FJ862H	CMPP 0.0086UF 1.25KV
C431	BZ110204	E0ELFD220M	CE 22 UF 250V
C802	BZ110247	C0JBB0713K	CC 0.001 UF 2KV B
C3007	AD302087	E02L05010M	CE 1 UF 50V
▲C3801	BZ110025	P2122B224M	CMF 0.22 UF 275V ECQUL
C3810	BZ110080	C0J0B0513K	CC 0.001 UF 500V B
C3811	AE000874	C0PLRR7E3K	CC 0.0015 UF 2KV R
C3812	BZ110080	C0J0B0513K	CC 0.001 UF 500V B
▲C3815	BZ110012	E51CGC471M	CE 470 UF 200V
▲C3816	AE002878	CD39E0MQ3M	CC 0.0047UF 250V
C3818	BZ110101	E5EZF3222M	CE 2200 UF 25V
▲C3820	BZ110188	E50HU5100M	CE 10 UF 50V
▲C3822	AD300125	E5EZF2222M	CE 2200 UF 16V
▲C3823	BZ110032	E5EZF3102M	CE 1000 UF 25V
▲C3826	BZ110130	E62NFC221M	CE 220 UF 200V
C3827	BZ110101	E5EZF3222M	CE 2200 UF 25V
DIODES			
D101	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D102	BZ410021	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D103	BZ410021	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D105	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D106	AD300070	D97U01201B	DIODE,ZENER MTZJ12B T-77
D107	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D401	BZ410043	D2WT011E10	DIODE,SILICON 11E1-E1C
▲D402	AD300731	D2WXN49370	DIODE,SILICON 1N4937
D403	BZ410019	D97U03001B	DIODE,ZENER MTZJ30B T-77
D404	BZ410019	D97U03001B	DIODE,ZENER MTZJ30B T-77
D405	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D406	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D408	BZ410037	D97U03301B	DIODE,ZENER MTZJ33B T-77
D409	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D410	BZ410022	D97U06R81B	DIODE,ZENER MTZJ6.8B T-77
D411	AD300731	D2WXN49370	DIODE,SILICON 1N4937
D413	AD300731	D2WXN49370	DIODE,SILICON 1N4937
D414	BZ410085	D2WXN40050	DIODE,SILICON 1N4005-E1C
▲D416	BZ410020	D97U05R11B	DIODE,ZENER MTZJ5.1B T-77
D603	BZ410085	D2WXN40050	DIODE,SILICON 1N4005-E1C
D801	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D802	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D803	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D2201	BZ410087	0021E2Q140	LED LTL-1CHEE-002A
D2601	BZ410121	DDARDS1200	DIODE,SILICON KDS120RTK
D3003	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D3005	BZ410085	D2WXN40050	DIODE,SILICON 1N4005-E1C
D3006	BZ410085	D2WXN40050	DIODE,SILICON 1N4005-E1C

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
DIODES			
D3007	BZ410021	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D3008	BZ410085	D2WXN40050	DIODE,SILICON 1N4005-EIC
D3009	AE000330	D97U03R61B	DIODE,ZENER MTZJ3.6B T-77
D3801	BZ410021	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D3802	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D3803	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D3804	AD300671	D97U01801B	DIODE,ZENER MTZJ18B T-77
D3805	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D3806	AD301703	D2W0N49370	DIODE,SILICON 1N4937-B-EIC
D3807	AD300731	D2WXN49370	DIODE,SILICON 1N4937
▲D3808	BZ410062	D2WTRM11C0	DIODE,SILICON RM11C-EIC
▲D3809	BZ410062	D2WTRM11C0	DIODE,SILICON RM11C-EIC
D3810	AD300671	D97U01801B	DIODE,ZENER MTZJ18B T-77
D3811	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
▲D3815	BZ410062	D2WTRM11C0	DIODE,SILICON RM11C-EIC
▲D3816	BZ410062	D2WTRM11C0	DIODE,SILICON RM11C-EIC
▲D3817	BZ410115	D2LKB340L0	DIODE,SCHOTTKY SB340L-6737
▲D3818	AD300731	D2WXN49370	DIODE,SILICON 1N4937
▲D3819	BZ410010	D28T21DQN9	DIODE,SCHOTTKY 21DQ09N-TA2B1
▲D3820	BZ410010	D28T21DQN9	DIODE,SCHOTTKY 21DQ09N-TA2B1
▲D3821	BZ410080	D2WXRU2AM0	DIODE,SILICON RU2AM-EIC
D3822	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
▲D3823	BZ410115	D2LKB340L0	DIODE,SCHOTTKY SB340L-6737
D3826	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D3827	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D3828	BZ410067	D97U02R21B	DIODE,ZENER MTZJ2.2B T-77
▲D3830	BZ410010	D28T21DQN9	DIODE,SCHOTTKY 21DQ09N-TA2B1
D3831	BZ410064	D97U03R91B	DIODE,ZENER MTZJ3.9B T-77
D4001	BZ410119	DDRL41480	DIODE,SILICON MCL4148
ICS			
IC101	AE002888	I55D06079A	IC OEC6079A
IC103	AD301641	I9JF032310	IC PST3231NR
IC199	AE002993	A5K305V255	IC S-24C04BDP-LA
▲IC302	AD302184	I0FSP7522N	IC AN7522N
▲IC401	BZ611053	I01TD55220	IC AN5522
IC601	AD301765	I03FC63190	IC LA76319M-MPB-E
IC902	AD300059	I01FF58290	IC AN5829S
IC2301	BZ611126	I03F065600	IC LA6560
IC2601	AE002837	ICQK067080	IC ZR36708TQC
IC2602	AD301770	I07E00358F	IC BA10358F-E2
▲IC3001	BZ611015	I1KA97805A	IC KIA7805API
IC3002	BZ611015	I1KA97805A	IC KIA7805API
IC3005	BZ611033	I1KA97809A	IC KIA7809API
▲IC3800	AD301771	000220001W	PHOTO COUPLER PS2561L1-1-V(W)
IC4001	AE000842	ICQK067620	IC ZR36762
IC4002	AE002137	ICRJC0C4N0	IC AT24C04N-10SI-2.7
IC4003	BZ611130	I0GF9XZ010	IC PQ070XZ01ZP
IC4005	AE000843	IF9J0164A7	IC M12L64164A-7T
IC4007	BZ611129	ICMJ0800A7	IC SST39VF800A-70-4C-EK
IC4201	AE001295	I0QJ045800	IC NJM4580M(TE1)
IC8502	AE002835	I17F02KEG0	IC PCM1742KEG/2K
TRANSISTORS			
Q101	BZ510108	TAAA1504SY	TRANSISTOR,SILICON KTA1504S_Y_RTK
Q105	BZ510108	TCAA3875SY	TRANSISTOR,SILICON KTC3875S_Y_RTK
Q301	BZ510109	TCAA3875SY	TRANSISTOR,SILICON KTC3875S_Y_RTK
Q302	BZ510109	TCAA3875SY	TRANSISTOR,SILICON KTC3875S_Y_RTK
Q305	BZ510109	TCAA3875SY	TRANSISTOR,SILICON KTC3875S_Y_RTK
▲Q401	BZ510004	TA3T016240	TRANSISTOR,SILICON 2SA1624-AA
▲Q405	BZ510097	TCAT03227Y	TRANSISTOR,SILICON KTC3227_Y-AT
▲Q406	AD301779	TD3Q021400	TRANSISTOR,SILICON TT2140LS-YBC11
Q601	BZ510109	TCAA3875SY	TRANSISTOR,SILICON KTC3875S_Y_RTK
Q602	BZ510109	TCAA3875SY	TRANSISTOR,SILICON KTC3875S_Y_RTK
Q605	BZ510025	TPYJB05001	COMPOUND TRANSISTOR DTA114EKAT146
▲Q804	BZ510009	TC3F042170	TRANSISTOR,SILICON 2SC4217(D,E)-RAC
▲Q805	BZ510009	TC3F042170	TRANSISTOR,SILICON 2SC4217(D,E)-RAC
▲Q806	BZ510009	TC3F042170	TRANSISTOR,SILICON 2SC4217(D,E)-RAC
Q2201	BZ510021	TNYJC05001	COMPOUND TRANSISTOR DTC124EKAT146
Q2601	BZ510112	T67J1036K0	TRANSISTOR,SILICON 2SA1036KT146
Q2602	BZ510112	T67J1036K0	TRANSISTOR,SILICON 2SA1036KT146
Q2603	BZ510113	T27T030180	FET 2SK3018
Q2604	BZ510113	T27T030180	FET 2SK3018

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
			TRANSISTORS
	Q2605	BZ510113	T27T030180 FET 2SK3018
	Q3000	BZ510057	TAAT01281Y TRANSISTOR,SILICON KTA1281_Y
	Q3001	BZ510020	TNYJB05001 COMPOUND TRANSISTOR DTC114EKAT146
▲	Q3003	AD301780	TCA0043690 TRANSISTOR,SILICON KTC4369(O,Y)
	Q3004	BZ510057	TAAT01281Y TRANSISTOR,SILICON KTA1281_Y
	Q3005	BZ510105	TCAT03209Y TRANSISTOR,SILICON KTC3209_Y-AT
	Q3006	BZ510070	TCAT032034 TRANSISTOR,SILICON KTC3203_Y-AT
	Q3007	BZ510109	TCAA3875SY TRANSISTOR,SILICON KTC3875S_Y_RTK
	Q3008	BZ510070	TCAT032034 TRANSISTOR,SILICON KTC3203_Y-AT
	Q3009	BZ510105	TCAT03209Y TRANSISTOR,SILICON KTC3209_Y-AT
	Q3010	BZ510057	TAAT01281Y TRANSISTOR,SILICON KTA1281_Y
	Q3800	BZ510068	TCATC31980 TRANSISTOR,SILICON KTC3198-AT(Y,GR)
▲	Q3802	BZ510070	TCAT032034 TRANSISTOR,SILICON KTC3203_Y-AT
▲	Q3803	BZ510093	TJXG5NC500 FET STP5NC50FP
	Q4004	BZ510109	TCAA3875SY TRANSISTOR,SILICON KTC3875S_Y_RTK
	Q4201	BZ510109	TCAA3875SY TRANSISTOR,SILICON KTC3875S_Y_RTK
	Q4203	BZ510045	TNYJD05001 COMPOUND TRANSISTOR DTC144EKAT146
	Q4209	BZ510021	TNYJC05001 COMPOUND TRANSISTOR DTC124EKAT146
	Q4210	BZ510081	TPYJA05001 COMPOUND TRANSISTOR DTA143EKAT146
	Q4211	BZ510109	TCAA3875SY TRANSISTOR,SILICON KTC3875S_Y_RTK
	Q4212	BZ510109	TCAA3875SY TRANSISTOR,SILICON KTC3875S_Y_RTK
	Q8502	BZ510108	TAAA1504SY TRANSISTOR,SILICON KTA1504S_Y_RTK
	Q8503	BZ510108	TAAA1504SY TRANSISTOR,SILICON KTA1504S_Y_RTK
	Q8504	BZ510108	TAAA1504SY TRANSISTOR,SILICON KTA1504S_Y_RTK
			COILS & TRANSFORMERS
	L001	BZ310156	021375101K COIL 100 UH
	L101	BZ310008	0216A6560K COIL 56 UH
	L401	BZ310004	021679472K COIL 4.7 MH
	L601	BZ310041	02167F101J COIL 100 UH
	L602	BZ310156	021375101K COIL 100 UH
	L801	AD301781	021673560K COIL 56 UH
	L902	BZ310041	02167F101J COIL 100 UH
	L904	BZ310041	02167F101J COIL 100 UH
	L3000	AD301785	02167E100K COIL 10 UH
	L3001	AD301785	02167E100K COIL 10 UH
▲	L3800	BZ310076	028R140031 COIL,DEGAUSS 8R140031
▲	L3801	AD301786	029T000110 COIL,LINE FILTER 1R1A223F28
	L3803	AD301539	02AHB0A0A4 CORE,FERRITE W5T_20"10"10A
	L4001	BZ310191	02167F2R2J COIL 2.2 UH
	L4002	BZ310118	02AHB9A972 CORE,FERRITE W5T29X7.5X19
	L4201	BZ310041	02167F101J COIL 100 UH
	L4202	BZ310041	02167F101J COIL 100 UH
	L8502	AE000828	02167F1R0K COIL 1 UH
	L8503	AE000828	02167F1R0K COIL 1 UH
	L8504	AE000828	02167F1R0K COIL 1 UH
	T401	BZ310157	045009003J TRANS,HORIZONTAL DRIVE ETH09K14EZ
▲	T3800	AD301787	0481291074 TRANSFORMER,SWITCHING 81291074
			JACKS
▲	J801	AD301147	066F120018 SOCKET,CATHODE RAY TUBE ISMS01S
▲	J2201	BZ614361	060J131015 HEADPHONE JACK MSJ-2000
	J2202	BZ614146	060G421016 RCA JACK HTJ-032-05AY
	J2203	BZ614147	060G421017 RCA JACK HTJ-032-05AW
	J2204	BZ614280	060G421020 RCA JACK HTJ-032-05AR
	J4201	BZ614400	060J401082 RCA JACK MSP-251V-05PBSN
			SWITCHES
	SW2213	BZ612010	0504101T34 SWITCH,TACT EVQ21505R
	SW2214	BZ612010	0504101T34 SWITCH,TACT EVQ21505R
	SW2215	BZ612010	0504101T34 SWITCH,TACT EVQ21505R
	SW2216	BZ612010	0504101T34 SWITCH,TACT EVQ21505R
	SW2217	BZ612010	0504101T34 SWITCH,TACT EVQ21505R
	SW2218	BZ612010	0504101T34 SWITCH,TACT EVQ21505R
	SW2219	BZ612010	0504101T34 SWITCH,TACT EVQ21505R
	SW2220	BZ612010	0504101T34 SWITCH,TACT EVQ21505R
	SW2221	BZ612010	0504101T34 SWITCH,TACT EVQ21505R
	SW2223	BZ612010	0504101T34 SWITCH,TACT EVQ21505R
			VARIABLE RESISTORS
	VR401	BZ210255	V1K62H3BT8 VOLUME,SEMI FIXED NVG6THTB222
	VR3800	BZ210265	V1K63Q2BTE VOLUME,SEMI FIXED NVG6TLTAB471
			P.C.BOARD ASSEMBLIES
	PCB110	AE002890	A5K304V110 PCB ASS'Y TCB412A
	PCB130	AE002891	A5K304V130 PCB ASS'Y VMC319A

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
		P.C.BOARD ASSEMBLIES	
PCB250	AE002994	A5K305V250	PCB ASS'Y TMB555A
		MISCELLANEOUS	
B301	BZ310129	024HT03564	CORE,BEADS W4BRH3.5X6X1.0
B401	BZ310121	024HT03553	CORE,BEADS W5RH3.5X5X1.0
B2601	BZ310186	024HC31022	CORE,BEADS FCM2012H-102T04
B2602	BZ310186	024HC31022	CORE,BEADS FCM2012H-102T04
B2603	BZ310186	024HC31022	CORE,BEADS FCM2012H-102T04
B2604	BZ310186	024HC31022	CORE,BEADS FCM2012H-102T04
B2605	BZ310186	024HC31022	CORE,BEADS FCM2012H-102T04
B3800	BZ310121	024HT03553	CORE,BEADS W5RH3.5X5X1.0
B4001	BZ310186	024HC31022	CORE,BEADS FCM2012H-102T04
B4002	BZ310186	024HC31022	CORE,BEADS FCM2012H-102T04
B4003	BZ310186	024HC31022	CORE,BEADS FCM2012H-102T04
B4004	BZ310186	024HC31022	CORE,BEADS FCM2012H-102T04
B4005	BZ310186	024HC31022	CORE,BEADS FCM2012H-102T04
B4006	BZ310186	024HC31022	CORE,BEADS FCM2012H-102T04
B4007	BZ310186	024HC31022	CORE,BEADS FCM2012H-102T04
B4008	BZ310186	024HC31022	CORE,BEADS FCM2012H-102T04
B4009	BZ310122	024HT03563	CORE,BEADS W4BRH3.5X6X1.0X2
B4010	BZ310186	024HC31022	CORE,BEADS FCM2012H-102T04
B4201	BZ310121	024HT03553	CORE,BEADS W5RH3.5X5X1.0
B8502	BZ310186	024HC31022	CORE,BEADS FCM2012H-102T04
B8503	BZ310186	024HC31022	CORE,BEADS FCM2012H-102T04
BL001	BZ310014	023C00022A	COIL,BALUN HPN-01
BT001	AE000012	1412004008	BATTERY,MANGAN R03(AB)E_2P_G
BT002	AE000012	1412004008	BATTERY,MANGAN R03(AB)E_2P_G
CD301	BZ614324	06CU12414A	CORD,CONNECTOR CU12414A
CD302	BZ614324	06CU12414A	CORD,CONNECTOR CU12414A
CD802	BZ614404	WDL6032038	FLAT CABLE AWM2468 AWC26 6C BLACK 320MM
CD803	BZ614447	WBL6022038	FLAT CABLE AWM2468 AWC26 4C BLACK 220MM
CD805	BZ614175	06CU82039A	CORD,CONNECTOR SM1098-009-1A
CP101	BZ614458	069S290629	CONNECTOR PCB SIDE A2001WV2-9P
CP301	BZ614268	069W120029	CONNECTOR PCB SIDE TID-X02P-M1
CP302	BZ614268	069W120029	CONNECTOR PCB SIDE TID-X02P-M1
CP401	BZ614303	069S450089	CONNECTOR PCB SIDE A1561WV2-A5P
CP801	BZ614269	069S320010	CONNECTOR PCB SIDE A2361WV2-2P
▲CD3800	AD300685	120R414903	CORD,AC BUSH 0R414903
CD4002	BZ614299	06CU2B2001	CORD,CONNECTOR CU2B2001
CD8501	AD301792	122HC01001	CORD,JUMPER 2H0C1001
CP2601	AD302396	069JY0T099	CONNECTOR PCB SIDE IMSA-9631S-24Y901
CP2602	AD301859	069JV80180	CONNECTOR PCB SIDE IMSA-9615S-08C-PP
CP2603	AD301795	069S230639	CONNECTOR PCB SIDE A2001WR2-3P
▲CP3800	AD300687	069S420110	CONNECTOR PCB SIDE A1561WV2-2P
CP8001	BZ614214	069S2B0629	CONNECTOR PCB SIDE A2001WV2-11P
CP8002	AD301797	069J7C0029	CONNECTOR PCB SIDE IMSA-9604S-12Z14
CP802A	BZ614333	067U006049	WIRE HOLDER B2013H02-6P
CP802B	BZ614333	067U006049	WIRE HOLDER B2013H02-6P
CP803A	BZ614334	067U004029	WIRE HOLDER B2013H02-4P
CP803B	BZ614334	067U004029	WIRE HOLDER B2013H02-4P
CP8502	AD301798	069J7C0019	CONNECTOR PCB SIDE IMSA-9604S-12Z13
CUS011	BZ710149	800WFAA008	CUSHION C
EL001	BZ614044	124120301A	EYE LET XRY20X30BD
EL002	BZ614043	124116281A	EYE LET XRY16X28BD
F3800	BZ614504	081PC05005	FUSE 51MS050L
▲FB401	AD301650	043214037F	TRANSFORMER,FLYBACK FNI-14B001
FH3800	AE002634	06710T0009	HOLDER,FUSE EYF-52BCY
FH3801	AE002634	06710T0009	HOLDER,FUSE EYF-52BCY
OS2202	BZ614199	077Q004017	REMOTE RECEIVER PIC-37243SR
PH3800	BZ614444	069D01001A	CONNECTOR PCB SIDE 003P-2100
PH3801	BZ614444	069D01001A	CONNECTOR PCB SIDE 003P-2100
▲SP351	BZ614200	070C533019	SPEAKER SQ04D11BNA
▲SP352	BZ614200	070C533019	SPEAKER SQ04D11BNA
TM101	AD301799	076D0GD010	TRANSMITTER TOT201N09160
▲TU001	AE000273	0163300005	RF UNIT 115-V-K015AR_B
▲TH3800	BZ410079	DF5EL3R0A0	DEGAUSS ELEMENT ZPB45BL3R0A
▲V801	AD301801	098Q1404D1	CRT W/DY A34AGT13X99(DL)
X101	BZ613019	1002T01606	CERAMIC OSCILLATOR CSTLS16M0X53-A0
X601	AD302003	100CT3R505	CRYSTAL HC-49/C
X4001	AD301803	100BT02701	CRYSTAL HC-49U/S

ELECTRICAL REPLACEMENT PARTS LIST

RESISTOR

RC..... CARBON RESISTOR

CAPACITORS

CC..... CERAMIC CAPACITOR
CE..... ALUMI ELECTROLYTIC CAPACITOR
CP..... POLYESTER CAPACITOR
CPP..... POLYPROPYLENE CAPACITOR
CPL..... PLASTIC CAPACITOR
CMP..... METAL POLYESTER CAPACITOR
CMPL..... METAL PLASTIC CAPACITOR
CMPP..... METAL POLYPROPYLENE CAPACITOR

TOSHIBA CORPORATION

1-1, SHIBAURA 1-CHOME, MIJATO-KU TOKYO 105-8001 JAPAN