


SAVE THIS MANUAL
FOR FUTURE REFERENCE

SEARS

*owners
manual*

**MODEL NO.
113.226423**

**BELT AND DISC
SANDER**

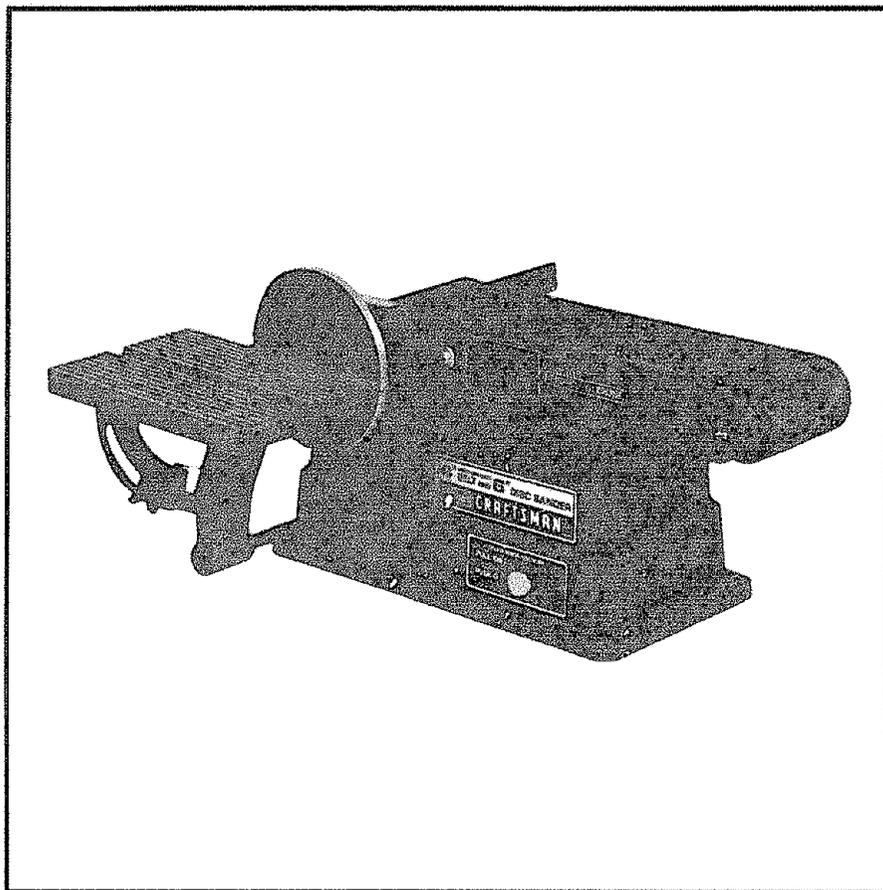

Serial
Number _____

Model and serial number
may be found on the back
side of the base.

You should record both
model and serial number in
a safe place for future use.

CAUTION:

Read **GENERAL**
and **ADDITIONAL**
SAFETY
INSTRUCTIONS
carefully

CRAFTSMAN
BELT AND DISC
SANDER

- *assembly*
- *operating*
- *repair parts*

Sold by SEARS, ROEBUCK AND CO., Chicago, IL 60684 U.S.A.

FULL ONE YEAR WARRANTY ON CRAFTSMAN BELT AND DISC SANDER

If within one year from the date of purchase, this Craftsman Belt and Disc Sander fails due to a defect in material or workmanship, Sears will repair it, free of charge.

WARRANTY SERVICE IS AVAILABLE BY RETURNING THE BELT AND DISC SANDER TO THE NEAREST SEARS RETAIL/CATALOG STORE OR SERVICE CENTER/DEPARTMENT IN THE UNITED STATES.

THIS WARRANTY APPLIES ONLY WHILE THIS PRODUCT IS IN USE IN THE UNITED STATES.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

SEARS, ROEBUCK AND CO., Sears Tower, BSC 41-3, Chicago, IL 60684

general safety instructions for power tools

- 1. KNOW YOUR POWER TOOL**
Read and understand the owner's manual and labels affixed to the tool. Learn its application and limitations as well as the specific potential hazards peculiar to this tool.
- 2. GROUND ALL TOOLS**
This tool is equipped with an approved 3-conductor cord and a 3-prong grounding type plug to fit the proper grounding type receptacle. The green conductor in the cord is the grounding wire. Never connect the green wire to a live terminal.
- 3. KEEP GUARDS IN PLACE**
In working order, and in proper adjustment and alignment.
- 4. REMOVE ADJUSTING KEYS AND WRENCHES**
Form a habit of checking to see that keys and adjusting wrenches are removed from tool before turning it on.
- 5. KEEP WORK AREA CLEAN**
Cluttered areas and benches invite accidents. Floor must not be slippery due to wax or sawdust.
- 6. AVOID DANGEROUS ENVIRONMENT**
Don't use power tools in damp or wet locations or expose them to rain. Keep work area well lighted. Provide adequate surrounding work space.
- 7. KEEP CHILDREN AWAY**
All visitors should be kept a safe distance from work area.
- 8. MAKE WORKSHOP CHILD-PROOF**
—with padlocks, master switches, or by removing starter keys.
- 9. DON'T FORCE TOOL**
It will do the job better and safer at the rate for which it was designed.
- 10. USE RIGHT TOOL**
Don't force tool or attachment to do a job it was not designed for.
- 11. WEAR PROPER APPAREL**
Do not wear loose clothing, gloves, neckties or jewelry (rings, wrist watches) to get caught in moving parts. Nonslip footwear is recommended. Wear protective hair covering to contain long hair. Roll long sleeves above the elbow.
- 12. USE SAFETY GOGGLES (Head Protection)**
Wear Safety goggles (must comply with ANSI Z87.1) at all times. Everyday eyeglasses only have impact resistant lenses, they are NOT safety glasses. Also, use face or dust mask if cutting operation is dusty, and ear protectors (plugs or muffs) during extended periods of operation.
- 13. SECURE WORK**
Use clamps or a vise to hold work when practical. It's safer than using your hand, frees both hands to operate tool.
- 14. DON'T OVERREACH**
Keep proper footing and balance at all times.
- 15. MAINTAIN TOOLS WITH CARE**
Keep tools sharp and clean for best and safest performance. Follow instructions for lubricating and changing accessories.
- 16. DISCONNECT TOOLS**
Before servicing; when changing accessories such as blades, bits, cutters, etc.
- 17. AVOID ACCIDENTAL STARTING**
Make sure switch is in "OFF" position before plugging in.
- 18. USE RECOMMENDED ACCESSORIES**
Consult the owner's manual for recommended accessories. Follow the instructions that accompany the accessories. The use of improper accessories may cause hazards.
- 19. NEVER STAND ON TOOL**
Serious injury could occur if the tool is tipped or if the cutting tool is accidentally contacted.

Do not store materials above or near the tool such that it is necessary to stand on the tool to reach them.
- 20. CHECK DAMAGED PARTS**
Before further use of the tool, a guard or other part that is damaged should be carefully checked to ensure that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced.

21. DIRECTION OF FEED

Feed work into a blade or cutter against the direction of rotation of the blade or cutter only.

22. NEVER LEAVE TOOL RUNNING UNATTENDED

Turn power off. Don't leave tool until it comes to a complete stop.

additional safety instructions for belt and disc sander

Safety is a combination of operator common sense and alertness at all times when the sander is being used.

WARNING: For your own safety, do not attempt to operate your Belt and Disc Sander until it is completely assembled and installed according to the instructions . . . and until you have read and understand the following:

	Page
1. General Safety Instructions for Power Tools	2
2. Getting to Know Your Sander	15
3. Basic Operation	17
4. Maintenance	20
5. Stability of Machine	
If there is any tendency for the machine to tip over or move during certain operations such as when sanding long heavy boards, the sander should be bolted down.	
6. Location	
The machine should be positioned so neither the operator nor a casual observer is forced to stand in line with the sanding belt or disc. This machine is intended for indoor use only.	
7. Kickback	
When sanding on the Disc, always apply the workpiece left of center to the left side of the disc. Applying the workpiece to the right side could cause it to fly up (kickback) which could be hazardous.	
8. Protection: Eyes, Hands, Face, Ears and Body	
a. Always wear safety goggles (not glasses) that comply with ANSI Z87.1. Wear face shield if operation is dusty. Wear ear plugs or muffs during extended periods of operation. Do not wear gloves, jewelry or watches. Roll long sleeves above the elbow. Tie back long hair.	
b. Do not sand pieces of material too small to hold by hand.	
c. Avoid awkward hand positions, where a sudden slip could cause a hand to move into sanding disc or belt.	
d. Never climb on the machine.	

- e. Never turn your Sander "ON" before clearing the belt table and worktable of all objects.
- f. Make sure the sanding belt runs in the right direction (directional arrow on back side of belt). Always have the tracking adjusted correctly so that the belt does not run off the pulleys.
- g. Hold the work firmly when sanding on the belt and against the worktable when sanding on the disc.
- h. Always adjust the worktable to within a maximum of 1/16-inch of the sanding disc or belt.
- i. When sanding a large piece of material, provide additional support at table height.
- j. Never leave the machine work area when the power is on, before the machine has come to a complete stop, or without removing and storing the switch key.
- k. Do not perform layout, assembly or setup work on the table while the sander is operating.
- l. Turn sander "OFF" and remove plug from power supply outlet before installing or removing an accessory.
- m. Use only RECOMMENDED ACCESSORIES listed on page 21.

- 9. If any part of this Belt and Disc Sander should break, bend, or fail in any way or any electrical component fail to perform properly, or if any is missing, shut off power switch, remove power supply cord from power supply and replace damaged missing and/or failed parts before resuming operation.
- 10. Do not sand with the workpiece unsupported. Support it with the backstop or worktable. The only exception is curved work performed on outer end of belt (idler pulley).
- 11. To avoid entanglement in spindle, do not operate sander with sanding plate and/or guard removed.

CAUTION: This Belt and Disc Sander is designed to sand wood or wood like products only. Attempts to sand or grind other materials could result in fire, injury or damage to the product.

additional safety instructions for belt and disc sander

12. Think Safety

Safety is a combination of operator common sense and alertness at all times when the sander is in operation.



The operation of any power tool can result in foreign objects being thrown into the eyes, which can result in severe eye damage. Always wear safety goggles (not glasses) complying with ANSI Z87.1 (shown on Package) before beginning power tool operation. Safety Goggles are available at Sears retail or catalog stores.

WARNING: DO NOT ALLOW FAMILIARITY (GAINED FROM FREQUENT USE OF YOUR MACHINE) TO BECOME COMMONPLACE. ALWAYS REMEMBER THAT A CARELESS FRACTION OF A SECOND IS SUFFICIENT TO INFLICT SEVERE INJURY.

READ AND FOLLOW THE WARNINGS THAT APPEAR ON THE TOOL:

DANGER

FOR YOUR OWN SAFETY:

1. READ AND UNDERSTAND OWNER'S MANUAL BEFORE OPERATING MACHINE.
2. WEAR SAFETY GOGGLES AND DUST MASK.
3. MAINTAIN 1/16" MAXIMUM CLEARANCE BETWEEN TABLE AND SANDING BELT OR DISC.
4. AVOID "KICKBACK" (WORKPIECE THROWN AT YOU)—DO NOT USE RIGHT HALF OF DISC.
5. ALWAYS SUPPORT WORKPIECE WITH "BACK-STOP" OR "WORKTABLE."
6. DO NOT WEAR GLOVES, NECKTIE OR LOOSE CLOTHING. TIE BACK LONG HAIR.



E82443

motor specifications and electrical requirements

This machine is designed to use, and is equipped with, a **3450 RPM** motor. It is wired for operation on 110-120 volts, 60 Hz., alternating current. (TOOL MUST NOT BE CONVERTED TO OPERATE ON 230 VOLT).

For replacement motor refer to parts list in this manual.

CONNECTING TO POWER SUPPLY OUTLET

This machine must be grounded while in use to protect the operator from electric shock.


Plug power cord into a 110-120V properly grounded type outlet protected by a 15-amp. fuse or circuit breaker.

WARNING: Do not permit fingers to touch the terminals of plugs when installing or removing the plug to or from the outlet.

WARNING: If not properly grounded this power tool can cause an electrical shock, particularly when used in damp locations close to plumbing. If an electrical shock occurs there is the potential of a secondary hazard such as your hands contacting the sanding surface.

If power cord is worn or cut, or damaged in any way, have it replaced immediately.

If your unit is for use on 110-120 volts, and has a plug that looks like below.

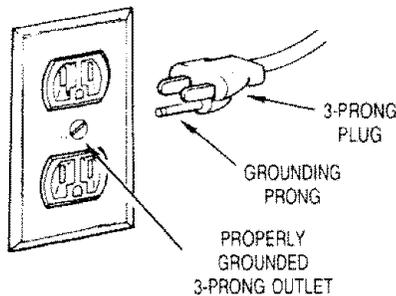


This power tool is equipped with a 3-conductor cord and grounding type plug which has a grounding prong, approved by Underwriters' Laboratories and the Canadian Standards Association. The ground conductor has a green jacket and is attached to the tool housing at one end and to the ground prong in the attachment plug at the other end.

This plug requires a mating 3-conductor grounded type outlet as shown.

If the outlet you are planning to use for this power tool is of the two prong type, DO NOT REMOVE OR ALTER THE GROUNDING PRONG IN ANY MANNER. Use an adapter as shown below and always connect the grounding lug to a known ground.

It is recommended that you have a qualified electrician replace the TWO prong outlet with a properly grounded THREE prong outlet.

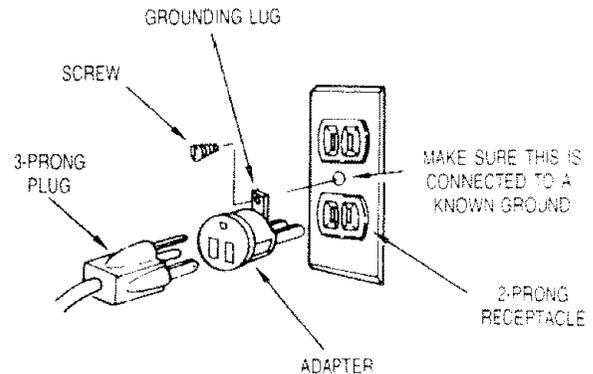

An adapter as shown above is available for connecting plugs to 2-prong receptacles.

WARNING: The green grounding lug extending from the adapter must be connected to a permanent ground such as to a properly grounded outlet box. Not all outlet boxes are properly grounded.

If you are not sure that your outlet box is properly grounded, have it checked by a qualified electrician.

NOTE: The adapter illustrated is for use only if you already have a properly grounded 2-prong receptacle. Adapter is not allowed in Canada by the Canadian Electrical Code.

The use of any extension cord will cause some loss of power. To keep this to a minimum and to prevent overheating and motor burn-out, use the table below to determine the minimum wire size (A.W.G.) extension cord. Use only 3 wire extension cords which have 3-prong grounding type plugs and 3-prong receptacles which accept the tools plug.

Extension Cord Length	Wire Size A.W.G.
Up to 100 Ft.	16
100 - 200 Ft.	14
200 - 400 Ft.	10


contents

CONTENTS	PAGE
Power Tool Warranty	2
General Safety Instructions For Power Tools	2
Additional Safety Instructions	
Belt And Disc Sander	3
Motor Specifications And Electrical Requirements	5
Unpacking And Checking Contents	6
Assembly	
Mounting Belt and Disc Sander to Workbench	7
Clamping Belt and Disc Sander to Workbench	8
Installing Timing Belt	9
Installing Pulley Cover	10
Installing Sanding Disc Plate	10
Installing Backstop	11
Installing Table Assembly	12
Squaring Table Assembly	13

CONTENTS	PAGE
Replacing the Sanding Belt	
Tensioning and Tracking	14
Getting To Know Your Belt And Disc Sander	15
Bevel Sanding	17
Positioning Belt Table	17
Belt Table Stop	18
Surface Sanding on Sanding Belt	18
End Sanding on the Sanding Belt	18
Sanding Curved Edges	19
Maintenance	20
Lubrication	20
Troubleshooting	21
Recommended Accessories	21
Repair Parts	22

unpacking and checking contents

TOOLS NEEDED

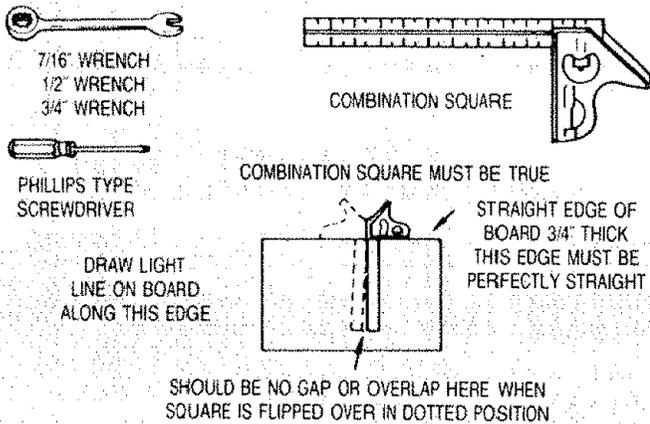


Model 113.226423 Belt and Disc Sander is shipped complete in one carton.

Separate all parts from packing materials and check each item with illustration and "Table of Loose Parts." Make certain all items are accounted for, before discarding any packing material.

If any parts are missing, do not attempt to assemble the Belt and Disc Sander, plug in the power cord, or turn the switch on until the missing parts are obtained and installed correctly.

WARNING: For your own safety, never connect plug to power source outlet until all assembly steps are complete and until you have read and understood the entire owners manual.

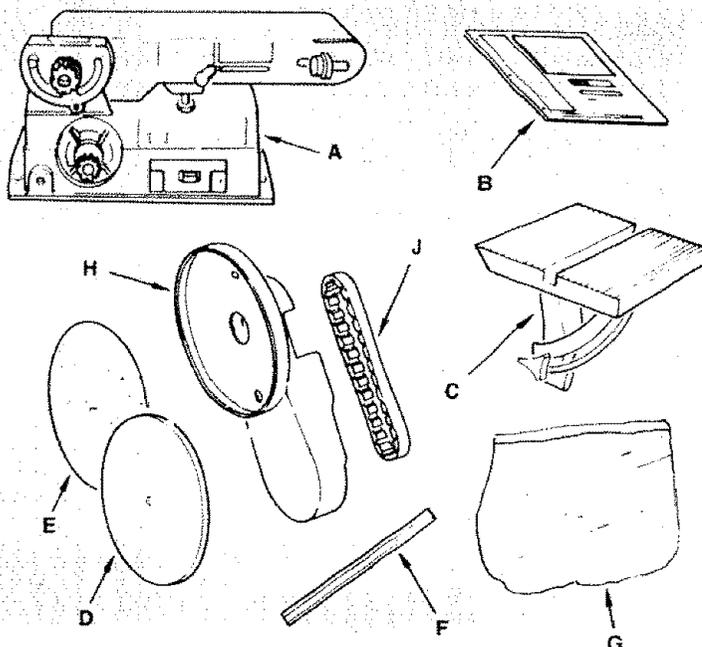

ITEM	TABLE OF LOOSE PARTS	QTY.
A	Belt and Disc Sander Assembly	1
B	Owners Manual	1
C	Table Assembly	1
D	Sanding Plate	1
E	Sanding Disc	1
F	Table Support Rod	1
G	Bag Assembly Part #507303	1
	Containing the following parts:	
	Switch, Key	1
	Wrench, Hex "L" 1/8	1
	Backstop	1
	Washer, 1/4"	1
	Bolt, Hex 1/4-20X1/2	1
	Bolt, Hex 5/16-18X1	2
	Knob	1
	Setscrew 1/4-20X1/4"	1
	Screw 1/4-20X1-3/4"	1
H	Pulley Cover	1
J	Timing Belt	1

assembly

MOUNTING BELT AND DISC SANDER TO WORKBENCH

If belt and disc sander is to be used in a permanent location, it should be fastened securely to a firm supporting surface such as a workbench. A 5/16" bolt, flat-washer, lockwasher, and hex nut (not included) should be used at each mounting hole to secure the belt disc sander to the workbench.

If mounting to a workbench, holes should be drilled through supporting surface of the workbench as follows:

1. Set the belt disc sander on the workbench in the exact position where it is to be mounted.
2. Push a pencil through one of the mounting holes and place a mark on the workbench that marks the **center** of the mounting hole opening. Mark the other three mounting holes using the same method.


SPECIAL NOTE: Make sure the pencil marks are placed very near the center of the mounting hole openings.

WARNING: Check under workbench before drilling holes to make sure electrical wires, gas pipes, etc., will not be hit by drill bit.

3. Remove the belt disc sander from the workbench. Drill four 3/8" diameter holes using the pencil marks as the center of the drilled holes.


SPECIAL NOTE: It is highly recommended that you place a soft foam pad between your belt disc sander and workbench. The use of this pad will reduce noise and vibration.

4. Place the belt disc sander back on the workbench. Align the mounting holes in the sander with the drilled holes in the workbench.

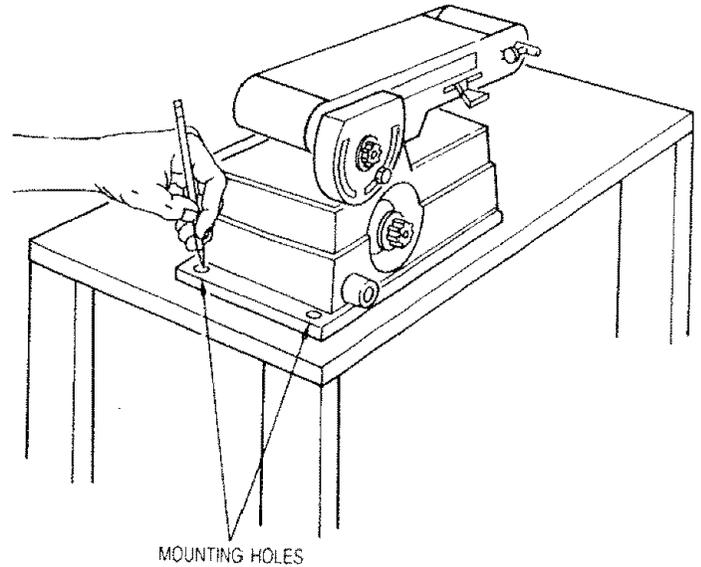


5. Insert four 5/16" bolts through the mounting holes and through the drilled holes in the workbench.
6. Place a 5/16" flat washer, 5/16" lockwasher, and a 5/16" hex nut on the bolt and tighten.

SPECIAL NOTE: Do not overtighten mounting bolts - leave some cushion in the foam pad for absorbing noise and vibration.

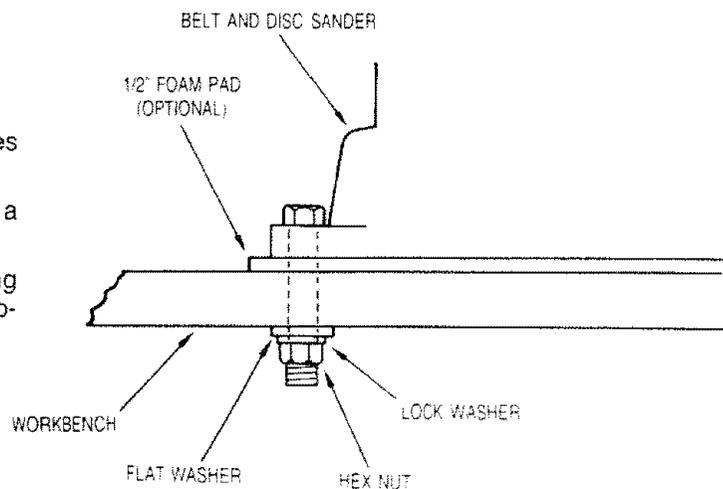

assembly

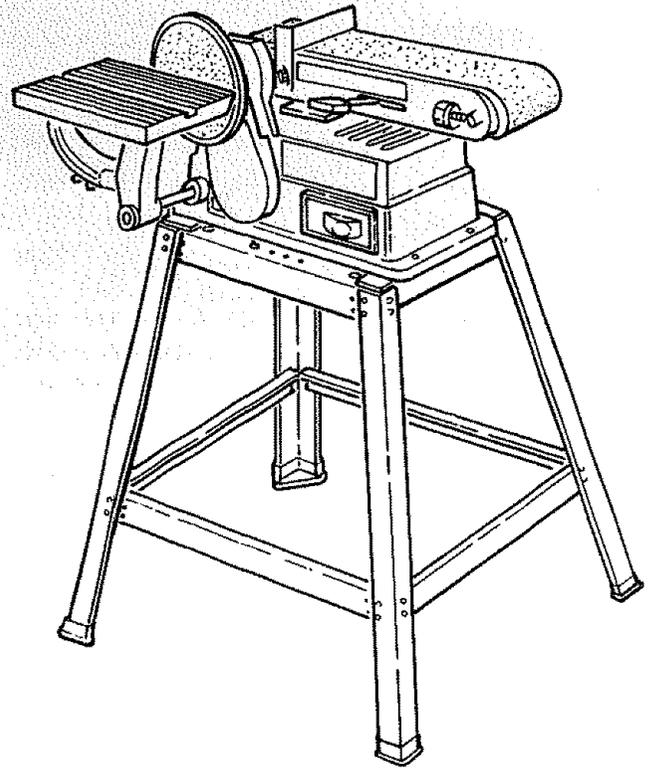


7. If you prefer to mount your sander to a leg set we recommend the leg set for bench top tools which is available through Sears Retail or Catalog Stores. The number of this leg set is 9-22244. This leg set is an **optional** accessory and instructions to mount the belt and disc sander to this leg set are included in the leg set package.

ALTERNATE MOUNTING METHOD


An alternate method of mounting the belt and disc sander is to fasten the sander to a mounting board. The board should be of sufficient size to avoid tipping of sander while in use. Any good grade of plywood or chipboard with a 3/4" minimum thickness is recommended. (Thinner chipboard can break.)

1. Follow instructions for mounting sander to workbench, substituting a board 18" X 24" minimum size in place of the workbench.

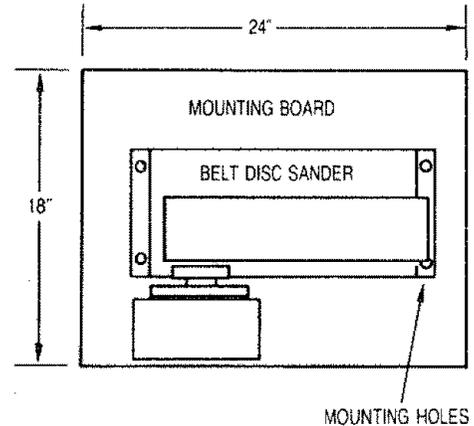


2. Substitute 5/16" flat head bolts for mounting bolts (NOT INCLUDED). Bolt length should be 1-1/2" plus the thickness of the mounting board.

NOTE: For proper stability, holes must be countersunk so screw heads are flush with the bottom surface of the mounting board.

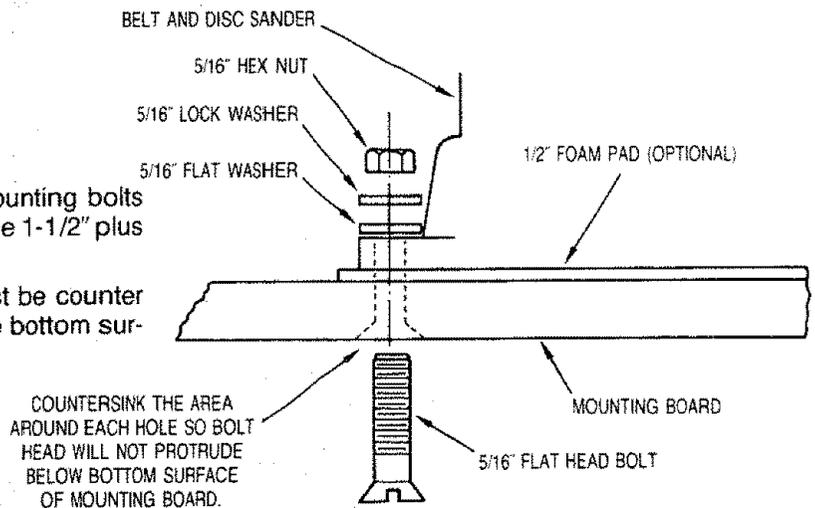

- Securely clamp board to workbench using "C" clamps.


SPECIAL NOTE: The supporting surface where belt and disc sander is mounted should be examined carefully after mounting is complete to insure that no movement during use can occur. If any tipping or walking is noted, secure workbench or supporting surface before operating belt and disc sander.

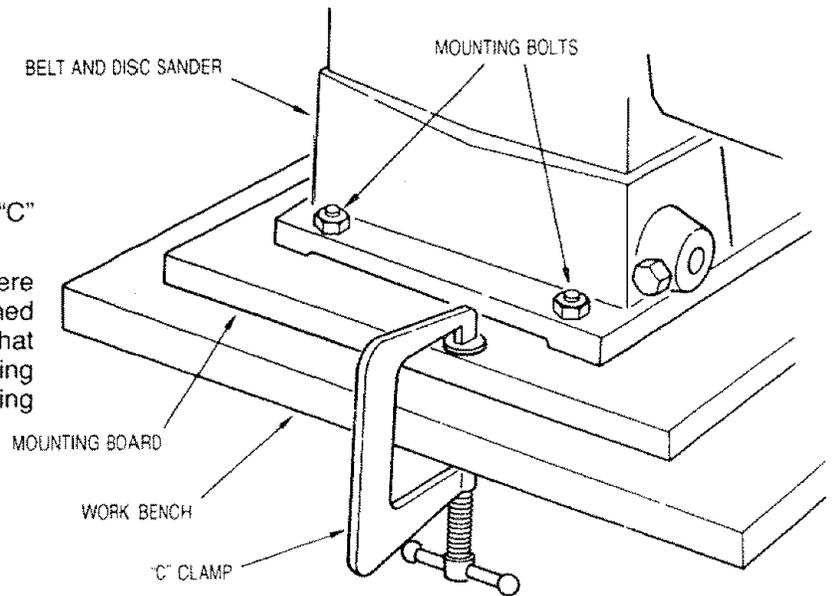


INSTALLING TIMING BELT

IMPORTANT — Do not overtighten timing belt tension by adjusting timing setscrew too tight. This is a COG Belt which does not require excessive tension to function properly.

- Locate the two locking bolts holding the sanding belt table and loosen both with a 1/2 inch wrench.

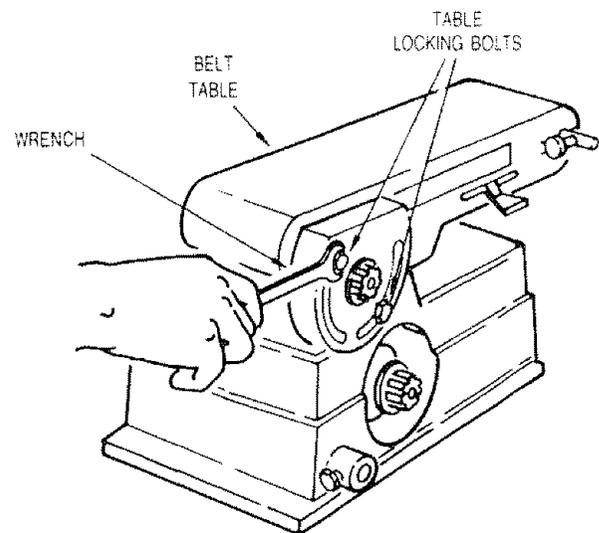

- Raise the sanding belt table to the vertical position.
- On top of the base locate the timing setscrew centered in the locknut. Loosen the locknut with a 7/16 inch wrench and raise the setscrew about 1/4 inch using the 1/8 inch hex wrench.

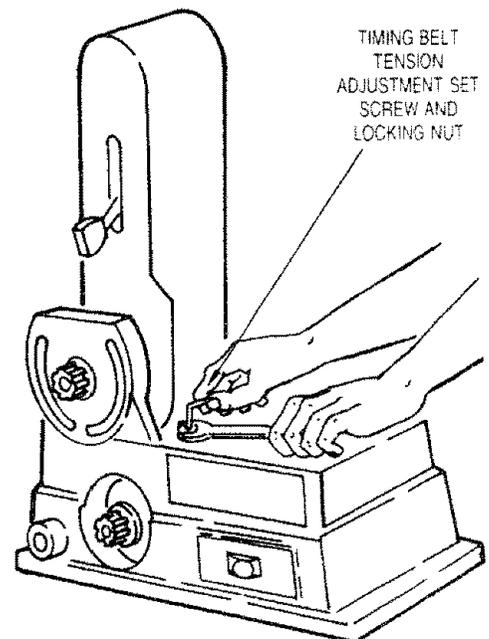

assembly


4. The lower pulley/motor shaft can now be raised enough to slip the belt over both pulleys.
5. While moving the lower pulley/motor shaft up and down, begin to tighten the timing belt tension adjustment screw. The set screw is adjusted correctly at the **instant** you can no longer lift the pulley/motor shaft upward.

DO NOT OVERTIGHTEN SET SCREW!

6. Tighten locknut.
7. Lower sanding belt table to horizontal position and tighten table lock bolts.


SPECIAL NOTE: Timing belt tension adjusting screw has been screwed down too far if the motor makes a humming noise when turned on, but the belt and disc do not move.

Timing belt tension adjusting screw is not screwed down far enough if the sanding belt stops moving while sanding but the sanding disc continues to rotate.

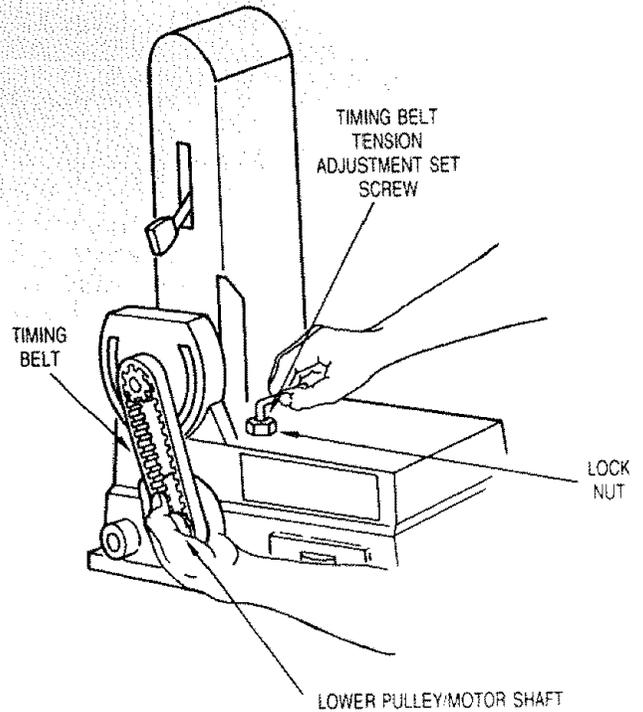


INSTALLING PULLEY COVER

1. Locate the pulley cover and one screw 1/4-20x 1-3/4".
2. Place pulley cover into position shown and fasten with one screw. Do not overtighten.

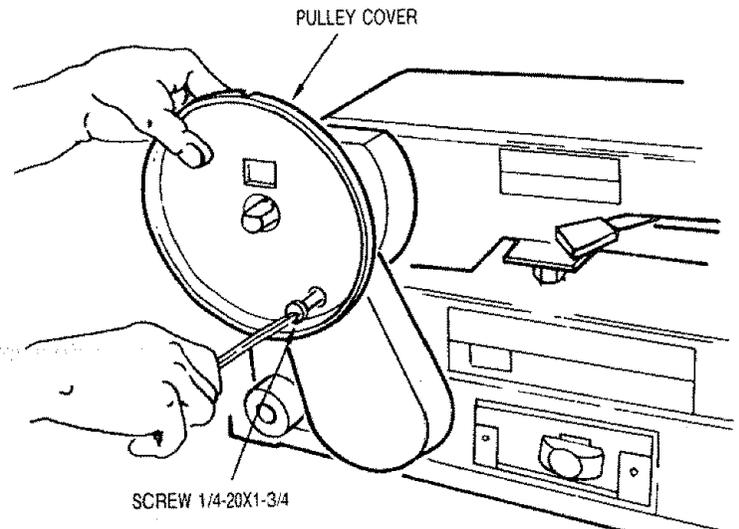


INSTALLING SANDING DISC PLATE


1. Locate sanding disc plate, sanding disc, one setscrew 1/4-20x1/4 inch, and a 1/8 inch hex wrench.
2. Just start screw into threaded hole in sanding plate.

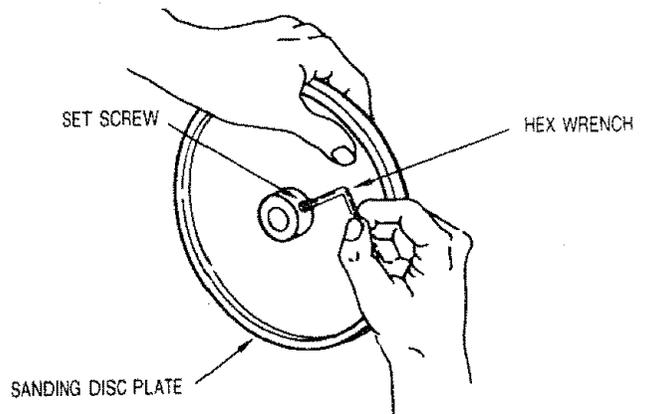


- Align flat on shaft with setscrew in sanding plate. Slide sanding plate onto shaft until plate surface and shaft are nearly flush. Do not allow shaft to extend out past surface of sanding plate or damage may occur to your sanding disc during operation.

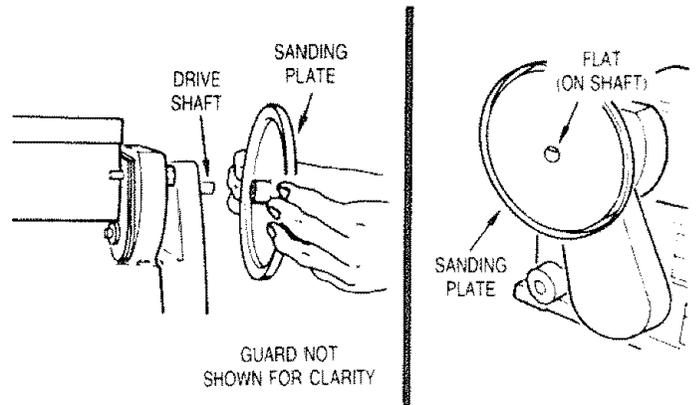

- To tighten setscrew, reach through hole in top of pulley cover with hex wrench. Tighten setscrew very firmly.

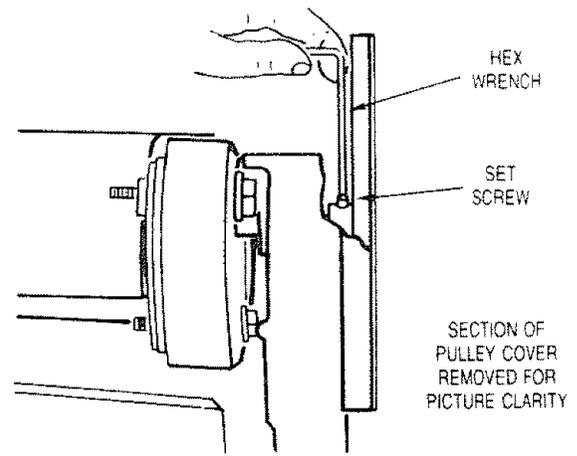


- Locate sanding disc and peel backing from disc. Align perimeter of disc with plate and press disc firmly into position all the way around.

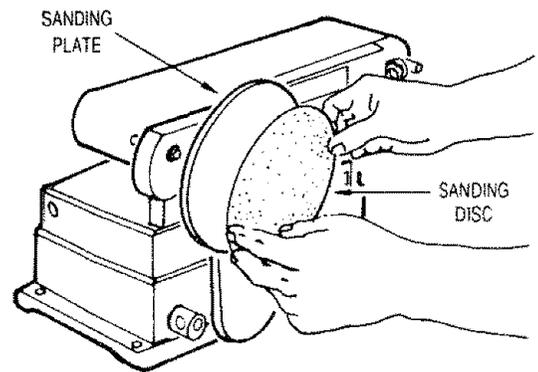

INSTALLING BACKSTOP


- Locate backstop, hex bolt 1/4-20x1/2 inch, and a 1/4 inch flat washer.
- Hold backstop into position and fasten with bolt and washer as shown. Do not overtighten.

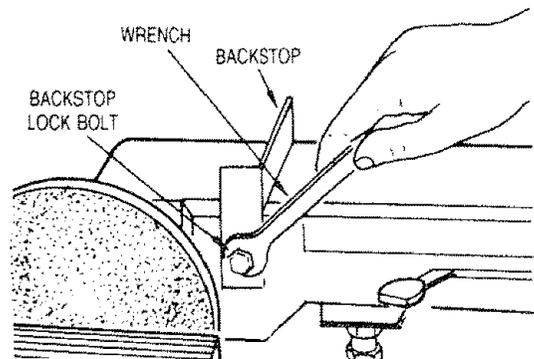


assembly

INSTALLING TABLE ASSEMBLY

1. Locate table support rod, knob and 5/16-18x 1 bolt among loose parts.
2. Insert rod in base as shown, leaving 5 inches of rod extending outside base.

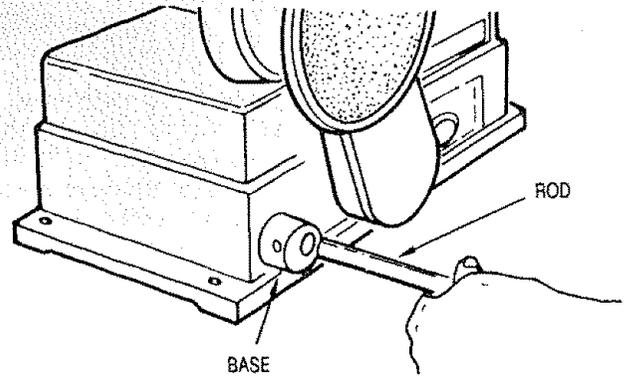


3. Install bolt in base (align a flat side of rod to bolt) and tighten with 1/2 inch wrench.

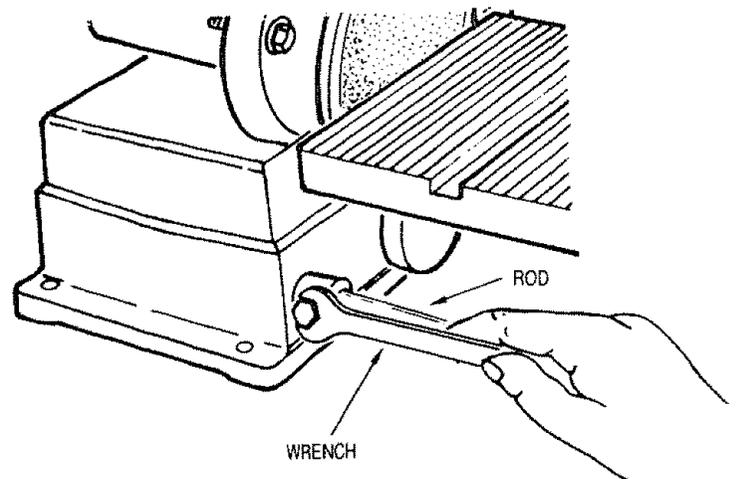


4. Slide table assembly onto rod.

WARNING: To avoid trapping the work or fingers between the table and sanding surface, the table edge should be a maximum of 1/16-inch from sanding surface. Table assembly should be completely engaged on rod.

5. The table must be adjusted so it is parallel to the sanding surface and no further away from the sanding surface than 1/16".
6. To adjust the 1/16" gap, slide the table assembly forward on the rod and tighten the table assembly lock knob.

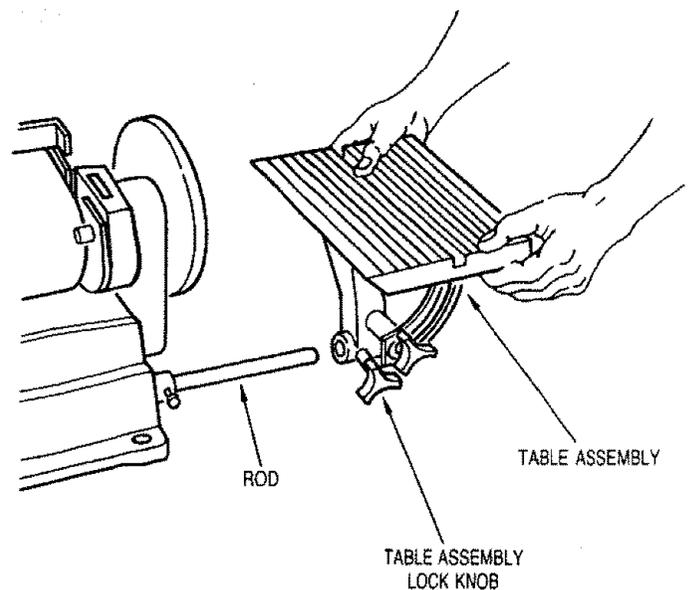


7. To adjust table so it is parallel to sanding surface, locate two allen head set screws on bottom side of the table.
8. Loosen these two set screws and position the table parallel to the sanding surface. (There should be a minimum gap of 1/16" across the full face of the sanding surface.)
9. Tighten set screws.

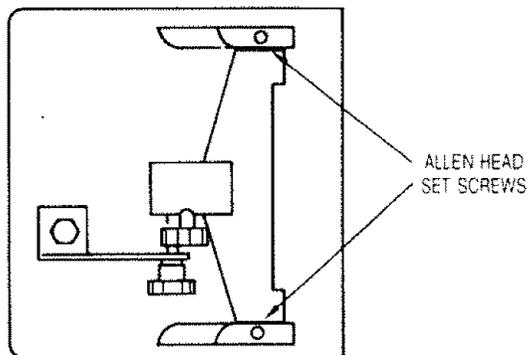

VIEW SHOWING
UNDERSIDE OF TABLE


10. There is an auxiliary mounting hole in the base. This is for mounting the table when the belt is used in a vertical position by moving the complete rod/worktable assembly and table positioning bolt. Note and follow the above **WARNING** for table clearance.

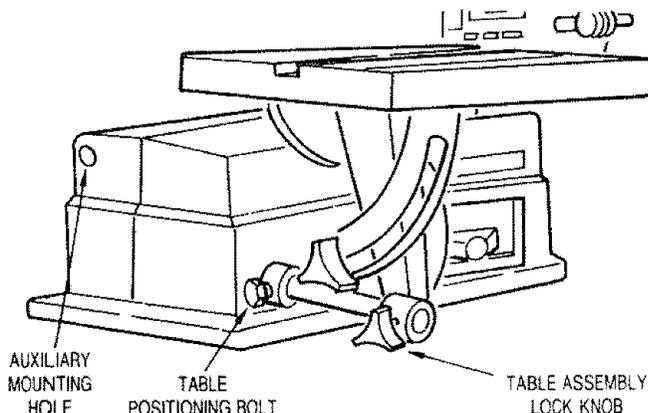

SQUARING TABLE ASSEMBLY

WARNING: To avoid injury from accidental start, make sure tool is unplugged before aligning.

1. Using a combination square, check the angle of the worktable with the disc.
NOTE: The combination square must be "true" — See start of assembly section on Pg. 6 for checking method.
2. If the table is not 90° with the disc . . . loosen table lock knob screw and tilt table.
3. Adjust worktable square to the disc and retighten table lock knob.
4. Adjust pointer to 0° mark on trunnion with phillips screwdriver if necessary.

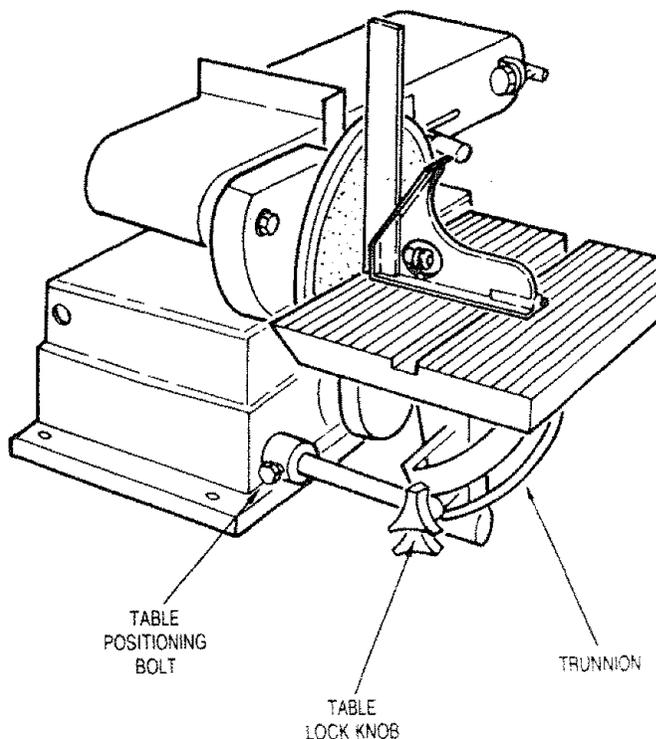

assembly


NOTE: This unit comes with the sanding belt installed.

REPLACING THE SANDING BELT - TENSIONING AND TRACKING


WARNING: To avoid injury from accidental start, turn switch "OFF" and remove plug from power source outlet before removing or installing sanding belt. Use only Sears recommended sanding belts. See Sears Catalog.

On the smooth side of the sanding belt you will find a "directional arrow." The sanding belt must run in the direction of this arrow so that the splice does not come apart.


1. Slide tension knob to the right to release the belt tension.
2. Place the sanding belt over the pulleys with the directional arrow pointing as shown. Make sure the belt is centered on both pulleys.

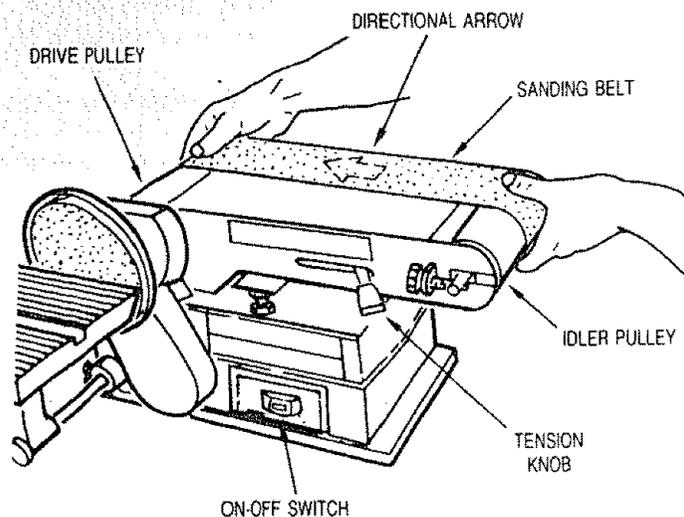

3. Slide tension knob to the left to apply belt tension.
4. Plug in the power cord. Turn switch "ON" and immediately "OFF", noting if the belt tends to slide off the idler pulley or drive pulley. If it did not tend to slide off, it is TRACKING properly.

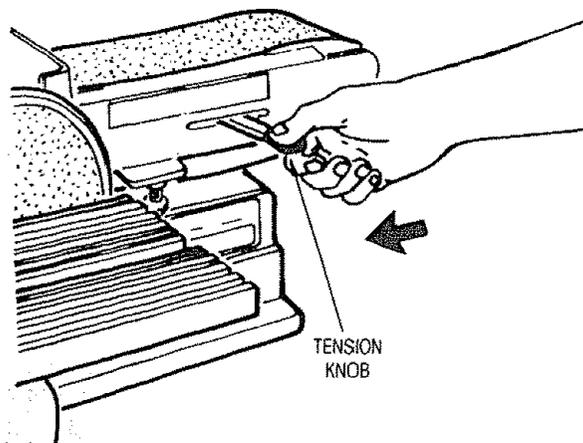


5. If the sanding belt moves toward the disc, turn the tracking knob counterclockwise 1/4 turn.
6. If the sanding belt moves away from the disc, turn the tracking knob clockwise 1/4 turn.
7. Turn switch "ON" and immediately "OFF" again, noting belt movement. Readjust tracking knob if necessary.

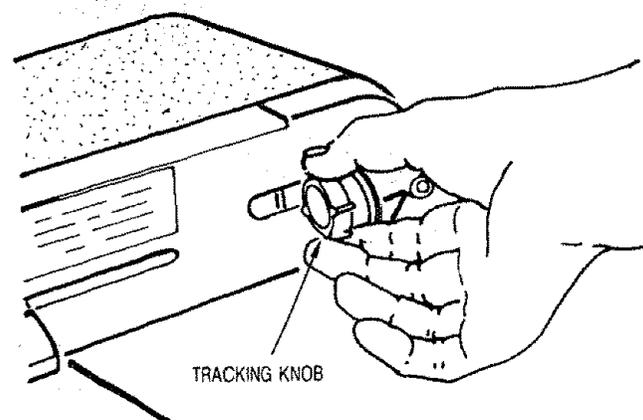

getting to know your belt and disc sander

WARNING: To avoid injury from accidental start, turn switch "OFF" and remove plug from power source outlet before making any adjustments.

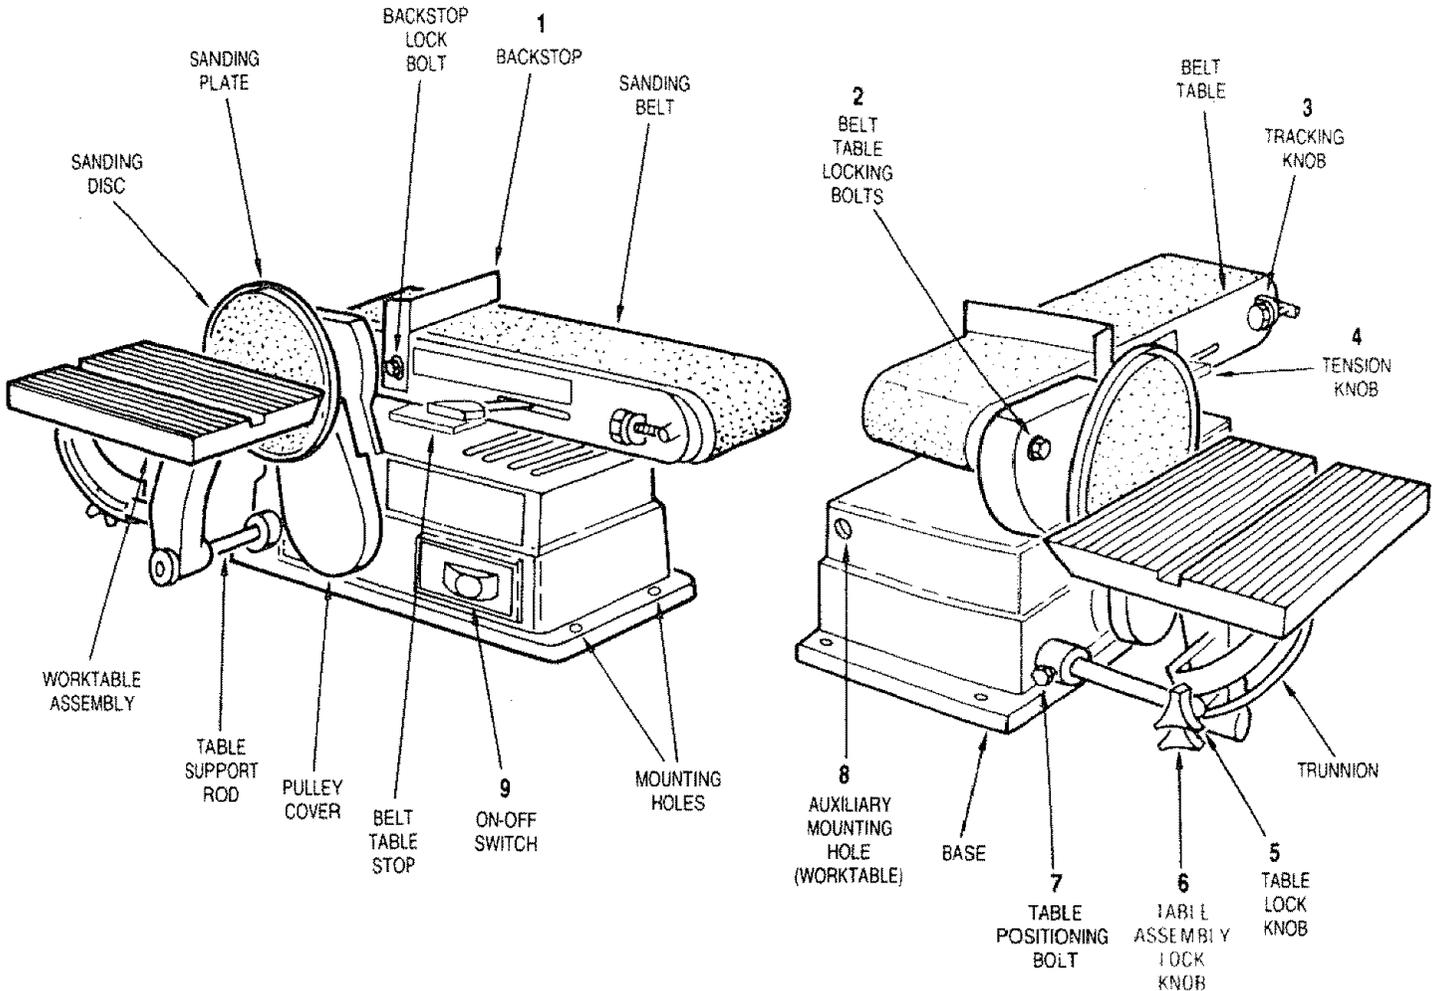

1. Backstop . . . Supports the workpiece on the sanding belt.
2. Belt Table Locking Bolts . . . Loosening bolts allows belt table to be raised to the vertical position.
3. Tracking Knob . . . Turning knob clockwise causes sanding belt to move towards the disc; turning knob counterclockwise causes sanding belt to move away from the disc.
4. Tension Knob . . . Sliding knob to the right releases the sanding belt tension; sliding knob to the left applies belt tension.
5. Table Lock Knob . . . Loosening knob allows the worktable to be tilted for bevel sanding (Scale on table trunnion).
6. Table Assembly Lock Knob . . . Locks the table assembly onto the table support rod.
7. Table Positioning Bolt . . . Locks the rod into the base.
8. Auxiliary Mounting Hole . . . Allows table assembly to be mounted for end sanding on the belt side.
9. On-Off Switch . . . Controls the power to the sander.


getting to know your belt and disc sander

9. ON-OFF SWITCH


The On-Off Switch has a locking feature. THIS FEATURE IS INTENDED TO HELP PREVENT UNAUTHORIZED AND POSSIBLY HAZARDOUS USE BY CHILDREN AND OTHERS.

1. To turn machine "ON" insert key into switch.

NOTE: Key is made of yellow plastic; locate in loose parts bag.

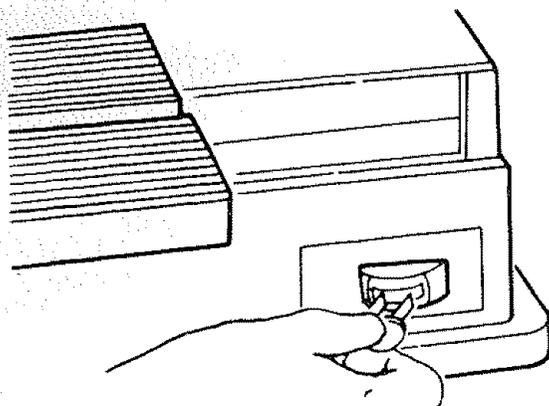


2. Insert finger under switch lever and pull end of switch out.

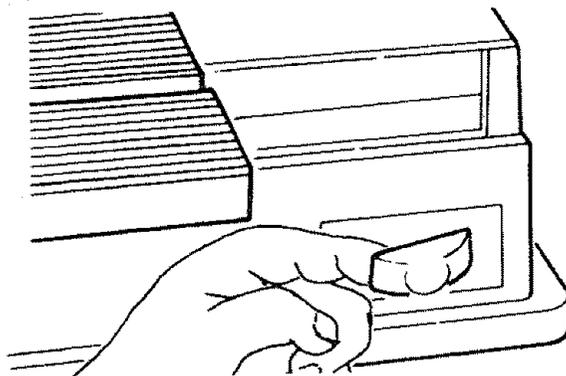


3. To turn machine "OFF" . . . PUSH lever in.

NEVER LEAVE THE MACHINE UNATTENDED UNTIL IT HAS COME TO A COMPLETE STOP.

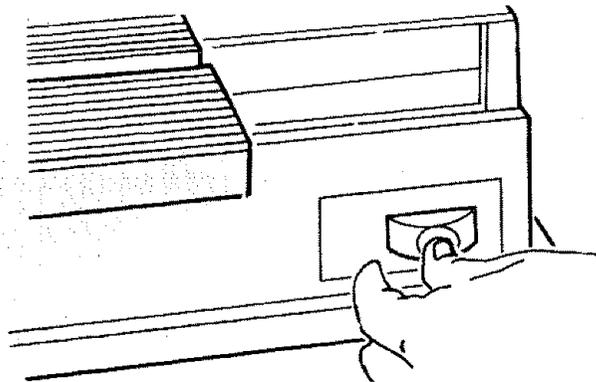

4. To lock switch in OFF position . . . hold switch IN with one hand . . . REMOVE key with other hand.

WARNING: For your own safety, always lock the switch "OFF" when machine is not in use . . . remove key and keep it in a safe place . . . also . . . in the event of a power failure (all of your lights go out) turn switch off . . . remove the key and store it remote from belt and disc sander. This will prevent the machine from starting up again when the power comes back on.

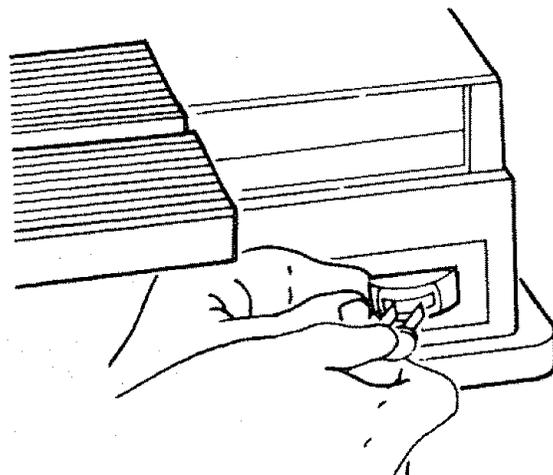


basic operation

BEVEL SANDING

The worktable can be tilted from 0° - 45° for bevel sanding. Loosen the table lock knob and tilt the worktable to desired angle as shown.

WARNING: To avoid trapping the work or fingers between the table and sanding surface, the table should be repositioned on the table support rod to retain a maximum of 1/16-inch distance between disc and table.

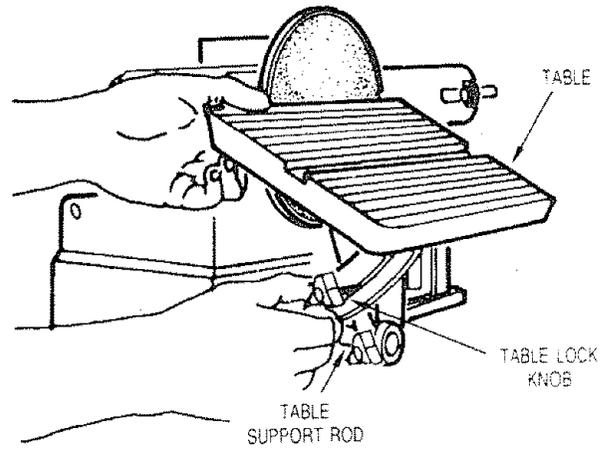


POSITIONING BELT TABLE


Two belt table locking bolts lock the belt table in a vertical or horizontal position.

To adjust vertical position:

- a. Remove the backstop.
- b. Loosen the two belt table locking bolts using a 1/2-inch wrench.

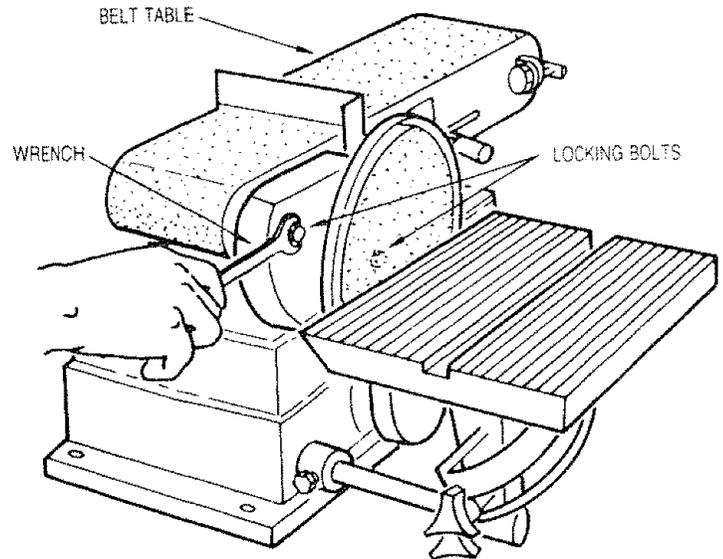


- c. Position belt table vertically as shown and tighten the two bolts.

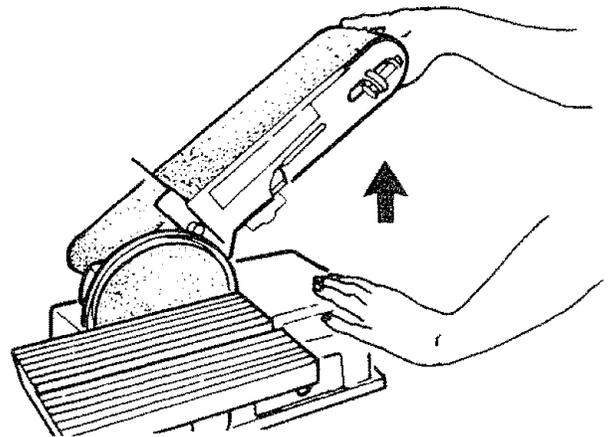

basic operation

BELT TABLE STOP CAN BE ADJUSTED SO THAT THE ABRASIVE BELT TABLE IS LEVEL WITH THE FLOOR WHEN IN A HORIZONTAL POSITION.

- Loosen the lock nut using a 3/4-inch wrench.
- Place a level on the abrasive belt table and using a 3/4-inch wrench, screw the stop bolt in or out until the belt table is level.
- Tighten the lock nut.

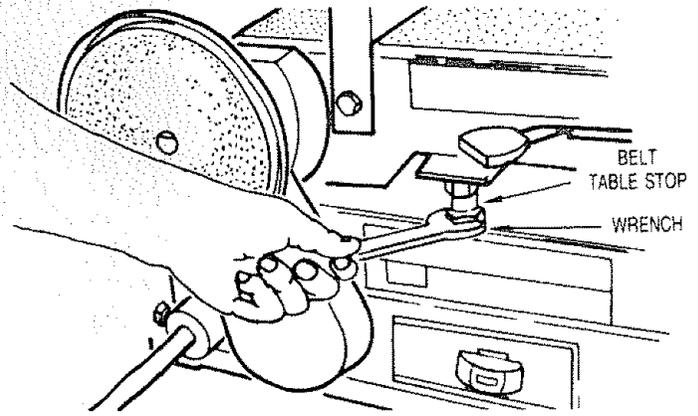


SURFACE SANDING ON THE SANDING BELT

Hold the workpiece firmly with both hands, keeping fingers away from the sanding belt.

Keep the end butted against the backstop and move the work evenly across the sanding belt. Use extra caution when sanding very thin pieces.

For sanding long pieces, remove the backstop.

Apply only enough pressure to allow the sanding belt to remove material.

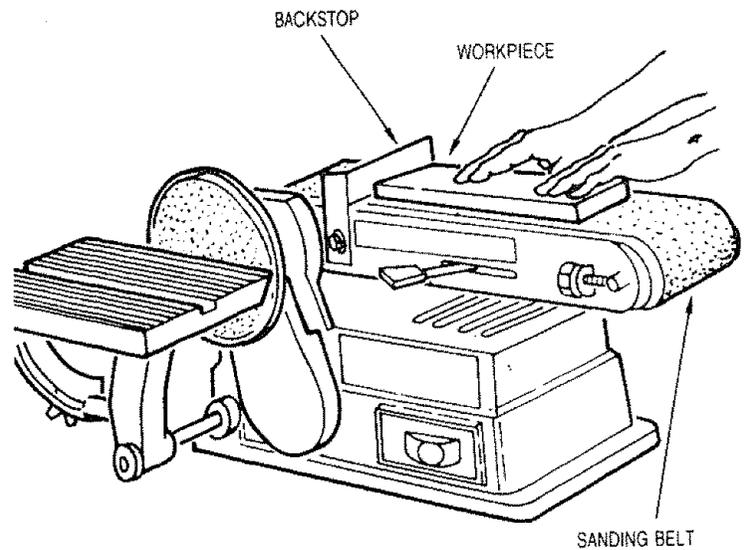


END SANDING ON THE SANDING BELT

It is more convenient to sand the ends of long workpieces with sanding belt in a vertical position.


See "Basic Operation - Positioning Belt Table" for adjusting the belt table, and see "Assembly - Installing Table Assembly" for adjusting worktable.

Move the work evenly across the sanding belt. For accuracy, use a miter gauge (accessory).

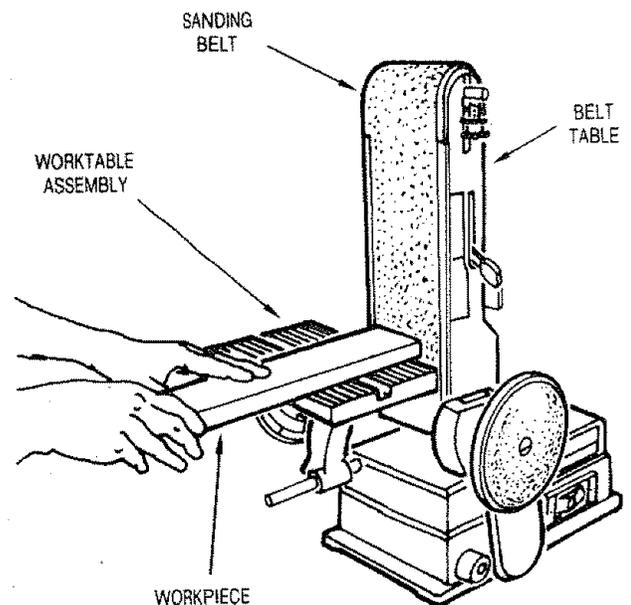


**SANDING CURVED EDGES
CURVED EDGES**

Sand inside curves on the idler pulley.

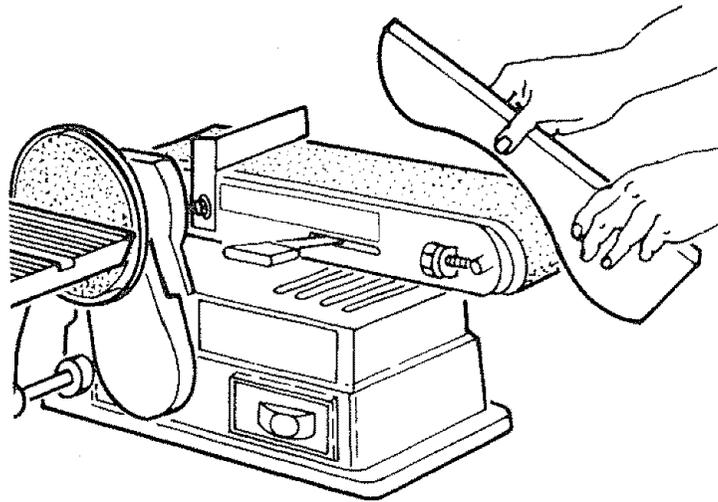


Sand outside curves on the sanding disc.

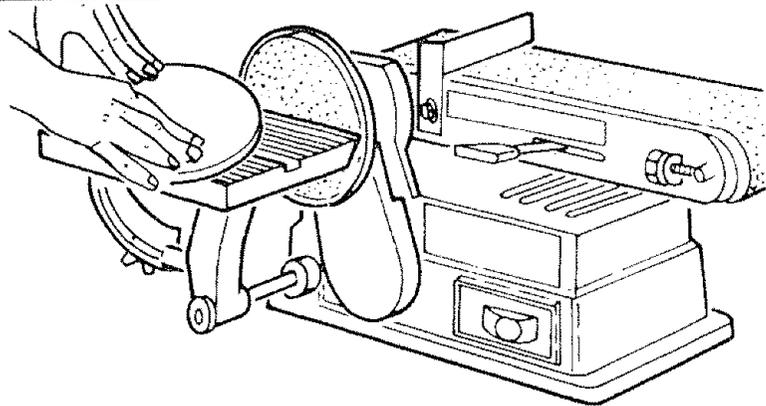


**SANDING SMALL END SURFACES ON THE
SANDING DISC**

Move the work across the center to the left side of the face of the sanding disc. For accuracy, use a miter gauge (accessory).

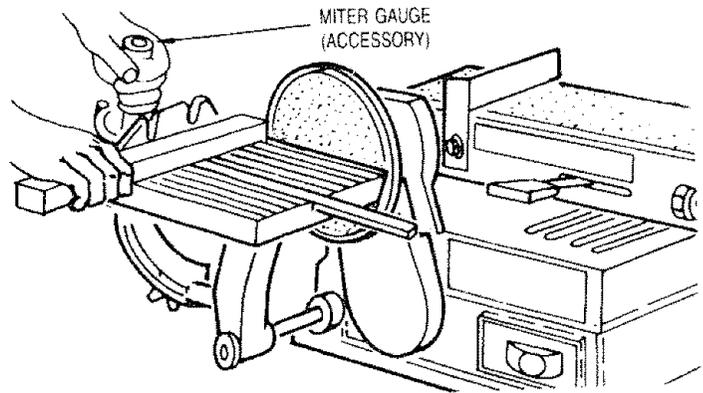


NOTE: Use a combination square to square the miter gauge to the face of the disc (combination square must be "true" — See Start of Assembly section on page 6 for checking method). If it is not square, loosen the miter gauge knob and move the miter gauge slightly until it is square. Without moving the miter gauge, tighten the knob securely.

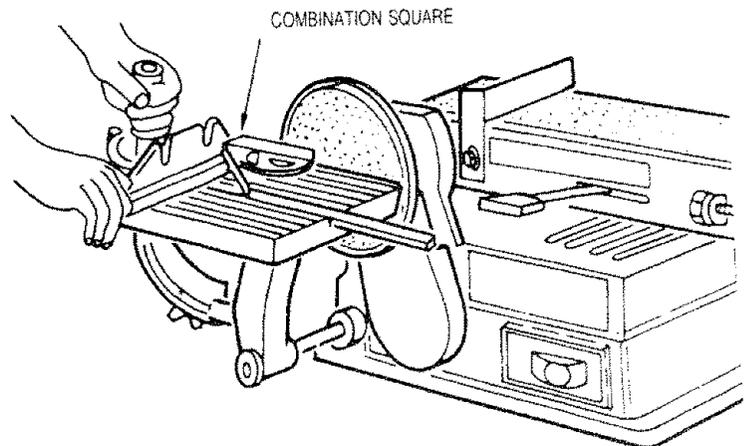

basic operation

WARNING: Applying the workpiece to the right side could cause it to fly up (kickback) which could be hazardous.

The table may be tilted for beveled work.

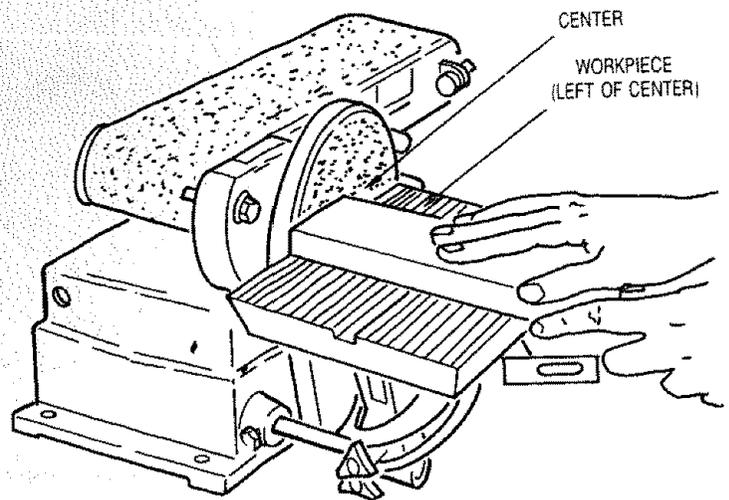

maintenance

WARNING: For your own safety, turn switch "OFF" and remove plug from power source outlet before adjusting, maintaining, or lubricating your belt and disc sander.

If power cord is worn or cut, or damaged in any way, have it replaced immediately.


Frequently blow out or vacuum out any dust that may accumulate inside the motor.

A coat of automobile-type wax applied to the worktable will make it a little easier to feed the work while finishing.

Do not apply wax to the abrasive belt table because the belt could pick up the wax and deposit it on the pulleys, causing the belt to slip.

LUBRICATION

The BALL BEARINGS in this machine are packed with grease at the factory. They require no further lubrication.

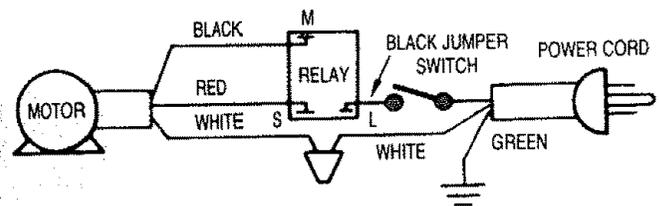

WIRING DIAGRAM

trouble shooting

WARNING: For your own safety, turn switch "OFF" and remove plug from power source outlet before trouble shooting your sander.

TROUBLE	PROBABLE CAUSE	REMEDY
Motor will not run.	<ol style="list-style-type: none"> 1. Defective On-Off switch. Defective switch cord. Defective switch box. 2. Burned out motor. 	<ol style="list-style-type: none"> 1. Replace defective parts before using belt and disc sander again. 2. Consult Sears Service. Any attempt to repair this motor may create a HAZARD unless repair is done by a qualified service technician. Repair service is available at your nearest Sears Store.
Machine slows down when sanding.	<ol style="list-style-type: none"> 1. Timing belt too tight. 2. Applying too much pressure to workpiece. 	<ol style="list-style-type: none"> 1. Decrease belt tension, see Assembly Section. 2. Ease up on pressure.
Sanding Belt runs off pulleys.	<ol style="list-style-type: none"> 1. Not tracking properly. 	<ol style="list-style-type: none"> 1. Adjust tracking, see Assembly Section, "Replacing the Sanding Belt — Tensioning and Tracking"
Wood burns while sanding.	<ol style="list-style-type: none"> 1. Sanding disc or belt is glazed with sap. 	<ol style="list-style-type: none"> 1. Replace disc or belt.


RECOMMENDED ACCESSORIES

ITEM	CAT. NO.
Miter Gauge	9-24214
Sanding Belts and Discs	See Catalog
Leg Set	9-22244

The above recommended accessories are current and were available at the time this manual was printed.

**PARTS LIST FOR CRAFTSMAN BELT AND DISC SANDER
MODEL NO. 113.226423**

repair parts

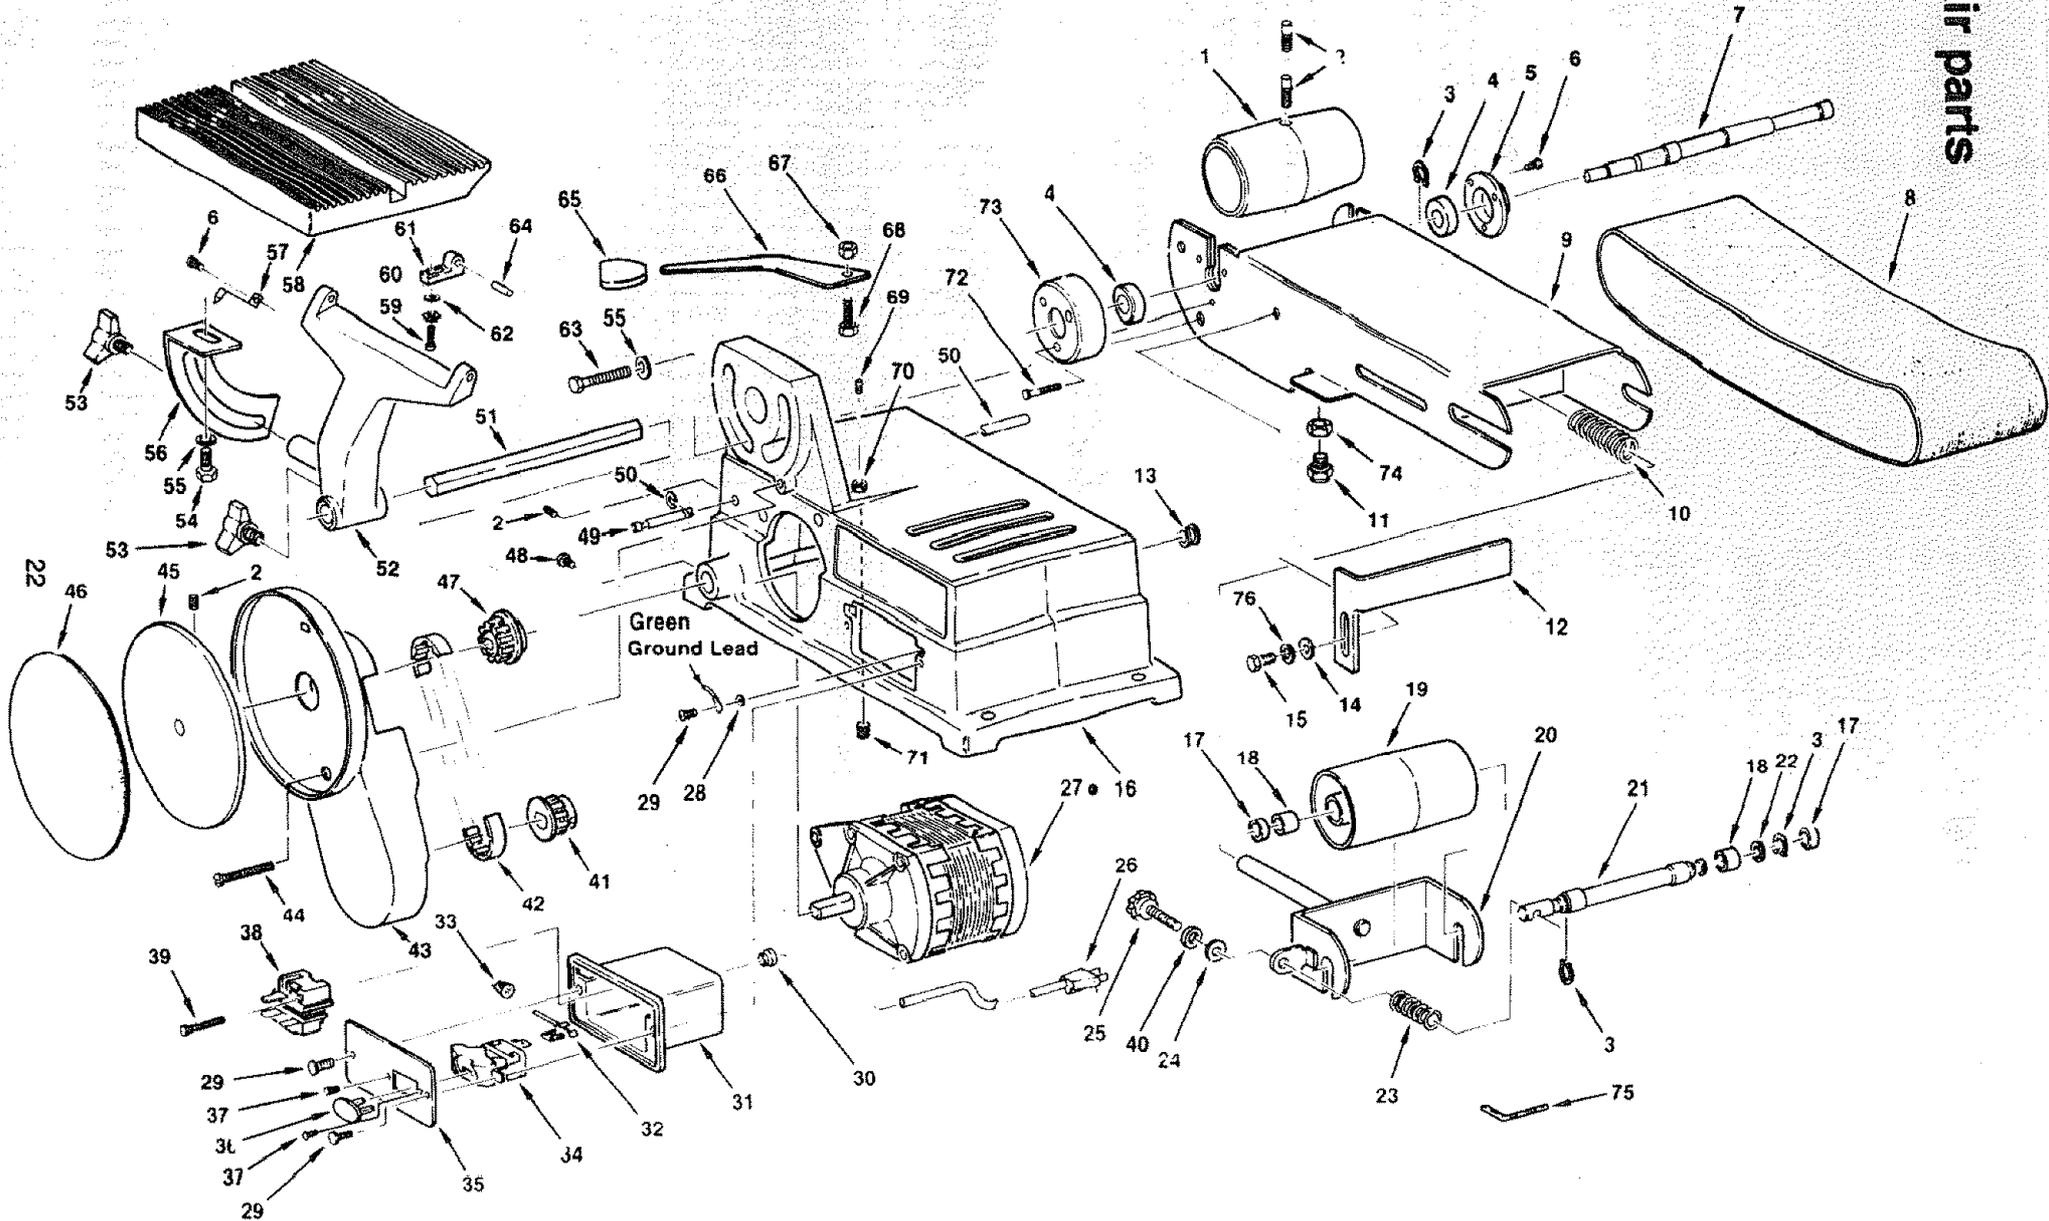

PARTS LIST FOR CRAFTSMAN BELT AND DISC SANDER MODEL NO. 113.226423

Always order by part no. and description — not by key no.

Key No.	Part No.	Description
1	813909	Pulley-Drive
2	STD502502	*Screw-Set, Hex. Cup 1/4-20x1/4
3	805642-6	Ring-Retaining
4	814101	Bearing-Ball
5	813915	Cap-Bearing
6	STD511002	*Screw-Pan Cross 10-24x1/4
7	813920	Shaft-Drive
8	814110	†Belt-Sanding
9	813913	Table, Belt
10	813948	Spring-Belt Tension
11	813921	Screw-Stop
12	813911	Stop-Back
13	814586	Grommet-Rubber
14	STD551025	*Washer 17/64x9/16x1/16
15	STD522505	*Screw-Hex 1/4-20x1/2
16	814045	Base-Belt Sander
17	814111	Sleeve-Rubber
18	813918	Bearing-Sleeve
19	813919	Pulley-Idler
20	813912	Guide-Drum
21	813910	Shaft-Idler
22	814596	Washer, Wave
23	813947	Spring-Tracking
24	STD551025	*Washer 17/64x3/4x1/16
25	814103	Knob-Tracking Adv.
26	814108	Cord w/plug
27	814109	•Motor
28	STD551208	*Lockwasher Ext N8
29	STD510805	*Screw-Pan Cross 8-32x1/2
30	169123-10	Relief-Strain
31	814049	Housing-Switch
32	63837	Lead Asm-Black
33	803709	Connector-Wire
34	62442	Switch-Locking
35	814071	Panel-Switch Trim
36	60256	Key-Switch
37	STD510602	*Screw-Pan Cross 6-32x1/4
38	814589	Relay
39	809169-4	Screw-Pan, HD TY T8-32x1-1/4

Key No.	Part No.	Description
40	814669	Washer, Rubber
41	814105	Pulley-Timing Belt
42	814002-1	Belt-Timing
43	814739	Cover-Pulley
44	STD512515	*Screw-Pan Hd 1/4-20x1-3/4
45	813917	Plate-Sanding
46	814107	†Disc-Sanding
47	814106	Pulley-Timing Belt
48	STD523107	*Screw-Hex 5/16-18x 1
49	814069	Rod-Motor
50	STD581025	*Ring-Retaining 1/4
51	814090	Rod-Table Support
52	814096	Support-Table
53	814091	Knob
54	805466-2	Screw-Hex 5/16-18x9/16
55	STD551031	*Washer 21/64x9/16x1/16
56	814093	Trunnion
57	814089	Pointer
58	814094	Table-Sander
59	814932	Screw-Soc Cap 10-32x1/2
60	STD551210	Lockwasher Ext #10
61	814140	Support-Pivot
62	STD551010	*Washer 13/64x7/16x1/32
63	STD523115	*Screw-Hex 5/16-18x1-1/2
64	814088	Pin-Pivot
65	814362	Knob-Belt Tension
66	813916	Lever-Belt Tension
67	161255-6	Nut-Lock 1/4-20
68	STD522510	*Screw-Hex 1/4-20x1
69	STD502505	*Screw-Set Hex Cup 1/4-20x1
70	STD541025	*Nut-Hex 1/4-20
71	814929	Cap, Rubber
72	STD511007	*Screw-Pan Cross 10-24x3/4
73	813914	Support-Bearing
74	STD541250	*Nut Hex Jam 1/2-13
75	30505	WRENCH HEX "L" 1/8
76	STD551125	Lockwasher 1/4
—	SP5001	Owners Manual (Not Illustrated)
—	507303	Bag of Loose Parts (Not Illustrated)

- Any Attempt To Repair This Motor May Create A Hazard Unless Repair Is Done By A Qualified Service Technician. Repair Service Is Available At Your Nearest Sears Store.
- Standard Hardware Items — May Be Purchased Locally
- † Stock Item - May Be Purchased Through The Hardware Department Of Most Sears Retail Stores Or Catalog Order Houses.

SEARS

*owners
manual*

SERVICE

**MODEL NO.
113.226423**

**HOW TO ORDER
REPAIR PARTS**

BELT AND DISC SANDER

Now that you have purchased your Belt & Disc Sander should a need ever exist for repair parts or service, simply contact any Sears Service Center and most Sears, Roebuck and Co. stores. Be sure to provide all pertinent facts when you call or visit.

The model number of your Belt and Disc Sander will be found on a plate attached to your sander on the back side of the base.

WHEN ORDERING REPAIR PARTS, ALWAYS GIVE THE FOLLOWING INFORMATION:

PART NUMBER	PART DESCRIPTION
MODEL NUMBER 113.226423	NAME OF ITEM Belt And Disc Sander

All parts listed may be ordered from any Sears Service Center and most Sears stores. If the parts you need are not stocked locally, your order will be electronically transmitted to a Sears Repair Parts Distribution Center for handling.

Sold by SEARS, ROEBUCK AND CO., Chicago, IL. 60684 U.S.A.