

SEARS

**OWNERS
MANUAL**

**MODEL NO.
917.254274**



Caution:
Read and Follow
All Safety Rules
And Instructions
Before Operating
This Equipment

CRAFTSMAN

LT 11 HP ELECTRIC START 4 SPEED - 36" MOWER LAWN TRACTOR

- **Assembly**
- **Operation**
- **Maintenance**
- **Repair and Adjustment**
- **Repair Parts**

SAFETY RULES

- 1 Know the controls and how to stop quickly. READ THIS OPERATOR'S MANUAL and instructions furnished with attachments.
- 2 Do not allow children to operate the machine. Do not allow adults to operate it without proper instruction.
- 3 Do not carry passengers. Do not mow when children and others are around.
- 4 Always wear substantial footwear. Do not wear loose fitting clothing that could get caught in moving parts.
- 5 Keep your eyes and mind on your tractor, mower and the area being cut. Do not let other interests distract you.
- 6 Do not attempt to operate your tractor or mower when not in the driver's seat.
- 7 Always get on or off your tractor from the operator's left hand side.
- 8 Clear the work area of objects (wire, rocks, etc.) which might be picked up and thrown.
- 9 Disengage all attachment clutches before attempting to start the engine.
- 10 Disengage power to attachments and stop the engine before leaving the operator's position.
- 11 Disengage power to mower, stop the engine and disconnect spark plug wire(s) from spark plug(s) before cleaning, making an adjustment or repair. Be careful to avoid touching hot muffler or engine components.
- 12 Disengage power to attachments when transporting or not in use.
- 13 Take all possible precautions when leaving the vehicle unattended. Disengage the power-take-off, lower the attachments, shift into neutral, set the parking brake, stop the engine and remove the key.
- 14 Do not stop or start suddenly when going uphill or downhill. Mow up and down the face of slopes (not greater than 15°); never across the face. Refer to page 51.
- 15 Reduce speed on slopes and make turns gradually to prevent tipping or loss of control. Exercise extreme caution when changing direction on slopes.
- 16 While going up or down slopes, place Gear Shift Control Lever in 1st gear position to negotiate the slope without stopping.
- 17 Never mow in wet or slippery grass, when traction is unsure or at a speed which could cause a skid.
- 18 Stay alert for holes in the terrain and other hidden hazards. Keep away from drop-offs.
- 19 Do not drive too close to creeks, ditches and public highways.
- 20 Exercise special care when mowing around fixed objects in order to prevent the blades from striking them. Never deliberately run tractor or mower into or over any foreign objects.
- 21 Never shift gears until tractor comes to a stop.
- 22 Never place hands or feet under the mower, in discharge chute or near any moving parts while tractor or mower are running. Always keep clear of discharge chute.
- 23 Use care when pulling loads or using heavy equipment.
 - a Use only approved drawbar hitch points.
 - b Limit loads to those you can safely control.
 - c Do not turn sharply. Use care when backing.
 - d Use counterweight or wheel weights when suggested in the owner's manual.
- 24 Watch out for traffic when crossing or near roadways.
- 25 When using any attachments, never direct discharge of material toward bystanders nor allow anyone near the vehicle while in operation.
- 26 Handle gasoline with care - it is highly flammable.
 - a Use approved gasoline containers.
 - b Never remove the fuel cap of the fuel tank or add gasoline to a running or hot engine or an engine that has not been allowed to cool for several minutes after running. Never fill tank indoors, always clean up spilled gasoline.
 - c Open doors if the engine is run in the garage - exhaust fumes are dangerous. Do not run the engine indoors.
- 27 Keep the vehicle and attachments in good operating condition, and keep safety devices in place and working.
- 28 Keep all nuts, bolts and screws tight to be sure the equipment is in safe working condition.
- 29 Never store the equipment with gasoline in the tank inside a building where fumes may reach an open flame or spark. Allow the engine to cool before storing in any enclosure.
- 30 To reduce fire hazard, keep the engine free of grass, leaves or excessive grease. Do not clean product while engine is running.
- 31 Except for adjustments; DO NOT operate Engine if air cleaner or cover directly over carburetor air intake is removed. Removal of such part could create a fire hazard.
- 32 Do not operate without a muffler or tamper with exhaust system. Damaged mufflers or spark arresters could create a fire hazard. Inspect periodically and replace if necessary.
- 33 The vehicle and attachments should be stopped and inspected for damage after striking a foreign object and the damage should be repaired before restarting and operating the equipment.
- 34 Do not change the engine governor settings or overspeed the engine; severe damage or injury may result.
- 35 When using the vehicle with mower, proceed as follows:
 - a Mow only in daylight or in good artificial light.
 - b Shut the engine off when unclogging chute.
 - c Check the blade mounting bolts for proper tightness at frequent intervals.
- 36 Do not operate the mower without the deflector shield in place.
- 37 Disengage power to mower before backing up. Do not mow in reverse unless absolutely necessary and then only after careful observation of the entire area behind the mower.
- 38 Under normal usage the grass catcher bag material is subject to deterioration and wear. It should be checked frequently for bag replacement. Replacement bags should be checked to ensure compliance with the original manufacturer's recommendations or specifications.



LOOK FOR THIS SYMBOL TO POINT OUT IMPORTANT SAFETY PRECAUTIONS.
IT MEANS--ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED.

CAUTION: LOOK FOR THIS WORD TO POINT OUT IMPORTANT EQUIPMENT PRECAUTIONS.



THIS UNIT IS EQUIPPED WITH AN INTERNAL COMBUSTION ENGINE AND SHOULD NOT BE USED ON OR NEAR ANY UNIMPROVED FOREST COVERED, BRUSH COVERED, OR GRASS COVERED LAND UNLESS THE ENGINE'S EXHAUST SYSTEM IS EQUIPPED WITH A SPARK ARRESTER MEETING APPLICABLE LOCAL OR STATE LAWS (IF ANY). IF A SPARK ARRESTER IS USED, IT SHOULD BE MAINTAINED IN EFFECTIVE WORKING ORDER BY THE OPERATOR.

In the State of California the above is required by law (Section 4442 of the California Public Resources Code) Other states may have similar laws. Federal laws apply on federal lands. Refer to Repair Parts Section, page 32.

CONGRATULATIONS on your purchase of a Sears Lawn Tractor. It has been designed, engineered and manufactured to give you the best possible dependability and performance. Should you experience any problem you cannot easily remedy, please contact your nearest Sears Service Department. We have competent, well-trained technicians and the proper tools to service or repair this unit.

MAINTENANCE AGREEMENT

A Sears Maintenance Agreement is available on this product. See the nearest Sears store or service center for details.

CUSTOMER RESPONSIBILITIES

Read and retain this manual. Study and observe the safety rules. Always use care when using your tractor. Always keep your tractor and mower clean. Follow a regular schedule in maintaining, caring for, and using your tractor. A well cared for tractor will run better and last longer.

ATTACHMENTS

This unit can use many attachments now available at your Sears store. It cannot use attachments that engage the ground like a plow, harrow, cultivator, or tiller. See page 50 for a list of available attachments.

<p>SERIAL NUMBER _____</p> <p>DATE OF PURCHASE _____</p> <p>THE SERIAL NUMBER WILL BE FOUND ON THE MODEL PLATE UNDER THE SEAT.</p> <p>YOU SHOULD RECORD THESE NUMBERS AND KEEP FOR FUTURE REFERENCE.</p>
--

LIMITED ONE YEAR WARRANTY ON ELECTRIC START RIDING EQUIPMENT

For one year from date of purchase, when this riding equipment is maintained, lubricated, and tuned up according to the operating and maintenance instruction in the owner's manual, Sears will repair free of charge any defect in material or workmanship in this electric start riding equipment.

This warranty excludes blade(s), blade adapter(s), spark plug(s), air cleaner and belt(s), which are expendable and become worn during normal use.

This warranty does not cover:

- Tire replacement or repair caused by punctures from outside objects (such as nails, thorns, stumps, or glass); and
- repairs necessary because of operator abuse or negligence, including the failure to maintain the equipment according to instructions contained in the owner's manual; and
- riding equipment used for commercial or rental purposes.

FULL 90-DAY WARRANTY ON BATTERY

For 90 days from the date of purchase, if any battery included with this riding equipment proves defective in material or workmanship and our testing determines the battery will not hold a charge, Sears will replace the battery at no charge.

WARRANTY SERVICE IS AVAILABLE BY CONTACTING THE NEAREST SEARS SERVICE CENTER/DEPARTMENT IN THE UNITED STATES. This warranty applies only while this product is in use in the United States.

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

SEARS, ROEBUCK and CO., D/698-731A, Sears Tower, Chicago, Il 60684

INDEX

A		F				
Adjustments:		Filter	16	Stopping Your Tractor	10	
Brake	14	Fuel:		Tractor Operation on Hills	12	
Carburetor	18	Type	10	Options		
Mower Drive Belt	22	Storage	23	Attachments	50	
Mower		Fuse	20	Spark Arrester	2	
Front-to-Rear	22	H				
Side-to-Side	22	Hood Removal	20	P		
Throttle Control Cable	18	L			Parking Brake	14
Air Filter		Levelling Mower Deck	22	Parts Bag	5-6	
Cleaning	16	Lubrication:		R		
Element	16	Chart	24	Repair and Adjustments	14-24	
Air Intake Screen, Eng.	16	Tractor Pivot Points	17	Blade	14	
Assembly	5-8	M			Carburetor	18
Attachments	50	Maintenance	13	Fuse	20	
B		Air Filter	16	Hood Removal	20	
Battery:		Air Filter Element	16	Motion Drive Belt		
Charging	7	Air Screen	16	Replacement	19	
Cleaning	15	Battery	15	Mower Drive Belt		
Installation	8	Blade Sharpening	14	Replacement	21	
Levels	15	Brake Adjustment	14	Mower Adjustment		
Preparation	7	Engine Oil	16	Side-to-Side	22	
Starting with Weak Battery	17	Lubrication Chart	24	Mower Removal	20	
Storage	23	Spark Plugs	18	S		
Terminals	15	Tire Care	14	Safety Rules	2	
Belt:		Mower:			Seat	7
Motion Drive Replacement	19	Adjustment, Front-to-Rear	23	Service Record	13	
Mower Drive Adjustment	22	Adjustment, Side-to-Side	22	Slope Guide Sheet	51	
Mower Drive,		Blade Sharpening	14	Spark Plugs	18	
Remove Replace	21	Blade Replacement	14	Speed Control Chart	12	
Blade:		Cutting Level	12	Starting the Engine	10	
Sharpening	14	Installation	21	Steering Wheel	5	
Replacement	14	Operation	11	Stopping the Tractor	10	
Brake Adjustment	14	Removal	20	Storage	23	
C		Muffler	17	T		
Carburetor Adjustment	18	Spark Arrester	2	Throttle Control Cable		
Controls, Tractor	9	O			Adjustment	18
Cutting Level, Mower	12	Oil		Tires	14	
E		Cold Weather Conditions	16	Trouble Shooting Chart	25-26	
Engine:		Engine	16	W		
Air Screen	16	Storage	23	Warranty	3	
Oil Change	16	Operation	9-12	Wiring (Schematic)	27	
Oil Level	16	Operating Your Mower	11			
Oil Type	16	Operating Your Tractor	11			
Starting	10	Starting the Engine	11			
Storage	23					

ASSEMBLY


1. Unpack Tractor

- Take items out of box. The box contains the items shown below.
- Cut down four corners of the carton with a utility knife and fold down sides.
- Disengage Parking Brake.
- Install Steering Wheel

- Slide upper steering shaft over lower steering shaft until bolt holes line up with slots in lower steering shaft (Fig. 1).
- Use two hex bolts 3/8 - 16 x 1-1/4 and two locknuts 3/8 - 16 to retain upper steering shaft to lower steering shaft. Tighten securely.
- Position Steering Sleeve over steering shaft assembly.
- For easier assembly, tilt tube towards front of tractor.
- Place bottom of Steering Sleeve over two front prongs on steering bushing.
- Squeeze the two steering sleeve retainers inward to allow Steering Sleeve to pass over retainers.
- Push Steering Sleeve down aligning notch on Steering Sleeve with tab on steering bushing.

- Place steering wheel adapter on upper steering shaft.
 - With front wheels pointed straight ahead, place steering wheel on steering wheel adapter. Bars of steering wheel should point straight across tractor.
 - Place 2 - 1/4" diameter washer on upper steering shaft and install a 1/2" locknut (washer and locknut found in bag of parts). Tighten securely.
 - Snap insert into steering wheel.
- Remove plastic on tractor hood.
 - Raise attachment lift handle.
 - Roll Tractor off skid. Be careful of staples in skid.


The operation of any tractor can result in foreign objects thrown into the eyes, which can result in severe eye damage. Always wear safety glasses or eye shields before starting your tractor and while moving. We recommend Wide Vision Safety Mask for over the spectacles or standard safety glasses, available at Sears Retail or Catalog Stores.

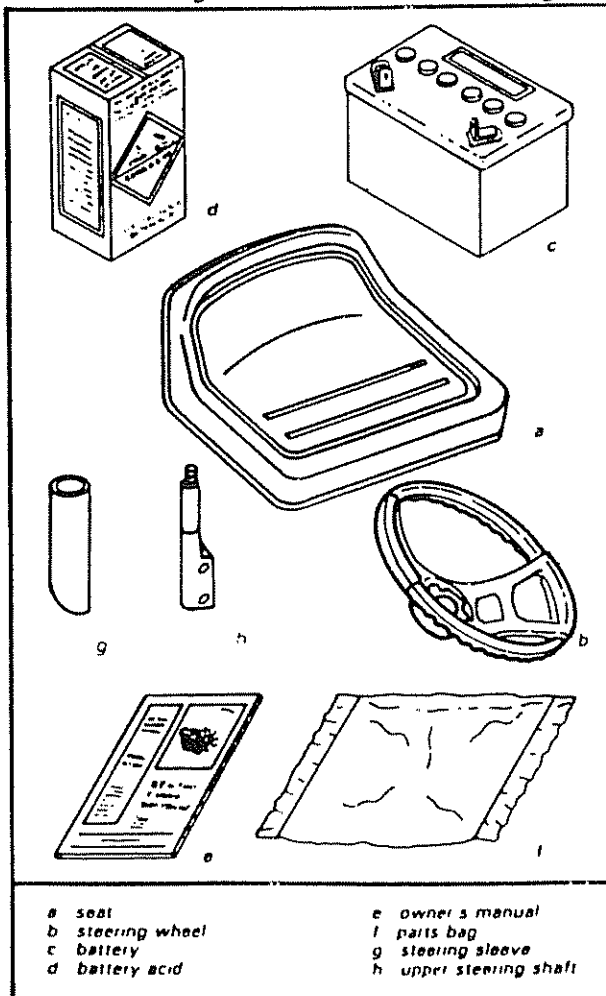

Parts Bag Contents Not Shown Full Size



(2) Battery Carriage Bolts - 1/4 - 20 x 7 - 1/2

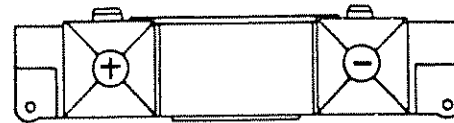


Terminal Guard




15° Slope Instruction Sheet




(2) Keys



Steering Wheel Adapter

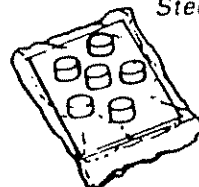


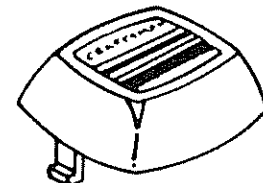


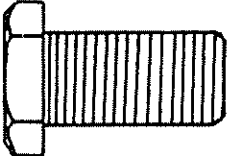
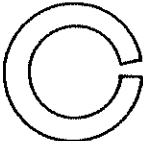
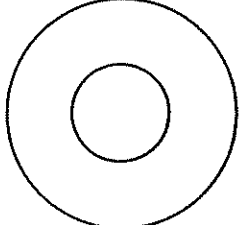
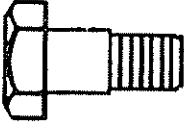
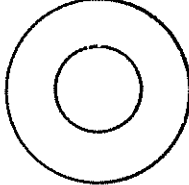






Battery Caps
And Instructions

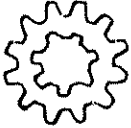

Steering Wheel Insert

ASSEMBLY

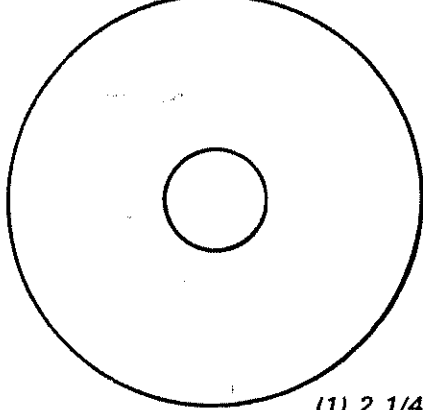ASSEMBLY LOCATION	PARTS BAG CONTENTS SHOWN FULL SIZE
<p>BATTERY</p>	<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  <p>(2) Lockwasher, 1/4 Int/Ext Tooth</p> </div> <div style="text-align: center;">  <p>(2) Wing Nut - 1/4 - 20</p> </div> </div>
<p>BATTERY TERMINALS</p>	<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  <p>(2) Hex Bolt, 1/4 - 20 x 3/4</p> </div> <div style="text-align: center;">  <p>(2) Lockwasher 1/4</p> </div> </div> <div style="display: flex; justify-content: space-around; align-items: center; margin-top: 10px;"> <div style="text-align: center;">  <p>(2) Washer 9/32 x 5/8 x 16 Ga.</p> </div> <div style="text-align: center;">  <p>(2) Hex Nut, 1/4 - 20</p> </div> </div>
<p>SEAT</p>	<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  <p>(1) Hex Bolt, 1/2 - 13 x 1 Grade 5</p> </div> <div style="text-align: center;">  <p>(1) Lockwasher 1/2</p> </div> <div style="text-align: center;">  <p>(1) Washer 17/32 x 1-3/16 x 12 Ga.</p> </div> </div> <div style="display: flex; justify-content: space-around; align-items: center; margin-top: 10px;"> <div style="text-align: center;">  <p>(1) Shoulder Bolt 5/16 - 18</p> </div> <div style="text-align: center;">  <p>(1) Washer 15/32 x 1 x 16 Ga.</p> </div> </div>
<p>UPPER STEERING SHAFT</p>	<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  <p>(2) Hex Bolt 3/8 - 16 x 1 - 1/4</p> </div> <div style="text-align: center;">  <p>(2) Hex Locknut 3/8 - 16</p> </div> </div>
<p>STEERING WHEEL</p>	<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  <p>(1) 2 1/4" Dia. Washer</p> </div> <div style="text-align: center;">  <p>(1) Locknut, 1/2-20</p> </div> </div>

To assemble tractor you will need.

- | | |
|--------------------|---------------------|
| (2) 7/16" Wrenches | Tire Pressure Gauge |
| (1) 1/2" Wrench | Screwdriver |
| (2) 9/16" wrenches | Utility Knife |
| (1) 3/4" wrench | |

NOTE: RIGHT HAND (R.H.) AND LEFT HAND (L.H.) ARE DETERMINED FROM OPERATOR'S POSITION WHILE SEATED ON THE TRACTOR

WEAR EYE AND FACE SHIELD.

WASH HANDS OR CLOTHING IMMEDIATELY IF ACCIDENTALLY IN CONTACT WITH BATTERY ACID.



DO NOT SMOKE; FUMES FROM CHARGED BATTERY ACID ARE EXPLOSIVE

READ THE INSTRUCTIONS INCLUDED WITH THE BATTERY VENT CAPS IN THE BAG OF PARTS. ALWAYS WEAR GLOVES, CLOTHING AND GOGGLES TO PROTECT YOUR HANDS, SKIN AND EYES.

2. Prepare Battery

Fill and charge battery (before installing). NOTE: SEE DETAILED INSTRUCTIONS PACKAGED WITH BATTERY VENT CAPS FOUND IN BAG OF PARTS.

- Fill each cell with battery acid. Add the acid until it reaches the bottom of the vent tubes (Fig. 3) Do not add the acid beyond this level or the additional acid can come out when the battery is charged.
- After cells are filled, tilt battery from side to side to release air bubbles.
- Allow battery to stand and settle for at least thirty minutes. If the level of acid falls below the point described in step (a), add more acid until the correct level is reached. Install the battery caps, found in the bag of parts, to cover the vent tubes. Wash the top of the battery with water to remove any acid, then wipe dry.
- Check battery case for leakage to make sure that no damage has occurred in handling.
- Neutralize excess battery acid for disposal by adding it to four inches of water in a five gallon plastic container. Stir with a wooden or plastic paddle while adding baking soda until the addition of more soda causes no more foaming.
- Use a 12 volt battery charger. Charge battery at a rate of 6 amperes for 1 hour. NOTE: OBSERVE SAFETY PRECAUTIONS, LISTED IN BOX ABOVE, REQUIRED FOR BATTERY CHARGING. Check the acid level after the battery is charged. If the acid has fallen below the correct level, add distilled or iron free water.

ASSEMBLY

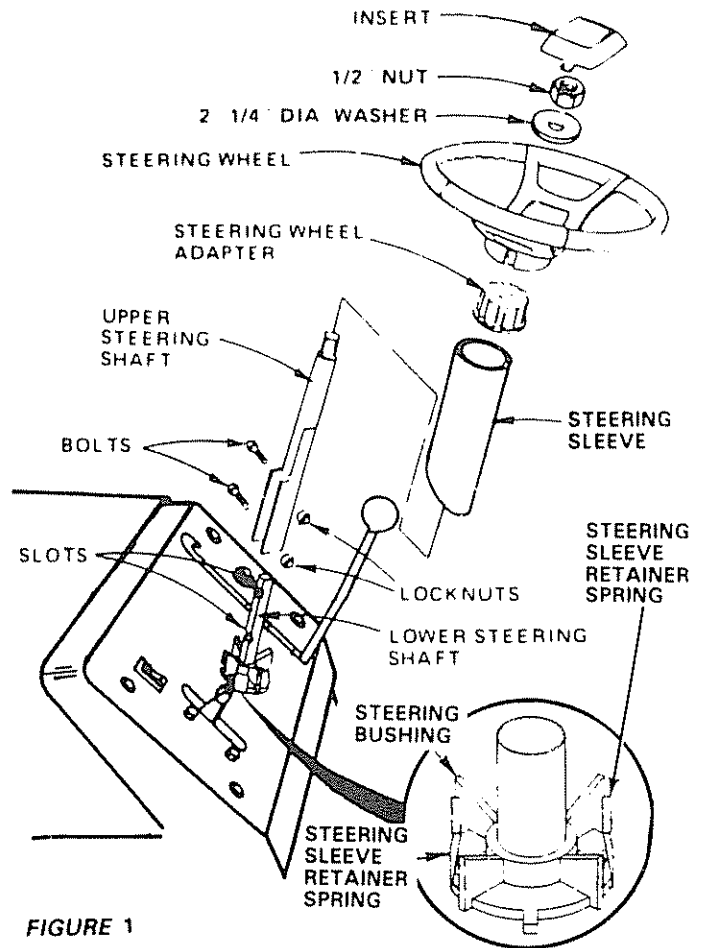


FIGURE 1

3. Install Seat.

Seat position should be adjusted forward or backward so that the operator can comfortably reach Clutch/Brake Pedal and safely operate tractor.

- Place seat on seat pan. Screw hex head machine screw, lockwasher and flat washer into seat (Fig. 2). Screw shoulder bolt and flat washer into seat (Fig. 2). Machine screw, shoulder bolt and flat washers found in bag of parts (shown full size on page 6).
- Tighten shoulder bolt and flat washer using a 1/2" wrench.
- Tighten machine screw, lockwasher and flat washer using a 1/2" wrench.
- Place seat in operating position. Sit on the seat and press clutch/brake pedal all the way down. If operating position is not comfortable, adjust seat.
- To adjust: Raise seat. Loosen machine screw. Slide seat to desired position. Tighten machine screw securely.



MACHINE SCREW-LOCKWASHER-FLAT WASHER MUST BE TIGHTENED SECURELY TO PREVENT MOVEMENT OF SEAT.

ASSEMBLY

4. Check Tires

Check the air pressure in the tires. Tires with too much air pressure will cause the unit to ride rough. The wrong air pressure will also keep the mower from cutting level. The correct air pressure is shown on the side of the tires. If the air pressure is not shown, set to pressures shown in the REPAIR AND ADJUSTMENT section (page 14).

5. Install Battery



BEFORE INSTALLING BATTERY, REMOVE METAL BRACELETS, WRISTWATCH BANDS, RINGS, ETC. FROM YOUR PERSON. TOUCHING THESE ITEMS TO BATTERY TERMINALS COULD RESULT IN BURNS.

- Lift seat (Fig. 2).
- Lower battery into fender well with battery terminals toward front of tractor (Fig. 4). Make sure battery rests in battery tray (Fig. 4).

NOTE: BE SURE BATTERY DRAIN TUBE IS SECURELY ATTACHED TO BATTERY TRAY DRAIN.



POSITIVE TERMINAL MUST BE CONNECTED FIRST TO PREVENT SPARKS FROM ACCIDENTAL GROUNDING.

- Connect **RED** battery cable to positive (+) battery terminal with hex bolt, flat washer, lockwasher and hex nut (shown full size on pg. 6) found in bag of parts. Tighten securely with two 7/16" wrenches. (Fig. 4)
- Connect **BLACK** ground cable to negative (-) battery terminal with remaining hex bolt, flat washer, lockwasher and hex nut (shown full size on pg. 6) found in bag of parts. Tighten securely. (Fig. 4)
- To prevent corrosion, apply grease to the battery terminals after installing cables.
- Using the key hole on one side of the battery support (Fig. 5) slide battery bolt into frame key hole (head of bolt down). Fasten the battery bolt to the terminal guard using internal/external lockwasher, wing nut, (shown full size on pg. 6) as shown in Fig. 5.
- Assemble the remaining battery bolt to other side of battery support and fasten terminal guard to it with remaining internal/external lockwasher and wing nut, (Shown full size on pg. 6). Tighten wing nuts securely by hand (Fig. 5).

NOTE: KEEP TERMINAL ACCESS DOORS CLOSED WHEN NOT IN USE.

CAUTION: DO NOT START ENGINE UNTIL YOU HAVE REVIEWED THE OPERATION SECTION OF THIS MANUAL.

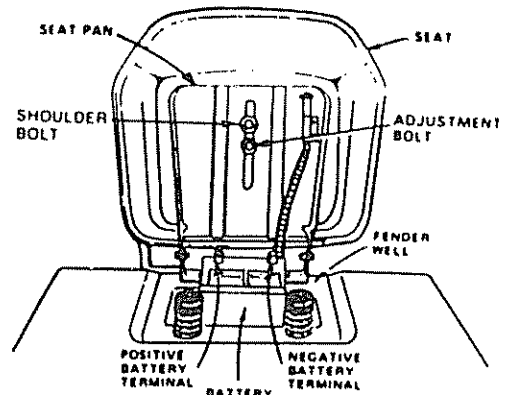


FIGURE 2

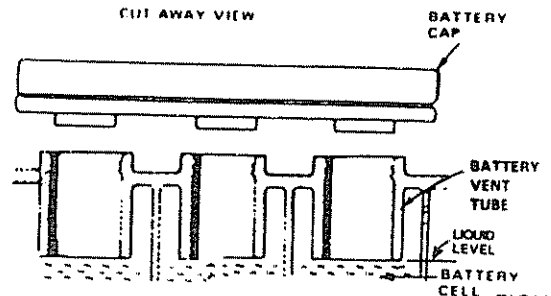


FIGURE 3

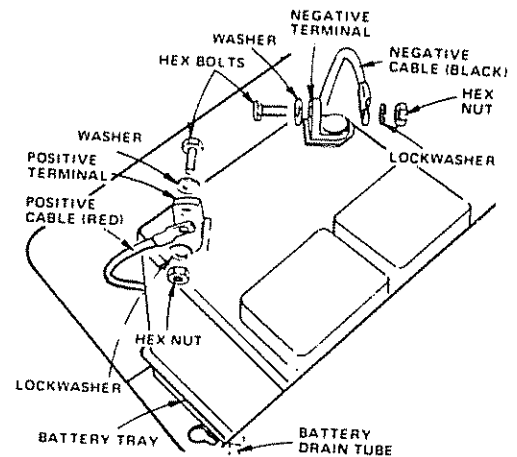


FIGURE 4

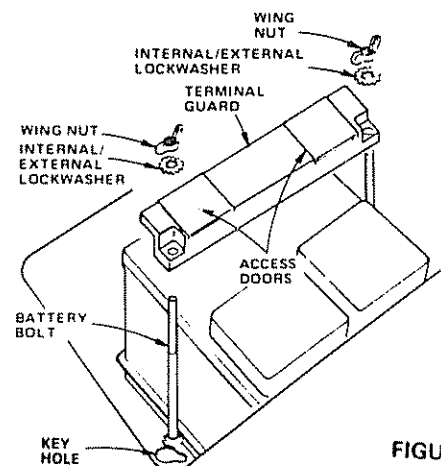


FIGURE 5


6. Maintenance After First 2 Hours (Two Mowings)

Changing oil after the first two hours (or two mowings) will help eliminate break-in residue which might be damaging to your engine.

OPERATION

KNOW YOUR TRACTOR

READ THIS OWNER'S MANUAL BEFORE OPERATING YOUR YARD TRACTOR If you understand the machine and its operation, you will achieve efficient and peak performance. While reading the manual, compare the illustrations with your Yard Tractor to familiarize yourself with the location of various controls and adjustments. Study the operating instructions and safety precautions thoroughly to insure proper functioning of your Yard Tractor and to prevent injury to yourself and others. Be sure to pay strict attention to all notes and cautions. They are included for your safety. Save this manual for future reference.

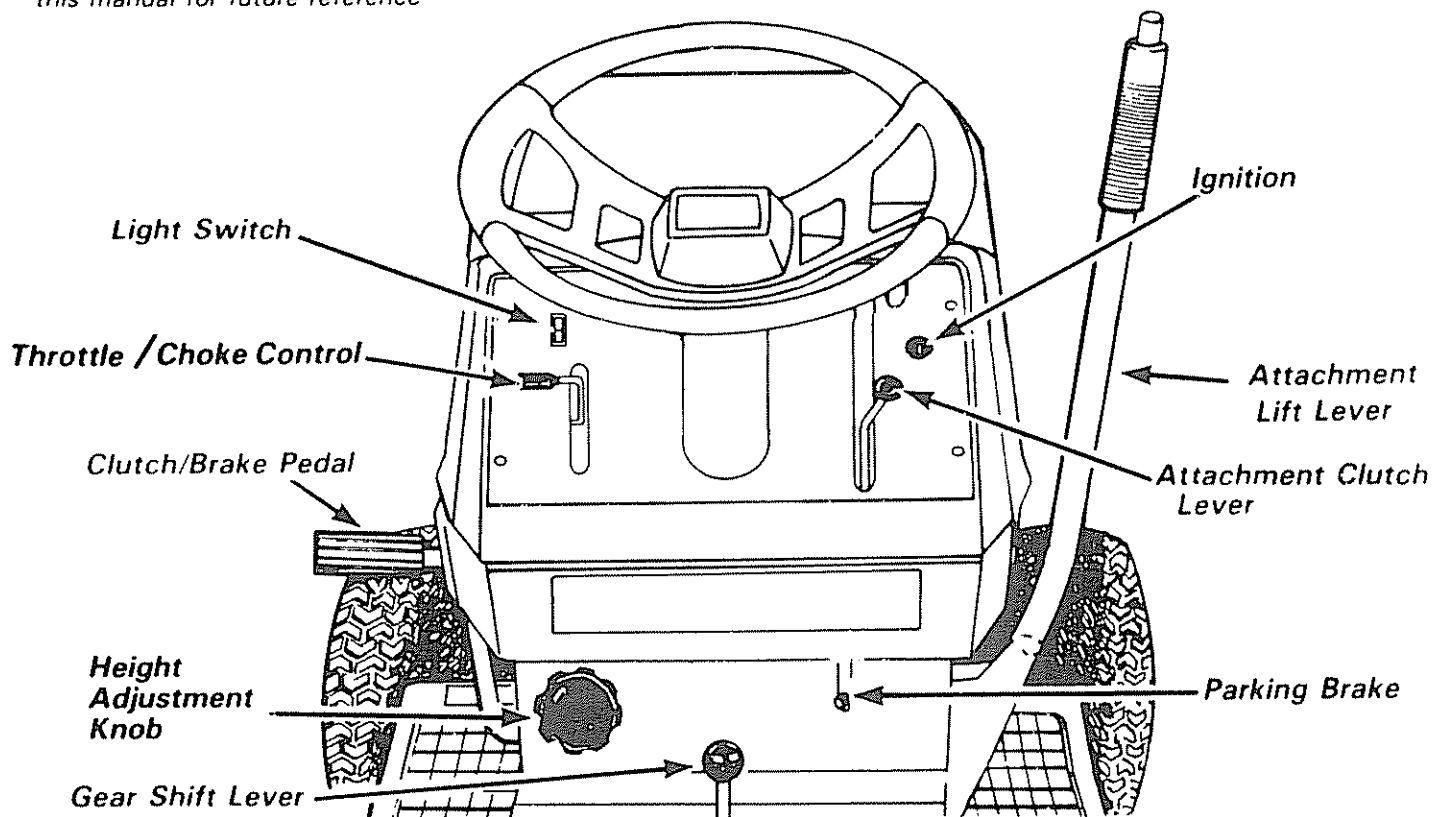

ATTACHMENT CLUTCH LEVER: Push lever up to engage attachment. There will be an engine hesitation as the clutch engages.

ATTACHMENT LIFT LEVER: Use the attachment lift lever to raise and lower the attachment mounted to your tractor. Pull lever back slightly and push button, then move the lift lever forward to lower attachment.

CLUTCH/BRAKE PEDAL: The pedal has 2 functions; a clutch and a brake. To engage the brake push the pedal completely down.

ATTACHMENT HEIGHT ADJUSTMENT KNOB: Use the height adjustment knob to adjust the mower height. With the attachment lift lever in the "up" position, turn knob clockwise (↻) to raise cutting height and counterclockwise (↻) to lower cutting height.

GEARSHIFT: Press the clutch/brake pedal down firmly and move gear shift lever to desired speed.

IGNITION: Place key in ignition and turn to the right to start. The switch spring returns from the start position.

LIGHT SWITCH: Turns the headlights on and off.

PARKING BRAKE: To set the parking brake, push the clutch/brake pedal completely down. Hold the parking brake lever in "Engaged" position and release pressure from pedal. Clutch/brake pedal will remain in brake position.

THROTTLE/CHOKE CONTROL: Use the throttle control to increase or decrease the speed of the engine, and to choke the engine for starting. Push lever to the right and forward to choke.

OPERATION

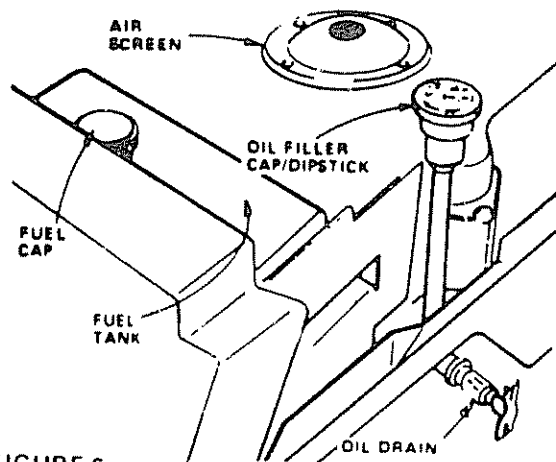


FIGURE 6

1. Stopping Your Tractor

NOTE: REMOVE KEY WHEN LEAVING TRACTOR TO PREVENT UNAUTHORIZED USE.

- Push clutch-brake pedal into full "BRAKE" position. Keep your foot on pedal.
- Place attachment clutch lever in "DISENGAGED" Position.
- Move gear shift lever to "NEUTRAL" position.
- Place parking brake in "ENGAGED" position and release pressure from clutch/brake. Pedal should remain in "BRAKE" position.
- Move throttle control to "S" (slow) position.
- Turn ignition key to "OFF" position. Never use choke to stop engine.

2. Preparing The Engine



LEARN TO START, STOP AND REVERSE YOUR TRACTOR IN A LARGE, OPEN AREA.

- This engine has been shipped filled with summer weight oil (For cold weather operation see chart page 16). Check engine oil level. Refer to REPAIR AND ADJUSTMENT section (page 16).
- Fill fuel tank (Fig. 6). Use fresh, clean, regular unleaded gasoline. Capacity is 5 quarts.



FILL TO BOTTOM OF GAS TANK FILLER NECK. DO NOT OVERFILL. WIPE OFF ANY SPILLED OIL OR FUEL. DO NOT STORE, SPILL OR USE GASOLINE NEAR AN OPEN FLAME.

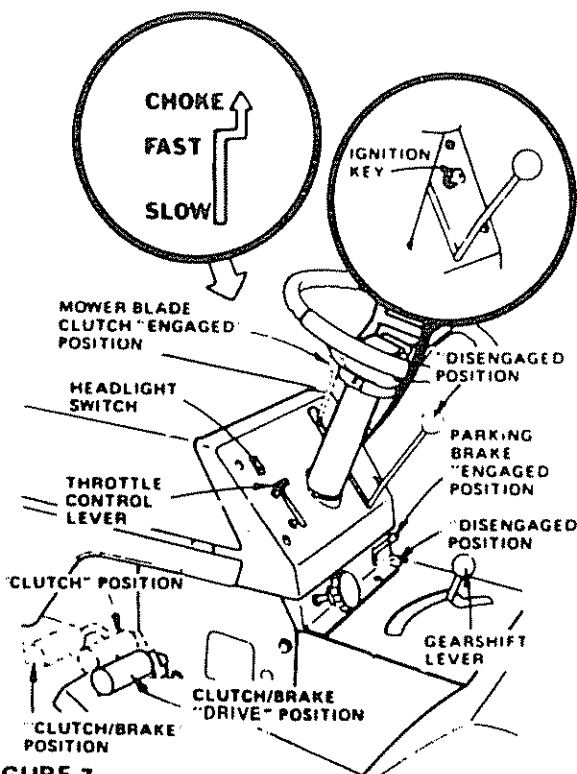


FIGURE 7

CAUTION: EXPERIENCE INDICATES THAT ALCOHOL BLENDED FUELS (CALLED GASOHOL OR USING ETHANOL OR METHANOL.) CAN ATTRACT MOISTURE WHICH LEADS TO SEPARATION AND FORMATION OF ACIDS DURING STORAGE. ACIDIC GAS CAN DAMAGE THE FUEL SYSTEM OF AN ENGINE WHILE IN STORAGE.

TO AVOID ENGINE PROBLEMS, THE FUEL SYSTEM SHOULD BE EMPTIED BEFORE STORAGE FOR 30 DAYS OR LONGER. DRAIN THE GAS TANK, START THE ENGINE AND LET IT RUN UNTIL THE FUEL LINES AND CARBURETOR ARE EMPTY. USE FRESH FUEL NEXT SEASON. SEE STORAGE INSTRUCTIONS FOR ADDITIONAL INFORMATION.

NEVER USE ENGINE OR CARBURETOR CLEANER PRODUCTS IN THE FUEL TANK OR PERMANENT DAMAGE MAY OCCUR.

3. Starting The Engine

- a. Move throttle control lever (Fig. 7) past "FAST" to the "CHOKE" position.
- b. Turn ignition key to "START" and release key as soon as engine starts.

CAUTION: DO NOT RUN STARTER CONTINUOUSLY FOR MORE THAN FIFTEEN SECONDS PER MINUTE.

- c. If engine does not start after four or five tries, move throttle control lever to "FAST" position, wait a few minutes and try again. If the engine does not start after four or five more tries, see the TROUBLESHOOTING Chart (page 25).
- d. After the engine starts move throttle control lever slowly to the "SLOW" position.
- e. To start a hot engine move the throttle control lever to a position between "FAST" and "SLOW".



READ THE "SAFETY RULES" CAREFULLY BEFORE OPERATING YOUR MOWER.

CAUTION: DO NOT ADD ADDITIONAL WEIGHT TO THE TRACTOR OTHER THAN THE OPTIONAL WHEEL WEIGHTS. EXCESSIVE WEIGHT MAY OVERLOAD AND DAMAGE THE TRANSMISSION.



ALWAYS WEAR SUBSTANTIAL FOOTWEAR AND AVOID LOOSE FITTING CLOTHING THAT COULD GET CAUGHT IN MOVING PARTS.



CAUTION TO AVOID INJURY

1. Read owner's manual
2. Know location and function of all controls
3. Keep guards, safety shield and switches in place and working.
4. Remove objects that can be thrown by blades.
5. Do not mow when children and others are around
6. Never carry children or passengers
7. Always look behind machine before backing
8. Do not mow where machine can tip or slip
9. If machine stops going uphill, stop blades and back slowly down.
10. Be sure blades and engine have stopped before placing hands or feet near the blades.
11. Remove key when leaving machine



MAKE SURE PARKING BRAKE WILL HOLD TRACTOR SECURE.

NEVER PLACE YOUR HANDS OR FEET IN OR UNDER ANY POWERED ATTACHMENT OR NEAR ANY MOVING PART WHILE TRACTOR OR ANY POWERED ATTACHMENT IS RUNNING.

OPERATION

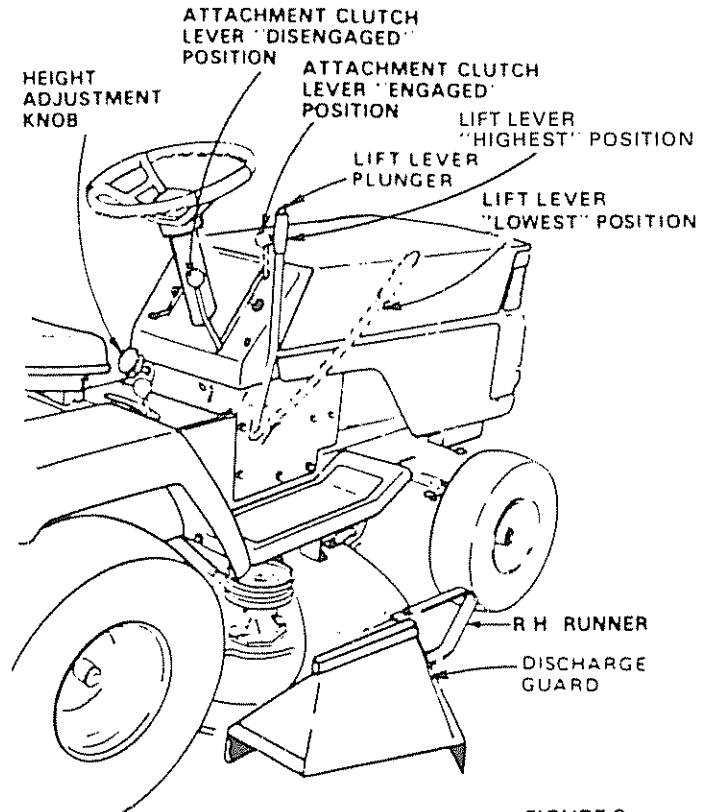


FIGURE 8

4. Operating Your Lawn Tractor & Mower



DO NOT OPERATE THE MOWER WITHOUT THE DEFLECTOR SHIELD (DISCHARGE GUARD) IN PLACE.

NOTE: THIS TRACTOR IS EQUIPPED WITH AN OPERATOR PRESENCE SENSING SWITCH ANY ATTEMPT BY THE OPERATOR TO LEAVE THE SEAT WITH THE ENGINE RUNNING AND THE ATTACHMENT CLUTCH LEVER ENGAGED WILL SHUT OFF THE ENGINE

- a. Move the attachment lift lever to the high position and adjust height of cut to mid range. See Fig 8.
- b. Start the engine. (See Starting the Engine)
- c. Move the throttle lever to mid range position. Select a low (1st or 2nd) gear until you become more familiar with the operation of the unit.
- d. Slowly release clutch brake pedal and proceed to the mowing area.
- e. Stop the unit. then select a mowing speed (See Speed Selection Guide. page 12)
- f. Move throttle lever to half throttle and slowly move attachment clutch lever to engaged position. Fig. 8

OPERATION

- g. Slowly release clutch brake pedal.
- h. Move throttle lever to fast position.
- i. Observe height of cut and readjust as desired.

CAUTION: BEFORE YOU MOVE THE GEAR SHIFT LEVER, COME TO A COMPLETE STOP. FAILURE TO DO SO CAN RESULT IN GEAR BOX DAMAGE.

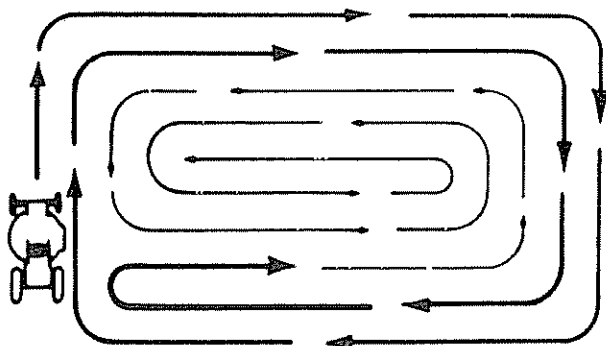




FIGURE 9

SPEED SELECTION GUIDE		
FUNCTION	GEARSHIFT	THROTTLE
Normal Mowing	2 or 3	
Heavy Mowing	1 or 2	
Snow Blowing	1	FAST
Snow Blade	2	
Transport	4-6	
		SLOW - FAST

5. Mowing Tips

NOTE: TIRE CHAINS CANNOT BE USED WITH THE MOWER ATTACHED.

- a. Mower should be adjusted properly front to back and side to side for good mowing performance. Refer to REPAIR AND ADJUSTMENT section (page 22).
- b. Use the runner on the R.H. side as a guide; the blade cuts approximately an inch outside the runner (Fig. 8).
- c. Drive so that clippings are discharged onto the area that has been cut. Have the cut area to the right of the machine. This will result in a more even distribution of clippings and more uniform cutting.
- d. When mowing large areas (Fig. 9), start by turning to the right so that the clippings will discharge away from shrubs, fences, driveways, etc. After two or three rounds, mow in the opposite direction making left hand turns until finished.
- e. If grass is extremely tall, it should be mowed twice. The first time cut relatively high; the second time to the desired height.
- f. The left hand side of mower should be used for trimming.
- g. See Speed Selection Chart.

6. Operating The Tractor On Hills



DO NOT DRIVE UP OR DOWN HILLS WITH SLOPES GREATER THAN 15° AND DO NOT DRIVE ACROSS ANY SLOPE. REFER TO PAGE 51.

- a. Move gear shift lever to "1st" gear before starting up or down hills.
- b. AVOID STOPPING OR SHIFTING ON HILLS.
- c. If slowing is necessary, move throttle control lever to slower position.



LEAVE ENOUGH ROOM WHEN STOPPING AND STARTING TO ALLOW SLIGHT TRACTOR ROLL DOWNHILL AS CLUTCH-BRAKE PEDAL MOVES THROUGH CLUTCH POSITION.

- d. If stopping is absolutely necessary, push clutch/ brake pedal quickly to brake position.
- e. To restart tractor movement, make sure tractor is in the lowest speed range ("1st" Gear) and release clutch-brake pedal SLOWLY.
- f. Make all turns gradually.

MAINTENANCE

To keep your tractor running better, longer, perform necessary service using the following maintenance schedule:

With Every Mowing

1. Make sure all nuts on bolts are tight and cotter pins and retainer springs are secure.
2. Observe all safety precautions.
3. Keep tractor well lubricated (refer to page 24)



BEFORE MAKING ANY INSPECTION, ADJUSTMENT, OR REPAIR:

1. PUSH CLUTCH/BRAKE PEDAL COMPLETELY DOWN.
2. MOVE GEAR SHIFT CONTROL LEVER TO NEUTRAL POSITION.
3. PLACE PARKING BRAKE IN "ENGAGED" POSITION. REMOVE FOOT FROM PEDAL.
4. DISENGAGE ATTACHMENT CLUTCH LEVER.
5. SHUT OFF THE ENGINE.
6. MAKE ABSOLUTELY SURE THE BLADES AND ALL MOVING PARTS HAVE COMPLETELY STOPPED.
7. DISCONNECT THE SPARK PLUG WIRE FROM THE SPARK PLUG AND KEEP WIRE AWAY FROM THE SPARK PLUG TO PREVENT INJURY FROM ACCIDENTAL STARTING. BE CAREFUL TO AVOID TOUCHING HOT ENGINE OR MUFFLER COMPONENTS.

SERVICE RECORD

(Enter Date Maintenance Performed)

SERVICE RECORD	SCHEDULE							
	FIRST 2 HOURS	EVERY 5 HOURS	EVERY 25 HOURS	EVERY 50 HOURS	EVERY 100 HOURS			
Fill in dates as you complete regular service								
Blades - sharpen			✓					
Brake Adjustment			✓					
Check Battery				✓				
Change Engine Oil	✓			✓				
Check Engine Oil level		✓						
Clean Air Cleaner Element				✓				
Check Muffler				✓				
Clean Air Screen				✓				
Clean Front Grill				✓				
Lubricate Tractor				✓				
Replace Spark Plug					✓			
Replace Air Cleaner Element					✓			
Check Tire Pressure			✓					

REPAIR AND ADJUSTMENT

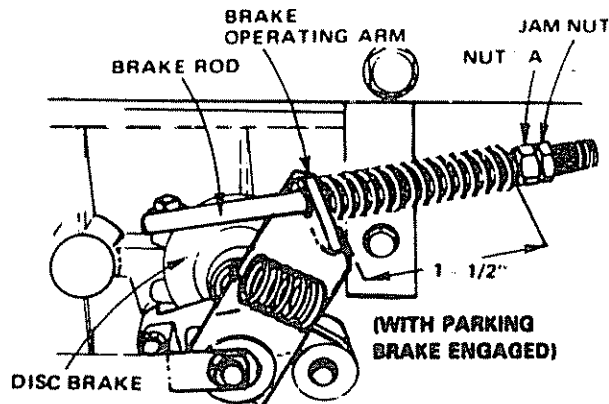


FIGURE 10


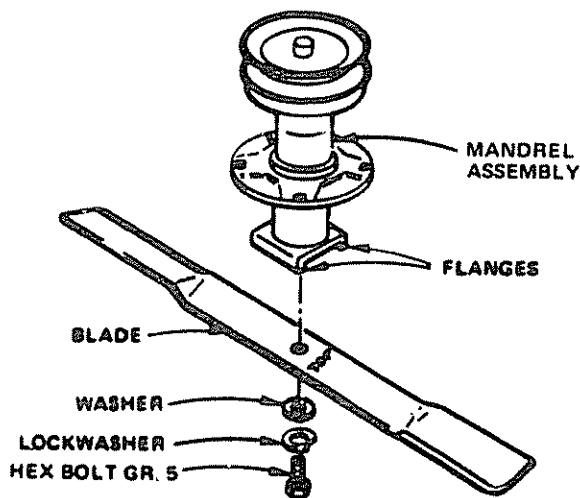


FIGURE 11

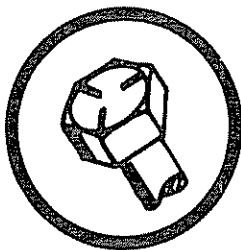

A GRADE 5 HEAT TREATED BOLT CAN BE IDENTIFIED BY THREE LINES ON THE BOLT HEAD AS SHOWN AT LEFT.

1. Brake Adjustment

This tractor is equipped with an adjustable brake system mounted on the right side of the transaxle (Fig. 10).



IF TRACTOR REQUIRES MORE THAN SIX FEET STOPPING DISTANCE IN HIGHEST GEAR, THEN BRAKE MUST BE ADJUSTED.

- Depress clutch/brake pedal and engage parking brake.
- Measure distance between brake operating arm and nut "A" on brake rod.
- If distance is other than 1-1/2", disengage parking brake, loosen jam nut (Fig. 10) and turn nut "A" until distance becomes 1-1/2", Retighten jam nut against Nut "A".

Road test tractor for proper stopping distance as stated above. Readjust if necessary.

2. Tire Care

Maintain tire pressure in front at 14 PSI and rear tires at 12 PSI.

3. Blade Care

For best results mower blades must be kept sharp. The blades can be sharpened with a few strokes of a file, or on a grinding wheel. We suggest they be sharpened after every 25 hours of mowing. Do not attempt to sharpen while on mower. If you mow in sandy soil check the blades after each two mowings. The sand wears the blade away rapidly.

a. Blade Replacement

Raise mower to highest position to permit access to blades.

- Remove the hex head bolt, lockwasher and flat washer (Fig. 11) (turn counterclockwise) (↺).
- Remove and discard old blade.
- Clean top and bottom of mower housing.
- Install new blade with SHARP EDGE DOWN and secure with flat washer, lockwasher and hex head bolt. **TIGHTEN SECURELY.**



ALWAYS USE GRADE 5 HEAT TREATED BOLTS TO ATTACH BLADES. DO NOT USE PLATED BOLTS. CHECK BOLTS IN BLADES OCCASIONALLY TO MAKE SURE BOLTS ARE TIGHT. TORQUE BOLTS TO 30 - 35 FT.-LBS.

- When grinding, care should be taken to maintain blade balance and the blade should be checked for proper balance before reinstallation on mower. An unbalanced or bent blade will cause excessive vibration when running, and eventual damage to mower or engine. **Replace bent or damaged blades.**

REPAIR AND ADJUSTMENT

- c. To check blade balance, drive a nail into a beam or wall. Leave about one inch of the straight nail exposed. Place center hole of clean blade over the head of the nail (Fig. 12). NOTE: CENTER HOLE OF BLADE ON NAIL, IF BLADE IS PROPERLY BALANCED, BLADE SHOULD REMAIN IN POSITION SHOWN IN FIG. 12. IF EITHER END OF THE BLADE MOVES DOWNWARD, BLADE IS NOT BALANCED. SHARPEN THE HEAVY END UNTIL BLADE IS BALANCED.

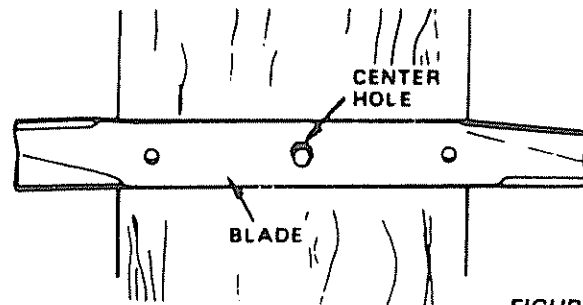


FIGURE 12

4. BATTERY CARE

Check Battery

- Battery acid solution level in each battery cell should be even with bottoms of vent tubes in cells (Fig. 13). Add ONLY distilled or iron free water if necessary. NOTE: DO NOT OVERFILL.
- Keep battery and terminals clean.
- Keep battery bolts tight.
- Keep vent caps tight and small vent holes in caps open.
- Recharge at 6 amperes for 1 hour if necessary.

Clean Battery and Terminals

Corrosion and dirt on the battery and terminals cause the battery to "leak" power and hinders the operation of the charger.

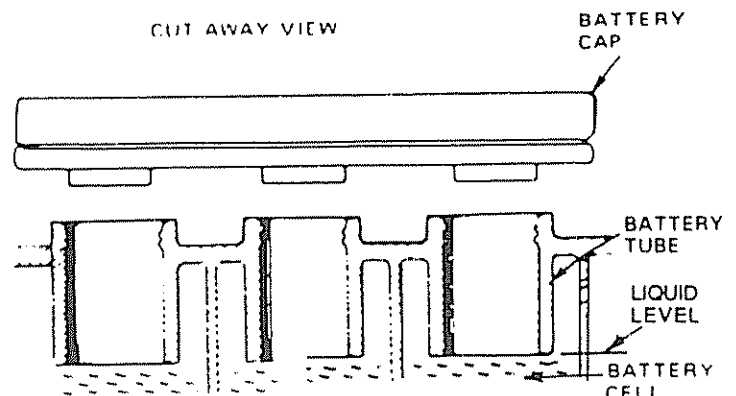


FIGURE 13



LEAD-ACID BATTERIES GENERATE EXPLOSIVE GASES. KEEP SPARKS, FLAME AND SMOKING MATERIALS AWAY FROM BATTERIES. ALWAYS SHIELD YOUR EYES AROUND BATTERIES.

- Remove terminal guard.
- Disconnect BLACK battery cable, then RED battery cable, and remove battery from tractor.
- Wash battery with four tablespoons of baking soda to one gallon of water. NOTE: BE CAREFUL NOT TO GET THE SODA SOLUTION INTO THE CELLS.
- Rinse the battery with plain water, dry and reinstall on tractor.
- Clean terminals and battery cable ends with wire brush until bright.
- Replace battery cables, connecting RED battery cable to positive terminal first, then BLACK battery cable to negative terminal. Coat terminal connections with vasoline after installation of cables.
- Replace terminal guard.

REPAIR AND ADJUSTMENT

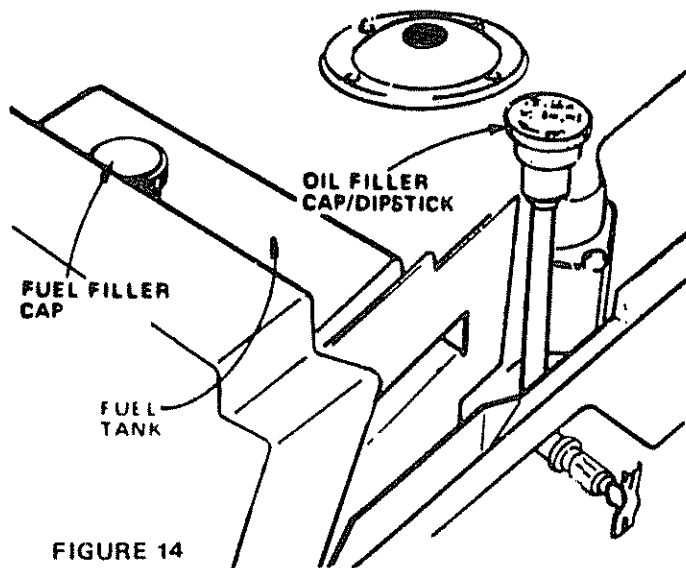


FIGURE 14

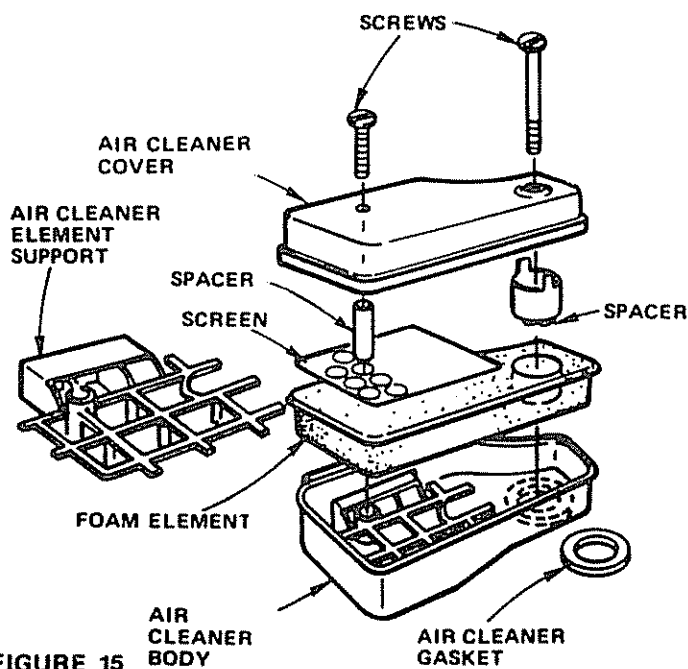


FIGURE 15

5. Change Engine Oil


The best time to change engine oil is at the end of a day's operation when all dirt and foreign materials are suspended in the hot oil.

Capacity is 1-1/2 quarts. NOTE: DO NOT OVERFILL. Dipstick assembly must be securely tightened into tube at all times when engine is operating.

IMPORTANT: TO AVOID DAMAGE TO THE STARTING SYSTEM, USE SAE 5W30 OIL WHEN THE TEMPERATURE FALLS BELOW 32°.

Recommended SAE Viscosity Grades

Determine temperature range expected before next oil change. All oil must meet A.P.I. service classification SD, SE or SF.

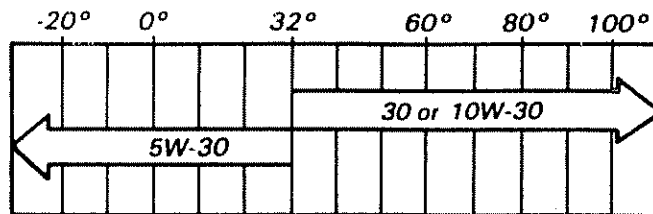

6. Check Engine Oil Level

NOTE: DO NOT CHECK ENGINE OIL LEVEL WITH ENGINE RUNNING.

Several minutes after stopping engine, check engine oil level with tractor on level ground. Wipe dipstick (Fig. 14) clean, screw it down tight for a few seconds, remove and read oil level. If necessary, add oil until "FULL" mark is reached. (See chart above). NOTE: DO NOT OVERFILL.

7. Clean Air Cleaner Element (Fig. 15)

- Open hood.
- Remove two screws from air cleaner cover. Lift off air cleaner (Fig. 15).
- Remove screen spacers from foam element.
- Remove foam element from air cleaner body.
- Wash foam element in liquid detergent and water to remove dirt.
- Wrap foam element in cloth and squeeze dry.
- Lightly coat foam with engine oil. Squeeze in rag or towel to remove excess oil. Do not saturate.
- Replace foam element and replace cover on air cleaner body.

When assembling make certain the lip of the foam element extends over edge of the air cleaner body. The foam element lip will form a protective seal.

NOTE: NEVER RUN ENGINE WITH AIR CLEANER REMOVED.

8. Clean Air Screen and Engine Cooling Fins



ALWAYS WEAR EYE AND FACE PROTECTION WHEN USING COMPRESSED AIR.

Keep Engine Cooling Fins free of dust, dirt and oil to prevent Engine damage from overheating (Fig. 16).

- Remove four Bolts from Blower Housing.
- Remove Screws from Starter Housing.
- Pull Oil Filler/Dipstick out of crankcase if clearance is required. Cover opening to prevent entry of dirt.
- Pull blower housing up and away from starter.

NOTE: LEAVE AIR CLEANER IN PLACE TO PREVENT DEBRIS FROM GETTING INTO CARBURETOR.

- Use compressed air or stiff bristle brush to thoroughly clean Engine Fins.
- To reassemble, reverse above procedure.

REPAIR AND ADJUSTMENT

9. Check Muffler

Inspect and replace damaged muffler and/or deflector as it could create a fire hazard and/or damage.



DO NOT TOUCH HOT MUFFLER, CYLINDER OR FINS AS CONTACT MAY CAUSE BURNS.

10. Lubricate Pivot Points

Place several drops of SAE 30 oil at points where parts move against each other, especially:

- Front axle pivot
- Hood hinges
- Foot pedal shaft (both ends)
- Lift shaft (both ends)

See Lubrication Chart page 24.

11. Starting your Tractor With a Weak Battery

If your battery is too weak to start the engine, it should be recharged. If "jumper cables" are used for emergency starting, follow this procedure:

NOTE: YOUR TRACTOR IS EQUIPPED WITH A 12 VOLT NEGATIVE GROUNDED SYSTEM. THE OTHER VEHICLE MUST ALSO BE A 12 VOLT NEGATIVE GROUNDED SYSTEM.



LEAD-ACID BATTERIES GENERATE EXPLOSIVE GASES. KEEP SPARKS, FLAME AND SMOKING MATERIALS AWAY FROM BATTERIES. ALWAYS WEAR EYE PROTECTION WHEN AROUND BATTERIES.

- Connect each end of the RED cable to the POSITIVE (+) terminals of each battery (taking care not to short against chassis). (Fig. 17)
- Connect one end of the BLACK cable to the NEGATIVE (-) terminals of fully charged battery.
- Connect the other end of the cable to the L.H. side panel bolt (Fig. 18) **NOTE: KEEP AWAY FROM GAS TANK AND BATTERY**
- Disconnect cables in reverse order:
 - L.H. Side Panel Bolt (Fig. 18)
 - Negative terminals of fully charged battery
 - Positive terminals



DO NOT USE YOUR TRACTOR BATTERY TO START OTHER VEHICLES.

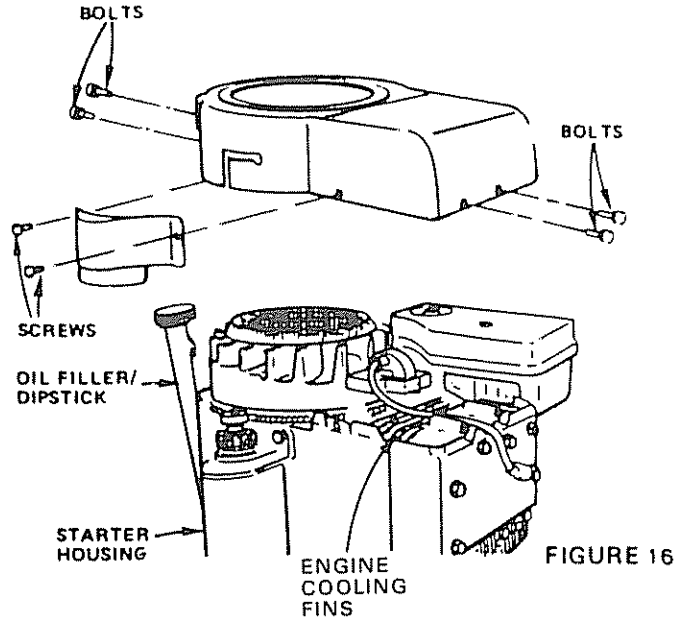


FIGURE 16

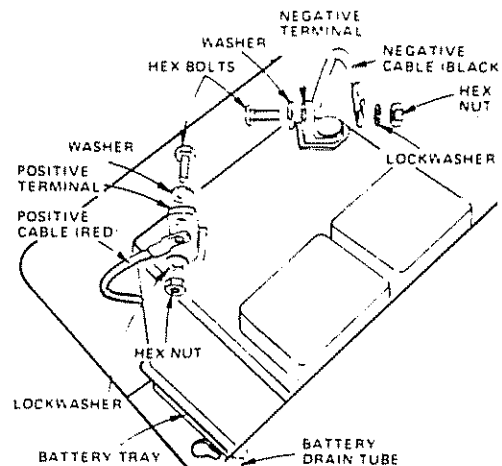


FIGURE 17

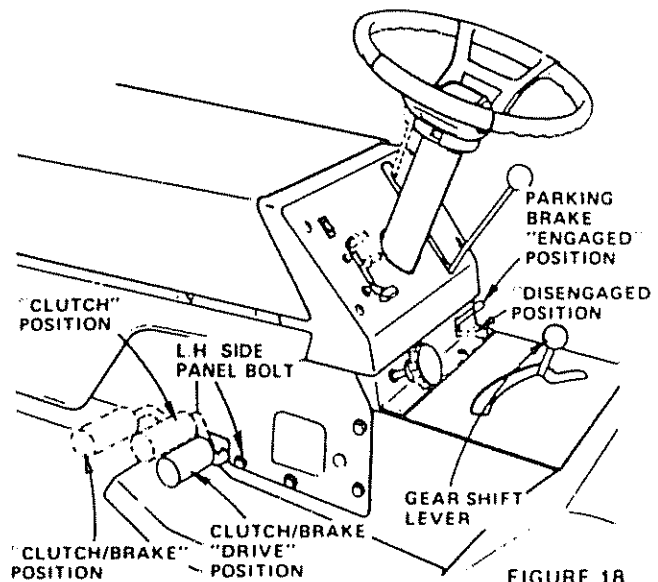


FIGURE 18

REPAIR AND ADJUSTMENT

12. Throttle Control Cable Adjustment

Never attempt to change maximum engine speed. This is preset at the factory and should only be changed by a qualified service technician who has the necessary equipment. CAUTION: BEFORE ANY ENGINE ADJUSTMENT, MAKE SURE AIR CLEANER IS CLEAN. Remove Air Cleaner Assembly, while making adjustments.

- With engine off, place Throttle Control in "FAST" position.
- Loosen Clamp Screw (Fig 19). Adjust Throttle Cable until holes "A" are aligned in governor control plate and slide plate.
- Tighten clamp screw.
- If holes do not align, repeat steps in throttle cable adjustment.

13. Carburetor Adjustment

NOTE: ADJUST THROTTLE CONTROL CABLE BEFORE MAKING ANY ADJUSTMENT TO CARBURETOR

- With engine off turn high speed mixture screw clockwise (↻) closing finger tight ONLY, and turn counterclockwise (↺) 1-1/2 turns (Fig. 19)

NOTE: THE SCREW SEAT MAY BE DAMAGED BY TURNING IT TOO FAR CLOCKWISE.

- Turn idle mixture screw clockwise (↻) closing finger tight only, and turn counterclockwise (↺) 1-1/2 turns (Fig. 19).

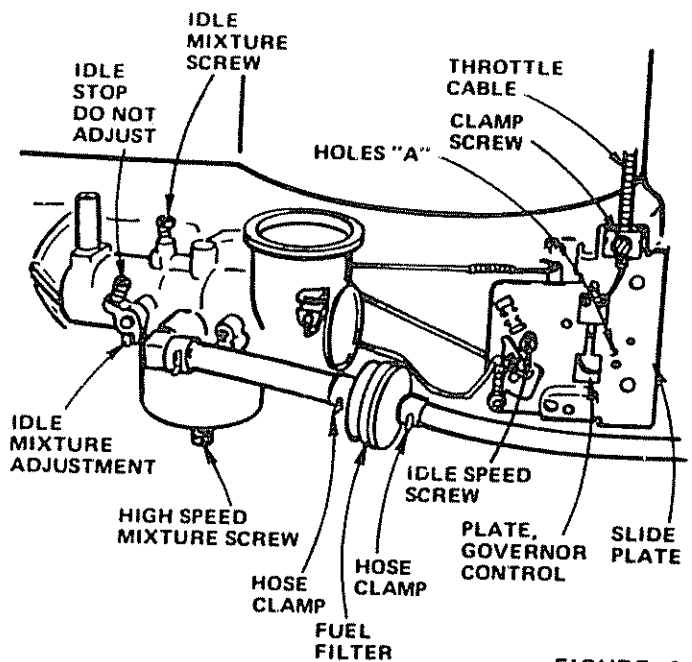


FIGURE 19



REFER TO "STARTING THE ENGINE"
PAGE 10.

- Start engine and allow to warm for five minutes. Make final adjustment with engine running and Gear Shift lever in "NEUTRAL" position.
- With throttle control lever in "FAST" position, turn high speed mixture screw counterclockwise (↺) until engine runs "rough" then turn clockwise (↻) until engine begins to miss. Turn screw to a point midway between these positions.
- With throttle control lever in "SLOW" position, hold throttle lever so that idle stop screw is against carburetor, turn idle mixture Screw counterclockwise (↺) until engine runs "rough" and then turn clockwise (↻) until engine begins to die. Turn idle mixture screw to a point midway between these positions.
- With throttle control lever in "SLOW" position, engine should idle at 1750 RPM. If engine idles too slow, push throttle control lever above idle and turn idle speed screw one turn clockwise (↻). Set throttle control lever at "SLOW". Repeat until satisfactory idle is attained.
- If engine idles too fast with throttle control lever in "SLOW" position push throttle control lever above idle and turn idle speed screw one turn counterclockwise (↺). Set throttle control lever at "SLOW". Repeat until satisfactory idle is attained.

14. Replace Spark Plug

Replace spark plug at the beginning of each mowing season or every 100 hours, whichever comes first. Gap should be set at 0.030 inch (Fig. 20).

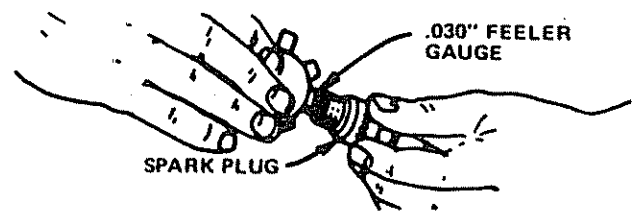


FIGURE 20

REPAIR AND ADJUSTMENT

15. Motion Drive Belt Removal

The tractor drive belt may be replaced without tools. Park the tractor on level area. Engage parking brake. NOTE: A BELT INSTALLATION DECAL IS UNDER LEFT FOOTREST.

- a. Remove mower. (See mower section, page 20).
- b. Remove two retainer springs from belt guide bracket below transaxle pulley. Remove bracket (Fig. 21).
- c. Swing belt guides away from belt, toward rear of tractor (Fig. 21).
- d. Roll belt over top of transaxle pulley.
- e. Roll belt over engine pulley and off idler (Fig. 22).
- f. Release parking brake. Pull belt as far as possible over top of clutch pulley.
- g. Reset parking brake. Pull belt over top of clutch pulley (Fig. 22).
- h. Pull belt out through shift gate to remove from tractor (Fig. 23).
Install belt by reversing above procedure.

NOTE: REPLACE ONLY WITH BELT LISTED IN MANUAL.

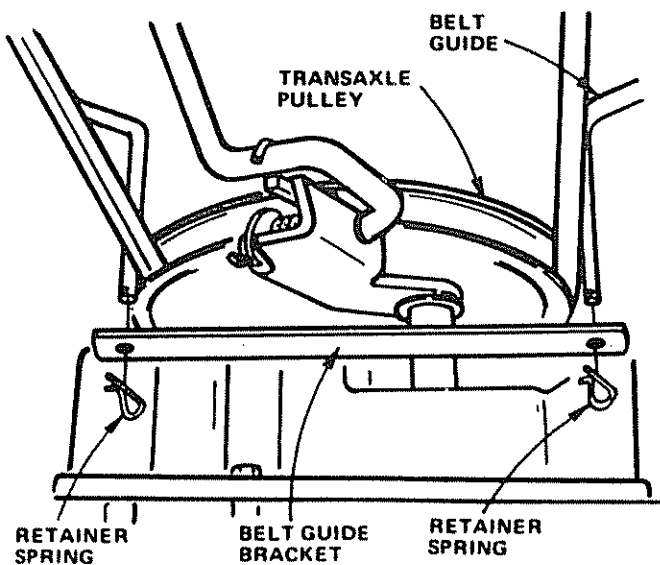


FIGURE 21

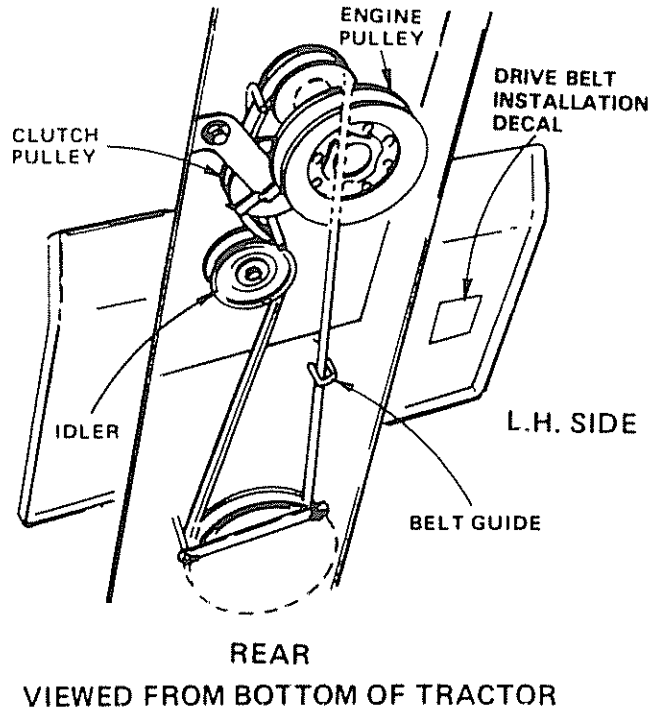


FIGURE 22

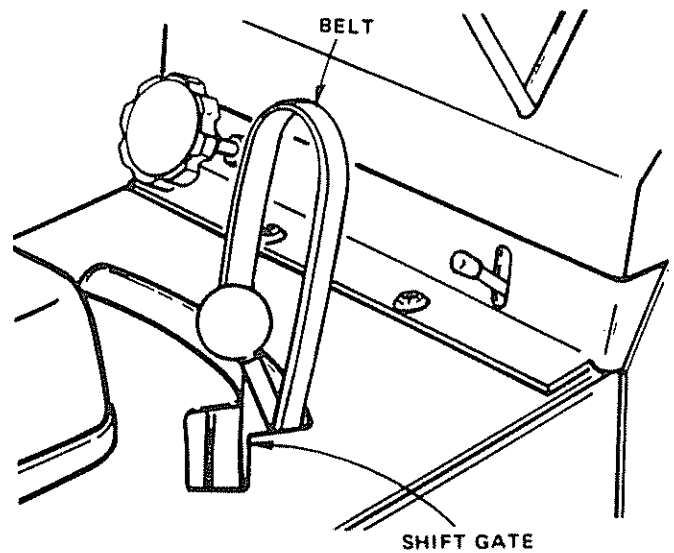


FIGURE 23

REPAIR AND ADJUSTMENT

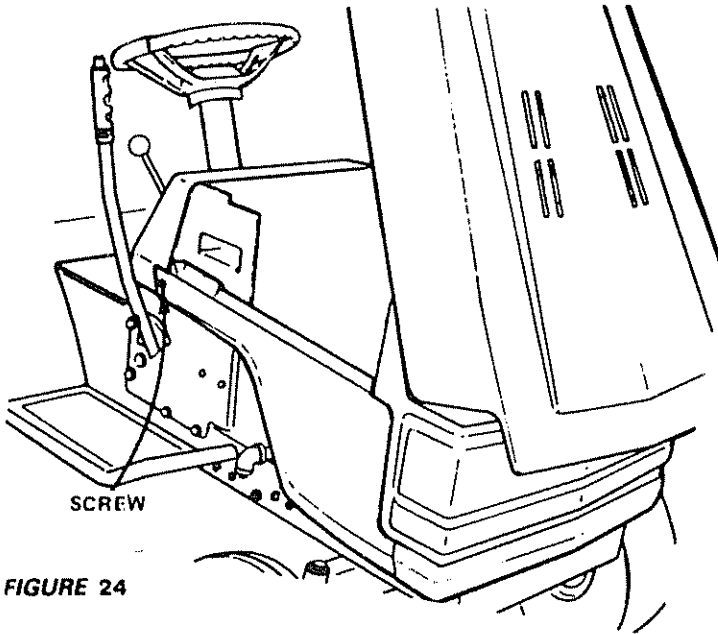


FIGURE 24

16. Fuse Replacement

Replace with 30 amp automotive - type plug-in fuse.

17. Hood Removal

- To raise hood, lift at rear of hood.
- To remove hood, grill and side panels, raise hood and loosen one screw on each side panel. (This screw remains in the side panel) (Fig. 24).
- Unsnap headlight connection (Fig. 25).
- Stand in front of tractor. Grasp hood and tilt forward and lift off (Fig. 25).
- To reinstall, reverse above procedure.

18. Mower Removal

- Remove mower belt per instructions under "Mower Drive Belt Removal" through step(c).
- Remove retainer spring from clutch rod; pull clutch rod out of clutch bracket (Fig. 26).
- Pull retainer springs out of rear suspension trunnions. Remove rear suspension trunnions from lift brackets (Fig. 26).
- Pull retainer spring out of rear hinge pin. Remove rear hinge pin.
- Pull retainer spring out of front hinge pin. Remove front hinge pin (Fig.26).
- Use lift lever to raise suspension arms. Slide mower out from under tractor.

NOTE: IF AN ATTACHMENT OTHER THAN THE MOWER DECK IS TO BE MOUNTED ON THE TRACTOR, THE L.H. AND R.H. SUSPENSION ARMS (FIG. 26) SHOULD BE REMOVED FROM TRACTOR.

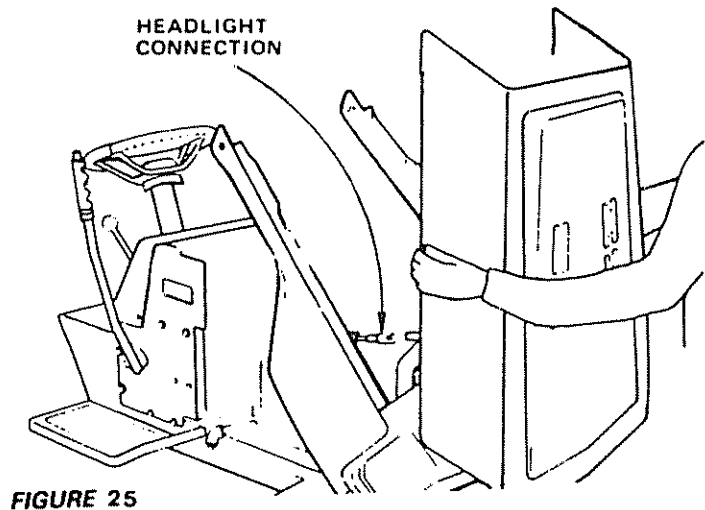


FIGURE 25

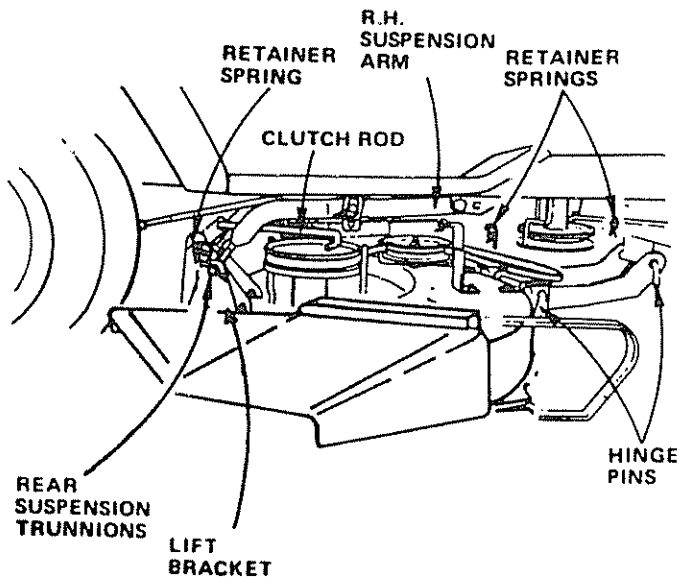


FIGURE 26

REPAIR AND ADJUSTMENT

19. Mower Installation

Your Mower installs without the use of tools. Raise Attachment Lift Lever (Fig. 27) to its highest position. Turn height adjustment knob to lowest position (Fig. 28).

- Slide Mower under tractor, discharge guard to R.H. Side.
- Install front hinge pin through axle and parallel link (Fig. 29). Secure with retainer spring.
- Install rear hinge pin through mower lift brackets and parallel link (Fig. 29). Secure with retainer spring.
- Install clutch rod in clutch lever (Fig. 29).
- Move Attachment lift lever (Fig. 27) forward to lower suspension arms. Slide trunnions through lift bracket holes and secure with retainer springs (Fig. 26).
- Roll belt over engine pulley. Make sure belt is inside belt guides (Fig. 28). See belt drive schematic decal on mower housing.
- Use Attachment lift lever (Fig. 27) to raise mower.
- Turn height adjustment knob clockwise (↻) to the middle of its travel, or to desired cut height.

20. Mower Drive Belt Removal

NOTE: MOWER BELT INSTALLATION DECAL LOCATED ON MOWER HOUSING.

REPLACE ONLY WITH THE BELTS SPECIFIED IN THIS MANUAL.

- Place attachment clutch lever in "Disengaged" position (Fig. 27).
- Turn height adjustment knob to lowest position. Move Attachment lift lever (Fig. 27) forward to lower mower to its lowest position.
- Roll belt off engine pulley (Fig. 28)
- Pull belt off both mandrels
- Spring belt guide away from idler pulley and pull belt off idler pulley.
- Slide belt from under extension spring

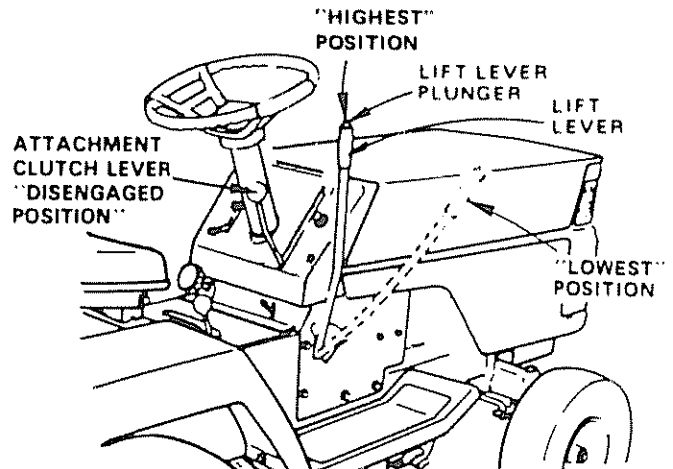


FIGURE 27

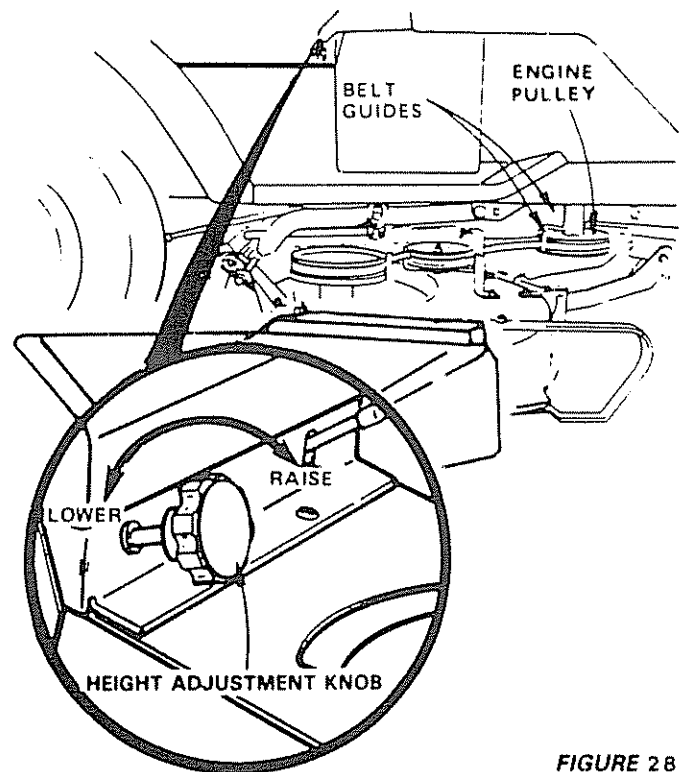


FIGURE 28

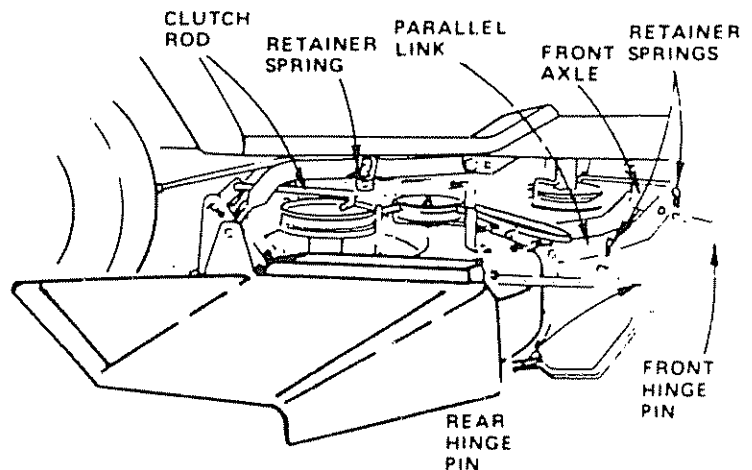


FIGURE 29

REPAIR AND ADJUSTMENT

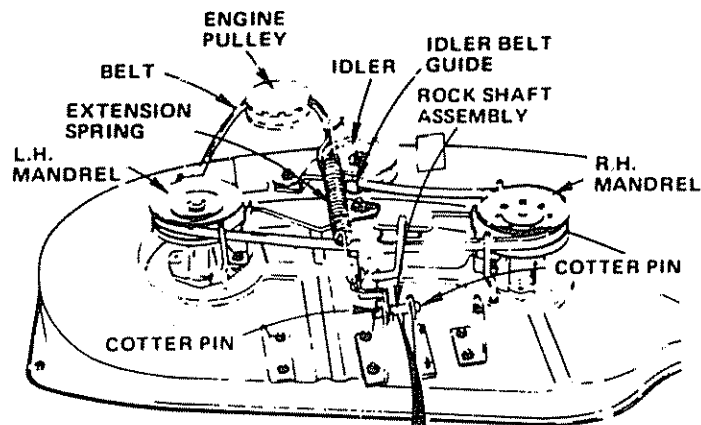


FIGURE 30

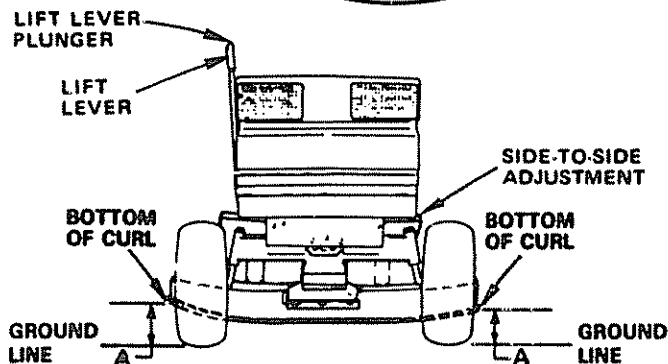
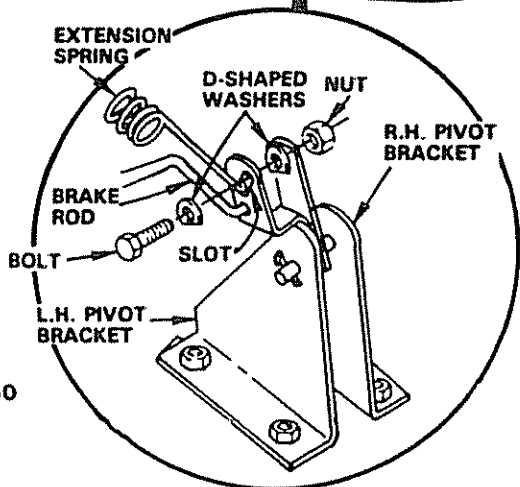


FIGURE 31

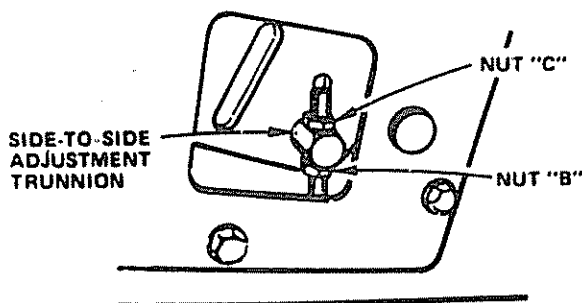


FIGURE 32

21. Mower Drive Belt Replacement

- Slide belt under extension spring (Fig. 30).
- Place belt on rear side of both mandrels.
- Spring idler belt guide down and place belt around rear side of idler pulley.
- Roll belt over engine pulley.
- Make sure belt is inside all belt guides.

22. Mower Drive Belt Adjustment

Your tractor has been manufactured with the ability to readjust the mower belt drive to provide you with longer belt life.

If the attachment clutch lever travels 3-1/2" up the slot in the dash before spring resistance is evident, adjustment is necessary. NOTE: CHECK FOR PROPER SPRING TENSION WITH THE ENGINE OFF AND THE LIFT LEVER IN THE HIGHEST POSITION.

- Lower the mower deck for easier access.
- Using (2) 1/2 wrenches, remove the bolt, nut & D-shaped washers (Fig. 30 - Inset).
- Move extension spring from lower end of slot to upper end in rock shaft assembly and install bolt, nut & the D-shaped washers.
- Tighten bolt and nut to secure the D-shaped washers (flat side down).

NOTE: WHEN INSTALLING A NEW BELT, EXTENSION SPRING MUST BE RETURNED TO LOWER END OF SLOT (ORIGINAL POSITION) ON ROCK SHAFT ASSEMBLY.

23. Level Mower Housing

Adjust the mower while tractor is parked on level ground or driveway. Make sure tire pressures are 14 PSI in front tires and 12 PSI in rear tires. If tires are over or under inflated, you will not properly adjust your mower.

Side-to-Side Mower Adjustment

- Depress lift lever plunger and use lift lever to raise mower to maximum cutting height.
- Measure height from bottom of curl to ground line at front of mower. Distance "A" should be the same on both sides (Fig. 31).
- If distance "A" needs to be changed, snap out access hole cover on L.H. side above footrest. Use 9/16" wrench on nuts "B" and "C" at side-to-side adjustment trunnion (Fig. 32).
- To raise left side of mower, loosen nut "B" and tighten nut "C".
- To lower left side of mower, loosen nut "C" and tighten nut "B".

REPAIR AND ADJUSTMENT

NOTE: ONE ROTATION OF ADJUSTMENT NUTS IS EQUIVALENT TO APPROXIMATELY 3/16" HEIGHT CHANGE.

- f. Be sure all nuts are securely tightened.
- g. Replace cover.

Front-To-Rear Mower Adjustment

- a. To obtain the best cutting results, your mower housing should be adjusted so the front and rear flange distance "D" (Fig. 33) is 1/2" lower in front when the mower is positioned in the highest cutting position. NOTE: MEASURE DISTANCE "D" FROM GROUND LINE TO BOTTOM OF CURL ON RIGHT REAR FLANGE AND COMPARE TO DISTANCE "D" AT BOTTOM OF CURL ON RIGHT FRONT FLANGE.
- b. To raise rear of mower, loosen nut "E" on both rear suspension arms. Screw both nuts "F" up EQUAL NUMBER OF TURNS (Fig. 34).
- c. When distance "D" is 1/2" lower at front than rear tighten nuts "E".
- d. To lower rear of mower, loosen nut "F" on both rear suspension arms an EQUAL NUMBER OF TURNS (Fig. 34).
- e. When distance "D" is 1/2" lower at front than rear, retighten nuts "E".

NOTE: WHEN ADJUSTING REAR SUSPENSION TRUNNIONS, ALWAYS ADJUST BOTH EQUALLY SO MOWER WILL STAY LEVEL.

24. Storage

Remove mower from tractor for winter storage. When mower is to be stored for a period of time, clean it thoroughly, remove all dirt, grease, leaves, etc. Give blades and underside of housing a good coat of grease or rust preventative. Store in a clean dry area.

A. Fuel System

It is important to prevent gum deposits from forming in essential fuel system parts such as the carburetor, fuel filter, fuel hose, or tank during storage. Also, experience indicates that alcohol blended fuels (called gasohol or using ethanol or methanol) can attract moisture which leads to separation and formation of acids during storage. Acidic gas can damage the fuel system of an engine while in storage. To avoid engine problems, the fuel system should be emptied before storage of 30 days or longer.

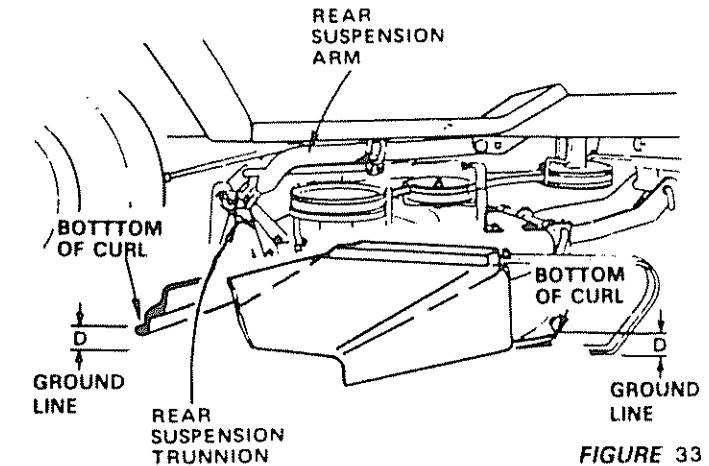


FIGURE 33

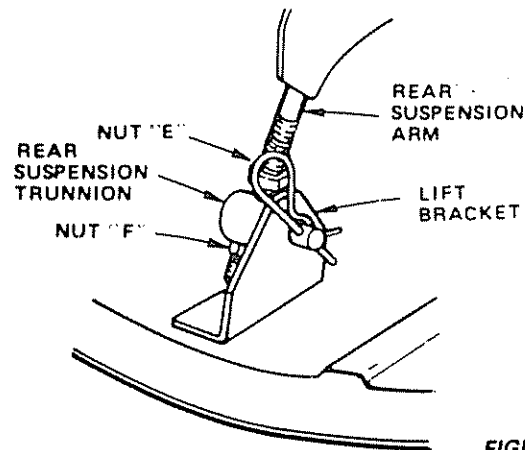


FIGURE 34

B. Engine Oil

Drain (with engine warm) and replace with clean engine oil, (See chart page 16)

C. Cylinder

1. Remove spark plug
2. Pour one ounce of oil through spark plug hole into cylinder
3. Turn ignition key to "START" position for a few seconds to distribute oil.
4. Replace with new spark plug

D. Battery

1. Prior to storage, clean terminals and top of battery


E. General Cleaning

Clean engine, battery, seat, finish, etc., of all foreign matter.

F. Store in a Clean Dry Area

REPAIR AND ADJUSTMENT

LUBRICATION CHART

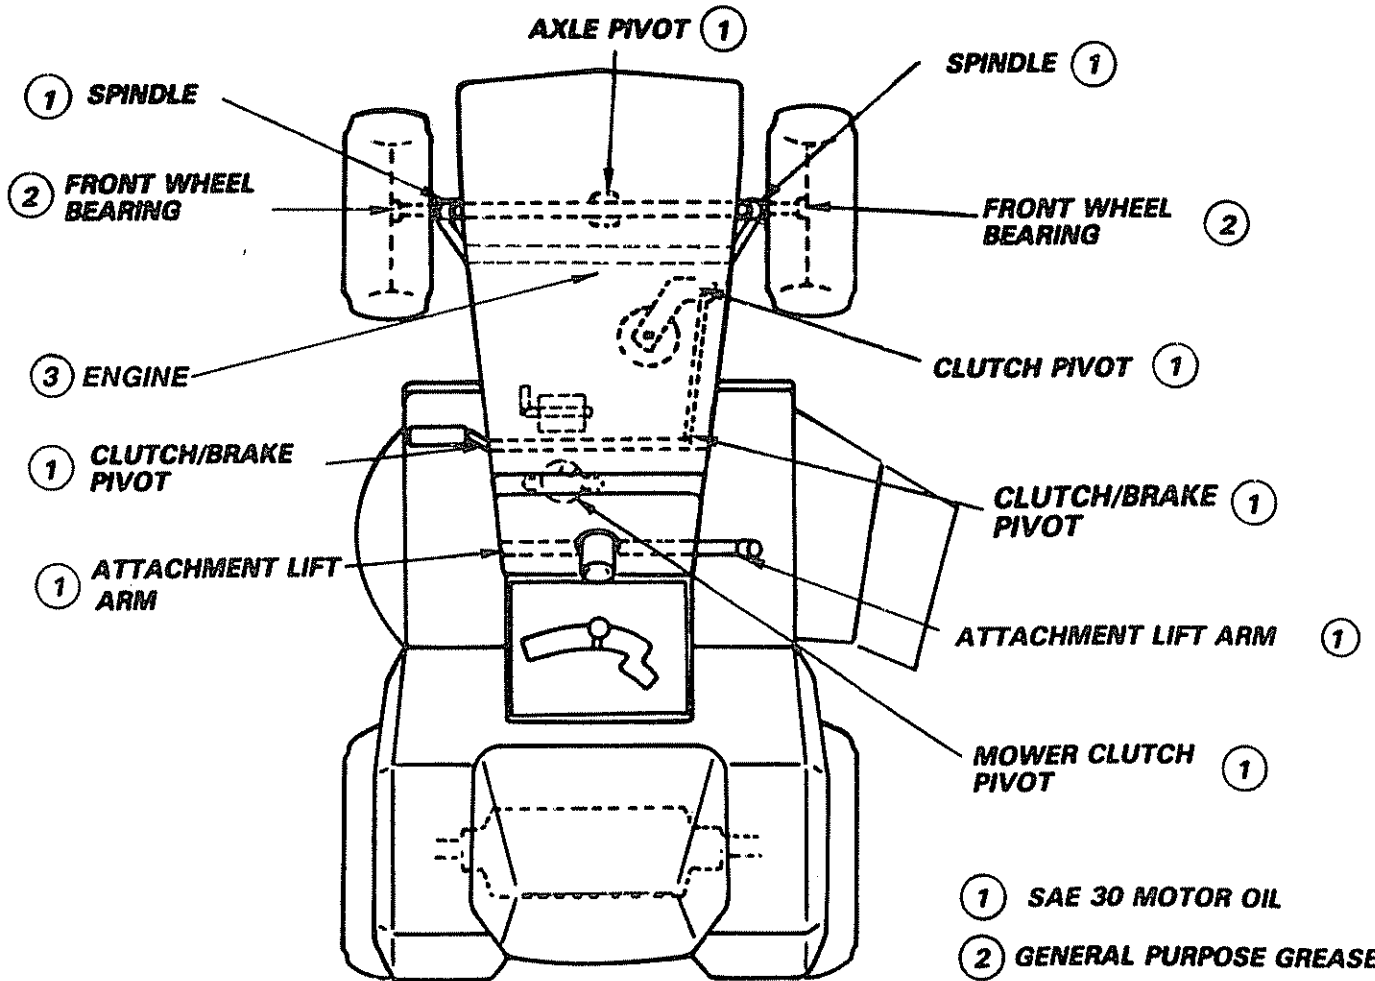

① SAE 30 MOTOR OIL

② GENERAL PURPOSE GREASE

③ REFER TO PAGE 16 FOR ENGINE OIL SPECIFICATIONS.

TROUBLESHOOTING

PROBLEM	CAUSE/REMEDY (SEE INDEX)
WILL NOT START	<p><i>Push Clutch/Brake Pedal into Brake Position Move Attachment Clutch Lever to "Disengaged Position Fill Fuel Tank with Gasoline. Check Fuel Line and Carburetor (clean if necessary) Replace Fuel Filter Check fuse for fault and replace Recharge or replace Battery Check Wiring Replace Spark Plug and adjust gap</i></p>
WILL NOT TURN OVER	<p><i>Charge Battery Replace Ignition Switch Depress Clutch/Brake Pedal Disengage Attachment Clutch Lever Replace Interlock Switch Replace Solenoid Replace Fuse Check All Wire Connections</i></p>
ENGINE CLICKS BUT WON'T START	<p><i>Replace Starter Charge or Replace Battery</i></p>
HARD TO START	<p><i>Place Throttle Control in "FAST" position and run starter several times to clear out gas Remove and clean Fuel Tank and lines. Replace Fuel Filter Remove Air Filter and clean Replace Spark Plug and adjust gap Replace Battery Check the wiring and Spark Plug Drain Fuel Tank and Carburetor, use fresh fuel and replace Spark Plug Make necessary adjustments to Carburetor Major Engine Overhaul</i></p>
ENGINE MISSES OR LACKS POWER	<p><i>Shift to a lower gear or reduce load Remove and clean Fuel Tank; replace Fuel Filter Remove and clean Air Cleaner Make necessary carburetor adjustments Clean Air Screen Add or change oil Replace Spark Plug Check Spark Plug and check for loose wires Major Engine overhaul Drain Fuel Tank and Carburetor and refill</i></p>
ENGINE OVERHEATS	<p><i>Clean Air Screen Add or change oil Clean Engine Cooling Fins Remove and clean Muffler or replace Remove and clean Air Filter Use fresh fuel and adjust Carburetor</i></p>
NO LIGHTS	<p><i>Check Fuse, Switch and wire connections. Replace Headlight Bulbs</i></p>
WON'T CHARGE	<p><i>Check Fuse and replace Replace Battery Replace Regulator Replace Alternator</i></p>
<p>OPERATOR PRESENCE SYSTEM WILL NOT SHUT DOWN WHEN OPERATOR LEAVES SEAT. <i>Note: This tractor is equipped with an operator presence sensing system. Any attempt by the operator to leave the seat with the engine running and the attachment clutch engaged will shut down the engine.</i></p>	<p><i>Engage attachment clutch Check all wire connections Check seat switch Check operator presence relay Check PTO Switch</i></p>

TROUBLESHOOTING

<p>UNSATISFACTORY MOWER PERFORMANCE UNEVEN DISTRIBUTION OF CLIPPINGS</p>	<p><i>Check air pressure in tires Check front to rear and side to side mower adjustment Use a slower ground speed Check engines RPM's (refer to Carburetor Adjustment) Replace mower blades Reinstall mower blades with top of blade up Replace with proper mower blades Re-adjust mower drive belt</i></p>
<p>MOWER BLADES WILL NOT ROTATE</p>	<p><i>Install new Mower Drive Belt Reinstall Mower Drive Belt Adjust Mower Drive Belt Replace Frozen Mandrel Replace Frozen Idler Pulley</i></p>
<p>EXCESSIVE MOWER VIBRATION</p>	<p><i>Replace Bent or Unbalanced Blades Replace Mandrel, Straighten Deck or replace</i></p>
<p>WIND ROWING STRIPPING OR DROPPING OF GRASS CLIPPINGS</p>	<p><i>Let grass dry out Clean underside of Mower Deck Readjust Mower</i></p>
<p>UNEVEN CUT OR SCALPING</p>	<p><i>Readjust Mower</i></p>