

# SEARS

## operator's manual



MODEL NO. 143.006710

6.75 RESERVE POWER  
12.56 CUBIC INCH (207 cc)  
DISPLACEMENT

SOLID STATE IGNITION

### CAUTION:

Read RULES for  
Safe OPERATION  
and INSTRUCTIONS  
Carefully

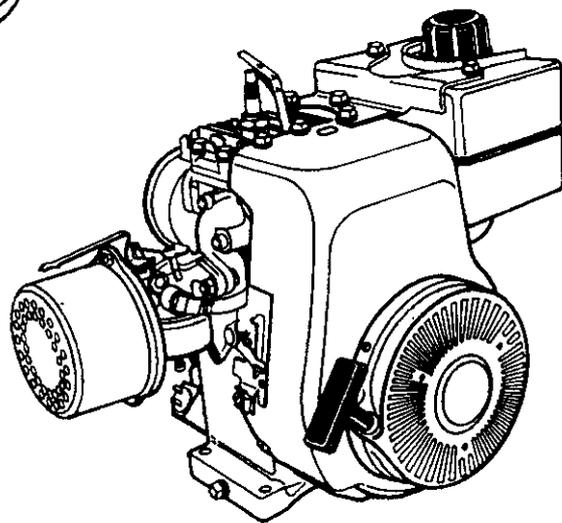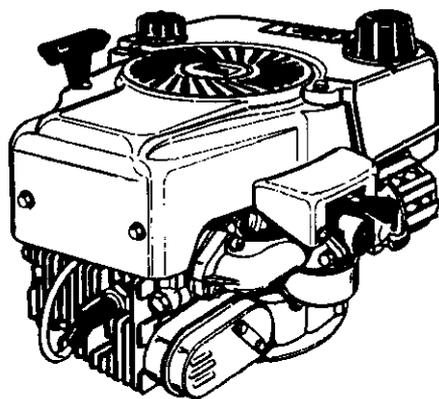

# ENGINE

- Operating
- Maintenance
- Repair Parts



California Proposition 65 **WARNING:** The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

Sold by SEARS, ROEBUCK AND CO., CHICAGO, IL 60684 U.S.A.  
and SEARS CANADA, INC., TORONTO, ONTARIO, CANADA



The D.O.M. decal also includes engine life specifications for the emissions-related useful life period of your engine. This period relates to the emission compliance life as certified by EPA/CARB. To find the life period specification for your engine, please match one of the following letters with the letter printed on your D.O.M. decal: (C):250 hours, (B) 500 hours, (A) 1000 hours.

MODEL AND D.O.M. DECAL


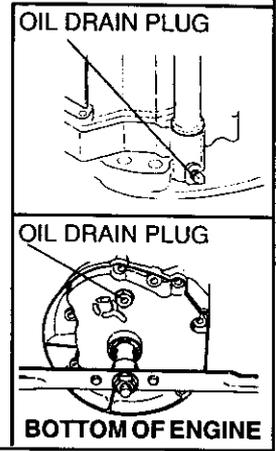


Figure 1



**THIS SYMBOL POINTS OUT IMPORTANT SAFETY INSTRUCTIONS WHICH IF NOT FOLLOWED COULD ENDANGER THE PERSONAL SAFETY AND/OR PROPERTY OF YOURSELF AND OTHERS. READ AND FOLLOW ALL INSTRUCTIONS IN THIS MANUAL AND ANY PROVIDED WITH THE EQUIPMENT ON WHICH THIS ENGINE IS USED BEFORE ATTEMPTING TO OPERATING.**

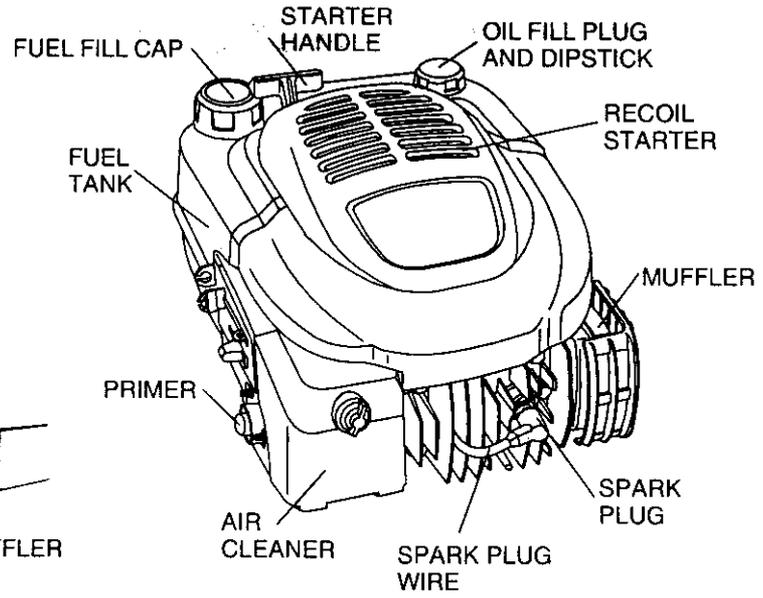

THESE SYMBOLS MAY APPEAR ON THE ENGINE:



FAST



SLOW



STOP



OFF



CHOKE



FULL

**NOTE:** Engines which are certified to comply with California and U.S. EPA emission regulations for SORE (Small Off Road Equipment), are certified to operate on regular unleaded gasoline, and include the following emission control systems: Engine Modification (EM), and Three-way Catalyst (TWC) (if so equipped).

## OIL & FUEL RECOMMENDATIONS

TO OPERATE ENGINE, YOU WILL NEED THE FOLLOWING:

- ① **A CLEAN, HIGH QUALITY, DETERGENT OIL.**  
Be sure original container is marked: A.P.I. service "SF" - "SJ".  
**FOR SUMMER (ABOVE 32°F; 0°C) USE SAE 30 OIL.**  
(SAE 10W30 is acceptable substitute.)  
**FOR WINTER (BELOW 32°F; 0°C) USE SAE 5W30 OIL.**  
(SAE 10W is an acceptable substitute.)  
**DO NOT USE 10W40 OIL.**  
**OIL SUMP CAPACITY:** 27 ounces (1-3/4 U.S. pints)  
.80 liter

- ② **A FRESH, CLEAN, UNLEADED REGULAR, UNLEADED PREMIUM, OR REFORMULATED AUTOMOTIVE GASOLINE ONLY. DO NOT USE LEADED GASOLINE.**  
**NOTE:** DO NOT USE GASOLINE CONTAINING METHANOL (WOOD ALCOHOL). Gasoline containing up to 10% ethanol or grain alcohol ("Gasohol"), or up to 15% MTBE (Methyl Tertiary Butyl Ether), may be used but requires special care when engine is unused for extended periods.  
See "STORAGE" instructions of Page 4.  
**NOTE:** Use clean oil and fuel and store in approved, clean covered containers. Use clean fill funnels.  
Never use "stale" gasoline left over from last season or stored for long periods.

## IMPORTANT

**KEEP THIS MANUAL HANDY AT ALL TIMES FOR FUTURE REFERENCE. READ IT CAREFULLY AND FAMILIARIZE YOURSELF WITH THE OPERATING, MAINTENANCE AND SAFETY INSTRUCTIONS. THIS MANUAL ALSO CONTAINS A COMPLETE PARTS LISTING.**

## BEFORE STARTING

- ① **READ ALL INSTRUCTIONS PROVIDED WITH THE EQUIPMENT ON WHICH THIS ENGINE IS USED.**  
**THIS ENGINE IS EQUIPPED WITH A FEDERALLY MANDATED MECHANISM WHICH STOPS THE ENGINE. DO NOT INTERFERE WITH OR BYPASS THIS MECHANISM. PARTS OF THE MECHANISM MAY BE SUBJECT TO WEAR AND MUST BE CHECKED ONCE A YEAR BY AN AUTHORIZED SEARS ROEBUCK AND CO. (OR SEARS CANADA, INC.) SERVICE CENTER. IN THE EVENT THE MECHANISM FAILS FOR ANY REASON, YOU MUST NOT USE THE ENGINE UNTIL CORRECTED BY AN AUTHORIZED SEARS ROEBUCK AND CO. (OR SEARS CANADA, INC.) SERVICE CENTER.**
- ② **DISCONNECT SPARK PLUG WIRE FROM SPARK PLUG AND ATTACH IT TO RETAINING POST (see Figure 6 on Page 3).**
- ③ **INSTALL ENGINE BRAKE CABLE AND STARTER ROPE:**  
**BRAKE CABLE (see Figure 2):**  
Attach engine brake cable to brake mechanism as shown.  
**STARTER ROPE:**
  - A. Depress mower control bar (see Figure 3) against mower handle and hold it in this position.
  - B. Pull at least 2 feet of starter rope out of starter and tie a slip knot at starter to prevent starter rope from rewinding back into starter.

## BEFORE STARTING (Continued)

- C. Feed starter rope through starter handle (see Figure 5) and tie a left hand knot, leaving 1/2 inch to 1 inch of starter rope extending beyond left hand knot. **DO NOT PULL LEFT HAND KNOT INTO STARTER HANDLE YET.**
- D. With starter handle resting on rope guide (see Figure 4), check starter rope for slack. If there is any slack, pull more starter rope through starter handle and relocate left hand knot to eliminate slack.
- E. Untie slip knot at starter.
- F. Pull left hand knot into starter handle.

### ③ CHECK OIL LEVEL:

**IMPORTANT: NEVER RUN ENGINE UNLESS OIL LEVEL IS BETWEEN "FULL" AND "ADD" MARKS ON DIPSTICK.**

**CHECK OIL LEVEL OFTEN DURING ENGINE BREAK-IN. NEVER RUN ENGINE UNLESS OIL FILL PLUG IS TIGHTENED SECURELY INTO OIL FILL HOLE.**

- A. POSITION EQUIPMENT SO ENGINE IS LEVEL.
- B. Clean area around oil fill plug (see Figure 1).
- C. Remove oil fill plug and dipstick.
- D. Wipe dipstick clean, insert it into oil fill hole and tighten securely.
- E. Remove oil fill plug and check oil level. If level is not up to "FULL" mark on dipstick, add recommended oil, until it is. **POUR SLOWLY.**  
Wipe dipstick clean each time oil level is checked. **DO NOT FILL ABOVE "FULL" MARK ON DIPSTICK.**
- F. Replace oil fill plug and tighten securely.  
See "MAINTENANCE" section for any future oil level and oil change instructions (see Page 3).

### ④ FILL FUEL TANK with gasoline as specified in the preceding "OIL & FUEL RECOMMENDATIONS," item 2.

**NEVER MIX OIL WITH GASOLINE**

Never use "stale" gasoline left over from last season or stored for long periods.

**NEVER FILL FUEL TANK INDOORS. NEVER FILL FUEL TANK WHEN ENGINE IS RUNNING OR HOT. DO NOT SMOKE WHEN FILLING FUEL TANK.**

**NEVER FILL FUEL TANK COMPLETELY. FILL TANK TO 1/2" BELOW BOTTOM OF FILLER NECK TO PROVIDE SPACE FOR FUEL EXPANSION. WIPE ANY FUEL SPILLAGE FROM ENGINE AND EQUIPMENT BEFORE STARTING ENGINE.**

**ANY LIQUEFIED PETROLEUM (LPG) OR NATURAL GAS FUEL SYSTEM MUST BE LEAKPROOF AND MEET ALL APPLICABLE CODES AND REGULATIONS.**

### ⑤ CHECK THE FOLLOWING:

- A. **BE SURE EQUIPMENT IS IN NEUTRAL GEAR WITH CLUTCHES, BELTS, CHAINS AND SAFETY SWITCHES DISENGAGED. (FOLLOW EQUIPMENT MANUFACTURER'S INSTRUCTIONS.) THIS SHOULD PLACE ANY SAFETY SWITCHES IN SAFE STARTING POSITION.**
- B. Be sure spark plug wire is attached to spark plug (see Figure 1).

## STARTING

**NEVER RUN ENGINE INDOORS OR IN ENCLOSED, POORLY VENTILATED AREAS. ENGINE EXHAUST CONTAINS CARBON MONOXIDE, AN ODORLESS AND DEADLY GAS (CARBON MONOXIDE IS ALSO PRESENT IN ENGINE EXHAUST FROM LIQUID PETROLEUM (LPG) AND NATURAL GAS FUEL SYSTEMS).**

**KEEP HANDS, FEET, HAIR AND LOOSE CLOTHING AWAY FROM ANY MOVING PARTS ON ENGINE AND EQUIPMENT.**

**WARNING - TEMPERATURE OF MUFFLER AND NEARBY AREAS MAY EXCEED 150°F (65°C). AVOID THESE AREAS.**

**NOTE:** See equipment manufacturer's instructions for control positions which correspond to engine control positions in Figure 2.

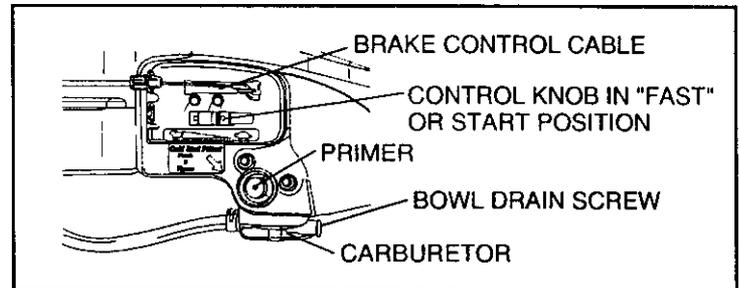


Figure 2

### ① ENGINE WITH PRIMER

- 1) Move control lever (figure 2) to "FAST" or "START" (see equipment manufacturer's instructions).
- 2) The carburetor on your engine has been completely adjusted at the factory. When starting a cold engine, push red primer bulb **firmly with your thumb 3 times**, allowing primer bulb to return completely to original position between pushes. Below 55°F, additional primes may be needed.  
**NOTE: DO NOT USE PRIMER TO RESTART A WARM ENGINE AFTER A SHORT SHUTDOWN.**
- 3) Operate mower control to release engine brake.
- 4)
  - a) **RECOIL STARTERS:** Grasp starter handle (figure 3) and pull rope out slowly until you feel drag. Let rope rewind slowly. Pull rope with rapid, full arm stroke. Return rope slowly to original position.  
**NOTE:** If engine fails to start after three pulls, repeat steps 2-3 above.
  - b) **ELECTRIC STARTERS:** Crank engine.  
**NOTE:** If engine does not start after five seconds of cranking, stop and repeat steps 2-3 above.  
**NOTE:** If equipped with a snap-in control as shown, no adjustment is required.

## STOPPING

① See mower manufacturer's instructions.

### ② AFTER ENGINE IS STOPPED:

**A. DISCONNECT SPARK PLUG WIRE FROM SPARK PLUG AND ATTACH IT TO RETAINING POST (see Figure 6).**

**B. NEVER STORE ENGINE WITH FUEL IN TANK IN DOORS OR IN ENCLOSED, POORLY VENTILATED AREAS, WHERE FUEL FUMES MAY REACH AN OPEN FLAME, SPARK OR PILOT LIGHT AS ON A FURNACE, WATER HEATER, CLOTHES DRYER OR OTHER GAS APPLIANCE.**

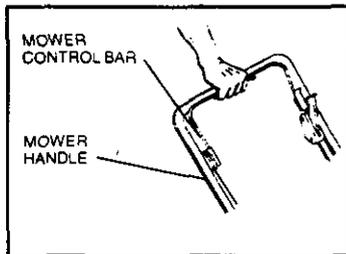


Figure 3

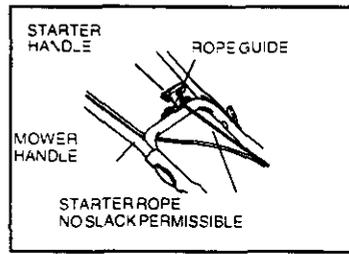


Figure 4

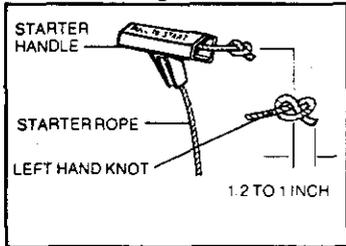


Figure 5

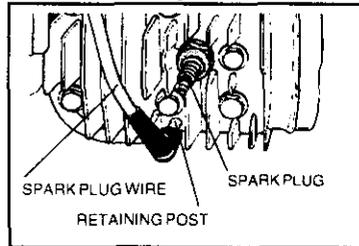


Figure 6

## MAINTENANCE

**WARNING - TEMPERATURE OF MUFFLER AND NEARBY AREAS MAY EXCEED 150°F (65°C). AVOID THESE AREAS.**

### ① CHECK OIL LEVEL:

Check oil level every five (5) operating hours or each time engine is used. See "3 CHECK OIL LEVEL" in "BEFORE STARTING" on Page 2.

### ② CHANGE OIL:

Change oil after first two (2) operating hours and every 25 operating hours thereafter, more often if operated in extremely dusty or dirty conditions. Change oil while engine is still warm from recent running.

WITH OIL DRAIN PLUG	WITHOUT OIL DRAIN PLUG
<ol style="list-style-type: none"> <li>1. Disconnect spark plug wire from spark plug and attach to retaining post (figure 6).</li> <li>2. Clean area around oil drain plug.</li> <li>3. Position equipment so engine oil drain plug is lowest point on engine.</li> <li>4. Remove oil drain plug.</li> <li>5. Remove oil fill plug and drain oil.</li> <li>6. Replace oil drain plug and tighten securely.</li> <li>7. Fill oil sump with recommended oil.</li> <li>8. Replace oil fill plug and tighten securely.</li> <li>9. Wipe up any spilled oil.</li> </ol>	<ol style="list-style-type: none"> <li>1. Disconnect spark plug wire from spark plug and attach to retaining post (figure 6).</li> <li>2. Run engine until engine stops from lack of fuel.</li> <li>3. Remove oil fill cap.</li> <li>4. Place a container next to engine to catch draining oil.</li> <li>5. Tip engine on its side to drain oil, making sure that air cleaner is facing up (see illustration below).</li> <li>6. Clean area around oil fill.</li> <li>7. Fill oil sump with recommended oil.</li> <li>8. Replace oil fill cap and tighten securely.</li> <li>9. Wipe up any spilled oil.</li> </ol>
<p>OIL DRAIN PLUG</p> <p>BOTTOM OF ENGINE</p>	<p>AIR CLEANER</p> <p>OIL FILL CAP</p>

## MAINTENANCE (Continued)

### ③ AIR CLEANER (see Figure 7):

**NEVER RUN ENGINE WITHOUT COMPLETE AIR CLEANER INSTALLED ON ENGINE.**

#### A. TO SERVICE FILTER:

##### PAPER FILTER:

**DO NOT ATTEMPT TO CLEAN OR OIL FILTER.** Replace filter once a year or every 100 operating hours, more often if used in extremely dusty or dirty conditions. Replacement filters are available at any Sears Roebuck and Co. (or Sears Canada, Inc.) Service Center.

##### FOAM FILTER:

Clean and re-oil every three (3) months or every 25 operating hours. Clean and re-oil daily if used in extremely dusty conditions.

1. Wash in water and detergent solution and squeeze (don't twist until all dirt is removed.)
2. Rinse thoroughly in clear water.
3. Wrap in a clean cloth and squeeze (don't twist) to distribute oil and remove excess oil.

#### B. TO REMOVE AND INSTALL FILTER:

1. Remove cover from body by loosening wing nut. Swing cover down to remove from hinge.
2. Inspect filter for discoloration or dirt accumulation. If either is present, service per preceding "TO SERVICE FILTER" instructions.
3. Clean inside of cover and body thoroughly.
4. Re-install filter in body.
5. Install cover on body by aligning hinges between body and cover. Swing cover upward against body. Tighten wing nut securely.

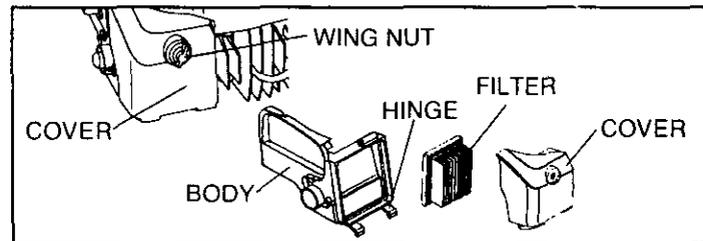


Figure 7

### ④ SPARK PLUG (see Figure 8):

**NOTE:** This spark ignition system meets all requirements of the Canadian Interference-Causing Equipment Regulations.

**NOTE:** This engine complies with all current Australian and New Zealand limitations regarding electromagnetic interference.

**NOTE:** This engine complies with the European standard for safety of garden equipment and powered lawnmowers EN836, Revision March, 1997, and applicable sections of the EU Machinery Safety Directives.

Check spark plug yearly or every 100 operating hours.

1. Clean area around spark plug.
2. Remove and inspect spark plug.
3. Replace spark plug if electrodes are pitted, burned or porcelain is cracked. For replacement use Champion RJ-17LM or equivalent.
 

**NOTE:** A resistor spark plug must be used for replacement.
4. Check electrodes gap with wire feeler gauge and set gap at .030 if necessary.
5. Install spark plug, tighten securely.

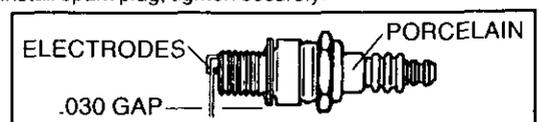


Figure 8

## MAINTENANCE (Continued)

### ⑤ COOLING SYSTEM (see Figure 9):

**IMPORTANT:** Frequently remove any grass clippings, dirt and debris from cooling fins, air intake screen and levers and linkage (see Figure 1). This will help ensure adequate cooling and correct engine speed.

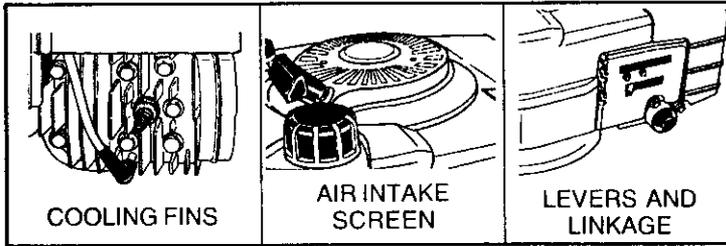


Figure 9

### ⑥ CHECK ENGINE AND EQUIPMENT OFTEN FOR LOOSE NUTS, BOLTS AND ATTACHMENTS, AND KEEP THESE ITEMS TIGHTENED.

## ADJUSTMENTS

DO NOT MAKE UNNECESSARY ADJUSTMENTS. FACTORY SETTINGS ARE SATISFACTORY FOR MOST APPLICATIONS AND CONDITIONS. IF ADJUSTMENTS ARE NEEDED, PROCEED AS FOLLOWS:

### ① CARBURETOR

If you think your carburetor needs adjusting, see your nearest SEARS, ROEBUCK AND CO. (OR SEARS CANADA, INC.) SERVICE CENTER. Engine performance should not be affected at altitudes up to 7,000 feet. For operation at higher elevations, contact your nearest SEARS, ROEBUCK AND CO. (OR SEARS CANADA, INC.) SERVICE CENTER.

### ② ENGINE SPEED

**NEVER TAMPER WITH ENGINE GOVERNOR WHICH IS FACTORY SET FOR PROPER ENGINE SPEED. OVERSPEEDING ENGINE ABOVE FACTORY HIGH SPEED SETTING CAN BE DANGEROUS. CHANGING OF ENGINE-GOVERNED SPEED WILL VOID ENGINE WARRANTY.**

## STORAGE

**NEVER STORE ENGINE WITH FUEL IN TANK INDOORS OR IN ENCLOSED, POORLY VENTILATED AREAS, WHERE FUEL FUMES MAY REACH AN OPEN FLAME, SPARK OR PILOT LIGHT AS ON A FURNACE, WATER HEATER, CLOTHES DRYER OR OTHER GAS APPLIANCE.**

IF ENGINE IS TO BE UNUSED FOR 30 DAYS OR MORE, PREPARE AS FOLLOWS:

### ① DRAIN FUEL SYSTEM:

A. Remove all gasoline from carburetor and fuel tank to prevent gum deposits from forming on these parts and causing possible malfunction of engine.

**DRAIN FUEL INTO APPROVED CONTAINER OUTDOORS, AWAY FROM OPEN FLAME. BE SURE ENGINE IS COOL. DO NOT SMOKE.**

B. Run engine until fuel tank is empty and engine stops due to lack of fuel.

**NOTE:** If "Gasohol" has been used, complete above instructions and then put 1/2 pint of gasoline into fuel tank and repeat above instructions.

## MAINTENANCE (Continued)

**NOTE:** Fuel stabilizer (such as STA-BIL) is an acceptable alternative in minimizing the formation of fuel gum deposits during storage. Add stabilizer to gasoline in fuel tank or storage container. Always follow mix ratio found on stabilizer container. Run engine at least 10 minutes after adding stabilizer to allow it to reach carburetor.

### ② DRAIN CARBURETOR:

Drain carburetor by removing bowl drain screw (see Figure 10), which is located below carburetor.

**DRAIN FUEL INTO APPROVED CONTAINER OUTDOORS, AWAY FROM OPEN FLAME. BE SURE ENGINE IS COOL. DO NOT SMOKE.**

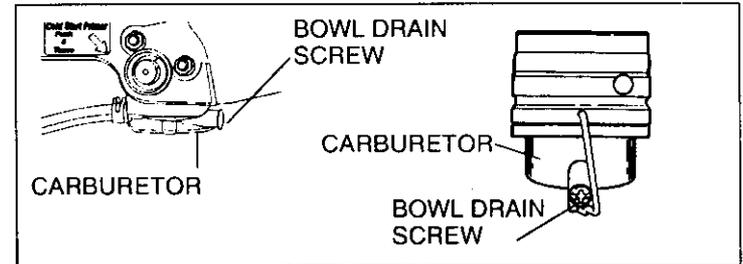


Figure 10

### ③ CHANGE OIL:

Change oil if it has not been changed in the last three (3) months. See "CHANGE OIL" instructions in "MAINTENANCE" section on Page 3.

### ④ OIL CYLINDER BORE:

- Remove spark plug and pour one (1) ounce (30 ml) of engine oil into spark plug hole.
- Cover spark plug hole with a rag.
- Crank engine over, slowly, several times.

**AVOID SPRAY FROM SPARK PLUG HOLE WHEN CRANKING ENGINE OVER SLOWLY.**

D. Replace spark plug.

### ⑤ CLEAN ENGINE:

Remove any clippings, dirt, or chaff from exterior of engine.

### ⑥ BATTERY (if so equipped):

See equipment manufacturer's instructions for proper storage of battery.

## GENERAL

Just as your automobile needs professional mechanical maintenance from time to time, so does your Craftsman engine. Replacement of the spark plug and air cleaner is made necessary by NORMAL use. Professional Air-Cooled Engine Service is as close as your nearest Sears Roebuck and Co. (or Sears Canada, Inc.) Service Center.

A yearly check-up or tune-up by Sears is a good idea to avoid breakdowns or delay... do it at the end of the season, then you're ready for the next. We even prepare it for storage for you.

# TROUBLESHOOTING

**THE FOLLOWING MAY HELP AVOID A DELAY IN YOUR WORK OR  
SAVE THE EXPENSE OF A SERVICE CALL.**

<b>ENGINE FAILS TO START OR STARTS WITH DIFFICULTY</b>	
<b>CAUSE</b>	<b>REMEDY</b>
Controls not in start position.	Move ENGINE CONTROL or equipment control to "HI" or START position. See "STARTING" instructions in this manual.
Spark plug wire disconnected from spark plug.	Connect SPARK PLUG WIRE to SPARK PLUG.
Spark plug fouled.	Remove SPARK PLUG and clean it. See "SPARK PLUG" instructions in "MAINTENANCE" section in this manual.
Spark plug porcelain cracked.	Install new spark plug.
Insufficient fuel.	Fill FUEL TANK per "BEFORE STARTING" instructions.
Water or dirt in fuel.	Drain FUEL TANK and re-fill with clean, fresh gasoline. See "BEFORE STARTING" instructions in this manual.
Improper carburetor adjustment	Adjust carburetor (if applicable). See "ADJUSTMENTS" section in this manual.
<b>ENGINE LACKS POWER</b>	
<b>CAUSE</b>	<b>REMEDY</b>
Dirty air cleaner.	Replace or clean air cleaner per "AIR CLEANER" instructions in "MAINTENANCE" section in this manual.
Improper carburetor adjustment.	Adjust carburetor (if applicable). See "ADJUSTMENTS" section in this manual.
Lack of lubricaiton.	Fill oil sump to proper level. See "BEFORE STARTING" instructions section in this manual.
<b>ENGINE MISSES UNDER LOAD</b>	
<b>CAUSE</b>	<b>REMEDY</b>
Spark plug fouled.	Remove SPARK PLUG and clean it. See "SPARK PLUG" instructions in "MAINTENANCE" section in this manual.
Spark plug porcelain cracked.	Install new SPARK PLUG.
Improper spark plug gap.	Regap SPARK PLUG electrodes. See "SPARK PLUG" instructions in "MAINTENANCE" section in this manual.
Improper carburetor adjustment	Adjust carburetor (if applicable). See "ADJUSTMENTS" section in this manual.

## Federal and California Emission Control Systems Limited Warranty Small Off-Road Engines

### CALIFORNIA & US EPA EMISSION CONTROL WARRANTY STATEMENT

The U. S. Environmental Protection Agency ("EPA"), the California Air Resources Board ("CARB") and Sears, Roebuck and Co. are pleased to explain the Federal and California Emission Control Systems Warranty on your new small off-road engine. In California, new 1995 and later small off-road engines must be designed, built and equipped to meet the State's stringent anti-smog standards. In other states, new 1997 and later model year engines must be designed, built and equipped, at the time of sale, to meet the U.S. EPA regulations for small non-road engines. Sears, Roebuck and Co. will warrant the emission control system on your small off-road engine for the periods of time listed below, provided there has been no abuse, neglect, unapproved modification, or improper maintenance of your small off-road engine.

Your emission control system may include parts such as the carburetor, ignition system and exhaust system. Also included may be the compression release system and other emission-related assemblies.

Where a warrantable condition exists, Sears, Roebuck and Co. will repair your small off-road engine at no cost to you for diagnosis, parts and labor.

### MANUFACTURER'S EMISSION CONTROL SYSTEM WARRANTY COVERAGE

Emission control systems on 1995 and later model year California small off-road engines are warranted for two years as hereinafter noted. In other states, 1997 and later model year engines are also warranted for two years. If, during such warranty period, any emission-related part on your engine is defective in materials or workmanship, the part will be repaired or replaced by Sears, Roebuck and Co.

### OWNER'S WARRANTY RESPONSIBILITIES

As the small off-road engine owner, you are responsible for the performance of the required maintenance listed in your Owner's Manual, but Sears, Roebuck and Co. will not deny warranty solely due to the lack of receipts or for your failure to provide written evidence of the performance of all scheduled maintenance.

As the small off-road engine owner, you should, however, be aware that Sears, Roebuck and Co. may deny you warranty coverage if your small off-road engine or a part thereof has failed due to abuse, neglect, improper maintenance or unapproved modifications.

You are responsible for presenting your small off-road engine to a Sears, Roebuck and Co. Authorized Service Outlet as soon as a problem exists. The warranty repairs should be completed in a reasonable amount of time, not to exceed 30 days.

Warranty service can be arranged by contacting either a Sears, Roebuck and Co. Authorized Service Outlet, or by contacting Sears, Roebuck and Co. at 1-800-473-7247.

### IMPORTANT NOTE

This warranty statement explains your rights and obligations under the Emission Control System Warranty ("ECS Warranty") which is provided to you by Sears, Roebuck and Co. pursuant to California law. See also the Sears, Roebuck and Co. Limited Warranties for Sears, Roebuck and Co. which is enclosed therewith on a separate sheet and also is provided to you by Sears, Roebuck and Co. The ECS Warranty applies only to the emission control system of your new engine. To the extent that there is any conflict in terms between the ECS Warranty and the Sears, Roebuck and Co. Warranty, the ECS Warranty shall apply except in any circumstances in which the Sears, Roebuck and Co. Warranty may provide a longer warranty period. Both the ECS Warranty and the Sears, Roebuck and Co. Warranty describe important rights and obligations with respect to your new engine.

Warranty service can only be performed by a Sears, Roebuck and Co. Authorized Service Outlet. At the time of requesting warranty service, evidence must be presented of the date of sale to the original purchaser. The purchaser shall pay any charges for making service calls and/or for transporting the products to and from the place where the inspection and/or warranty work is performed. The purchaser shall be responsible for any damage or loss incurred in connection with the transportation of any engine or any part(s) thereof submitted for inspection and/or warranty work.

If you have any questions regarding your warranty rights and responsibilities, you should contact Sears, Roebuck and Co. at 1-800-473-7247.

### EMISSION CONTROL SYSTEM WARRANTY

Emission Control System Warranty ("ECS Warranty") for 1995 and later model year California small off-road engines (for other states, 1997 and later model year engines):

A. **APPLICABILITY:** This warranty shall apply to 1995 and later model year California small off-road engines (for other states, 1997 and later model year engines). The ECS Warranty Period shall begin on the date the new engine or equipment is delivered to its original, end-use purchaser, and shall continue for 24 consecutive months thereafter.

B. **GENERAL EMISSIONS WARRANTY COVERAGE:** Sears, Roebuck and Co. warrants to the original, end-use purchaser of the new engine or equipment and to each subsequent purchaser that each of its small off-road engines is:

1. Designed, built and equipped so as to conform with all applicable regulations adopted by the Air Resources Board pursuant to its authority in Chapters 1 and 2, Part 5, Division 26 of the Health and Safety Code, and
  2. Free from defects in materials and workmanship which, at any time during the ECS Warranty Period, will cause a warranted emissions-related part to fail to be identical in all material respects to the part as described in the engine manufacturer's application for certification.
- C. The ECS Warranty only pertains to emissions-related parts on your engine, as follows:
1. Any warranted, emissions-related parts which are not scheduled for replacement as required maintenance in the Owner's Manual shall be warranted for the ECS Warranty Period. If any such part fails during the ECS Warranty Period, it shall be repaired or replaced by Sears, Roebuck and Co. according to Subsection 4 below. Any such part repaired or replaced under the ECS Warranty shall be warranted for any remainder of the ECS Warranty Period.
  2. Any warranted, emissions-related part which is scheduled only for regular inspection as specified in the Owner's Manual shall be warranted for the ECS Warranty Period. A statement in such written instructions to the effect of "repair or replace as necessary", shall not reduce the ECS Warranty Period. Any such part repaired or replaced under the ECS Warranty shall be warranted for the remainder of the ECS Warranty Period.
  3. Any warranted, emissions-related part which is scheduled for replacement as required maintenance in the Owner's Manual, shall be warranted for the period of time prior to the first scheduled replacement point for that part. If the part fails prior to the first scheduled replacement, the part shall be repaired or replaced by Sears, Roebuck and Co. according to Subsection 4 below. Any such emissions-related part repaired or replaced under the ECS Warranty, shall be warranted for the remainder of the ECS Warranty Period prior to the first scheduled replacement point for such emissions-related part.
  4. Repair or replacement of any warranted, emissions-related part under this ECS Warranty shall be performed at no charge to the owner at a Sears, Roebuck and Co. Authorized Service Outlet.
  5. The owner shall not be charged for diagnostic labor which leads to the determination that a part covered by the ECS Warranty is in fact defective, provided that such diagnostic work is performed at a Sears, Roebuck and Co. Authorized Service Outlet.
  6. Sears, Roebuck and Co. shall be liable for damages to other original engine components or approved modifications proximately caused by a failure under warranty of an emission-related part covered by the ECS Warranty.
  7. Throughout the ECS Warranty Period, Sears, Roebuck and Co. shall maintain a supply of warranted emission-related parts sufficient to meet the expected demand for such emission-related parts.
  8. Any Sears, Roebuck and Co. authorized and approved emission-related replacement part may be used in the performance of any ECS Warranty maintenance or repair and will be provided without charge to the owner. Such use shall not reduce Sears, Roebuck and Co. ECS Warranty obligations.
  9. Unapproved add-on or modified parts may not be used to modify or repair a Sears, Roebuck and Co. engine. Such use voids this ECS Warranty and shall be sufficient grounds for disallowing an ECS Warranty claim. Sears, Roebuck and Co. shall not be liable hereunder for failures of any warranted parts of a Sears, Roebuck and Co. engine caused by the use of such an unapproved add-on or modified part.
- EMISSION-RELATED PARTS INCLUDE THE FOLLOWING:**
1. Carburetor Assembly and its Internal Components
    - a) Fuel filter
    - b) Carburetor gaskets
    - c) Intake pipe
  2. Air Cleaner Assembly
    - a) Air filter element
  3. Ignition System, including:
    - a) Spark plug
    - b) Ignition module
    - c) Flywheel assembly
  4. Catalytic Muffler (if so equipped)
    - a) Muffler gasket (if so equipped)
    - b) Exhaust manifold (if so equipped)
  5. Crankcase Breather Assembly and its Components
    - a) Breather connection tube



# CRAFTSMAN 4-CYCLE ENGINE

MODEL: 143.006710

Ref. No.	Part No.	Part Name	Ref. No.	Part No.	Part Name
1	36177	Cylinder (Incl. 2,10,12,20 & 125)	150	31672	Valve Spring
2	27652	Dowel Pin	151	31673	Lower Valve Spring Cap
6	36059	Breather Element	151A	40016A	Intake Valve Seal
9	590568	Screw, 10-24 x 3/4"	169	*27234A	Valve Spring Box Gasket
10	36002	Breather Valve Body	172	32755	Valve Spring Box Cover
11	36003A	Check Valve	174	30200	Screw, 10-24 x 9/16"
12	32447	Breather Tube	177	650925A	Carburetor Mounting Stud
12C	*36005A	Breather Cover & Gasket	184	36183	Carburetor Gasket
14	28277	Flat Washer	186	36009	Governor Link
15	36006	Governor Rod (Machined)	187A	36195	Air Baffle
16	36008	Governor Lever	190	36013	Brake Lever Ass'y.
17	31335	Governor Lever Clamp	191A	36012	Brake Control Lever
18	651018	Screw, Torx T-15, 8-32 x 19/64"	192	36016	Brake Control Lever Link
19	36103	Governor Spring	193	36015	Brake Spring
20	36010	Oil Seal	194	36014	Retaining Ring
25	36186	Blower Housing Baffle Ass'y. (Incl.195)	195	610973	Terminal Ass'y.
26	650802	Screw, 1/4-20 x 5/8"	198	36017	Brake Control Lever Spring
30	36185	Crankshaft	199	36018	Brake Lever Bushing
40	40004	Piston, Pin, Ring Set (Std.)	202	36482	Compression Spring
40	40005	Piston, Pin, Ring Set (.010 OS)	203	31342	Compression Spring
41	36070	Piston & Pin Ass'y. (Std.) (Incl. 43)	204	651029	Screw, Torx T-10, 5-40 x 7/16"
41	36071	Piston & Pin Ass'y. (.010 OS) (Incl.43)	205	651030	Screw, Torx T-10, 6-32 x 17/32"
42	40006	Ring Set (Std.)	215	36051	Control Knob
42	40007	Ring Set (.010 OS)	239	*36048	Carburetor To Air Cleaner Gasket
43	20381	Piston Pin Retaining Ring	240	36190	Air Cleaner Body (Incl. 239 & 350)
45	36023A	Connecting Rod Ass'y. (Incl. 46)	243B	651041	Air Cleaner Stud
46	32610A	Connecting Rod Bolt	245	36046	Air Cleaner Filter
48	36030	Valve Lifter	250	36191	Air Cleaner Cover
50	36031A	Camshaft (MCR)	251	650928	Lock Nut, 1/4-20
52	29914	Oil Pump Ass'y.	251A	650933	Wing Nut, 1/4-20
69	*36032A	Mounting Flange Gasket	255	36193	Control Plate
70	37271	Mounting Flange (Incl. 72 thru 85)	256	650983	Screw, 8-32 x 21/64"
72	30572	Oil Drain Plug (Incl. 73)	260	36188	Blower Housing
72A	28483	Oil Drain Plug	262	650737	Screw, 1/4-20 x 1/2"
73	28833	Drain Plug Gasket	263A	36192	Starter Grill
75	36010	Oil Seal	275	36107A	Muffler
80	30574A	Governor Shaft	276	36043	Locking Plate
81	30590A	Washer	277	650927	Screw, 5/16-18 x 2-11/32"
82	30591	Governor Gear Ass'y. (Incl.81)	285	34449A	Starter Cup
83	36057	Governor Spool	287	650926	Screw, 8-32 x 21/64"
85	36034	Idle Gear	290	29774	Fuel Line
86	650924	Screw, 1/4-20 x 1-9/16"	292	26460	Fuel Line Clamp
89	611154	Flywheel Key	300	36189	Fuel Tank (Incl. 301)
90	611155	Flywheel	301	36246	Fuel Cap
91	611156	Flywheel Fan	305	36063	Oil Fill Tube
92	650815	Belleville Washer	307	35499	"O" Ring
93	650816	Flywheel Nut	308	36040	Fill Tube Clip
100	34443B	Solid State Ignition	310	36064	Dipstick
101	610118	Spark Plug Cover	346A	28763	Screw, 10-32 x 35/64"
103	651007	Screw, Torx T-15, 10-24 x 15/16"	347	650898A	Screw, 10-32 x 27/32"
110	36054	Ground Wire	350	36045A	Primer
119	*36061	Cylinder Head Gasket			
120	36187	Cylinder Head			
125	36471	Exhaust Valve (Std.) (Incl. 151)			
125	36472	Exhaust Valve (1/32" OS)			
126	29314C	Intake Valve (Std.) (Incl. 151)			
126	29315C	Intake Valve (1/32" OS)			
130	6021A	Screw, 5/16-18 x 1-1/2"			
135	35395	Resistor Spark Plug (RJ19LM)			

\*Indicates Parts Included in Gasket Set, Ref. No. 400.

# CRAFTSMAN 4-CYCLE ENGINE

MODEL: 143.994010


Ref. No.	Part No.	Part Name	Ref. No.	Part No.	Part Name
370A	36261	Lubrication Decal	900		Replacement Engine 750819D, order from 71-999 Replacement Short Block 750797C, order from 71-999 Owners Manual  *Indicates Parts Included in Gasket Set, Ref. No. 400.  RPM High 2900 to 3200 RPM Low 2450 to 2750
370B	36155	Control Decal			
370C	37318	Primer Decal	900		
370R	37317	Warning Decal			
380	640020A	Carburetor (Incl. 184, 187A & 239)		181-1210-11	
390	590739	Rewind Starter (NOTE: This engine could have been built with 590702 starter).			
400	36062D	Gasket Set (Incl. Items Marked *)			
416	36085	Spark Arrestor Kit (Incl. 417) (Optional)			
417	650821	Screw, 10-32 x 1/2" (Optional)			

## CARBURETOR NO. 640020A

The diagram shows an exploded view of the carburetor assembly. At the top is the throttle shaft and lever assembly (1). Below it is the dust seal (5) and throttle shutter (6) with its screw (7). The main body includes the venturi (14A), float bowl (25), float shaft (27), float (28), and float bowl to body gasket (29). The float bowl contains an inlet needle and seat (30), bowl drain screw (32), and bowl drain washer (33). The main nozzle tube (36) is secured with an O-ring (37) and a spring (38). The float bowl is held in place by a retainer (39) with a spring (38A). The main fuel jet (40) and Welch plug (47) for the idle mixing well are also shown.


Ref. No.	Part No.	Part Name
	640020A	Carburetor (Incl. 187B & 239 of Engine Parts List)
1	632539	Throttle Shaft & Lever Assembly
5	632593	Dust Seal
6	632541	Throttle Shutter
7	650506	Throttle Shutter Screw
14A	632773	Venturi
25	632675A	Float Bowl
27	632544	Float Shaft
28	632543	Float
29	632548	Float Bowl to Body Gasket
30	632709	Inlet Needle & Seat
32	632672	Bowl Drain Screw
33	632673	Bowl Drain Washer
36	640022	Main Nozzle Tube
37	632547	"O" Ring
37A	632547	"O" Ring, Main Nozzle Tube
38	632545	Spring, Main Nozzle Tube
38A	632545	Spring
39	632549	Float Bowl Retainer
40	640021	Main Fuel Jet
47	632554	Welch Plug, Idle Mixing Well

## REWIND STARTER NO. 590739

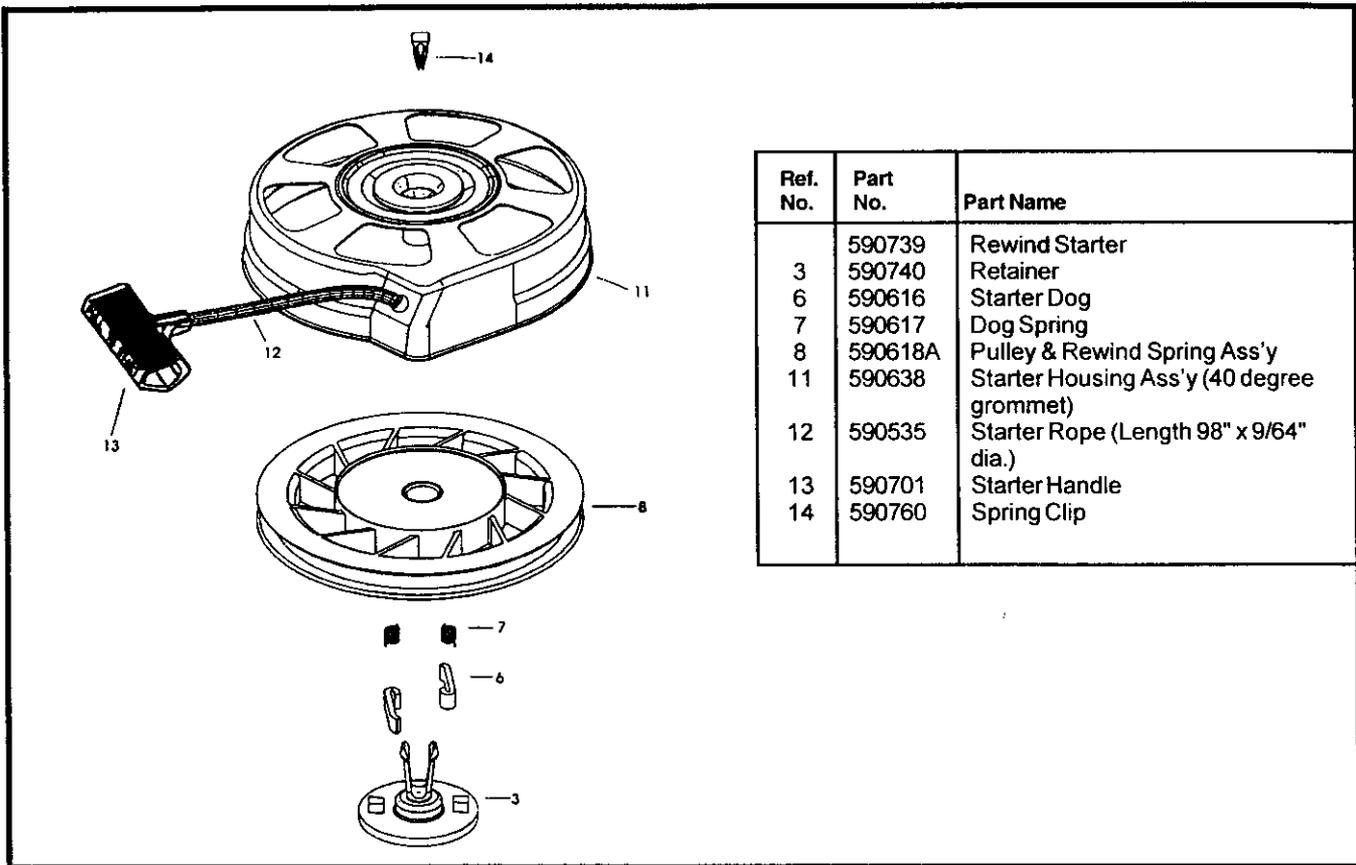

Ref. No.	Part No.	Part Name
3	590739	Rewind Starter
6	590740	Retainer
7	590616	Starter Dog
8	590617	Dog Spring
11	590618A	Pulley & Rewind Spring Ass'y
	590638	Starter Housing Ass'y (40 degree grommet)
12	590535	Starter Rope (Length 98" x 9/64" dia.)
13	590701	Starter Handle
14	590760	Spring Clip

## STARTER NO. 590702

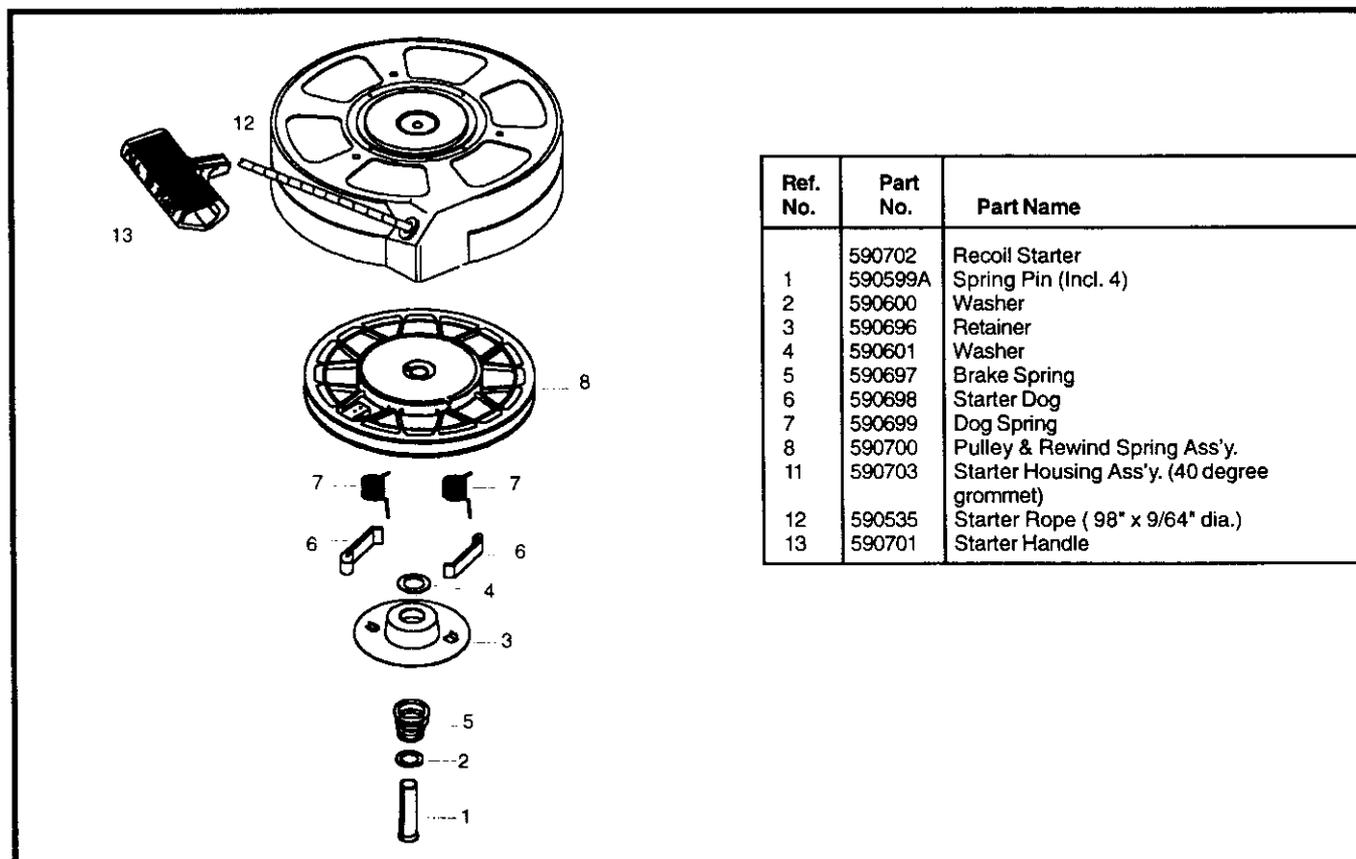

Ref. No.	Part No.	Part Name
	590702	Recoil Starter
1	590599A	Spring Pin (Incl. 4)
2	590600	Washer
3	590696	Retainer
4	590601	Washer
5	590697	Brake Spring
6	590698	Starter Dog
7	590699	Dog Spring
8	590700	Pulley & Rewind Spring Ass'y.
11	590703	Starter Housing Ass'y. (40 degree grommet)
12	590535	Starter Rope ( 98" x 9/64" dia.)
13	590701	Starter Handle

# **SEARS**

## **operator's manual**

**MODEL NO. 143.006710**

**6.75 RESERVE POWER  
12.56 CUBIC INCH (207 cc)  
DISPLACEMENT**

**SOLID STATE IGNITION**

### **CAUTION:**

Read **RULES** for  
Safe **OPERATION**  
and **INSTRUCTIONS**  
Carefully

### ***How to ORDER Repair Parts***

The Model Number can be found on a decal on the blower housing (See Figure 1). Always mention the Model Number when requesting service or repair parts for your Craftsman Engine.

All parts listed herein may be ordered from any SEARS, ROEBUCK AND CO. or SEARS CANADA, INC. retail or catalog store. If the parts you need are not stocked locally, your order will be electronically transmitted to a Sears Repair Parts Distribution Center for expedited handling.

WHEN ORDERING REPAIR PARTS, ALWAYS GIVE THE FOLLOWING INFORMATION AS SHOWN IN THIS LIST.

1. The PART NUMBER
2. The PART DESCRIPTION
3. The MODEL NUMBER
4. The NAME OF ITEM - ENGINE

"Your Sears merchandise has added value when you consider that Sears has service units nationwide staffed with Sears trained technicians... professional technicians specifically trained on Sears products, having the parts, tools and equipment to insure that we meet our pledge to you ... we service what we sell."

**Sold by SEARS, ROEBUCK AND CO., CHICAGO, IL 60684 U.S.A.  
and SEARS CANADA, INC., TORONTO, ONTARIO, CANADA**